

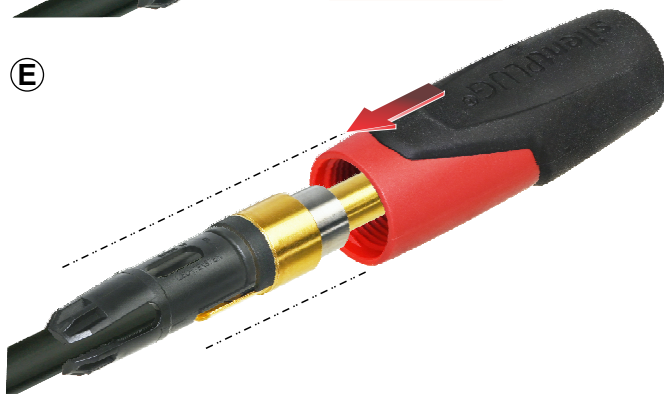
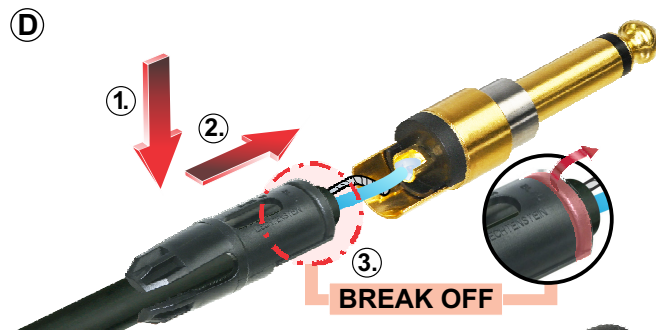
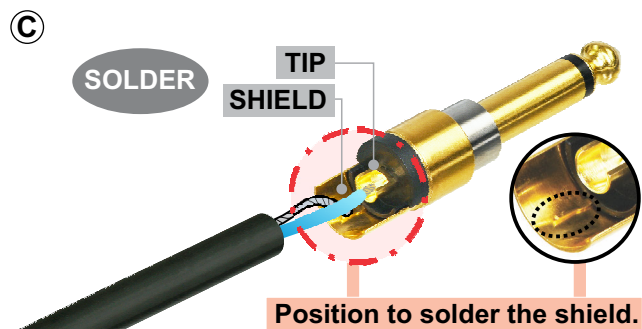


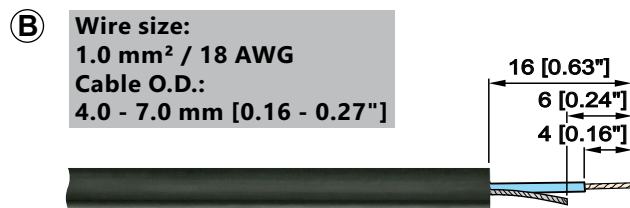

ASSEMBLY INSTRUCTION

NP2XX-SILENT | 1/4" Professional Phone Plug

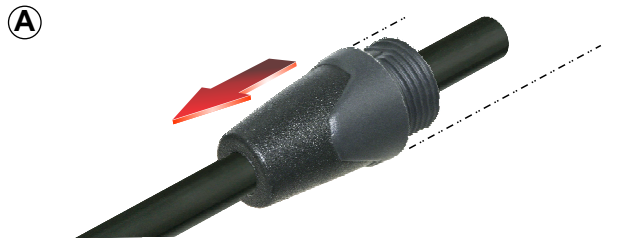

Ⓐ Slide the boot onto the cable.

Ⓑ Prepare cable as shown.

Ⓒ Solder the wire ends.

Attention:

Solder shield to marked position.


Ⓓ Position the chuck (1) onto the cable and align chuck with plugfinger (2).

Attention:

If using a cable with O.D. > 5.50 mm [0.216"] break away this part (3) of the chuck.

Ⓔ Slide the housing onto the plugfinger with the chuck.

Ⓕ Finish the installation by tighten the bushing onto the connector.

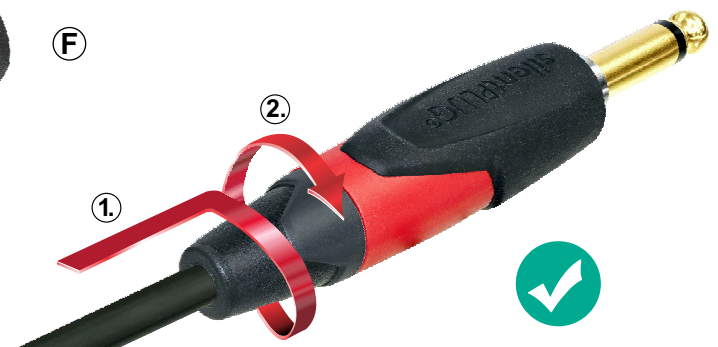

FINISHED PHONE PLUG



Draft. Nr.: BDA 699 V1
Update: 2022-12-12

Neutrik AG | LI-9494 Schaan

www.neutrik.com

Data subject to change without prior notice. © 2022 NEUTRIK®. NEUTRIK® are registered trademark of Neutrik AG. ALL RIGHTS RESERVED.

NEUTRIK
A brand of the Neutrik Group