



# NeTV2 Thermal Management Kit Installation Diagram

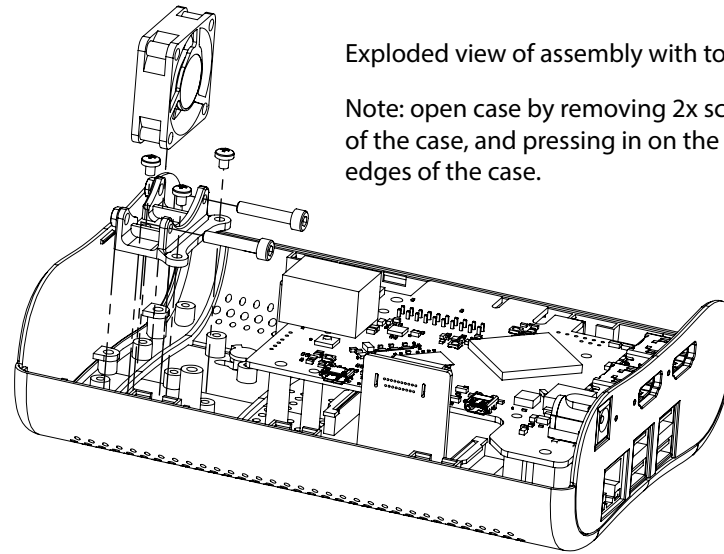

Exploded view of assembly with top of case removed

Note: open case by removing 2x screws on the bottom of the case, and pressing in on the 6x snap hooks on the edges of the case.

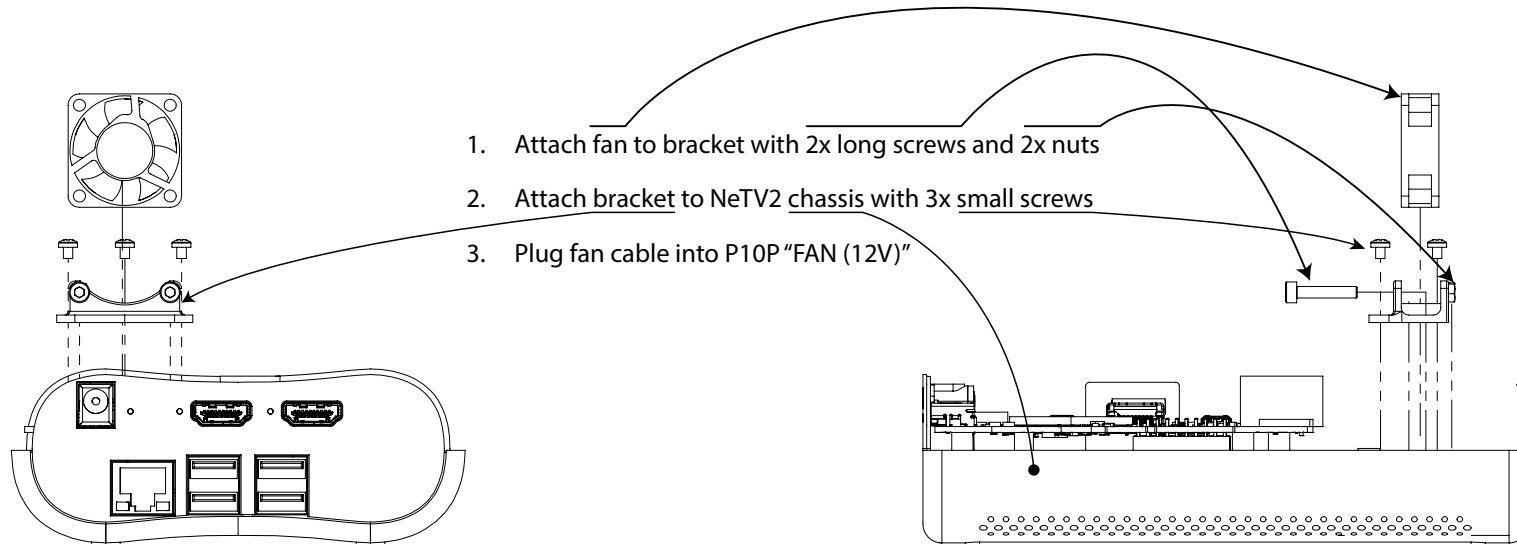

1. Attach fan to bracket with 2x long screws and 2x nuts

2. Attach bracket to NeTV2 chassis with 3x small screws

3. Plug fan cable into P10P "FAN (12V)"