

FLUKE®

C101 Hard Case

Instruction Sheet


The Fluke C101 Hard Case comes with two layers of pre-cut foam that can be customized to accommodate the contents of your kit. To customize the accessory case:

1. Place the kit contents on top of the pre-cut foam pad. Arrange the articles until you have a layout that accommodates your kit contents. Be sure to leave adequate space between each item in the kit.

Note

For maximum protection of the kit contents, keep all items inside the pre-cut area. This will protect each item on all sides.

2. Insert toothpick at all four corners of each area you want to remove. With a sharp, pointed knife, carefully cut each foam plug according to your layout.
3. Remove each plug in one piece and set aside.
4. Insert the kit contents in the cut out pockets you created. For thinner items, you can cut the saved foam plugs to adjust the height of the cutout pocket as needed.

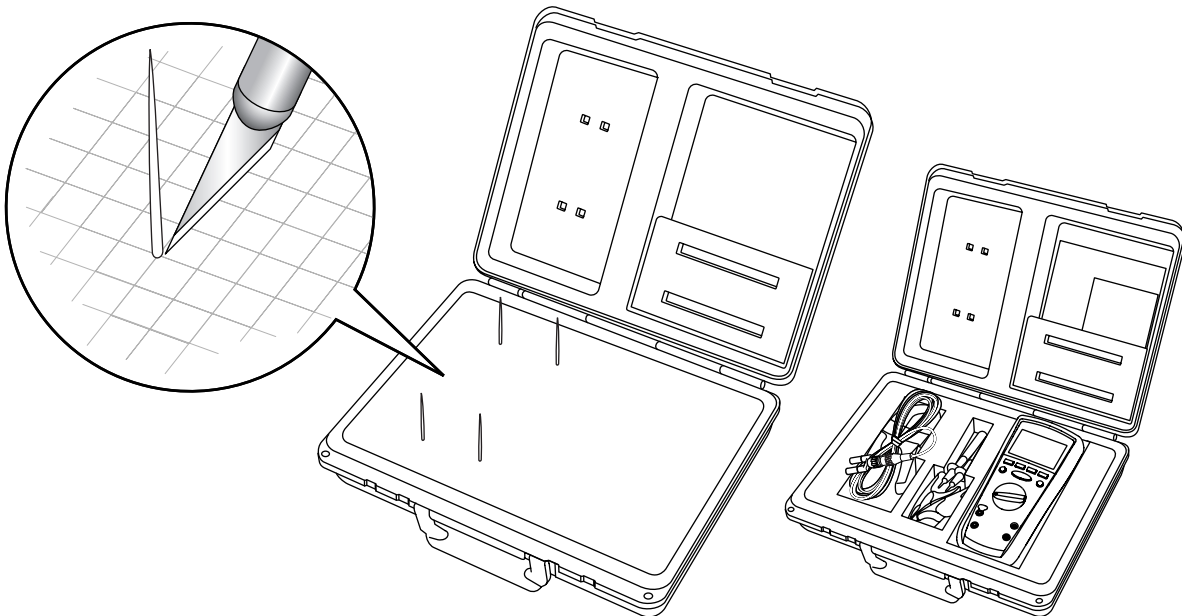

bdq03f.eps

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Fluke:](#)

[C101](#)