


INSTALL O-RING INTO THE GROOVE IN THE REAR OF WEATHERPROOF WINDOW ASSEMBLY.

INSERT ASSEMBLY INTO PANEL AND FASTEN WITH THE HARDWARE PROVIDED.

## SE-IP65CVR-M - MPS-OPI WEATHERPROOF COVER INSTALLATION INSTRUCTIONS

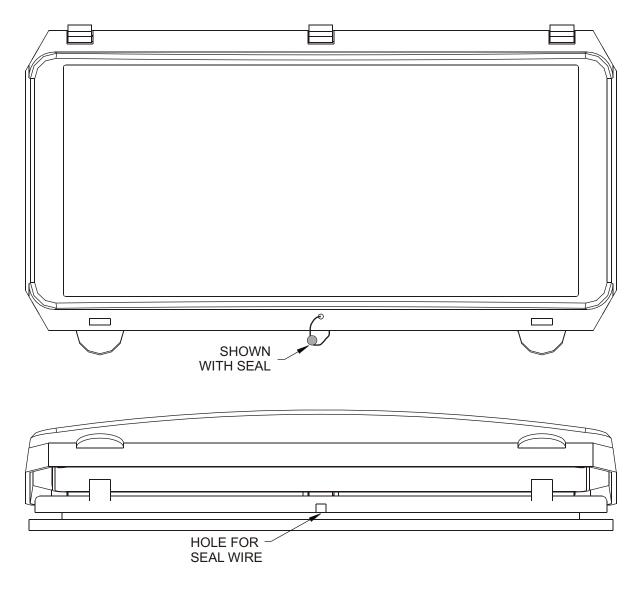

WEATHERPROOF COVER SNAPS CLOSED.

TO PREVENT UNAUTHORIZED ENTRY:

1. USE WIRE SEAL THROUGH HOLES IN WEATHERPROOF COVER ASSEMBLY, OR

2. SECURE WITH THE PLASTIC THREAD FORMING SCREW SUPPLIED IN KIT.

## **Mouser Electronics**

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Littelfuse: SE-IP65CVR-M