


### **Flush Mount - 16mm**

For use with panel hole of 32mm diameter and minimum thickness of 1.5mm.

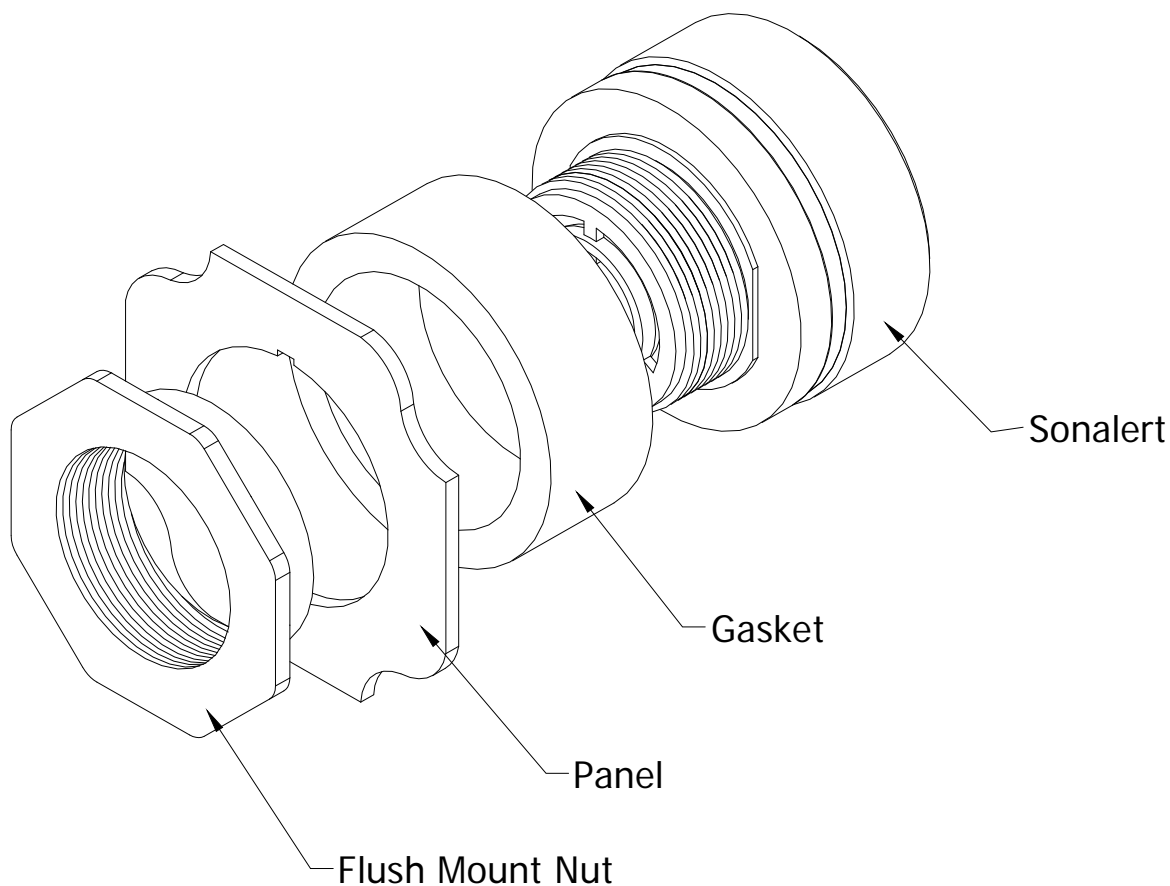

### **Instructions for Assembly:**

1. Place Flush Mount Nut through hole in panel (Nut is keyed).
2. Place Gasket over Flush Mount Nut.
3. Screw Sonalert into assembly and tighten.

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Mallory Sonalert:](#)

[SCFM16](#)