
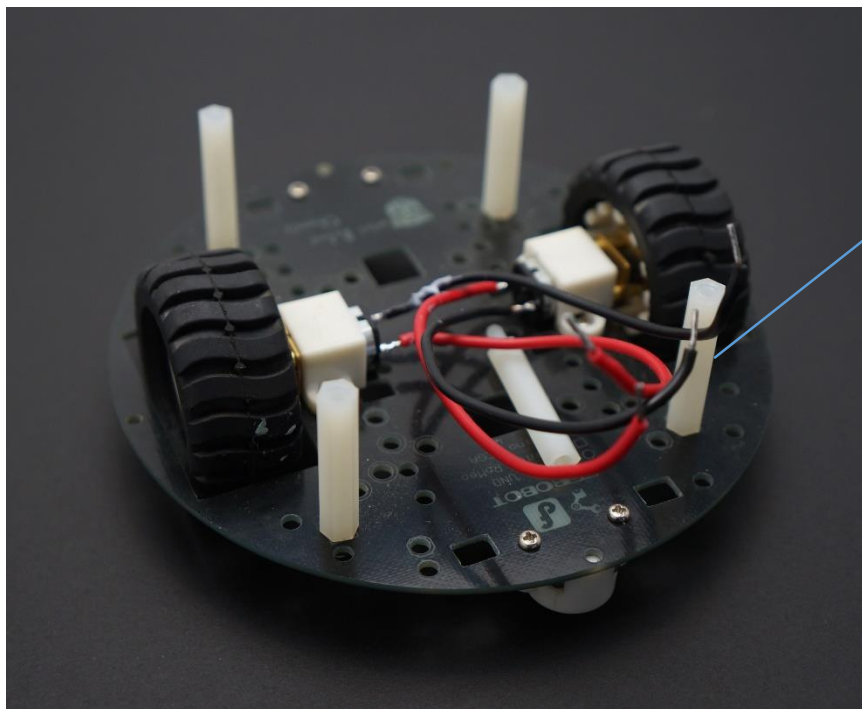




MiniQ Discovery Kit Assembly Guide

STEP 1:

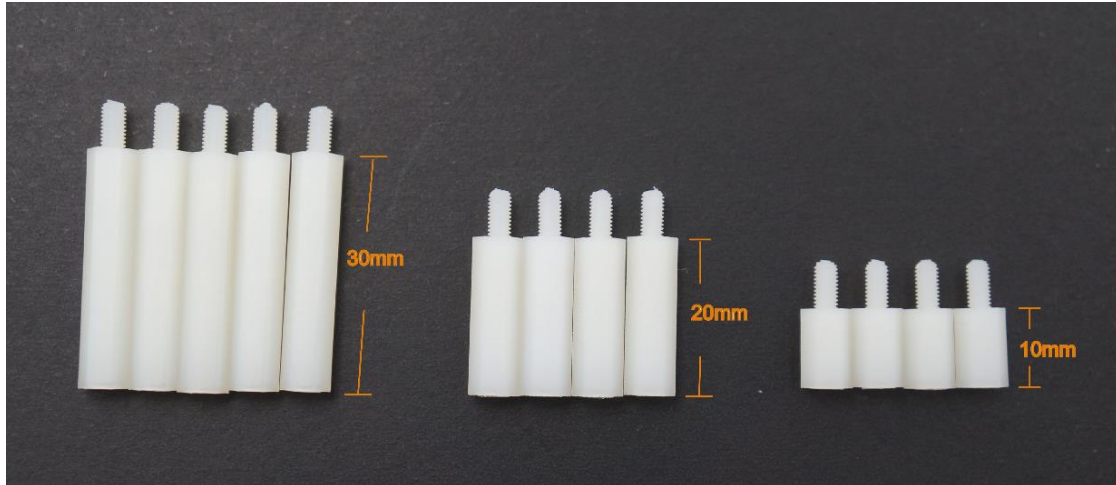



M3 * 30mm
nylon standoffs

STEP 2:

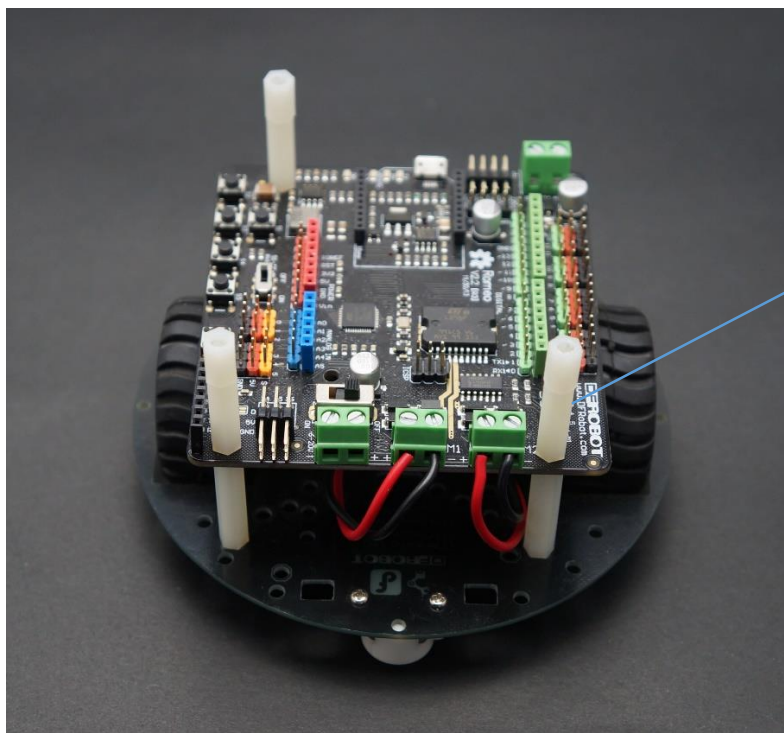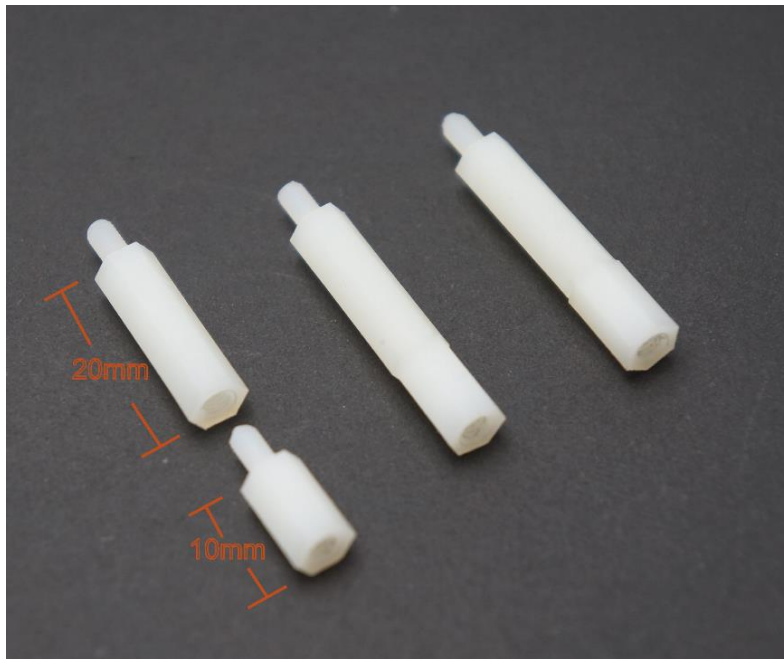


M3 * 20mm + M3 *
10mm nylon standoffs


PS: You can remove
the 10mm Nylon
standoffs depend on
your need.

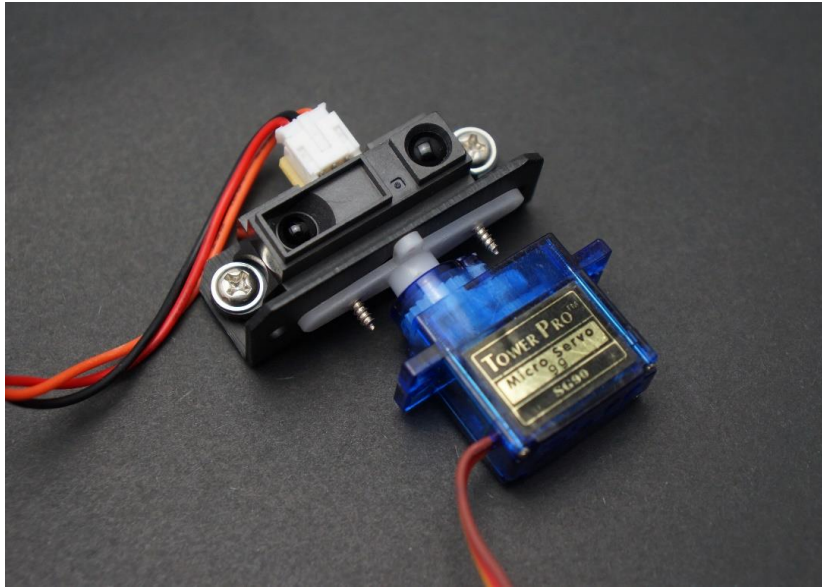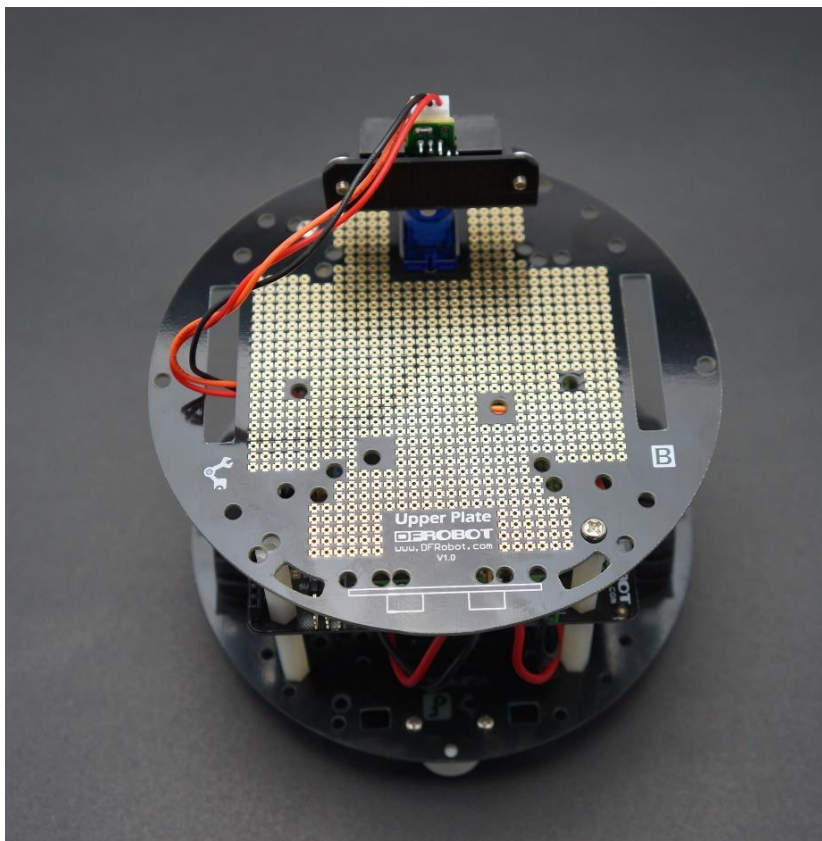STEP 3:**STEP 4:**


[Wiki Doc for
Upper Deck](#)

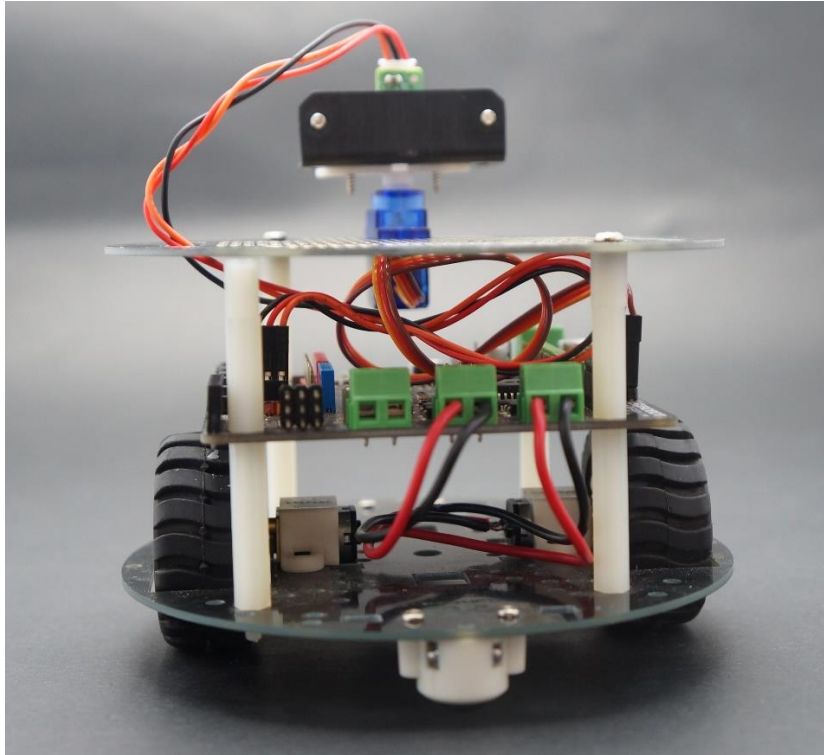

STEP 5:

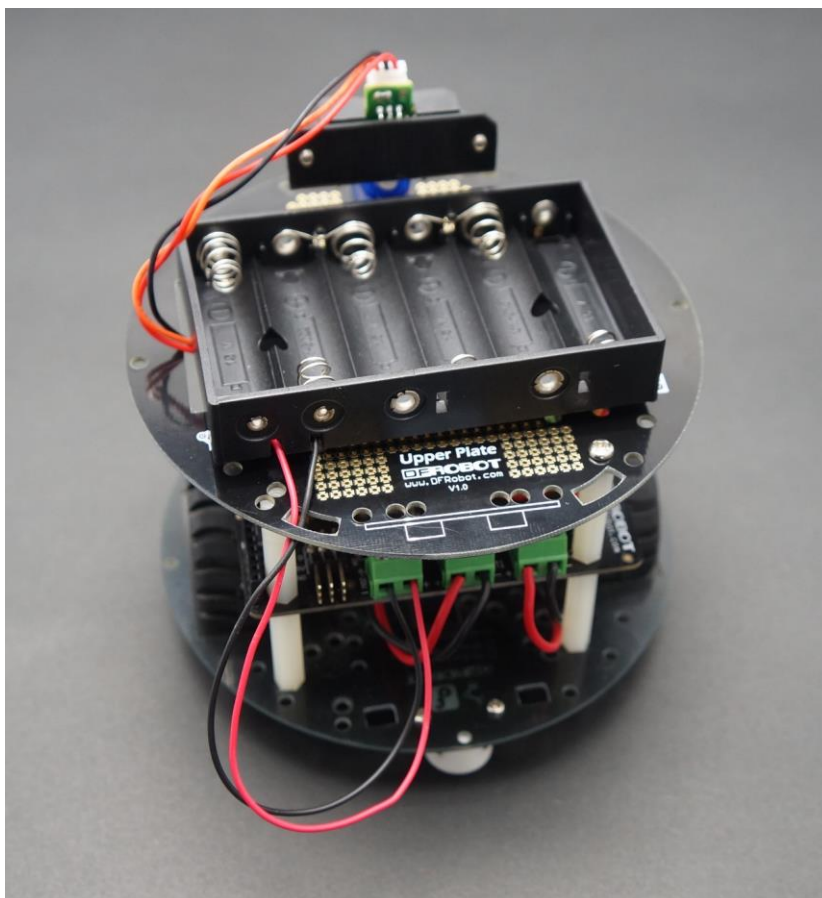

DONE

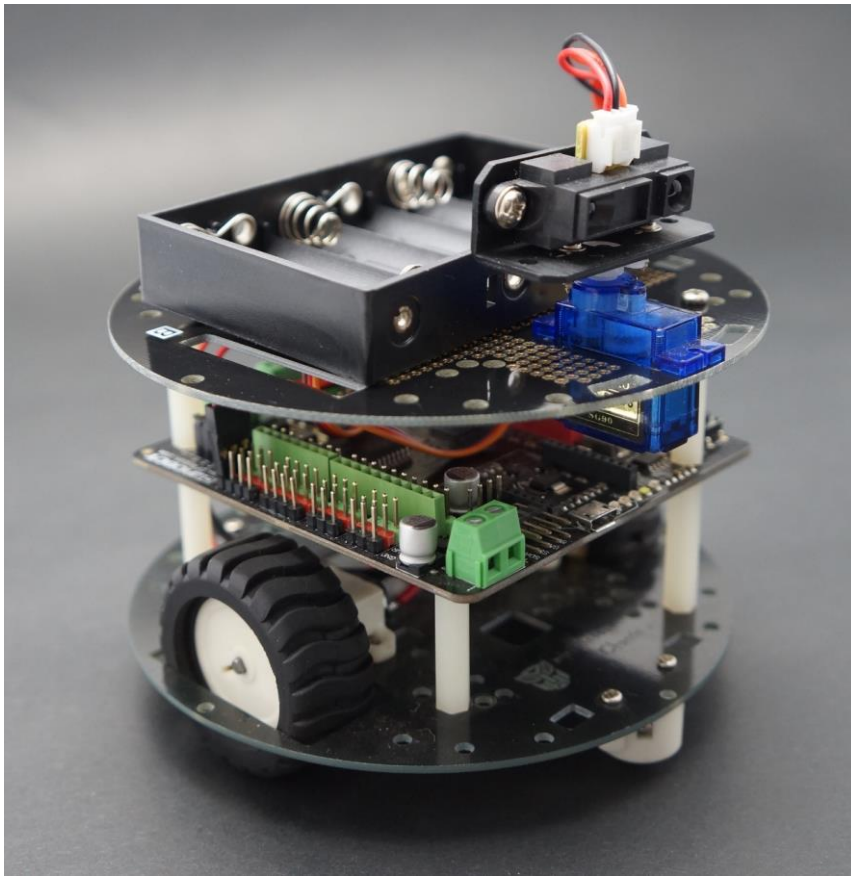

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[DFRobot:](#)

[KIT0071](#)