


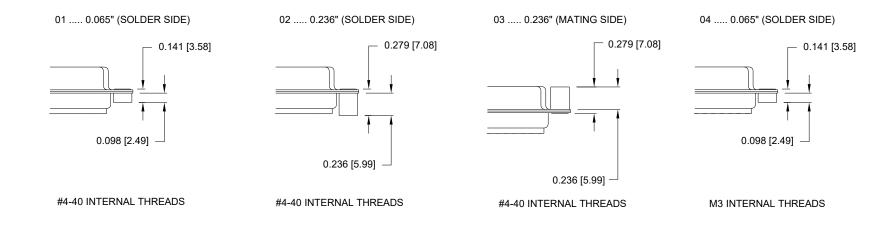

TOLERANCE:

ALL DIMENSIONS ARE ±0.010



Roks Compliant



DRAWN:

P. JENKINS DATE: 08/18/1998

UNITS = inch [mm]

DO NOT SCALE FROM DRAWING SCALE: SHEET 2 NTS 3 DWG NO.

170-YYY-17YLYY0

REV

21

NorComp

ASSEMBLY INSTRUCTIONS:

- 1. CHOOSE CONTACT THAT IS COMPATIBLE
 - a. SHOWN ON PAGE 1
- 2. USE APPROPRIATE CRIMP TOOL
- a. 170-701-170-000 (STAMPED CRIMP HAND TOOL)
- b. 170-702-170-000 (MACHINED CRIMP HAND TOOL)
- 3. FOLLOW CRIMP HAND TOOL INSTRUCTIONS
- a. FOUND ON NORCOMP WEBSITE ON 170 SERIES CONTACTS PRODUCT PAGE
- b. https://www.norcomp.net/series/170-series-contacts
- 4. ONCE CONTACT IS CRIMPED INSERT INTO HOUSING AS SHOWN BELOW:



ROHS COMPLIANT

次

THESE DRAWINGS AND SPECIFICATIONS ARE
THE PROPERTY OF NorComp AND SHALL NOT
BE REPRODUCED, COPIED OR USED AS THE
BASIS FOR THE MANUFACTURE OR SALE OF
ADDADATIS WITHOUT WEITTEN DEPARTS ON

DRAWN:

P. JENKINS

DATE: 08/18/1998

UNITS = inch [mm]

DO NOT SCALE FROM DRAWING

NorComp

SCALE: SHEET NTS

DWG NO. 1—0 1

4=> (1 > 0 / 0

REV

21

3