

DATA SHEET **HSPPAD143A**



HEAD OFFICE
1-7, YUKIGAYA-OTSUKA-MACHI, OTA-KU, TOKYO, 145-8501, JAPAN
PHONE +81(3)3726-1211 FAX +81(3)3728-1741
NAGAOKA PLANT
1-3-5, HIGASHITAKAMI-MACHI, NAGAOKA-CITY, NIIGATA-PREF, 940-0006, JAPAN
PHONE +81 258-24-4111 FAX +81 258-24-4110

This specification is subject to change without notice.



HSPPAD143A Datasheet

2 / 27 Rev.00 Jan/11/2019

History of Revision

Datasheet Rev.	Date	Note
00	Jan/11/2019	Draft

ALPS/ILPINE

Digital Pressure Sensor

HSPPAD143A Datasheet

3 / 27 Rev.00 Jan/11/2019

CONTENTS

2. FEATURES 4 3. ABSOLUTE MAXIMUM RATINGS 5 4. ELECTRICAL CHARACTERISTICS 5 5. POWER UP AND DOWN SEQUENCE 6 6. BLOCK DIAGRAM 6 7. MODES 7 7.1 Register Action Mode 8 7.2 Continuous Measurement Mode 8 7.3 Command Action Mode 9 8. FUNCTIONS 10 8.1 FIFO 10 8.2 Averaging 11 8.3 CIC Filter 12 8.4 Software Reset 12 8.5 Flag Function 13 9. SAMPLE FLOW CHART 15 10. TYPICAL REGISTER SETTING 17 11. INTERFACE SPECIFICATIONS 17 11.1 IZC Slave Interface 17
4. ELECTRICAL CHARACTERISTICS 5 5. POWER UP AND DOWN SEQUENCE 6 6. BLOCK DIAGRAM 6 7. MODES 7 7.1 Register Action Mode 8 7.2 Continuous Measurement Mode 8 7.3 Command Action Mode 9 8. FUNCTIONS 10 8.1 FIFO 10 8.2 Averaging 11 8.3 CIC Filter 12 8.4 Software Reset 12 8.5 Flag Function 13 9. SAMPLE FLOW CHART 15 10. TYPICAL REGISTER SETTING 17 11. INTERFACE SPECIFICATIONS 17 11.1 12C Slave Interface 17
4. ELECTRICAL CHARACTERISTICS 5 5. POWER UP AND DOWN SEQUENCE 6 6. BLOCK DIAGRAM 6 7. MODES 7 7.1 Register Action Mode 8 7.2 Continuous Measurement Mode 8 7.3 Command Action Mode 9 8. FUNCTIONS 10 8.1 FIFO 10 8.2 Averaging 11 8.3 CIC Filter 12 8.4 Software Reset 12 8.5 Flag Function 13 9. SAMPLE FLOW CHART 15 10. TYPICAL REGISTER SETTING 17 11. INTERFACE SPECIFICATIONS 17 11.1 12C Slave Interface 17
6. BLOCK DIAGRAM 6 7. MODES 7 7.1 Register Action Mode 8 7.2 Continuous Measurement Mode 8 7.3 Command Action Mode 9 8. FUNCTIONS 10 8.1 FIFO 10 8.2 Averaging 11 8.3 CIC Filter 12 8.4 Software Reset 12 8.5 Flag Function 13 9. SAMPLE FLOW CHART 15 10. TYPICAL REGISTER SETTING 17 11. INTERFACE SPECIFICATIONS 17 11.1 IZC Slave Interface 17
7. MODES 7 7.1 Register Action Mode 8 7.2 Continuous Measurement Mode 8 7.3 Command Action Mode 9 8. FUNCTIONS 10 8.1 FIFO 10 8.2 Averaging 11 8.3 CIC Filter 12 8.4 Software Reset 12 8.5 Flag Function 13 9. SAMPLE FLOW CHART 15 10. TYPICAL REGISTER SETTING 17 11. INTERFACE SPECIFICATIONS 17 11.1 I2C Slave Interface 17
7.1 Register Action Mode 8 7.2 Continuous Measurement Mode 8 7.3 Command Action Mode 9 8. FUNCTIONS 10 8.1 FIFO 10 8.2 Averaging 11 8.3 CIC Filter 12 8.4 Software Reset 12 8.5 Flag Function 13 9. SAMPLE FLOW CHART 15 10. TYPICAL REGISTER SETTING 17 11. INTERFACE SPECIFICATIONS 17 11.1 I2C Slave Interface 17
7.2 Continuous Measurement Mode 8 7.3 Command Action Mode 9 8. FUNCTIONS 10 8.1 FIFO 10 8.2 Averaging 11 8.3 CIC Filter 12 8.4 Software Reset 12 8.5 Flag Function 13 9. SAMPLE FLOW CHART 15 10. TYPICAL REGISTER SETTING 17 11. INTERFACE SPECIFICATIONS 17 11.1 I2C Slave Interface 17
7.3 Command Action Mode 9 8. FUNCTIONS 10 8.1 FIFO 10 8.2 Averaging 11 8.3 CIC Filter 12 8.4 Software Reset 12 8.5 Flag Function 13 9. SAMPLE FLOW CHART 15 10. TYPICAL REGISTER SETTING 17 11. INTERFACE SPECIFICATIONS 17 11.1 I2C Slave Interface 17
8. FUNCTIONS 10 8.1 FIFO 10 8.2 Averaging 11 8.3 CIC Filter 12 8.4 Software Reset 12 8.5 Flag Function 13 9. SAMPLE FLOW CHART 15 10. TYPICAL REGISTER SETTING 17 11. INTERFACE SPECIFICATIONS 17 11.1 I2C Slave Interface 17
8.1 FIFO 10 8.2 Averaging 11 8.3 CIC Filter 12 8.4 Software Reset 12 8.5 Flag Function 13 9. SAMPLE FLOW CHART 15 10. TYPICAL REGISTER SETTING 17 11. INTERFACE SPECIFICATIONS 17 11.1 I2C Slave Interface 17
8.2 Averaging 11 8.3 CIC Filter 12 8.4 Software Reset 12 8.5 Flag Function 13 9. SAMPLE FLOW CHART 15 10. TYPICAL REGISTER SETTING 17 11. INTERFACE SPECIFICATIONS 17 11.1 I2C Slave Interface 17
8.3 CIC Filter 12 8.4 Software Reset 12 8.5 Flag Function 13 9. SAMPLE FLOW CHART 15 10. TYPICAL REGISTER SETTING 17 11. INTERFACE SPECIFICATIONS 17 11.1 I2C Slave Interface 17
8.3 CIC Filter 12 8.4 Software Reset 12 8.5 Flag Function 13 9. SAMPLE FLOW CHART 15 10. TYPICAL REGISTER SETTING 17 11. INTERFACE SPECIFICATIONS 17 11.1 I2C Slave Interface 17
8.5 Flag Function 13 9. SAMPLE FLOW CHART 15 10. TYPICAL REGISTER SETTING 17 11. INTERFACE SPECIFICATIONS 17 11.1 I2C Slave Interface 17
9. SAMPLE FLOW CHART 15 10. TYPICAL REGISTER SETTING 17 11. INTERFACE SPECIFICATIONS 17 11.1 I2C Slave Interface 17
10. TYPICAL REGISTER SETTING1711. INTERFACE SPECIFICATIONS1711.1 I2C Slave Interface17
11. INTERFACE SPECIFICATIONS1711.1 I2C Slave Interface17
11.1 I2C Slave Interface 17
·
12. REGISTER MAP 18
13. REGISTER DESCRIPTION 19
14. MECHANICAL INFORMATION 24
14.1 Pin Layout 24
14.2 Package Dimension 24
14.3 Recommended Land Pattern 25
14.4 Tape and Reel drawing 25
15. I2C CONNECTION EXAMPLE 26
16. LEGAL DISCLAIMER 27



HSPPAD143A Datasheet

4 / 27 Rev.00 Jan/11/2019

1. OVERVIEW

HSPPAD143A is the 3.1x3.1mm footprint and 2.6mm height digital interface pressure sensor designed as waterproof for barometer system and water depth measurement system. Barometric and water pressure is detected by MEMS sensor element using piezo resistive bridge circuit formed on the silicon diaphragm. The sensor element is connected to ASIC for signal conditioning. ASIC has 17-bit ADC and temperature compensation capability. The ASIC output compensated pressure values. In addition to the compensation, this product supports averaging and filtering for lower noise, and FIFO function. I2C interface is prepared for communication.

2. FEATURES

- Pressure Range 300 to 2100 hPa (+9000m in altitude and 10m in depth)

- Supply Voltage 1.7 to 3.6 V (Typical 1.8V)

- Operating Temperature -40 to +85 °C

- Package Small LGA Package: 3.1mm x 3.1mm x 2.6mm

- Digital interface I2C

- Current Consumption 1.8uA (Low power setting)

Noise RMS
 Sampling rate
 200Hz max (Continuous mode)

- Lead free, RoHS instruction, Halogen free conforming



HSPPAD143A Datasheet

5 / 27 Rev.00 Jan/11/2019

3. ABSOLUTE MAXIMUM RATINGS

Table 1 : Absolute maximum ratings

Item	Symbol	Unit.	Specification		n	Notes
item	Symbol Onit.		min.	Тур.	max.	Notes
Max supply voltage	VDD	[V]	-0.5	ı	4.0	-
Max load pressure	Pmax	[hPa]	-	ı	30000	-
Storage temperature	Tstg	[°C]	-40	ı	+125	-
ESD		[V]	-2000	ı	+2000	НВМ

4. ELECTRICAL CHARACTERISTICS

Table 2: Electrical Characteristics

Table 2 : Electrical Cr	Item Symbol		Specification			Notes
item	Symbol	Unit	min.	Тур.	max.	Notes
Operating temperature	Topr	[°C]	-40		+85	
Pressure range	Popr	[hPa]	300		2100	
Supply voltage	VDD	[V]	1.7	1.8	3.6	
Current consumption	IDD	[uA]		1.8		@1Hz sampling, Low power setting, 25°C
Standby current		[uA]		0.1		T=25°C
Pressure RMS noise		[hPa]		0.060		Low power setting
Fressure Rivio Hoise		[hPa]		0.026		High resolution setting
Maximum measuremet rate		[Hz]		200		Continuous mode
Pressure resolution		[LSB/hPa]		50		
Pressure absolute accuracy		[hPa]		±2.0		300 to 1100hPa 0 to 60°C
Pressure relative accuracy		[hPa]		±0.14		900-1100hPa 25°C
Solder drift		[hPa]	-2.0		+1.0	
Long term drift		[hPa]		±1.0		12 months

HSPPAD143A Datasheet

6 / 27 Rev.00 Jan/11/2019

5. POWER UP AND DOWN SEQUENCE

Power up and down sequence must be followed the specification in the table 3.

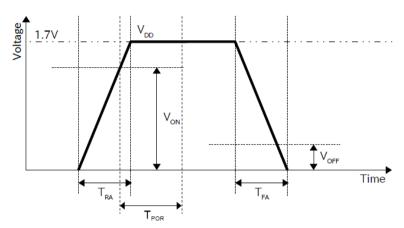


Fig. 1: Power up and down sequence

Table 3: Power up and down specificaion

Items	Symbol	Min	Тур	Max	Unit
ON voltage	V _{ON}	-	-	1.6	V
OFF voltage	V_{OFF}	0.5	-	-	V
Rise time	T _{RA}	0.1	-	2.0	mS
Fall time	T _{FA}	0.1	-	2.0	mS
POR time	T_POR	-	-	2.2	mS
OFF time	T _{OFF}	100	-	-	mS

Until POR is done, register access from host device is ignored. POR will take 2.2msec after VDD reaches ON voltage. Consecutive power on after VDD sink below V_{OFF} , must wait T_{OFF} to perform POR correctly.

6. BLOCK DIAGRAM

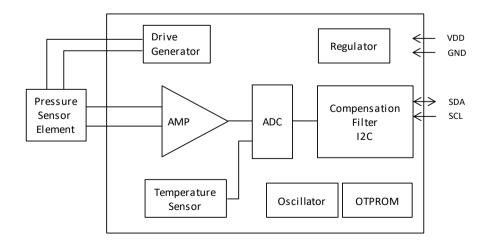


Fig. 2: Block Diagram



HSPPAD143A Datasheet

7 / 27 Rev.00 Jan/11/2019

7. MODES

Mode transition diagram is shown below. Mode can be set by CTL1.MODE[1:0] in Register 0x0F. After POR or Software reset, mode is set to Register Action Mode.

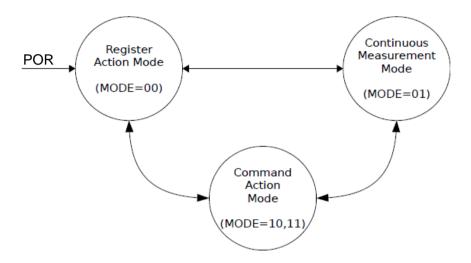


Fig. 3: Mode transition

Table 4: Mode setting

Table + . Widge		
CTL2.MODE	Mesurement Mode	Notes
00	Register Action Mode	Execute measurement by accessing Register ACTL1.
01	Continuous Measurement Mode	Automatically repeat measurement by specified frequency
10 or 11	Command Action Mode	Execute measurement by receiving Action Commands

7.1 Register Action Mode

Register Action Mode allows access to ACTL1 and execute each functions by setting "1" for each bit. Temperature measurement and Pressure measurement is performed by setting TDET and PDET to 1, respectively. When TDET and PDET are set to "1" at the same time, Temperature measurement is done, followed by Pressure measurement. If the PDET is performed independently, the latest temperature data is used for pressure data compensation. Temperature data is stored into register address 0x09 and 0x0A, and compensated pressure data is in 0x04 to 0x06. After data store, TRDY and PDRY in STAT register is changed to "1", and TDET and PDET back to "0". TDET and PDET are accessible during measurement, but they will be effective after the measurement. Only PDRP is effective right away. After measurement, device goes to stand-by state and minimizes current consumption, then waiting for next command.

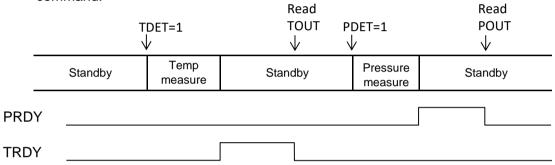


Fig. 4: Timing chart in Register Action Mode (PDET and TDET are executed individually)

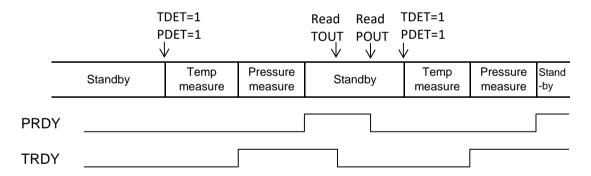


Fig. 5: Timing chart in Register Action Mode (PDET and TDET are executed at same time)

7.2 Continuous Measurement Mode

Continuous Measurement Mode executes measurement with specified frequency by CTL2.ODR. In order to move into this mode, CTL2.PMES must be set "1". Measurement is started immediately after mode transition and following measurement is repeated. In this mode, regulator will not be inactive in standby period and keeps consuming current. If ODR is changed in this mode, new measurement will be performed immediately and repeat following measurement. However, ODR change is done in measurement period, new measurement will start right after the measurement finished.



HSPPAD143A Datasheet

9 / 27 Rev.00 Jan/11/2019

Table 5: ODR and Sampling frequency

	Sampling	Sampling
ODR	Frequency	Period
00	1Hz	1000ms
01	10Hz	100ms
10	100Hz	10ms
11	200Hz	5ms

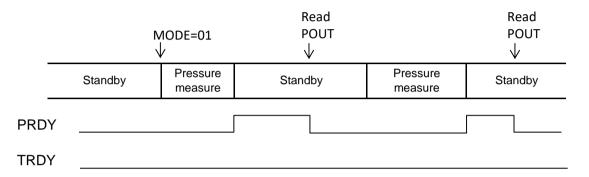


Fig. 6: Timing chart in Continuous Measurement Mode (PMES=1, TMES=0)

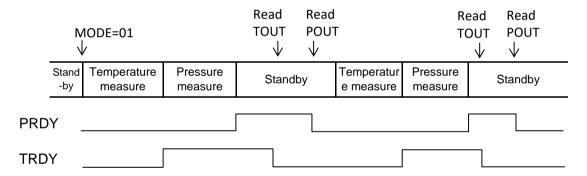


Fig. 7: Timing chart in Continuous Measurement Mode (PMES=1, TMES=1)

7.3 Command Action Mode

In Command Action Mode, several functions are performed by write access the register address. Each actions are the same with setting "1" at same bit name in ACTL1 and ACTL2 in Register Action Mode.

Table 6: Action Commands

Address	Name	Function	
20h	PDET	Perform pressure measurement	
22h	TDET	Perform temperature measurement	
26h	SRST	Perform software reset	
29h	PTDET	Perform pressure and temperature measurement	

8. FUNCTIONS

8.1 FIFO

There are 16 steps FIFO for Pressure read data. FIFO function can be enabled by setting FCTL.FFEN=1.

Table 7 : FCTL.FFEN setting

FCTL.FFEN	Description
0	FIFO disabled
1	FIFO enabled

Write pointer is incremented when the sensor data is stored into FIFO memory, and next data is stored to next register. Read Pointer is incremented when the sensor data is read.

Number of stored data is indicated by FFST.FP, if the FP (FIFO Pointer) is greater or equal to WMT (Water Mark Pointer) then FFST.FFEV becomes "1". All 16 steps FIFO memory are filled by the sensor data, the most oldest data is discarded and Read Pointer is incremented. All data in FIFO memory is discarded when FFEN is set to "0".

Increment every data storage

Write	F	FIFO Memory			Ī
Pointer	POUT L	POUT M	POUT H	Pointer	
W0	POUT_L0	POUTM_0	POUT_H0	R0	-
W1	POUT_L1	POUTM_1	POUT_H1	R1	K
W2	POUT_L2	POUTM_2	POUT_H2	R2	Ľ
W3	POUT_L3	POUTM_3	POUT_H3	R3	
W4	POUT_L4	POUTM_4	POUT_H4	R4	Ī
W5	POUT_L5	POUTM_5	POUT_H5	R5	Ī
W6	POUT_L6	POUTM_6	POUT_H6	R6	Ī
W7	POUT_L7	POUTM_7	POUT_H7	R7	1
W8	POUT_L8	POUTM_8	POUT_H8	R8	Ī
W9	POUT_L9	POUTM_9	POUT_H9	R9	Ī
W10	POUT_L10	POUTM_10	POUT_H10	R10	Ī
W11	POUT_L11	POUTM_11	POUT_H11	R11	J
W12	POUT_L12	POUTM_12	POUT_H12	R12	Ī
W13	POUT_L13	POUTM_13	POUT_H13	R13	J
W14	POUT_L14	POUTM_14	POUT_H14	R14	I
W15	POUT_L15	POUTM_15	POUT_H15	R15	I

Increment every data read or data discard



HSPPAD143A Datasheet

11 / 27 Rev.00 Jan/11/2019

8.2 Averaging

Table 8: AVCL.AVG setting


	Number of data to average			
AVCL.AVG	Register Action and Command Action Mode	Continuous Mode		
000	no average	no average		
001	x 2	x 2		
010	x 4	x 4		
011	x 8	x 8		
100	x 16	x 16		
101	x 32	x 16		
110	x 64	x 16		
111	x 128	x 16		

Table 9: AVCL.TFRQ setting

000	Once before first pressure measurement
001	Once every 64 pressure measurement
010	Once every 32 pressure measurement
011	Once every 16 pressure measurement
100	Once every 8 pressure measurement
101	Once every 4 pressure measurement
110	Once every 2 pressure measurement
111	Every time

8.2.1 In Register Action Mode and Command Action Mode

Averaging function can be activated by setting AVCL.AVG. In Register Action Mode and Command Action mode, simple average is calculated. Measurement is performed after the command PDET is issued . Temperature is measured by specified frequency by AVCL.TFRQ. The measurement repeats until specified number of data is collected. Each data are temperature compensated with the latest temperature data. Then, average is calculated and the result is stored into POUT.

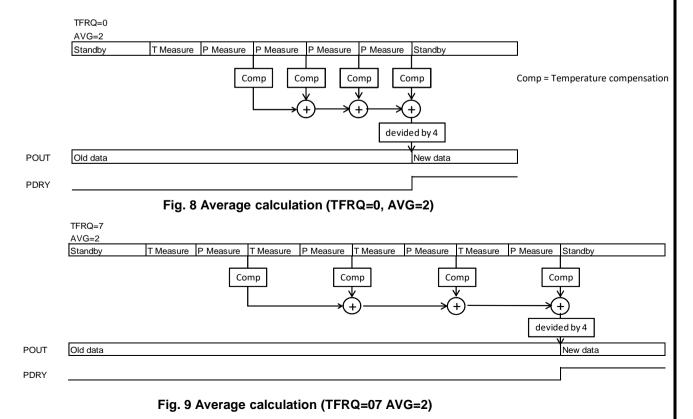

12 / 27 Rev.00 Jan/11/2019

8.2.2 In Continuous Mode

In Continuous Mode, moving average is calculated. Set CTL2.MODE=01 with AVCL.AVG>0, periodical measurement is started. Average is calculated when every measurement is done and the result is stored into POUT. Moving average can update averaged data at every measurement, so sampling rate won't be compromised. When first few measurement, number of data is not sufficient to specified average number, in this case necessary data is supplemented by initial data.

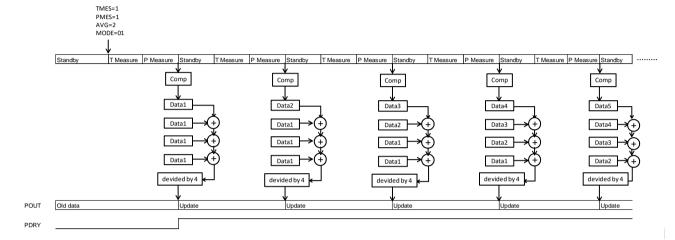


Fig. 10 Moving Average calculation

8.3 CIC Filter

Digital output data from $\Delta\Sigma ADC$ is processed at CIC filter in the digital block. Number of TAP can be specified at CTL1.PTAP. Output data accuracy is increased by larger number of TAP, however, current consumption is increased too. This TAP setting is effective to pressure reading only and fixed for temperature.

Table 10: CTL1,PTAP setting

PTAP	Name	Tap count	Pressure Measurement time
00	Ultra Low Power	32	260 uS
01	Low Power	64	356 uS
10	High Accuracy	128	548 uS
11	Ultra Accuracy	256	932 uS

Measurement time is typical value and not guaranteed. Temperature measurement time (416uS) is not included.

8.4 Software Reset

Software reset is performed by setting ACTL2.SRST to "1" or send action command SRST. Once software reset command is detected, digital regulator is disabled and all register values are reset. Then transfer to Register Action Mode and Standby state. After Software reset command, command can not be received for 2.2msec to complete POR.

ALPS/ILPINE

Digital Pressure Sensor

HSPPAD143A Datasheet

13 / 27 Rev.00 Jan/11/2019

8.5 Flag Function

Following flag function can be used. The status is checked by reading FFST or STAT register.

8.5.1 STATUS Register

STAT register indicates following status.

Table 11: STAT and FFST Register function

Register	Name	Flag	Condition to be "1"	Condition to be "0"
STAT	BUSY	Busy flag	Pressure or Temperature sensor is in measurement.	In standby state.
	TRDY	Temperature measurement completion flag	TDET was executed and temperature measurement is completed.	TOUT is read. FFEN is changed.
	PDOR	Pressure data over run flag	a) FIFO is disabled Old data is discarded and updated by new data in POUT. b) FIFO is enabled The most oldest data is discarded with FFEN=1 and FP=16.	a) FIFO is disabled POUT is read. b) FIFO is enabled POUT is read. FFEN is changed.
	PRDY	Pressure measurement completion flag	a) FIFO is disabled Pressure measurement is competed. b) FIFO is enabled FP>=1	a) FIFO is disabledPOUT is read.B) FIFO is enabledFP=0.FFEN is changed.
FFST	FFEV	FIFO event flag	FP>=WMT	FP <wmt Change FFEV</wmt

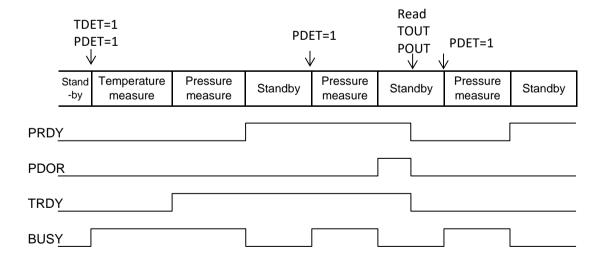


Fig. 11 :Timing chart in Continuous Measurement Mode (PMES=1, TMES=1)



HSPPAD143A Datasheet

14 / 27 Rev.00 Jan/11/2019

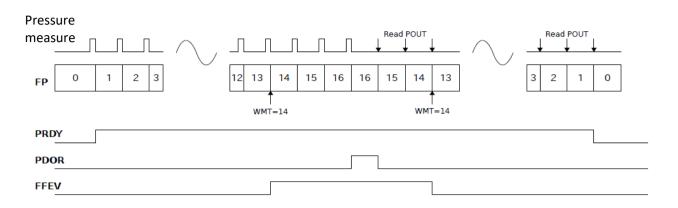


Fig. 12: Timing chart in FIFO mode

15 / 27 Rev.00 Jan/11/2019

9. SAMPLE FLOW CHART

This flow chart is showing from Power on to pressure measurement in Command Action Mode with 16-step FIFO.

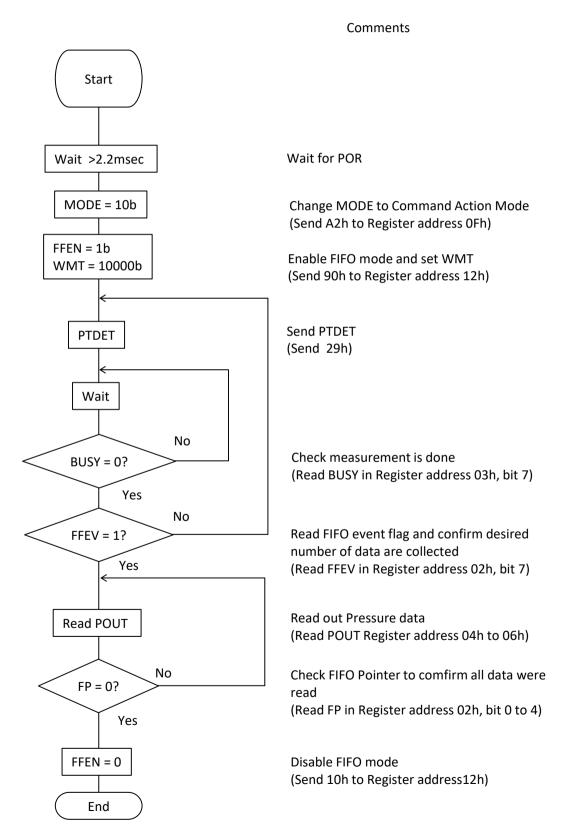


Fig. 13: Example flow chart



HSPPAD143A Datasheet

16 / 27 Rev.00 Jan/11/2019

10. TYPICAL REGISTER SETTING

Table 12: Typical settings

Setting	Application	MODE	PTAP	AVG	TFRQ	ODR [Hz]	Measurement Period [mS] (*1)	Current [uA]	Noise [Pa]	Noise [cm]
Fastest Dynamic motion detection	Game or fast move handheld device	Continuous	11	x 16	NA	200	NA	356	1.2	10
Dynamic motion detection	Handheld device	Continuous	11	x 16	NA	100	NA	181	1.2	10
Indoor navigation	Floor detection	Continuous	11	x 16	NA	10	NA	23.6	1.2	10
1Hz Single shot High resolution	On demand altitude detection	Register Action or Command Action	11	x 8	0	1 (*2)	8	11.2	2.6	22
1Hz Single shot Low power	High frequency weather station	Register Action or Command Action	11	x 1	0	1 (*2)	1	1.8	6	51
1/60Hz Single shot Low power	Low frequency weather station	Register Action or Command Action	11	x 1	0	1/60 (*2)	1	0.03	6	51

^{*1 :} Measurement period in msec. In other words, necessary time period after receiving command. Not applicable for Continuous mode.

^{*2 :} Sampling frequency must be controlled by command from host device.



HSPPAD143A Datasheet

17 / 27 Rev.00 Jan/11/2019

11. INTERFACE SPECIFICATIONS

11.1 I2C Slave Interface

I2C interface specification conforms Philips I2C-BUS Specification version 2.1 and NXP UM10204 I2C-BUS Specification and user manual Rev.03-19 June 2007. The slave address is 1001000x (x= Write:0, Read:1). Standard mode (100kHz), Fast mode (400kHz), Fast mode plus (1MHz) and High-speed mode (3.4MHz) are supported. Multiple read and write is supported and register address is automatically incremented every read or write.

High-speed mode is selected when master code (00001xxx) is received instead of slave address. Once master code is received, the product return NAK.

The device works in Fast mode plus and High-speed mode with power supply less than 2.5V. Please contact us, if the device needs to be operated in those mode with or higher power supply. Different factory calibration will be done before shipment.

Bus protocol definitions

S: Start condition

SAD+W: Slave Address + write bit SAD+R: Slave Address + read bit

SAD+R/W:Slave Address + read or write bit

SAK: Slave Acknoledge

REG: Register Address (2nd byte)
Sr: Repeat Start condition
A: (Master) Acknowledge
/A: (Master) Non-Acknowledge

DATA: Data(load)
P: Stop condition

M-code: Master code (00001XXX)

Read Formats

One byte read flow

master	S	SAD+W		REG		SR	SAD+R			/A	Р
s/ave			SAK		SAK			SAK	DATA		

Multiple byte reads flow

master	S	SAD+W		REG		SR	SAD+R			A		/A	Р
s/ave			SAK		SAK			SAK	DATA		DATA		

Write Format

One byte wirte flow

one by co will co illow								
master	S	SAD+W		REG		DATA		Р
s/ave			SAK		SAK		SAK	

Multiple byte writes flow

master	S	SAD+W		REG		DATA		DATA		Р
s/ave			SAK		SAK		SAK		SAK	

HS mode data trasfer

HS mode is enable after writing Mcode.

speed	F/S-mode	F/S-mode			Hs-mode						
master	S	Mcode	/A	SR	SAD +R/W		DATA	/A	Р		
s/ave						A	DATA	A			
									Hs- cont	tinue	
master									SR	SAD +R/W	



HSPPAD143A Datasheet

18 / 27 Rev.00 Jan/11/2019

12. REGISTER MAP

Reg	Nama	Cust.	Test	Full Name				Bit assi	ignment				Init.
add	Name	R/W/A	R/W/A	Full Name	bit7	bit6	bit5	bit4	bit3	bit2	bit1	bit0	Value
00	WIA	R	R	Who I am	0	1	0	0	1	0	0	1	49
01	INFO	R	R	Information	0	0	1	1	0	0	0	1	31
02	FFST	R	R	FIFO Status	FFEV	-	-			FP[4:0]			00
03	STAT	R	R	Status	BUSY	-	-	TRDY	-	PDOR	-	PRDY	00
04	POUTL	R	R	Pressure Output Low				POU	Π[7:0]				00
05	POUTM	R	R	Pressure Output Middle				POUT	[15:8]				00
06	POUTH	R	R	Pressure Output High	-	-	-	-	-	-	-	POUT[16]	00
09	TOUTL	R	R	Temperature Output Low	ΤΟυτ[7:0]							00	
0A	TOUTH	R	R	Temperature Output High	TOUT[15:8]								19
0E	CTL1	RW	RW	Control 1	-	-	-	-	-	-	PTAI	P[1:0]	13
0F	CTL2	RW	RW	Control 2	TMES	-	PMES	-	ODR[1:0]		MOD	A0	
10	ACTL1	RW	RW	Action Control 1	-	-	-	-	TDET	-	PDET	-	00
11	ACTL2	RW	RW	Action Control 2	SRST	ı	•	-	-	-	-	-	00
12	FCTL	RW	RW	FIFO Control	FFEN	-	-		\	VMT[4:0)]		10
13	AVCL	RW	RW	Average Control	-	ı	Т	FRQ[2:0)]	F	AVG[2:0)]	38
1C	PNUM	R	R	Product Number	1	1	1	0	0	0	0	0	E0
20	PDET	AC	AC	Pressure Detection Command	-	-	-	-	-	-	-	-	-
22	TDET	AC	AC	Temperature Detection Command	-	-	-	-	-	-	-	-	-
26	SRST	AC	AC	Software Reset Command	-	-	-	-	-	-	-	-	-
29	PTDET	AC	AC	P&T Detection Command	-	-	-	-	-	-	-	-	-

Registrers marked "-" must not be changed.



HSPPAD143A Datasheet

19 / 27 Rev.00 Jan/11/2019

13. REGISTER DESCRIPTION

WIA	(Who I am)		Address:00h (Read only)
bit	Name	Initial	Description
7:0	WIA	49h	Fixed value

_	INFO	(Information	1)	Address:01h	(Read only)
	bit	Name	Initial		Description
	7:0	INFO	31h	Fixed value	

FFST	(FIFO Statu	s)	Address:02h (Read only)
bit	Name	Initial	Description
7	FFEV	0b	FIFO event flag. 0: FP <wmt 1:="" fp="">=WMT</wmt>
6:5	-	-	-
4:0	FP	00000b	Number of data stored in FIFO memory. 5bit = 0~16.

STAT Address:03h (Read only) (Status) Initial Description bit Name Busy state flag. 7 **BUSY** 0b 0: Standby state 1: In Busy state 6 5 Temperature measurement completion flag 4 TRDY 0b 0: No data update or data was read 1: New data is ready 3 Data over run flag 0: No data update or data was read 2 **PDOR** 0b 1: Old data is discarded 1 Pressure measurement completion flag 0 **PRDY** 0b 0: No data update or data was read 1: New data is ready



HSPPAD143A Datasheet

20 / 27 Rev.00 Jan/11/2019

POUT	(Pressure C	Output)	Address:04h~06h (Read only)
bit	Name	Initial	Description
23:17	-	-	-
16:0	POUT	00000h	17bit Pressure output 0~131071 Pressure [Pa] = POUT[LSB] x 2

TOUT	(Temperatur	re Output)	Address:09h~A0h (Read only)
bit	Name	Initial	Description
15:0	TOUT	1900h	16bit temperature data -32768~32767 (Two's complement) Temperature [°C] = TOUT[LSB] / 256



HSPPAD143A Datasheet

21 / 27 Rev.00 Jan/11/2019

CTL1	(Control 1)		Address:0Eh (Read/Write)
bit	Name	Initial	Description
7:5	-	1	-
4	-	-	-
3:2	-	-	-
1:0	PTAP	11b	sinc filter Tap count 00: 32-tap, Ultra low power 01: 64-tap, Low power 10: 128-tap, High accuracy 11: 256-tap, Ultra accuracy

CTL2	(Control 2)		Address:0Fh (Read/Write)
bit	Name	Initial	Description
7	TMES	1b	Temperature measurement 0: Disable temperature measurement in Continuous mode. 1: Eable temperature measurement in Continuous mode.
6	-	-	-
5	PMES	1b	Pressure measurement 0: Disable pressure measurement in Continuous mode. 1: Eable pressure measurement in Continuous mode.
4	-	ı	-
3:2	ODR	00b	Sampling rate 00: 1Hz 01: 10Hz 10: 100Hz 11: 200Hz
1:0	MODE	00b	Mode setting 00: Register Action Mode 01: Continuous Measurement Mode 10: Command Action Mode 11: Command Action Mode



HSPPAD143A Datasheet

22 / 27 Rev.00 Jan/11/2019

Address:10h (Read/Write) ACTL1 (Action Control 1) Initial Description bit Name 7:4 Temperature measurement in Register Action Mode 3 **TDET** 0b 0: Not measure 1: Measure 2 Pressure measurement in Register Action Mode 1 PDET 0b 0: Not measure 1: Measure 0

ACTL2	(Action Cor	ntrol 2)	Address:11h (Read/Write)
bit	Name	Initial	Description
7	SRST	0b	Software Reset 0: None 1: Execute Software Reset
6:0	-	-	-

FCTL	(FIFO Contr	ol)	Address:12h (Read/Write)
bit	Name	Initial	Description
7	FFEN	0b	FIFO enabler 0: Disable 1: Enable
6:5	-	1	-
4:0	WMT	10000b	FIFO threshold 5bit 0~16.



HSPPAD143A Datasheet

23 / 27 Rev.00 Jan/11/2019

Address:13h (Read/Write) **AVCL** (Average Control) Initial Description bit Name 7:6 Frequency of temperature measurement 000: Only first time 001: Once every 64 times 010: Once every 32 times 5:3 **TFRQ** 111b 011: Once every 16 times 100: Once every 8 times 101: Once every 4 times 110: Once every 2 times 111: Every time Number of data to average (In Continuous Mode) 000: No average 001: x 2 (x 2) 010: x 4 (x 4) AVG 000b 2:0 011: x 8 (x 8) 100: x 16 (x 16) 101: x 32 (x 16) 110: x 64 (x 16) 111: x 128 (x 16)

PNUM	(Product Nu	ımber)	Address:1Ch (Read only)
bit	Name	Initial	Description
7:0	PNUM	E0h	Fixed value for HSPPAD143A

24 / 27 Rev.00 Jan/11/2019

14. MECHANICAL INFORMATION 14.1 Pin Layout

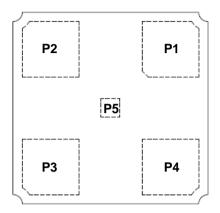


Fig.14: Pin layout (Top view)

Table13 : Pin assign

P#	Name	Description		
P1	GND	Ground		
P2	VDD	Voltage supply		
P3	SCL	Serial clock		
P4	SDA	Serial data input/output		
P5	NC	-		

14.2 Package Dimension

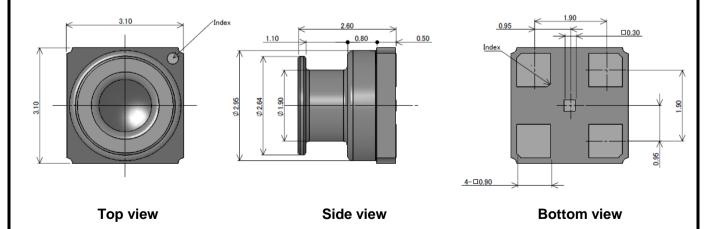


Fig. 15: Mechanical Dimension

25 / 27 Rev.00 Jan/11/2019

HSPPAD143A Datasheet

14.3 Recommended Land Pattern

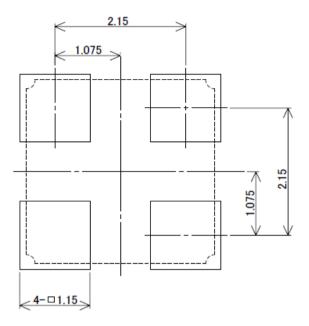


Fig. 16: Land Pattern

14.4 Tape and Reel drawing

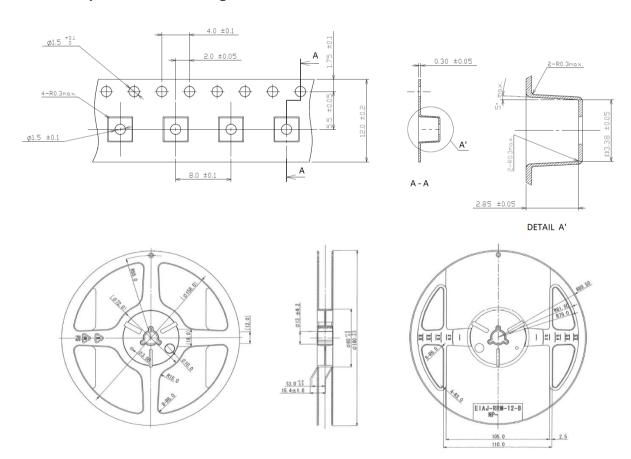


Fig. 17: Tape and Reel dimension

Quantity per reel: 500pcs



HSPPAD143A Datasheet

26 / 27 Rev.00 Jan/11/2019

15. I2C CONNECTION EXAMPLE

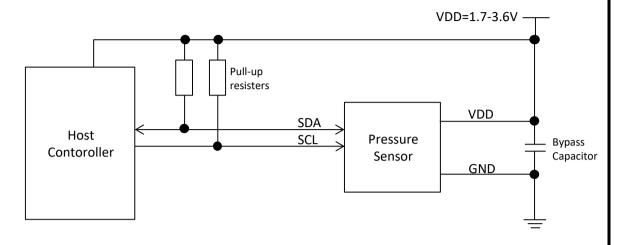


Fig.18: I2C connection diagram

- 3.3kohm Pull-up resister is recommended
- 0.1uF Bypass capacitor is recommended



HSPPAD143A Datasheet

27 / 27 Rev.00 Jan/11/2019

16. LEGAL DISCLAIMER

 国内外の輸出関連法規により規制されている製品の輸出に際しては、同法規を遵守の上、 必要な許可、手続き等をとってください。

For the export of products which are controlled items subject to foreign and domestic export laws and regulations, you must obtain approval and/or follow the formalities of such laws and regulations.

2. 軍事用途又はテロ等の反社会活動目的では、当製品を一切使用しないでください。 また、最終的にそれら用途・目的で使用されるおそれがある法人・団体・個人等へも当製品 を一切供給しないでください。

Products must not be used for military and/or antisocial purposes such as terrorism, and shall not be supplied to any party intending to use the products for such purposes.

3. 当製品は、特に用途を指定していないかぎり、本来、AV、家電、事務機、情報機器、通信機器、アミューズメント機器等の一般電子機器用に設計、製造されたものです。 したがいまして、原子力制御機器、宇宙・航空機で運行にかかわる機器等の用途では一切使用しないでください。

上記の使用禁止の用途以外で、医療機器、防犯機器、防災機器、海底用機器等の高度の安全性・信頼性を必要とする機器でのご使用の際は、弊社営業担当迄ご相談いただくか、またはセットでの十分な適合性の確認を行っていただいた上で、フェールセーフ設計、保護回路、冗長回路、誤動作防止設計、延焼対策設計等のセットでの安全対策設計を設けてください。

Unless provided otherwise, the products have been designed and manufactured for application to equipment and devices which are sold to end-users in the market, such as AV (audio visual) equipment, home electric equipment, office and commercial electronic equipment, information and communication equipment or amusement equipment. The products are not intended for use in, and must not be used for, any application of nuclear equipment, driving control equipment for aerospace or any other unauthorized use.

With the exception of the above mentioned banned applications, for applications involving high levels of safety and liability such as medical equipment, burglar alarm equipment, disaster prevention equipment and undersea equipment, please contact an Alps sales representative and/or evaluate the total system on the applicability. Also, implement a fail-safe design, protection circuit, redundant circuit, malfunction protection and/or fire protection into the complete system for safety and reliability of the total system.

4. 車載対応製品以外の製品を車載用にご使用される場合は、事前に弊社へご相談ください。

Before using products which were not specifically designed for use in automotive applications, please contact an Alps sales representative.