EM280

Multi-channel power analyzer



Description

Multi-channel power analyzer for single or threephase systems installable on panels or DIN rails. Manages current input up to 32 A via a 6-channel current transformer block (TCD06BS with split core or TCD06BX with solid core) connected with RJ-11 connectors.

The EM280 is equipped with a LCD display with controls to display measurements and configure the system, a RS485 port and two pulse outputs or two RS485 ports for daisy chain connections. Thanks to the SUM function, it also displays total load consumption values.



- Reduced installation time and errors. Equipped with detachable terminals for all connections, with possibility of requesting pre-wired cables (optional). Connected to the 6-channel current transformer block with two cables fitted with RJ-11 connectors. For connections in cascade of multiple EM280s the voltage reference is required once only.
- **Compact dimensions.** It uses a compact current transformer block (TCD06BS or TCD06BX) that performs the function of six transformers, observing the standard dimensions of the switches for DIN rails.
- Installation flexibility. It can be installed in new or existing single- and three-phase systems. Suitable for panel or DIN rail mounting .
- **Granular analysis.** It provides total measurements or single load measurements (up to 2 three-phase loads or up to 6 single-phase loads).
- **Specific software.** The UCS proprietary configuration software enables rapid configuration and the display of all measurements. The software and subsequent updates are free.
- **Tamper-proof.** Configuration access can be locked. The terminals and display can be sealed.

Applications

EM280 is connected directly on output from the switches present in switchboards for simultaneous monitoring of multiple single- or three-phase loads in low voltage systems.

Created for both commercial and industrial environments (e.g. data centers), this device guarantees quick and space-saving installations with just a few simple connections.

Suitable for new installations with little space available (using the transformer block TCD06BX), and for existing or new installations where more installation flexibility is required (using transformer block TCD06BS).




Main functions

- · Measurement of energy consumption and main electrical variables of single- or three-phase loads.
- · Display of single load measurements and total measurements
- Transmission of data via serial communication.
- Transmission of power consumption via pulse output (optional).





Architecture (example with transformer block TCD06BX)

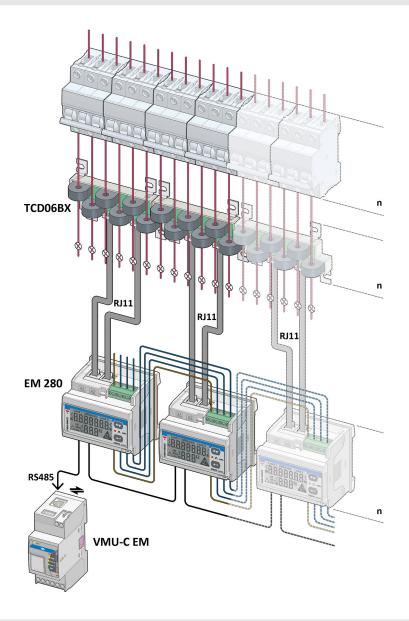


Main features

- · Up to 2 three-phase loads or 6 single-phase loads managed simultaneously.
- Up to 32 A input current via 6-channel transformer block TCD06BS or TCD06BX.
- Three installation configurations: on DIN rails, mounted on panel of 72 x 72 or 96 x 96 (with optional adapter).
- Single load measurements: V, A, W/VA/var, kWh, kvarh. Total load measurements: W/VA/var, kWh, kvarh.
- Display of electrical variables: 3 digits. Display of energy meters: 7 digits.
- Accuracy: better than a combination of a class 1 meter and a class 0.5 current transformer.
- Easy connection function.
- · Up to 20 EM280 connected in cascade.
- RS485 port.
- · Optional outputs: additional RS485 port for chain connection or two pulse outputs.
- Self power supply via voltage inputs.
- Detachable terminals and sealable terminal caps.
- Configuration via keypad or UCS configuration software.

EM280

CARLO GAVAZZI

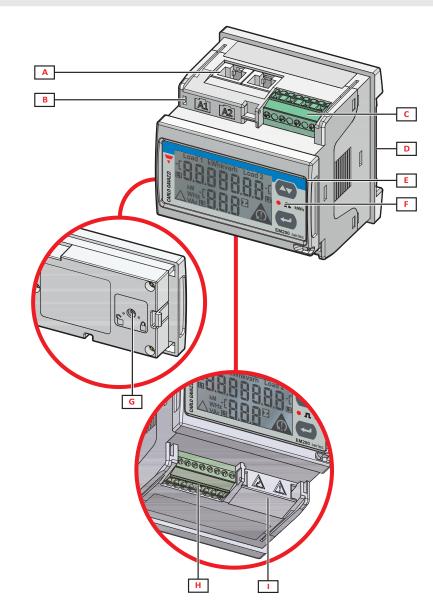

Area	Description
Α	RJ-11 connector for connection to transformer block.
В	Power supply status LED.
С	Detachable voltage input terminals.
D	Area for mounting on DIN rail or for housing the LCD display in the case of panel mounting.
E	LCD display and controls.
F	LED that blinks with frequency proportional to active energy consumption, see "LED features".
G	Rotary selector to lock configuration.
Н	RS485 port terminals and pulse outputs.
I	Plastic protection cover or terminals for voltage connection in cascade.





Features




General

Material	Noryl, self-extinguishing V-0 (UL 94)	
Protection degree	ree Front: IP40, Terminals: IP20	
Terminals	Type: detachable	
Terminais	Maximum section: 1.5 mm ² , Torque: 0.2/0.25 Nm	
Overvoltage category	Cat. III	
Pollution degree	2	
Noise rejection (CMRR)	100 dB, from 48 to 62 Hz	
Insulation	See "Input and output insulation"	
Mounting	DIN rail	
Mounting	Panel 72 x 72, Panel 96 x 96 (with optional adapter)	
Weight	400 g (packaging included)	

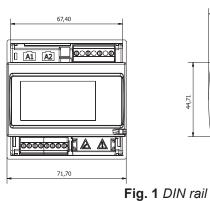

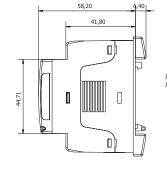

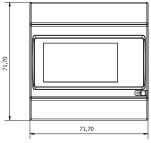

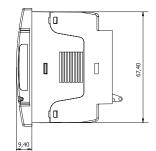


Fig. 2 Panel 72 x 72

Environmental specifications

Operating temperature	From -25 to +55 °C/from -13 to +131 °F
Storage temperature	From -30 to +70 °C/from -22 to +158 °F

NOTE: R.H. < 90 % non-condensing @ 40 °C / 104 °F.

Input and output insulation

Туре	Voltage input and self power supply	Current input (TCD06B output)	Pulse out- puts	RS485 port
Voltage input and self power supply	-	Reinforced *	Double **	Double **
Current input (TCD06B output)	Reinforced *	-	Double **	Double **
Pulse outputs	Double **	Double **	-	-
RS485 port	Double **	Double **	-	-

*By limiting impedance

**2.5 kV ac 1 min (4 kV pk 1.2/50 µs)+ limiting impedance



CARLO GAVAZZI



	2014/35/EU (LVT - Low Voltage)
Directives	2014/30/EU (EMC - Electro Magnetic Compatibility)
	2011/65/EU (Electric-electronic equipment hazardous substances)
	Electromagnetic compatibility (EMC) - emissions and immunity: EN62052-11
Standards	Electrical safety: EN61010-1
	Pulse outputs: IEC62053-31, DIN43864
Approvals	



Electrical specifications

Electrical system and loads

Managed electrical system	Single-phase (2-wire) Three-phase without neutral (3-wire) Three-phase with neutral (4-wire)
Number of loads man-	Single-phase systems: up to 6 single-phase loads
aged	Three-phase systems: up to 2 three-phase loads or up to 6 single-phase loads

Voltage inputs

	MV5	MV6	
Voltage connection	Direct		
Rated voltage L-N (from Un min to Un max)	From 160 to 240 V	From 57.7 to 133 V	
Rated voltage L-L (from Un min to Un max)	From 277 to 415 V	From 100 to 230 V	
Voltage tolerance	-15%, +10%		
Overload	Continuous: 1.2 Un max For 500 ms: 2 Un max		
Input impedance	1600 kΩ		
Frequency	From 45 to 65 Hz		

Current inputs

Current connection	Via transformer block TCD06BS or TCD06BX	
Primary current Automatic setting of primary current of connected TCD06B		
Rated current (In)	32 A (primary current of TCD06BS or TCD06BX)	
Minimum current (Imin)	0.02 ln	
Maximum current (Imax)	1.2 ln	
Start-up current (lst)	0.002 In	
Overload	Continuous: 1.2 In For 500 ms: 2 In	
Input impedance	< 0.2 VA	

Power supply

Power supply	Self powered, between L2 and L3
Consumption	2 W, ≤ 4 VA





Measurements

Method	TRMS measurements of distorted waveforms	
Sampling	1600 samples/s @50 Hz 1900 samples/s @60 Hz	

Available measurements

Three-phase loads

Energy	Active imported
	Reactive imported
	Phase 1
Current	Phase 2
	Phase 3
Voltage	Phase-phase
voltage	Phase-neutral
	Total load
Active power	Average (dmd)
	Maximum dmd
	Total load
Apparent power	Average (dmd)
	Maximum dmd
Reactive power	Total load

Single-phase loads

Energy	Active
Current	Phase
Voltage	Phase-neutral
	Total load
Active power	Average (dmd)
	Maximum dmd



CARLO GAVAZZI

Measurement accuracy

EM280

	Current		
From 0.05 In to Imax	±(0.5% rdg)		
From 0.02 In to 0.05 In	±(1.0% rdg)		
	Phase-phase voltage		
From (Un min -10%) to (Un max +10%)	±(0.5% rdg)		
	Phase-neutral voltage		
From (Un min -10%) to (Un max +10%)	±(1% rdg)		
	Active power (PF=1)		
From 0.05 In to Imax	±(1% rdg)		
From 0.02 In to 0.05 In	±(1.5% rdg)		
	Active power (PF=0.5L, 0.8C)		
From 0.1 In to Imax	±(1% rdg)		
From 0.05 In to 0.1 In	±(1.5% rdg)		
	Reactive power (sinφ=1)		
From 0.05 In to Imax	±(2% rdg)		
From 0.02 In to 0.05 In	±(2.5% rdg)		
	Reactive power (sinφ=0.5 L or C)		
From 0.1 In to Imax	±(2% rdg)		
From 0.05 In to 0.1 In	±(2.5% rdg)		
Reactive power (sinφ=0.25 L o C)			
From 0.1 In to Imax	±(2.5% rdg)		
Active energy			
Equivalent to class 1 (EN62053-21)			
Reactive energy			
Equivalent to class 2 (EN62053-23)			
Frequency			
From 45 to 65 Hz	±1 Hz		

EM280+TCD06BX or EM280+TCD06BS

Current		
From 0.2 In to Imax	±(0.75% rdg)	
From 0.05 to 0.2 In	±(1% rdg)	
From 0.02 In to 0.05 In	±(1.25% rdg)	
	Active power (PF=1)	
From 0.2 In to Imax	±(1.25% rdg)	
From 0.05 to 0.2 In	±(1.5% rdg)	
From 0.02 In to 0.05 In	±(2% rdg)	
Reactive power (sinφ=1)		
From 0.2 In to Imax	±(2.25% rdg)	
From 0.05 to 0.2 In	±(2.5% rdg)	
From 0.02 In to 0.05 In	±(3% rdg)	



CARLO GAVAZZI



-	
Туре	LCD
Refresh time	1s
	2 rows:
Description	1 st : 7 digits (7 mm)
	2 nd : 3 digits (7 mm)
Variable readout	Electrical variables: 3 digits, min: 0.00, max: 999
	Energy meters: 7 digits, min: 0.0, max: 9 999 999

Digital outputs

Connection type	Detachable terminals	
Maximum number of	2	
outputs	-	
Туре	Opto-mosfet	
Function	Pulse output. Each output transmits the consumption of a single three-phase load or the total consumption of three single-phase loads.	
Features	V _{ON} : 2.5 V ac/dc, 70 mA max V _{OFF} : 40 V ac/dc max	
Configuration param-	Configuration param- Pulse weight (from 0.01 to 9.99 kWh per pulse)	
eters	Pulse duration (40 or 100 ms)	
Configuration mode	Via keypad or UCS software	

RS485 port

Protocol	Modbus RTU	
Devices on the same bus	Max 160 (1/5 unit load)	
Communication type	Multidrop, bidirectional	
Connection type	Detachable terminals, 2 wires, maximum distance 1000 m	
Configuration param- eters	Modbus address (from 1 to 247) Baud rate (9.6 / 19.2 / 38.4 kbps) Parity (None / Even)	
Configuration mode	Via keypad or UCS software	




Special functions

- Display of total loads connected in relation to energy consumption and power measurements (SUM function)
- · Measurements independent from direction of current (Easy connection function)
- · Resetting of active energy meters of single and total loads
- · Resetting of maximum values within set active and apparent power interval
- Configuration of phase order: 1-2-3-1-2-3 or 3-2-1-3-2-1
- · Password protected settings menu





Connection Diagrams

Note: for three-phase systems without neutral (3 wires) do not consider the connection to neutral N. Note: fuses F of 315 mA, if required by local law.

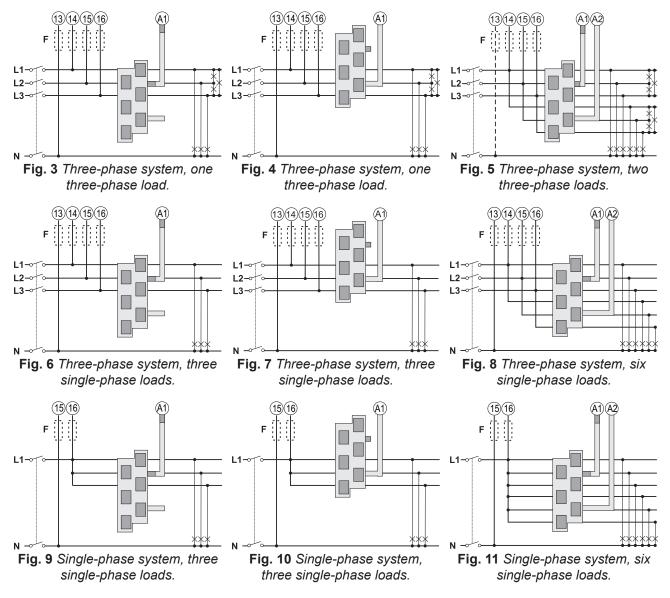



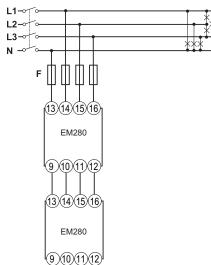

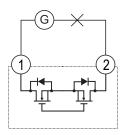

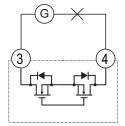
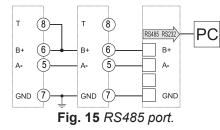


Fig. 14 Pulse output 2.

Fig. 12 Example of connection of multiple EM280s in cascade.






Fig. 13 Pulse output 1.

Fig. 16 Double RS485 port for daisy chain connection.

References



F EM280 72D MV 🗆 3X 🗆 S 🗖 (16 total characters)

Code **Options** Description Ε Μ 2 8 0 7 2 D Μ V 5 230 V L-N, 400 V L-L ac, connection via TCD06BS or TCD06BX 6 120 V L-N, 230 V L-L ac, connection via TCD06BS or TCD06BX 3 Х 0 S RS485 port and double digital output 2 S Double RS485 port for daisy chain connection Standard configuration Х "Bare" configuration. With respect to the standard configuration, the bare version does NOT include: Ν detachable terminals for voltage connections, detachable terminals for daisy chain connection via RS485 port (only for option 2S)

Enter the code, replacing the symbol \Box with the selected option (e.g.: EM280 72D MV5 3X OS X).

Accessories: order codes

Code	Options	Description
EM270WS V 1T	Replacing the symbol	Pre-wired cables for voltage connection (one terminal block).
EM270WS V 2T	Replacing the symbol	Pre-wired cables for voltage connection (two terminal blocks).
EM270WS S 2T	Replacing the symbol with the cable length. Lengths available: 60, 90, 120, 180, 230 cm.	Pre-wired cables for RS485 connection (two terminal blocks).
EM270WS T V	-	20 detachable terminal blocks for voltage connections.
EM270WS T C	-	20 plastic protection covers for voltage output.
EM270WS T S	-	20 detachable terminal blocks for daisy chain connection of RS485 port.
EM200-96 ADAPT- ER	-	Adapter to 96 x 96 panel mounting.

EM280

CARLO GAVAZZI



Further reading


Information	Document	Where to find it
Instruction manual	Instruction manual - EM280	www.productselection.net

CARLO GAVAZZI compatible components

Purpose	Component name/code key	Notes
Current measurement accessories (mandatory)	TCD06BS TCD06BX	See next chapter
Configure analyzer via desktop application	UCS configuration software	Available for free download at: www.productselection.net
Monitor data from several analyzers	VMU-C EM	See relevant datasheet

TCD06BS



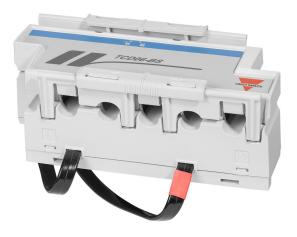

Description

6-channel split core current transformer block for power analyzer EM280.

This manages primary current up to 32 A and the value is read automatically by the EM280 to eliminate the need for configuration and calibration by the user.

It is equipped with RJ-11 connectors for simple connection to the EM280.


Main features

- 6 split core current transformers
- Primary current 32 A
- Hole diameter: 8.5 mm
- Distance between hole centers: 17.5 mm
- Connection to the EM280 with two cables with RJ-11 connectors
- Mounting on panel or DIN rail
- · Mechanical lock to prevent accidental opening

Main functions

• Conversion of current for input to the power analyzer EM280.

Structure

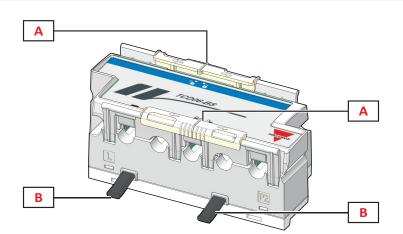

Area	Description
Α	Mechanical lock to prevent accidental opening
В	Cables with RJ-11 connectors for connection to the EM280


TCD06BS




Features



Material	Frianyl C3 H V0 GY7035/TA
Protection degree	Front: IP50
Terminals	RJ-11 connector
Overvoltage category	Cat. III
Pollution degree	2
Insulation	60s 1500 V ac (RJ connectors to housing)
Mounting	Panel mounting, by means of four removable hooks DIN rail
Weight	350 g (packaging included)

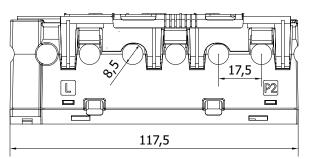

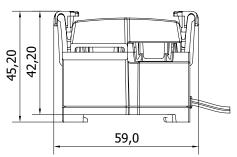

Environmental specifications

Operating temperature	From -25 to +55 °C/from -13 to +131 °F
Storage temperature	From -30 to +70 °C/from -22 to +158 °F


Electrical specifications

Primary current (In)	32 A
Maximum current (con- tinuous)	1.2 ln
Maximum system volt- age	0.72 kV ac
Frequency	From 45 to 65 Hz
Accuracy	0.5%
Phase error	<4°

TCD06BS



Connection Diagrams

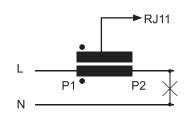

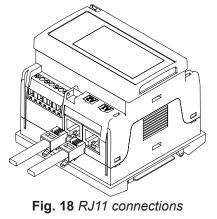


Fig. 17 Current connection

References

Order code

Р ТСО06ВS 32 СМ Х

Enter the code, replacing the symbol \Box with the length of the cable with RJ11 connectors (2 or 3 digits). Lengths available: 80, 150, 200 cm.

Further reading

Information	Document	Where to find it
Instruction manual	Instruction manual - TCD06BS	www.productselection.net

CARLO GAVAZZI compatible components

Purpose	Component name/code key	Notes
Measure and display consumption of connected loads	EM280	See relevant datasheet

TCD06BX





Main features

- 6 solid core current transformers
- Primary current 32 A
- Hole diameter: 8.5 mm
- Distance between hole centers: 17.5 mm
- Connection to the EM280 with two cables with RJ-11 connectors
- Mounting on panel or DIN rail

Main functions

• Conversion of current for input to the power analyzer EM280.


Description

6-channel solid core current transformer block for power analyzer EM280.

This manages primary current up to 32 A and the value is read automatically by the EM280 to eliminate the need for configuration and calibration by the user.

It is equipped with RJ-11 connectors for simple connection to the EM280.



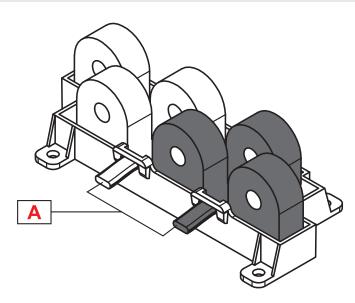

Area	Description
Α	Cables with RJ-11 connectors for connection to the EM280

TCD06BX




Features



General

Material	Frianyl C3 H V0 GY7035/TA
Protection degree	Front: IP50
Terminals	RJ-11 connector
Overvoltage category	Cat. III
Pollution degree	2
Insulation	60s 1500 V ac (RJ connectors to housing)
Mounting	Panel mounting, by means of four removable hooks
Weight	350 g (packaging included)

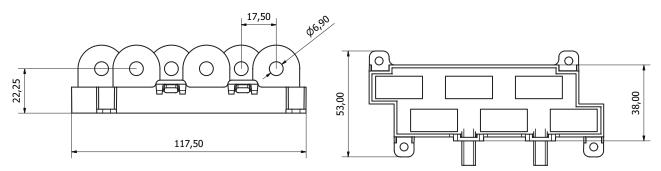

Environmental specifications

Operating temperature	From -25 to +55 °C/from -13 to +131 °F
Storage temperature	From -30 to +70 °C/from -22 to +158 °F


Electrical specifications

Primary current (In)	32 A
Maximum current (con- tinuous)	1.2 ln
Maximum system volt- age	0.72 kV ac
Frequency	From 45 to 65 Hz
Accuracy	0.5%

TCD06BX



Connection Diagrams

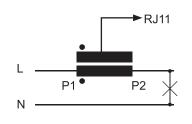

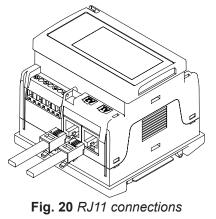


Fig. 19 Current connection

References

Order code

🖥 ТСО06ВХ 32 🗆 СМ Х

Enter the code, replacing the symbol \Box with the length of the cable with RJ11 connectors (2 or 3 digits). Lengths available: 80, 150, 200 cm.

Further reading

Information	Document	Where to find it
Instruction manual	Instruction manual - TCD06BX	www.productselection.net

CARLO GAVAZZI compatible components

Purpose	Component name/code key	Notes
Measure and display consumption of connected loads	EM280	See relevant datasheet



COPYRIGHT ©2017 Content subject to change. Download the PDF: www.productselection.net

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Carlo Gavazzi:

TCD06BS32200CMX
TCD06BX32150CMX
TCD06BS3280CMX
EM28072DMV63X2SN
EM28072DMV63X2SN
EM28072DMV63X2SN
EM28072DMV63X2SN
EM28072DMV63X2SN
TCD06BS32150CMX
TCD06BX32200CMX
TCD06BX3280CMX
TCD0M6080CMX
TCD0M6080CMX
EM28072DMV53X0SN
EM28072DMV63X0SN
EM28072DMV63X0SN
EM28072DMV53X0SN
<th