

Zigbee

SKU:U110



Description

Zigbee is a Zigbee ad hoc network communication module launched by M5Stack. The module adopts the CC2630F128 solution, internally integrates the Zigbee protocol stack, and opens the serial communication interface. Integrated external antenna, single node stable communication distance up to 1km, 200-level router depth, through the MESH networking mode, you can extend your IoT application in a wide range, with both ultra-low power consumption and high sensitivity. The Zigbee network can support hundreds of nodes and has enhanced security features. Can provide complete and interoperable IoT solutions for home and building automation.

Product Features

- CC2630F128 (dual ARM core-32 bit)
- Serial communication
- Low power consumption (module working current: 25mA, sleep 5uA)
- Dynamic routing maintenance, supporting 200-level routing depth
- Transmission speed 250Kbps
- Node communication distance 1km
- UART transparent transmission/broadcasting/P2P

Include

- 1x Zigbee Unit
- 1x SMA antenna

Applications

- Smart Home
- IoT collection node
- Building Automation


Specification

Resources	Parameter
CC2630F128	ARM Cortex-M3 32bit
communication	UART 38400bps 8N1(default)
Communication distance	1km (Open area)
working frequency	2.4GHZ (2405MHz-2480MHz, step:5MHz)
Net weight	24g
Gross weight	50g
Product Size	71.5*24*8mm
Package Size	95*65*25mm

PinMap

Core	TX(GPIO 17)	RX(GPIO 16)	5V	GND
Zigbee Unit	RX	TX	VIN	GND

Schematic

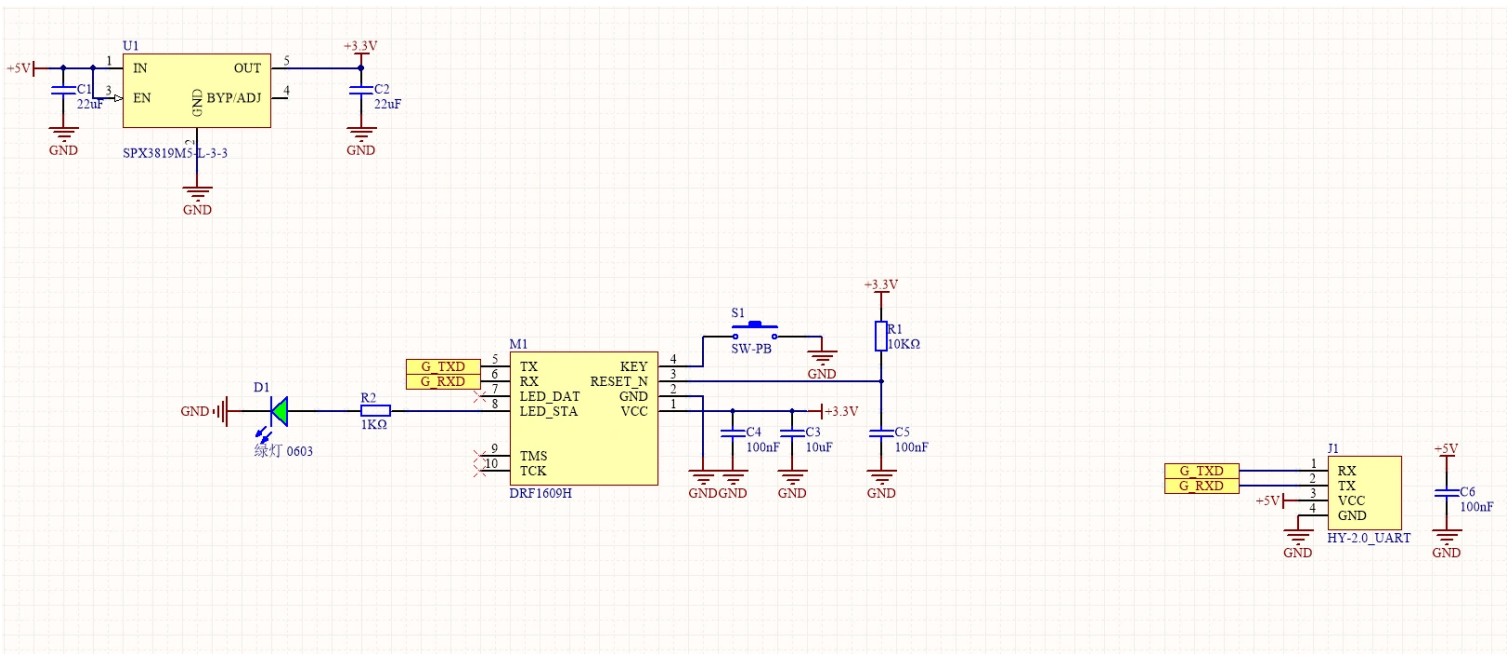

Example

Zigbee P2P CHAT ROOM

Zigbee RSSI TEST

EasyLoader

- Zigbee P2P CHAT ROOM
- Zigbee RSSI TEST
 - Coordinator
 - End Device

Related Link

- [CC2630 Datasheet](#)
- [Module User Manual](#)
- [Instructions for use of the host computer](#)
- [PC debugging tool](#)

Video

DRFZigbee.h - API

```
//Initialize the serial port of the module
void begin(HardwareSerial & uart){ _uartp = &uart;}


//Connect the module. After execution, the module will disconnect the wireless link and enter the configuration mode.
int linkMoudle();


//Read and write module configuration parameters
int readModuleparm(zigbee_arg_t *parm);


int setModuleparm(zigbee_arg_t &parm);


//Get network topology
int getNetworksTopology();


//After completing the configuration, you need to execute the program to restart the module and restore the wireless connection
int rebootModule();


//Get module signal quality
int8_t getModuleRSSI(nodeRSSI_t *nodeRSSIPtr = nullptr);


//Receive data
int reviceData(reviceData_t *revice,uint8_t type = kP2PCustomIDMode,size_t timeout = 1000);


//send data
void sendData(uint8_t cmd, const std::initializer_list<uint8_t> args);


int sendCMDAndWaitRevice(uint8_t cmd, byteArray &array, byteArray *reviceArray = nullptr, size_t timeout = 1000);


int sendCMDAndWaitRevice(uint8_t cmd, const std::initializer_list<uint8_t> args, byteArray *reviceArray = nullptr, size_t timeout = 1000);


int sendDataP2P(uint8_t mode,uint16_t addr,uint8_t *dataptr,size_t length);


int sendDataP2P(uint8_t mode,uint16_t addr,byteArray &array);


int sendDataP2P(uint8_t mode,uint16_t addr,const std::initializer_list<uint8_t> args);


-----


//Module configuration parameter item


DRFZigbee::zigbee_arg_t *arg = new DRFZigbee::zigbee_arg_t;


uint8_t   main_pointType;
uint16_t  main_PANID;
uint8_t   main_channel;
```

```
uint8_t    main_transmissionMode;

uint16_t   main_customID;
uint16_t   main_res0;
uint8_t    main_uartBaud;
uint8_t    main_uartBit;
uint8_t    main_uatrtStop;
uint8_t    main_uartCheck;
uint16_t   main_res1;
uint8_t    main_ATN;
uint8_t    main_mac[8];
```

//Configure preset parameters-complete configuration preset parameters can be used to quickly access the network from the node without settings

```
uint8_t    preset_pointType;
uint16_t   preset_PANID;
uint8_t    preset_channel;
uint8_t    preset_transmissionMode;
uint16_t   preset_customID;
```

//reserved

```
uint16_t   preset_res0;
```

```
uint8_t    preset_uartBaud;
uint8_t    preset_uartBit;
uint8_t    preset_uatrtStop;
uint8_t    preset_uartCheck;
```

//reserved

```
uint16_t   preset_res1;
```

```
uint8_t    preset_ATN;
uint16_t   shortAddr;
uint8_t    res3;
uint8_t    encryption;
uint8_t    password[4];
```

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[M5Stack:](#)

[U110](#)