Data sheet

3RA2120-4BD26-0AP6



Fuseless motor starter Direct start 600VAC Size S0 14-20A 220/240VAC 50/60HZ screw connection For snapping onto 60 mm busbar systems Type of coordination 2 IQ = 50 KA Also full fills type Of coordination 1 1NO+1NC (contactor)

product brand name	SIRIUS
product designation	non-fused motor starter 3RA2
design of the product	direct starter
manufacturer's article number	
 of the supplied contactor 	3RT2026-1AP60
 of the supplied circuit-breakers 	3RV2021-4BA10
 of the supplied busbar adapter 	<u>8US1251-5NT10</u>
 of the supplied link module 	3RA2921-1AA00
General technical data	
size of the circuit-breaker	S0
size of load feeder	S0
product extension auxiliary switch	Yes
insulation voltage with degree of pollution 3 at AC rated value	690 V
degree of pollution	3
surge voltage resistance rated value	6 kV
shock resistance according to IEC 60068-2-27	6g / 11 ms
mechanical service life (operating cycles) of contactor typical	10 000 000
type of assignment	2
Weight	1.06 kg
Ambient conditions	
ambient temperature	
 during operation 	-20 +60 °C
during storage	-50 +80 °C
during transport	-55 +80 °C
Main circuit	
number of poles for main current circuit	3
design of the switching contact	electromechanical
adjustable current response value current of the current- dependent overload release	14 20 A
operating voltage	
rated value	690 V
at AC-3 rated value maximum	690 V
operating frequency rated value	50 60 Hz
operational current at AC-3 at 400 V rated value	15.5 A
operating power at AC-3	
• at 400 V rated value	7 500 W
at 500 V rated value	11 000 W
Control circuit/ Control	
control supply voltage at AC	

15011 1 1	470 04014
• at 50 Hz rated value	176 242 V
• at 60 Hz rated value	240 V
at 60 Hz rated value	192 264 V
apparent holding power of magnet coil at AC	9.4 VA
inductive power factor with the holding power of the coil	0.28
Auxiliary circuit	
number of NC contacts for auxiliary contacts	1
number of NO contacts for auxiliary contacts	1
Protective and monitoring functions	
trip class	CLASS 10
design of the overload release	thermal (bimetallic)
response value current of instantaneous short-circuit trip unit	260 A
UL/CSA ratings	
full-load current (FLA) for 3-phase AC motor	
at 480 V rated value	15.2 A
• at 600 V rated value	17.8 A
yielded mechanical performance [hp]	
for single-phase AC motor	
— at 110/120 V rated value	1.5 hp
— at 230 V rated value	3 hp
• for 3-phase AC motor	
— at 200/208 V rated value	5 hp
— at 220/230 V rated value	5 hp
— at 460/480 V rated value	10 hp
— at 575/600 V rated value	15 hp
Short-circuit protection	
product function short circuit protection	Yes
design of the short-circuit trip	magnetic
conditional short-circuit current (Iq)	
• at 400 V according to IEC 60947-4-1 rated value	153 000 A
Installation/ mounting/ dimensions	100 00071
<u> </u>	vertical
mounting position	vertical for snapping onto 60 mm busbar systems
mounting position fastening method	for snapping onto 60 mm busbar systems
mounting position fastening method height	for snapping onto 60 mm busbar systems 260 mm
mounting position fastening method height width	for snapping onto 60 mm busbar systems 260 mm 45 mm
mounting position fastening method height width depth	for snapping onto 60 mm busbar systems 260 mm
mounting position fastening method height width depth required spacing	for snapping onto 60 mm busbar systems 260 mm 45 mm
mounting position fastening method height width depth required spacing • for grounded parts	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — backwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — upwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — backwards — upwards — downwards	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — at the side — downwards • for live parts — forwards — backwards — backwards — upwards — downwards — at the side	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — at the side — downwards • for live parts — forwards — backwards — upwards — backwards — upwards — at the side Connections/ Terminals	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 9 mm 10 mm 9 mm 9 mm 9 mm 9 mm 9 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side — downwards — torwards — backwards — backwards — backwards — upwards — at the side Connections/ Terminals type of electrical connection for main current circuit	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 9 mm 10 mm 9 mm screw-type terminals
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 9 mm 10 mm 50 mm 60 m
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded connectable conductor cross-section for main contacts finely stranded with core end processing	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 9 mm 10 mm 9 mm screw-type terminals
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — a the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded connectable conductor cross-section for main contacts finely stranded with core end processing Safety related data	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 9 mm 1 10 mm 1 10 mm 2 2x (2.5 6 mm²) 1 6 mm²
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — a the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded connectable conductor cross-section for main contacts finely stranded with core end processing Safety related data proportion of dangerous failures with high demand rate according to SN 31920	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 9 mm 1 mm 1 mm 1 mm 1 mm 2 mm 3 mm 3 mm 1 mm 3 mm 1 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded connectable conductor cross-section for main contacts finely stranded with core end processing Safety related data proportion of dangerous failures with high demand rate according to SN 31920 B10 value with high demand rate according to SN 31920	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 9 mm 1 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — a the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded connectable conductor cross-section for main contacts finely stranded with core end processing Safety related data proportion of dangerous failures with high demand rate according to SN 31920	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 9 mm 1 mm 1 mm 1 mm 1 mm 2 mm 3 mm 3 mm 1 mm 3 mm 1 mm
mounting position fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side	for snapping onto 60 mm busbar systems 260 mm 45 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 9 mm 1 mm 1 mm 1 mm 1 mm 2 mm 3 mm 3 mm 1 mm 3 mm 1 mm

Approvals Certificates

General Product Approval

For use in hazardous locations





Confirmation







Test Certificates

Marine / Shipping

Type Test Certificates/Test Report

Special Test Certificate









Marine / Shipping

200



Confirmation

other

Special Test Certificate

Railway

Environmental Confirmations

Environment

Further information

Information on the packaging

https://support.industry.siemens.com/cs/ww/en/view/109813875

Information- and Downloadcenter (Catalogs, Brochures,...)

https://www.siemens.com/ic10

Industry Mall (Online ordering system)

https://mall.industry.siemens.com/mall/en/en/Catalog/product?mlfb=3RA2120-4BD26-0AP6

Cax online generator

http://support.automation.siemens.com/WW/CAXorder/default.aspx?lang=en&mlfb=3RA2120-4BD26-0AP6

Service&Support (Manuals, Certificates, Characteristics, FAQs,...)

https://support.industry.siemens.com/cs/ww/en/ps/3RA2120-4BD26-0AP6

Image database (product images, 2D dimension drawings, 3D models, device circuit diagrams, EPLAN macros, ...)


http://www.automation.siemens.com/bilddb/cax_de.aspx?mlfb=3RA2120-4BD26-0AP6&lang=en


Characteristic: Tripping characteristics, I^2t , Let-through current


https://support.industry.siemens.com/cs/ww/en/ps/3RA2120-4BD26-0AP6/char


Further characteristics (e.g. electrical endurance, switching frequency)

http://www.automation.siemens.com/bilddb/index.aspx?view=Search&mlfb=3RA2120-4BD26-0AP6&objecttype=14&gridview=view1



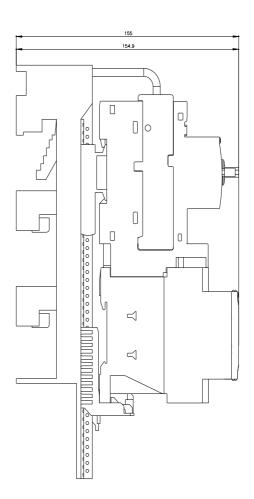



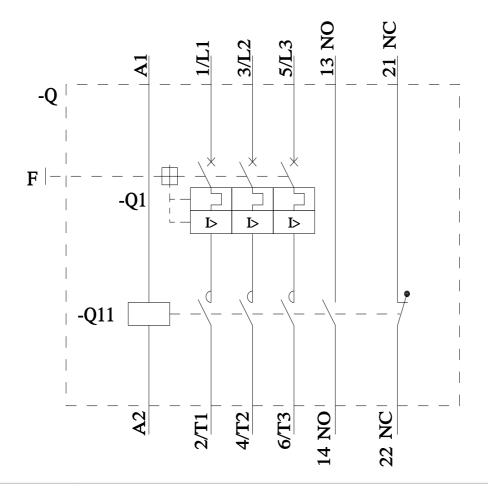

last modified: 12/15/2020 🖸

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Siemens:

3RA21204BD260AP6