SIEMENS

Data sheet


3RA2220-1BD23-0AP6



Fuseless motor starter Reversing operation 600VAC Size S0 1.4-2A 220/240VAC 50/60HZ screw connection For snapping onto 60 mm busbar systems Type of coordination 2 IQ = 150 KA Also full fills type Of coordination 1 1NO+1NC (per contactor)

product brand name	SIRIUS
product designation	non-fused motor starter 3RA2
design of the product	reversing starter
manufacturer's article number	
 of the supplied contactor 	<u>3RT2023-1AP60</u>
 of the supplied circuit-breakers 	<u>3RV2011-1BA10</u>
 of the supplied RS assembly kit 	<u>3RA2923-1DB1</u>
 of the supplied busbar adapter 	8US1251-5NT10
 of the supplied link module 	<u>3RA2921-1AA00</u>
General technical data	
size of the circuit-breaker	S00
size of load feeder	SO
product extension auxiliary switch	Yes
insulation voltage with degree of pollution 3 at AC rated value	690 V
degree of pollution	3
surge voltage resistance rated value	6 kV
shock resistance according to IEC 60068-2-27	6g / 11 ms
mechanical service life (operating cycles) of contactor typical	10 000 000
type of assignment	2
Substance Prohibitance (Date)	03/01/2017
Ambient conditions	
ambient temperature	
 during operation 	-20 +60 °C
 during storage 	-50 +80 °C
during transport	-55 +80 °C
Main circuit	
number of poles for main current circuit	3
design of the switching contact	electromechanical
adjustable current response value current of the current- dependent overload release	1.4 2 A
operating voltage	
rated value	690 V
 at AC-3 rated value maximum 	690 V
operating frequency rated value	50 60 Hz
operational current at AC-3 at 400 V rated value	1.9 A
operating power at AC-3	
 at 400 V rated value 	750 W
• at 500 V rated value	750 W
● at 690 V rated value	1 100 W
Control circuit/ Control	

control supply voltage at AC	
• at 50 Hz rated value	220 V
• at 50 Hz rated value	176 242 V
• at 60 Hz rated value	240 V
at 60 Hz rated value	192 264 V
apparent holding power of magnet coil at AC	7.2 VA
inductive power factor with the holding power of the coil	0.28
Auxiliary circuit	
number of NC contacts for auxiliary contacts	2
number of NO contacts for auxiliary contacts	2
Protective and monitoring functions	
trip class	CLASS 10
design of the overload release	thermal (bimetallic)
response value current of instantaneous short-circuit trip unit	26 A
UL/CSA ratings	
full-load current (FLA) for 3-phase AC motor	
 at 480 V rated value 	1.63 A
• at 600 V rated value	1.72 A
yielded mechanical performance [hp]	
 for single-phase AC motor 	
— at 230 V rated value	0.13 hp
• for 3-phase AC motor	
— at 460/480 V rated value	0.75 hp
— at 575/600 V rated value	1 hp
Short-circuit protection	
product function short circuit protection	Yes
design of the short-circuit trip	magnetic
conditional short-circuit current (Iq)	
 at 400 V according to IEC 60947-4-1 rated value 	153 000 A
Installation/ mounting/ dimensions	
mounting position	vertical
	Vertiedi
fastening method	for snapping onto 60 mm busbar systems 260 mm
	for snapping onto 60 mm busbar systems
fastening method height width	for snapping onto 60 mm busbar systems 260 mm
fastening method height width depth	for snapping onto 60 mm busbar systems 260 mm 90 mm
fastening method height width depth required spacing	for snapping onto 60 mm busbar systems 260 mm 90 mm
fastening method height width depth required spacing • for grounded parts	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm
fastening method height width depth required spacing	for snapping onto 60 mm busbar systems 260 mm 90 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm
fastening method height width depth required spacing • for grounded parts — forwards	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — backwards	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — upwards — upwards — upwards — upwards	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 30 mm 30 mm 30 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — downwards — downwards — downwards — downwards	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm 10 mm 10 mm 10 mm 10 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — at wards — forwards — at wards — at wards — at wards — at wards — upwards — downwards — at the side	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm 30 mm 30 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — ownwards • for live parts — forwards — backwards — upwards — at the side Connections/ Terminals	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm 10 mm 9 mm 10 mm 9 mm 10 mm 9 mm 10 mm 9 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — at wards — forwards — at wards — at wards — at wards — at wards — upwards — downwards — at the side	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm 10 mm 10 mm 10 mm 10 mm 10 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side — downwards — backwards — upwards — downwards — the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm 9 mm 10 mm 9 mm 10 mm 9 mm 10 mm 9 mm 10 mm 9 mm 10 mm 9 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side — downwards — backwards — upwards — downwards — at the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded connectable conductor cross-section for main contacts finely	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm 9 mm 10 mm 9 mm 10 mm 9 mm 10 mm 2 crew-type terminals 1 10 mm ² , 2x (2.5 6 mm ²)
fastening method height width depth required spacing • for grounded parts - forwards - backwards - upwards - at the side - downwards • for live parts - forwards - backwards - downwards • for live parts - downwards - backwards - upwards - downwards - at the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded connectable conductor cross-section for main contacts finely stranded with core end processing	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm 9 mm 10 mm 9 mm 10 mm 9 mm 10 mm 2 crew-type terminals 1 10 mm ² , 2x (2.5 6 mm ²)
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — ownwards • for live parts — forwards — backwards — upwards — downwards — at the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded connectable conductor cross-section for main contacts finely stranded with core end processing Safety related data	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm 0 mm 30 mm 10 mm 9 mm 10 mm 30 mm 10 mm ² 1 10 mm ² , 2x (2.5 6 mm ²) 1 6 mm ²
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — ownwards • for live parts — forwards — backwards — backwards — upwards — downwards — at the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded connectable conductor cross-section for main contacts finely stranded with core end processing Safety related data B10 value with high demand rate according to SN 31920 proportion of dangerous failures with high demand rate	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm 10 mm 0 mm 30 mm 30 mm 10 mm 9 mm 10 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — ownwards • for live parts — forwards — backwards — upwards — downwards — at the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded connectable conductor cross-section for main contacts finely stranded with core end processing Safety related data B10 value with high demand rate according to SN 31920 proportion of dangerous failures with high demand rate according to SN 31920	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm 10 mm 0 mm 30 mm 10 mm 9 mm 10 mm 9 mm 10 mm 10 mm 9 mm 10 mm ² , 2x (2.5 6 mm ²) 1 6 mm ²
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — ownwards • for live parts — forwards — backwards — upwards — downwards — at the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded connectable conductor cross-section for main contacts finely stranded with core end processing Safety related data B10 value with high demand rate according to SN 31920 proportion of dangerous failures with high demand rate according to SN 31920 protection class IP on the front according to IEC 60529	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm 10 mm 0 mm 30 mm 10 mm 9 mm 10 mm ² , 2x (2.5 6 mm ²) 1 6 mm ² 1 6 mm ²



For use in hazardous locations

Declaration of Conformity

other

Confirmation







UK

Confirmation

Further information

Siemens has decided to exit the Russian market (see here).

https://press.siemens.com/global/en/pressrelease/siemens-wind-down-russian-business

Siemens is working on the renewal of the current EAC certificates.

Please contact your local Siemens office on the status of validity of the EAC certification if you intend to import or offer to supply these products to an EAC relevant market (other than the sanctioned EAEU member states Russia or Belarus).

Information on the packaging

https://support.industry.siemens.com/cs/ww/en/view/109813875

Information- and Downloadcenter (Catalogs, Brochures,...)

https://www.siemens.com/ic10

Industry Mall (Online ordering system)

https://mall.industry.siemens.com/mall/en/en/Catalog/product?mlfb=3RA2220-1BD23-0AP6

Cax online generator

http://support.automation.siemens.com/WW/CAXorder/default.aspx?lang=en&mlfb=3RA2220-1BD23-0AP6

Service&Support (Manuals, Certificates, Characteristics, FAQs,...)

https://support.industry.siemens.com/cs/ww/en/ps/3RA2220-1BD23-0AP6

Image database (product images, 2D dimension drawings, 3D models, device circuit diagrams, EPLAN macros, ...)


http://www.automation.siemens.com/bilddb/cax_de.aspx?mlfb=3RA2220-1BD23-0AP6&lang=en


Characteristic: Tripping characteristics, I2t, Let-through current


https://support.industry.siemens.com/cs/ww/en/ps/3RA2220-1BD23-0AP6/char


Further characteristics (e.g. electrical endurance, switching frequency)

http://www.automation.siemens.com/bilddb/index.aspx?view=Search&mlfb=3RA2220-1BD23-0AP6&objecttype=14&gridview=view1

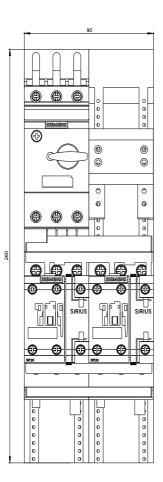

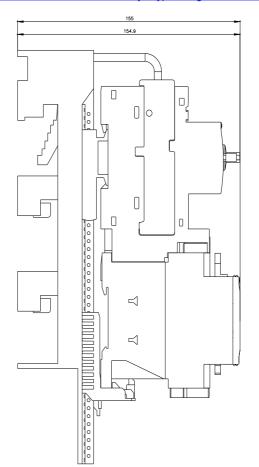

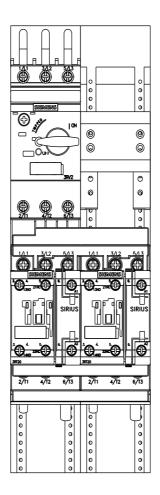

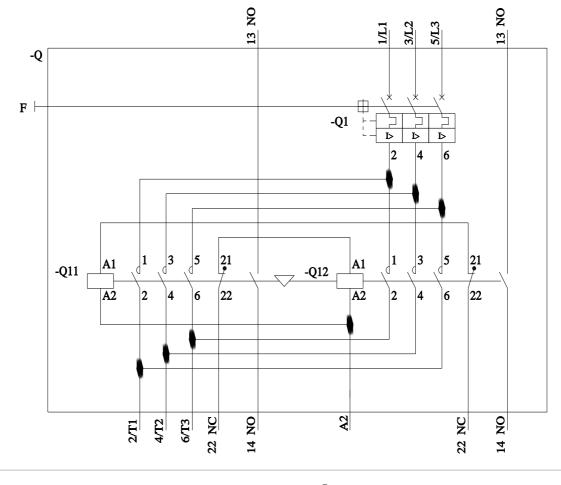

last modified:

12/15/2020 🖸

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Siemens: 3RA22201BD230AP6