

947-115
Jam Nut Mount Hermetic Bulkhead Feed-Thru
.250/.500 inch Panel
MIL-DTL-38999 Series III Type



MIL-DTL-38999 Type
Hermetic Connectors

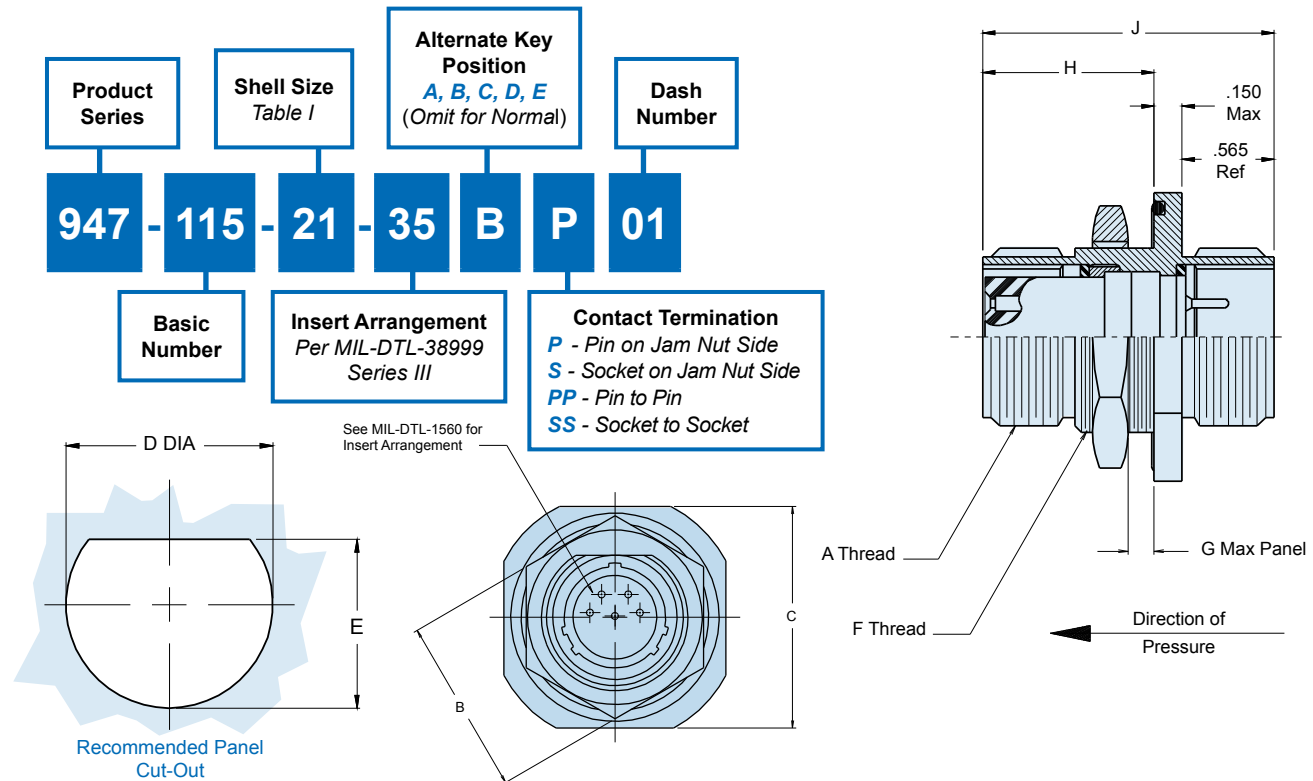


TABLE I: CONNECTOR DIMENSIONS

SHELL SIZE	A THREAD 0.1 P-0.3L- TS-2	B DIM	C DIM MAX	D DIA	E DIM	F THREAD x1-6g-0.100R
9	0.625	.875(22.2)	1.09(27.7)	.693 (17.60)	.657 (16.70)	M17
11	0.750	1.000(25.4)	1.28(32.5)	.825 (20.96)	.771 (19.59)	M20
13	0.875	1.250(31.8)	1.40(35.6)	1.010 (25.80)	.955 (24.26)	M25
15	1.000	1.375(34.9)	1.53(38.9)	1.135 (25.65)	1.085 (27.56)	M28
17	1.187	1.500(38.1)	1.66(42.2)	1.260 (28.83)	1.210 (30.73)	M32
19	1.250	1.625(41.3)	1.84(46.7)	1.385 (32.01)	1.335 (33.91)	M35
21	1.375	1.750(44.5)	1.97(50.5)	1.510 (35.18)	1.460 (37.08)	M38
23	1.500	1.875(47.6)	2.09(53.1)	1.635 (41.53)	1.585 (40.26)	M41
25	1.625	2.000(50.8)	2.21(56.1)	1.760 (44.70)	1.710 (43.43)	M44

HERMETIC LEAK RATE MOD CODES	
Designator	Required Leak Rate
-585A	1 x 10 ⁻¹⁰ cc Helium per second
-585B	1 x 10 ⁻⁹ cc Helium per second
-585C	1 x 10 ⁻⁸ cc Helium per second

TABLE III: PANEL THICKNESS

DASH NO	G MAX	H MAX	J MAX
01	.250(6.4)	1.08(27.4)	1.79(45.5)
02	.500(12.7)	1.33(33.8)	2.04(51.8)

APPLICATION NOTES

- Assembly identified with manufacturer's name and PN, space permitting.
- For pin/pin and skt/skt, symmetrical layouts only, consult factory for available insert arrangements.
- Power to a given contact on one end will result in power to contact directly opposite, regardless of identification letter.
- Hermeticity = less than 1 x 10⁻⁷ cc/sec at one atmosphere. Not for use in liquid atmosphere.
- Electrical safety limits must be established by user, peak voltage, switching surge, transient, etc. should be used to determine the safety of the application.
- Material/finish:
Shell, lock ring, jam nut—stainless steel/passivate
Contacts—copper alloy/gold plate and alloy 52/gold plate
Insulators—high-grade rigid dielectric/N.A. and full glass.
Seals—fluorosilicone/ N.A.
- Metric dimensions (mm) are indicated in parentheses.

Dimensions in Inches (millimeters) are subject to change without notice.

© 2013 Glenair, Inc.

U.S. CAGE Code 06324

Printed in U.S.A.

GLENAIR, INC. • 1211 AIR WAY • GLENDALE, CA 91201-2497 • 818-247-6000 • FAX 818-500-9912
www.glenair.com B-79 E-Mail: sales@glenair.com

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Glenair:

[947-115-17-35P02](#) [947-115-23-35AS02](#) [947-115-23-35S02](#) [947-115-15-35BS01](#) [947-115-11-02S01](#) [947-115-11-35S01](#) [947-115-11-35S02](#) [947-115-11-98S02](#) [947-115-19-32S02](#) [947-115-15-35S01](#) [947-115-21-39P01](#) [947-115-17-35S01](#) [947-115-11-02S02](#) [947-115-11-98P02](#) [947-115-13-35S01](#) [947-115-13-35S02](#) [947-115-15-35AS01](#) [947-115-15-35AS02](#) [947-115-15-35PP02](#) [947-115-15-35S02](#) [947-115-17-26AS01](#) [947-115-17-26S01](#) [947-115-17-35AS02](#) [947-115-17-35P01](#) [947-115-17-35PP02](#) [947-115-17-35S02](#) [947-115-17-6BS01](#) [947-115-17-6S01](#) [947-115-17-99S01](#) [947-115-19-32AS01](#) [947-115-19-32BS01](#) [947-115-19-35AS01](#) [947-115-19-35S01](#) [947-115-21-29S01](#) [947-115-21-39S01](#) [947-115-21-41S01](#) [947-115-23-55S02](#) [947-115-25-35SS02](#) [947-282Z125-35PN](#) [947-282Z125-35SN](#) [947-282ZW15-35PN](#) [947-282ZW25-35PN](#)