EA2/EB2 Series



Overview

The KEMET EA2/EB2 miniature signal relays offer a compact case size in a flat package. Minimal board space is consumed with either a through-hole or surface mount configuration. These relays are recognized by UL and CSA, while also being compliant with Part 68 of the FCC's 1,500 V surge capacity.

Applications

- · Electronic switching systems
- PBX
- · Terminal equipment
- · Telephone systems

Benefits

- Low power consumption (< 200 mW)
- · Compact and lightweight
- · Low magnetic interference
- Breakdown voltage: 1,000 VAC (1,500 VAC surge), FCC Part 68 compliant
- · Tube or embossed tape and reel packaging
- UL recognized (E73266) and CSA certified (LR46266)
- · Surface mount and through-hole options






Part Number System


EB2-	3	S	NU	-L
Series	Coil Voltage	Latch Type	Lead Type	Packaging
EA2- = Through-hole mount EB2- = Surface mount	3 = 3 VDC 4.5 = 4.5 VDC 5 = 5 VDC 12 = 12 VDC 24 = 24 VDC	Blank = Non-latch type S = Single coil latch type T = Double coil latch type	NU = Standard NJ = Trimmed	Blank = Tube -L = Embossed tape on reel



Dimensions – Millimeters


EA2 Series

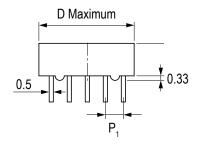


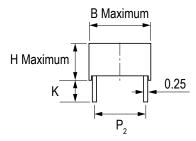


General tolerance: ±0.2

EB2 Series

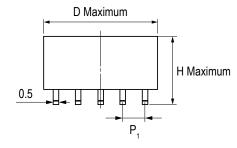



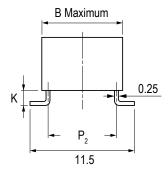



Series	D	Н	В	P ₁	P ₂	K
EA2 (NU)	14.2	5.4	9.2	2.54	7.62	3.5
EA2 (NJ)	14.2	6.3	9.2	2.54	7.62	2.8
EB2	14.3	7.5	9.3	2.54	7.62	1.35




Pin Configurations

Bottom view

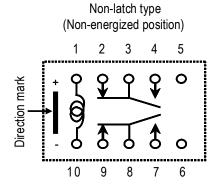

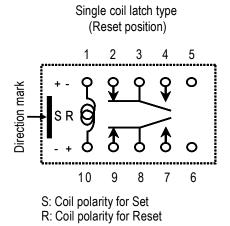

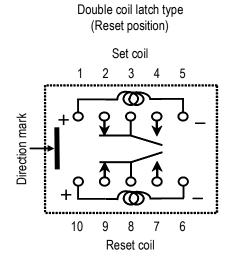

Safety Standards and Ratings

Certification Body	Mark	Specification	File Number	Rating
UL	<i>FL</i>	UL Recognized (UL508) ¹	E73266	30 VDC, 1 A (resistive)
CSA	(P	CSA Certified (CSA 22.2 #14)	LR46266	110 VDC, 0.3 A (resistive) 125 VAC, 0.5 A (resistive)

¹ Spacing: UL114, UL478

Environmental Compliance

All KEMET relays are RoHS Compliant.



RoHS Compliant



Table 1 – Ratings & Part Number Reference


Part Number	Nominal Coil Voltage (VDC)	Lead Type	Packaging
EA2-3(1)NU	3	Radial	Tube
EA2-4.5(1)NU	4.5	Radial	Tube
EA2-5(1)NU	5	Radial	Tube
EA2-12(1)NU	12	Radial	Tube
EA2-24(1)NU	24	Radial	Tube
EA2-3(1)NJ	3	Trimmed Radial	Tube
EA2-4.5(1)NJ	4.5	Trimmed Radial	Tube
EA2-5(1)NJ	5	Trimmed Radial	Tube
EA2-12(1)NJ	12	Trimmed Radial	Tube
EA2-24(1)NJ	24	Trimmed Radial	Tube
EB2-3(1)NU	3	Surface Mount	Tube
EB2-4.5(1)NU	4.5	Surface Mount	Tube
EB2-5(1)NU	5	Surface Mount	Tube
EB2-12(1)NU	12	Surface Mount	Tube
EB2-24(1)NU	24	Surface Mount	Tube
EB2-3(1)NU-L	3	Surface Mount	Tape on Reel
EB2-4.5(1)NU-L	4.5	Surface Mount	Tape on Reel
EB2-5(1)NU-L	5	Surface Mount	Tape on Reel
EB2-12(1)NU-L	12	Surface Mount	Tape on Reel
EB2-24(1)NU-L	24	Surface Mount	Tape on Reel

⁽¹⁾ To complete KEMET part number, leave blank for Non-latch, insert S for Single coil, or T for Double coil. Designates latch type.




Land Pattern – Millimeters

EA2 (bottom view)

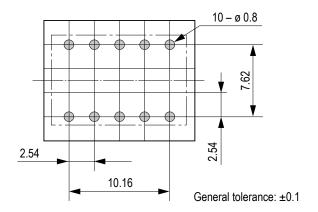

EB2 (bottom view)

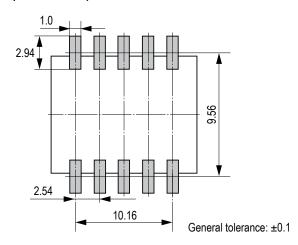

Soldering Process

EA2 – Through-hole Mounting

Automatic Soldering

Preheating: 110-120°C / 110 seconds (maximum)

Solder temperature: 260°C maximum Solder time: 5 seconds maximum


Note: KEMET recommends cooling down a printed circuit board to less than 110°C within 40 seconds after soldering.

Manual Soldering

Solder temperature: 350°C maximum Solder time: 3 seconds maximum

EB2 – Surface Mounting

IRS Method

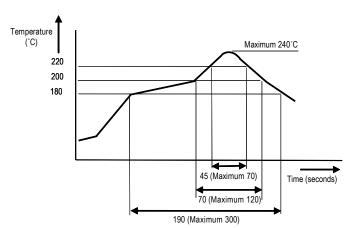

Note:

Temperature profile shows printed circuit board surface temperature on the relay terminal portion.

Please consult KEMET if you wish to use a temperature profile other than above.



Contact Specifications

Item		EA2/EB2		
Contact Form		2 Form C		
Contact Material		Silver alloy with gold alloy overlay		
	Maximum Switching Power	30 W, 62.5 VA		
Contact Ratings	Maximum Switching Voltage	220 VDC, 250 VAC		
Contact Ratings	Maximum Switching Current	1 A		
	Maximum Carrying Current	2 A		
Minimum Contact Ratings		10 mVDC, 10 μA ⁻¹		
Initial Contact Resistance		75 mΩ maximum (initial)		
Operating Time (excluding bounce)		Approximately 2 milliseconds		
Release Time (excluding bounce)		Approximately 1 millisecond		
Insulation Resistance		1,000 MΩ @ 500 VDC		
	Between Open Contacts	1,000 VAC (for one minute), 1,500 V surge (10 x 160 µs) ²		
Withstand Voltage	Between Adjacent Contacts	1,000 VAC (for one minute), 1,500 V surge (10 x 160 μs) ²		
	Between Coil and Contacts	1,000 VAC (for one minute), 1,500 V surge (10 x 160 µs) ²		
Shock Resistance		735 m/s ² (75 G) – misoperation 980 m/s ² (100 G) – destructive failure		
Vibration Resistance		10 to 55 Hz, double amplitude 3 mm (20 G) – misoperation 10 to 55 Hz, double amplitude 5 mm (30 G) – destructive failure		
Ambient Temperature		-40 to +85°C		
Coil Temperature Rise		18°C at nominal coil voltage (140 mW)		
Running Specifications	Non-load	1 x 10 ⁸ operations (Non-latch type) ^{'3} 1 x 10 ⁷ operations (Latch type)		
	Load	50 VDC 0.1 A (resistive), 1 x 10 ⁶ operations @ 85°C, 5 Hz 10 VDC 10 mA (resistive), 1 x 10 ⁶ operations @ 85°C, 2 Hz		
Weight		Approximately 1.5 g		

This value is a reference value in the resistance load. Minimum capacity changes depending on the switching frequency, environment temperature, and load. Rise time: $10 \mu s$; decay time to half crest: $160 \mu s$. This shows the number of operations with fatal defects. Stable characteristics are maintained for 1×10^7 operations.

Coil Specifications

Non-latch Type (@ 20°C)					
Nominal Coil Voltage (VDC)	Coil Resistance (Ω) ±10%	Operating Voltage ¹ (VDC)	Release Voltage ¹ (VDC)	Nominal Operating Power (mW)	
3	64.3	2.25	0.3	140	
4.5	145	3.38	0.45	140	
5	178	3.75	0.5	140	
12	1028	9.0	1.2	140	
24	2880	18.0	2.4	200	

¹ Test by pulse voltage.



Coil Specifications cont'd

Single Coil Latch Type (@ 20°C) ²					
Nominal Coil Voltage (VDC)	Coil Resistance (Ω) ±10%	Set Voltage ¹ (VDC)	Reset Voltage ¹ (VDC)	Nominal Operating Power (mW)	
3	90	2.25	2.25	100	
4.5	202.5	3.38	3.38	100	
5	250	3.75	3.75	100	
12	1440	9.0	9.0	100	
24	3840	18.0	18.0	150	

¹ Test by pulse voltage.

² Latch type relays should be initialized to a known position before using. Only the specified polarity should be used to energize the coil.

Double Coil Latch Type (@ 20°C) ^{2,3}						
Nominal Coil Voltage (VDC)		sistance £10%	Set Voltage ⁴ (VDC)	Release Voltage ⁴ (VDC)	Nominal Operating Power (mW)	
3	S	64.3	2.25	-	140	
S	R	64.3	-	2.25	140	
4.5	S	145	3.38	-	140	
4.5	R	145	_	3.38	140	
5	S	178	3.75	-	140	
o l	R	178	-	3.75		
12	S	1028	9.0	-	140	
12	R	1028	-	9.0	140	
24	S	2880	18.0	-	200	
	R	2880	_	18.0	200	

² Latch type relays should be initialized to a known position before using. Only the specified polarity should be used to energize the coil.

³ Can not be driven by reverse polarity for reverse operation.


⁴ S = Set coil [pin #1 (+), pin #5 (-)], R = Reset coil [pin #10 (+), pin #6 (-)].



Recommended Relay Drive Conditions

Coil Type	Rating	Ambient Temperature
Non-latch	Voltage: ≤ ±5% of nominal voltage	
Single Coil Double Coil	Square pulse (rise and fall time is rapid) Pulse height: ≤ ±5% of nominal voltage Pulse Width: > 10 ms	-40 to +85°C

Marking

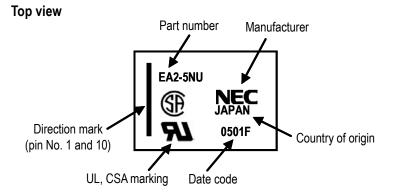





Performance Data

Coil Temperature Rise


Temperature is measured by coil resistance

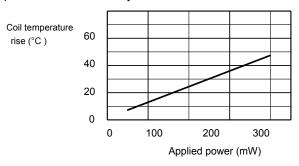

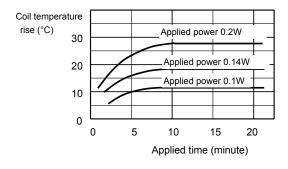


Switching Capacity

Maximum Values

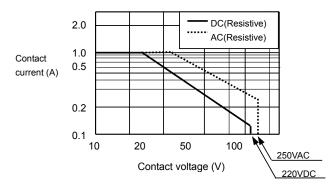


Maximum Coil Voltage


Maximum value of permissible alteration

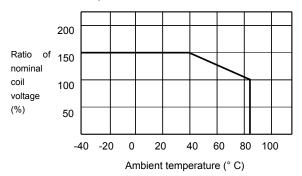

Applied Voltage vs. Timing

(Sample: EA2-5NU)

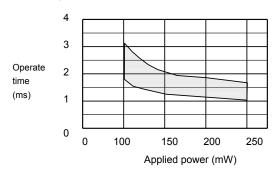

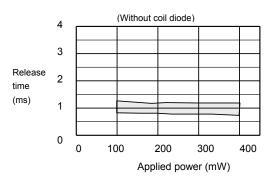




Performance Data cont'd


Operate and Release Voltage vs. Ambient Temperature

This shows a typical change of operate (release) voltage. The value of must operate is estimated, so coil voltage must be applied higher than this value for safe operation. For hot start operation, please inquire with KEMET.

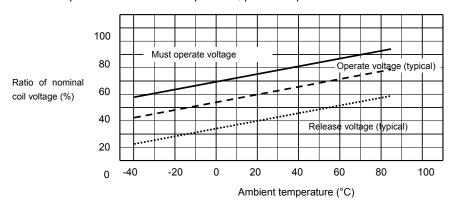


Running Test (Non-load)

(Load: none; Drive: 5 VDC, 50 Hz, 50% duty; Ambient Temperature: room temperature; Sample: EA2-5NU, 20 pieces)

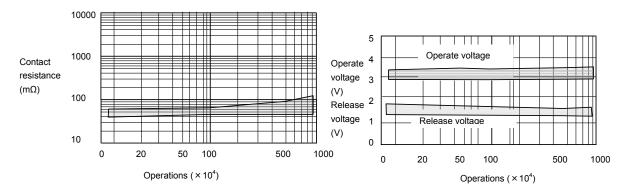

Running Test (Load)

(Load: 50 VDC, 0.1 A resistive; Drive: 5 VDC, 5 Hz, 50% duty; Ambient Temperature: 85°C; Sample: EA2-5NU, 10 pieces)

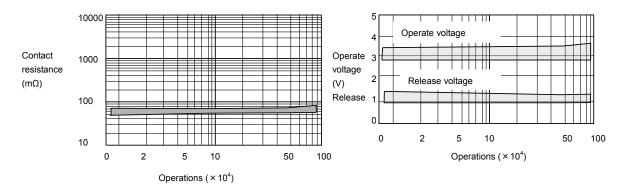




Performance Data cont'd


Breakdown Voltage

(Sample: EA2-5NU, 10 pieces)

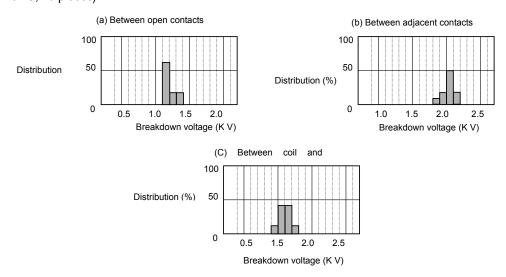


Alteration of Voltage in Dense Mounting

(magnetic interference)

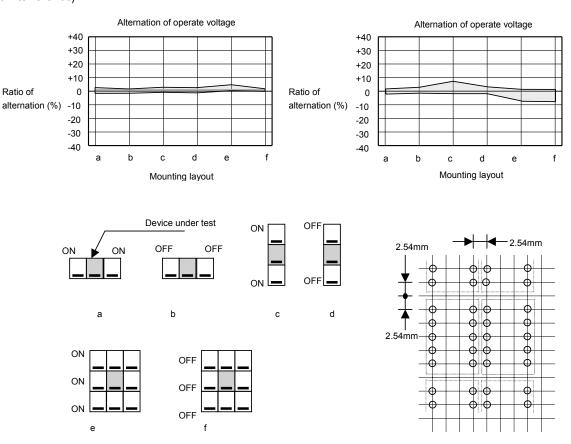





Tube Packing – Millimeters

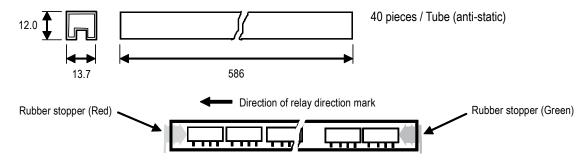


Tape & Reel Packaging Information (EB2 only) - Millimeters

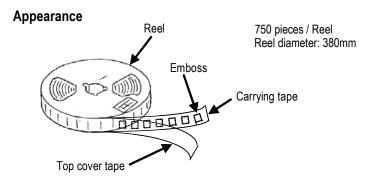

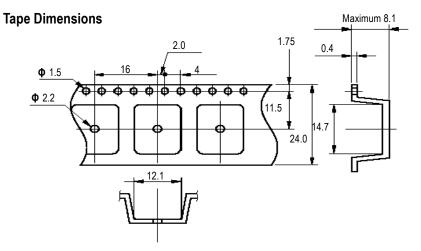

Relay Direction Mark and Tape Carrying Direction

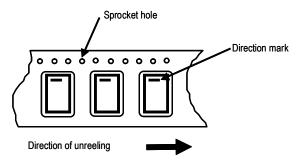




Notes on Using Relays

1. Contact Load

Make sure that the contact load is within the specified range; otherwise, the lifetime of the contacts will be shortened considerably. Note that the running performance shown is an example, and that it varies depending on parameters such as the type of load, switching frequency, driver circuit, and ambient temperature under the actual operating conditions.

2. Driving Relays

- If the internal connection diagram of a relay shows + and symbols on the coil, apply the rated voltage to the relay in the specified direction. If a rippled DC current source is used, abnormalities such as heat at the coil may occur.
- The maximum voltage that can be applied to the coil of the relay varies depending on the ambient temperature. Generally, the
 higher the voltage applied to the coil, the shorter the operating time. Note, however, that high voltage also increases the bounce
 of the contacts and the contact opening and closing frequency, which may shorten the lifetime of the contacts.
- For consistent operation, the driving voltage should have rise and fall times of less than 1 ms.



- For a latching relay, apply a voltage to the coil according to the polarity specified in the internal connection diagram of the relay.
- If a current is applied to the coil over a long period of time, the coil temperature rises, promoting generation of organic gas inside the relay, which may result in faulty contacts. In this case, use of a latching relay is recommended.
- The operating time and release time indicate the time required for each contact to close after the voltage has been applied to or removed from the coil. However, because the relay has a mechanical structure, a bounce state exists at the end of the operating and release times. Furthermore, because additional time is required until the contact stabilizes after being in a high-resistance state, care must be taken when using the relay at high speeds.


3. Operating Environment

- Make sure that the relay mounted in the application set is used within the specified temperature range. Use of a relay at a
 temperature outside this range may adversely affect insulation or contact performance.
- If the relay is used for a long period of time in highly humid (RH 85% or higher) environment, moisture may be absorbed into the
 relay. This moisture may react with the NOx and SOx generated by glow discharges that occur when the contacts are opened or
 closed, producing nitric or sulfuric acid. If this happens, the acid produced may corrode the metallic parts of the relay, causing
 operational malfunction.
- If any material containing silicon (silicon rubber, silicon oil, and silicon based coating material) is used in the neighborhood of
 relay, there is some possibility that these materials will emit silicon gas that will penetrate the relay. In this case, the switching
 contact may generate silicon compounds on the surface of contacts. This silicon compound may result in contact failure. Avoid
 use of relay in such an environment.



Notes on Using Relays cont'd

• Because the operating temperature range varies depending on the humidity, use the relay in the temperature range illustrated in the figure below. Prevent the relay from being frozen and avoid the generation of condensation.

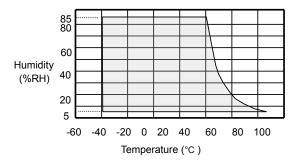

- The relay maintains constant sealability under normal atmospheric pressure (810 to 1,200 hpa). Its sealability may be degraded or the relay may be deformed and malfunction if it is used under barometric conditions exceeding the specified range.
- The same applies when the relay is stored or transported. Keep the upper-limit value of the temperature to which the relay is exposed after it is removed from the carton box to within 50°C.
- Permanent magnets are used in polarized relays. For this reason, when magnets, transformers, or speakers are located nearby the relay characteristics may change and faulty operations may result.
- If excessive vibration or shock is applied to the relay, it may malfunction and the contacts remain closed. Vibration or shock
 applied to the relay during operation may cause considerable damage to or wearing of the contacts. Note that operation of a
 snap switch mounted close to the relay or shock due to the operation of magnetic solenoid may also cause malfunctioning.

4. Mounting

- When mounting a relay onto a PC board using an automatic chip mounter, if excessive force is applied to the cover of the relay when the relay is chucked or inserted, the cover may be damaged or the characteristics of the relay degraded. Keep the force applied to the relay to within 1 kg.
- Avoid bending the pins to temporarily secure the relay to the PC board. Bending the pins may degrade sealability or adversely
 affect the internal mechanism.
- Ventilation immediately after soldering is recommended. Avoid immersing the relay in cleaning solvent immediately after soldering due to the danger of thermal shock being applied to the relay.
- Use an alcohol-based or water-based cleaning solvent. Never use thinner and benzene because they may damage the relay housing.
- Do not use ultrasonic cleaning because the vibration energy generated by the ultrasonic waves may cause the contacts to remain closed.

5. Handling and Storage

- Relays are packaged in magazine cases for shipment. If a space is created in the case after some relays have been removed, be sure to insert a stopper to secure the remaining relays in the case. If relays are not well secured, vibration during transportation may cause malfunctioning of the contacts.
- Exercise care in handling the relay so as to avoid dropping it or allowing it to fall. Do not use a relay that has been dropped. If a relay drops from a workbench to the floor, a shock of 9,800 m/s² (1,000 G) or more is applied to the relay, possibly damaging its functions. Even if a light shock has been applied to the relay, thoroughly evaluate its operation before using it.



Notes on Using Relays cont'd

- Latching relays are factory-set to reset state for shipment. A latching relay may be set, however, by vibration or shock applied while being transported. Be sure to forcibly reset the relay before using it in the application set. Also note that the relay may be set by unexpected vibration or shock when it is used in a portable set.
- The sealability of a surface mount (SMT) relay may be lost if the relay absorbs and is then heated during soldering. When storing relays, therefore, observe the following points:
 - 1. For standard packing, please use relays within 12 months after delivery (storage conditions: 30°C / 60% RH). If the relays have moisture absorption, dehumidify as follows:
 - Tape Packaging: 50 ±5°C, 200-300 hours.
 - Simple Relay: 85 ±5°C, 48 hours.
 - 2. For MBB packing, please use relays within 2 years after delivery (storage conditions: 30°C / 60% RH). After opening MBB packing, please use within 3 months (storage conditions: 30°C / 60% RH).



KEMET Corporation World Headquarters

2835 KEMET Way Simpsonville, SC 29681

Mailing Address: P.O. Box 5928 Greenville, SC 29606

www.kemet.com Tel: 864-963-6300 Fax: 864-963-6521

Corporate Offices

Fort Lauderdale, FL Tel: 954-766-2800

North America

Southeast

Lake Mary, FL Tel: 407-855-8886

Northeast

Wilmington, MA Tel: 978-658-1663

Central

Novi, MI

Tel: 248-994-1030

West

Milpitas, CA Tel: 408-433-9950

Mexico

Guadalajara, Jalisco Tel: 52-33-3123-2141

Europe

Southern Europe

Paris, France Tel: 33-1-4646-1006

Sasso Marconi, Italy Tel: 39-051-939111

Central Europe

Landsberg, Germany Tel: 49-8191-3350800

Kamen, Germany Tel: 49-2307-438110

Northern Europe

Bishop's Stortford, United Kingdom Tel: 44-1279-460122

Espoo, Finland

Tel: 358-9-5406-5000

Asia

Northeast Asia

Hong Kong

Tel: 852-2305-1168

Shenzhen, China Tel: 86-755-2518-1306

Beijing, China

Tel: 86-10-5829-1711

Shanghai, China Tel: 86-21-6447-0707

Taipei, Taiwan Tel: 886-2-27528585

Southeast Asia

Singapore

Tel: 65-6586-1900

Penang, Malaysia Tel: 60-4-6430200

Bangalore, India Tel: 91-806-53-76817

Note: KEMET reserves the right to modify minor details of internal and external construction at any time in the interest of product improvement. KEMET does not assume any responsibility for infringement that might result from the use of KEMET Capacitors in potential circuit designs. KEMET is a registered trademark of KEMET Electronics Corporation.



Disclaimer

This product has been made available through a Private Label Agreement and a Development and Cross-Licensing Agreement between KEMET and NEC TOKIN to expand market and product offerings for both companies and their respective customers. For more information, please visit http://www.kemet.com/nectokin.

All product specifications, statements, information and data (collectively, the "Information") in this datasheet are subject to change. The customer is responsible for checking and verifying the extent to which the Information contained in this publication is applicable to an order at the time the order is placed.

All Information given herein is believed to be accurate and reliable, but it is presented without guarantee, warranty, or responsibility of any kind, expressed or implied.

Statements of suitability for certain applications are based on KEMET Electronics Corporation's ("KEMET") knowledge of typical operating conditions for such applications, but are not intended to constitute – and KEMET specifically disclaims – any warranty concerning suitability for a specific customer application or use. The Information is intended for use only by customers who have the requisite experience and capability to determine the correct products for their application. Any technical advice inferred from this Information or otherwise provided by KEMET with reference to the use of KEMET's products is given gratis, and KEMET assumes no obligation or liability for the advice given or results obtained.

Although KEMET designs and manufactures its products to the most stringent quality and safety standards, given the current state of the art, isolated component failures may still occur. Accordingly, customer applications which require a high degree of reliability or safety should employ suitable designs or other safeguards (such as installation of protective circuitry or redundancies) in order to ensure that the failure of an electrical component does not result in a risk of personal injury or property damage.

Although all product—related warnings, cautions and notes must be observed, the customer should not assume that all safety measures are indicted or that other measures may not be required.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

KEMET:

<u>EA2-4.5TNJ EA2-3TNJ EA2-12NJ EA2-12SNJ EA2-3NJ EA2-24TNJ EA2-12TNJ EA2-24NJ EA2-5TNJ EA2-5TNJ EA2-5TNJ EA2-5SNJ EA2-5SNJ</u>