


## **RoHS Compliant**

## M.2 2242 Flash Drive

SH250-M242 BiCS5 Product Specifications

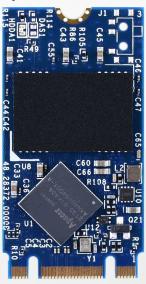

February 2, 2023 Version 1.0



**Apacer Technology Inc.** 

1F, No.32, Zhongcheng Rd., Tucheng Dist., New Taipei City, Taiwan, R.O.C Tel: +886-2-2267-8000 Fax: +886-2-2267-2261 www.apacer.com

## **Specifications Overview:**

#### Compliance with SATA Revision 3.2

- SATA 6 Gb/s interface
- ATA-8 command set
- Backward compatible with SATA 1.5/3 Gb/s

#### Capacity

- 40, 80, 160, 320 GB

#### Performance<sup>1</sup>

Burst read/write: 600 MB/sec

Sequential read: Up to 550 MB/sec

- Sequential write: Up to 485 MB/sec

- Random read (4K): Up to 55,000 IOPS

Random write (4K): Up to 63,000 IOPS

#### • Flash Management

- Low-Density Parity-Check (LDPC) Code
- Global Wear Leveling
- Flash bad-block management
- Flash Translation Layer: Page Mapping
- S.M.A.R.T.
- DataDefender™
- Device Sleep
- ATA Secure Erase
- TRIM
- SAMRT Read Refresh™
- SLC-liteX (P/E cycle: 100K)

#### NAND Flash Type: 3D TLC (BiCS5)

• MTBF: >3,000,000 hours

#### • Endurance (in drive writes per day: DWPD)

- 40 GB: 49.54 DWPD

- 80 GB: 49.95 DWPD

160 GB: 47.91 DWPD

- 320 GB: 42.35 DWPD

#### Note:

 Varies from capacities. The values for performances and power consumptions presented are typical and may vary depending on flash configurations or platform settings. The term idle refers to the standby state of the device.

#### Temperature Range

Operating:

Standard: 0°C to 70°C Wide: -40°C to 85°C

Storage: -55°C to 100°C

#### Supply Voltage

- 3.3 V ± 5%

#### Power Consumption<sup>1</sup>

Active mode (Max.): 410 mA

- Idle mode: 60 mA

#### SATA Power Management Modes

#### Connector Type

- 75-pin SATA-based M.2 module pinout

#### Form Factor

Double-sided: M.2 2280-D5-B-M

 Dimensions: 42.00 x 22.00 x 3.88(max.), unit: mm

Net weight: 3.86g ± 5%

#### Security

- AES 256-bit hardware encryption

#### Reliability

- Thermal Sensor
- End-to-End Data Protection

#### RoHS Compliant

## **Table of Contents**

1. General Description	4
2. Functional Block	4
3. Pin Assignments	5
4. Product Specifications	
4.1 Capacity	
4.2 Performance	
4.3 Environmental Specifications	
4.4 Mean Time Between Failures (MTBF)	
4.5 Certification and Compliance	
4.6 Endurance	
4.7 LED Indicator Behavior	10
5. Flash Management	11
5.1 Error Correction/Detection	
5.2 Bad Block Management	11
5.3 Global Wear Leveling	11
5.4 DataDefender™	11
5.5 ATA Secure Erase	11
5.6 Flash Translation Layer – Page Mapping	12
5.7 TRIM	12
5.8 Device Sleep (DevSleep or DEVSLP) Mode	12
5.9 SATA Power Management	13
5.10 SLC-liteX	13
5.11 SMART Read Refresh™	13
6. Security and Reliability Features	14
6.1 Advanced Encryption Standard	14
6.2 Thermal Sensor	14
6.3 End-to-End Data Protection	14
7. Software Interface	15
7.1 Command Set	15
7.2 S.M.A.R.T.	16
9 Electrical Creations	47

# Apacer

8.1 Operating Voltage	17
8.2 Power Consumption	
9. Mechanical Specifications	18
10. Product Ordering Information	19
10.1 Product Code Designations	
10.2 Valid Combinations	

## 1. General Description

Apacer's SH250-M242, utilizing 3D NAND for higher capacity up to 320GB and providing more power efficiency than 2D NAND, is the next generation Solid State Drive (SSD) with compact and high-speed storage and great performance. Designed in SATA 6 Gb/s interface, SH250-M242 provides full compliance with the latest SATA Revision 3.2 interface specifications and delivers exceptional read/write speed, making it the leading add-in storage solution for future host computing systems.

SH250-M242 is built with a powerful SATA controller that supports on-the-module ECC as well as efficient wear leveling scheme and implemented with LDPC (Low Density Parity Check) ECC engine to extend SSD endurance and increase data reliability. With Apacer's SLC-liteX technology, SH250-M242 performs with higher number of P/E cycles up to 100,000 times. Furthermore, SH250-M242 is equipped with a built-in thermal sensor to monitor the temperature of the SSD via S.M.A.R.T commands to prevent overheating. Operating under 6 Gb/s interface, SH250-M242 is provided with Apacer latest S.M.A.R.T. that is primarily oriented for the latest SATA interface SSD, for drive lifetime monitoring and analysis. For highly-intensive applications, End-to-End Data Protection ensures that data integrity can be assured at multiple points in the path to enable reliable delivery of data transfers.

Security-wise, Advanced Encryption Standard (AES) ensures data security and provides users with peace of mind knowing their data is safeguarded at all times. SH250-M242 also adopts the latest page mapping file translation layer and comes with various implementations including power saving modes, wear leveling, flash block management, S.M.A.R.T., TRIM, DataDefender™ and SMART Read Refresh™.

With exceptional performance, trustable reliability and enhanced data protection, SH250-M242 is definitely the ideal storage or cache solution for a variety of applications ranging from industrial, imaging, computing to enterprise markets.

## 2. Functional Block

Apacer SH250-M242 includes a single-chip controller and flash media. The controller integrates the flash management unit to support multi-channel, multi-bank flash arrays. Figure 2-1 shows the functional block diagram.

Note: The actual number of NAND flash used on Apacer SH250-M242 varies from capacities. The illustration is for reference only.


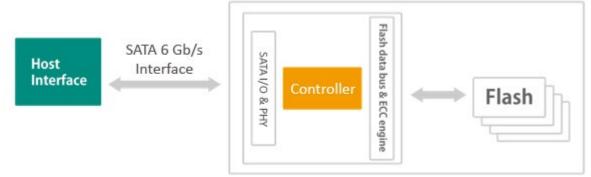


Figure 2-1 Functional Block Diagram

## 3. Pin Assignments

This connector does not support hot plug capability. There are a total of 75 pins. 12 pin locations are used for mechanical key locations; this allows such a module to plug into both Key B and Key M connectors.

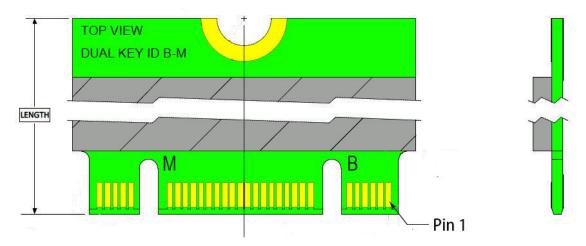

**Figure 3-1 SATA Connectors** 

**Table 3-1 Pin Assignments** 

Pin No.	Туре	Description
1	CONFIG_3	Ground (according to M.2 configurations for SSD-SATA definition)
2	3.3V	Supply Pin, 3.3V
3	GND	Ground
4	3.3V	Supply pin, 3.3V
5	No connect	No connect
6	Not available	No connect
7	Not available	No connect
8	Not available	Reserved for Apacer use only <sup>1</sup>
9	No connect	No connect
10	DAS/DSS	Device Activity Signal/Disable Staggered Spin-up
11	No connect	No connect
12	(removed for key)	Mechanical notch B
13	(removed for key)	Mechanical notch B
14	(removed for key)	Mechanical notch B
15	(removed for key)	Mechanical notch B
16	(removed for key)	Mechanical notch B
17	(removed for key)	Mechanical notch B
18	(removed for key)	Mechanical notch B
19	(removed for key)	Mechanical notch B
20	Not available	No connect

**Table 3-1 Pin Assignments** 

21         CONFIG_0         Ground (according to M.2 configurations for SSD-SATA definition)           22         Not available         No connect           24         Not available         No connect           25         Not available         No connect           26         Not available         No connect           27         GND         Ground           28         Not available         No connect           29         PERn1         No connect           30         Not available         No connect           31         PERp1         No connect           32         Not available         No connect           33         GND         Ground           34         Not available         No connect           35         PETn1         No connect           36         Not available         No connect           37         PETp1         No connect           38         DEVSLP         Device Sleep, input. If driven high the host is informing the SSD to enter a low power state           40         Not available         No connect           41         SATA-Rx+         Host receiver differential signal pair           42         Not available         No connect <th>Pin No.</th> <th>Туре</th> <th>Description</th>	Pin No.	Туре	Description	
22         Not available         No connect           23         Not available         No connect           24         Not available         No connect           25         Not available         No connect           26         Not available         No connect           27         GND         Ground           28         Not available         No connect           29         PERn1         No connect           30         Not available         No connect           31         PERp1         No connect           32         Not available         No connect           33         GND         Ground           34         Not available         No connect           35         PETn1         No connect           36         Not available         No connect           37         PETp1         No connect           38         DEVSLP         Device Sleep, input. If driven high the host is informing the SSD to enter a low power state           40         Not available         No connect           41         SATA-Rx+         Host receiver differential signal pair           42         Not available         No connect           43         SATA-			-	
23         Not available         No connect           24         Not available         No connect           25         Not available         No connect           26         Not available         No connect           27         GND         Ground           28         Not available         No connect           29         PERn1         No connect           30         Not available         No connect           31         PERp1         No connect           32         Not available         No connect           33         GND         Ground           34         Not available         No connect           35         PETn1         No connect           36         Not available         No connect           37         PETp1         No connect           38         DEVSLP         Device Sleep, input. If driven high the host is informing the SSD to enter a low power state           40         Not available         No connect           41         SATA-Rx+         Host receiver differential signal pair           42         Not available         No connect           43         SATA-Rx-         Host receiver differential signal pair           44		_		
24         Not available         No connect           25         Not available         No connect           26         Not available         No connect           27         GND         Ground           28         Not available         No connect           29         PERn1         No connect           30         Not available         No connect           31         PERp1         No connect           32         Not available         No connect           33         GND         Ground           34         Not available         No connect           35         PETn1         No connect           36         Not available         No connect           37         PETp1         No connect           38         DEVSLP         Device Sleep, input. If driven high the host is informing the SSD to enter a low power state           39         GND         Ground           40         Not available         No connect           41         SATA-Rx+         Host receiver differential signal pair           42         Not available         No connect           43         SATA-Rx-         Host receiver differential signal pair           44				
25         Not available         No connect           26         Not available         No connect           27         GND         Ground           28         Not available         No connect           29         PERn1         No connect           30         Not available         No connect           31         PERp1         No connect           32         Not available         No connect           33         GND         Ground           34         Not available         No connect           35         PETn1         No connect           36         Not available         No connect           37         PETp1         No connect           38         DEVSLP         Device Sleep, Input. If driven high the host is informing the SSD to enter a low power state           39         GND         Ground           40         Not available         No connect           41         SATA-Rx+         Host receiver differential signal pair           42         Not available         No connect           43         SATA-Rx-         Host receiver differential signal pair           44         Not available         No connect           45	_			
26         Not available         No connect           27         GND         Ground           28         Not available         No connect           29         PERn1         No connect           30         Not available         No connect           31         PERp1         No connect           32         Not available         No connect           33         GND         Ground           34         Not available         No connect           35         PETn1         No connect           36         Not available         No connect           37         PETp1         No connect           38         DEVSLP         Device Sleep, input. If driven high the host is informing the SSD to enter a low power state           39         GND         Ground           40         Not available         No connect           41         SATA-Rx+         Host receiver differential signal pair           42         Not available         No connect           43         SATA-Rx-         Host receiver differential signal pair           44         Not available         No connect           45         GND         Ground           46         Not availa				
27         GND         Ground           28         Not available         No connect           29         PERN1         No connect           30         Not available         No connect           31         PERp1         No connect           32         Not available         No connect           33         GND         Ground           34         Not available         No connect           35         PETn1         No connect           36         Not available         No connect           37         PETp1         No connect           38         DEVSLP         Device Sleep, input. If driven high the host is informing the SSD to enter a low power state           39         GND         Ground           40         Not available         No connect           41         SATA-Rx+         Host receiver differential signal pair           42         Not available         No connect           43         SATA-Rx-         Host receiver differential signal pair           44         Not available         No connect           45         GND         Ground           46         Not available         No connect           47         SATA-Tx- </td <td>_</td> <td></td> <td></td>	_			
28         Not available         No connect           29         PERn1         No connect           30         Not available         No connect           31         PERp1         No connect           32         Not available         No connect           33         GND         Ground           34         Not available         No connect           35         PETn1         No connect           36         Not available         No connect           37         PETp1         No connect           38         DEVSLP         Device Sleep, input. If driven high the host is informing the SSD to enter a low power state           39         GND         Ground           40         Not available         No connect           41         SATA-Rx+         Host receiver differential signal pair           42         Not available         No connect           43         SATA-Rx-         Host receiver differential signal pair           44         Not available         No connect           45         GND         Ground           46         Not available         No connect           47         SATA-Tx-         Host transmitter differential pair           <				
29         PERn1         No connect           30         Not available         No connect           31         PERp1         No connect           32         Not available         No connect           33         GND         Ground           34         Not available         No connect           35         PETn1         No connect           36         Not available         No connect           37         PETp1         No connect           38         DEVSLP         Device Sleep, input. If driven high the host is informing the SSD to enter a low power state           39         GND         Ground           40         Not available         No connect           41         SATA-Rx+         Host receiver differential signal pair           42         Not available         No connect           43         SATA-Rx-         Host receiver differential signal pair           44         Not available         No connect           45         GND         Ground           46         Not available         No connect           47         SATA-Tx-         Host transmitter differential pair           48         Not available         No connect           <				
30         Not available         No connect           31         PERp1         No connect           32         Not available         No connect           33         GND         Ground           34         Not available         No connect           35         PETn1         No connect           36         Not available         No connect           37         PETp1         No connect           38         DEVSLP         Device Sleep, input. If driven high the host is informing the SSD to enter a low power state           39         GND         Ground           40         Not available         No connect           41         SATA-Rx+         Host receiver differential signal pair           42         Not available         No connect           43         SATA-Rx-         Host receiver differential signal pair           44         Not available         No connect           45         GND         Ground           46         Not available         No connect           47         SATA-Tx-         Host transmitter differential pair           48         Not available         No connect           49         SATA-Tx+         Host transmitter differential pair	_			
31         PERp1         No connect           32         Not available         No connect           33         GND         Ground           34         Not available         No connect           35         PETn1         No connect           36         Not available         No connect           37         PETp1         No connect           38         DEVSLP         Device Sleep, input. If driven high the host is informing the SSD to enter a low power state           39         GND         Ground           40         Not available         No connect           41         SATA-Rx+         Host receiver differential signal pair           42         Not available         No connect           43         SATA-Rx-         Host receiver differential signal pair           44         Not available         No connect           45         GND         Ground           46         Not available         No connect           47         SATA-Tx-         Host transmitter differential pair           48         Not available         No connect           49         SATA-Tx+         Host transmitter differential pair           50         PERST#         No connect <td></td> <td></td> <td></td>				
Not available   No connect				
33 GND Ground 34 Not available No connect 35 PETn1 No connect 36 Not available No connect 37 PETp1 No connect 38 DEVSLP Device Sleep, input. If driven high the host is informing the SSD to enter a low power state 39 GND Ground 40 Not available No connect 41 SATA-Rx+ Host receiver differential signal pair 42 Not available No connect 43 SATA-Rx- Host receiver differential signal pair 44 Not available No connect 45 GND Ground 46 Not available No connect 47 SATA-Tx- Host transmitter differential pair 48 Not available No connect 49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect 53 REFCLKN No connect 54 PEWAKE# No connect 55 REFCLKP No connect 56 MFG1 Reserved for Apacer use only¹ 57 GND Ground 58 MFG2 Reserved for Apacer use only¹ 59 (removed for key) Mechanical notch M				
34         Not available         No connect           35         PETn1         No connect           36         Not available         No connect           37         PETp1         No connect           38         DEVSLP         Device Sleep, input. If driven high the host is informing the SSD to enter a low power state           39         GND         Ground           40         Not available         No connect           41         SATA-Rx+         Host receiver differential signal pair           42         Not available         No connect           43         SATA-Rx-         Host receiver differential signal pair           44         Not available         No connect           45         GND         Ground           46         Not available         No connect           47         SATA-Tx-         Host transmitter differential pair           48         Not available         No connect           49         SATA-Tx+         Host transmitter differential pair           50         PERST#         No connect           51         GND         Ground           52         CLKREQ#         No connect           53         REFCLKN         No connect				
35         PETn1         No connect           36         Not available         No connect           37         PETp1         No connect           38         DEVSLP         Device Sleep, input. If driven high the host is informing the SSD to enter a low power state           39         GND         Ground           40         Not available         No connect           41         SATA-Rx+         Host receiver differential signal pair           42         Not available         No connect           43         SATA-Rx-         Host receiver differential signal pair           44         Not available         No connect           45         GND         Ground           46         Not available         No connect           47         SATA-Tx-         Host transmitter differential pair           48         Not available         No connect           49         SATA-Tx+         Host transmitter differential pair           50         PERST#         No connect           51         GND         Ground           52         CLKREQ#         No connect           53         REFCLKN         No connect           54         PEWAKE#         No connect				
Not available   No connect				
DEVSLP   Device Sleep, input. If driven high the host is informing the SSD to enter a low power state				
Bevise Sleep, input. If driven high the host is informing the SSD to enter a low power state  GND Ground  Not available No connect  SATA-Rx+ Host receiver differential signal pair  Not available No connect  At No Co				
39         GND         Ground           40         Not available         No connect           41         SATA-Rx+         Host receiver differential signal pair           42         Not available         No connect           43         SATA-Rx-         Host receiver differential signal pair           44         Not available         No connect           45         GND         Ground           46         Not available         No connect           47         SATA-Tx-         Host transmitter differential pair           48         Not available         No connect           49         SATA-Tx-         Host transmitter differential pair           50         PERST#         No connect           51         GND         Ground           52         CLKREQ#         No connect           53         REFCLKN         No connect           54         PEWAKE#         No connect           55         REFCLKP         No connect           56         MFG1         Reserved for Apacer use only¹           57         GND         Ground           58         MFG2         Reserved for Apacer use only¹           59         (removed for key)		-	Device Sleep, input. If driven high the host is informing the SSD to enter	
41 SATA-Rx+ Host receiver differential signal pair 42 Not available No connect 43 SATA-Rx- Host receiver differential signal pair 44 Not available No connect 45 GND Ground 46 Not available No connect 47 SATA-Tx- Host transmitter differential pair 48 Not available No connect 49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect 53 REFCLKN No connect 54 PEWAKE# No connect 55 REFCLKP No connect 56 MFG1 Reserved for Apacer use only¹ 57 GND Ground 58 MFG2 Reserved for Apacer use only¹ 59 (removed for key) Mechanical notch M	39	GND	·	
42       Not available       No connect         43       SATA-Rx-       Host receiver differential signal pair         44       Not available       No connect         45       GND       Ground         46       Not available       No connect         47       SATA-Tx-       Host transmitter differential pair         48       Not available       No connect         49       SATA-Tx+       Host transmitter differential pair         50       PERST#       No connect         51       GND       Ground         52       CLKREQ#       No connect         53       REFCLKN       No connect         54       PEWAKE#       No connect         54       PEWAKE#       No connect         55       REFCLKP       No connect         56       MFG1       Reserved for Apacer use only¹         57       GND       Ground         58       MFG2       Reserved for Apacer use only¹         59       (removed for key)       Mechanical notch M	40	Not available	No connect	
43 SATA-Rx- 44 Not available  45 GND  46 Not available  47 SATA-Tx-  48 Not available  49 SATA-Tx+  49 Host transmitter differential pair  50 PERST#  51 GND  52 CLKREQ#  53 REFCLKN  54 PEWAKE#  55 REFCLKP  56 MFG1  57 GND  58 MFG2  59 (removed for key)  Mo connect  Host receiver differential signal pair  No connect  Host onnect  Host transmitter differential pair  No connect  No connect  No connect  No connect  Reserved for Apacer use only¹  Mechanical notch M	41	SATA-Rx+	Host receiver differential signal pair	
44     Not available     No connect       45     GND     Ground       46     Not available     No connect       47     SATA-Tx-     Host transmitter differential pair       48     Not available     No connect       49     SATA-Tx+     Host transmitter differential pair       50     PERST#     No connect       51     GND     Ground       52     CLKREQ#     No connect       53     REFCLKN     No connect       54     PEWAKE#     No connect       55     REFCLKP     No connect       56     MFG1     Reserved for Apacer use only¹       57     GND     Ground       58     MFG2     Reserved for Apacer use only¹       59     (removed for key)     Mechanical notch M	42	Not available	No connect	
45 GND Ground 46 Not available No connect 47 SATA-Tx- Host transmitter differential pair 48 Not available No connect 49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect 53 REFCLKN No connect 54 PEWAKE# No connect 55 REFCLKP Reserved for Apacer use only¹ 57 GND Ground 58 MFG2 Reserved for Apacer use only¹ 59 (removed for key) Mechanical notch M	43	SATA-Rx-	Host receiver differential signal pair	
46 Not available No connect 47 SATA-Tx- Host transmitter differential pair 48 Not available No connect 49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect 53 REFCLKN No connect 54 PEWAKE# No connect 55 REFCLKP No connect 56 MFG1 Reserved for Apacer use only¹ 57 GND Ground 58 MFG2 Reserved for Apacer use only¹ 59 (removed for key) Mechanical notch M	44	Not available	No connect	
47 SATA-Tx- Host transmitter differential pair 48 Not available No connect 49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect 53 REFCLKN No connect 54 PEWAKE# No connect 55 REFCLKP No connect 56 MFG1 Reserved for Apacer use only¹ 57 GND Ground 58 MFG2 Reserved for Apacer use only¹ 59 (removed for key) Mechanical notch M	45	GND	Ground	
48Not availableNo connect49SATA-Tx+Host transmitter differential pair50PERST#No connect51GNDGround52CLKREQ#No connect53REFCLKNNo connect54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only¹57GNDGround58MFG2Reserved for Apacer use only¹59(removed for key)Mechanical notch M	46	Not available	No connect	
49 SATA-Tx+ Host transmitter differential pair 50 PERST# No connect 51 GND Ground 52 CLKREQ# No connect 53 REFCLKN No connect 54 PEWAKE# No connect 55 REFCLKP No connect 56 MFG1 Reserved for Apacer use only¹ 57 GND Ground 58 MFG2 Reserved for Apacer use only¹ 59 (removed for key) Mechanical notch M	47	SATA-Tx-	Host transmitter differential pair	
50         PERST#         No connect           51         GND         Ground           52         CLKREQ#         No connect           53         REFCLKN         No connect           54         PEWAKE#         No connect           55         REFCLKP         No connect           56         MFG1         Reserved for Apacer use only¹           57         GND         Ground           58         MFG2         Reserved for Apacer use only¹           59         (removed for key)         Mechanical notch M	48	Not available	No connect	
51         GND         Ground           52         CLKREQ#         No connect           53         REFCLKN         No connect           54         PEWAKE#         No connect           55         REFCLKP         No connect           56         MFG1         Reserved for Apacer use only¹           57         GND         Ground           58         MFG2         Reserved for Apacer use only¹           59         (removed for key)         Mechanical notch M	49	SATA-Tx+	Host transmitter differential pair	
52         CLKREQ#         No connect           53         REFCLKN         No connect           54         PEWAKE#         No connect           55         REFCLKP         No connect           56         MFG1         Reserved for Apacer use only¹           57         GND         Ground           58         MFG2         Reserved for Apacer use only¹           59         (removed for key)         Mechanical notch M	50	PERST#	No connect	
53         REFCLKN         No connect           54         PEWAKE#         No connect           55         REFCLKP         No connect           56         MFG1         Reserved for Apacer use only¹           57         GND         Ground           58         MFG2         Reserved for Apacer use only¹           59         (removed for key)         Mechanical notch M	51	GND	Ground	
54PEWAKE#No connect55REFCLKPNo connect56MFG1Reserved for Apacer use only¹57GNDGround58MFG2Reserved for Apacer use only¹59(removed for key)Mechanical notch M	52	CLKREQ#	No connect	
55         REFCLKP         No connect           56         MFG1         Reserved for Apacer use only¹           57         GND         Ground           58         MFG2         Reserved for Apacer use only¹           59         (removed for key)         Mechanical notch M	53	REFCLKN	No connect	
56 MFG1 Reserved for Apacer use only¹ 57 GND Ground 58 MFG2 Reserved for Apacer use only¹ 59 (removed for key) Mechanical notch M	54	PEWAKE#	No connect	
57 GND Ground 58 MFG2 Reserved for Apacer use only¹ 59 (removed for key) Mechanical notch M	55	REFCLKP	No connect	
58 MFG2 Reserved for Apacer use only <sup>1</sup> 59 (removed for key) Mechanical notch M	56	MFG1	Reserved for Apacer use only <sup>1</sup>	
59 (removed for key) Mechanical notch M	57	GND	Ground	
	58	MFG2	Reserved for Apacer use only <sup>1</sup>	
60 (removed for key) Mechanical notch M	59	(removed for key)	Mechanical notch M	
	60	(removed for key)	Mechanical notch M	

**Table 3-1 Pin Assignments** 

Pin No.	Туре	Description
61	(removed for key)	Mechanical notch M
62	(removed for key)	Mechanical notch M
63	(removed for key)	Mechanical notch M
64	(removed for key)	Mechanical notch M
65	(removed for key)	Mechanical notch M
66	(removed for key)	Mechanical notch M
67	Not available	No connect
68	SUSCLK	No connect
69	CONFIG_1	Ground
70	3.3V	Supply pin, 3.3V
71	GND	Ground
72	3.3V	Supply pin, 3.3V
73	GND	Ground
74	3.3V	Supply pin, 3.3V
75	CONFIG_2	Ground

Note:

<sup>1.</sup> Reserved by Apacer, please do not connect to a host.

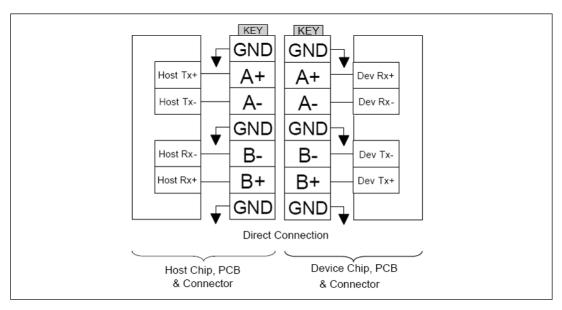


Figure 3-2 Direct Connection between the Host and Device

## 4. Product Specifications

## 4.1 Capacity

Capacity specifications of SH250-M242 are available as shown in Table 4-1. It lists the specific capacity and the default numbers of heads, sectors and cylinders for each product line.

**Table 4-1 Capacity Specifications** 

Capacity	Total bytes	Cylinders	Heads	Sectors	Total LBA
40 GB	40,018,599,936	16,383	16	63	78,161,328
80 GB	80,026,361,856	16,383	16	63	156,301,488
160 GB	160,041,885,696	16,383	16	63	312,581,808
320 GB	320,072,933,376	16,383	16	63	625,142,448

#### Notes:

- Display of total bytes varies from operating systems.
- 1 GB = 1,000,000,000 bytes; 1 sector = 512 bytes.
- LBA count addressed in the table above indicates total user storage capacity and will remain the same throughout the
  lifespan of the device. However, the total usable capacity of the SSD is most likely to be less than the total physical
  capacity because a small portion of the capacity is reserved for device maintenance usages.

#### 4.2 Performance

Performance of SH250-M242 is listed below in Table 4-2.

**Table 4-2 Performance Specifications** 

Capacity Performance	40 GB	80 GB	160 GB	320 GB
Sequential Read (MB/s)	550	550	550	550
Sequential Write (MB/s)	460	485	485	485
4K Random Read (IOPS)	16,000	35,000	55,000	51,000
4K Random Write (IOPS)	50,000	63,000	63,000	61,000

#### Notes:

- Results may differ from various flash configurations or host system setting.
- Sequential read/write is based on CrystalDiskMark 8.0.4 with file size 1,000MB.
- Random read/write is measured using IOMeter with Queue Depth 32.

## **4.3 Environmental Specifications**

Environmental specifications of SH250-M242 product are shown in Table 4-3.

**Table 4-3 Environmental Specifications** 

Parameter	Туре	Specifications
Tomporatura	Operating	0°C to 70°C (Standard); -40°C to 85°C (Wide)
Temperature	Non-operating	-55°C to 100°C
Vibration	Operating	7.69 GRMS, 20~2000 Hz/random (compliant with MIL-STD-810G)
Vibration	Non-operating	4.02 GRMS, 15~2000 Hz/random (compliant with MIL-STD-810G)
Shock	Operating	Acceleration, 50(G)/11(ms)/half sine (compliant with MIL-STD-202G)
SHOCK	Non-operating	Acceleration, 1500(G)/0.5(ms)/half sine (compliant with MIL-STD-883K)

Note: This Environmental Specification table indicates the conditions for testing the device. Real world usages may affect the results.

## 4.4 Mean Time Between Failures (MTBF)

Mean Time Between Failures (MTBF) is predicted based on reliability data for the individual components in SH250-M242. The prediction result for SH250-M242 is more than 3,000,000 hours.

Note: The MTBF is predicated and calculated based on "Telcordia Technologies Special Report, SR-332, Issue 3" method.

## 4.5 Certification and Compliance

SH250-M242 complies with the following standards:

- CE
- UKCA
- FCC
- RoHS Recast
- MIL-STD-810G

#### 4.6 Endurance

The endurance of a storage device is predicted by Drive Writes Per Day based on several factors related to usage, such as the amount of data written into the drive, block management conditions, and daily workload for the drive. Thus, key factors, such as Write Amplifications and the number of P/E cycles, can influence the lifespan of the drive.

**Table 4-4 Endurance Specifications** 

Capacity	Drive Writes Per Day
40 GB	49.54
80 GB	49.95
160 GB	47.91
320 GB	42.35

#### Notes:


- This estimation complies with JEDEC JESD-219, enterprise endurance workload of random data with payload size distribution.
- Flash vendor guaranteed 3D SLC-liteX P/E cycle: 100K
- WAF may vary from capacity, flash configurations and writing behavior on each platform.
- 1 Terabyte = 1,024 GB
- DWPD (Drive Write Per Day) is calculated based on the number of times that user overwrites the entire capacity of an SSD per day of its lifetime during the warranty period. (3D SLC-liteX warranty: 5 years)

#### 4.7 LED Indicator Behavior

The behavior of the SH250-M242 LED indicators is described in Table 4-5.

**Table 4-5 LED Behavior** 

Location	LED	Description
LED A	HDDA1	LED blinks when the drive is being accessed

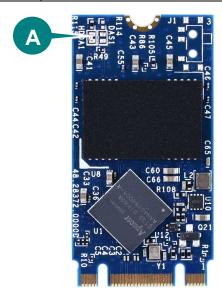

## 5. Flash Management

#### 5.1 Error Correction/Detection

SH250-M242 implements a hardware ECC scheme, based on the Low Density Parity Check (LDPC). LDPC is a class of linear block error correcting code which has apparent coding gain over BCH code because LDPC code includes both hard decoding and soft decoding algorithms. With the error rate decreasing, LDPC can extend SSD endurance and increase data reliability while reading raw data inside a flash chip.

### 5.2 Bad Block Management

Current production technology is unable to guarantee total reliability of NAND flash memory array. When a flash memory device leaves factory, it comes with a minimal number of initial bad blocks during production or out-of-factory as there is no currently known technology that produce flash chips free of bad blocks. In addition, bad blocks may develop during program/erase cycles. Since bad blocks are inevitable, the solution is to keep them in control. Apacer flash devices are programmed with ECC, page mapping technique and S.M.A.R.T to reduce invalidity or error. Once bad blocks are detected, data in those blocks will be transferred to free blocks and error will be corrected by designated algorithms.

### 5.3 Global Wear Leveling

Flash memory devices differ from Hard Disk Drives (HDDs) in terms of how blocks are utilized. For HDDs, when a change is made to stored data, like erase or update, the controller mechanism on HDDs will perform overwrites on blocks. Unlike HDDs, flash blocks cannot be overwritten and each P/E cycle wears down the lifespan of blocks gradually. Repeatedly program/erase cycles performed on the same memory cells will eventually cause some blocks to age faster than others. This would bring flash storages to their end of service term sooner. Global wear leveling is an important mechanism that levels out the wearing of all blocks so that the wearing-down of all blocks can be almost evenly distributed. This will increase the lifespan of SSDs.

### 5.4 DataDefender<sup>™</sup>

Apacer's DataDefender is an advanced technology of power failure management which combines both firmware and hardware mechanisms to ensure data integrity. When power disruption occurs, the low voltage detector will be triggered. When this happens, the SSD's protection mechanism is activated and cuts off data transmission from the host. Once the power supply is resumed, the firmware protection mechanism will ensure the integrity of the firmware as well as the data already written into the NAND flash media.

#### 5.5 ATA Secure Erase

ATA Secure Erase is an ATA disk purging command currently embedded in most of the storage drives. Defined in ATA specifications, (ATA) Secure Erase is part of Security Feature Set that allows storage drives to erase all user data areas. The erase process usually runs on the firmware level as most of the ATA-based storage media currently in the market are built-in with this command. ATA Secure Erase can securely wipe out the user data in the drive and protects it from malicious attack.

### 5.6 Flash Translation Layer - Page Mapping

Page mapping is an advanced flash management technology whose essence lies in the ability to gather data, distribute the data into flash pages automatically, and then schedule the data to be evenly written. Page-level mapping uses one page as the unit of mapping. The most important characteristic is that each logical page can be mapped to any physical page on the flash memory device. This mapping algorithm allows different sizes of data to be written to a block as if the data is written to a data pool and it does not need to take extra operations to process a write command. Thus, page mapping is adopted to increase random access speed and improve SSD lifespan, reduce block erase frequency, and achieve optimized performance and lifespan.

#### **5.7 TRIM**

TRIM is a SATA command that helps improve the read/write performance and efficiency of solid-state drives (SSD). The command enables the host operating system to inform SSD controller which blocks contain invalid data, mostly because of the erase commands from host. The invalid will be discarded permanently and the SSD will retain more space for itself.

### 5.8 Device Sleep (DevSleep or DEVSLP) Mode

Device Sleep is a feature that allows SATA devices to enter a low power mode by designating a particular pin as DEVSLP signal with an aim to reducing power consumption.

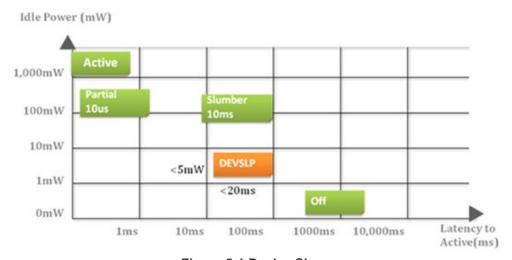


Figure 5-1 Device Sleep

### **5.9 SATA Power Management**

By complying with SATA 6 Gb/s specifications, the SSD supports the following SATA power saving modes:

- ACTIVE: PHY ready, full power, TX & RX operational
- PARTIAL: Reduces power, resumes in under 10 μs (microseconds)
- SLUMBER: Reduces power, resumes in under 10 ms (milliseconds)
- HIPM: Host-Initiated Power Management
- DIPM: Device-Initiated Power Management
- AUTO-SLUMBER: Automatic transition from partial to slumber.
- Device Sleep (DevSleep or DEVSLP): PHY powered down; power consumption  $\leq 5$  mW; host assertion time  $\leq 10$  ms; exit timeout from this state  $\leq 20$  ms (unless specified otherwise in SATA Identify Device Log).

Note: The behaviors of power management features would depend on host/device settings.

#### 5.10 SLC-liteX

Apacer's 3D NAND SLC-liteX technology breaks through the limitations of existing technology and provides up to 100,000 P/E cycles, which is over 33 times more than MLC or industrial 3D TLC. Powered by carefully selected NAND components, the firmware structure is specifically optimized to enhance NAND flash stability during daily operations, and the error handling algorithm is significantly improved to avoid any unexpected ECC errors. The longest lifespans are therefore available at reasonable cost.

### 5.11 SMART Read Refresh™

Apacer's SMART Read Refresh plays a proactive role in avoiding read disturb errors from occurring to ensure health status of all blocks of NAND flash. Developed for read-intensive applications in particular, SMART Read Refresh is employed to make sure that during read operations, when the read operation threshold is reached, the data is refreshed by re-writing it to a different block for subsequent use.

## 6. Security and Reliability Features

### 6.1 Advanced Encryption Standard

Advanced Encryption Standard (AES) is a specification for the encryption of electronic data. AES has been adopted by the U.S. government since 2001 to protect classified information and is now widely implemented in embedded computing applications. The AES algorithm used in software and hardware is symmetric so that encrypting/decrypting requires the same encryption key. Without the key, the encrypted data is inaccessible to ensure information security.

Notably in flash memory applications, AES 256-bit hardware encryption is the mainstream to protect sensitive or confidential data. The hardware encryption provides better performance, reliability, and security than software encryption. It uses a dedicated processor, which is built inside the controller, to process the encryption and decryption. This enormously shortens the processing time and makes it efficient.

#### 6.2 Thermal Sensor

Apacer Thermal Sensor is a digital temperature sensor with serial interface. By using a designated pin for transmission, storage device owners are able to read temperature data.

#### 6.3 End-to-End Data Protection

End-to-End Data Protection is a feature implemented in Apacer SSD products that extends error control to cover the entire path from the host computer to the drive and back, and ensure data integrity at multiple points in the path to enable reliable delivery of data transfers. Unlike ECC which does not exhibit the ability to determine the occurrence of errors throughout the process of data transmission, End-to-End Data Protection allows SSD controller to identify an error created anywhere in the path and report the error to the host computer before it is written to the drive. This error-checking and error-reporting mechanism therefore guarantees the trustworthiness and reliability of the SSD.

## 7. Software Interface

## 7.1 Command Set

Table 7-1 summarizes the ATA commands supported by SH250-M242.

**Table 7-1 Command Set** 

Code	Command	Code	Command
E5h	CHECK POWER MODE	F4h	SECURITY ERASE UNIT
06h	DATA SET MANAGEMENT	F5h	SECURITY FREEZE LOCK
92h	DOWNLOAD MICROCODE	F1h	SECURITY SET PASSWORD
90h	EXECUTE DEVICE DIAGNOSTIC	F2h	SECURITY UNLOCK
E7h	FLUSH CACHE	70h	SEEK
EAh	FLUSH CACHE EXT	EFh	SET FEATURES
ECh	IDENTIFY DEVICE	C6h	SET MULTIPLE MODE
E3h	IDLE	E6h	SLEEP
E1h	IDLE IMMEDIATE	B0h	SMART
91h	INITIALIZE DEVICE PARAMETERS	E2h	STANDBY
E4h	READ BUFFER	E0h	STANDBY IMMEDIATE
C8h	READ DMA	E8h	WRITE BUFFER
25h	READ DMA EXT	CAh	WRITE DMA
60h	READ FPDMA QUEUED	35h	WRITE DMA EXT
C4h	READ MULTIPLE	3Dh	WRITE DMA FUA EXT
29h	READ MULTIPLE EXT	61h	WRITE FPDMA QUEUED
2Fh	READ LOG EXT	3Fh	WRITE LOG EXT
47h	READ LOG DMA EXT	57h	WRITE LOG DMA EXT
20h	READ SECTOR	C5h	WRITE MULTIPLE
24h	READ SECTOR EXT	39h	WRITE MULTIPLE EXT
40h	READ VERIFY SECTORS	CEh	WRITE MULTIPLE FUA EXT
42h	READ VERIFY SECTORS EXT	30h	WRITE SECTOR
10h	RECALIBRATE	34h	WRITE SECTOR EXT
F6h	SECURITY DISABLE PASSWORD	45h	WRITE UNCORRECTABLE EXT
F3h	SECURITY ERASE PREPARE		

#### 7.2 S.M.A.R.T.

SMART, an acronym for Self-Monitoring, Analysis and Reporting Technology, is an open standard that allows a hard disk drive to automatically detect its health and report potential failures. When a failure is recorded by SMART, users can choose to replace the drive to prevent unexpected outage or data loss. Moreover, SMART can inform users of impending failures while there is still time to perform proactive actions, such as copy data to another device.

**Table 7-2 SMART Subcommand Set** 

Code	SMART Subcommand
D0h	READ DATA
D1h	READ ATTRIBUTE THRESHOLDS
D2h	ENABLE/DISABLE ATTRIBUTE AUTOSAVE
D4h	EXECUTE OFF-LINE IMMEDIATE
D5h	SMART READ LOG
D6h	SMART WRITE LOG
D8h	ENABLE OPERATIONS
D9h	DISABLE OPERATIONS
DAh	RETURN STATUS

**Table 7-3 General SMART Attribute Structure** 

Byte	Description
0	ID (Hex)
1 – 2	Status Flag
3	Value
4	Worst
5*-11	Raw Data

<sup>\*</sup>Byte 5: LSB

**Table 7-4 SMART Attribute ID List** 

ID (Hex)	Attribute Name
9 (0x09)	Power-on Hours
12 (0x0C)	Power Cycle Count
163 (0xA3)	Max. Erase Count
164 (0xA4)	Avg. Erase Count
166 (0xA6)	Total Later Bad Block Count
167 (0xA7)	SSD Protect Mode (Vendor Specific)
168 (0xA8)	SATA PHY Error Count
171 (0xAB)	Program Fail Count
172 (0xAC)	Erase Fail Count
175 (0xAF)	Bad Cluster Table Count
192 (0xC0)	Unexpected Power Loss Count
194 (0xC2)	Temperature
231 (0xE7)	Lifetime Left
241 (0xF1)	Total Sectors of Write

## 8. Electrical Specifications

## 8.1 Operating Voltage

Table 8-1 lists the supply voltage for SH250-M242.

**Table 8-1 Operating Range** 

Item	Range
Supply Voltage	3.3V ± 5%

## **8.2 Power Consumption**

Table 8-2 lists the power consumption for SH250-M242.

Table 8-2 Power Consumption (Unit: mA)

Capacity Mode	40 GB	80 GB	160 GB	320 GB
Active (Max.)	360	400	410	410
ldle	60	60	60	60

#### Notes:


All values are typical and may vary depending on flash configurations or host system settings.

Power consumption is measured using CrystalDiskMark 8.0.4.

# 9. Mechanical Specifications

**Table 9-1 Physical Information** 

Parameter	Unit	40 GB	80 GB	160 GB	320 GB		
Length		42.00 ± 0.15					
Width	mm	22.00 ± 0.15					
Height (Max.)		3.88					
Weight	g ±5%	3.45	3.45 3.86		3.65		

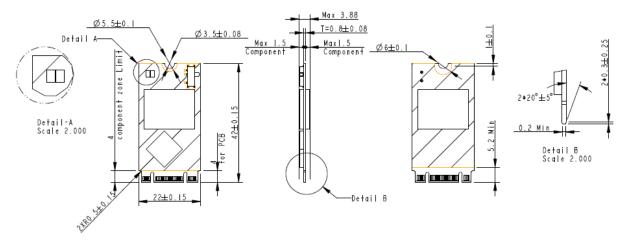

**Figure 9-1 Physical Dimensions** 

# **10. Product Ordering Information**

## **10.1 Product Code Designations**

Apacer's SH250-M242 SSD is available in different configurations and densities. See the chart below for a comprehensive list of options for the SH250- M242 series devices.

Codo	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Code	Α	3	2		2	5	9	Χ	Χ	В		Χ	Χ	Χ	F	8

Code 1-3 (Product Line & Form Factor)	SATA M.2 2242
Code 5-6 (Model/Solution)	SH250
Code 7-8 (Product Capacity)	9H: 40GB 9J: 80GB 9K: 160GB 9L: 320GB
Code 9 (Flash Type & Product Temp)	Y: 3D SLC-lite standard temperature Z: 3D SLC-lite wide temperature
Code 10 (Product Spec)	Double-sided B+M key
Code 12-14 (Version Number)	Random numbers generated by system
Code 15-16 (Firmware Version)	SLC-liteX Thermal Sensor DEVSLP

## Apacer

## **10.2 Valid Combinations**

The following table lists the available models of the SH250-M242 series which are in mass production or will be in mass production. Consult your Apacer sales representative to confirm availability of valid combinations and to determine availability of new combinations.

Capacity	Standard Temperature	Wide Temperature
40GB	A32.259HYB.002F8	A32.259HZB.002F8
80GB	A32.259JYB.002F8	A32.259JZB.002F8
160GB	A32.259KYB.002F8	A32.259KZB.002F8
320GB	A32.259LYB.001F8	A32.259LZB.001F8

# Apacer

# **Revision History**

Revision	Description	Date		
1.0	Initial release	2/2/2023		

### **Global Presence**

#### Taiwan (Headquarters)

Apacer Technology Inc.

1F., No.32, Zhongcheng Rd., Tucheng Dist., New Taipei City 236, Taiwan R.O.C.

Tel: 886-2-2267-8000 Fax: 886-2-2267-2261 amtsales@apacer.com

#### Japan

**Apacer Technology Corp.** 

6F, Daiyontamachi Bldg., 2-17-12, Shibaura, Minato-Ku, Tokyo, 108-0023, Japan

Tel: 81-3-5419-2668 Fax: 81-3-5419-0018 jpservices@apacer.com

#### China

Apacer Electronic (Shanghai) Co., Ltd

Room D, 22/FL, No.2, Lane 600, JieyunPlaza, Tianshan RD, Shanghai, 200051, China

Tel: 86-21-6228-9939 Fax: 86-21-6228-9936 sales@apacer.com.cn

#### U.S.A.

**Apacer Memory America, Inc.** 

46732 Lakeview Blvd., Fremont, CA 94538

Tel: 1-408-518-8699 Fax: 1-510-249-9551 sa@apacerus.com

#### Europe

Apacer Technology B.V.

Science Park Eindhoven 5051 5692 EB Son,

The Netherlands
Tel: 31-40-267-0000
Fax: 31-40-290-0686
sales@apacer.nl

#### India

Apacer Technologies Pvt Ltd,

1874, South End C Cross, 9<sup>th</sup> Block Jayanagar, Bangalore-560069, India

Tel: 91-80-4152-9061/62 Fax: 91-80-4170-0215 sales\_india@apacer.com

## **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

## Apacer:

<u>A32.259HYB.002F8</u> <u>A32.259HZB.002F8</u> <u>A32.259JYB.002F8</u> <u>A32.259JZB.002F8</u> <u>A32.259KYB.002F8</u> A32.259KZB.002F8 A32.259LYB.001F8 A32.259LZB.001F8