### **MAX14775E Evaluation Kit**

### Evaluates: MAX14775E/MAX14776E

### **General Description**

The MAX14775E evaluation kit (EV kit) is a fully assembled and tested PCB that demonstrates the functionality of the MAX14775 20Mbps RS-485/RS-422 fault-protected transceiver.

The MAX14775E EV kit may also be used to evaluate the MAX14776E.

### **Features**

- Operates From a Single 3V to 5V Supply
- Terminal Block Connectors for Easy RS-485/RS-422 Evaluation
- Fully Assembled and Tested

### **Quick Start**

### **Required Equipment**

- MAX14775E EV kit
- 3.3V, 500mA DC power supply
- Signal/function generator
- Oscilloscope

Ordering Information appears at end of data sheet.

### **Startup Procedure**

The EV kit is fully assembled and tested. Follow the steps below to verify board operation.

- Set the DC power supply to 3.3V and connect the DC power supply between the VCC and GND connectors on the EV kit.
- 2) Ensure that all jumpers are in their default positions (see Table 1).
- Connect the oscilloscope probes to the A, B, and RO test points on the EV kit.
- 4) Turn on the power supply.
- 5) Set the signal/function generator to output a 1MHz 0-to-3.3V square wave.
- 6) Connect the signal/function generator to the DI test point.
- Using the oscilloscope, verify that the A, B and RO outputs switch as the signal on DI toggles.



# Table 1. Jumper Table (J1-J5)

# Detailed Description of Hardware The EV kit is a fully assembled and tested circuit board for evaluating the MAX14775E high speed RS-485/RS-422 transceiver (U1). The EV kit has been designed to allow for evaluating the MAX14775E alone or in a standard RS-485 network. Driver and Receiver Enable Selection The EV kit features three jumpers (J1, J4, and J5) to

The EV kit features three jumpers (J1, J4, and J5) to
enable/disable the driver and receiver outputs. Set J4
to 2-3 to enable the receiver. Set J5 to 1-2 to enable the
driver. To actively control both enables, remove J4 and J5
shunts and close J1, which connects DE and $\overline{\text{RE}}$ together.

### **Resistors R2–R4 Configuration**

For end-of-the-line transceivers, close J2 to connect a  $120\Omega$  termination resistor (R2) between the A and B RS-485 receiver inputs on the MAX14775E.

Pullup and pulldown resistors are generally used on the receiver inputs to guarantee a known state in the event that all nodes on the bus are in receive mode, or the cable becomes disconnected. The exact value for these resistors will vary with the application. R1 and R3 pads are provided for pullup and pulldown resistors on the A and B lines, if needed. The use of any of these resistors is purely optional. Note that the MAX14775E features true fail-safe receiver inputs, which ensures that RO is high when the receiver inputs are shorted, open, or connected to an idle bus.

### **Surge Protection**

Some industrial applications require extra components on the A and B lines to protect against high voltage surges. Pads for D1 and D2 TVS diodes are included on the MAX14775E EV kit for this purpose. The use of these diodes is completely optional for normal operation.

JUMPER	SHUNT PO- SITION	DESCRIPTION		
14	Open*	DE and RE are not connected together.		
J1	Closed	DE and RE are connected together.		
10	Open*	A and B are connected through the on-board $120\Omega$ termination resistor.		
J2	Closed	A and B are not connected through the on-board termination resistor.		
14	1-2	RE is high. The RS-485 receiver is disabled.		
J4	2-3*	RE is low. The RS-485 receiver is enabled.		
J5	1-2*	DE is high. The RS-485 driver outputs are enabled.		
15	2-3	DE is low. The RS-485 driver outputs are disabled.		

Evaluates: MAX14775E/MAX14776E

# **Ordering Information**

PART	TYPE
MAX14775EEVKIT#	EV Kit

<sup>#</sup>Denotes RoHS compliant.

www.maximintegrated.com Maxim Integrated | 2

<sup>\*</sup>Default position.


# Evaluates: MAX14775E/MAX14776E

## **MAX14775E EV Kit Bill of Materials**

ITEM	REF DES	DNI/DNP	OTY	MFG PART#	MANUFACTURER	VALUE	DESCRIPTION
	T.C520	511,511	Ψ	0 . 7	IN A COLOR COLOR	***************************************	22351.II 11611
							CAPACITOR; SMT (0603); CERAMIC CHIP; 10UF; 10V; TOL=20%;
1	C1	_	1	C1608X5R1A106M080AC	TDK		MODEL=C SERIES; TG=-55 DEGC TO +85 DEGC; TC=X5R
				0.1000/101/11/100111000/10			
							CAPACITOR; SMT (0603); CERAMIC CHIP; 0.1UF; 10V; TOL=10%;
2	C2	_	1	C0603C104K8RAC	KEMET		MODEL=C0603 SERIES; TG=-55 DEGC TO +125 DEGC; TC=X7R
_							CONNECTOR; MALE; THROUGH HOLE; BREAKAWAY; STRAIGHT
3	J1, J2	-	2	PCC02SAAN	SULLINS	PCC02SAAN	THROUGH: 2PINS: -65 DEGC TO +125 DEGC
							CONNECTOR: FEMALE: THROUGH HOLE: SCREW COMPACT
4	J3	_	1	1935789	PHOENIX CONTACT	1935789	TERMINAL BLOCK; RIGHT ANGLE; 3PINS
							CONNECTOR; MALE; THROUGH HOLE; BREAKAWAY; STRAIGHT;
5	J4, J5	-	2	PEC03SAAN	SULLINS	PEC03SAAN	3PINS;
6	R2	-	1	MCR10EZPJ121	ROHM SEMICONDUCTOR	120	RESISTOR; 0805; 120 OHM; 5%; 200PPM; 0.125W; METAL FILM
							TEST POINT; PIN DIA=0.125IN; TOTAL LENGTH=0.445IN; BOARD
							HOLE=0.063IN; BLACK; PHOSPHOR BRONZE WIRE SILVER
7	TP1-TP5	-	5	5011	KEYSTONE	N/A	PLATE FINISH;
							TEST POINT; PIN DIA=0.125IN; TOTAL LENGTH=0.445IN; BOARD
							HOLE=0.063IN; YELLOW; PHOSPHOR BRONZE WIRE SILVER
	TP6-TP9, TP11, TP12	-	6		KEYSTONE		PLATE FINISH;
9	TP10	-	1	5010	KEYSTONE	N/A	TESTPOINT WITH 1.80MM HOLE DIA, RED, MULTIPURPOSE;
							IC; TXRX; +/-65V FAULT PROTECTED 20MBPS HALF-DUPLEX RS-
	U1	-			MAXIM		485/RS-422 TRANSCEIVER; TDFN8-EP
	PCB	-			MAXIM		PCB:MAX14775E
12	D1, D2	DNP	0		ST MICROELECTRONICS	30V	DIODE; TVS; SMA (DO-214AC); VRM=30V; IPP=8.3A
				CRCW08051K00FK;ERJ-			
				6ENF1001V;MCR10EZHF10	-		
	R1, R3	DNP			DALE;PANASONIC;ROHM;YAGEO	1K	RESISTOR; 0805; 1K; 1%; 100PPM; 0.125W; THICK FILM
TOTAL			22				


www.maximintegrated.com Maxim Integrated | 3

# **MAX14775E EV Kit Schematic**

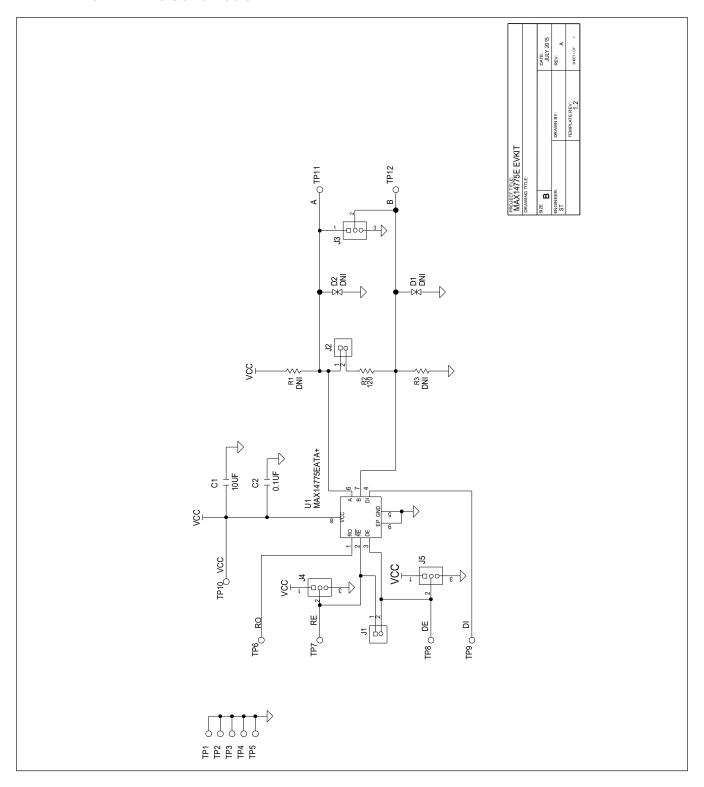


# Evaluates: MAX14775E/MAX14776E


# **MAX14775E EV Kit PCB Layouts**

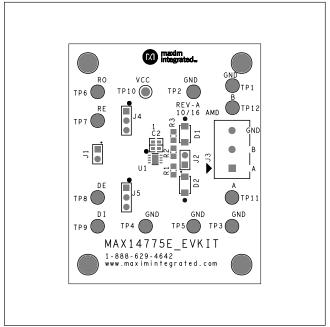

MAX14775E EV Kit—Top Silkscreen

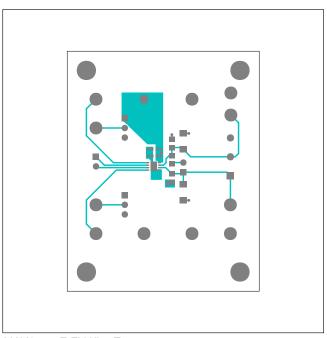

MAX14775E EV Kit—Top

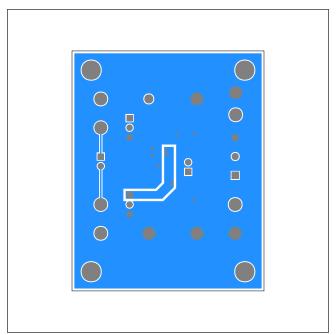

MAX14775E EV Kit—Bottom

# MAX14775E Evaluation Kit

Evaluates: MAX14775E/MAX14776E

# **Revision History**

REVISION NUMBER	REVISION DATE	DESCRIPTION	
0	11/16	Initial release	_
1	10/18	Updated Bill of Materials and Schematic	3–4

For pricing, delivery, and ordering information, please visit Maxim Integrated's online storefront at https://www.maximintegrated.com/en/storefront/storefront.html.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time.

# **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Maxim Integrated: MAX14775EEVKIT#