Evaluates: MAX17532 (TDFN) in 5V Output Voltage Applications

General Description

The MAX17532 5V evaluation kit (EV kit) (TDFN) is a fully assembled and tested circuit board that demonstrates the performance of the MAX17532 42V, 100mA ultra-small, high-efficiency, synchronous step-down DC-DC converter in a 10-pin TDFN package. The EV kit operates over a wide input-voltage range of 6V to 42V and provides up to 100mA load current at 5V output. It draws only 26µA supply current under no-load conditions (EN/UVLO connected to V_{IN}). The EV kit is programmed to switch at a frequency of 220kHz. The device is simple to use and easily configurable with minimal external components. It features cycle-by-cycle peak current limit protection, undervoltage lockout, and thermal shutdown.

The EV kit comes installed with the MAX17532ATB+ in an 10-pin (3mm x 2mm) lead(Pb)-free/RoHS-compliant TDFN package.

Features

- 6V to 42V Input Voltage Range
- 5V Output, 100mA Continuous Current
- 26µA No-Load Supply Current
- EN/UVLO for On/Off Control and Programmable Input Undervoltage Lockout
- Programmable Switching Frequency
- Internal or Programmable Soft-Start
- PFM or Forced-PWM Mode of Operation
- Open-Drain RESET Output
- Peak Current Limit Protection
- Thermal Shutdown
- Proven PCB Layout
- Fully Assembled and Tested

Quick Start

Recommended Equipment

- MAX17532 5V EV kit (TDFN)
- 42V adjustable, 0.5A DC power supply
- Electronic load up to 100mA
- Voltmeter

Procedure

The EV kit is fully assembled and tested. Follow the steps below to verify board operation. Caution: Do not turn on the power supply until all connections are completed.

- Verify that shunts are installed on jumpers JU1, JU2 (EN/UVLO).
- 2) Verify that JU3 (MODE-PFM operation) is open.
- 3) Set the electronic load to constant-current mode, 100mA, and disable the electronic load.
- 4) Connect the electronic load's positive terminal to the VOUT PCB pad. Connect the negative terminal to the GND PCB pad.
- 5) Connect the voltmeter across the VOUT and GND PCB pads.
- 6) Set the power-supply output to 24V. Disable the power supply.
- Connect the power-supply output to the VIN PCB pad. Connect the supply ground to the GND PCB pad.
- 8) Turn on the power supply.
- 9) Enable the electronic load and verify that output voltage is 5V with respect to GND.
- 10) Vary the input voltage from 6V to 42V.
- 11) Vary the load current from 1mA to 100mA and verify that output voltage is 5V with respect to GND.

Note: While performing an output short-circuit test, it is possible for the ceramic output capacitor to oscillate with the wiring inductance between the capacitor and short-circuited load, and thereby cause the absolute maximum rating of the V_{OUT} pin (-0.3V) to be exceeded. The resistor (R7) and the capacitor (C5) are included on this evaluation kit to protect against unintentional violation of the above mentioned rating. In the actual system design, parasitic board or wiring inductance should be minimized and the output-voltage waveform under short-circuit operation should be verified to ensure that the absolute maximum rating of the V_{OUT} pin is not exceeded.

Ordering Information appears at end of data sheet.

TDFN is a registered trademark of Maxim Integrated Products, Inc.



Detailed Description

The MAX17532 5V EV kit (TDFN) is a fully assembled and tested circuit board that demonstrates the performance of the MAX17532 42V, 100mA ultra-small, high-efficiency, synchronous step-down DC-DC converter in a 10-pin TDFN package. The EV kit operates over a wide input voltage range of 6V to 42V and provides up to 100mA load current at 5V output. It draws only 26µA supply current under no-load conditions (EN/UVLO connected to V_{IN}). The EV kit is programmed to switch at a frequency of 220kHz. The device is simple to use and easily configurable with minimal external components. It features cycle-by-cycle peak current limit protection, undervoltage lockout, and thermal shutdown.

The EV kit includes an EN/UVLO PCB pad and JU1 and JU2 to enable control of the converter output. The MODE PCB pad and JU3 are provided for selecting the mode of operation of the converter. A RESET PCB pad is available for monitoring the RESET output. The RT/SYNC PCB pad can be used to synchronize the EV kit switching frequency to an external clock frequency.

Enable Control (JU1, JU2)

The EN/UVLO pin on the EV kit serves as an on/off control while also allowing the user to program the input undervoltage lockout (UVLO) threshold. JU1 and JU2 configure the EV kit's output for turn-on/turn-off control. See <u>Table 1</u> for proper JU1, JU2 jumper configurations.

Additionally, resistors R1 and R2 are included to set the UVLO to a desired turn-on voltage. Refer to the *Setting the Input Undervoltage-Lockout Level* section in the MAX17532 IC data sheet for additional information on setting the UVLO threshold voltage.

RESET Output

Evaluates: MAX17532 (TDFN) in 5V Output Voltage Applications

The EV kit provides a PCB pad to monitor the status of the $\overrightarrow{\text{RESET}}$ output. $\overrightarrow{\text{RESET}}$ goes high and when the output voltage rises above 95% (typ) of its nominal regulated output voltage. $\overrightarrow{\text{RESET}}$ goes low when output voltage falls below 92% (typ) of its nominal regulated voltage.

PFM or Forced-PWM Mode (MODE)

The EV kit includes a jumper (JU3) to select the mode of operation of the converter. Install a shunt across JU3 before powering up the EV kit to enable the forced-PWM operation. Keep JU3 open to enable the light-load PFM operation. See Table 2 for proper JU3 settings.

Soft-Start

The EV kit offers a fixed 5ms soft-start time. Connect the capacitor C4 to adjust the soft-start time (t_{SS}). The minimum soft-start time is related to the output capacitance (C_{OUT}) and the output voltage (V_{OUT}) by the following equation:

$t_{SS} > 0.05 \times C_{OUT} \times V_{OUT}$

where t_{SS} is in milliseconds and C_{OUT} is in μ F.

Use the following equation to determine the soft-start capacitance value (C_{SS}).

 C_{SS} = 6.25 x t_{SS}

where $t_{\mbox{\scriptsize SS}}$ is in milliseconds and $C_{\mbox{\scriptsize SS}}$ is in nanofarads.

External Synchronization (RT/SYNC)

The EV kit provides a PCB pad to synchronize the EV kit switching frequency to an external clock frequency. Refer to the *External Synchronization* section in the MAX17532 IC data sheet for additional information on configuring the external clock.

Table 1. Enable Control (EN/UVLO) (JU1, JU2)

SHUNT POSITION		EN/UVLO PIN	VOUT OUTPUT	
JU1	JU2			
1-2	Open	Connected to VIN	Enabled	
Open	1-2	Connected to GND	Disabled	
1-2*	1-2	Connected to midpoint of R1, R2 resistor-divider	Enabled at VIN ≥ 6V	

*Default position.


Table 2. MODE Control (JU3)


SHUNT POSITION	MODE PIN	MODE OF OPERATION
1-2	Connected to GND	Forced PWM
Open*	Unconnected	PFM


*Default position.


Evaluates: MAX17532 (TDFN) in 5V Output Voltage Applications


EV Kit Performance Report

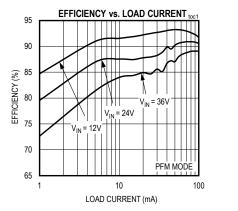


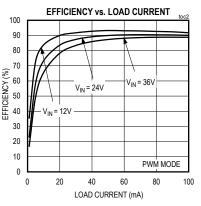


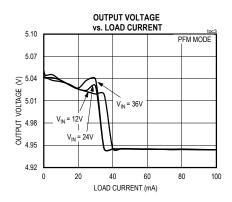


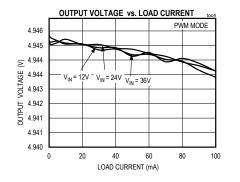


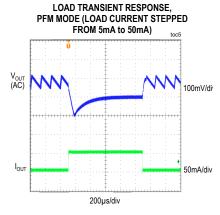

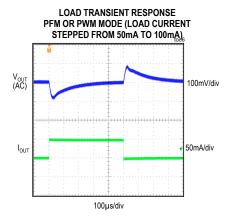

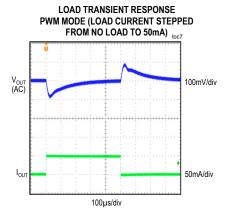

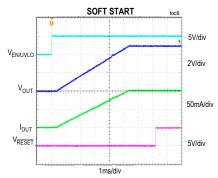

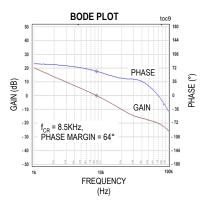

Evaluates: MAX17532 (TDFN) in 5V Output Voltage Applications

Component Suppliers

SUPPLIER	WEBSITE
Coilcraft, Inc.	www.coilcraft.com
Murata Americas	www.murata.com
Panasonic Corp.	www.panasonic.com

Note: Indicate that you are using the MAX17532ATB when contacting these component suppliers.

Component List and Schematic

See the following links for component information and schematic:

- MAX17532EV TDFN BOM
- MAX17532EV TDFN Schematic

Evaluates: MAX17532 (TDFN) in 5V Output Voltage Applications

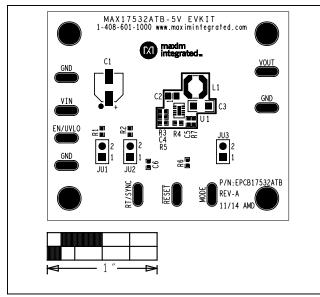


Figure 1. MAX17532 5V EV Kit (TDFN) Component Placement Guide—Component Side

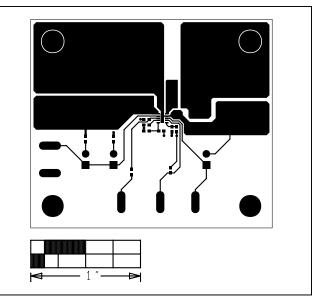


Figure 2. MAX17532 5V EV Kit (TDFN) PCB Layout— Component Side

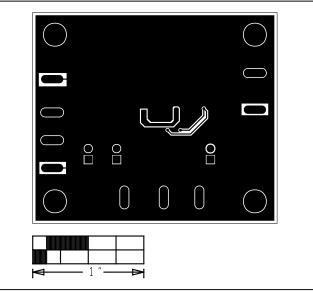


Figure 3. MAX17532 5V EV Kit (TDFN) PCB Layout—Solder Side

Evaluates: MAX17532 (TDFN) in 5V Output Voltage Applications

Ordering Information

PART	TYPE
MAX17532ATBEVKIT#	EV Kit

#Denotes RoHS compliant.


Evaluates: MAX17532 (TDFN) in 5V Output Voltage Applications

Revision History

REVISION	REVISION	DESCRIPTION	PAGES
NUMBER	DATE		CHANGED
0	7/15	Initial release	—

For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4642, or visit Maxim Integrated's website at www.maximintegrated.com.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time.

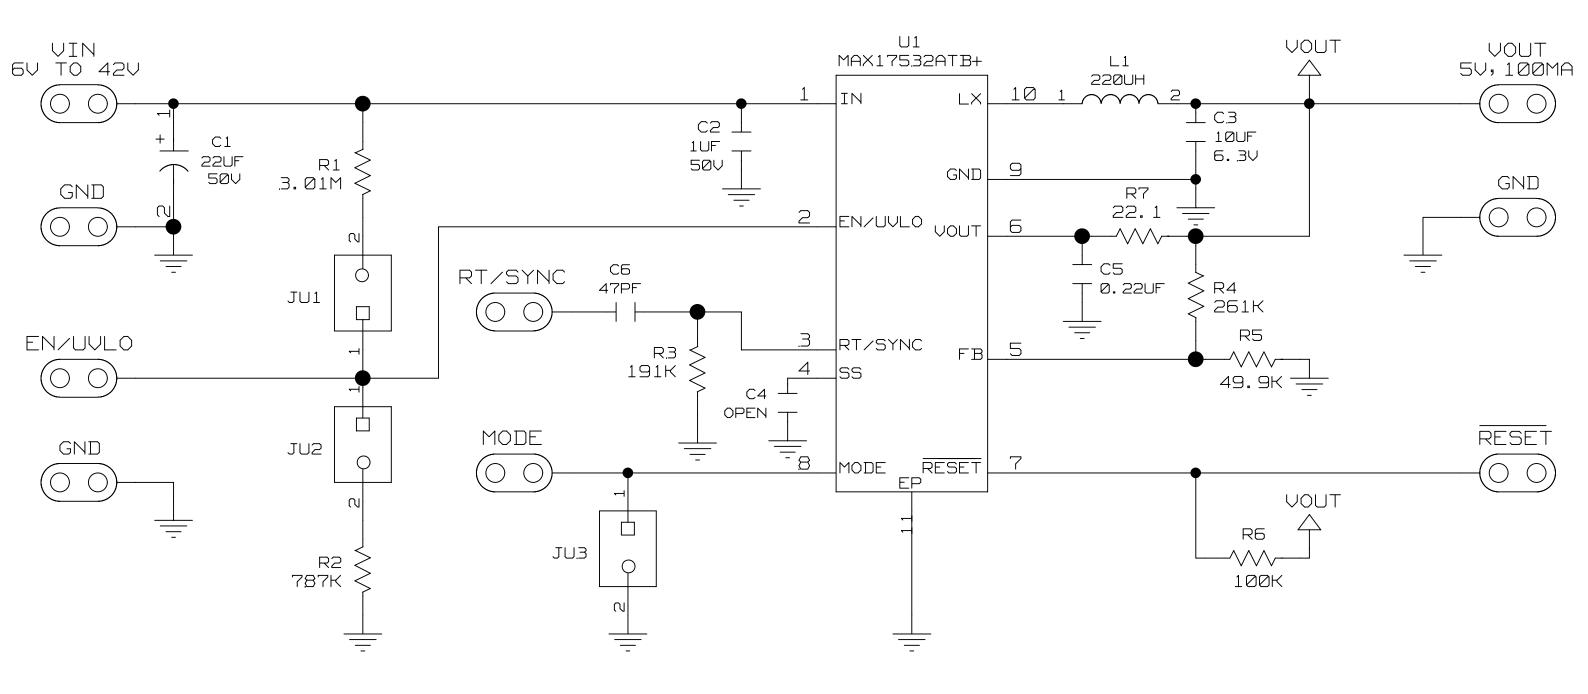

BILL OF MATERIALS (BOM) Revision 5/15

Serial No.	Description	Quantity	Designator	Part Number
1	22µF, 50V electrolytic capacitor (6.3mm x 6.3mm)	1	C1	PANASONIC EEEFK1H220P
2	1µF ±10%, 50V X7R ceramic capacitor (0805)	1	C2	MURATA GRM21BR71H105K
3	10μF ±10%, 6.3V X7R ceramic capacitor (1206)	1	C3	Murata GRM31CR70J106K
4	Not installed, OPEN (0402)	0	C4	
5	0.22µF ±10%, 16V X7R ceramic capacitor (0402)	1	C5	Murata GRM155R71C224K
6	47pF ±5% 50V COG ceramic capacitor (0402)	1	C6	MURATA GRM1555C1E470J
7	2-pin headers	3	JU1-JU3	Sullins: PTC36SAAN
8	220μH, 235mA inductor	1	L1	Coilcraft LPS5030-224M
9	3.01M ohm ±1%, resistor (0402)	1	R1	
10	787k ohm ±1%, resistor (0402)	1	R2	
11	191k ohm ±1%, resistor (0402)	1	R3	
12	261k ohm ±1%, resistor (0402)	1	R4	
13	49.9k ohm ±1%, resistor (0402)	1	R5	
14	100k ohm ±1%, resistor (0402)	1	R6	
15	22.1 ohm ±1%, resistor (0402)	1	R7	
16	42V, 100mA, ultra-small, highefficiency, synchronous step- down DC-DC converter with 22μA noload supply current (10 TDFN-EP*) Maxim MAX17532ATB+	1	U1	MAX17532ATB+
17	Shunt	3	See Jumper Table	SULLINS STC02SYAN

Jumper Table		
JUMPER	SHUNT POSITION	
JU1	1-2	
JU2	1-2	
JU3	OPEN	

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Maxim Integrated: MAX17532ATBEVKIT#