# Evaluates: MAXM15062 3.3V Output-Voltage Application

#### **General Description**

The MAXM15062 3.3V output evaluation kit (EV kit) provides a proven design to evaluate the MAXM15062 high-voltage, high-efficiency, synchronous step-down DC-DC module. The EV kit is programmed to deliver 3.3V output for loads up to 300mA. The EV kit features an adjustable input undervoltage lockout, selectable mode, and open-drain RESET signal. The MAXM15062 data sheet provides a complete description of the module that should be read in conjunction with this EV kit data sheet prior to modifying the demo circuit. For full module features, benefits and parameters, refer to the MAXM15062 data sheet.

#### **Features**

- Highly Integrated Solution
- Wide 5.5V to 48V Input Range
- Fixed 3.3V Output, Delivers Up To 300mA Output Current
- High 80.46% Efficiency (V<sub>IN</sub> = 24V, V<sub>OUT</sub> = 3.3V at 150mA)
- 500kHz Switching Frequency
- ENABLE/UVLO Input, Resistor-Programmable UVLO Threshold
- PFM Feature for Better Light-Load Efficiency
- Fixed Internal 4.1ms Soft-Start Time
- RESET Output, with Pullup Resistor to V<sub>CC</sub>
- Overcurrent and Overtemperature Protection (OCP and OTP)
- Low-Profile, Surface-Mount Components
- Proven PCB Layout
- Fully Assembled and Tested
- Complies with CISPR22(EN55022) Class B Conducted and Radiated Emissions

#### **Quick Start**

#### **Recommended Equipment**

- One 4.5V to 60V, 300mA power supply
- 1W resistive load with 300mA sink capacity
- Four digital multimeters (DMM)
- MAXM15062EVKIT#

#### **Equipment Setup and Test Procedure**

The EV kit is fully assembled and tested. Follow the steps below to verify the board operation.

# Caution: Do not turn on power supply until all connections are completed.

- 1) Set the power supply at a voltage between 4.5V and 60V. Then, disable the power supply.
- 2) Connect the positive terminal of the power supply to the VIN PCB pad and the negative terminal to the nearest GND PCB pad. Connect the positive terminal of the 300mA load to the VOUT PCB pad and the negative terminal to the nearest GND PCB pad.
- Connect the DVM (DMM in voltage-measurement mode) across the VOUT PCB pad and the nearest GND PCB pad.
- 4) Verify that shunt is not installed on jumper J1 (see Table 1 for details).
- 5) Turn on the DC power supply.
- 6) Enable the load.
- 7) Verify that the DVM displays 3.3V.

Ordering Information appears at end of data sheet.



#### **Detailed Description**

The MAXM15062 EV kit is designed to demonstrate salient features of MAXM15062 power module. The EV kit includes an EN/UVLO PCB pad, and jumper J1, to enable the output at a desired input voltage. Jumper J2 allows selection of either PWM or PFM mode of operation based on light-load performance requirements. An additional RESET pad is available for monitoring if the converter output voltage is in regulation.

#### **Output Capacitor Selection**

X7R ceramic output capacitors are preferred due to their stability over temperature in industrial applications. The required output capacitor (C5) for 3.3V output is selected from Table 1 of the <u>MAXM15062</u> data sheet as  $10\mu$ F/6.3V.

#### **Fixed Output Voltage**

The MAXM15062 is a fixed 3.3V output module. Connect FB of MAXM15062 directly to  $V_{OUT}$  for feedback control.

# Enable/Undervoltage-Lockout (EN/UVLO) Programming

The MAXM15062 offers an adjustable input undervoltagelockout feature. In this EV kit, for normal operation, leave jumper J1 open. When J1 is left open, the MAXM15062 is enabled when the input voltage rises above 5.4V. To disable MAXM15062, install a jumper across pins 2-3 on J1. See <u>Table 1</u> for J1 settings. A potential divider formed by R1 and R2 sets the input voltage (V<sub>INU</sub>) at which the module is enabled. The value of resistor R1 is chosen to be 2.2MΩ, and R2 is calculated using the following equation:

$$R_2 = \frac{R_1 \times 1.215}{(V_{\rm INU} - 1.215)}$$

where R1 and R2 are in  $k\Omega$ ,

For MAXM15062 to turn on at 5.4V input, the Resistor R2 is calculated to be  $634k\Omega$ .

## Evaluates: MAXM15062 3.3V Output-Voltage Application

#### **Input Capacitor Selection**

The input capacitor serves to reduce the current peaks drawn from the input power supply and reduces switching frequency ripple at the input. The input capacitance must be greater than or equal to the value given in <u>Table 1</u> of <u>MAXM15062</u> data sheet. Input capacitor C3 is chosen to be  $1\mu$ F/100V.

#### **Electro-Magnetic Interference (EMI)**

Compliance to conducted emissions (CE) standards requires an EMI filter at the input of a switching power converter. The EMI filter attenuates high-frequency currents drawn by the switching power converter, and limits the noise injected back into the input power source.

Use of EMI filter components as shown in Figure 1 in conjunction with the schematic results in lower conducted emissions, below CISPR22 Class B limits. The MAXM15062 EV kit PCB layout is also designed to limit radiated emissions from switching nodes of the power converter, resulting in radiated emissions below CISPR22 Class B limits.

#### Hot-Plug-In and Long Input Cables

The MAXM15062 EV kit PCB provides an optional electrolytic capacitor (C2,  $4.7\mu$ F/100V) to dampen input voltage peaks and oscillations that can arise during hot-plug-in and/or due to long input cables. This capacitor limits the peak voltage at the input of the MAXM15062 power module, when the EV kit is powered directly from a precharged capacitive source or an industrial backplane PCB. Long input cables, between input power source and the EV kit circuit can cause input-voltage oscillations due to the inductance of the cables. The equivalent series resistance (ESR) of the electrolytic capacitor helps damp out the oscillations caused by long input cables. Further, capacitor C1 ( $0.1\mu$ F/100V), placed near the input of the board, helps in attenuating high frequency noise.

POSITION EN/UVLO PIN		MAXM15062_OUTPUT		
Not Installed*	Connected to the center node of resistor-divider R1 and R2.	Programmed to startup at desired input-voltage level.		
1-2	Connected to V <sub>IN</sub>	Enabled if $V_{IN}$ is greater than $V_{IN(MIN)}$ .		
2-3	Connected to GND	Disabled		

 Table 1. UVLO Enable/Disable Configuration (J1)

\*Default position

#### **Mode of Operation**

The MAXM15062 features PFM mode of operation to increase the efficiency at light-load condition. If the MODE pin is left unconnected during powerup, the module operates in PFM mode at light loads. If the MODE pin is connected to GND during power-up, the part operates in constant-frequency PWM mode at all loads. See <u>Table 2</u> for J2 settings.

#### **Internal LDO**


An internal regulator provides a 5V nominal supply to power the internal functions of the module. The output of the linear regulator (V<sub>CC</sub>) should be bypassed with a  $1\mu$ F capacitor C4 to GND.

#### Table 2. Mode of Operation (J2)

POSITION	MODE PIN	
1-2	Operates in PWM mode.	
Not Installed*	Operates in PFM mode at light-load conditions.	

\*Default position

#### **EV Kit Performance Report**

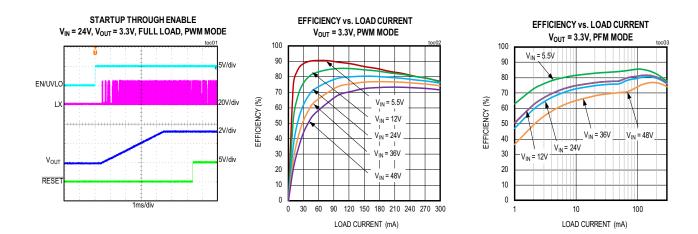

# Evaluates: MAXM15062 3.3V Output-Voltage Application



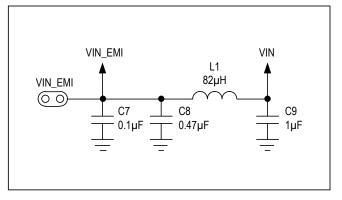



Figure 1. EMI Filter Components


# Evaluates: MAXM15062 3.3V Output-Voltage Application


### **EV Kit Performance Report (continued)**

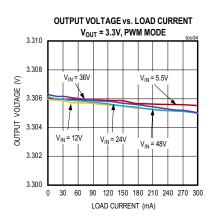


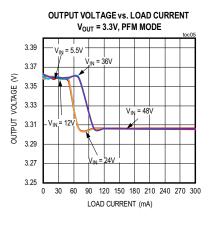


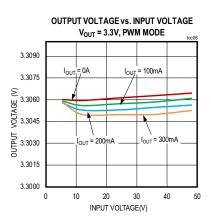


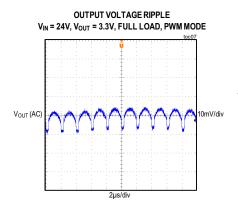


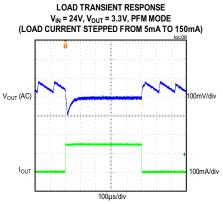




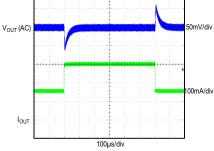

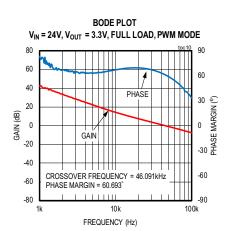

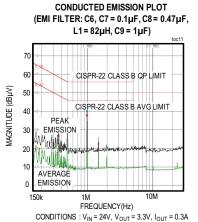

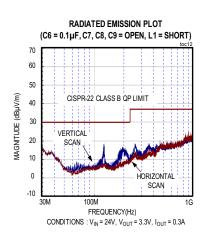

# Evaluates: MAXM15062 3.3V Output-Voltage Application

### **Ordering Information**

PART	TYPE	
MAXM15062EVKIT#	EV Kit	

#Denotes RoHS compliant.

### **Component Suppliers**

SUPPLIER	WEBSITE	
Murata Americas	www.murata.com	
NEC TOKIN America, Inc.	www.nec-tokinamerica.com	
Panasonic Corp.	www.panasonic.com	
SANYO Electric Co., Ltd.	www.sanyodevice.com	
TDK Corp.	www.component.tdk.com	
TOKO America, Inc.	www.tokoam.com	


**Note:** Indicate that you are using the MAXM15062 when contacting these component suppliers.

ITEM	QTY	DESIGNATION	DESCRIPTION	MANUFACTURER PARTNUMBER-1	MANUFACTURER PARTNUMBER-2
1	1	C1	0.1µF±10%,100V, X7R ceramic capacitor (0603)	MURATA GRM188R72A104KA35	
2	1	C2	4.7µF±20%,100V, Aluminimum Capacitor	NICHICON UUR2A4R7MCL6GS	
3	1	C3	1µF±10%,100V, X7R ceramic capacitor (1206)	MURATA GRM31CR72A105KA01L	TDK C3216X7R2A105K160
4	1	C4	1µF±10%,16V, X7R ceramic capacitor (0603)	MURATA GRM188R71C105KA12	TDK C1608X7R1C105K
5	1	C5	10μF±10%,6.3V, X7R ceramic capacitor (1206)	MURATA GRM31CR70J106K	
6	1	C6	OPEN (OPTIONAL : 0.1µF ±10%, 50V, X7R ceramic capacitor (0603))	Murata GRM188R71H104KA93	
7	1	R1	2.2MΩ ±1% resistor (0402)	VISHAY DALE CRCW04022M20FK	
8	1	R2	634kΩ ±1% resistor (0402)	VISHAY DALE CRCW0402634KFK	
9	1	R3	100kΩ ±1% resistor (0402)	VISHAY DALE CRCW0402100KFK	YAGEO PHICOMP RC0402FR-07100KL
10	1	U1	MAXM15062, 10-pin micro-SLIC Power Module	MAXIM MAXM15062AMB+T	
11	1	L1	OPTIONAL : 82µH Shielded Wirewound Inductor(2016)	Murata LQH2MPN820MGRL	
12	1	C7	OPTIONAL : 0.1µF ±10%,100V, X7R ceramic capacitor (0603)	MURATA GRM188R72A104KA35	
13	1	C8	OPTIONAL : 0.47µF±10%,100V, X7R ceramic capacitor (1206)	Murata GRM31MR72A474KA35L	
14	1	C9	1µF±10%,100V, X7R ceramic capacitor (1206)	MURATA GRM31CR72A105KA01L	TDK C3216X7R2A105K160

#### MAXM15062 3.3V EV Kit Bill of Materials


## Evaluates: MAXM15062 3.3V Output-Voltage Application

### MAXM15062 3.3V EV Kit Schematic

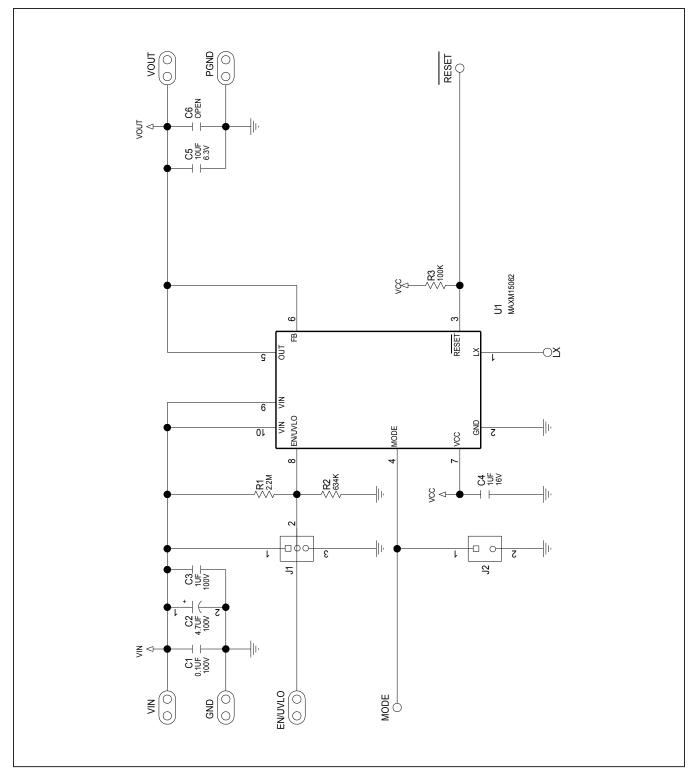


### Evaluates: MAXM15062 3.3V Output-Voltage Application

# MAXM15062 3.3V EV Kit PCB Layout Diagrams

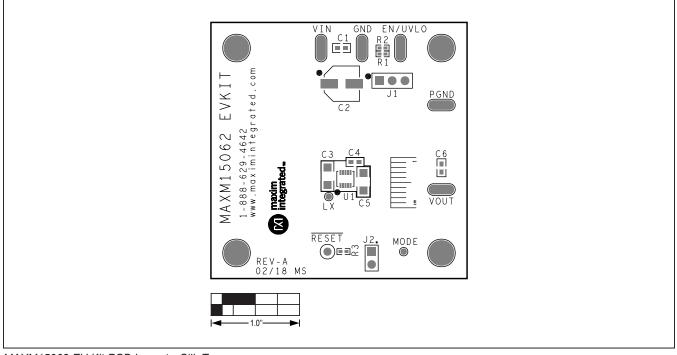


MAXM15062 EV Kit PCB Layout—Silk Top

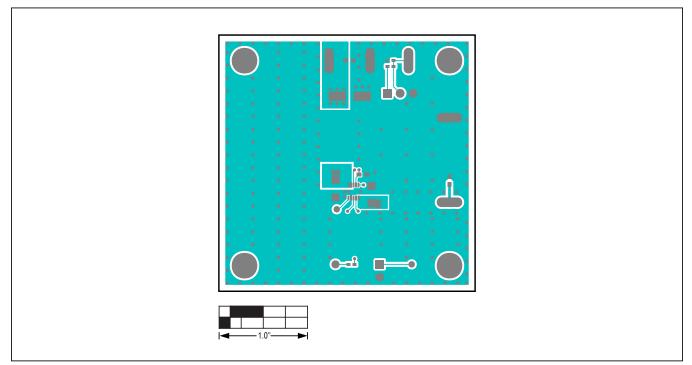


MAXM15062 EV Kit PCB Layout—Top Layer

## Evaluates: MAXM15062 3.3V Output-Voltage Application

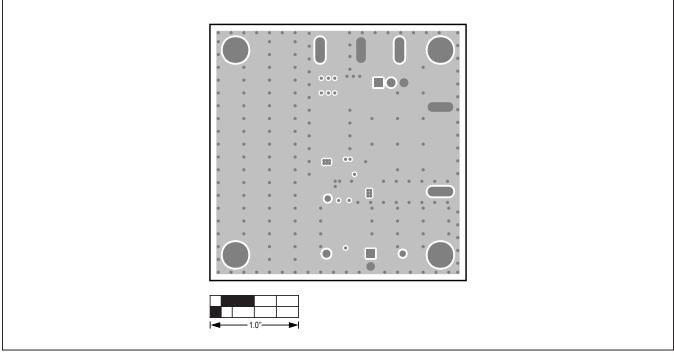


### MAXM15062 3.3V EV Kit PCB Layout Diagrams (continued)

MAXM15062 EV Kit PCB Layout—Layer 2 Ground

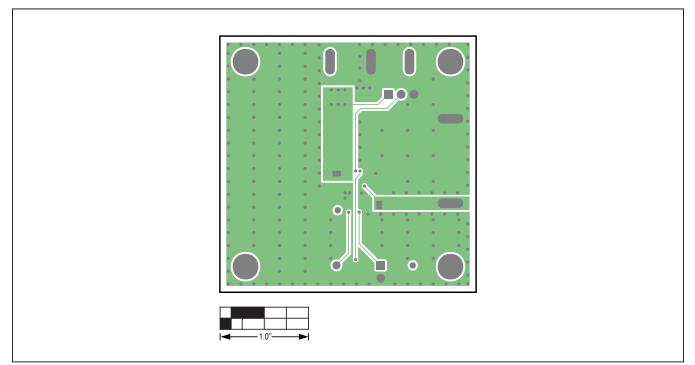

MAXM15062 EV Kit PCB Layout—Layer 3 Power

Evaluates: MAXM15062 3.3V Output-Voltage Application

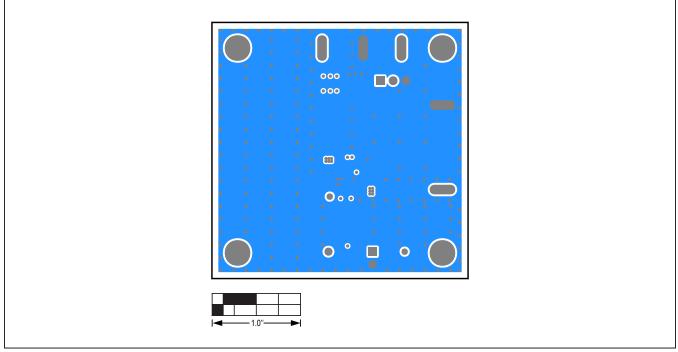

# MAXM15062 3.3V EV Kit PCB Layout Diagrams (continued)

MAXM15062 EV Kit PCB Layout—Bottom Layer

### Evaluates: MAXM15062 3.3V Output-Voltage Application

#### **Revision History**

REVISION	REVISION	DESCRIPTION	PAGES
NUMBER	DATE		CHANGED
0	3/19	Initial release	—

For pricing, delivery, and ordering information, please visit Maxim Integrated's online storefront at https://www.maximintegrated.com/en/storefront.html.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time.

# **Mouser Electronics**

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Maxim Integrated: MAXM15062EVKIT#