

# **WF121 Wi-Fi MODULE**

## **DATA SHEET**

Thursday, 30 September 2021

Version 2.0.1



## VERSION HISTORY

Version	Comment
1.0	First version
1.1	FCC and IC information added
1.2	WF121-N layout guide
1.3	Added power consumption measurements, regulatory info and some corrections
1.4	Added unassociated idle consumption and a chapter about power saving modes
1.4.1	Added CE information
1.4.2	Removed details from the regulatory info
1.4.3	Corrected typos in the pad function tables
1.4.4	Reduced the list of supported coexistence schemes
1.4.5	Added links to Microchip reference guide, some notes on the coexistence
1.4.6	Added inversion notices to RTS/CTS for unambiguity
1.4.7	Added notes on the USB data pins GPIO use being input only to pin function table
1.4.8	Added note on the engineering sample order codes
1.4.9	Additions to power supply description, rewrote power consumption section
1.4.10	Removed references to parallel port and C-libraries
1.4.11	Added recommendations for unconnected GPIO pins
1.4.12	Added notes on Ethernet PHY, various small edits
1.5	Design guidelines, supply voltage limitations
1.5.1	Fixed typos & support/sales contact information
1.5.2	CE info updated
1.5.3	Added possibility for different crystal frequencies

1.5.4	Added USB example schematic
1.5.5	Corrections to Firmware section
1.5.6	Noted UART channel limitations, SPI BGAPI limitations
1.5.7	Correction to Reset chapter
1.5.8	Maximum SPI data rate updated
1.5.9	Added notes on Ethernet and 32kHz clock sections
1.5.10	Added a note on UART host bus flow control and clarified SPI host bus notify signal description
1.5.11	Corrected pinout drawing, TX power table
2.0.0	Removed mentions of UART4,5 and Coexistence, updates to current consumption figures, updated latest CE standard versions. Changed contact information and URLs from Bluegiga to Silicon Labs
2.0.1	Updated UART maximum baud rate information

## TABLE OF CONTENTS

1	Design guidelines .....	7
2	Ordering Information.....	8
3	Pin-out and Terminal Descriptions .....	9
4	Power control.....	12
4.1	Power supply requirements .....	12
4.2	Power saving functionality .....	12
4.3	Reset.....	13
5	Interfaces.....	14
5.1	General Purpose I/O pins .....	14
5.2	Serial ports.....	14
5.3	I <sup>2</sup> C/SPI .....	15
5.4	USB.....	15
5.5	Ethernet .....	16
5.6	Analog inputs .....	17
5.7	Microcontroller programming interface .....	17
5.8	RF Debug Interface .....	18
5.9	CPU Clock .....	18
5.10	32.768 kHz External Reference Clock.....	19
6	Block diagram.....	20
7	Example schematics.....	21
8	802.11 Radio .....	22
8.1	Wi-Fi Receiver .....	22
8.2	Wi-Fi Transmitter .....	22
8.3	Regulatory domains.....	22
9	Firmware.....	23
10	Host interfaces.....	24
10.1	UART .....	24
10.2	USB.....	24
10.3	SPI .....	24
11	Electrical characteristics .....	25
11.1	Absolute maximum ratings .....	25
11.2	Recommended operating conditions .....	25
11.3	Input/output terminal characteristics .....	26
11.4	Digital .....	26
11.5	Reset.....	26
11.6	Power consumption .....	27
12	RF Characteristics .....	29

13	Physical dimensions .....	31
14	Layout guidelines .....	32
14.1	WF121-E.....	32
14.2	WF121-N.....	32
14.3	WF121-A.....	33
14.4	Thermal considerations .....	34
14.5	EMC considerations.....	34
15	Soldering recommendations.....	36
16	Certifications .....	37
16.1	CE .....	37
16.2	FCC and IC .....	37
16.2.1	FCC et IC .....	39
17	Qualified Antenna Types for WF121-E.....	42

## DESCRIPTION

WF121 is a self-contained Wi-Fi module providing a fully integrated 2.4GHz 802.11 b/g/n radio and a 32-bit microcontroller (MCU) platform, making it an ideal product for embedded applications requiring simple, low-cost and low-power wireless TCP/IP connectivity. WF121 also provides flexible interfaces for connecting to various peripherals.

WF121 allows end user applications to be embedded onto the on-board 32-bit microcontroller using a simple BGScript™ scripting. This cuts out the need of an external MCU and allows the development of smaller and lower-cost products. However, WF121 can also be used in modem-like mode in applications where the external MCU is needed.

With an integrated 802.11 radio, antenna, single power supply, and regulatory certifications, WF121 provides a low-risk and fast time-to-market for applications requiring Internet connectivity. This combined with Silicon Labs's excellent customer service will turn your Internet-of-Things applications into reality.

## APPLICATIONS:

- PoS terminals
- RFID and laser scanners
- Wi-Fi internet radios and audio streaming products
- Wireless cameras
- Video streaming
- Portable navigation devices
- Portable handheld devices
- Wi-Fi medical sensors
- Wireless picture frames

## KEY FEATURES:

- 2.4GHz band IEEE 802.11 b/g/n radio
- Excellent radio performance:
  - TX power: +16 dBm
  - RX sensitivity: -97 dBm
- Host interfaces:
  - 10Mbps UART
  - SPI
  - USB device
- Peripheral interfaces:
  - GPIO, ADC and timers
  - I2C, SPI and UART
  - Ethernet
- Embedded TCP/IP and 802.11 MAC stacks:
  - IP, TCP, UDP, DHCP and DNS protocols
  - BGAPI host protocol for modem like usage
  - BGScript™ scripting language
- 32-bit embedded microcontroller
  - 80MHz, 128kB RAM and 512kB Flash
  - MIPS architecture
- Temperature range: -40°C to +85°C
- Fully CE, FCC, IC, South Korea and Japan qualified


## PHYSICAL OUTLOOK:




**WF121-A**

# 1 Design guidelines

- Make sure that the antenna layout is done exactly as instructed
- Make sure all the ground pads are connected to a ground plane
- A UART interface for the FW updates is recommended
- Make sure the large thermal pad in the module bottom is well tied to a ground plane to optimize heat transfer

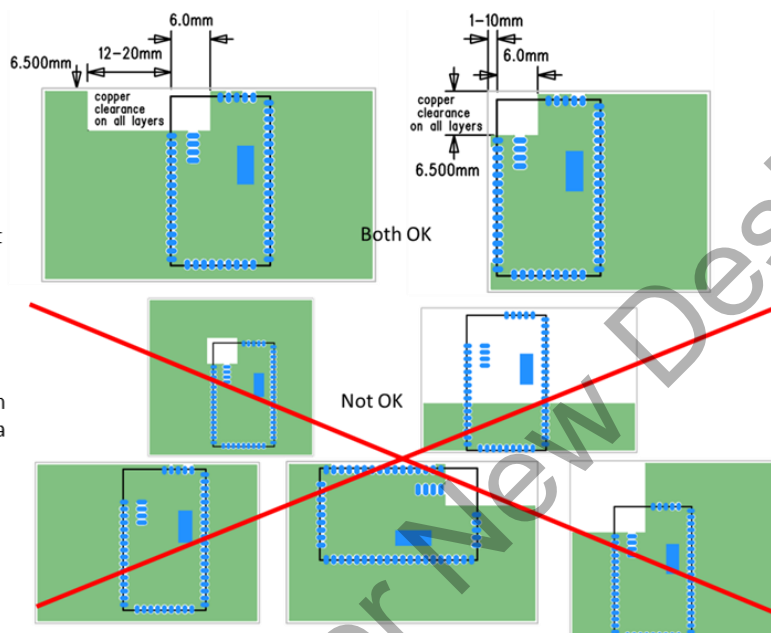

Minimum requirement for the regulator is 500 mA.  
Make sure that the regulator is stable with ceramic output capacitors

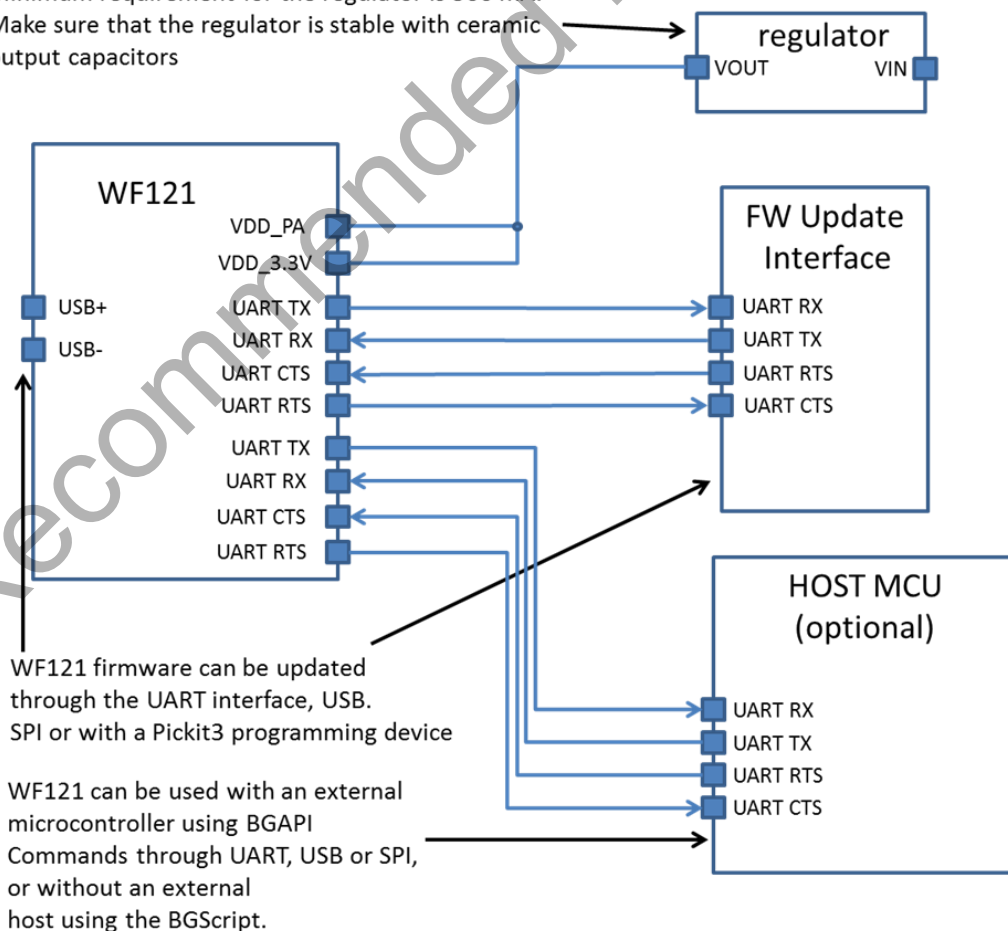

## 2 Ordering Information

Product code	Description
WF121-A	WF121 module with integrated antenna
WF121-E	WF121 module with U.FL connector
WF121-N	WF121 module with RF pin. Non-standard product, so minimum order quantity applies. Please contact sales through: <a href="http://www.silabs.com">www.silabs.com</a>
DKWF121	WF121 development kit

**Note:** Modules with order code ending in –v1 are sold as engineering samples, while those with code –v2 are production units. The difference between the two is in the microcontroller version used, the –v2 version fixes a hardware bug that in some circumstances may cause rare bit errors. The modules differ in outlook in that the –v1 only has the Bluegiga logo and text “WF121” while –v2 versions also have FCC/IC ID codes and CE logo.



### 3 Pin-out and Terminal Descriptions

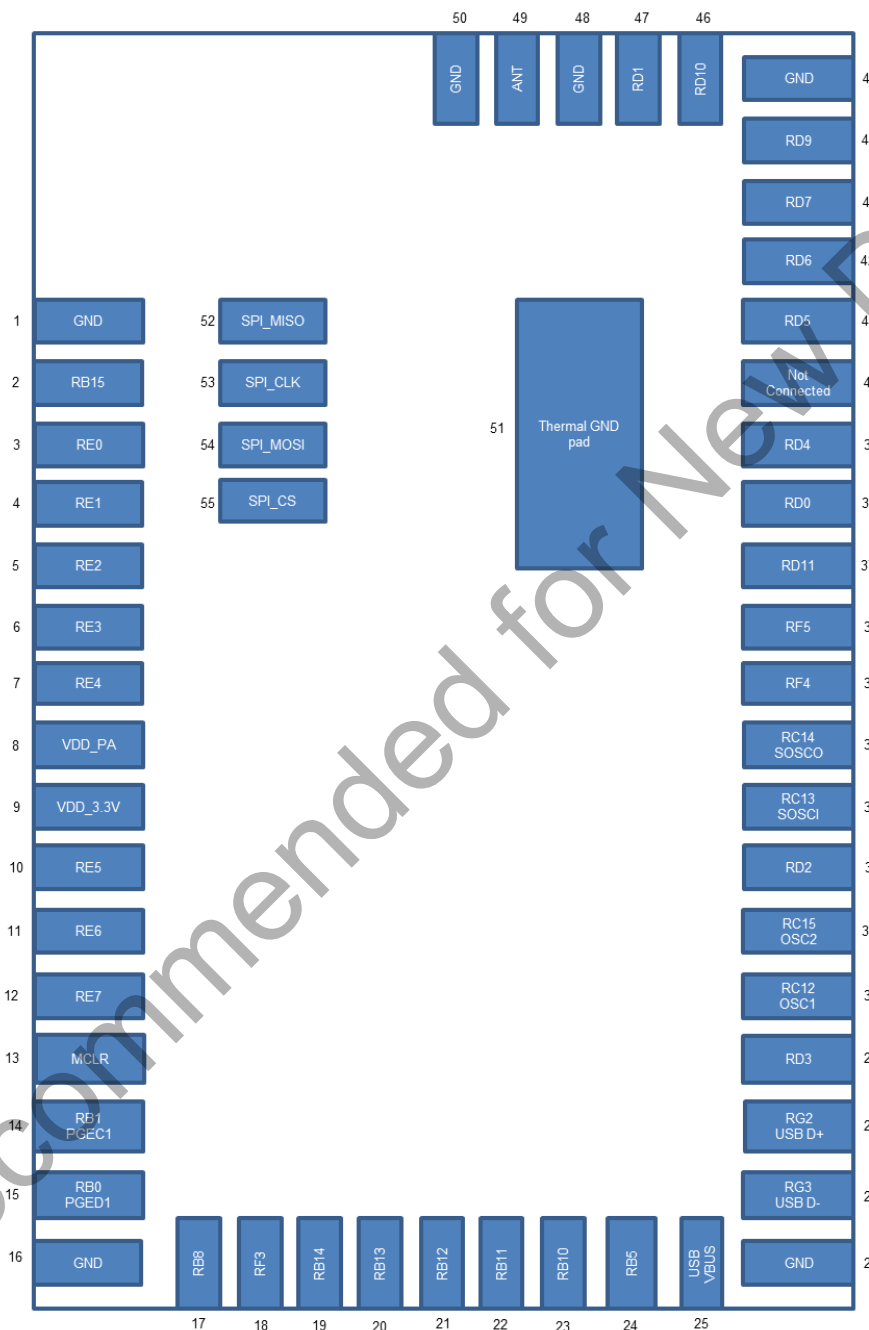


Figure 1: WF121 pinout

Pad number	Function	Description
9	VDD_3.3V	Module power supply
8	VDD_PA	RF power amplifier power supply
1, 16, 26, 45, 48, 50	GND	Ground, connected together internally but should all be connected directly to a solid ground plane
51	GNDPAD	Thermal ground pad, should be connected to a solid ground plane with multiple vias for improved thermal conductance
40	Not Connected	
49	ANT	Antenna connection pad in N variant of the module, in other variants not connected
25	VBUS	USB VBUS input
13	MCLR	Module reset, also used for programming using a Microchip tool. Internal pull-up, can be left floating or connected to ground through a 100nF capacitor for delayed power-up reset (note: Microchip ICSP programming tools will not work with a capacitor)

**Table 1: Single function pad descriptions**

PAD#	GPIO	I2C	SPI	UART	Ethernet	Timer	USB	Analog	Prog.	Other
2	RB15 CN12				EMDC	OCFB		AN15		
3	RE0				ERXD1					
4	RE1				ERXD0					
5	RE2				ECRSDV					
6	RE3				EREFCLK					
7	RE4				ERXERR					
10	RE5				ETXEN					
11	RE6				ETXD0					
12	RE7				ETXD1					
14	RB1 CN3							AN1	PGEC1	
15	RB0 CN2							AN0	PGED1	
17	RB8		SS4	nU2CTS		C1OUT		AN8		
18	RF3						OTG_ID			
19	RB14		SCK4	nU2RTS				AN14		
20	RB13							AN13	TDI	
21	RB12							AN12	TCK	
22	RB11							AN11	TDO	
23	RB10							AN10	TMS	
24	RB5 CN 7						VBUSON	AN5		
27	RG3 (input)						D-			
28	RG2 (input)						D+			
29	RD3	SCL3	SDO3	U1TX		OC4				
30	RC12									OSC1
31	RC15									OSC2
32	RD2	SDA3	SDI3	U1RX		OC3				
33	RC13 CN 1									SOSCI
34	RC14 CN0					T1CK				SOSCO
35	RF4 CN17	SDA5	SDI4	U2RX						
36	RF5 CN18	SCL5	SDO4	U2TX						
37	RD11 INT4					IC4				
38	RD0 INT0					OC1				
39	RD4					IC5/OC5				
41	RD5									
42	RD6 CN15				ETXERR					
43	RD7 CN16									
44	RD9 INT2	SDA1	SS3	nU1CTS		IC2				
46	RD10 INT3	SCL1				IC3				
47	RD1		SCK3	nU1RTS	EMDIO	OC2				

**Table 2: Multifunction pad descriptions**

**Note:** 5V tolerant pads are marked with orange. CN pins support pull-up, pull-down and GPIO notifications

**Note:** Unused pins should be set up as outputs to reduce leakage currents

## 4 Power control

### 4.1 Power supply requirements

WF121 consists of two separate internal blocks, the microcontroller and the radio part. The blocks have separate supply voltage inputs and the microcontroller can disable the radio part supply internally.

WF121 is designed to operate with a 3.3V nominal input voltage supplied to the two supply inputs. The VDD\_3.3V pad can be fed with a voltage between 2.3V and 3.6V and is used to power the internal microcontroller. However, when the VDD\_3.3V line is below 3.0V, the microcontroller can no longer write to its internal flash memory, and is incapable of updating any settings. The VDD\_PA pad can be supplied with a voltage between 2.7V and 4.8V and supplies the RF power amplifier and the internal switch-mode converter powering the Wi-Fi digital core.

In lithium battery powered applications, VDD\_PA can be connected directly to the battery, while a regulator is needed to supply the VDD\_3.3V with a lower voltage, as needed by the design.

The VDD\_PA supply should be capable of providing at least 350mA, though the average consumption of the module will be much less than that. The VDD\_3.3V supply will draw a peak current of less than 100mA, not including current drawn from the GPIO pins. The PA supply should preferably be bypassed with a 10 to 100µF capacitor to smooth out the current spikes drawn by the Wi-Fi power amplifier, unless powered by a sufficiently fast regulator. Other bypass capacitors are not needed for either supply line, the module contains the needed supply filtering capacitors.

Note that there are about 20µF worth of ceramic capacitors on the VDD\_PA line inside the module. When using low drop linear regulators (LDO) to generate a regulated supply for the VDD\_PA line, the stability of the regulator with the low ESR provided by these capacitors should be checked. Many linear regulators (and some switched mode ones) are not stable with ceramic output capacitors.

### 4.2 Power saving functionality

In Wi-Fi client mode, the WF121 radio core automatically powers on the RF circuitry only when needed. The Wi-Fi core processors support automatic sleep modes when not communicating actively, allowing very low idle consumption. When used as an access point, the radio core must receive constantly and cannot enter sleep modes.

The WF121 main processor automatically enters an idle mode after a timeout period whenever it is not actively executing anything, lowering its consumption to about a third of the full while allowing instant wakeup. When the power saving functions are enabled in the hardware configuration script, the processor will after a pre-set timeout enter a deeper sleep mode to lower the consumption to much lower levels, but will take a few milliseconds to wake up from and needs an interrupt to wake up.

In applications where small amounts of data are transferred often, consumption can be optimized by collecting data into bigger packages and transferring it in a single burst. As every data transfer is followed by a timeout before sleep modes are entered, reducing the number of individual transfers will reduce average consumption.

Keeping the WF121 associated with an access point with the power saving modes enabled will allow relatively fast response times with a low power consumption, but in some applications the consumption can be reduced further. Unassociating the Wi-Fi will allow fast re-association with lower idle consumption in applications where the module needs to transfer data only occasionally, while for applications where the absolute minimum consumption is desired and the communication intervals are long, the Wi-Fi section of the module can be fully powered off by disabling the module internal switch mode converter feeding the Wi-Fi core. Powering the Wi-Fi down fully will require a full reinitialization of the Wi-Fi core, and will take several seconds before associating with an access point.

The power saving modes are user configurable and controllable. For more information see the firmware documentation.

### 4.3 Reset

WF121 can be reset by the MCLR-pin (active low), system power up or the internal brown-out detector.

Not Recommended for New Designs

## 5 Interfaces

### 5.1 General Purpose I/O pins

To see which GPIOs are multiplexed with which features, please refer to **Table 2**.

WF121 contains a number of pads that can be configured to be used as general purpose digital IO's, analog inputs or for various built-in functions. Provided functions include a Full Speed USB-OTG port, three I2C-ports, two SPI-ports, two UART's, Ethernet MAC with RMII connection and various timer functions. Some of the pads are 5V tolerant. All GPIO pads can drive currents of up to +/- 25 mA.

Note: In any application, GPIO pins not reserved for a certain function and not driven to some known state by outside circuitry should be set up as outputs by the application software. Only the Change Notice (CN) capable pins have pullup capability, and if the rest of the pins are left as inputs, they will be floating at a voltage between ground and supply voltage, causing increased module power consumption due to leakages.

### 5.2 Serial ports

Pad number	UART 1	UART 2
17		nCTS
19		nRTS
29	TX (output)	
32	RX (input)	
35		RX
36		TX
44	nCTS (input)	
47	nRTS (output)	

**Table 3: Serial port pads**

Two UARTs are provided with RTS/CTS-handshaking. Wired speeds up to 20 Mbps are possible, but the higher bit rates (above 115200 bps) will require the use of an external crystal on OSC1/OSC2 for sufficient clock accuracy. The serial ports can also be used as host connections when using an external microcontroller.

To see what other functions are present on the same pins, please refer to **Table 2**.

### 5.3 I<sup>2</sup>C/SPI

Pad number	I <sup>2</sup> C	SPI
17		SS4 – Slave select SPI 4
19		SCK4 - Clock SPI 4
29	SCL3 – Clock I <sup>2</sup> C 3	SDO3 – Data out SPI 3
32	SDA3 – Data I <sup>2</sup> C 3	SDI3 – Data in SPI 3
35	SDA5 – Data I <sup>2</sup> C 5	SDI4 – Data in SPI 4
36	SCL5 – Clock I <sup>2</sup> C 5	SDO4 – Data out SPI 4
44	SDA1 – Data I <sup>2</sup> C 1	SS3 – Slave select SPI 3
46	SCL1 – Clock I <sup>2</sup> C 1	
47		SCK3 – Clock SPI 3

**Table 4: Pads for I2C and SPI**

Up to three I<sup>2</sup>C-ports and up to two SPI ports can be implemented, mostly multiplexed on the same pins together and with the UART signals. The I<sup>2</sup>C ports support 100 kHz and 400 kHz speed specifications including automatic clock stretching, while the SPI can be operated at up to 20 Mbps. The SPI ports are also available for use as a host connection for use with an external microcontroller. The SPI bus can be configured for any clock phase combination.

For details on the SPI/I2C hardware, please refer to Microchip documentation on [SPI](#) and [I2C](#).

To see what other functions are present on the same pins, please refer to **Table 2**.

### 5.4 USB

Pad number	Function	Description
18	OTG_ID	USB-OTG mode identify line (not used)
25	VBUS	USB bus supply input
27	D-	Data -
28	D+	Data +
24	VBUSON	USB bus supply switch enable (not used)

**Table 5: USB pads**

The module contains a USB-OTG system with an integrated transceiver. Full Speed (12 Mbps) USB 2.0 standard is supported in device mode. The current firmware has no support for the host mode.

Using the USB connection requires an external crystal on OSC1/OSC2 for sufficient clock accuracy. Other functions are present on the same pins; please refer to **Table 2** for details.

## 5.5 Ethernet

Pad number	Function	Description
2	EMDC	Management bus clock
3	ERXD1	Receive data 1
4	ERXD0	Receive data 0
5	ECRSDV	Receive data valid
6	EREFCLK	Reference clock
7	ERXERR	Receive error
10	ETXEN	Transmit enable
11	ETXD0	Transmit data 0
12	ETXD1	Transmit data 1
42	ETXERR	Transmit error
47	EMDIO	Management bus data

**Table 6: Ethernet pads**

An RMII interface to an external Ethernet PHY is available. The PHY should supply EREFCLK with a 50 MHz RMII reference clock. Other functions are present on the same pads; please refer to **Table 2** for details.

The current firmware contains support for using a Micrel PHY type KSZ8081RNA (the evaluation board schematic shows the fully compatible but now obsolete KSZ8031RNL) to implement a 10/100Mbps Ethernet connection and using it as an endpoint, allowing data to be streamed from and to the Wi-Fi interface or other end points.

Ethernet MAC-to-MAC connection is also supported using an Ethernet switch chip.

### Notices:

If MDIO is not required, place a 1-10 kohm pull-up resistor on the EMDIO line and don't wire it to Ethernet chip.

An RMII bus clock (50 MHz) must be fed to EREFCLK from an external clock source, Ethernet PHY or from an Ethernet switch chip.



## 5.6 Analog inputs

Pad number	Function
2	AN15
14	AN1
15	AN0
17	AN8
19	AN14
20	AN13
21	AN12
22	AN11
23	AN10
24	AN5

**Table 7: ADC pads**

The microcontroller provides a 10-bit Analog to digital converter (ADC) with sampling speeds up to 1MSps. The measurement can be done on any of the input pins listed in the table above.

## 5.7 Microcontroller programming interface

Pad number	Pad function	Description
13	MCLR	Reset
14	PGEC1	Programming Clock
15	PGED1	Programming Data
20	TDI	JTAG Test Data In
21	TCK	JTAG Test Clock
22	TDO	JTAG Test Data out
23	TMS	JTAG Test Machine State

**Table 8: Programming and JTAG pads**

An ICSP (In-Circuit Serial Programming) interface (PGEC1, PGED1, MCLR) is provided to allow device re-flashing using a Microchip tool. A JTAG connection is also provided which can be used for system debugging purposes or device programming. For information on JTAG operation, please refer to Microchip documentation.

## 5.8 RF Debug Interface

Pad number	Pad function	Description
52	SPI_MISO	RF Debug data out
53	SPI_CLK	RF Debug clock
54	SPI_MOSI	RF Debug data in
55	SPI_CS	RF Debug chip select

**Table 9: RF Debug SPI pads**

Four pads are provided for the debug interface of the WiFi chipset in the module bottom. This is meant for RF calibration and testing during module production and product certification measurements. These should in most applications be left unconnected but should be taken into account when doing the application board layout. Avoid placing vias or signals without a solder mask under these pads. If separate radiated emission compliance measurements need to be made for the application, these should be connected to a header. More information on the certification measurements can be obtained from support via <http://www.silabs.com/>.

## 5.9 CPU Clock

Pad number	Function	Description
30	OSC1	External crystal input
31	OSC2	External crystal output

**Table 10: Clock crystal pads**

WF121 uses an internal 26 MHz crystal as the WiFi reference clock. The internal processor uses an integrated 8 MHz RC oscillator and associated phase locked loop (PLL) to create its clock signals, but cannot share the internal crystal-stabilized WiFi clock. The internal CPU uses a PLL to create an 80 MHz core clock.

To use the USB functionality or when using the UART with speeds above 115.2 kbps, an external crystal and the associated capacitors must be connected to pads OSC1 and OSC2 to provide a sufficiently accurate clock. Typically the load capacitors should be 22 to 33 pF. If an external crystal is not needed, these pads are available for GPIO use.

For firmware versions lower than 1.3, the external crystal frequency must be 8 MHz, for version 1.3 and later, the frequency should be a multiple of 4 MHz, with a maximum frequency of 24 MHz. The desired frequency can be set in the hardware configuration file and programmed to the module with the firmware.

Due to the protected nature of the oscillator divider settings, the crystal frequency cannot be programmed using the DFU interface. A PICKit3 or other PIC32 compatible programmer is required.

The WF121 with the default settings will detect the presence of an 8 MHz crystal and will use that, or if missing, will automatically use the internal RC oscillator. If the crystal frequency is set to a different frequency in the hardware configuration file, the autodetect will be disabled.

The Ethernet connection requires the external PHY to provide the 50 MHz RMII reference clock. A separate external crystal is not required for the module CPU for Ethernet operation, the internal RC oscillator is sufficient.

## 5.10 32.768 kHz External Reference Clock

Pad number	Function	Description
33	SOSCI	External 32.768 kHz crystal input
34	SOSCO	External 32.768 kHz crystal output

**Table 11: Slow clock crystal pads**

The module contains integrated RC oscillators for sleep timing, one in the WiFi chipset, one in the CPU. The sleep clocks are used to periodically wake up the module while in power save modes. If more accurate timing is required, an external 32.768 kHz crystal and the associated capacitors can be placed to pads SOSCI and SOSCO. If an accurate sleep clock is not needed, the pads are available for GPIO use.


An external oscillator can also be used to generate the sleep clock. The voltage levels should be 3.3V logic level.

This low frequency clock is shared for both the CPU and the WiFi chipset. The default WiFi configuration uses only the internal oscillator, if support for a crystal stabilized WiFi sleep clock is required, please contact Silicon Labs technical support.

The Wi-Fi packet timing during active data transfer is derived from the internal 26MHz crystal and so is unaffected by the tolerances of the sleep clock.

**Notice:** If the module internal RTC (Real Time Clock) is in use, the External Reference Clock is mandatory. Initializing the RTC without a 32kHz crystal connected will cause the module to freeze while waiting for the oscillator to start up.

## 6 Block diagram

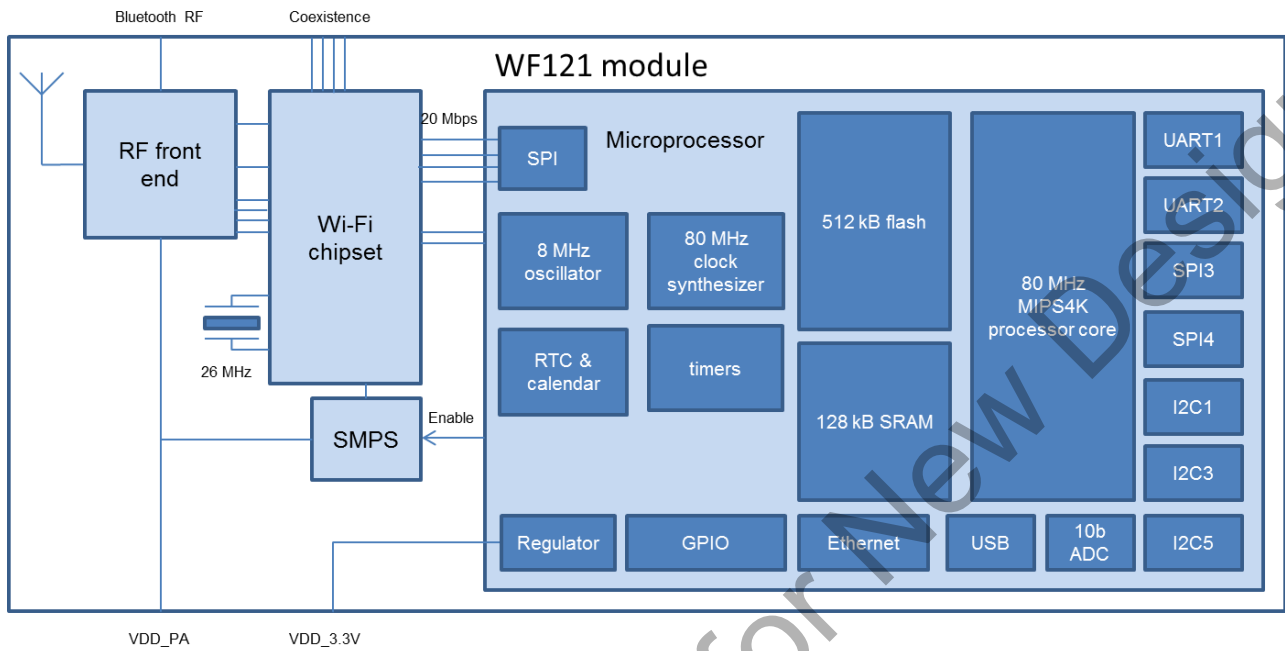

## 7 Example schematics

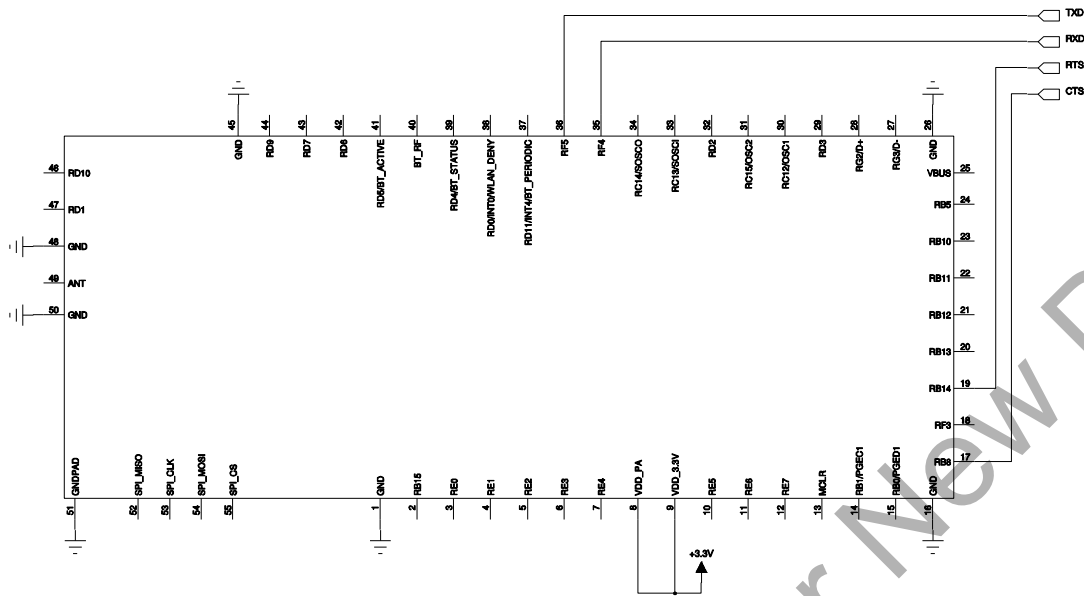


Figure 2: Minimal system required for UART host connection

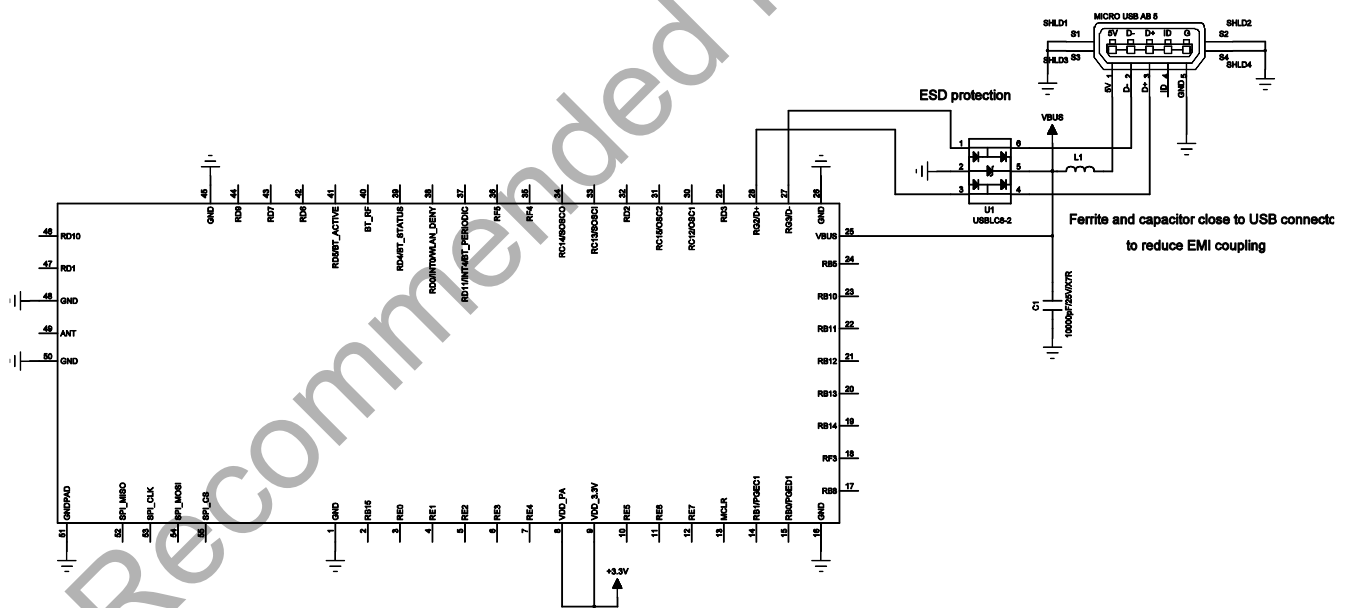


Figure 3: Recommended connections as a USB device. If permanently connected to a hub on the same board, the ESD protection and ferrite can be left out and VUSB can be permanently tied to a supply voltage

## 8 802.11 Radio

### 8.1 Wi-Fi Receiver

The receiver features direct conversion architecture. Sufficient out-of-band blocking specification at the Low Noise Amplifier (LNA) input allows the receiver to be used in close proximity to GSM and WCDMA cellular phone transmitters without being desensitized. High-order baseband filters ensure good performance against in-band interference.

### 8.2 Wi-Fi Transmitter

The transmitter features a direct IQ modulator. Digital baseband transmit circuitry provides the required spectral shaping and on-chip trims are used to reduce IQ modulator distortion. Transmitter gain can be controlled on a per-packet basis, allowing the optimization of the transmit power as a function of modulation scheme.

The internal Power Amplifier (PA) has a maximum output power of +15dBm for IEEE 802.11g/n and +17dBm for IEEE 802.11b. The module internally compensates for PA gain and reference oscillator frequency drifts with varying temperature and supply voltage.

### 8.3 Regulatory domains


WF121 uses the IEEE 802.11d standard to select the available channels based on the regulatory domain setting of the access point, if enabled. If no domain information is available, WF121 will default to using FCC channel list.

## 9 Firmware

WF121 incorporates firmware which implements a full TCP/IP stack and Wi-Fi management. Exact features will depend on the firmware version used. Please see the documentation of the firmware for exact details.

There are two main ways to use the module: Host controlled, and script controlled.

Host controlled means an external host is physically connected to the module and it sends simple commands to the module and one of several different host interfaces can be used. The module provides high level APIs for managing Wi-Fi as well as data connections. Silicon Labs provides a thin API layer (BGLib) written in ANSI C for the host which can take care of creating and parsing the messages sent over the transport. For evaluation purposes GUI tools and a library for python are also provided.

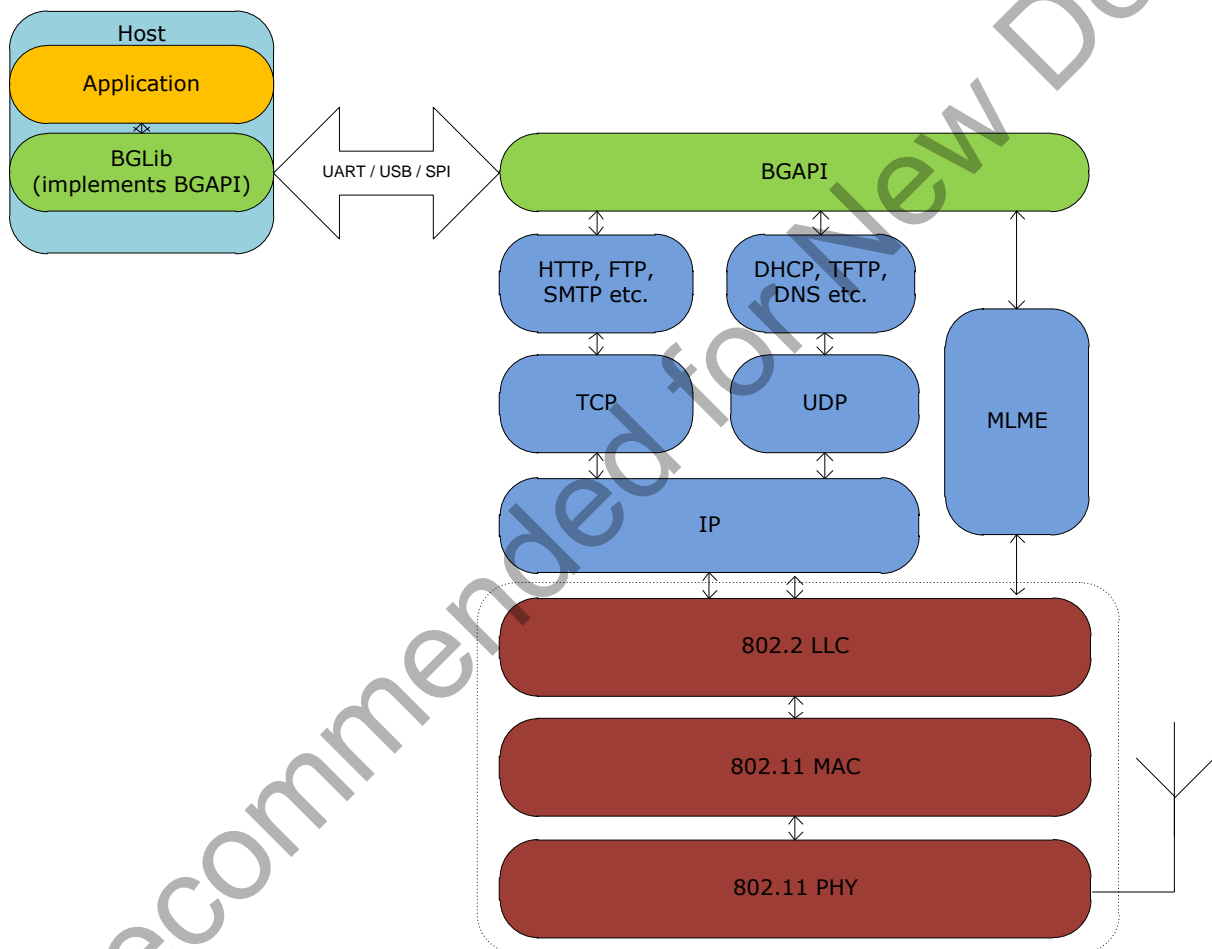

**Figure 4: WF121 software**

Data can be routed either through the API or through another physical interface. For example if the first UART is used for sending and receiving command events, a TCP/IP socket can be bound to the second UART and data written to the UART will seamlessly be passed to the TCP/IP socket. For information about the latest capabilities of the firmware, please refer to the *WF121 API reference documentation* accompanying it.

The module can also be controlled by a script running on the module. This is especially useful for simple applications as it eliminates the need for a host controller and can drastically cut development time. In combination with a host, it can also be used automate certain features such as the serial to TCP/IP functionality described above.

## 10 Host interfaces

### 10.1 UART

The module can be controlled over the UART interface. In order for the communication to be reliable, hardware flow control signals (RTS and CTS) must be present between the host and the module. When using high UART transfer speeds (between 1 and 20Mbps), an external crystal is required on OSC1/OSC2 for sufficient clock accuracy.

When using WF121 UART in transparent mode, we highly recommend using RTS/CTS flow control to avoid the possibility of losing data.

### 10.2 USB

When using the USB host interface, the module will appear as a USB CDC/ACM device enumerating as virtual COM port. The same protocol can be used as with the UART interface.

### 10.3 SPI

Please refer to the Silicon Labs WF121 API reference documentation supplied with the firmware regarding using SPI as the host interface. As SPI does not allow the slave device to signal to the master over the bus unless polled, BGAPI over SPI requires the use of an additional “notify” pin which allows the module to notify the host that an outgoing response or event packet is available.

**Note:** The SPI protocol does not have flow control signaling like UART does, and it is therefore impossible under some circumstances (such as sending very large quantities of data to the module during poor network conditions) to avoid potential data loss due to limited buffer space. If available, the UART interface with hardware RTS/CTS handshaking is recommended for the simplest reliable host control implementation.



## 11 Electrical characteristics

### 11.1 Absolute maximum ratings

Rating	Min	Max	Unit
Storage Temperature	-40	85	°C
VDD_PA	-0.3	6	V
VDD_3.3V	-0.3	3.6	
5V tolerant GPIO Voltages	-0.3	5.5	V
Other Terminal Voltages	VSS-0.3	VDD_3.3V+0.3	V
Maximum output current sourced or sunk by any GPIO pad		25	mA
Maximum current on all GPIO pads combined		200	mA

Table 12: Absolute maximum ratings

### 11.2 Recommended operating conditions

Rating	Min	Max	Unit
Operating Temperature Range *	-40	85	°C
VDD_3.3V	2.3	3.6	V
VDD_3.3V while capable of writing internal flash	3.0	3.6	V
VDD_PA	2.7	4.8	V

Table 13: Recommended operating conditions

**\*Note:** The module may heat up depending on use, at high constant transmit duty cycles (high throughput, low bitrate for more than a few seconds) the maximum operating temperature may need to be derated to keep below the maximum ratings.

### 11.3 Input/output terminal characteristics

### 11.4 Digital

Digital terminals	Min	Typ	Max	Unit
<b>Input voltage levels</b>				
V <sub>IL</sub> input logic level low $1.7V \leq VDD \leq 3.6V$	VSS-0.3V	-	0.15VDD	V
V <sub>IH</sub> input logic level high $1.7V \leq VDD \leq 3.6V$	0.8VDD	-	VDD+0.3V	V
<b>Output voltage levels</b>				
V <sub>OL</sub> output logic level low, Vdd = 3.6 V, I <sub>ol</sub> = 7 mA	-	-	0.4	V
V <sub>OH</sub> output logic level high Vdd = 3.6 V, I <sub>oh</sub> = -12 mA	2.4	-	VDD	V

**Table 14: Digital terminal electrical characteristics**

	Min	Typ	max	
Frequency	32.748	32.768	32.788	kHz
Deviation @25°C	-20		+20	ppm
Deviation over temperature	-150		+150	ppm
Duty cycle	30	50	70	%
Rise time			50	ns
Input high level	0.625Vdd		Vdd+0.3	V
Input low level	-0.3		0.25Vdd	V

**Table 15: External Wi-Fi sleep clock specifications**

### 11.5 Reset

Power-on Reset	Min	Typ	Max	Unit
Power on reset threshold	1.75	-	2.1	V
VDD rise rate to ensure reset	0.05	-	115	V/ms

**Table 16: Power on reset characteristics**

## 11.6 Power consumption

Consumption type	Current	Unit	Supply domain	Description
Total maximum	400	mA	both	Absolute peak current during packet transmission (<5μs)
CPU average	100	mA	VDD_3.3V	Typical average program execution consumption
CPU idle	33	mA	VDD_3.3V	Idle mode, instant wakeup
CPU sleep	40	μA	VDD_3.3V	Sleep mode, clocks off, WDT on, wakeup in milliseconds
Wi-Fi core active	68	mA	VDD_PA	Receiving, transmitting, idle out of deep sleep, AP mode
Wi-Fi core idle	110	μA	VDD_PA	Idle, between packet transfers, automatic deep sleep enabled (in client mode)
Wi-Fi PA	240	mA	VDD_PA	Peak during packet transmission
Wi-Fi LNA	12	mA	VDD_PA	Peak during packet reception
Wi-Fi total sleep	10	μA	VDD_PA	Leakage when fully powered off

**Table 17: Power consumption for different operating modes**

Consumption type	Current	Unit	Description
Transmit consumption	143	mA	Typical average module consumption during full rate data transfer, system does not enter deep sleep due to constant data traffic (Ethernet MAC enabled for testing)
Receive consumption	127	mA	Typical average module consumption during full rate data transfer, system does not enter deep sleep due to constant data traffic
Access point mode	108	mA	Typical average idle current when configured as an AP, does not enter deep sleep due to AP mode requirements
Idle, associated	1.7-10	mA	Typical average with DTIM=1, beacon interval=100ms, including keep-alive traffic and CPU timed wakeups, power saving enabled (typically 1.7mA when no broadcast traffic is present)
Idle, associated	35	mA	Typical average with DTIM=1, beacon interval=100ms, including keep-alive traffic and CPU timed wakeups, power saving disabled
Idle, unassociated	166	µA	Typical sleep current with Wi-Fi chip on and initialized but unassociated. Associating to an access point from this state usually happens in less than a second, depending on DHCP/static IP settings and security options. Peripherals disabled.
Deep Sleep	55	µA	Deep sleep (Wi-Fi power supply disabled internally, CPU sleeping, all peripherals except watchdog and GPIO interrupts off). Waking the Wi-Fi from this state requires reinitialization of the Wi-Fi core and the time from wakeup to access point association can take up to 10 seconds

**Table 18: Typical power consumption, module total**

All average readings are made with a 3.3V power supply, using the DKWF121 board and comparing Fluke 289 True RMS multimeter average readings with oscilloscope derived mode-specific consumption profiles. Measuring currents varying several orders of magnitude within microseconds may give varying results with different instruments and the measurement method should be considered carefully.

Associated idle consumption is heavily dependent on the access point used, the local broadcast traffic, power save timeouts set by the user and enabled peripherals. Transmit and receive consumptions are heavily dependent on the RF field strength and thus the over-air bitrate, which determines the time taken to transfer the required data. WF121 automatically enters power saving modes when not actively transferring data, and the shorter the time taken to transfer data over the Wi-Fi, the more time it can spend in power saving modes.

## 12 RF Characteristics

	min	max	
Channel	1	11 (default), 13 (ETSI)	
Frequency	2412	2472	MHz

**Table 19: Supported frequencies**

Standard	Supported bit rates
802.11b	1, 2, 5.5, 11Mbps
802.11g	6, 9, 12, 18, 24, 36, 48, 54Mbps
802.11n, HT, 20MHz, 800ns	6.5, 13, 19.5, 26, 39, 52, 58.5, 65Mbps
802.11n, HT, 20MHz, 400ns	7.2, 14.4, 21.7, 28.9, 43.3, 57.8, 65, 72.2Mbps

**Table 20: Supported modulations**

802.11b	Typ	802.11g	Typ	802.11n short GI	Typ	802.11n long GI	Typ
1 Mbps	-97 dBm	6 Mbps	-92 dBm	6.5 Mbps	-91 dBm	7.2 Mbps	-92 dBm
2 Mbps	-95 dBm	9 Mbps	-91 dBm	13 Mbps	-87 dBm	14.4 Mbps	-90 dBm
5.5 Mbps	-93 dBm	12 Mbps	-89 dBm	19.5 Mbps	-85 dBm	21.7 Mbps	-87 dBm
11 Mbps	-89 dBm	18 Mbps	-87 dBm	26 Mbps	-82 dBm	28.9 Mbps	-84 dBm
		24 Mbps	-84 dBm	39 Mbps	-78 dBm	43.3 Mbps	-80 dBm
		36 Mbps	-80 dBm	52 Mbps	-74 dBm	57.8 Mbps	-75 dBm
		48 Mbps	-75 dBm	58.5 Mbps	-71 dBm	65 Mbps	-72 dBm
		54 Mbps	-73 dBm	65 Mbps	-68 dBm	72.2 Mbps	-69 dBm

**Table 21: Typical receiver sensitivity**

Modulation type	Typ	
802.11b	+16	dBm
802.11g	+14	dBm
802.11n	+14	dBm

**Table 22: Transmitter output power at maximum setting**


Modulation type	Min	Typ	Max	
TX loss	-2.5	-3	-3.5	dB
RX gain (using internal LNA)	8	10	12	dB
Internal LNA noise figure		2.0	2.5	dB

**Table 23: BT antenna sharing interface properties**


	Typ	Max	802.11 limit (total error)	
Variation between individual units	+/-5	+/-10	+/-25	ppm
Variation with temperature	+/-3	+/-10	+/-25	ppm

**Table 24: Carrier frequency accuracy**

## 13 Physical dimensions

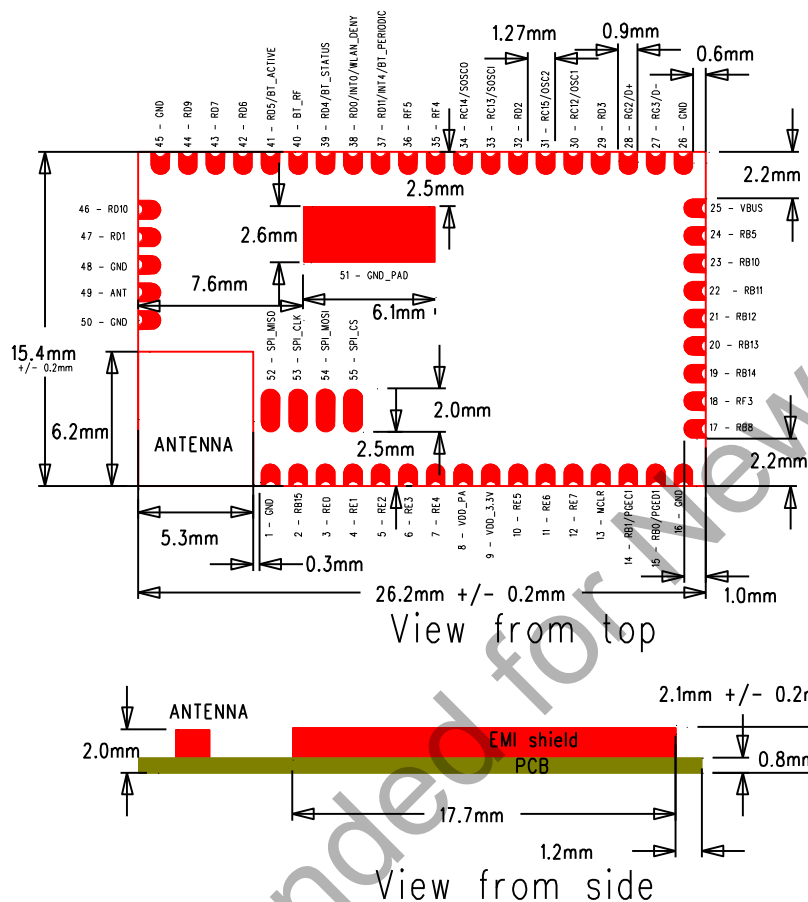

### Figure 5: Physical dimensions

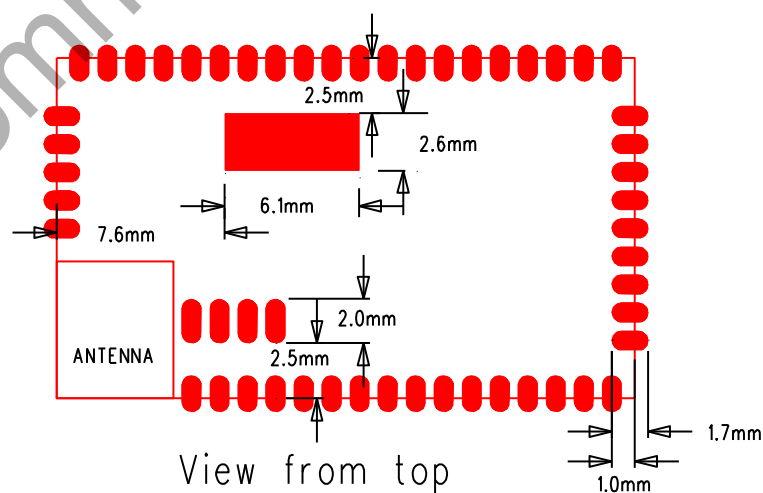

**Figure 6: WF121-A recommended PCB land pattern**

## 14 Layout guidelines

### 14.1 WF121-E

RF output can be taken directly from the U.FL connector of the module, and no antenna clearances need to be made for the module.

### 14.2 WF121-N

The RF output is taken from the ANT pin at the end of the device. In other variants this pin is not connected. The antenna trace should be properly impedance controlled and kept short. Figure 6 shows a typical trace from the RF pin to a SMA connector. A transmission line impedance calculator, such as TX-Line made by AWR, can be used to approximate the dimensions for the 50 ohm transmission line. Figure 7 show cross sections of two 50 ohm transmission lines.

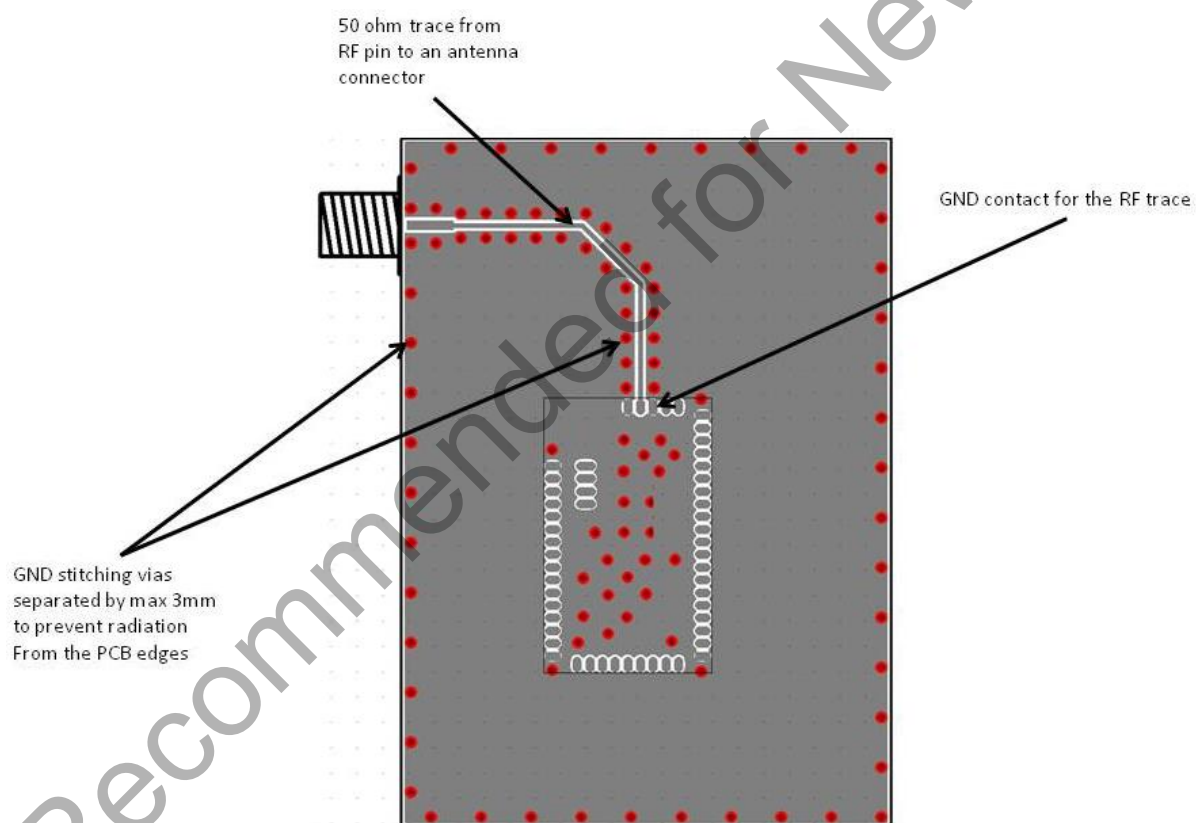


Figure 7: Typical 50 ohm trace from the RF pin to an antenna connector



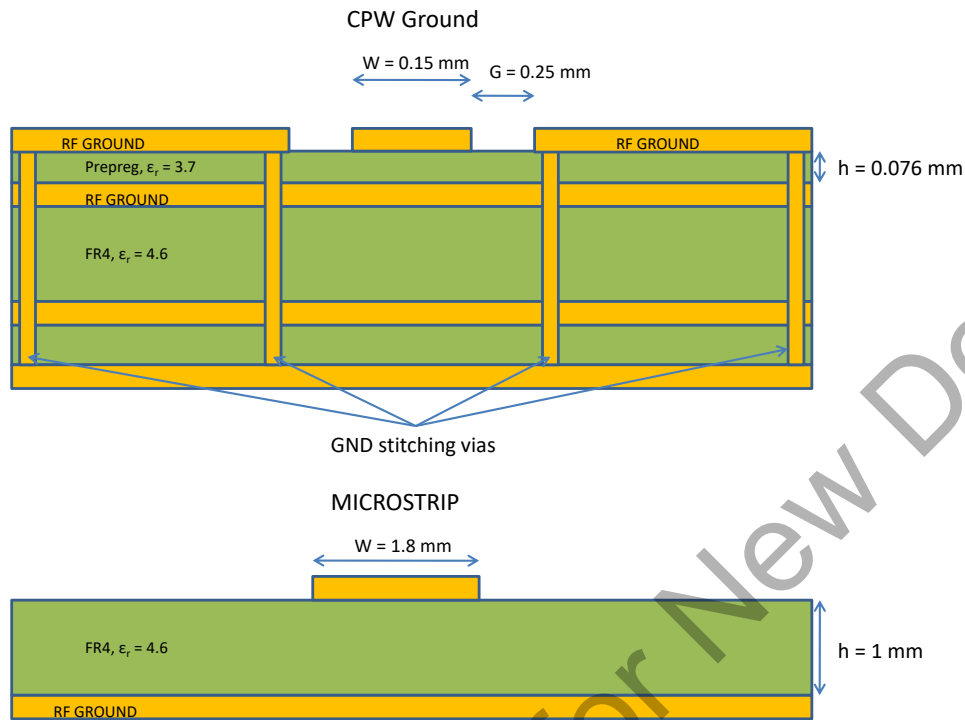


Figure 8: Example cross section of two different 50 ohm transmission line

### 14.3 WF121-A

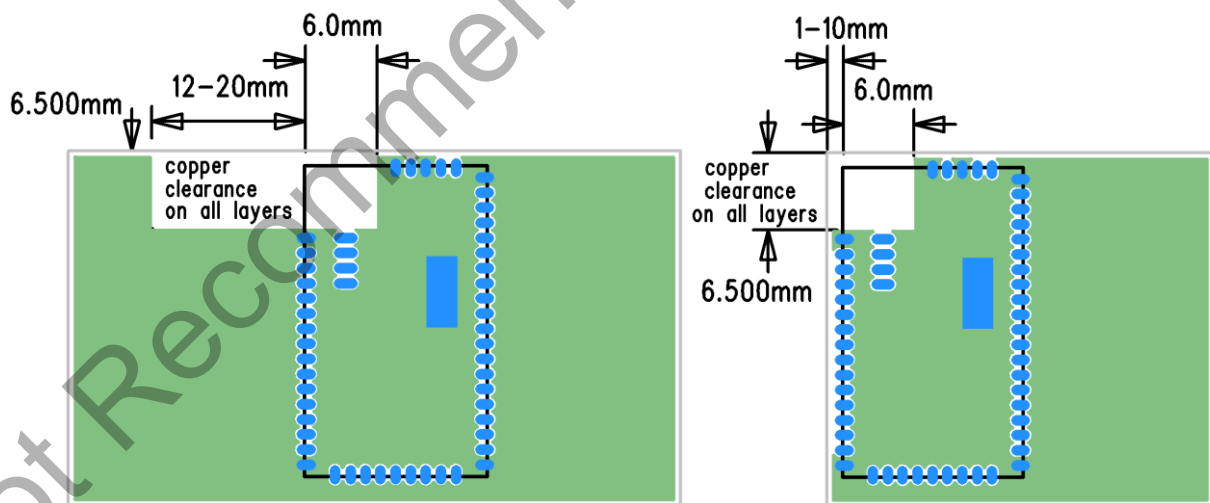


Figure 9: Example layouts, board edge placement on left, board corner on right

The impedance matching of the antenna is designed for a layout similar to the module evaluation board. For an optimal performance of the antenna the layout should strictly follow the layout example shown in the above figures and the thickness of FR4 should be between 1 and 2 mm, preferably 1.6mm.

Any dielectric material close to the antenna will change the resonant frequency and it is recommended not to place a plastic case or any other dielectric closer than 5 mm from the antenna. Close proximity of a plastic case can be somewhat compensated by using a thinner PCB.

ANY metal in close proximity of the antenna will prevent the antenna from radiating freely. It is recommended not to place any metal or other conductive objects closer than 20 mm to the antenna except in the directions of the ground planes of the module itself.

For optimal performance, place the antenna end of the module outside any metal surfaces and objects in the application, preferably on the device corner. The larger the angle in which no metallic object obstructs the antenna radiation, the better the antenna will work.

The ANT pad on the antenna end of the WF121-A can be connected to the ground or left unsoldered.

## 14.4 Thermal considerations

The WF121 module may at continuous full power transmit consume up to 1.3 W of DC power, most of which is drawn by the power amplifier. Most of this will be dissipated as heat. In any application where high ambient temperatures and constant transmissions for more than a few seconds can occur, it is important that a sufficient cooling surface is provided to dissipate the heat.

**The thermal pad in the bottom of the module must be connected to the application board ground planes by soldering.** The application board should provide a number of vias under and around the pad to conduct the produced heat to the board ground planes, and preferably to a copper surface on the other side of the board in order to dissipate the heat into air.

The module internal thermal resistance should in most cases be negligible compared to the thermal resistance from the module into air, and common equations for surface area required for cooling can be used to estimate the temperature rise of the module. **Only copper planes on the circuit board surfaces with a solid thermal connection to the module ground pad will dissipate heat.** For an application with high transmit duty cycles (low bit rate, high throughput, long bursts or constant streaming) the maximum allowed ambient temperature should be reduced due to inherent heating of the module, especially with small fully plastic enclosed applications where heat transfer to ambient air is low due to low thermal conductivity of plastic.


The module measured on the evaluation board exhibits a temperature rise of about 25°C above ambient temperature when continuously transmitting IEEE 802.11b at full power with minimal off-times and no collision detection (a worst case scenario regarding power dissipation). An insufficiently cooled module will rapidly heat beyond operating range in ambient room temperature.

## 14.5 EMC considerations

Following recommendations helps to avoid EMC problems arising in the design. Note that each design is unique and the following list do not consider all basic design rules such as avoiding capacitive coupling between signal lines. Following list is aimed to avoid EMC problems caused by RF part of the module.

- Do not remove copper from the PCB more than needed. For proper operation the antenna requires a solid ground plane with as much surface area as possible. Use ground filling as much as possible. Connect all grounds together with multiple vias. Do not leave small floating unconnected copper areas or areas connected by just one via, these will act as additional antennas and raise the risk of unwanted radiations.
- Do not place a ground plane underneath the antenna. The grounding areas under the module should be designed as shown in Figure 4.
- When using overlapping ground areas use conductive vias separated max. 3 mm apart at the edge of the ground areas. This prevents RF from penetrating inside the PCB. Use ground vias extensively all over the PCB. All the traces in (and on) the PCB are potential antennas. Especially board edges should have grounds connected together at short intervals to avoid resonances.

- Avoid current loops. Keep the traces with sensitive, high current or fast signals short, and mind the return current path, having a short signal path is not much use if the associated ground path between the ends of the signal trace is long. Remember, ground is also a signal trace. The ground will conduct the same current as the signal path and at the same frequency, power and sensitivity.
- Split a ground plane **ONLY** if you know exactly what you are doing. Splitting the plane may cause more harm than good if applied incorrectly. The ground plane acts as a part of the antenna system. Insufficient ground planes or large separate sensitive signal ground planes will easily cause the coupled transmitted pulses to be AM-demodulated by semiconductor junctions around the board, degrading system performance.

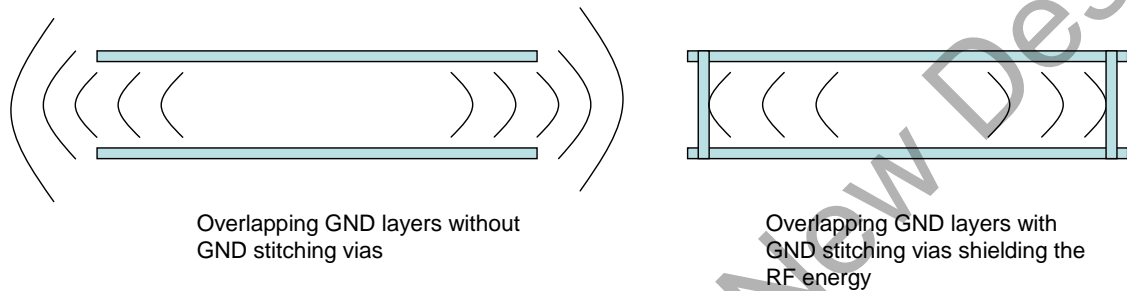

**Figure 10:** Use of stitching vias to avoid emissions from the edges of the PCB

## 15 Soldering recommendations

WF121 is compatible with industrial standard reflow profile for Pb-free solders. The reflow profile used is dependent on the thermal mass of the entire populated PCB, heat transfer efficiency of the oven and particular type of solder paste used. Consult the datasheet of particular solder paste for profile configurations.

The following recommendations apply for soldering the module to ensure reliable solder joint and operation of the module after soldering. Since the profile used is process and layout dependent, the optimum profile should be studied case by case. Thus following recommendation should be taken as a starting point guide.

- Refer to technical documentations of particular solder paste for profile configurations
- Avoid using more than one flow.
- Reliability of the solder joint and self-alignment of the component are dependent on the solder volume. Minimum of 150µm stencil thickness is recommended.
- Aperture size of the stencil should be 1:1 with the pad size.
- A low residue, “no clean” solder paste should be used due to low mounted height of the component.
- If the vias used on the application board have a diameter larger than 0.3mm, it is recommended to mask the via holes at the module side to prevent solder wicking through the via holes. Solders have a habit of filling holes and leaving voids in the thermal pad solder junction, as well as forming solder balls on the other side of the application board which can in some cases be problematic.

## 16 Certifications

WF121 is compliant to the following specifications:

### 16.1 CE

WF121 is in conformity with the essential requirements and other relevant requirements of the R&TTE Directive (1999/5/EC). The product is conformity with the following standards and/or normative documents.

- EMC (immunity only) EN 301 489-17 V.2.2.1 in accordance with EN 301 489-1 V1.9.2
- Radiated emissions EN 300 328 V1.9.1
- Safety standards: EN 60950-1:2006 + A11:2009 + A1:2010 + A12:2011 + A2:2013

### 16.2 FCC and IC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

#### **FCC RF Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This transmitter is considered as mobile device and should not be used closer than 20 cm from a human body. To allow portable use in a known host class 2 permissive change is required. Please contact support at <http://www.silabs.com/> for detailed information.

#### **IC Statements:**

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

#### **If detachable antennas are used:**

This radio transmitter (identify the device by certification number, or model number if Category II) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list,

having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device. See table 25 for the approved antennas for WF121-E and WF121-N.

### **OEM Responsibilities to comply with FCC and Industry Canada Regulations**

The WF121 Module has been certified for integration into products only by OEM integrators under the following conditions:

- The antenna(s) must be installed such that a minimum separation distance of 20cm is maintained between the radiator (antenna) and all persons at all times.
- The transmitter module must not be co-located or operating in conjunction with any other antenna or transmitter.

As long as the two conditions above are met, further transmitter testing will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed (for example, digital device emissions, PC peripheral requirements, etc.).

**IMPORTANT NOTE:** In the event that these conditions cannot be met (for certain configurations or co-location with another transmitter), then the FCC and Industry Canada authorizations are no longer considered valid and the FCC ID and IC Certification Number cannot be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate FCC and Industry Canada authorization.

### **End Product Labeling**

The WF121 Module is labeled with its own FCC ID and IC Certification Number. If the FCC ID and IC Certification Number are not visible when the module is installed inside another device, then the outside of the device into which the module is installed must also display a label referring to the enclosed module. In that case, the final end product must be labeled in a visible area with the following:

**“Contains Transmitter Module FCC ID: QQQWF121”**

**“Contains Transmitter Module IC: 5123A-BGTWF121”**

or

**“Contains FCC ID: QQQWF121”**

**“Contains IC: 5123A-BGTWF121”**

The OEM of the WF121 Module must only use the approved antenna(s) described in table 25, which have been certified with this module.

The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module or change RF related parameters in the user manual of the end product.

**To comply with FCC and Industry Canada RF radiation exposure limits for general population, the antenna(s) used for this transmitter must be installed such that a minimum separation distance of 20cm is maintained between the radiator (antenna) and all persons at all times and must not be co-located or operating in conjunction with any other antenna or transmitter.**

### 16.2.1 FCC et IC

Cet appareil est conforme à l'alinéa 15 des règles de la FCC. Deux conditions sont à respecter lors de son utilisation :

- (1) cet appareil ne doit pas créer d'interférence susceptible de causer un quelconque dommage et,
- (2) cet appareil doit accepter toute interférence, quelle qu'elle soit, y compris les interférences susceptibles d'entraîner un fonctionnement non requis.

#### **Déclaration de conformité FCC d'exposition aux radiofréquences (RF):**

Ce matériel respecte les limites d'exposition aux radiofréquences fixées par la FCC dans un environnement non contrôlé. Les utilisateurs finaux doivent se conformer aux instructions d'utilisation spécifiées afin de satisfaire aux normes d'exposition en matière de radiofréquence. Ce transmetteur ne doit pas être installé ni utilisé en concomitance avec une autre antenne ou un autre transmetteur. Ce transmetteur est assimilé à un appareil mobile et ne doit pas être utilisé à moins de 20 cm du corps humain. Afin de permettre un usage mobile dans le cadre d'un matériel de catégorie 2, il est nécessaire de procéder à quelques adaptations. Pour des informations détaillées, veuillez contacter le support technique: <http://www.silabs.com/>.

#### **Déclaration de conformité IC :**

Ce matériel respecte les standards RSS exempt de licence d'Industrie Canada. Son utilisation est soumise aux deux conditions suivantes :

- (1) l'appareil ne doit causer aucune interférence, et
- (2) l'appareil doit accepter toute interférence, quelle qu'elle soit, y compris les interférences susceptibles d'entraîner un fonctionnement non requis de l'appareil.

Selon la réglementation d'Industrie Canada, ce radio-transmetteur ne peut utiliser qu'un seul type d'antenne et ne doit pas dépasser la limite de gain autorisée par Industrie Canada pour les transmetteurs. Afin de réduire les interférences potentielles avec d'autres utilisateurs, le type d'antenne et son gain devront être définis de telle façon que la puissance isotrope rayonnante équivalente (EIRP) soit juste suffisante pour permettre une bonne communication.

#### **Lors de l'utilisation d'antennes amovibles :**

Ce radio-transmetteur (identifié par un numéro certifié ou un numéro de modèle dans le cas de la catégorie II) a été approuvé par Industrie Canada pour fonctionner avec les antennes référencées ci-dessous dans la limite de gain acceptable et l'impédance requise pour chaque type d'antenne cité. Les antennes non référencées possédant un gain supérieur au gain maximum autorisé pour le type d'antenne auquel elles

appartiennent sont strictement interdites d'utilisation avec ce matériel. Veuillez vous référer au tableau 25 concernant les antennes approuvées pour les WF121.

### **Les responsabilités de l'intégrateur afin de satisfaire aux réglementations de la FCC et d'Industrie**

#### **Canada :**

Les modules WF121 ont été certifiés pour entrer dans la fabrication de produits exclusivement réalisés par des intégrateurs dans les conditions suivantes :

- L'antenne (ou les antennes) doit être installée de façon à maintenir à tout instant une distance minimum de 20cm entre la source de radiation (l'antenne) et toute personne physique.
- Le module transmetteur ne doit pas être installé ou utilisé en concomitance avec une autre antenne ou un autre transmetteur.

Tant que ces deux conditions sont réunies, il n'est pas nécessaire de procéder à des tests supplémentaires sur le transmetteur. Cependant, l'intégrateur est responsable des tests effectués sur le produit final afin de se mettre en conformité avec d'éventuelles exigences complémentaires lorsque le module est installé (exemple : émissions provenant d'appareils numériques, exigences vis-à-vis de périphériques informatiques, etc.) ;

**IMPORTANT :** Dans le cas où ces conditions ne peuvent être satisfaites (pour certaines configurations ou installation avec un autre transmetteur), les autorisations fournies par la FCC et Industrie Canada ne sont plus valables et les numéros d'identification de la FCC et de certification d'Industrie Canada ne peuvent servir pour le produit final. Dans ces circonstances, il incombera à l'intégrateur de faire réévaluer le produit final (comprenant le transmetteur) et d'obtenir une autorisation séparée de la part de la FCC et d'Industrie Canada.

#### **Etiquetage du produit final**

Chaque module WF121 possède sa propre identification FCC et son propre numéro de certification IC. Si l'identification FCC et le numéro de certification IC ne sont pas visibles lorsqu'un module est installé à l'intérieur d'un autre appareil, alors l'appareil en question devra lui aussi présenter une étiquette faisant référence au module inclus. Dans ce cas, le produit final doit comporter une étiquette placée de façon visible affichant les mentions suivantes :

« Contient un module transmetteur certifié FCC QQQWF121 »

« Contient un module transmetteur certifié IC 5123A-BGTWF121 »

ou



« Inclut la certification FCC QQQWF121 »

« Inclut la certification IC 5123A-BGTWF121 »

L'intégrateur du module WF121 ne doit utiliser que les antennes répertoriées dans le tableau 25 certifiées pour ce module.

L'intégrateur est tenu de ne fournir aucune information à l'utilisateur final autorisant ce dernier à installer ou retirer le module RF, ou bien changer les paramètres RF du module, dans le manuel d'utilisation du produit final.

**Afin de se conformer aux limites de radiation imposées par la FCC et Industry Canada, l'antenne (ou les antennes) utilisée pour ce transmetteur doit être installée de telle sorte à maintenir une distance minimum de 20cm à tout instant entre la source de radiation (l'antenne) et les personnes physiques. En outre, cette antenne ne devra en aucun cas être installée ou utilisée en concomitance avec une autre antenne ou un autre transmetteur.**

## 17 Qualified Antenna Types for WF121-E

This device has been designed to operate with the antennas listed below, and having a maximum gain of 2.14 dB. Antennas not included in this list or having a gain greater than 2.14 dB are strictly prohibited for use with this device. The required antenna impedance is 50 ohms.

Qualified Antenna Types for WT121-E	
Antenna Type	Maximum Gain
Dipole	2.14 dBi

Table 25: Qualified Antenna Types for WF121-E

Any antenna that is of the same type and of equal or less directional gain as listed in Table 25 can be used without a need for retesting. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that permitted for successful communication. Using an antenna of a different type or gain more than 2.14 dBi will require additional testing for FCC, CE and IC. Please, contact support at <http://www.silabs.com/> for more information.

# Smart. Connected. Energy-Friendly.



## IoT Portfolio

[www.silabs.com/products](http://www.silabs.com/products)



## Quality

[www.silabs.com/quality](http://www.silabs.com/quality)



## Support & Community

[www.silabs.com/community](http://www.silabs.com/community)

### Disclaimer

Silicon Labs intends to provide customers with the latest, accurate, and in-depth documentation of all peripherals and modules available for system and software implementers using or intending to use the Silicon Labs products. Characterization data, available modules and peripherals, memory sizes and memory addresses refer to each specific device, and "Typical" parameters provided can and do vary in different applications. Application examples described herein are for illustrative purposes only. Silicon Labs reserves the right to make changes without further notice to the product information, specifications, and descriptions herein, and does not give warranties as to the accuracy or completeness of the included information. Without prior notification, Silicon Labs may update product firmware during the manufacturing process for security or reliability reasons. Such changes will not alter the specifications or the performance of the product. Silicon Labs shall have no liability for the consequences of use of the information supplied in this document. This document does not imply or expressly grant any license to design or fabricate any integrated circuits. The products are not designed or authorized to be used within any FDA Class III devices, applications for which FDA premarket approval is required or Life Support Systems without the specific written consent of Silicon Labs. A "Life Support System" is any product or system intended to support or sustain life and/or health, which, if it fails, can be reasonably expected to result in significant personal injury or death. Silicon Labs products are not designed or authorized for military applications. Silicon Labs products shall under no circumstances be used in weapons of mass destruction including (but not limited to) nuclear, biological or chemical weapons, or missiles capable of delivering such weapons. Silicon Labs disclaims all express and implied warranties and shall not be responsible or liable for any injuries or damages related to use of a Silicon Labs product in such unauthorized applications.

**Note: This content may contain offensive terminology that is now obsolete. Silicon Labs is replacing these terms with inclusive language wherever possible. For more information, visit [www.silabs.com/about-us/inclusive-lexicon-project](http://www.silabs.com/about-us/inclusive-lexicon-project)**

### Trademark Information

Silicon Laboratories Inc., Silicon Laboratories®, Silicon Labs®, SiLabs® and the Silicon Labs logo®, Bluegiga®, Bluegiga Logo®, EFM®, EFM32®, EFR, Ember®, Energy Micro, Energy Micro logo and combinations thereof, "the world's most energy friendly microcontrollers", Redpine Signals®, WiSeConnect, n-Link, ThreadArch®, EZLink®, EZRadio®, EZRadioPRO®, Gecko®, Gecko OS, Gecko OS Studio, Precision32®, Simplicity Studio®, Telegesis, the Telegesis Logo®, USBXpress®, Zentri, the Zentri logo and Zentri DMS, Z-Wave®, and others are trademarks or registered trademarks of Silicon Labs. ARM, CORTEX, Cortex-M3 and THUMB are trademarks or registered trademarks of ARM Holdings. Keil is a registered trademark of ARM Limited. Wi-Fi is a registered trademark of the Wi-Fi Alliance. All other products or brand names mentioned herein are trademarks of their respective holders.



Silicon Laboratories Inc.  
400 West Cesar Chavez  
Austin, TX 78701  
USA

[www.silabs.com](http://www.silabs.com)

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Silicon Laboratories:

[WF121-A-V2](#) [WF121-E-V2C](#) [WF121-A-V2C](#) [WF121-E-V2](#)