

TF800 Family

800W Single Output Industrial Grade





FEATURES AND BENEFITS

- 800W Fan-Cooled (Load & Temperature Controlled)
- Programmable Output Voltage (0% ~ 105%)
- Approved to EN/CSA/IEC/UL62368-1
- Forced Current Sharing at Parallel Operation
- Constant Current Limit

Selectable +5V/0.5A or +9V/0.3A Auxiliary Output

Remote Setting Multiple PSU via RS232, RS485 & I ² C	
	-
Power OK Signal	
	_
Remote ON/OFF, Remote Sense Function	
	-
Protection: OVP, OLP, OTP, Fan Failure	
	-
Global Control via RS232	

MODEL SELECTION

	Output	Deted	Current	Output	Dipple 9	Line	Lood	Valtaga	
Model Number ⁴	Output Volts	Rated Current	Current Range	Output Power	Ripple & Noise ¹	Line Regulation	Load Regulation	Voltage Tolerance ³	Efficiency
TF800A12K	12V	66.7A	0-66.7A	800W	150mV pk-pk	±1%	±1%	±2%	89%
TF800A15K	15V	53.4A	0-53.4A	800W	150mV pk-pk	±1%	±1%	±2%	90%
TF800A24K	24V	33.5A	0-33.5A	800W	240mV pk-pk	±1%	±1%	±2%	92%
TF800A48K	48V	16.37A	0-16.7A	800W	480mV pk-pk	±1%	±1%	±2%	92%
TF800A60K	60V	13.4A	0-13.4A	800W	600mV pk-pk	±1%	±1%	±2%	93%

Notes: 1. See CMD VS Output Curve.

2. Ripple & noise are measured at 20MHz of bandwidth by using a 12" twisted pair-wire terminated with a 0.1uF & 47uF parallel capacitor.


3. Tolerance: includes setup time tolerance, line regulation and load regulation.

INPUT



Input Voltage and Frequency ¹	100-240Vac, ±10%, 47-63Hz, 1Ø127-370Vdc
Input Current	115Vac: 9.3A, 230Vac: 3.7A
Inrush Current	30A/115VAC, 60A/230VAC
Efficiency	See Model Selection Table
Power Factor	0.95/230VAC, 0.98/115VAC at full load
Leakage Current	< 1mA/240VAC


Notes : 1. De-rating may apply in low input voltage. Please check the de-rating curve for more details



5. Recovery after reset AC power ON or inhibit.

6. All specifications are typical at 230Vac, full load, at 25°C ambient unless noted.

OUTPUT

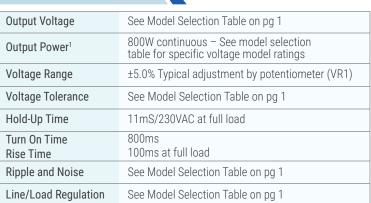

Notes : 1. De-rating may apply in low input voltage. Please check the de-rating curve for more details

CONNECTOR INFORMATION

	Input Connector	Output Connector	Signal Connector
Pinout:	Term. 1) AC LINE Term. 2) NEUTRAL Term. 3) GROUND	+ and -	See Signal Connector Table on pg 3
Mating Connector /terminal:	#10 wire lugs	M6 Wire Lugs	Connector: JST PHDR-24VS or equivalent Pins: JST SPHD-002T-P0.5 or equivalent



TF800 Family



EMI/EMC COMPLIANCE

Conducted Emissions	Certified EN 55022; EN 61204-3; EN 61000-6-3
Radiated Emissions	Certified EN 55022; EN 61204-3; EN 61000-6-3
Electro-Static Discharge (ESD) Immunity on Power ports	EN55024/IEC61000-4-2
Radiated RF EM Fields Susceptibility	EN55022/EN61000-4-3
Electrical Fast Transients (EFT) /Bursts	EN55024/IEC61000-4-4
Surges, Line to Line (Diff Mode) and Line to GND (CMN Mode)	EN55024/IEC61000-4-5
Conducted Disturbances induced by RF Fields	EN55022/IEC61000-4-6
Rated Power frequency magnetic fields	EN55024/IEC1000-4-8
Voltage Interruptions, Dips, Sags & Surges	EN55024/IECEN61000-4-11
Harmonic Current Emissions	EN61000-3-2
Flicker Test	EN61000-3-3
Notes : 1. The power supply	is considered a component which will be installed

Notes: 1. The power supply is considered a component which will be installed into a final equipment. The final equipment must be re-confirmed that it till meets EMC directives.

SAFETY

Safety Certifications

Approved to EN/CSA/IEC/UL62368-1

RELIABILITY

MTBF

>112,000 hours per MIL-HDBK-217F

AUXILIARY SIGNALS

Auxiliary Power	Selectable +5V/0.5A or +9V/0.3A auxiliary output
Remote ON / OFF Control	By external switch
Power OK Signal	Open drain signal low when PSU turns on, Max. sink current: 20mA, Max. drain voltage: 40V
Output Voltage Trim	Adjustment of output voltage is between 0 ~ 105% of rated output
Output Current Trim	Adjustment of output current is between 0 ~ 105% of rated output
Parallel (Current Sharing) ¹	Please refer to Current Sharing with Remote Sensing (Parallel Connection) Diagram

Notes : 1. In parallel connection only one unit will operate if the total output load is less than 5% of the rated power.

PROTECTION

Overvoltage Protection	120 ± 7% of Vout, Latch Type (Recovery after reset AC power ON or inhibit). (Refer to VCI vs. OVP Curve).		
Short Circuit Protection	Constant current, auto-recovery		
Overtemperature Protection	85±5°C measured on NTC. Auto recovery		
Overload Protection	105% of rated power, constant current type		

ISOLATION SPECIFICATIONS

Isolation ¹	Input-Output: 3000Vac Input-Ground: 1500Vac Output-Ground: 500Vac
Isolation Resistance	I/P-0/P, I/P-FG, 0/P-FG: 100M 0hms/500VDC

Notes : 1. This test is done without enclosure: I/P-0/P 4242VDC. If with enclosure: I/P-0/P 2121VDC,I/P-FG:2121VDC, 0/P-FG: 707VDC


ENVIRONMENT

Operating Temperature	-25 ~ +60°C (Refer to load de-rating curve)
Temperature Derating	See Derating Curve
Vibration	10 ~ 500Hz, 2G 10min./1 cycle, period for 60min. each along X, Y, Z axes Compliance to IEC 68-2-6, IEC 68-2-64
Dimensions	127 x 41 x 249mm. 5.0 x 1.6 x 9.80 inch
Cooling	Load and temperature control fan
Relative Humidity	20% to 90%, non-condensing
Storage Temperature and Humidity	-40 ~ +85°C, 10 ~ 95% RH
Weight & Packing	1.7kg 6pcs/carton, 11.2kg/0.55CUFT





MECHANICAL DRAWING

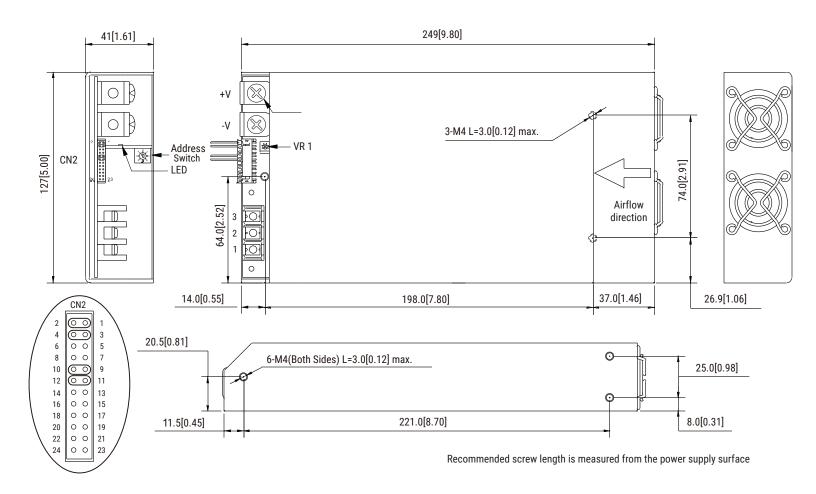

TF800 Family

SIGNAL CONNECTOR

Pin No.	Function	Description	Pin No.	Function	Description
1	VS+	Remote sense (+)	13	ACI	l Program
2	V0+	Positive output voltage	14	GND	Ground
3	VS-	Remote sense (-)	15	VCI	V Program
4	V0-	Negative output voltage	16	GND	Ground
5	РОК	Power OK	17	AUX	+5V/0.5A or +9V/0.3A Auxiliary power
6	GND	Ground	18	GND	Ground
7	PAR	Parallel operation current share	19	SCL	Serial Clock used in the I ² C Interface
8	VSET	Aux output setting	20	SDA	Serial Data used in the I ² C Interface
9	EN-	Inhibit ON/OFF (-)	21	AUX	+5V/0.5A or +9V/0.3A Auxiliary power
10	GND	Ground	22	GND	Ground
11	EN+	Inhibit ON/OFF (+)	23	RX	For RS232 Receiver function
12	AUX	+5V/0.5A or +9V/0.3A Auxiliary power	24	ТХ	For RS232 Transmission function



TF800 Family




LED STATUS INDICATOR

LED	LED Signal	Status
Solid (Green)		Power OK (Local mode)
Solid (Orange)		Power OK (Remote mode)
Slow Blink (Green)		Power Standby
Fast Blink (Red)		Over Voltage Protection (OVP)
Solid (Red)		Over Load Protection (OLP)
Slow Blink (Red)		Over Temperature Protection (OTP)
Intermittent Blink (Red)		Fan Failure
Interlace Blink (Red)		Power Failure


REMOTE ON/OFF




(A) Default Setting

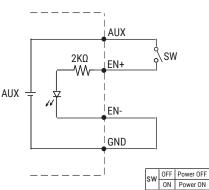

(A) Using internal 5V auxiliary source

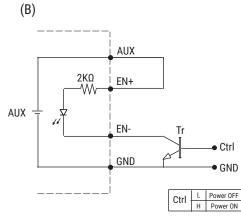


(B) ON / OFF Control by NPN transistor

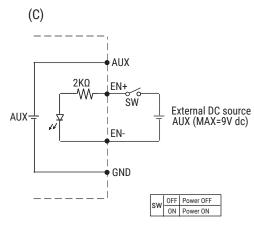


(C) Using external voltage source

GND shown in above diagram is referring to the GND of CN2, not the Grounding from main power(NEG-).

DERATING CURVE

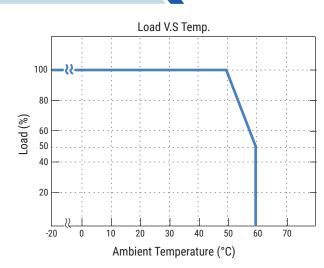


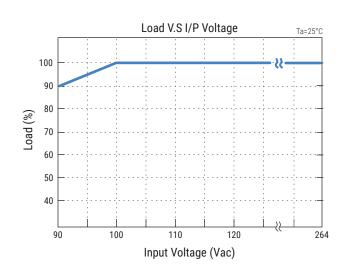






CMD vs Output Curve

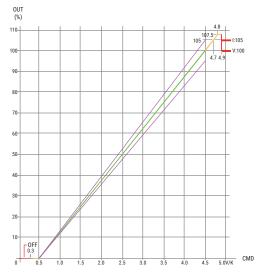


To ensure the power supply output voltage and current could be accurately adjusted, please make sure to adjust the output voltage and current > 10% vs. the rated voltage and current. (e.g. for a 24V unit, please adjust the DC output voltage above 2.4V to ensure accuracy; same applies to the output current)

TF800 Family



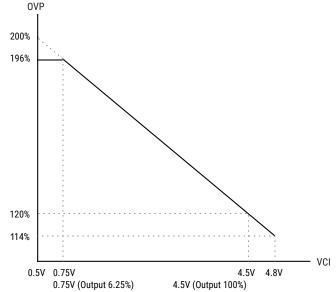


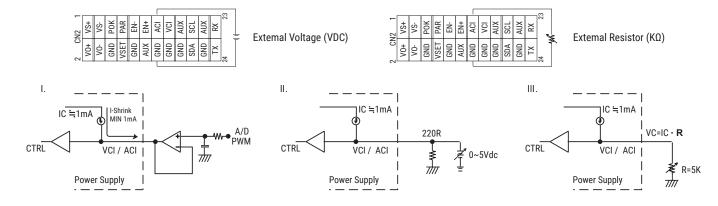


Power OK Signal & Auxiliary Power Setting

*The grounding of "AUX" power and P.OK signal should be connected to "GND" port. If "VO-" is connected as Grounding, make sure to short the GND and VO- ports.

Open drain signal low when PSU turns on. Max. P.OK sink current: 20mA, Max, drain voltage: 40V.

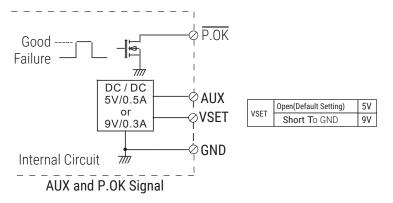

*Place an additional capacitor to have a better performance of auxiliary power operation.



Do NOT exceed 5V/0.5A or 9V/0.3A


GND shown in above diagram is referring to the GND of CN2, not the Grounding from main power(NEG-)





REMOTE SENSE


Remote Sense

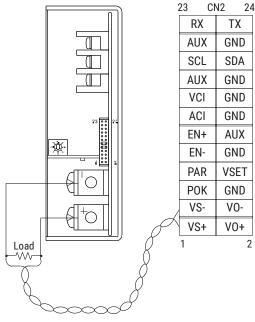

VS-, VS+ Compensation Voltage = <0.5V


Current Sharing

Current Sharing with Remote Sensing (Parallel Connection)

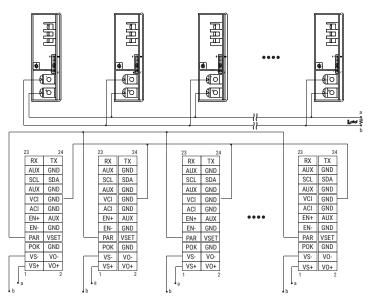


Connect PAR pins together for current sharing function

Local Sense (Default Setting)

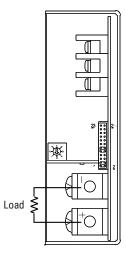

23	CN	2	24	ŀ
RX			ГХ	
AUX	(G	ND	1
SCI	-	S	DA	
AU)	(G	ND	
VC	I	G	ND	
AC	I	G	ND	
EN-	F	A	UX	
EN-		G	ND	
PAF	2	VS	SET	
PO	<	G	ND	
VS		١	/0-	<u> </u>
VS-	F	٧	0+	
1			2	2

Current Sharing with Local Sensing

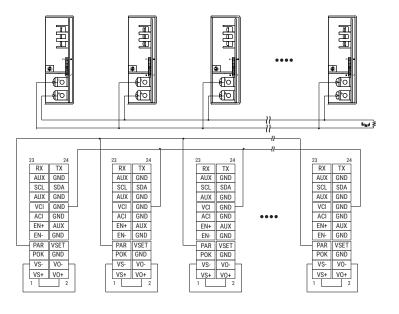


Connect PAR pins together for current sharing function






MOUNTING INSTRUCTIONS

Recommended standard mounting configurations

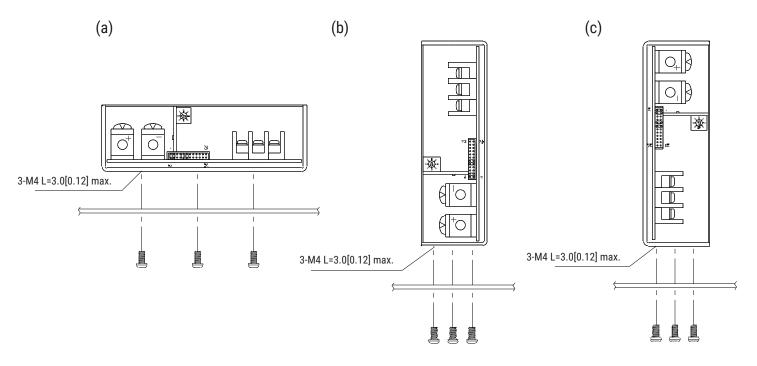

TF800 Family

- Notes: 1. Recommended screw length is measured from the power supply surface.
 - 2. Ventilating holes on the front and back side panels should not be obstructed. Allow min. 50mm space for air flow. See below.
 - 3. Recommended torque of M4 mounting screws is 1.27N \cdot m (13.0kgf \cdot cm)

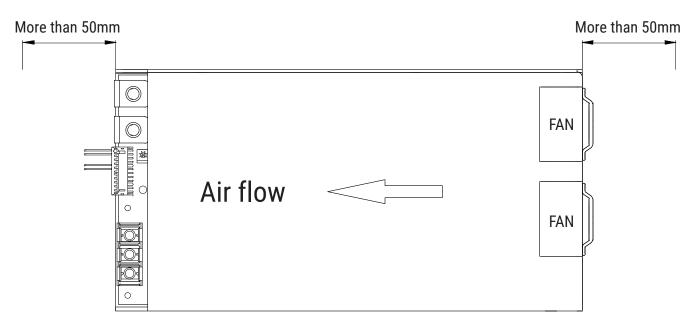

Disclaimer : The information and specifications contained herein are believed to be correct at the time of publication. However, SL Power accepts no responsibility for consequences arising from reproduction errors or inaccuracies. Specifications are subject to change without notice.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

SL Power:

<u>TF800A12K</u> <u>TF800A24K</u> <u>TF800A60K</u> <u>TF800A48K</u> <u>TF800A15K</u>