Tel/tronix[®]

Digital Storage Oscilloscope

TBS2000 Series Datasheet



With a 9-inch WVGA display, 20 million point record length and 1 GS/s sample rate, TBS2000 Series Oscilloscopes capture and display significantly more signal to help you evaluate designs faster. Easily and confidently analyze your signals with new on-waveform cursor readouts and 32 automated measurements, each with informative tips to help you quickly choose the right one. The TekVPI® probe interface works with traditional BNC connections, but also enables wide application coverage with the latest active voltage probes and current probes.

Key performance specifications

- 2 and 4 analog channel models
- 100 and 70 MHz bandwidth models
- Up to 1 GS/s sampling rate
- 20 M record length on all channels
- 5 year warranty

Key features

- 9-inch WVGA color display
- 15 horizontal grids show 50% more signal

- TekVPI probe interface supports active, differential, and current probes with automatic scaling and units
- 32 automated measurements, and FFT function for thorough waveform analysis
- HelpEverywhere provides helpfull on-screen tips
- Built-in Scope Intro handbook provides operating instructions and oscilloscope fundamentals
- 2-channel models are highly-portable at 2.62 kg (5.8 lbs)

Connectivity

- USB 2.0 host port on the front panel for quick and easy data storage
- Wi-Fi interface provides wireless communications capability ¹ support
- USB 2.0 device port on rear panel for easy connection to a PC
- LXI compliant 10/100BASE-T Ethernet port for remote control over LAN


Education

- Courseware function presents lab exercise guidance on the display
- Fully compatible with TekSmartLab lab management software for education

Designed to make your work easier


The TBS2000 Series is designed for easy operation and guick hands-on learning. Dedicated controls provide quick access to important settings, so you can evaluate signals faster. Many oscilloscopes provide 8 vertical divisions and 10 horizontal divisions, but the TBS2000 gives you 10 vertical divisions and 15 horizontal divisions, so you can see more of your signal. The display also offers more room for measurement results and menu information.

Compatible with most off-the-shelf USB Wi-Fi adapters. Wi-Fi adapter accessory TEK-USB-WIFI complies with FCC, CE, and IC regulations, and supports wireless connectivity.

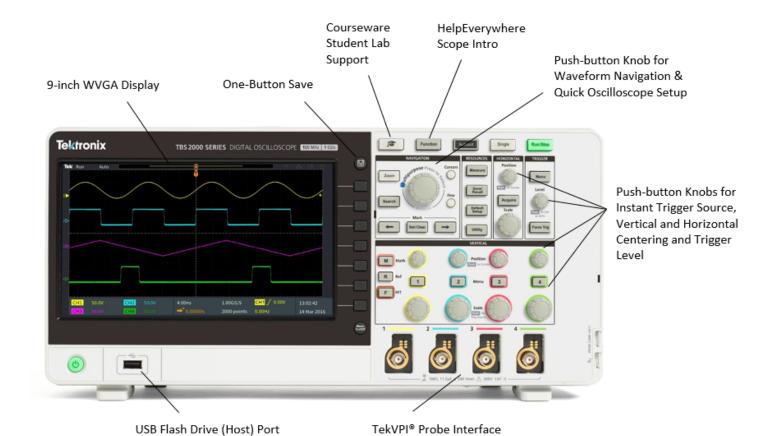


Designed for outstanding waveform visualization and analysis

Long record length with pan and zoom — Record length is selectable, from 2000 samples up to 20 million samples for capturing long time periods. The exceptionally long record length will help you find signal anomalies and verify digital communications. To help navigate long acquisitions, the Zoom function lets you quickly pan through the record and zoom in to see signal details.

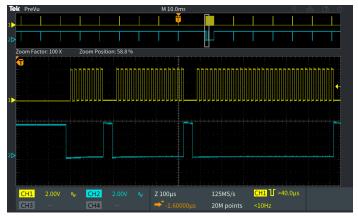

In Zoom mode, the upper display gives an overview of up to 20 M points. The detailed zoomed view is shown in the lower display.

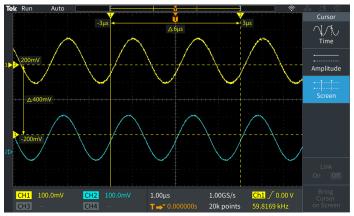


The cursor readouts are presented on the waveform display. Cursors can be used to measure time, amplitude, or both.

Versatile triggering and acquisition modes — The trigger system is designed for troubleshooting today's mixed signal designs. Beyond a basic edge trigger, it also includes pulse width and runt triggering, which are especially useful for troubleshooting digital sections of your designs. Pulse width triggering is perfect for hunting narrow glitches or timeout conditions. You specify a voltage threshold and a width, and the oscilloscope triggers when the pulses are too narrow, too wide, or of a particular duration. Runt triggering is designed to capture signals that are shorter in amplitude than expected. It lets you specify two voltage thresholds and a width. If a pulse amplitude falls between the two thresholds, the oscilloscope will trigger.


The default acquisition mode is Sample Mode which works well for most applications. However the instrument also offers Peak Detect Mode which is useful for hunting spikes, and Average Mode which can help reduce noise on repetitive signals.

Automated measurements are easier than ever - A comprehensive set of automated measurements enable fast and convenient testing for a wide range of signals and applications.

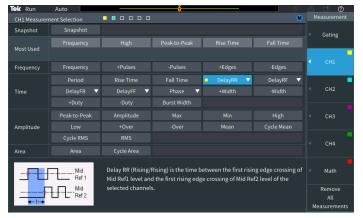

Measurements are all listed and selected on a single screen.


A single measurement selection screen makes it easy to choose from 32 automated measurements without having to hunt through multiple menus. Choose from among your most frequently-used measurements which are tracked at the top of the page, or select from four categories: frequency, time, amplitude, and area. The HelpEverywhere system provides tips for each measurement, making it easier to know which measurement to use and to understand the results.

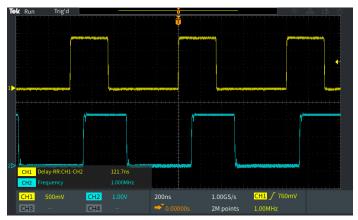

Measurements are transparent so waveforms are not obscured.

Measurements are color coded by the source, and are presented on a transparent background, so waveforms are not obscured by the readouts.


FFT function – You can understand the frequency content of your signals with the FFT function by pressing the dedicated front-panel FFT button. Display only the FFT, or turn on the source waveform display to see both the spectrum and the time domain waveform. A transparent readout shows important settings without blocking the FFT display.

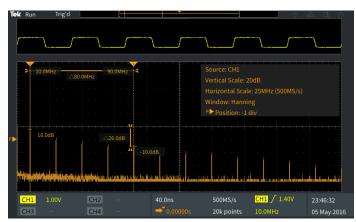

The time domain source waveform can be displayed above the FFT frequency spectrum.

Built-in tips for faster setup

HelpEverywhere is a unique feature on the TBS 2000. It shows instant help information as you navigate through key menus. The tips include measurement information, application tips, and general guidance in the form of text and graphics. You can turn tips on and off from the HelpEverywhere menu.

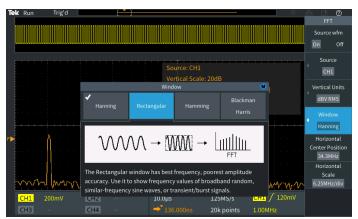


HelpEverywhere tips explain important settings.

On-screen scope fundamentals

Scope Intro is a brief handbook embedded in the TBS2000. Pressing the front panel Function button gives you access to information on oscilloscope basic operations, as well as an overview of the TBS2000 and TekSmartLab Lab Management System for education.



Scope Intro covers basic oscilloscope and TBS2000 usage

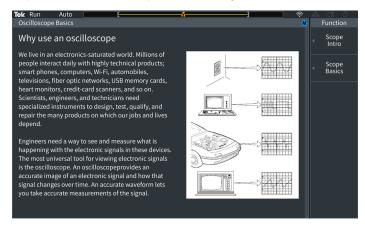

First in its class with wireless communications

On the rear of the instrument, you will find several communications ports. The USB device port or LAN port can be used to control the instrument using the fully-documented command set.



Wi-Fi adapters are configured through integrated setup menus and support seamless communications

The TBS2000 is the first oscilloscope in its class to support wireless communication. Plug a Wi-Fi dongle into the USB host port and set the interface for Wi-Fi from the front panel. A Wi-Fi dongle is available as TEK-USB-WIFI. Several off-the-shelf dongles have also been tested and their operation confirmed.

LXI embedded Web page for instrument control – LXI is an industry standard based on LAN connectivity for flexible, reliable, and efficient communication and control. TBS2000 supports LXI Core 2011. The TBS2000 LXI Web page can be accessed by simply typing the instrument IP address into any Web browser.



LXI control screen and waveform display

TekVPI® Interface and active probe support


The TekVPI probe interface sets the standard for ease of use in probing. With this interface the TBS2000 Series supports a wide range of the latest voltage and current probes, providing coverage for many applications. These probes are powered by and communicate with the TBS2000 through the interface. Scale factors and status information, such as error conditions, are sent to the instrument for processing and display. This saves you from having to manually set scale factors, calculate offsets, or monitor for open jaw conditions or the need to degauss your current probes.



TekVPI probes communicate scale settings, ranges, and status to the TBS2000.


Innovative new education solutions

The TBS2000 offers distinctive new ways to enable educators to devote more time to teaching circuit concepts instead of lab setup and management.

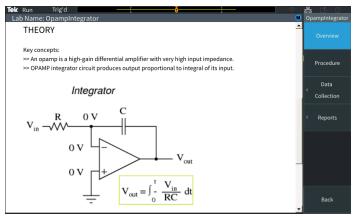

The Courseware function allows students to see lab information on the instrument display

The integrated Courseware function allows professors to load lab exercises on the instrument to give students guidance at each station, and provides a structured framework into which students can capture data to incorporate into their reports. Over 100 sample lab exercises are available for download from the Tektronix Courseware Resource Center.

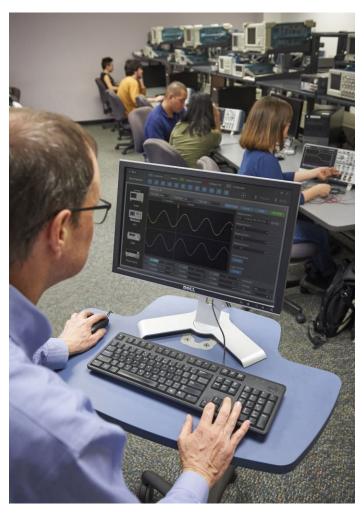

The TBS2000 can be easily integrated into the TekSmartLab System. Together they enable educators to preset a lab full of instruments with a few mouse-clicks, and allow lab instructors to track every student's progress from one central workstation.

Performance you can count on

Tektronix has industry-leading service and support, and every TBS2000 series oscilloscope is backed with a standard 5-year warranty.

Specifications

All specifications are guaranteed unless noted otherwise. All specifications apply to all models unless noted otherwise.

Model overview

	TBS2072	TBS2102	TBS2074	TBS2104
Analog channels	2	2	4	4
Bandwidth	70 MHz	100 MHz	70 MHz	100 MHz
Sample rate	1 GS/s	1 GS/s	1 GS/s	1 GS/s
Record length	20 M points	20 M points	20 M points	20 M points

Vertical system analog channels

Hardware bandwidth limits	20 MHz		
Input coupling	DC, AC, or GND		
Input impedance	1 M Ω ± 2 %, 11.5 pF ± 2.5 pF		
Input sensitivity range	2 mV/Div to 5 V/Div		
Vertical resolution	8 bits		
Maximum input voltage, 1 MΩ	300 V RMS with peaks ≤ ±450 V		
Acquisition modes			
Sample	Acquire sampled values.		
Peak Detect	Captures glitches as narrow as 3.5 ns at all sweep speeds.		
Average	From 2 to 512 waveforms included in average.		
Roll	Scrolls waveforms right to left across the screen at sweep speeds slower than or equal to 40 ms/div (400 ms/div at 20M record length).		
Math modes			
All units:	Ch 1 - Ch 2		
	Ch 2 - Ch 1		
	Ch 1 + Ch 2		
	Ch 1 X Ch 2		
	FFT		
4 channel units:	Ch 3 - Ch 4		
	Ch 3 + Ch 4		
	Ch 4 - Ch 3		
	Ch 3 X Ch 4		
DC balance	± (1 mV +0.1 div)		
DC gain accuracy	± 3% 10 mV/div through 5 V/div-		
	± 4% typical 2 mV/div and 5 mV/div		

Vertical system analog channels

DC voltage measurement accuracy average mode

Average of 16 waveforms

±((DC Gain Accuracy) X |reading - (offset - position)| + Offset Accuracy + 0.11 div + 1 mV)

Delta Volts between any two averages of ≥16 waveforms acquired with the same oscilloscope setup and ambient conditions

±(DC Gain Accuracy X |reading| + 0.08 div + 1.4 mV)

Vertical position range

± 5 divisions

Vertical offset ranges

Volts/Div setting	Offset range, 1 MΩ
2 mV/div to 200 mV/div	± 0.8 V
> 200 mV/div to 5 V/div	± 20 V

Analog bandwidth, DC coupled

100 MHz models: DC to ≥100 MHz for 2 mV/div through 5 V/div. 70 MHz models: DC to ≥70 MHz for 2 mV/div through 5 V/div.

Common mode rejection ratio (CMRR), typical

100:1 at 60 Hz, reducing to 10:1 with 50 MHz sine wave with equal Volts/div and coupling settings on each channel.

Channel-to-channel isolation

TBS2072, TBS2074	TBS2102, TBS2104
≥100:1 at ≤70 MHz	≥100:1 at ≤100 MHz

Horizontal system analog channels

Maximum duration of time captured at highest sample rate (all channels)

1 ms

Time base range

2 ns/div to 100 sec/div

Time-base delay time range

-15 divisions to 5000 s

Deskew range

±100 ns

Time base accuracy

±25 ppm over any ≥1 ms interval

Trigger system

Trigger modes Auto, Normal, and Single

Trigger holdoff range

20 ns to 8 s

Trigger types

Edge Pulse width Positive or negative slope on any channel. Coupling includes DC, HF reject, LF reject, and noise reject.

Trigger on width of positive or negative pulses that are >, <, =, \neq , or inside/outside a specified period of time.

Runt

Trigger on a pulse that crosses one threshold but fails to cross a second threshold before crossing the first again.

Trigger coupling analog channels

DC, Noise Reject, High Freq Reject, Low Freq Reject.

Datasheet

Trigger system			
Sensitivity, edge-type trigger, DC coupled	Trigger Source	Sensitivity	
	Analog inputs	0.4 division from DC to 50 MHz	
		0.6 divisions >50 MHz to 100 MHz	
Trigger level ranges	Input channels: ± 4.90 divisions from center screen		
Data storage			
Nonvolatile memory retention time, typical	No time limit for Front Panel Settings, saved waveforms, setups, and calibration constants.		
Real-Time clock	A programmable clock providing time in years, months, days, hours, minutes, and seconds.		
Waveform measurements			
Cursors	Time, amplitude and screen.		
Automated measurements	32, of which up to six can be displayed on-screen at any one time. Measurements include: Period, Frequency, Rise Time, Fall Time, Positive Duty Cycle, Negative Duty Cycle, Positive Pulse Width, Negative Pulse Width, Burst Width, Phase, Positive Overshoot, Negative Overshoot, Peak to Peak, Amplitude, High, Low, Max, Min, Mean, Cycle Mean, RMS, Cycle RMS, Positive Pulse Count, Negative Pulse Count, Rising Edge Count, Falling Edge Count, Area, Cycle Area, Delay FR, Delay FR, and Delay RR.		
Gating	Isolate the specific occurrence within an acquisition to take measurements on, using either the screen, between waveform cursors or full record length.		
Waveform math			
Arithmetic	Add, subtract, and multiply waveforms.		
FFT	Spectral magnitude. Set FFT Vertical Scale to Linear RMS or dBV RMS, and FFT Window to Rectangular, Hamming, Hanning, or Blackman-Harris.		
Remote control software			
LXI web page	LXI Core 2011. Built-in web page enables remote control of horizontal and vertical scale, trigger settings, and measurements. Allows waveform and image save to USB flash drive.		
Display system			
Display type	9 inch (228 mm) wide format liquid crystal TFT color display.		
Display resolution	800 horizontal by 480 vertical displayed pixels (WVGA).		
Waveform styles	Vectors, Variable Persistence, and Infinite Persistence.		
Graticules	Grid, None.		
Format	YT and XY.		

Input output ports

USB 2.0 high-speed host port Supports USB mass storage devices, Wi-Fi dongle, One port available on rear panel and one on front panel.

USB 2.0 high-speed device port

Device port Rear-panel connector allows for communication/control of oscilloscope through USBTMC or GPIB with a TEK-USB-488.

Compatible USB-WIFI dongles TBS2xxx USBWIFI option

TEK-USB-WIFI accessory

TP-LINK TL-WN823N, Netgear WNA1000M, WNA3100M

LAN port (Ethernet) RJ-45 connector, supports 10/100BASE-T.

Probe compensator

5 V **Amplitude** Frequency 1 kHz

Kensington-style lock Rear-panel security slot connects to standard Kensington-style lock.

Power source

Power source voltage 100 to 240 V_{AC} RMS $\pm 10\%$

Power source frequency 45 Hz to 65 Hz (90 to 264 V)

360 Hz to 440 Hz (100 to 132 V)

80 W maximum Power consumption

Physical characteristics

Dimensions

TBS2xx2: Height: 174.9 mm (6.89 in)

Width: 372.4 mm (14.66 in)

Depth: 103.3 mm (4.07 in)

TBS2xx4: Height: 201.5mm (7.93 in)

> Width: 412.8 mm (16.25 in) Depth: 128.1 mm (5.04 in)

Weight

TBS2xx2: 2.62 kg (5.8 lbs.), standalone instrument.

5.1 kg (11.2 lbs.), when packaged for domestic shipment.

TBS2xx4: 4.17 kg (9.2 lbs.), stand-alone instrument.

7 kg (15.4 lbs.), when packaged for domestic shipment.

Cooling clearance 50 mm (2 in) required on left side and rear of instrument.

Datasheet

EMC, environment, and safety

Temperature

Operating: 0 °C to +50 °C (+32 °F to 122 °F) Nonoperating: -40 °C to +71 °C (-40 °F to 160 °F)

Humidity

Operating: High: +30 °C to +50 °C, 5% to 60% relative humidity

Low: 0 °C to +30 °C, 5% to 95% relative humidity

High: +30 °C to +55 °C, 5% to 60% relative humidity Nonoperating:

Low: 0 °C to +30 °C 5% to 95% relative humidity

Altitude

Operating: Up to 3,000 meters (9,842 feet). Non-Operating: Up to 12,000 meters (39,370 feet).

Random vibration

Operating 0.31 G_{RMS} from 5 to 500 Hz, 10 minutes each axis, 3 axes, 30 minutes total Nonoperating $2.46\ G_{RMS}$ from 5 to 500 Hz, 10 minutes each axis, 3 axes, 30 minutes total

Regulatory

Electromagnetic compatibility EC Council Directive 2004/108/EC

UL61010-1:2004; CAN/CSA-C22.2 No. 61010.1: 2004; EN61010-1:2001; complies with the Low Voltage Directive 2004/108/EC for Safety

Product Safety.

Ordering information

Models

TBS2072 70 MHz, 1 GS/s, 20 M record length, 2-channel digital phosphor oscilloscope TBS2102 100 MHz, 1 GS/s, 20 M record length, 2-channel digital phosphor oscilloscope TBS2074 70 MHz, 1 GS/s, 20 M record length, 4-channel digital phosphor oscilloscope **TBS2104** 100 MHz, 1 GS/s, 20 M record length, 4-channel digital phosphor oscilloscope

Standard accessories

Probes TPP0100 100 MHz, 10x passive probe (one per analog channel)

Accessories

063-4472-xx	Documentation CD	
071-3078-xx	Installation and safety manual	
077-1149-xx	Programmer manual, available on documentation CD and on Tek Web	
-	Power cord	
-	Calibration certificate documenting traceability to National Metrology Institute(s) and ISO9001 quality system registration	

Five-year warranty covering all parts and labor, excluding probes. Warranty

Recommended accessories

Probes Tektronix offers over 100 different probes to meet your application needs. For a comprehensive listing of available probes, please

visit www.tektronix.com/probes.

P5100A 2.5 kV, 500 MHz, 100X high-voltage passive probe

500 MHz TekVPI ® differential voltage probe with ±42 V differential input voltage **TDP0500**

THDP0200 ±1.5 kV 200 MHz high-voltage differential probe **THDP0100** ±6 kV 100 MHz high-voltage differential probe **TAP1500** 1.5 GHz TekVPI ® active voltage probe

50 MHz TekVPI ® 20 Ampere AC/DC current probe TCP0020 **TCP0030A** 120 MHz TekVPI® 30 Ampere AC/DC current probe TCP0150 20 MHz TekVPI ® 150 Ampere AC/DC current probe TCP2020 50 MHz TekVPI ® 20 Ampere AC/DC current probe

Accessories

077-0737-xx Service manual (English only) PDF-only, downloadable from www.tektronix.com/manual/downloads

TPA-BNC TekVPI® to TekProbe® BNC adapter

TekVPI® Deskew pulse generator signal source **TEK-DPG** Power measurement deskew and calibration fixture 067-1686-xx **TEK-USB-WIFI** USB Wi-Fi dongle for TBS2000 series only

TEK-USB-488 GPIB-to-USB adapter

Instrument options

TBS2xxx USBWIFI USB Wi-Fi dongle for TBS2000 series only

ACD2000 Soft transit case, for 2-channel models

ACD4000 Soft transit case, for 4-channel models

TBS2XXX P2221 Replaces standard probes with P2221 probes (200 MHz passive voltage probes with 1x/10x attenuation)

Power plug

Opt. A0 North America power plug (115 V, 60 Hz) Universal Euro power plug (220 V, 50 Hz) Opt. A1 Opt. A2 United Kingdom power plug (240 V, 50 Hz)

Opt. A3 Australia power plug (240 V, 50 Hz)

Opt. A4 North America power plug (240 V, 50 Hz)

Opt. A5 Switzerland power plug (220 V, 50 Hz) Japan power plug (100 V, 50/60 Hz) Opt. A6

Opt. A10 China power plug (50 Hz) Opt. A11 India power plug (50 Hz) Opt. A12 Brazil power plug (60 Hz)

Opt. A99 No power cord

Language options

Opt. L0 English front panel overlay Opt. L1 French front panel overlay Opt. L2 Italian front panel overlay Opt. L3 German front panel overlay Opt. L4 Spanish front panel overlay Opt. L5 Japanese front panel overlay Opt. L6 Portuguese front panel overlay

Opt. L7 Simplified Chinese front panel overlay Opt. L8 Traditional Chinese front panel overlay

Opt. L9 Korean front panel overlay Opt. L10 Russian front panel overlay

Opt. L99 No manual

Language options include translated front-panel overlay only, manuals with different language are available on Tek web.

Service options

Opt. D1 Calibration Data Report

Certifications

((



Tektronix is registered to ISO 9001 and ISO 14001 by SRI Quality System Registrar.



Product(s) complies with IEEE Standard 488.1-1987, RS-232-C, and with Tektronix Standard Codes and Formats.



Product Area Assessed: The planning, design/development and manufacture of electronic Test and Measurement instruments.

Datasheet

ASEAN / Australasia (65) 6356 3900 Belgium 00800 2255 4835* Central East Europe and the Baltics +41 52 675 3777 Finland +41 52 675 3777 Hong Kong 400 820 5835 Japan 81 (3) 6714 3086 Middle East, Asia, and North Africa +41 52 675 3777 People's Republic of China 400 820 5835 Republic of Korea +822 6917 5084, 822 6917 5080 Spain 00800 2255 4835* Taiwan 886 (2) 2656 6688 Austria 00800 2255 4835*
Brazil +55 (11) 3759 7627
Central Europe & Greece +41 52 675 3777
France 00800 2255 4835*
India 000 800 650 1835
Luxembourg +41 52 675 3777
The Netherlands 00800 2255 4835*
Poland +41 52 675 3777
Russia & CIS +7 (495) 6647564
Sweden 00800 2255 4835*
United Kingdom & Ireland 00800 2255 4835*

Balkans, Israel, South Africa and other ISE Countries +41 52 675 3777
Canada 1 800 83 9200
Denmark -45 80 88 1401
Germany 00800 2255 4835*
Italy 00800 2255 4835*
Mexico, Central/South America & Caribbean 52 (55) 56 04 50 90
Norway 800 16098

Portugal 80 08 12370 South Africa +41 52 675 3777 Switzerland 00800 2255 4835* USA 1 800 833 9200

* European toll-free number. If not accessible, call: +41 52 675 3777

For Further Information. Tektronix maintains a comprehensive, constantly expanding collection of application notes, technical briefs and other resources to help engineers working on the cutting edge of technology. Please visit www.tek.com.

Copyright © Tektronix, Inc. All rights reserved. Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supersedes that in all previously published material. Specification and price change privileges reserved. TEKTRONIX and TEK are registered trademarks of Tektronix, Inc. All other trade names referenced are the service marks, trademarks, or registered trademarks of their respective companies.

07 Jun 2016 3GW-60235-0

www.tektronix.com



Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Tektronix:

TBS2104 TBS2074 TBS2102 TBS2072 TBS2074B TBS2202B TBS2102B TBS2104B TBS2072B TBS2204B