

te.com



# **FEATURES**

- Acceleration and temperature output
- Compact design, stud mount
- Up to 5-year battery life
- Low power consumption
- -20°C to +60°C operating temperature
- 30kHz resonant frequency

### **APPLICATIONS**

- · Remote condition monitoring
- Reduced installation costs no cables
- Designed for harsh environments
- Quick and scalable deployment
- Cost effective monitoring for large plants
- Secure and interference free transmission

# 8911 WIRELESS ACCELEROMETER FOR PROOF OF CONCEPT

LoRaWAN™ 868/915MHz

# **SPECIFICATIONS**

- Wireless Piezoelectric Proof of Concept (POC) Accelerometer for Condition Monitoring
- Programmable, Customer Configurable
- Corrosion Resistant Stainless-Steel & Polymer Housing
- Wide Bandwdith to >10kHz
- Exceptional Long Term Stability
- Superior Measurement Resolution

# **INTRODUCTION**

The TE model 8911 wireless accelerometer for POC combines a sensor, data collector, digital signal processor, and radio into one compact, battery-operated device that measures both vibration and temperature data.

The model 8911 wireless accelerometer uses the LoRaWAN™ communication protocol, offering a simple, reliable and secure means of expanding condition-based maintenance into plant areas where the cost to install wired systems is prohibitive, making data available to existing process control and information systems.

The model 8911 incorporates a piezo-electric accelerometer which offers a wide bandwidth to >10kHz, outstanding measurement resolution and superior long-term stability compared to design using MEMS solutions.

The 8911 contains digital signal processing that provides an FFT analysis of the vibration being sensed. The output data describes the center frequency, peak value, bandwidth, and percent of the total spectral content for the eight most significant acceleration peaks in the vibration signal.

Because of this feature, the 8911 directly provides the data most needed to plot trends and monitor changes in the performance and condition of factory machinery.

CLICK HERE > CONNECT WITH A SPECIALIST

\*This device has not been authorized as required by the rules of the Federal Communications Commission.

# ABSOLUTE MAXIMUM RATINGS(1)

Parameter	Symbol	Min	Тур	Max	Unit	Notes/Conditions
Supply voltage	$V_{dd}$			3.5	V	Replaceable battery
Storage temperature	Ts	-40		120	°C	Without battery
Shock limit	<b>g</b> max			2000	g	
ESD		-2		+2	kV	Human body model

<sup>(1)</sup> Maximum limits the device will withstand without damage

# **ELECTRICAL SPECIFICATIONS**

(Unless otherwise specified, all parameters are measured at 24°C @ 3.0V applied)

Parameters	Symbol	Min	Тур	Max	Unit	<b>Notes/Conditions</b>
Power Supply	V <sub>dd</sub>		3		Vdc	Replaceable CR123 Battery
Average supply current	l <sub>avg</sub>		35		μΑ	
Peak supply current	$I_{pk}$			50	mA	During Xmit
Resolution				12	bits	
Sampling Time				5	Sec	
Battery Life			5		Years	One sample/hr (SF7)

# OPERATING SPECIFICATIONS (ACCELEROMETER)

(Unless otherwise specified, all parameters are measured at 24°C @ 3.0V applied)

Parameter	Symbol	Min	Тур	Max	Unit	Notes/Conditions
Dynamic range			±50		g	
Frequency response		1		10k	Hz	±1db
Frequency response		1		15k	Hz	±3db
Resonant frequency	fo		30		kHz	
Transverse sensitivity			5		%	
Temperature sensitivity	Tc	-10		5	%	From -20 to 60°C
Non-linearity			±1		%	FSO
Resolution			12		bits	
Residual noise			0.06		g	RMS

# OPERATING SPECIFICATIONS (TEMPERATURE SENSOR)(1)

(Unless otherwise specified, all parameters are measured at 24°C @ 3.0V applied)

Parameter	Symbol	Min	Тур	Max	Unit	Notes/Conditions
Temp measurement range	Tr	-20		60	°C	
Accuracy			±1.5		°C	
Resolution			12		bits	

<sup>&</sup>lt;sup>(1)</sup>The temperature sensor is located inside the sensor enclosure. As such, it provides the temperature of the sensor interior, not the ambient temperature around the sensor, nor the temperature of surface to which the sensor is mounted.

# **ENVIRONMENTAL SPECIFICATIONS**


Parameter	Symbol	Min	Тур	Max	Unit	<b>Notes/Conditions</b>
Operating temperature		-20		60	°C	
Storage temperature		-40		120	°C	Without battery
Ambient humidity		0		95	%	Non-condensing
EMI/RFI/ESD protection			IEC61000-4-2, ICE61000-4-6			
Ingress protection	IP		66			
Media compatibility			External exposed surfaces: 316L stainless steel POM polymer EPDM o-ring			
Weight			200		grams	

# **COMMUNICATION SPECIFICATIONS**


Parameter	Symbol	Min	Тур	Max	Unit	<b>Notes/Conditions</b>
Wireless protocol		LoRa	aWAN™ Cla	ass A		
Operating freq (region) <sup>(1)</sup>		868 (EU) 915 (USA)			MHz	Other frequencies available Contact factory
Transmit power			12	14	dBm	
Receiver sensitivity			-131	-137	dBm	
Activation			OTAA			
Activation keys		Factory defined				Custom keys available Contact factory
						•

<sup>(1)</sup>Each operating frequency is part number specific


# **BLOCK DIAGRAM**

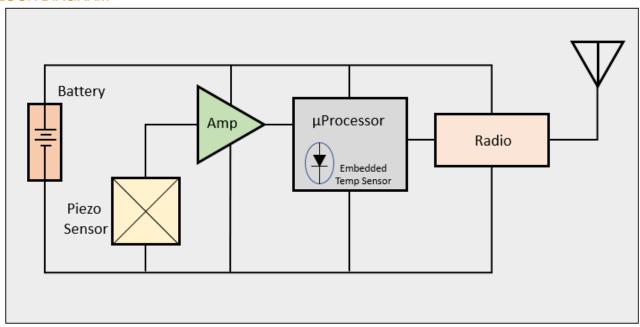


# TYPICAL ACCELEROMETER FREQUENCY RESPONSE CURVE

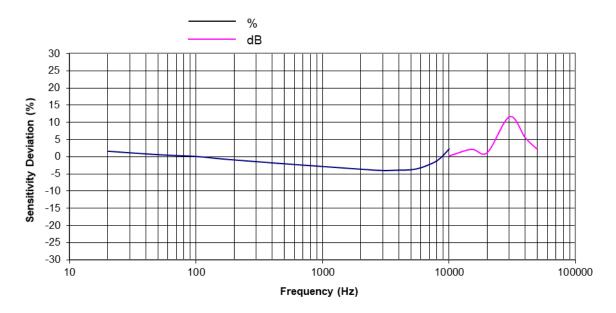

# TYPICAL TEMPERATURE RESPONSE CURVE

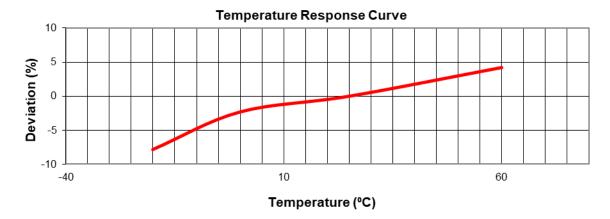


# **DIMENSIONS**

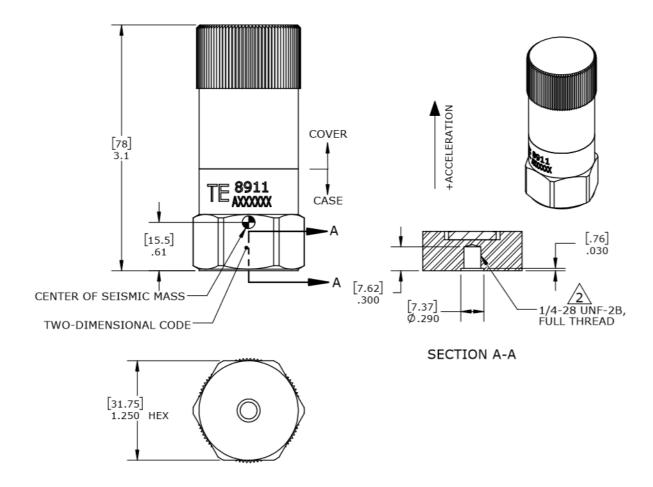


# MOUNTING CONSIDERATIONS AND ACCESSORIES


A solid mounting method is required to get optimum performance from the accelerometer. Any loose parts or unsecured mounting features will introduce noise and corrupt the signals of interest. Shown below are six different mounting options available for the 8911 accelerometer for proof of concept.

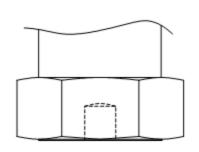



1/4-28 UNF Female THD (Integrated part of the sensor)

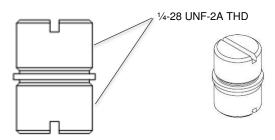


1/4-28:1/4-28 Male Stud P/N AC-D03636

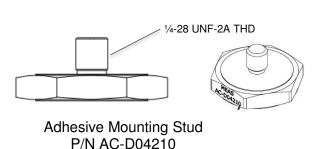

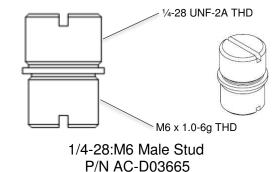

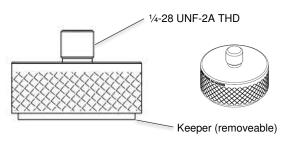

Magnetic Mounting Stud P/N AC-A04209

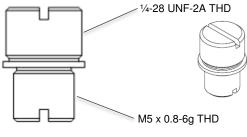

1/4-28:M5 Male Stud P/N AC-D03664

For the adhesive mounting stud, secure with a rigid adhesive such as epoxy or cyanoacrylate. Do not use pressure sensitive adhesives or foam tapes. For the magnetic mounting stud, remove the keeper prior to attachment. The magnetic mounting will have a 30 lb pull strength when attached to a ferrous surface.

### 8911 WIRELESS ACCELEROMETER FOR PROOF OF CONCEPT

LoRaWAN™ 868/915MHz

# LoRaWAN™ Uplink Payload

0	1	2	3	4	5	6	7	8	9	10	11	12	13
Batte	y n Peaks Detected		erature First)		Energy First)	Ši	ration ze First)		ak 1 Jency First)		ak 1 nitude first)	Peak 1 Ratio	Peak 2

- Frequency, Magnitude, Ratio pattern will repeat **n** times, once for each peak.
- Total Energy is the total energy (integrated over the whole FFT)
- Integration Size is the size of the integration around the peak. For each peak detected, the embedded algorithm will integrate over a range around the peak to measure the relative energy around this peak, and will also have the effect to disable detection of new peaks around this detected peak
- Frequency is the center frequency of the peak detected
- Magnitude is the magnitude value of the peak detected
- Ratio is the locally integrated (over 'Integration Size' Hz) around this peak compared to the total energy

### Data conversion:


Parameter	Range	Resolution	Offset	Hex Data Range	Error code
Battery (%)	0 - 100	1% / bit	0%	0x00 to 0x64	0xFF
Temperature (°C)	-20 to 60°C	0.1°C / bit	-100°C	0x0050 to 0x00A0	0xFFFF
Total Energy (g)	0 - 40	0.001g / bit	0g	0x0000 to 0x9C40	N/A
Integration Size (Hz)	0 - 18000	1Hz / bit	0Hz	0x0000 to 0x4650	N/A
Frequency (Hz)	0 - 18000	1Hz / bit	0Hz	0x0000 to 0x4650	N/A
Magnitude (g)	0 - 40	0.001g / bit	0g	0x0000 to 0x9C40	N/A
Ratio (%)	0 - 100	1% / bit	0%	0x00 to 0x64	N/A

Custom payload configurations available upon request.

The number of peaks detected by the algorithm is currently fixed at 8. This leads to a minimum LoRaWAN™ payload size of 48bytes, preventing the SF12 to be used in the US 915 configuration. Consequently, even if the network requests the device to use SF12, the device will use SF11 as the payload would not fit in the SF12 frame.

# LoRaWAN™ Configuration Downlink Payload

The device sampling period can be adjusted by sending a downlink LoRaWAN™ frame in the following format:




Example of a measurement interval set to 20min: 0200000014




LoRaWAN™ 868/915MHz

# **WORKFLOW**

When the sensor powers up it performs a self-diagnostic then tries to join the LoRaWAN™ network using OTAA. The sensor tries to join the network every 10 second and increases the join timer at every failed attempt by 20%, up to 1 hour maximum. After a successful join the sensor enters sampling mode.

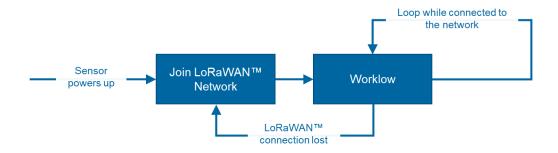


Once a LoRaWAN<sup> $\top$ M</sup> network has been joined, the sensor will loop through this workflow with a user defined period. If the LoRaWAN<sup> $\top$ M</sup> transmission fails too many times the sensor will consider it has left the LoRaWAN<sup> $\top$ M</sup> network and will go back to joining a network.



- Pressing the push button on the sensor at any point during the sensor's life cycle will automatically trigger a new capture and data analysis.

### **BATTERY LIFE**

The Sensor battery life will greatly depend on LoRa® spread factor (SF), therefore on sensor proximity from a gateway and network quality.

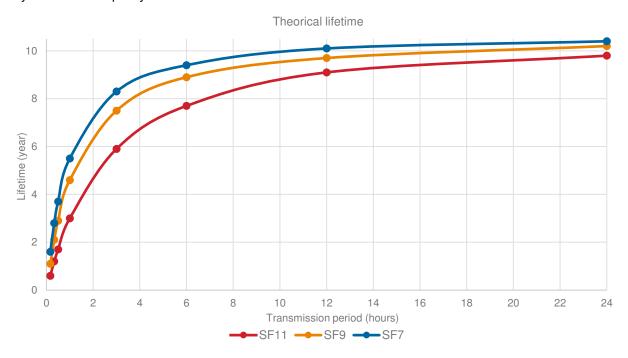

LoRaWAN™ 868/915MHz

# USING AND DISPLAYING DATA FROM THE SENSOR

The sensor vibration data in its FFT format can be used to construct visual displays and tables that provide significant information regarding the operation and health of the machinery to which it's attached. Examples are shown below:

# Raw Data:

RAW: 6408E4042D0A07010808A80017420B2E000AB60219000508001700031A101400056A170F0002DD0E0C0004B1060A0002


Index: 0/300

Timestamp: 2019-12-16T23:15:39.74Z

### Basic Data Table:

Peak Frequency (Hz)	Amplitude of Peak	% of Total Spectral Energy
2056	168	23
2882	46	10
694	25	5
8	23	3
4122	20	5
5994	15	2
3805	12	4
1713	10	2
Total Energy		2.605g

# FFT Visual Display:

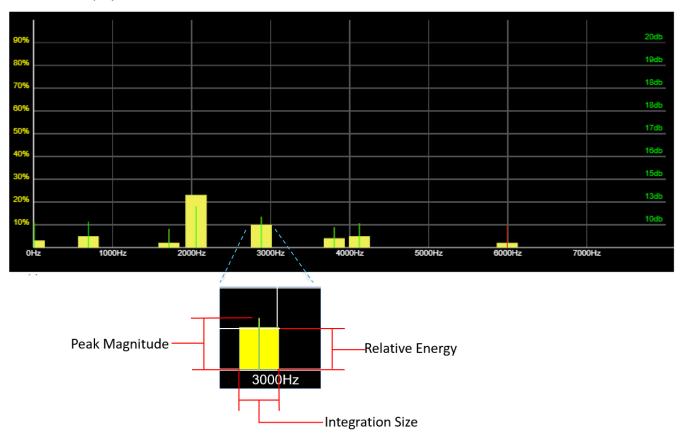


# **CONTROLS AND INDICATORS**

The sensor has a single push button and 2 LEDs that indicate its status, one blue and one red.

- Pressing the push button on the sensor at any point during the sensor's life cycle will automatically trigger
  a new capture and data analysis. This is useful when setting up the sensor in an application. No waiting
  for a data capture from the normal cycle.
- Blue LED:
  - will light-up for two seconds when sensor requests to join LoRaWAN™ network, and receives join acceptation
  - will light-up shortly when sensor samples data, transmits LoRaWAN™ payload, receives acknowledgement
- Red LED:
  - will light-up for two seconds if the LoRaWAN™ network join request is not accepted
  - will light-up short shortly if a transmitted LoRaWAN™ payload is not acknowledged
- Illumination of the colored LEDs can be seen through the translucent cover when it's attached.
- To gain access to the push-button and indicator LEDs, simply unscrew the top portion of the sensor housing and locate these components on the PC board. See image below.



### ORDERING INFORMATION

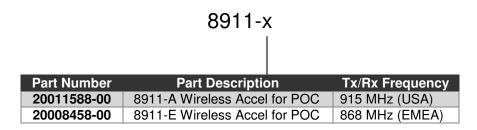

Mounting Accessories				
Part Number	Description			
AC-D04210	Adhesive Mounting Stud			
AC-A04209	Magnetic Mounting Stud			
AC-D03636	1/4 x 28 by 1/4 x 28 Double-ended Male Stud			
AC-D03665	1/4 x 28 by M6 Double-ended Male Stud			
AD-D03664	1/4 x 28 by M5 Double-ended Male Stud			

Note – Unit is shipped without a battery. Batteries are available from any of our distribution partners or at most retail locations that sell batteries.

CLICK HERE > CONNECT WITH A SPECIALIST

**NORTH AMERICA** 

Tel +1 800 522 6752

**EUROPE** 

Tel +31 73 624 6999

**ASIA** 

Tel +86 0400 820 6015

### te.com/sensors

TE Connectivity, TE, TE Connectivity (logo) and Every Connection Counts are trademarks. All other logos, products and/or company names referred to herein might be trademarks of their respective owners

The information given herein, including drawings, illustrations and schematics which are intended for illustration purposes only, is believed to be reliable. However, TE Connectivity makes no warranties as to its accuracy or completeness and disclaims any liability in connection with its use. TE Connectivity's obligations shall only be as set forth in TE Connectivity's Standard Terms and Conditions of Sale for this product and in no case will TE Connectivity be liable for any incidental, indirect or consequential damages arising out of the sale, resale, use or misuse of the product. Users of TE Connectivity products should make their own evaluation to determine the suitability of each such product for the specific application.

© 2021 TE Connectivity Corporation. All Rights Reserved.

03/2021

<sup>\*</sup>This device has not been authorized as required by the rules of the Federal Communications Commission.

# **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

TE Connectivity:

20008458-00