## intel<sup>®</sup> **REALSENSE**<sup>®</sup>

## Intel<sup>®</sup> RealSense<sup>™</sup> LiDAR Camera L515

**Datasheet** 

Intel<sup>®</sup> RealSense<sup>™</sup> LiDAR Camera L515

**Revision 003** 

January 2021

## intel<sup>®</sup> REALSENSE<sup>®</sup>

Intel products described herein. You agree to grant Intel a non-exclusive, royalty-free license to any patent claim thereafter drafted which includes subject matter disclosed herein.

No license (express or implied, by estoppel or otherwise) to any intellectual property rights is granted by this document.

Intel technologies' features and benefits depend on system configuration and may require enabled hardware, software or service activation. Performance varies depending on system configuration. No computer system can be absolutely secure. Check with your system manufacturer or retailer or learn more at intel.com.

Intel technologies may require enabled hardware, specific software, or services activation. Check with your system manufacturer or retailer.

The products described may contain design defects or errors known as errata which may cause the product to deviate from published specifications. Current characterized errata are available on request.

Intel disclaims all express and implied warranties, including without limitation, the implied warranties of merchantability, fitness for a particular purpose, and non-infringement, as well as any warranty arising from course of performance, course of dealing, or usage in trade.

All information provided here is subject to change without notice. Contact your Intel representative to obtain the latest Intel product specifications and roadmaps.

Copies of documents which have an order number and are referenced in this document may be obtained by calling 1-800-548-4725 or visit www.intel.com/design/literature.htm.

Intel and the Intel logo, Intel<sup>®</sup> Core<sup>™</sup>, Intel<sup>®</sup> Atom<sup>™</sup>, trademarks of Intel Corporation in the U.S. and/or other countries.

\*Other names and brands may be claimed as the property of others.

© 2021 Intel Corporation. All rights reserved.



## Contents

1	Descrip	ion and Features6
2	2.1 2.2	tion
3	<ul> <li>3.1</li> <li>3.2</li> <li>3.3</li> <li>3.4</li> <li>3.5</li> <li>3.6</li> </ul>	al Specification8Depth Camera Specification83.1.1Camera Accuracy HealthDepth Camera Controls and Data Format8Depth Quality Metrics9Depth Start Point (Ground Zero Reference)103.4.1Depth Origin X-Y Coordinates12Image Formats and Color Camera Functions12IMU Specification and Operating Modes13_515 Device Firmware Update (DFU)143.7.1Update14
4	4.1 4.2 4.3 4.4 4.5	RealSense™ LiDAR Camera L515 Hardware Specification15L515 Device Components15Color Camera Properties15Camera L515 Power Consumption15Camera Interface16Camera L515 Storage and Operating Conditions17(1)Controlled conditions should be used for long term storage of product17(2)Short exposure represents temporary max limits acceptable for transportation conditions17Material, Vendor and Device ID174.6.1Camera L515 Product Identifier and Material Code174.6.2Vendor Identification (VID) and Device Identification (DID)17
5		e (SDK)
6		cal Specifications
7	7.1	bry Ecology Compliance21System Laser Compliance217.1.1Certification Statement.217.1.2Explanatory Label217.1.3Cautionary Statements217.1.4Embedded Laser Information227.1.5US FDA Accession Number22Regulatory Compliance237.2.1Manufacturer's Information237.2.2EU Single Place of Contact23Ecology Compliance23

## intel<sup>™</sup> REALSENSE<sup>™</sup>

7.3.1	China RoHS Declaration	23
7.3.2	Waste Electrical and Electronic Equipment (WEEE)	24
Appendix A – L5	15 Product Box	25

## **Figures**

8

Figure	1-1. Intel® RealSense <sup>™</sup> LiDAR Camera L515 Exploded View	6
	3-1. Depth Quality Metric Illustration1	
	3-2. LiDAR Camera Depth Start Point Reference1	
Figure	3-3. LiDAR Camera X-Y Depth Origin Reference 1	2
	5-1. RealSense Viewer – L515 1	
Figure	6-1. Intel <sup>®</sup> RealSense <sup>™</sup> LiDAR Camera L5151	9
	6-2. Intel <sup>®</sup> RealSense <sup>™</sup> LiDAR Camera L515 Cooling Vents	
Figure	8-1. L515 Product Box 2	5

## **Tables**

Table 2-1. 7	Terminology Table	7
	Depth Specification	
Table 3-2.	Depth Camera Controls	8
Table 3-3: [	Depth and Infrared Data Formats	9
	Depth Quality Metrics	
Table 3-5.	Depth Quality Specification 1	0
Table 3-6.	LiDAR Depth Start Point 1	1
Table 3-7. I	Image Formats 1	2
Table 3-8. 0	Color Camera Controls 1	2
Table 3-9. I	Inertial Measurement Specifications1	3
Table 4-1. N	Main components	15
Table 4-2. 0	Color Camera Properties 1	15
	Power Requirements 1	
Table 4-4. F	Power Consumption 1	6
	Storage and Operating Conditions 1	
	Product Identifier and Material Code 1	
Table 4-7. \	Vendor ID and Device ID Table 1	7
	Intel <sup>®</sup> RealSense <sup>™</sup> LiDAR Camera L515 Mechanical Dimensions 1	
	U.S. FDA Accession Number 2	



## **Revision History**

<b>Revision Number</b>	Description	Revision Date		
001	Initial release December 2019			
002	<ul> <li>Section 1. Description and Features</li> <li>Section 3.1.1. Camera Accuracy Health</li> <li>Section 3.4. Depth Start Point (Ground Zero Reference)</li> <li>Section 7.1.4. Embedded Laser Information</li> <li>Table 3-2. Depth Camera Controls</li> <li>Table 3-4. Depth Quality Metrics</li> <li>Table 3-5. Depth Quality Specification</li> <li>Table 3-6. Depth Start Point</li> <li>Table 3-7. Image Formats</li> <li>Table 4-2. Color Camera Properties</li> <li>Table 4-5. Storage and Operating Conditions</li> <li>Figure 3-2. LiDAR Camera Depth Start Point Reference</li> </ul>	June 2020		
003	<ul> <li>•Figure 6-1. Intel® RealSense™ LiDAR Camera L515</li> <li>•Table 3-1. Depth Specification</li> <li>•Table 3-2. Depth Camera Controls</li> <li>•Table 3-7. Image Formats</li> <li>•Figure 3-3. LiDAR Camera X-Y Depth Origin Reference</li> </ul>	January 2021		

§§



## **Description and Features**

#### **Description**

1

The Intel<sup>®</sup> RealSense<sup>™</sup> LiDAR Camera L515 is Intel's first release of a LiDAR camera enabling highly accurate depth sensing in a small form factor.

Small enough to fit in the palm of your hand, the L515 is 61mm in diameter and 26mm in height. At approximately 100g, it's designed to be easily situated on any system, or attached to a tablet or phone. It also runs at less than 3.5W, considerably lower than competing time-of-flight (TOF) solutions. All depth calculations run on the device resulting in true platform independence.

With a short exposure time of <100ns per depth point, even rapidly moving objects can be captured with minimal motion blur. Optimized for indoor lighting, the L515 processes over 23 million depth points per second via a custom made ASIC. The product has been designed for use case flexibility with the inclusion of an RGB camera and an inertial measurement unit.

#### **Features**

- Depth Capture from 0.25 to 9m<sup>(1)</sup>
- 2MP RGB Camera<sup>(2)</sup>
- Inertial Measurement Unit (IMU)
- Up to 30FPS Depth at 1024x768 (XGA)
- Up to 30FPS Color at 1920x1080 (FHD)
- Class 1 Laser Compliant
- Device Accuracy Health<sup>(2)</sup>
  - (1) Tested at 95% reflectivity.
  - (2) RGB camera always on.

#### **Minimum System Requirements**

USB 3.1 Gen1 Ubuntu\*16.xx/18.04 LTS Windows\*10 (build 15063 or later)

#### Figure 1-1. Intel® RealSense™ LiDAR Camera L515 Exploded View



## 2 Introduction

## 2.1 **Purpose and Scope of this Document**

This document captures the specifications for the Intel<sup>®</sup> RealSense<sup>m</sup> LiDAR Camera L515.

## 2.2 Terminology

#### Table 2-1. Terminology Table

Term	Description	
Depth	Depth video streams are like color video streams except each pixel has a value representing the distance away from the camera instead of color information	
FOV	Field Of View (FOV) describes the angular extent of a given scene that is imaged by a camera. A camera's FOV can be measured horizontally, vertically, or diagonally	
Host System	Computer or SOC connected to depth camera	
IR Laser	This refers to the source of infrared (IR) light used for illuminating a scene, object, or person to collect depth data.	
IMU	Inertial Measurement Unit is a system-in-package for the detection of acceleration in 3 dimensions and rotations in 3 dimensions.	
Lidar	Light Detection and Ranging is a remote sensing technology that measures the distance to objects and targets using a combination of laser light and receivers.	
MEMS	Micro-Electro-Mechanical System	
RH	Relative humidity	
TBD	To Be Determined. In the context of this document, information will be available in a later revision.	

## 2.3 LiDAR Technology Overview

The Intel<sup>®</sup> RealSense<sup>™</sup> LiDAR Camera L515 uses an IR laser, a MEMS, an IR photodiode, an RGB imager, a MEMS controller, and a vison ASIC. The MEMS is used to scan the IR laser beam over the entire field-of-view (FOV). The L515 vision ASIC will process the data from the reflected beam captured by the photodiode and will output a depth point representing the accurate distance of a specific point in the scene from the camera. Aggregation of the depth points will generate a point cloud depth data representing the full scene.



## 3 Functional Specification

## **3.1 Depth Camera Specification**

#### Table 3-1. Depth Specification

Depth Resolution	Number of depth points per second	<b>FOV</b> <sup>1</sup>	Range @ 15% reflectivity <sup>2</sup>	Range @ 95% reflectivity <sup>2</sup>
QVGA (320x240)	2.3M	70° x 55°	0.25 - 3.9m	0.25 - 9m
VGA (640x480)	9.2M	70° x 55°	0.25 - 3.9m	0.25 - 9m
XGA (1024x768)	23.6M	70° x 55°	0.25 - 2.6m	0.25 - 6.5m

<sup>1</sup> Due to mechanical tolerances, FOV can vary +/- 2 degrees.

 $^2$  Max range is specified for the center 10% ROI of the image, as long as the operating conditions are met.

#### **3.1.1 Camera Accuracy Health**

In order to ensure the long-term optimal accuracy of the L515's cutting edge depth technology, Intel® has implemented an additional accuracy assurance method utilizing the RGB camera. The feature runs on the host as part of the Intel® RealSense<sup>™</sup> SDK 2.0 and will require a few RGB frames to be sent to the host. These RGB frames are used to analyze the scene and compared with the depth camera to verify alignment between both cameras.

The accuracy health-test and maintenance feature is automatically enabled and all customers gain this feature without any user interaction.

To ensure complete transparency, this functionality is in the Intel® RealSense<sup>™</sup> SDK 2.0 open source SDK (LibRealSense).

## **3.2 Depth Camera Controls and Data Format**

In order to achieve optimal performance of the camera, three presets are offered based on the desired range of the application.

#### Table 3-2. Depth Camera Controls

Preset	Description
	This preset is useful when there is no ambient light in the scene (fully indoors use case, with no light coming through windows). With this preset the laser power is set to maximum as well as the receiver gain which optimize the depth quality in indoor conditions.

## intel<sup>®</sup> REALSENSE<sup>®</sup>

Preset	Description		
Short Range	This preset lowers the laser power and gain so that close objects do not oversaturate the receiver. This allows operation at a close distance to objects. This setting may not be good if objects further away in the scene also need to perform well.		
No Ambient Light	Same as Max Range preset, this preset is useful when there is no ambient sunlight in the scene. The main difference between the presets is the laser power which is lower on this preset to avoid false depth on objects that are on longer distances than the ambiguity range (10m-VGA, 6.5m-XGA).		
Low Ambient Light	This preset is recommended for environments where there may be a low amount of ambient sunlight present. Similar to Max Range preset the laser power is set to maximum but the receiver gain is reduced to avoid saturation of the camera due to ambient sunlight. The preset is also recommended for cases that the user wants to detect close objects (<50cm).		

#### **Table 3-3: Depth and Infrared Data Formats**


FORMAT	KEY	ТҮРЕ	DESCRIPTION
Depth	Z	16bDepth format equating to distance from the deviceUINTsubassembly planar surface to the object.	
Infrared	Y8	8bIR image representing the intensity of the reflected IRUINTlaser reflected off the objects in the scene.	
Confidence	С	4b UINT	Provides a per pixel confidence value, 0xF equals high confidence and 0x0 represents low confidence.

## **3.3 Depth Quality Metrics**

#### **Table 3-4: Depth Quality Metrics**

METRIC	DEFINITION
Depth Accuracy	Represents the average difference of valid pixels relative to ground truth.
Depth Standard Deviation	Represents the total spread (noise) of the depth values relative to ground truth.



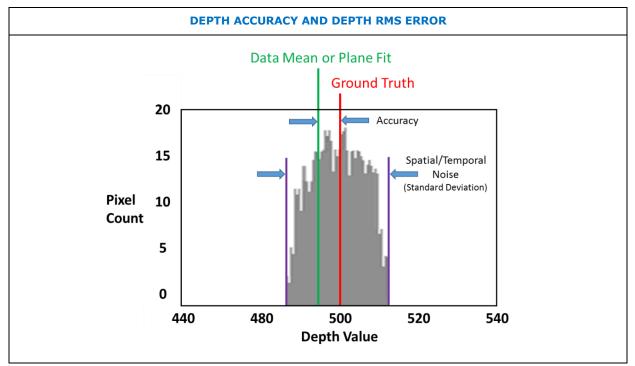

#### Figure 3-1. Depth Quality Metric Illustration

#### **Table 3-5. Depth Quality Specification**


Metric	Value	Notes
Depth Accuracy – Avg	< 5mm @ 1m < 14mm @ 9m	VGA resolution, 95% reflectivity
Depth – Std Dev	2.5mm @ 1m 15.5mm @ 9m	VGA resolution, 95% reflectivity
Exposure Time	< 100ns per depth point	Robust against motion blur
Lighting Condition	< 500 lux sunlight (0.4uW/cm2/nm)	

## **3.4 Depth Start Point (Ground Zero Reference)**

The depth start point or the ground zero reference can be described as the starting point or plane where depth = 0. For LiDAR camera (L515), this point is referenced from front of camera cover glass



#### Figure 3-2. LiDAR Camera Depth Start Point Reference

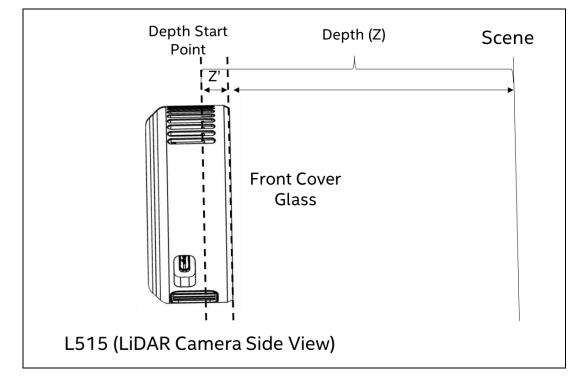

#### Table 3-6. LiDAR Depth Start Point

LiDAR Camera	Camera Front Glass (Z')
L515	-4.5mm

#### NOTES:


If depth measurement reference is front cover glass, then  $|\mathsf{Z}'|$  should be added to measured value to determine Ground Truth.

This value can be read via Intel $\mbox{B}$  RealSense<sup>TM</sup> SDK 2.0 APIs. Please see the latest SDK for reference.



#### **3.4.1 Depth Origin X-Y Coordinates**

The depth origin X-Y coordinates is the X-Y center of the IR Transmitter.

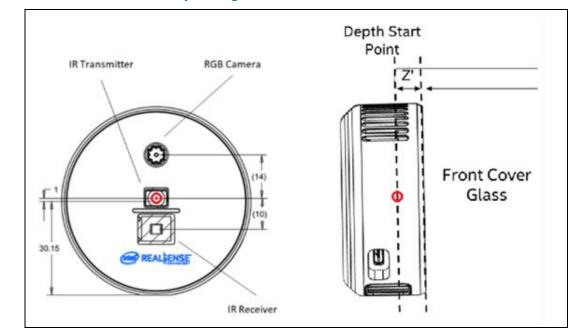

#### Figure 3-3. LiDAR Camera X-Y Depth Origin Reference

## **3.5 Image Formats and Color Camera Functions**

#### **Table 3-7. Image Formats**

Format	Resolution	Frame Rate (FPS)	Comment
	1920x1080	6,15,30	Color Stream from RGB
YUY2	1280x720	6,15,30,60	camera
	960x540	6,15,30,60	

#### NOTE:

Color camera frame rates are expressed as nominal. Effective frame rates can vary depending on the exposure settings of the camera. Camera settings that increase the exposure time can decrease the effective frame rate.

#### **Table 3-8. Color Camera Controls**

Control	Description	Min	Мах
Auto-Exposure Mode	Automatically sets the exposure time and gain for the frame.	0x1	0x8
Manual Exposure Time	Sets the absolute exposure time when auto-	1	10000



Control	Control Description		Мах
	exposure is disabled.		
Brightness	Sets the amount of brightness applied when auto- exposure is enabled.	-64	64
Contrast	Sets the amount of contrast based on the brightness of the scene.	0	100
Gain	Sets the amount of gain applied to the frame if auto- exposure is disabled.	0	4096
Hue	Sets the amount of hue adjustment applied to the frame.	-180	180
Saturation	Sets the amount of saturation adjustment applied to the frame.	0	100
Sharpness Sets the amount of sharpening adjustment applied to the frame.		0	100
White Balance Temperature Control	ntrol balance when AWB is disabled.		6500
White Balance Temperature Auto (AWB)	Enables or disables the AWB algorithm.	0	1
Power Line Frequency	Specified based on the local power line frequency for flicker avoidance.	Disabled 50Hz 60Hz Auto	
Backlight Compensation	Sets a weighting amount based on brightness to the frame.	0	255

## **3.6 IMU Specification and Operating Modes**

#### **Table 3-9. Inertial Measurement Specifications**

Parameter	Properties
Model	Bosch BMI085
Degrees of Freedom	6
Acceleration Range	±4g
Accelerometer Output Data Rate	100Hz/200Hz/400Hz



Gyroscope Range	±1000 Deg/s
Gyroscope Output Data Rate	100Hz/200Hz/400Hz
Data Format	32b Float

Accelerometer and gyroscope data streams from the onboard IMU are available via Intel® RealSense  $^{\rm TM}$  SDK 2.0.

## 3.7 L515 Device Firmware Update (DFU)

The firmware contains the operation instructions. Upon runtime, Vision ASIC loads the firmware and programs the component registers. If the Vision ASIC is configured for update or recovery, the unlocked R/W region of the firmware can be changed.

#### 3.7.1 Update

During a firmware update, the firmware utility will issue a device firmware update command to the Vision ASIC. The Vision ASIC will then reset into firmware update mode. The firmware utility uses a single binary file to maintain the firmware image.

#### 3.7.1.1 Update Limits

The firmware update engine does not allow infinite update cycles between older and current versions of firmware. The engine will establish a baseline version of firmware based on the latest firmware version installed. The engine will allow a return to a previous version or baseline version of firmware up to 20 times. After the 20th update, the engine will only allow an update to a firmware revision higher than the baseline version.

§§



## 4 Intel® RealSense<sup>™</sup> LiDAR Camera L515 Hardware Specification

## 4.1 L515 Device Components

#### **Table 4-1. Main components**

Component	Description	
BMI085	Accelerometer and Gyroscope in a single package	
OV2740	RGB image sensor	
IR emitter	860nm IR laser	

## 4.2 Color Camera Properties

#### Table 4-2. Color Camera Properties

Parameter	Camera Sensor Properties
Color Image Signal Processor	Embedded*
Active Pixels	1920 X 1080
Sensor Aspect Ratio	16:9
Format	1/6″
F Number	2.0
Focal Length	1.88mm
Focus	Fixed
Shutter Type	Rolling Shutter
Signal Interface	MIPI CSI-2, 2X Lanes
Horizontal Field of View	69° +/-1°
Vertical Field of View	42° +/-1°

\* arm This product uses Arm® Assertive Camera™ technology by Arm Limited.

### 4.3 Camera L515 Power Consumption

The Intel® RealSense<sup>m</sup> LiDAR Camera L515 is powered through USB VBUS power connected to host platform via USB type-C connection. The same cable is used for data transfer.



#### Table 4-3. Power Requirements

Pa	rameter	Min	Nom	Max	Unit
VCC	Supply Voltage	4.5	5	5.5	V

#### **Table 4-4. Power Consumption**

Model	Idle Power (W)	Normal Power (W) Typical Usage Configuration (@ 25°C)	Notes
	0.8	3.0	Depth (VGA)
L515		3.2	Depth (VGA) + RGB (1080p, 30FPS)
LSIS		3.1	Depth (XGA)
		3.3	Depth (XGA) + RGB (1080p, 30FPS)

## 4.4 Camera Interface

The interface to L515 is USB 3.0 Type-C. Standard USB3 cables with max over-mold size of 6.5mmx12mm are supported.



## 4.5 Camera L515 Storage and Operating Conditions

#### **Table 4-5. Storage and Operating Conditions**

Parameter	Condition	Min	Max	Unit
Storage (Still Air), Not	Sustained, Controlled <sup>(1)</sup>	0	50	°C
Operating	Short Exposure (2)	-20	70	°C
	Humidity, Non- Condensing Temperature/ RH: 40°C / 9		°C / 90%	
Operating <sup>(3)(4)</sup>	Ambient temperature range when the device is streaming	0	30	°C
Skin Temperature @ 25C Ambient <sup>(3)(4)</sup>	Camera housing temperature	N/A	50	°C

#### NOTE:

- (1) Controlled conditions should be used for long term storage of product.
- (2) Short exposure represents temporary max limits acceptable for transportation conditions.
- (3) Under typical indoor air flow.
- (4) Depth and RGB enabled simultaneously.

### 4.6 Material, Vendor and Device ID

#### 4.6.1 Camera L515 Product Identifier and Material Code

#### **Table 4-6. Product Identifier and Material Code**

Production	Product Material Code
Camera L515	999NGF

## 4.6.2 Vendor Identification (VID) and Device Identification (DID)

#### Table 4-7. Vendor ID and Device ID Table

Depth Module/Depth Camera	Vendor ID	Device ID	
Intel <sup>®</sup> RealSense <sup>™</sup> LiDAR Camera L515	8086	0x0B64	



## 5 Software (SDK)


## **5.1** Intel<sup>®</sup> RealSense<sup>™</sup> Software Development Kit 2.0

Intel<sup>®</sup> RealSense<sup>™</sup> SDK 2.0 is a cross-platform library for working with Intel<sup>®</sup> RealSense<sup>™</sup> LiDAR Camera L515. It is open source and available on <u>https://www.intelrealsense.com/sdk-2/</u>

The SDK at a minimum includes:

- Intel<sup>®</sup> RealSense<sup>™</sup> Viewer This application can be used view, record and playback depth streams, set camera configurations and other controls.
- **Depth Quality Tool** This application can be used to test depth quality, including: distance to plane accuracy, Z accuracy, standard deviation of the Z accuracy and fill rate.
- **Debug Tools** These command line tools gather data and generate logs to assist in debug of camera.
- **Code Examples** Examples to demonstrate the use of SDK to include D400 Series camera code snippets into applications.
- Wrappers -Software wrappers supporting common programming languages and environments such as ROS, Python, Matlab, node.js, LabVIEW, OpenCV, PCL, .NET and more

#### Figure 5-1. RealSense Viewer – L515

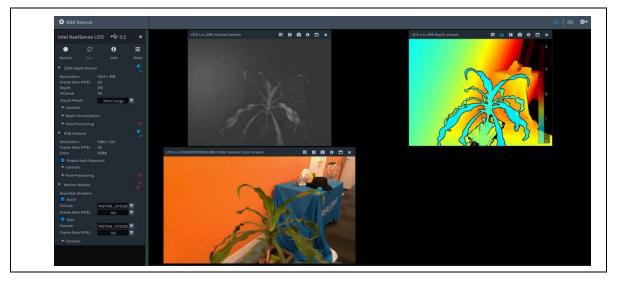

6


# ifications REALSENSE<sup>™</sup> Mechanical Specifications

### 6.1.1 Mechanical Dimensions

#### Table 6-1. Intel<sup>®</sup> RealSense<sup>™</sup> LiDAR Camera L515 Mechanical Dimensions


Dimension	Nominal	Unit
Diameter	61	mm
Height	26	mm
Weight	95	g

#### Figure 6-1. Intel<sup>®</sup> RealSense<sup>™</sup> LiDAR Camera L515

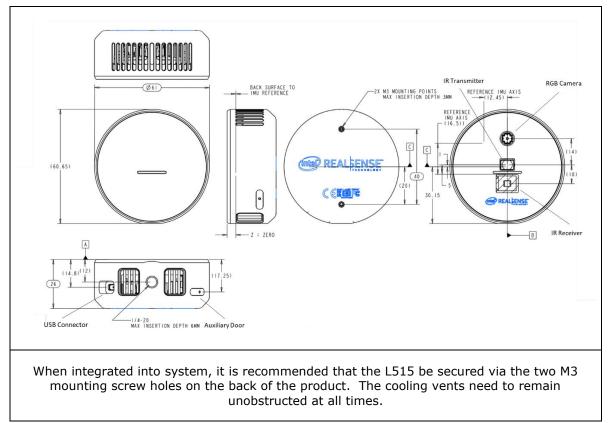



#### Figure 6-2. Intel<sup>®</sup> RealSense<sup>™</sup> LiDAR Camera L515 Cooling Vents

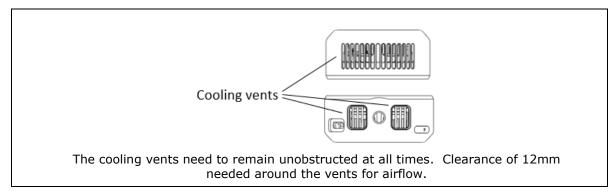

## 6.2 L515 Cover Material Cleaning Procedure

- 1. Do not use any chemical or water on the camera cover material
- 2. Remove dust and dirt as much as possible from the cover material with a lens blower brush.
- 3. Wipe with a dry, clean micro-fiber cloth.

§§



## 7 Regulatory Ecology Compliance

## 7.1 System Laser Compliance

The Intel<sup>®</sup> RealSense<sup>™</sup> LiDAR Camera L515 certification is transferable to the system and no system recertification is required. However, the following statements and labels must be included in the user manual of the end product.

### 7.1.1 Certification Statement

This product is classified as a Class 1 Laser Product under the EN/IEC 60825-1, Edition 3 (2014) internationally.

In the US, this product is in conformity with performance standards for laser products under 21 CFR 1040, except with respect to those characteristics authorized by Variance Number 2018-V-3042-0001 effective on August 28, 2018.

### 7.1.2 Explanatory Label



### 7.1.3 Cautionary Statements



System integrators should refer to their respective regulatory and compliance owner to finalize regulatory requirements for a specific geography.

# 



**Caution** - Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

- Do not power on the product if any external damage was observed.
- Do not attempt to open any portion of this laser product. There are no user serviceable parts.
- Invisible laser radiation when opened. Avoid direct exposure to beam.



- There are no service/maintenance, modification, or disassembly procedures for the stereo module and infrared projector. The system integrator must either notify Intel or return modules before any failure analysis is performed.
- Modification or service of the stereo module, specifically the infrared projector, may cause the emissions to exceed Class 1.
- Do not try to update camera firmware that is not officially released for specific camera module SKU and revision.

### 7.1.4 Embedded Laser Information

- Wavelength (0-50°C): 844-875nm
- Beam divergence (without collimation): (6x10) deg to (15-21) deg; parallel x perpendicular
- Pulse duration and repetition rate:
  - 1ns pulse duration
  - 500 MHz repetition
  - Rise/Fall time: 300ps
- Maximum power or energy output: 240mW

#### 7.1.5 US FDA Accession Number

#### Table 7-1. U.S. FDA Accession Number

Component	U.S. FDA accession numbers		
Intel <sup>®</sup> RealSense <sup>™</sup> LiDAR Camera L515	1820840		

This accession number should be entered into Box B.1 of the Food and Drug Administration (FDA) 2877 Declaration for Imported Electronic Products Subject to Radiation Control Standards.

22



## 7.2 Regulatory Compliance

### 7.2.1 Manufacturer's Information

Intel Corporation: Attn: Corp. Quality 2200 Mission College Blvd, Santa Clara, CA 95054-1549, USA

### 7.2.2 EU Single Place of Contact

Att. Corp Quality Intel Deutschland GmbH Am Campeon 10-12 Neubiberg, 85579 – Germany

## 7.3 Ecology Compliance

### 7.3.1 China RoHS Declaration

## China RoHS Declaration

#### 产品中有毒有害物质的名称及含量

#### Hazardous Substances Table

部件名称	有毒有害物质或元素 Hazardous Substance					
Component Name	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
	Pb	Hg	Cd	Cr (VI)	PBB	PBDE
相机	0	0	0	0	0	0
Camera	Ŭ	<u> </u>	0		Ŭ	<u> </u>
印刷电路板组件	Х	0	0	0	0	0
Printed Board Assemblies						
三角架 Tripod	0	0	0	0	0	0
电缆 Cable	0	0	0	0	0	0

# 

〇:表示该有毒有害物质在该部件所有均质材料中的含量均在GB/T 26572标准规定的限量要求以下。

O: Indicates that this hazardous substance contained in all homogeneous materials of such component is within the limits specified in GB/T 26572.

×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572标准规定的限量要求。

 $\times$ : Indicates that the content of such hazardous substance in at least a homogeneous material of such component exceeds the limits specified in GB/T 26572.

对销售之日的所售产品,本表显示我公司供应链的电子信息产品可能包含这些物质。注意:在所售产品中可能会也可能不会含有所有所列的部件。

This table shows where these substances may be found in the supply chain of our electronic information products, as of the date of sale of the enclosed product. Note that some of the component types listed above may or may not be a part of the enclosed product.

除非另外特别的标注,此标志为针对所涉及产品的环保使用期限标志.某些可更换的零部件可能会有一个不同的环保使用期限(例如,电池单元模块).

此环保使用期限只适用于产品在产品手册中所规定的条件下工作.



The Environment-Friendly Use Period (EFUP) for all enclosed products and their parts are per the symbol shown here, unless otherwise marked. Certain field-replaceable parts may have a different EFUP (for example, battery modules) number. The Environment-Friendly Use Period is valid only when the product is operated under the conditions defined in the product manual.

### 7.3.2 Waste Electrical and Electronic Equipment (WEEE)



"In the EU, this symbol means that this product must not be disposed of with household waste. It is your responsibility to bring it to a designated collection point for the recycling of waste electrical and electronic equipment. For more information, contact the local waste collection center or your point of purchase of this product."


§§

## intel<sup>®</sup> **REALSENSE<sup>®</sup>**

## 8 Appendix A – L515 Product Box

Inside Intel® RealSense<sup>m</sup> LiDAR Camera L515 product box you will find the L515 camera, a tripod and a USB3 cable.

#### Figure 8-1. L515 Product Box

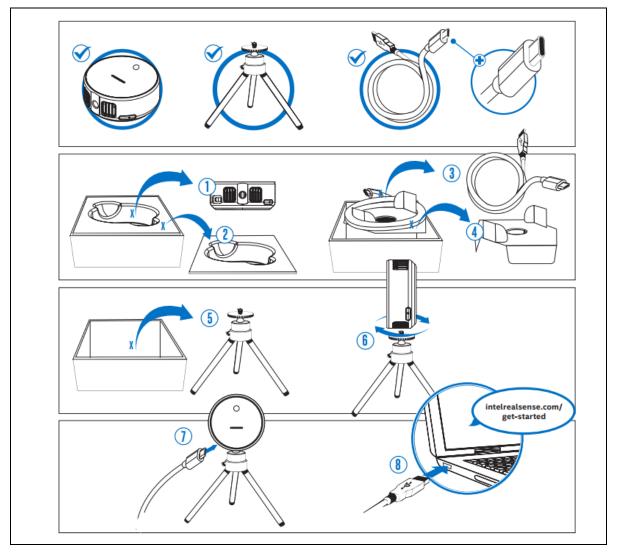

## **Mouser Electronics**

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Intel: 82638L515G1PRQ