

GX66 600+ Amp 12-800 Vdc Contactor

<image>

FEATURES

- Rugged <u>EPIC®</u> seal rated to 175°C Reduced risk of fire or meltdown in over current conditions. The same technology used for advanced aerospace programs.
- Hermetically sealed Designed to meet: UL1604 for Class I & II, Div 2 and Class III for use in hazardous locations, IP67 for temporary water immersion for 30 min, SAE J1171 external ignition protection, and ISO8846 for protection against ignition around flammable gasses.
- High Efficiency Dual DC Coils Very low 12, 24 or 48 VDC continuous coil power with no EMI emissions or crosstalk on your system control power. Ideal for battery powered systems or where low power is needed.
- Built-in coil suppression for all DC coils Saves you engineering time and parts cost to add external coil suppression.
- Stainless steel screws and washers, for years of corrosion free service.
- > Not position sensitive can be mounted in any position for ease of installation.

ADVANCED SWITCHING SOLUTIONS




PRODUCT SPECIFICATIONS

Specifications	Units	Data
Contact Arrangement		
Main	Form X	SPST-NO
Auxilary (2A, 24VDC) ¹	Form A or B	SPST-NO or SPST-NC
Mechanical Life	Cycles	1,000,000
Contact Resistance ²		
Мах	mohms	0.3
Typical	mohms	0.11 to 0.2
Operate Time ³		
Мах	ms	20
Typical	ms	13
Release Time, Max	ms	7
Insulation Resistance ⁴	Mohms	100
Dielectric At Sea Level (Leakage < 1mA)	VRMS	2,200
Shock, 1/2 Sine, 11ms	G peak	20
Vibration, Sinusoidal (500-2000 Hz Peak)	G	15
Ambient Temp Range		
Operating ⁵	С	-55 to +85
Storage	°C	-70 to +150
Weight, Typical	Kg (Lb)	0.73 (1.6)
Environmental Seal	Exceeds IP67 & IP69K	
Salt Fog	MIL-STD-810	

POWER SWITCHING AND CURRENT CARRY RATINGS

DC POWER SWITCHING CYCLES⁹

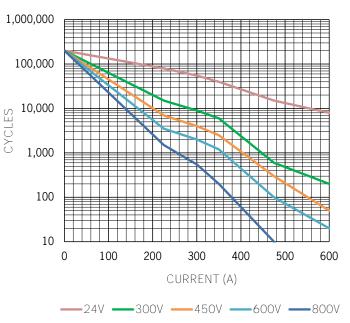


COIL RATINGS at 25°C

Coil P/N Designation	В	С	F
Coil Voltage, Nominal	12 VDC	24 VDC	48 VDC
Coil Voltage, Max	16 V	32 V	64 V
Pick-Up Voltage, Max ^{6, 8}	8 V	16 V	30 V
Drop-Out Voltage	0.5 to 4.5 V	0.5 to 7.5 V	2 to 15 V
Pick-Up Current, Max (75 ms) ^{6, 7}	3.8 A	1.9 A	0.9 A
Coil Current ⁷	0.64 A	0.32 A	0.16 A
Coil Power ⁷	7.8 W	7.8 W	7.8 W
Internal Coil Suppression			
Coil Back EMF	55 V	55 V	125 V
Transients, Max (13 ms)	±50 V	±50 V	±75 V
Reverse Polarity	16 V	32 V	64 V


CURRENT CARRY vs TIME


with 85°C terminal temperature rise

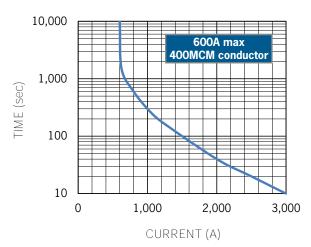




DIMENSIONS

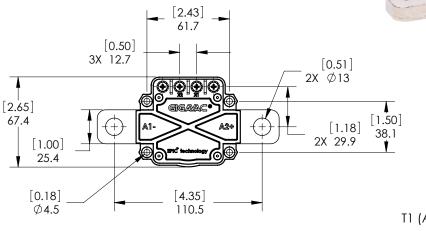

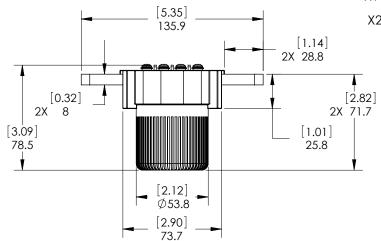

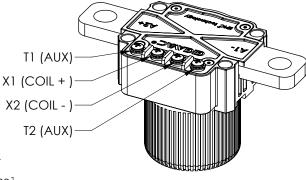

GX66BD

Mounting

- 1. Busbar with M12 Hardware See Power Connection for torque
- 2. Panel Mount with M4 Screws

Case Material

DuPont Zytel FR50 (25% Glass Filled Nylon)

Power Connection

M12 Hardware


Torque 23-34Nm [200-300in-lb]


Coil/Auxiliary Connection


18-8 Stainless Steel Hardware M4x.7 6mm Phillips Machine Screw Internal-Tooth Washer

Torque .75Nm [6.6in-lb] max

Power Contacts







GIGAVAC® - 6382 Rose Lane - Carpinteria, CA 93013 - ph +1-805-684-8401 - fax +1-805-684-8402 <u>info@gigavac.com</u> - <u>www.gigavac.com</u> - ©Copyright 2003-2014 GIGAVAC, LLC.

PART NUMBER SYSTEM

GX66	В	D	В
Coil Voltage	B = 12 Vdc, Internal Coil Suppression		
	C = 24 Vdc, Internal Coil Suppression		
	F = 48 Vdc, Internal Coil Suppression		
Coil Termination		D = Coil Screw, M4	
Auxiliary			Blank = None
Contact			B = SPST, Normally Open
			C = SPST, Normally Closed

APPLICATION NOTES

• Contactors feature internal transorb for coil suppression. <u>No external</u> <u>diodes</u> should be added across the coil. The use of additional external coil suppression can slow the release time and invalidate the life cycle ratings, or can cause the contactor not to be able to interrupt the maximum current specified. If lower coil back EMF is required, please contact GIGAVAC for assistance.

• Power switching lifecycles are based on <u>current flow</u> from A2(+) to A1(-). For best breaking performance, the contactor should be installed so that current flows from A2(+) to A1(-). There are cases where the contactor will interrupt power in the opposite direction but please contact GIGAVAC to confirm suitability. Direction of current flow is not relevant during make or when flowing on closed contacts. For bi-directional contactors, please contact GIGAVAC.

• Applications with <u>capacitors</u> will require a pre-charge circuit.

• Electrical life rating is based on resistive load with 27μ H maximum inductance in circuit. Because your application may be different, we suggest you test the contactor in your circuit to verify life is as required.

• End of life is defined as when the dielectric, insulation resistance or contact resistance fails the specifications listed.

Notes & Definitions:

1 Auxillary contact rating is 2A, 24Vdc Resistive load, 100,000 cycles. Minimum current is 0.1mA, 5V. The auxiliary contact is mechanically linked to the main power contacts.

2 Contact resisitance measured at currents higher than 100A.

3 Operation time is measured at 25°C and includes maximum 7ms bounce.

4 Insulation resistance is 50 Mohms after life.

5 Contactor can operate up to 125°C in special cases - contact GIGAVAC for details.

6 Contactor has two coils. Both are used for pick-up, and then in approximately 75 milliseconds, one coil is electronically removed from the coil drive circuit. The remaining coil supplies low continuous hold power sufficient for the contactor to meet all of its specified performance specifications. This provides low coil power without PWM electronics that can cause EMI emissions and/or cross-talk on control power.

7 Contactor is operated by a coil that changes resistance with temperature. Since pick-up current, coil current and coil power are specified at nominal voltage, they will be lower than indicated at temperatures above 25°C and higher than indicated at temperatures below 25°C. Similarly, pick-up and drop-out voltages will be higher than indicated at temperatures above 25°C and lower than indicated at temperatures below 25°C.

8 For pick-up testing of contactors with dual coils, the voltage can not be ramped up slowly, but must be applied instantly to at least the maximum pick-up voltage. Otherwise, the contactor will not pick-up.

9 For AC power switching cycles, contact factory. Limit make current to 1000A to avoid contact welding.

Datasheets provided by Sensata Technologies, Inc., its subsidiaries and/or affiliates ("Sensata") are solely intended to assist third parties ("Buyers") who are developing systems that incorporate Sensata products (also referred to herein as "components"). Buyer understands and agrees that Buyer remains responsible for using its independent analysis, valuation, and judgment in designing Buyer's systems and products. Sensata datasheets have been created using standard laboratory conditions and engineering practices. Sensata has not conducted any testing other than that specifically described in the published documentation for a particular datasheet. Sensata may make corrections, enhancements, improvements, and other changes to its datasheets or components without notice.

Buyers are authorized to use Sensata datasheets with the Sensata component(s) identified in each particular datasheet. HOWEVER, NO OTHER LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE TO ANY OTHER SENSATA INTELLECTUAL PROPERTY RIGHT, AND NO LICENSE TO ANY THIRD PARTY TECHNOLOGY OR INTELLECTUAL PROPERTY RIGHT, IS GRANTED HEREIN. SENSATA DATASHEETS ARE PROVIDED "AS IS". SENSATA MAKES NO WARRANTIES OR REPRESENTATIONS WITH REGARD TO THE DATASHEETS OR USE OF THE DATASHEETS, EXPRESS, IMPLIED, OR STATUTORY, INCLUDING ACCURACY OR COMPLETENESS. SENSATA DISCLAIMS ANY WARRANTY OF TITLE AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUIET ENJOYMENT, QUIET POSSESSION, AND NON-INFRINGEMENT OF ANY THIRD PARTY INTELLECTUAL PROPERTY RIGHTS WITH REGARD TO SENSATA DATASHEETS OR USE THEREOF.

All products are sold subject to Sensata's terms and conditions of sale supplied at www.sensata.com. SENSATA ASSUMES NO LIABILITY FOR APPLICATIONS ASSISTANCE OR THE DESIGN OF BUYERS' PRODUCTS. BUYER ACKNOWLEDGES AND AGREES THAT IT IS SOLELY RESPONSIBLE FOR COMPLIANCE WITH ALL LEGAL, REGULATORY, AND SAFETY-RELATED REQUIREMENTS CONCERNING ITS PRODUCTS, AND ANY USE OF SENSATA COMPONENTS IN ITS APPLICATIONS, NOTWITHSTANDING ANY APPLICATIONS-RELATED INFORMATION OR SUPPORT THAT MAY BE PROVIDED BY SENSATA.

Mailing Address: Sensata Technologies, Inc., 529 Pleasant Street, Attleboro, MA 02703, USA

CONTACT US

Regional head offices:

United States of America Sensata Technologies

Attleboro, MA

Phone: 508-236-3800 E-mail: support@sensata.com

Netherlands

Sensata Technologies Holland B.V. Hengelo

Phone: +31 74 357 8000 E-mail: support@sensata.com

China

Sensata Technologies China Co., Ltd. Shanghai **Phone:** +8621 2306 1500 **E-mail:** support@sensata.com

Copyright © 2023 Sensata Technologies, Inc.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Sensata:

GX66BD GX66FDB GX66FD GX66BDB GX66BDC GX66CD GX66CDB GX66CDC