




Evaluation Board User Manual

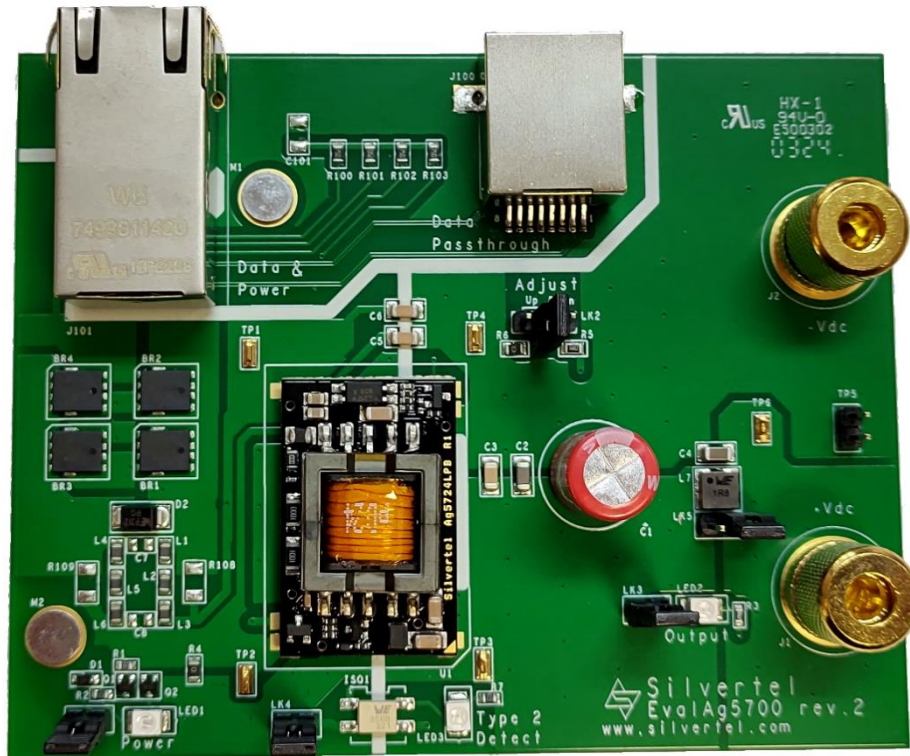

EvalAg5700-LPB Evaluation Board User Manual

Version 2.1 – October 2024

Table of Contents

1 Kit Contents..... 3

2 Board Layout..... 3

2.1 Link Settings 3

2.2 Input Output Connections..... 3

3 Introduction 4

4 Input 4

4.1 Operation..... 4

4.2 Input Power LED 4

4.3 PSE Detect..... 4

5 Output 5

5.1 Output Power LED 5

5.2 Output Voltage Adjust 5

5.1 Data Output 5

6 EMI..... 5

7 Test Setup..... 6

8 Additional information..... 6

9 Schematic 7

10 Bill of Materials..... 8

11 Layer Routing 9

Table of Figures

Figure 1: EvalAg5700-LPB Board Layout..... 3

Figure 2: Basic Test Setup 6

Figure 3: Schematic..... 7

Figure 4: Bill of Materials 8

Figure 5: Top Layer Routing..... 9

Figure 6: Bottom Layer Routing..... 9

1 Kit Contents

- EvalAg5700-LPB Evaluation Board
- Ag57xx-LPB Module Soldered to Evaluation Board

2 Board Layout

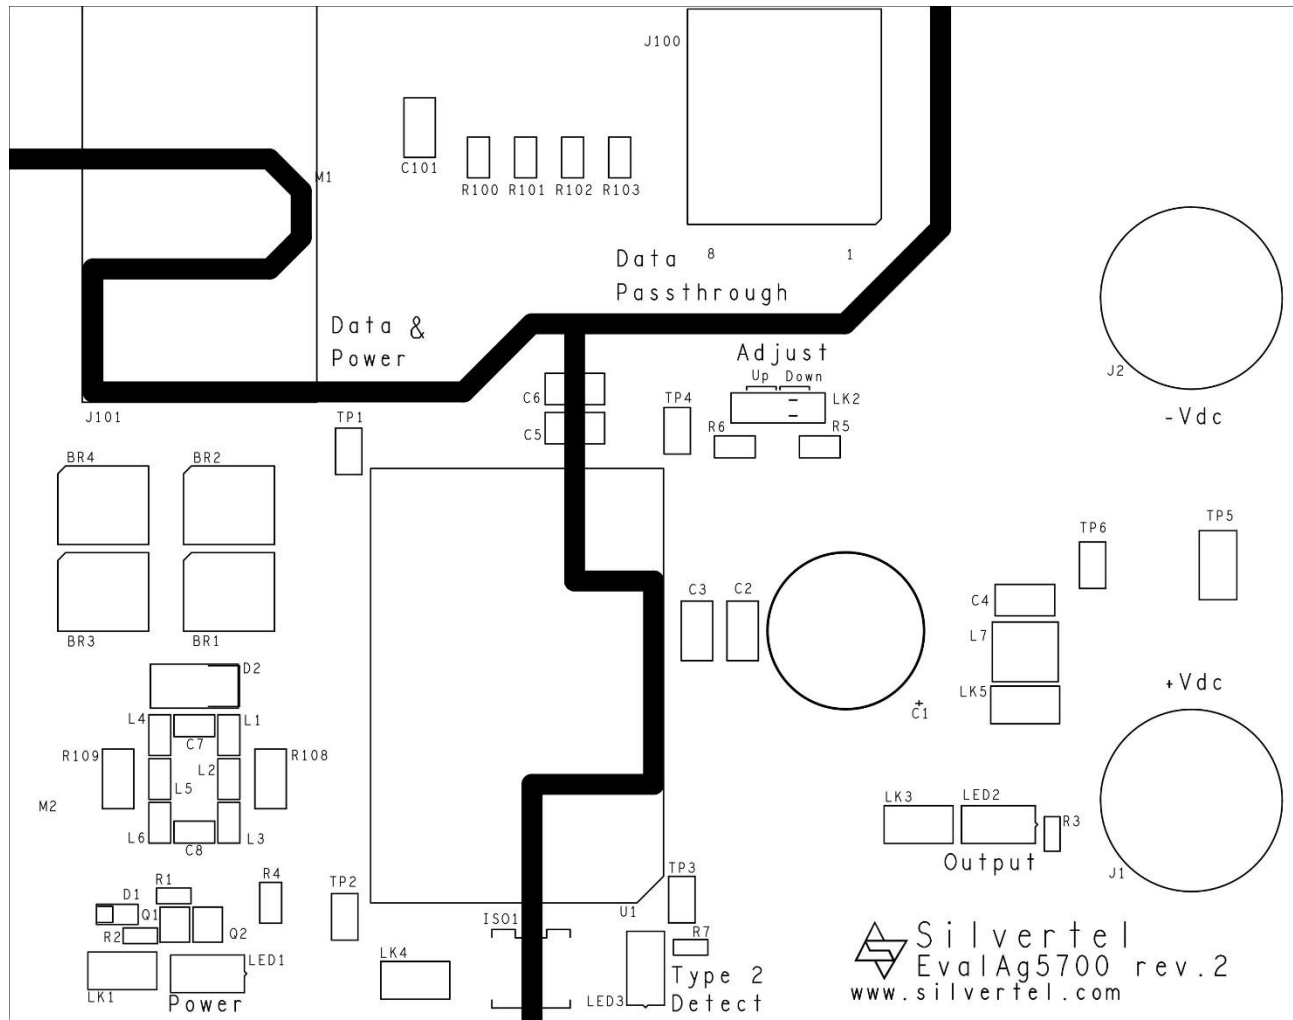


Figure 1: EvalAg5700-LPB Board Layout

2.1 Link Settings

- LK1 – Input Power LED Enable
- LK2 – Output voltage Adjust
- LK3 – Output Power LED Enable
- LK4 – Type 2 Detect LED Enable

2.2 Input Output Connections

- J1 & J2 – Load Output Binding Posts
- J101 – PoE Enabled RJ45
- J100 – Data Passthrough RJ45



Evaluation Board User Manual

3 Introduction

This Manual is a guide to using the EvalAg5700-LPB evaluation board fitted with a Silvertel Ag5712-LPB or Ag5724-LPB miniaturised Class 4 surface mount power over ethernet module.

This board has been designed to assist with evaluating the use of Silvertel's module in an application; as such it has been designed to pass through Ethernet data signals (10/100/1000BASE-T) from the Midspan PSE (Power Sourcing Equipment) or PoE enabled switch connected to J101, onto the system connected to J100.

While this evaluation board has been designed following Silvertel's recommendations, it should not be considered as a reference design as it features circuitry included solely for the purposes of evaluation that are not be required for proper operation.

4 Input

The EvalAg5700-LPB board will extract the power from the data pairsets using the RJ45 connector with integrated magnetics, J101. The data is passively passed on to any peripheral equipment via J100, while the power is provided to the Ag5700-LPB module in the correct polarity via the bridge rectifiers BR1-BR4.

4.1 Operation

To ensure that the PSE does not apply power to a non-PoE enabled device the output port first checks for a valid PoE signature. If the PSE does not see a valid signature, then it will disconnect, wait approximately 2 seconds then try again.

Once a valid signature has been detected the PSE may then perform classification to determine the power requirement of the PD, only after this has occurred will the PSE supply power to the powered device.

The module will provide the 25K signature followed by a class 4 power level request to be powered by an IEEE compliant PSE.

If PSE is not capable of supplying the Class four power level requested by the Ag5700-LPB, if using an IEEE802.3af PSE for example, it should supply the highest power level it is capable of supplying.

4.2 Input Power LED

LED1 illuminates when the module is being supplied with greater than 36V. This can be disabled by removing the jumper link LK1, removing this link does not affect the power being delivered to the Ag5700-LPB.

4.3 PSE Detect

When the Ag5700-LPB module fitted has detected it is being powered by an IEEE802.3 type 2 or greater PSE, the 'TYP2-DET' pin will be pulled low, and this will cause LED3 to become illuminated on the EvalAg5700-LPB board.

5 Output

The Ag5700-LPB output voltage will be present on the two binding post terminations J1 and J2. These can be connected to with 4mm Banana connectors, bare wire, or fork connectors.

5.1 Output Power LED

LED2 illuminates when the module is outputting. This can be disabled by removing the jumper link LK3, removing this link does not affect the power being supplied by the Ag5700-LPB.

5.2 Output Voltage Adjust

The output voltage of the Ag5700-LPB module can be adjusted by changing the location of the jumper LK2. The EvalAg5700-LPB is fitted with two adjust resistors. The down adjust resistor R5, is fitted with a 68k Ω resistor. And the up adjust resistor R6, which is fitted with a 0 Ω resistor to allow for the maximum adjust change of the Ag5700-LPB module.

To increase the output voltage, insert the jumper to LK2 in the left position, so that the link is between the middle and leftmost pin.

To reduce the output voltage, insert a jumper to LK2 in the right position, so that the link is between the middle and rightmost pin.

If the output voltage needs to be set to a different value (within the adjustment range) then connect different value resistors in place of R5 (68K) or R6 (0 Ω) and connect the jumper into the corresponding link setting.

Note: ensure that the down adjust resistor is not shorted when connecting a module that has a higher stated resistance in the datasheet, as this could cause damage to the module.

5.1 Data Output

Any data that is provided over the PI (Ethernet cable) connected to the Data & Power port, J100 will be transposed onto the Data output port, J101 via the data transformer.

The data traces on the evaluation board have been designed to pass through 10/100/1000BASE-T Ethernet data signals. No processing or amplification of this signal will be performed on the evaluation board.

6 EMI

The EvalAg5700-LPB contains the recommended components for EMI filtering, see ANX-POE-EMI for more details.

The board is fitted with ferrite beads, L1-6; if these are not required, they can be effectively removed from the circuit by fitting R108 and R109 with 0 Ω resistors.

7 Test Setup

Figure 2 shows the basic set up using the EvalAg5700-LPB evaluation board powered by Silvertel's EvalAg6120 PSE.

The equipment required: -

- EvalAg5700-LPB fitted with Silvertel's Ag5712-LPB or Ag5724-LPB PD Module.
- EvalAg6120 or other IEEE802.3 compliant PSE
- Power supply unit, +50-57V output e.g. 60V bench power supply
- CAT5e or greater cables
- Application Circuit

Optional equipment: -

Data source e.g. PC

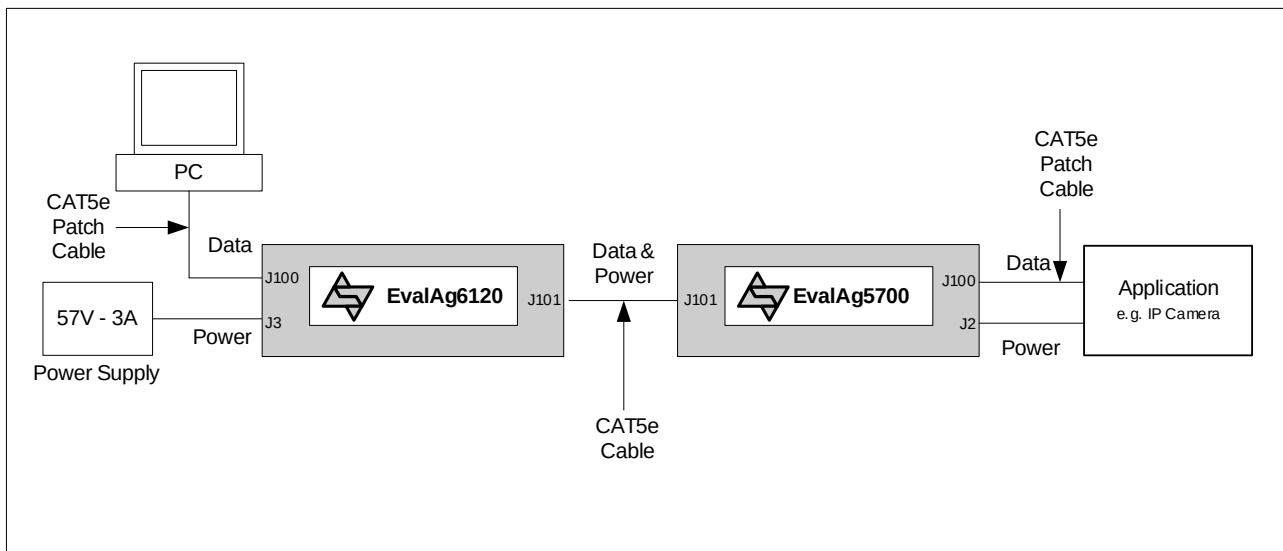


Figure 2: Basic Test Setup

8 Additional information

Full operating conditions and feature set can be found in the Ag5700-LPB product datasheet, available from www.silvertel.com.

9 Schematic

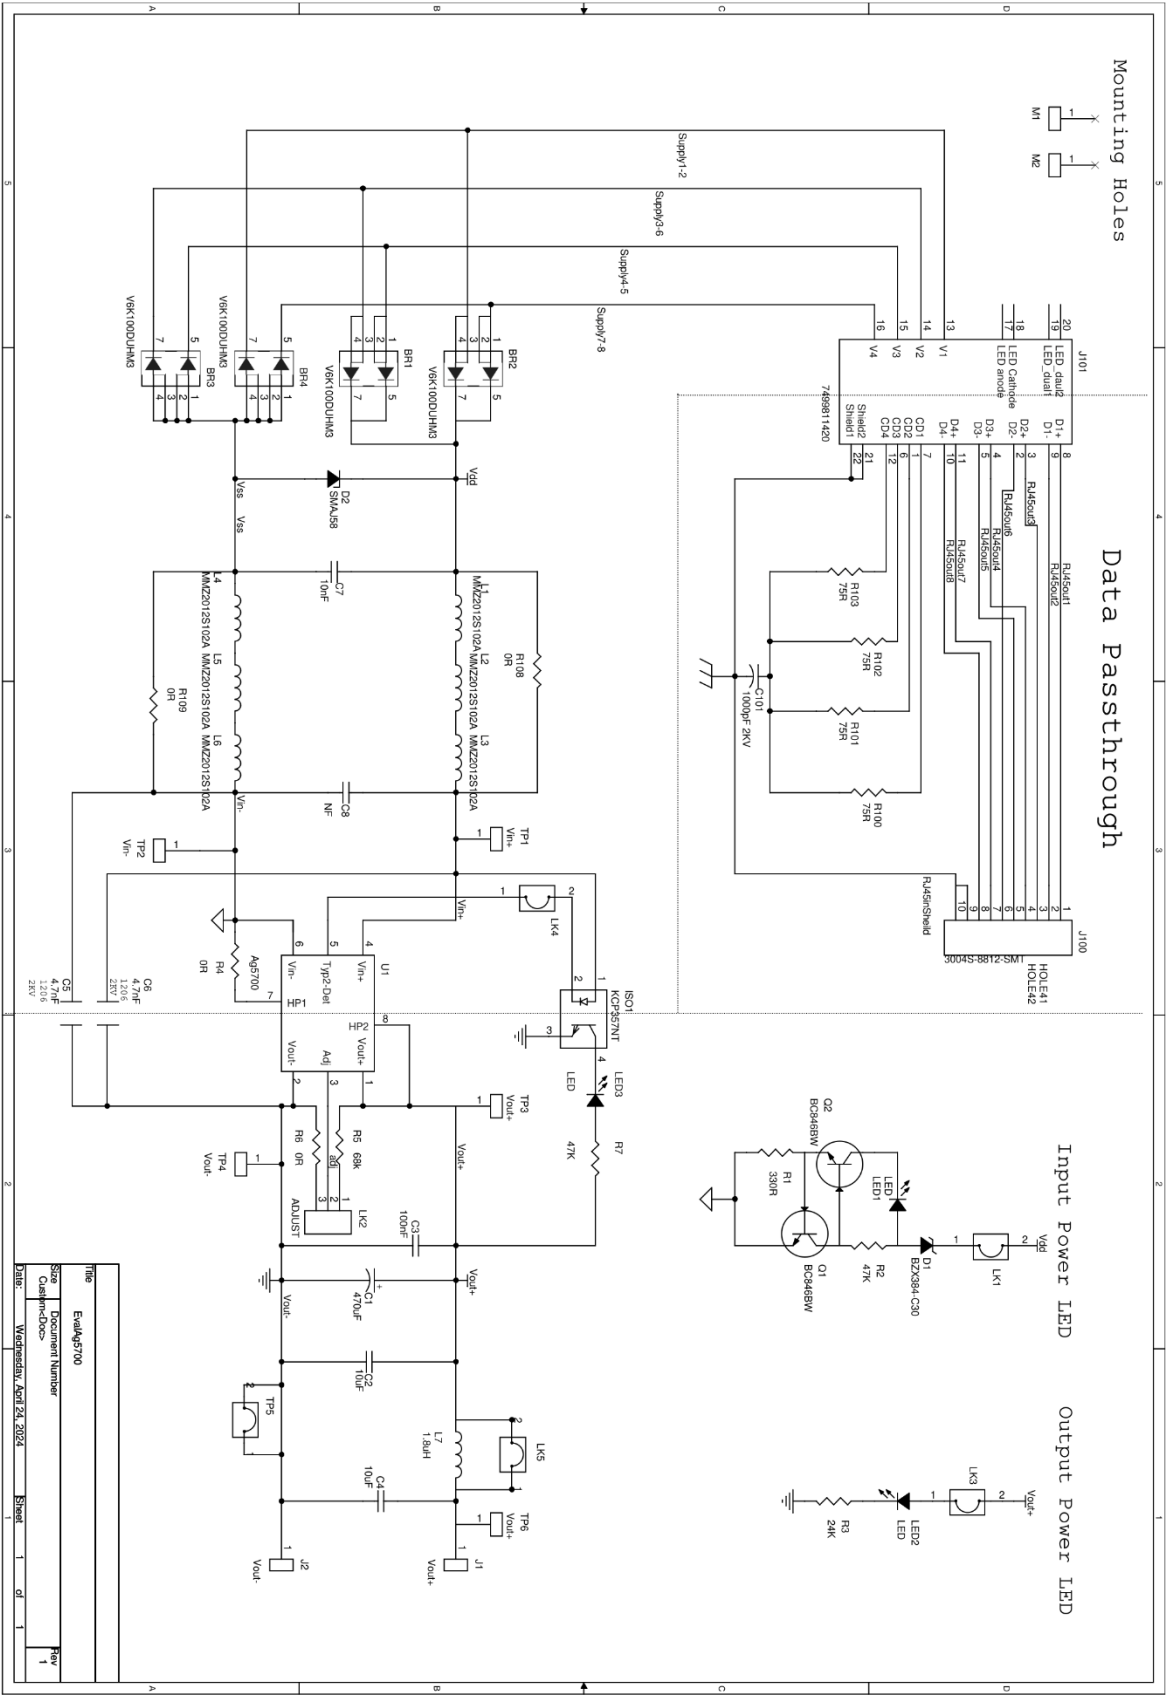


Figure 3: Schematic

10 Bill of Materials

EvalAg5700 Eval Board - Rev.2										Date: 5th February, 2024	
Silver Part No.	Description	Value	Location:	Qty.	Package:	Rating:	Tol:	Supplier Pt NO:	Comments:		
	PD Module	Ag5700	U1	1	Custom	-	-	Silver Telecom Part			
	Zener Diode	BZX384-C30	D1	1	SOD323	-	-	Vishay			
	Protection Diode	SMAJ56A	D2	1	SMA	-	-	Wurth- 824 500 581, Vishay, ST Micro, Diodes Inc			
	Bridge Rectifiers	V6K100DUHM3	BR1-BR4	4	FlatPAK 5x6	-	-	Vishay			
	SMD LED	RED LED	LED1-LED3	3	SMT	-	-	Wurth - 150 141 RS7 310 0			
	Ferrite Chip	≥1000@100MHz	L1-6	6	0805	≥ 1A	25%	TDK MP22012S102A, Wurth 742792096			
	Inductor	1.8uH	L7	1	SMD	3A	20%	NP43C1R8MTRE/OWI0403-1R8M-R-T1-LFWurth-74438356018			
	NPN Transistor	BC846BW	Q1, Q2	2	SOT323	60V	-	Infineon, ON-Semil , NXP , Diodes Inc.			
	Opto-Isolator	140356145200 , KPC357NT	ISO1	1	SMT	-	-	Wurth, Cosmo Electronics Corp			
	Capacitor Electrolytic	470uF	C1	1	Through Hole	25V	20%	Kemet A750MS477M1EAAE015, Wurth 860040475008			
	Ceramic multi-layer	10uF	C2 C4	2	1206	25V	20%	TDK, Murata, Kemet, Multicomp, Wurth 885012208069			
	Ceramic multi-layer	100nF	C3	1	1206	25V	20%	TDK, Murata, Kemet, Multicomp, Wurth 885012208068			
	Ceramic multi-layer	4.7nF	C5, C6	2	1206	1KV	20%	TDK, Murata, Kemet, Multicomp, Wurth 885342208020			
	Ceramic multi-layer	No Fil	C7, C8	0	0805	100V	20%				
	Ceramic multi-layer	1000pF 2KV	C108	1	1206	2KV	20%	Samsung, NTC, TDK, Murata, Kemet & AVX, Wurth-885342208024			
	Resistor - 0603	330R	R1	1	0603	63mW	1%	Royal Ohm, Eurohm & Yageo			
	Resistor - 0603	47K	R2, R7	2	0603	63mW	1%	Royal Ohm, Eurohm & Yageo			
	Resistor - 0603	24K	R3	1	0603	63mW	1%	Royal Ohm, Eurohm & Yageo			
	Resistor - 0805	0R	R4, R6	2	0805	63mW	1%	Royal Ohm, Eurohm & Yageo			
	Resistor - 0805	68K	R5	1	0805	63mW	1%	Royal Ohm, Eurohm & Yageo			
	Resistor - 0805	75R	R100-103	4	0805	125mW	1%	Royal Ohm, Eurohm & Yageo			
	Resistor - 1206	0R	R108, R109	0	1206	250mW	1%	Royal Ohm, Eurohm & Yageo			
	Red Connector	Binding Post	J3	1	Screw Mount	-	-	Switch Electronics 354147			
	Black Connector	Binding Post	J4	1	Screw Mount	-	-	Switch Electronics 354146			
	Test Point	HK-1-G	TP1-4, TP6	5	SMT	-	-	Mac 8			
	Ethernet Connector	RJ45	J100	1	SMT	-	-	Toby 3004S-8821-SMT			
	Ethernet Connector With Magnetics	7499811420	J101	1	SMT	-	-	Wurth - 7499811420			
	Link	2Way	LK1, LK3-5, TP5	5	Through Hole	-	-	Toby LHCS-02S-R-060-034, Wurth 61300211121			
	Link	3 Way	LK3	1	Through Hole	-	-	Toby LHCS-02S-R-060-034, Wurth 61300311121			
	PCB	Rev.2.0 - 104, 144mm x 82.55mmmm		1							
	Jumper Links	Links	LK1-5,	5		-	-				
Total				59							

Figure 4: Bill of Materials

11 Layer Routing

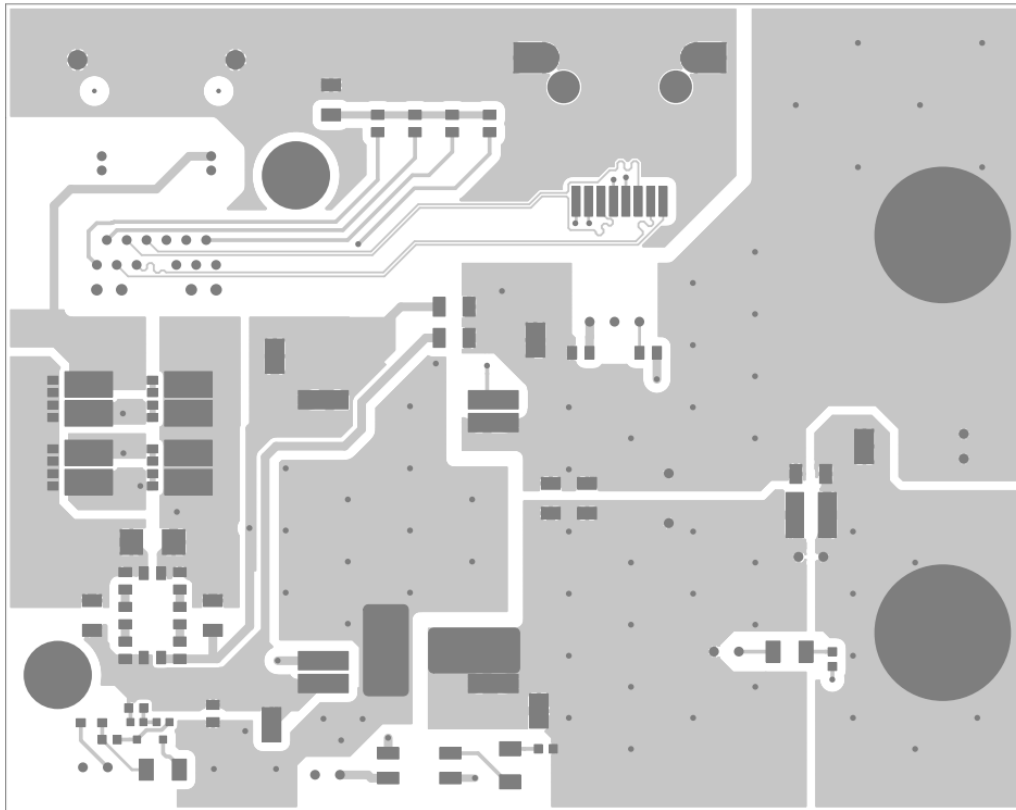


Figure 5: Top Layer Routing

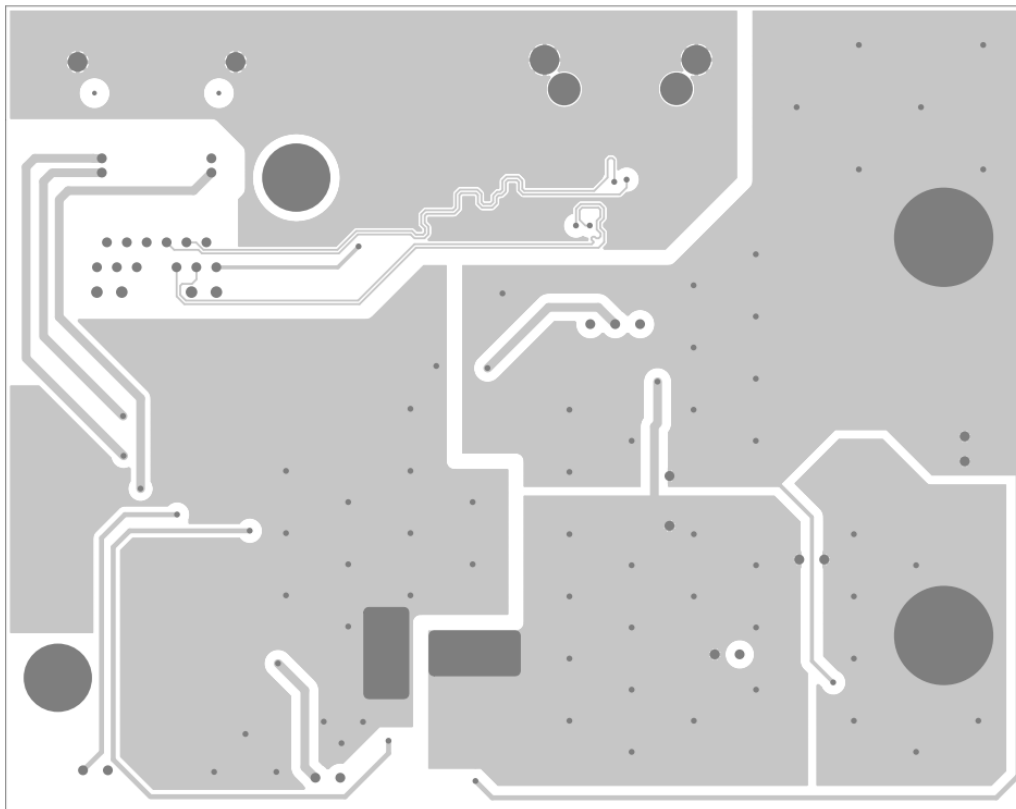


Figure 6: Bottom Layer Routing