3RA2220-1CD23-0AP6

Data sheet



Fuseless motor starter Reversing operation 600VAC Size S0 1.8-2.5A 220/240VAC 50/60HZ screw connection For snapping onto 60 mm busbar systems Type of coordination 2 IQ = 150 KA Also full fills type Of coordination 1 1NO+1NC (per contactor)

product brand name	SIRIUS
product designation	non-fused motor starter 3RA2
design of the product	reversing starter
manufacturer's article number	
 of the supplied contactor 	3RT2023-1AP60
 of the supplied circuit-breakers 	3RV2011-1CA10
 of the supplied RS assembly kit 	3RA2923-1DB1
 of the supplied busbar adapter 	<u>8US1251-5NT10</u>
 of the supplied link module 	3RA2921-1AA00
General technical data	
size of the circuit-breaker	S00
size of load feeder	S0
product extension auxiliary switch	Yes
insulation voltage with degree of pollution 3 at AC rated value	690 V
degree of pollution	3
surge voltage resistance rated value	6 kV
shock resistance according to IEC 60068-2-27	6g / 11 ms
mechanical service life (operating cycles) of contactor typical	10 000 000
type of coordination	2
Substance Prohibitance (Date)	03/01/2017
Weight	1.73 kg
Ambient conditions	
ambient temperature	
 during operation 	-20 +60 °C
during storage	-50 +80 °C
during transport	-55 +80 °C
Main circuit	
number of poles for main current circuit	3
design of the switching contact	
	electromechanical
adjustable current response value current of the current- dependent overload release	electromechanical 1.8 2.5 A
dependent overload release	
dependent overload release operating voltage	1.8 2.5 A
operating voltage • rated value	1.8 2.5 A 690 V
dependent overload release operating voltage • rated value • at AC-3 rated value maximum	1.8 2.5 A 690 V 690 V
dependent overload release operating voltage • rated value • at AC-3 rated value maximum operating frequency rated value	1.8 2.5 A 690 V 690 V 50 60 Hz
dependent overload release operating voltage • rated value • at AC-3 rated value maximum operating frequency rated value operational current at AC-3 at 400 V rated value	1.8 2.5 A 690 V 690 V 50 60 Hz
dependent overload release operating voltage • rated value • at AC-3 rated value maximum operating frequency rated value operational current at AC-3 at 400 V rated value operating power at AC-3	1.8 2.5 A 690 V 690 V 50 60 Hz 1.9 A

control supply voltage at AC	
at 50 Hz rated value	220 V
 at 50 Hz rated value 	176 242 V
 at 60 Hz rated value 	240 V
at 60 Hz rated value	192 264 V
apparent holding power of magnet coil at AC	7.2 VA
inductive power factor with the holding power of the coil	0.28
Auxiliary circuit	
number of NC contacts for auxiliary contacts	2
number of NO contacts for auxiliary contacts	2
Protective and monitoring functions	
trip class	CLASS 10
design of the overload release	thermal (bimetallic)
response value current of instantaneous short-circuit trip unit	32.5 A
UL/CSA ratings	02.07.
full-load current (FLA) for 3-phase AC motor	
• at 480 V rated value	2.15 A
at 400 V rated value at 600 V rated value	2.15 A 2.24 A
	4.4T /\
yielded mechanical performance [hp]	
for single-phase AC motor at 220 V reted value.	0.47 bp
— at 230 V rated value	0.17 hp
• for 3-phase AC motor	
— at 200/208 V rated value	0.5 hp
— at 220/230 V rated value	0.5 hp
— at 460/480 V rated value	1 hp
— at 575/600 V rated value	1.5 hp
Short-circuit protection	
product function short circuit protection	Yes
design of the short-circuit trip	magnetic
conditional short-circuit current (Iq)	
at 400 V according to IEC 60947-4-1 rated value	153 000 A
Installation/ mounting/ dimensions	
mounting position	vertical
mounting position fastening method	vertical for snapping onto 60 mm busbar systems
<u> </u>	
fastening method	for snapping onto 60 mm busbar systems
fastening method height	for snapping onto 60 mm busbar systems 260 mm
fastening method height width	for snapping onto 60 mm busbar systems 260 mm 90 mm
fastening method height width depth	for snapping onto 60 mm busbar systems 260 mm 90 mm
fastening method height width depth required spacing	for snapping onto 60 mm busbar systems 260 mm 90 mm
fastening method height width depth required spacing • for grounded parts	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm
fastening method height width depth required spacing • for grounded parts — forwards	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — backwards	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 10 mm 10 mm 10 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — downwards • for live parts — forwards — backwards — backwards — upwards — downwards	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — at the side — downwards — at the side — downwards — torwards — backwards — backwards — upwards — downwards — at the side Connections/ Terminals	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm 9 mm 10 mm 9 mm 9 mm 9 mm 9 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — at the side — downwards • for live parts — forwards — backwards — backwards — upwards — downwards — at the side	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 10 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — the side — downwards — the side — downwards — backwards — upwards — at the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 9 mm 10 mm 5 mm 9 mm 10 mm 5 mm 9 mm 10 mm 5 mm 10 mm 5 mm 10 mm 5 mm 6 mm 7 mm 8 mm 10 mm 9 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — torwards — backwards — upwards — torwards — backwards — upwards — at the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded connectable conductor cross-section for main contacts finely	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 9 mm 1 10 mm 9 mm
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — at the side — downwards — torwards — backwards — upwards — at the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded connectable conductor cross-section for main contacts finely stranded with core end processing	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 9 mm 1 10 mm 2 2x (2.5 6 mm²)
fastening method height width depth required spacing • for grounded parts — forwards — backwards — upwards — at the side — downwards • for live parts — forwards — backwards — upwards — backwards — upwards — to hackwards — upwards — at the side Connections/ Terminals type of electrical connection for main current circuit type of connectable conductor cross-sections for main contacts stranded connectable conductor cross-section for main contacts finely stranded with core end processing Safety related data proportion of dangerous failures with high demand rate	for snapping onto 60 mm busbar systems 260 mm 90 mm 155 mm 10 mm 0 mm 30 mm 9 mm 10 mm 10 mm 0 mm 30 mm 9 mm 1 10 mm 1 10 mm 9 mm

protection class IP on the front according to IEC 60529

IP20

touch protection on the front according to IEC 60529

finger-safe, for vertical contact from the front

Approvals Certificates

General Product Approval

For use in hazardous locations

other











Confirmation

Environment

Environmental Confirmations

Further information

Information on the packaging

https://support.industry.siemens.com/cs/ww/en/view/109813875

Information for data generation and storage

https://support.industry.siemens.com/cs/ww/en/view/109995012

Information- and Downloadcenter (Catalogs, Brochures,...)

https://www.siemens.com/ic10

Industry Mall (Online ordering system)

https://mall.industry.siemens.com/mall/en/en/Catalog/product?mlfb=3RA2220-1CD23-0AP6

Cax online generator

http://support.automation.siemens.com/WW/CAXorder/default.aspx?lang=en&mlfb=3RA2220-1CD23-0AP6

Service&Support (Manuals, Certificates, Characteristics, FAQs,...)

https://support.industry.siemens.com/cs/ww/en/ps/3RA2220-1CD23-0AP6

Image database (product images, 2D dimension drawings, 3D models, device circuit diagrams, EPLAN macros, ...)


http://www.automation.siemens.com/bilddb/cax_de.aspx?mlfb=3RA2220-1CD23-0AP6&lang=en


Characteristic: Tripping characteristics, I²t, Let-through current


https://support.industry.siemens.com/cs/ww/en/ps/3RA2220-1CD23-0AP6/char


Further characteristics (e.g. electrical endurance, switching frequency)

http://www.automation.siemens.com/bilddb/index.aspx?view=Search&mlfb=3RA2220-1CD23-0AP6&objecttype=14&gridview=view1

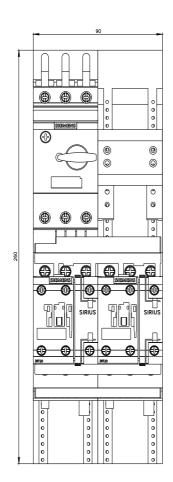

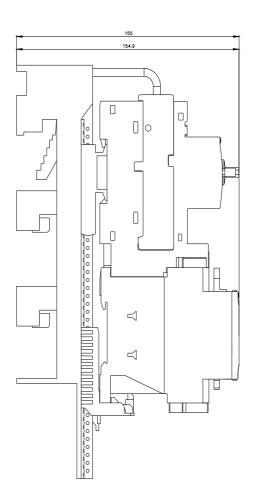

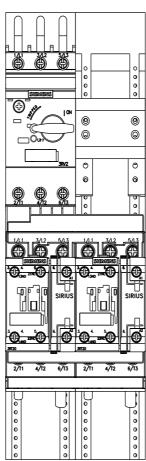

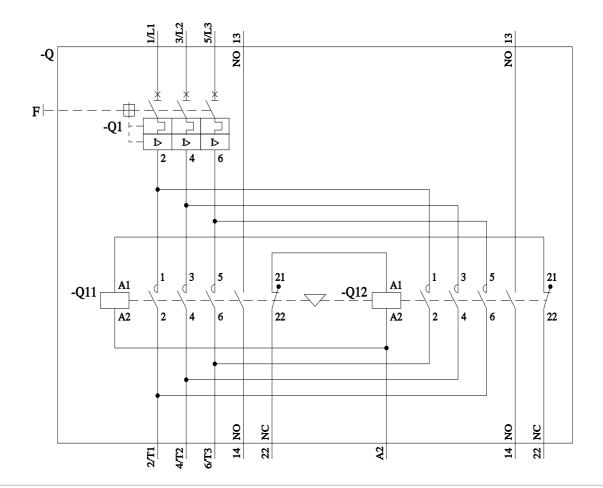

last modified: 12/15/2020 🖸