

DATASHEET

M20072

M20072 · GNSSNOVA



Features

- Multi-constellation GNSS receiver (GPS/GLONASS/GALILEO/BEIDOU/QZSS)
- · Full function GNSS module
- MediaTek AG3335MN flash chip
- Ultra-small SMD package; 13.8 x 9.5 x 1.8mm
- Low current consumption
- AIC, Active Interference Cancellation
- EASY Internally generated orbit prediction for fast time to fix
- EPO (Extended Prediction Orbit) fast fix

Contents

| 1. Description | 2 |
|--|-----------|
| 2. Applications | 2 |
| 3. Part number | 2 |
| 4. Functional block diagram | 3 |
| 5. Module specifications | 3 |
| 5.1. Absolute maximum ratings | 3 |
| 5.2. Recommended operating conditions | 3 |
| 5.3. DC electrical characteristics | 4 |
| 5.4. RF specifications | 4 |
| 5.5. Band rejection | 4 |
| 5.6. Mechanical specifications | 5 |
| 5.7. System specifications | 5 |
| 6. Module dimension | 6 |
| 7. Schematic symbol and pin definition | 6 |
| 8. Host PCB footprint | 7 |
| 9. Module application | 8 |
| 9.1. Host interface | 8 |
| 9.2. Power supply | 9 |
| 9.3. Power Constraint for 2.8V IO | 9 |
| 9.4. Pulse Per Second (PPS) | 9 |
| 9.5. HRST (Hardware reset pin) | 9 |
| 9.6. Power Saving Mode | 9 |
| 9.6.1 EPO (Extended Prediction Orbit) data service | 10 |
| 9.6.2 EASY (Self-Generated Orbit Prediction) | 10 |
| 9.6.3 AIC (Active Interference Cancellation) | 10 |
| 9.7 EPO (Extended Prediction Orbit) data service | 11 |
| 9.8 EASY (Self-Generated Orbit Prediction) | 11 |
| 9.9 AIC (Active Interference Cancellation) | 11 |
| 10. Module subsystem feature | <u>12</u> |
| 10.1 Reference schematic | 12 |
| 10.2 External matching | 13 |
| 10.3 Internal antenna clearance | 14 |
| 10.4 Typical antenna matching results | 14 |
| 10.5 Internal antenna clearance | 15 |
| 11. Evaluation kit | 16 |
| 12. Reflow soldering | 17 |
| 13. Quality and environmental specifications | 18 |
| 14. Hazardous material regulation conformand | ce 19 |
| 15. Packaging | 19 |

1. Description

An integrated GNSS receiver module incorporating the MediaTek AG3335MN flash chip. The receiver tracks 4 GNSS constellations concurrently (GPS+Galileo+GLONASS+Beidou). 12nm process with 1.8V system power supply provides outstanding low power consumption. Multi-path algorithms improve position accuracy in inner-city environments. The on-board LNA provides good performance in weak-signal environments such as wearable devices.


2. Applications

- Wearable devices such as Fitness watches
- Portable devices
- · Asset tracking / Personal safety
- · Vehicle trip recording cameras
- · Sports electronics such as Golf computers
- · Navigation systems


3. Part number

M20072



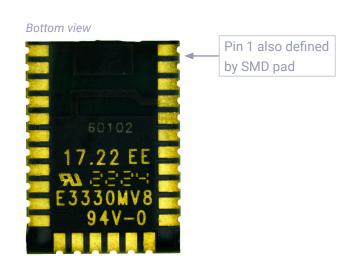

4. Functional block diagram

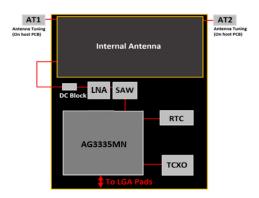

5. Module specifications

5.1. Absolute maximum ratings

| SYMBOL | PARAMETER | MIN | MAX | UNIT |
|------------------|--------------------------------|-----|------|------|
| VIN_SYS | Main supply voltage for System | 0 | 1.98 | V |
| VIN_RTC | Supply voltage for RTC mode | 0 | 1.98 | V |
| VIO_1V8 | Supply voltage for 1.8V I/O | 0 | 1.98 | V |
| VIO_2V8* | Supply voltage for 2.8V I/O | 0 | 3.08 | V |
| RF _{IN} | Maximum RF input power | N/A | 0 | dBm |
| T _{STG} | Storage temperature | -40 | +85 | °C |
| T _{OP} | Operating temperature | -40 | +85 | °C |

Exposure to absolute ratings may adversely affect reliability and may cause permanent damage.

5.2. Recommended operating conditions

| SYMBOL | PARAMETER | MIN | ТҮР | MAX | UNIT |
|-----------------|--------------------------------|------|-----|------|------|
| VIN_SYS | Main supply voltage for System | 1.62 | 1.8 | 1.98 | V |
| VIN_RTC | Supply voltage for RTC | 1.62 | 1.8 | 1.98 | V |
| T _{OP} | Operating temperature | -40 | - | +85 | °C |

^{*} If 2.8V I/O will be applied, please connect VIO_1V8 with 2.8V LDO's enable pin for power sequence constraint.

5.3. DC electrical characteristics

Conditions: VIN_SYS = 1.8V, VIN_RTC = 1.8V, T_{OP} = 25 °C

| SYMBOL | PARAMETER | ТҮР | UNIT |
|----------------------|--------------------------|------|------|
| I _{CC(ACQ)} | Acquisition mode current | 18 | mA |
| I _{CC(TRK)} | Tracking mode current | 12 | mA |
| I _{CC(RTC)} | RTC mode current | <100 | μА |

5.4. RF specifications

Conditions: VIN_SYS = 1.8V, VIN_RTC = 1.8V, T_{OP} = 25 °C, Freq = 1575.420MHz

| SYMBOL | PARAMETER | ТҮР | UNIT |
|----------------------|--|------|------|
| NF _{LNA} | LNA Noise Figure (AG3335 Integral LNA) | 3.0 | dB |
| NF _{LNA1st} | 1 st Stage LNA | 1.07 | dB |
| ANT _{EFF} | Antenna total efficiency | >57% | % |

5.5. Band rejection

| FREQUENCY | | ТҮР | UNIT |
|-----------|--------------------|-----|------|
| 698-798 | LTE700 | 38 | dB |
| 824-849 | Cellular CDMA | 38 | dB |
| 869-894 | GSM850 | 38 | dB |
| 880-915 | GSM900 | 37 | dB |
| 1710-1785 | GSM1800/DCS | 44 | dB |
| 1850-1910 | GSM1900/PCS | 44 | dB |
| 1920-1980 | WCDMA | 44 | dB |
| 2400-2492 | WLAN, BT and WiMAX | 50 | dB |
| 2500-2690 | LTE2600 | 55 | dB |

Note: Does not include antenna rejection.

5.6. Mechanical specifications


| COMMUNICATION | ТҮР | UNIT |
|--|---|------|
| Module exterior dimensions (L x W x H) | 18.3 (±0.1) x 9.5 (±0.1) x 1.8 (+0.2 / - 0.0) | mm |
| Module support and connection | Surface mounted (SMD) | - |
| Module mass | ≤1 | g |

5.7. System specifications

| COMMUNICATION | SPECIFICATION |
|--------------------------------|---|
| Data Output Protocol | NMEA 0183 |
| Host Interfaces | UART |
| Default data rate on UART | 115200bps default rate, modify by input command |
| GPS ENGINE | |
| Chip | MTK AG3335MN Flash Chip |
| Channels | GPS+Galileo+GLONASS+Beidou |
| тсхо | 0.5ppm |
| ACCURACY | |
| Horizontal position accuracy | <2.5m CEP |
| Maximum position update rate | 10 Hz (Default 1Hz) |
| SENSITIVITY | |
| Acquisition (Cold) | -148dBm |
| Tracking | -165dBm |
| TTFF | |
| Hot start | <1s |
| Warm start | <25s (typical) |
| Cold start | <35s (typical) |
| GENERAL | |
| Maximum altitude | <10 km |
| Maximum speed | <514 m/s |
| Active interference cancellers | 12 multi tone active cancellers; ISSCC2011 award |
| Additional features | 1PPS Sync, SBAS, WAAS, EGNOS, QRZZ, GAGAN support |
| EPO / EASY | Orbit prediction |

50% CEP, Open-Sky, 24hr Static, -130dBm, good view of the sky

6. Module dimension

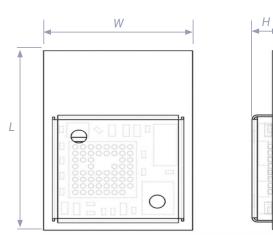


| L | W | Н |
|-----------|----------|-----------------|
| Length | Width | Height |
| 13.8 ±0.1 | 9.5 ±0.1 | 1.8 +0.2 / -0.0 |

All dimensions in (mm)


7. Schematic symbol and pin definition

| PIN | DESIGNATOR | DESCRIPTION |
|-----|------------|--|
| 1 | AT1 | Antenna tuning left side |
| 2 | GND | Ground connection |
| 3 | GND | Ground connection |
| 4 | ANT_OUT | RF from internal antenna to external pin(connect to pin 6) |
| 5 | GND | Ground connection |
| 6 | ANT_IN | RF input from antenna |
| 7 | GND | Ground connection |
| 8 | VIN_RTC | RTC supply voltage, 1.8V in TYP |
| 9 | GND | Ground connection |
| 10 | VIN_SYS | Main supply voltage, 1.8V in TYP |
| 11 | GND | Ground connection |
| 12 | GND | Ground connection |
| 13 | RTC_EINT | To wake up module from RTC mode |
| 14 | UART_TX | UART interface transmit data line |
| 15 | UART_RX | UART interface receive data line |
| 16 | VIO_1V8 | 1.8V output for 1.8V I/O support |
| 17 | VIO_2V8 | 2.8V input for 2.8V I/O support |
| 18 | PPS | 1PPS (pulse per second output) |
| 19 | DATA_EINT | Handshaking with host |
| 20 | CHIP_EN | System reset, active low |

| PIN | DESIGNATOR | DESCRIPTION |
|-----|------------|---------------------------|
| 21 | GND | Ground connection |
| 22 | N.C | No connect |
| 23 | GND | Ground connection |
| 24 | GND | Ground connection |
| 25 | GND | Ground connection |
| 26 | GND | Ground connection |
| 27 | GND | Ground connection |
| 28 | AT2 | Antenna tuning right side |

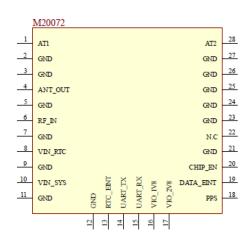

8. Host PCB footprint

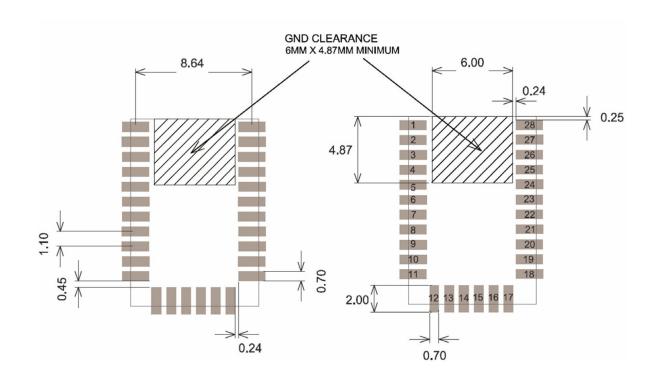

All dimensions in (mm)


9. Module subsystem feature

9.1. Host interface

The UART interface is used for M20072 to provide full-serial data communication channels between M20072 and host. The UART communication function includes UART data transmit/receive, GNSS NMEA sentence input/output, and MTK command input.

The UART supports standard baud rate and can be changed after bootup by using the relevant command. Please contact Antenova for more information about the baud rate configuration.

DATA_EINT on M20072 pin19 is for handshaking with host to avoid missing command and needs to connect to host UART RTS.

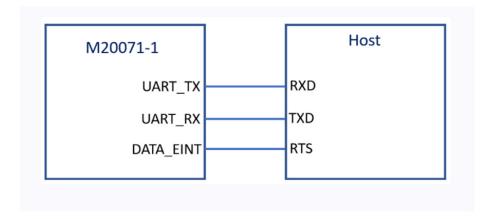

9.2. Power supply

The M20072 uses 1.8V DC power inputs. VIN_SYS is main power supply for the core system, and VIN_RTC is power supply for RTC clock and RTC RAM. M20072 supports power saving mode (RTC mode), and it needs standalone VIN_RTC in the design for support RTC mode.

9.3. Power constraint for 2.8V IO

The voltage level of the IO interface is 1.8V only. If 2.8V IO needs to be applied, there's a power sequence constraint for 2.8V IO application.

Connect VIO_1V8 (pin16) to 2.8V LDO's enable pin, so that the 2.8V for VIO_2V8 (pin17) will be powered up after VIO_1V8.

9.4. Pulse Per Second (PPS)

PPS (pulse per second) is a pulse signal output from the M20072, repeating an accurate synchronized pulse signal once per second. The pulse width is 100ms by default, and can be configured from 50ms to 999ms by using MTK command. The PPS function is enabled by default, and module will output PPS signal once the 3D-fixed is completed. Please contact Antenova for more information about the PPS pulse width configuration.

9.5. HRST (Hardware reset pin)

The CHIP_EN pin is for hardware reset function and is internal pull-high. To initiate a hardware reset, the pin needs to be pulled low for 10ms.

9.6. Power saving mode

The M20072 has three power saving modes.

- · OFF mode
- RTC mode
- Periodic mode

9.6.1. OFF mode

OFF mode is controlled by the CHIP_EN pin. When CHIP_EN is low, only the power management logic is active, and all other logic is powered down.

9.6.2. RTC mode

RTC mode is a low-power mode that shuts down the system core. When system goes in to the RTC mode, all the commands cannot be sent and the module no longer provides position-related information. The navigation data is saved to RTC-RAM, and when the system is woken up, this data is used to regain a position fix.

The chip is woken up by pulling the RTC_EINT pin high for 1ms. Once the module exits the RTC mode, all system resources will be re-initialized. The navigation data will be loaded from RTCRAM. If all the data are valid, it will facilitate the TTFF performance


M20072 support software RTC mode by sending the MTK command listed in below:

| RTC MODE COMMAND | EXIT RTC MODE |
|------------------|----------------------------|
| \$PAIR650,0 | Pull-High RTC_EINT for 1ms |

9.6.3. Periodic mode

Periodic mode is a module controlled mode that reduces current consumption by module running and sleeping periodically to maintain fixed data.

The periodic state can be configured by users base on their needs. Contact Antenova for more information and a user command manual.

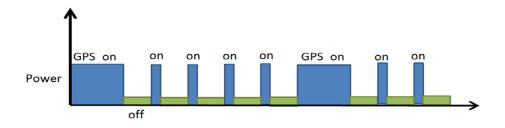

| COMMAND (EXAMPLE) | M20072 TIME FOR OFF/AWAKE |
|-------------------------|---|
| \$PAIR690,1,21,39,48,72 | Module sleep 39s then run 21s in signal condition; Module sleep 72s then run 48s in no signal condition. |


9.7. EPO (Extended Prediction Orbit) data service

The EPO allows the use of up to 30-day orbit predictions that can be used to aid the module for an instant fix solution.

- A proxy server on the customer's side to update EPO files from the MTK server daily.
- Application software to access the proxy server through the internet (optional if host device can access internet).
- Software on host device to send EPO data to M20072 module to allow instant fix by using EE data. Please contact Antenova for more information. Requires permission from MTK to use service.

9.8. EASY (Self-Generated Orbit Prediction)

The M20072 module supports EASY (Embedded Assisted System). EASY is an Orbit Prediction feature that speeds up TTFF (time to first fix) performance. EASY provides up to 3 days of GPS orbit predictions, and it does not require an internet connection or software running on a host processor. EASY within the GNSS receiver and accelerates TTFF by calculating a predicted satellite orbits (called the ephemeris). The calculations performed by EASY are scheduled during normal operation of the GNSS receiver. EASY is switched on by default and can be disabled by a PMTK command.

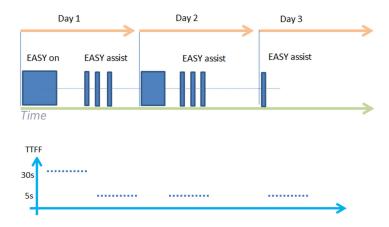


9.9. AIC (Active Interference Cancellation)

The AIC feature provides effective narrow-band interference cancellation. The GPS signal can be recovered from signals that contain interference signals. High speed processors generate clock harmonics that cause interference to be present within the GPS band.

10. Module application

10.1. Reference schematic

The circuit below shows a basic design for 1.8V I/O interface.

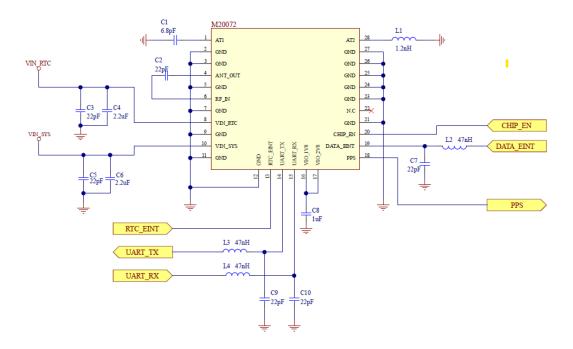

Bill of Material

| DESIGNATOR | VALUE | DESCRIPTION/COMMENTS | QUANTITY |
|-------------------------|-----------------|--|----------|
| C1 | 6.8pF capacitor | Capacitor for antenna tuning | 1 |
| L1 | 12nH Inductor | Inductor for antenna tuning | 1 |
| C2, C3, C5, C7, C9, C10 | 22pF capacitor | Decoupling cap. Place close to corresponding pin | 6 |
| C4, C6 | 2.2uF capacitor | Decoupling cap. Place close to corresponding pin | 2 |
| L2, L3, L4 | 47nH Inductor | Filter component | 3 |
| C8 | 1uF capacitor | Decoupling cap. Place close to pin16 | 1 |

Information and all such information shall be entirely at the user's risk.

10.2. External matching

The M20072 module uses external matching circuit components on the host PCB to fine-tune the onboard antenna to each specific application. This "external matching" allows compensating for the detuning of the antenna caused by various components that can be close to the M20072 module in the actual application (plastic case, battery, speakers, etc.).

The external matching must be placed on the host PCB as close as possible to the module pads AT1(Pad1) and AT2 (Pad28), respectively. A single matching component for each pin is required. A perfect GND plane connecting for each matching component is needed. For multi-layer PCB, an individual GND via should be placed close to the matching component as possible.

Schematic: In the example above AT1 uses a 6.8pF capacitor and AT2 uses a 1.2nH inductor for antenna tuning. Both components should be designed in as they may be required for the intended device.



Type of Matching Components:

· Capacitors: Use 0402, COG components


• Inductors: Use 0402 Multi-layer type inductors (e,g Murata LQG15 series)

External Antenna Support: A low-cost external circuit can be used to provide external antenna support. Please contact Antenova for more information, and example circuit.

10.3. Internal antenna clearance


The M20072 module internal antenna requires a clearance on the host PCB to operate. The clearance means that no ground or tracks of any kind can be placed within this area. This clearance area also needs to be applied through the entire PCB stack up. The minimum area needed for clearance is 6mm x 4.87mm.

Top view of M20072 host PCB footprint

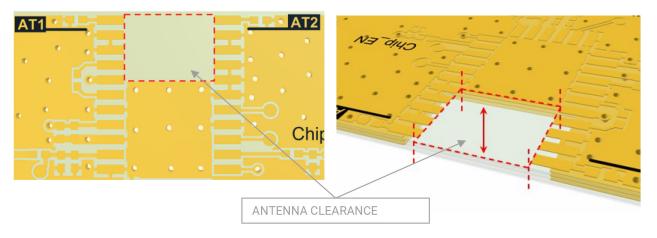

10.4. Typical antenna matching results


Typical antenna matching as seen by RF_IN (Pin6) is shown in the following plot. The matching bandwidth at -7dB is typically 65MHz. Measured on M20072 EVB test board.

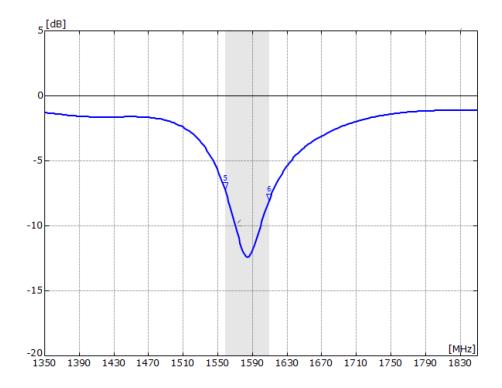


10.5. Module placement guideline

For the internal antenna performance, the placement of the module on the host PCB should be considered very carefully. Here are some guidelines that should be used when deciding the position of the module.


- •The module top edge must be placed almost level with the edge of the host PCB.
- •The edge of the host PCB that the module is to be placed at must be a minimum of 40mm in length.

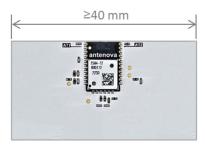

- •The central placement of the module is advised. However, an offset placement is also possible.
- •For an offset closer to the PCB edge to the right side of the module, a minimum of 10mm distance is required to the edge of the host PCB.

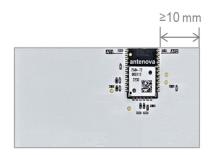


- •The antenna uses the host PCB ground to effectively radiate. Therefore, a GND plane must be placed on the host PCB on at least one layer.
- •In the example below, the only area void of GND is the antenna keep-out area. (The solder mask is removed to make the copper visible)

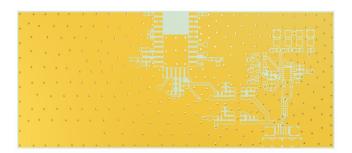

•An ideal stack-up for a host PCB would be to use the top and bottom layers as GND planes, while using the internal layers for any signal and power planes. This not only helps the GPS antenna to perform effectively, but also helps to reduce any potential noise issues that can be associated with mixed signal PCB's.

•An example below shows a 4-layer host PCB. For GND layer, all available space should not be used for signal trace routing or component placement

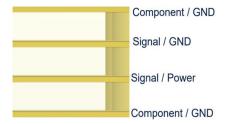


11. Evaluation kit

The EVK is a single PCB that contains the M20072 module and required components to run on a PC via a USB cable and Antenova software.

Evaluation kits are available on request. Please contact Antenova for more information. (Part number: M20072).


To order a reference board please see <u>antenova.com</u>

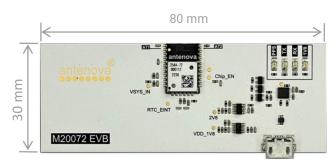

Front view



Bottom view

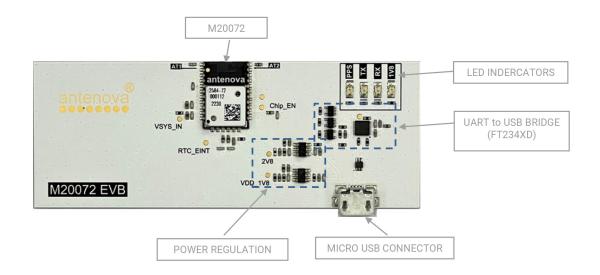

12. Reflow soldering

12.1. Placement

Typical placement systems used for any BGA/LGA package are acceptable. Recommended nozzle diameter for placement: 5mm


12.2. Soldering paste

Use of "No Clean" soldering paste is strongly recommended, as it does not require cleaning after the soldering process has taken place. An example of suitable soldering paste is Alpha OM350.

12.3. Soldering

The recommended soldering profile for M20072 is shown below. However, it is the responsibility of the Contract Manufacturer to determine the exact reflow profile used, taking into consideration the parameters of the host PCB, solder paste used, etc.

| PROFILE FEATURE | | PB-FREE SOLDER |
|---|--|----------------|
| | Temperature (T _s) Min | 130°C |
| Pre-Heat | Temperature (T _s) Max | 220°C |
| | Time (t _s) | <150s |
| Reflow | Liquidus Temperature - (T _I) | 220°C |
| Reliow | Time (t ₁) | 45-90s |
| Peak Package Body Temperature (T _p) | | 245°C |
| Time within 5°C of peak temp (t _p) | | 30s |
| Average Ramp up rate - $T_s(max)$ to (T_p) | | 3°C/s |
| Ramp Down Rate | | 6°C/s max |

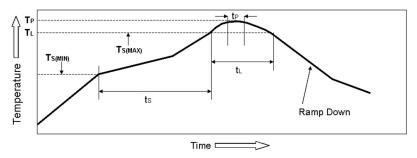

The Pb Free Process-Package Peak Reflow Temperature is 260°C. Exceeding the maximum soldering temperature could permanently damage the module.

12.4. Multiple soldering

The M20072 module can be submitted up to 2 reflow soldering processes.

Upside-down soldering is acceptable but it is recommended that the Contract Manufacturer qualify the process before mass production. The second reflow must take place within the recommended floor life limit (MSL3). Please contact Antenova for further information.

12.5. Hand soldering

Hand-soldering and rework of the M20072 module is acceptable, however care must be taken to avoid short circuits due to the small size of the module pads.

13. Quality and environmental specifications

| TEST | STANDARD | PARAMETERS |
|-----------------------------|---|--|
| PCB inspection | IPC-6012B, Class 2. Qualification and Performance Specification for Rigid Printed Boards - Jan 2007 | |
| Assembly inspection | IPC-A-610-D, Class 2 "Acceptability of electronic assemblies" | |
| Temperature range | ISO16750-3 | -30 °C, +25 °C, +85 °C, operating |
| Moisture/Reflow sensitivity | IPC/JEDEC J-STD-020D.1 | MSL3 |
| Storage (Dry Pack) | IPC/JEDEC J-STD-033C | MSL3 |
| Solderability | EN/IEC 60068-2-58 Test Td | More than 90% of the electrode should be covered by solder. Solder temperature 245 $^{\circ}\text{C} \pm 5 ^{\circ}\text{C}$ |

Moisture sensitivity:

Antenova ships all devices dry packed in tape on reel with desiccant and moisture level indicator sealed in an airtight package. If on receiving the goods the moisture indicator is pink in colour or a puncture of the airtight seal packaging is observed, then follow J-STD-033 "Handling and Use of Moisture/Reflow Sensitive Surface Mount Devices".

14. Hazardous material regulation conformance

The RF antenna module has been tested to conform to RoHS and REACH requirements. A certificate of conformance is available from Antenova's website.

15. Packaging


15.1. Optimal storage conditions

| TEMPERATURE | -10°C to 40°C | |
|---------------|---|--|
| HUMIDITY | Less than 75% RH | |
| SHELF LIFE | 24 Months | |
| STORAGE PLACE | Away from corrosive gas and direct sunlight | |
| PACKAGING | Reels should be stored in unopened sealed manufacturer's plastic packaging. | |
| MSL LEVEL | 3 | |

Note: The M20072 modules meet MSL Level 3 of the JEDEC specification J-STD-020D - 168 hours Floor Life (out of bag) ≤30 °C/60% RH. If the stated floor life expires prior to reflow process then follow J-STD-033 "Handling and Use of Moisture/Reflow Sensitive Surface Mount Devices".

The shelf life of the antenna is 2 years provided the factory seal on the package has not been broken.

15.2. Tape characteristics

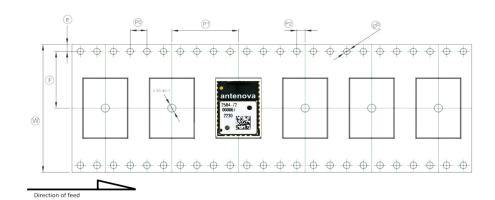


| Р0 | P1 | P2 | D0 |
|------------|-------------|------------|------------|
| 4.00 ± 0.1 | 16.00 ± 0.1 | 2.00 ± 0.1 | 1.55 ± 0.1 |

| E | F | W |
|------------|-------------|-------------|
| 1.75 ± 0.1 | 14.20 ± 0.1 | 32.00 ± 0.3 |

All dimensions in (mm)

| QUANTITY | LEADING SPACE | TRAILING SPACE |
|-----------------|-------------------------|-------------------------|
| 1000 pcs / reel | 50 blank module holders | 50 blank module holders |


15.3. Reel dimensions

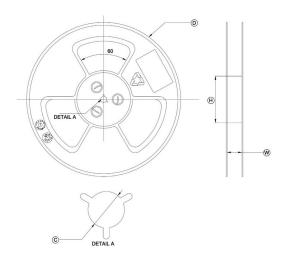

| D | С | н | w |
|-------------|------------|-------------|------------|
| 330.0 ± 2.0 | 13.3 ± 0.3 | 100.0 ± 3.0 | 32.4 ± 0.2 |

All dimensions in (mm)

15.4. Box dimensions

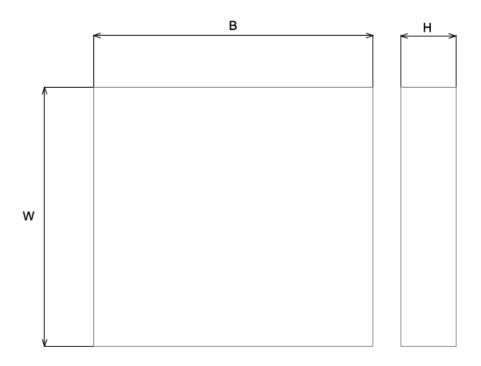

| WIDTH (W) | BREADTH (B) | HEIGHT (H) |
|-----------|-------------|------------|
| 340mm | 339mm | 53mm |

15.5. Bag properties

Reels are supplied in protective plastic packaging.

15.6. Reel label information



Description: GPS Module

Part Number: M20072

Qty: 1000pcs Date Code: YYWW Package Date: YYWW

sales@antenova.com / www.antenova.com

GNSSNOVA







- Calculated shelf life in sealed bag: 12months at <40°C and <90% relative humidity (RH).
- 2. After bag is opened, devices that will be subjected to reflow solder or other high temperature process must:
 - a) Mounted within: 168 hours of factory conditions $<30^{\circ}\text{C}/60\%$ RH, or
- b) Stored per J-STD-033
- 3. Devices required bake, before mounting if:
- a) Humidity indicator card reads >10% when read at 23 \pm 5 $^{\circ}$ C
- b) 2a or 2b not met
- If baking is required, refer to IPC/JEDEC J-STD-033 for bake procedure.
 Note: Level and body temperature defined by IPC/JEDEC J-STD-020

Quality statements

Antenova's products conform to REACH and RoHS legislation. For our statements regarding these and other quality standards, please see antenova.com.









Antenova reserves all rights to the contents of this document. Antenova gives no warranties based solely on the accuracy or completeness of the contents of this document and reserves the right to make changes to the specifications of the products described herein at any time and without notice.

Datasheet version

1.01 released Nov 13 2022



Antenna design, integration and test resources

Product designers – the details contained in this datasheet will help you to complete your embedded antenna design. Please follow our technical advice carefully to obtain optimum antenna performance.

We aim to support our customers to create high performance wireless products. You will find a wealth of design resources, calculators and case studies to aid your design on our website.

Antenova's design laboratories are equipped with the latest antenna design tools and test chambers. We provide antenna design, test and technical integration services to help you complete your design and obtain the required certifications.

If you cannot find the antenna you require in our product range, please contact us to discuss creating a custom antenna to meet your exact requirements.

Visit antenova.com

Order antenna samples and evaluation boards, and read our antenna resources

VISIT ANTENOVA.COM

Request a technical support:

techsupport@antenova.com Request a volume quotation:

sales@antenova.com

Global headquarters

Antenova Ltd, 2nd Floor Titan Court, 3 Bishop Square, Hatfield, AL10 9NA

+44 (0) 1707 927589

Copyright® Antenova Ltd. All Rights Reserved. Antenova®, gigaNOVA®, RADIONOVA®, the Antenova product family names and the Antenova logos are trademarks and/or registered trademarks of Antenova Ltd. Any other names and/or trademarks belong to their respective companies. The materials provided herein are believed to be reliable and correct at the time of printing. Antenova does not warrant the accuracy or completeness of the information, text, graphics or other items contained within this information. Antenova further assumes no responsibility for the use of this information, and all such information shall be entirely at the user's risk.