

Introduction

A table mounting clamp for parallel action hand crimp tools. This tool can only be used for the hand crimp tools shown on this document.

Mounting Procedure (Figure 1)

1. Attach the *Tool Holder* to the tool body with the *Locking Knob* through the oval slot in the bottom of the tool head.
2. Slide the *Table Clamp* through the bottom ledge of the *Baseplate* and adjust the *Table Clamp* to fit tightly.

NOTE: Maximum table/bench thickness = 50.00 mm [1.97"]

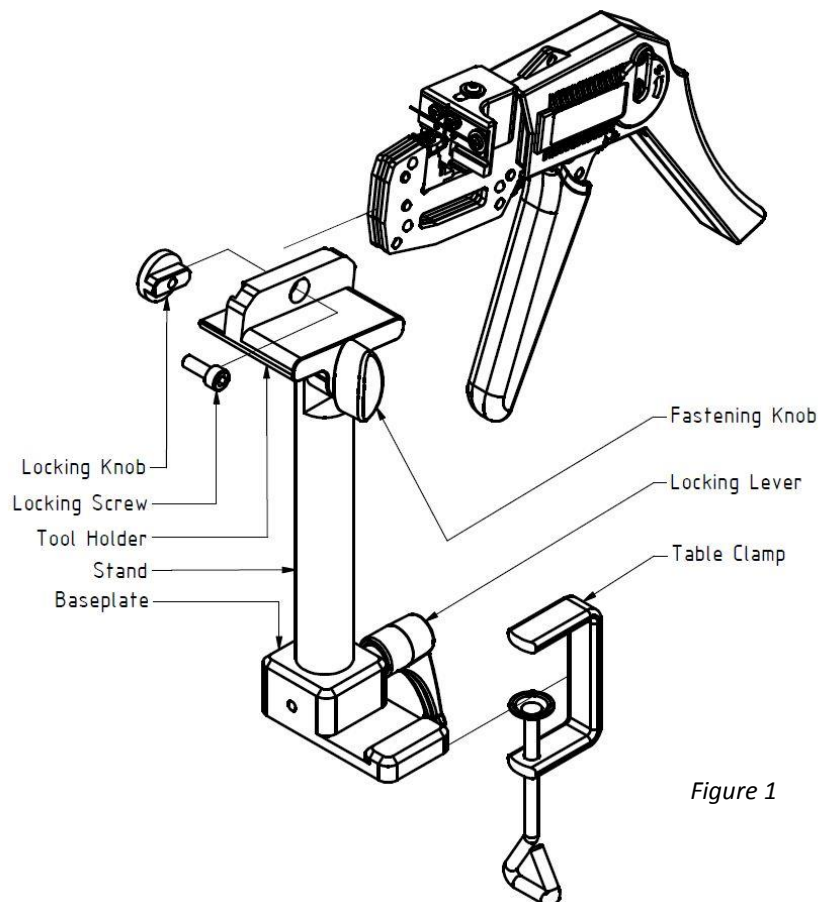


Figure 1

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Samtec:](#)

[CAT-HT-MNT-02](#)