# MP6972



The MP6972 is a fast turn-off, intelligent rectifier

for flyback converters that integrates a

 $100V/17m\Omega$  MOSFET. It can replace a diode

rectifier for higher efficiency and power density.

The chip regulates the forward voltage drop of

the internal power switch to  $V_{FWD}$  (40mV) and

turns off before the drain-source voltage

rectification. The internal ringing detection

circuitry prevents the MP6972 from falsely

turning on during discontinuous conduction

The MP6972 is available in an SOIC-8 package.

mode (DCM) or quasi-resonant operations.

is optimized for

low-side

reverses.

The

MP6972

### CCM/DCM Flyback Ideal Diode with Integrated 100V/17mΩ MOSFET with Slew Rate Detection

### FEATURES


- Integrated 100V/17mΩ MOSFET
- Optimized Efficiency for Low-Side Rectification
- Ringing Detection Prevents False Turn-On during DCM Operations
- Compatible with Energy Star
- 110µA Quiescent Current
- Supports DCM, CCM, and Quasi-Resonant Operations
- Wide Output Range Down to 0V
- Available in an SOIC-8 Package

### APPLICATIONS

- Laptop Adapters
- QC and USB PD Chargers
- High-Efficiency Flyback Converters

All MPS parts are lead-free, halogen free, and adhere to the RoHS directive. For MPS green status, please visit the MPS website under Quality Assurance. "MPS", the MPS logo, and "Simple, Easy Solutions" are registered trademarks of Monolithic Power Systems, Inc. or its subsidiaries.

### TYPICAL APPLICATION

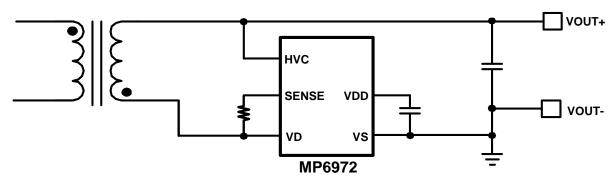



#### **ORDERING INFORMATION**

Part Number	Package	Top Marking	MSL Rating
MP6972GS*	SOIC-8	See Below	2

\* For Tape & Reel, add suffix –Z (e.g. MP6972GS–Z).


### **TOP MARKING**

### MP6972

### LLLLLLL

### MPSYWW

MP6972: Part number LLLLLLL: Lot number MPS: MPS prefix Y: Year code WW: Week code

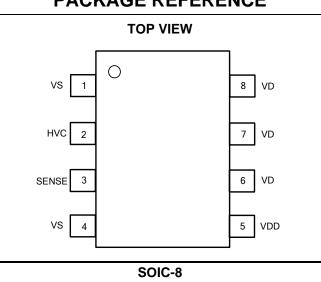

### **PACKAGE REFERENCE**

#### **PIN FUNCTIONS**

Pin #	Name	Description
1, 4	VS	MOSFET source. VS is also used as a reference for VDD.
2	HVC	HV linear regulator input.
3	SENSE	MOSFET drain voltage sensing.
5	VDD	Linear regulator output. VDD is the power supply of IC.
6, 7, 8	VD	MOSFET drain.

MP6972 Rev. 1.0 7/14/2020



#### ABSOLUTE MAXIMUM RATINGS (1)

#### ESD Rating

Charged device model (CDM) ..... ±2000V

#### **Recommended Operation Conditions** <sup>(4)</sup>

VDD to VS ......4.5V to 13V Operating junction temp  $(T_J)$  .... -40°C to +125°C

#### Thermal Resistance<sup>(5)</sup> θ<sub>JA</sub> θ<sub>JC</sub>

#### Notes:

- 1) Exceeding these ratings may damage the device.
- Repetitive rating: Pulse width = 100µs, duty cycle limited by maximum junction temperature.
- 3)  $T_A = 25^{\circ}C$ . The maximum allowable power dissipation is a function of the maximum junction temperature  $T_J$  (MAX), the junction-to-ambient thermal resistance  $\theta_{JA}$ , and the ambient temperature  $T_A$ . The maximum allowable continuous power dissipation at any ambient temperature is calculated by  $P_D$  (MAX) = ( $T_J$  (MAX)  $T_A$ ) /  $\theta_{JA}$ . Exceeding the maximum allowable power dissipation produces an excessive die temperature, causing the regulator to go into thermal shutdown. Internal thermal shutdown circuitry protects the device from permanent damage.
- The device is not guaranteed to function outside of its operating conditions.
- 5) Measured on JESD51-7, 4-layer PCB.



### **ELECTRICAL CHARACTERISTICS**

VDD =  $V_{DD_HVC}$ ,  $T_J$  = -40°C to +125°C, unless otherwise noted.

Parameter	Symbol	Conditions	Min	Тур	Max	Units
	V <sub>DD_SEN</sub>	SENSE = 30V, HVC = 0V	4.6	5	5.4	V
VDD regulation voltage	VDD_HVC	SENSE = 0V, HVC = 12V	6.3	6.7	7	V
VDD UVLO rising			4.0	4.2	4.4	V
VDD UVLO hysteresis			0.1	0.24	0.38	V
	Ivdd_sen	$\label{eq:VDD} \begin{split} VDD &= V_{DD\_SEN} - 0.1V,\\ SENSE &= 30V, \ HVC &= 0V,\\ C_{DD} &= 1\mu F \end{split}$	20	38	55	mA
VDD charging current		$\label{eq:VDD} \begin{split} VDD &= V_{DD\_HVC} - 0.1V,\\ SENSE &= 0V,  HVC = 12V,\\ C_{DD} &= 1\mu F \end{split}$	20	38	62	mA
	Ivdd_hvc	$\label{eq:VDD} \begin{split} VDD &= V_{DD\_HVC} - 0.1V,\\ SENSE &= 0V,  HVC = 30V,\\ C_{DD} &= 1\mu F \end{split}$	35	64	95	mA
Operating current	lcc	fsw = 100kHz	1.6	2.4	4	mA
Quiescent current	IQ(VDD)	$V_{DD} = 7V$		110	135	μA
Control Circuitry Section						
Forward regulation voltage (VS-VD) <sup>(6)</sup>	V <sub>FWD</sub>		25	40	55	mV
Turn-on threshold (VDS)			-115	-80	-57	mV
Turn-off threshold (VS-VD) (6)			-6	3	+12	mV
Turn-on delay <sup>(7)</sup>	td_on			20		ns
Turn-off delay <sup>(6)</sup>	t <sub>D_OFF</sub>			25		ns
Turn-on blanking time	t <sub>B-ON</sub>		0.8	1.2	1.55	μs
Turn-off blanking threshold (VDS)	VB-OFF		2	2.5	3	V
Turn-off threshold during minimum on time (VDS)			1.2	1.8	2.5	V
Turn-on slew rate detection time <sup>(7)</sup>				30		ns
Power Switch Section <sup>(8)</sup>						
Drain-source breakdown voltage <sup>(6)</sup>	V <sub>(BR)DSS</sub>		100			V
Single-pulse avalanche energy (6)	Eas	$V_{PS} = 50V, V_{GS} = 0V,$ L = 1.0mH,		100		mJ
Drain-source on resistance	RDS(ON)	$V_{GS} = 6.7V, I_D = 2A$		17	21.3	mΩ
Input capacitance (7)	Ciss			1925		pF
		$V_{DS} = 40V, V_{GS} = 0V,$ f = 1MHz		307		pF
				20		pF
Source-Drain Diode Characteristic	cs					
Source-drain diode forward voltage	V <sub>SD</sub>	$I_{\rm S}=8$ A, $V_{\rm GS}=0$ V		0.8	1.2	V
Reverse recovery time (7)	t <sub>RR</sub>	$I_{\rm c} = 100$ dl/dt = 1000/up		78.8		ns
Diode reverse change (7)	Q <sub>RR</sub>	I <sub>F</sub> = 10A, dl/dt = 100A/µs		105.6		nC


Notes:

6) Guaranteed by characterization.

7) Guaranteed by design. 8)  $T_J = 25^{\circ}C.$ 




### **TYPICAL CHARACTERISTICS**

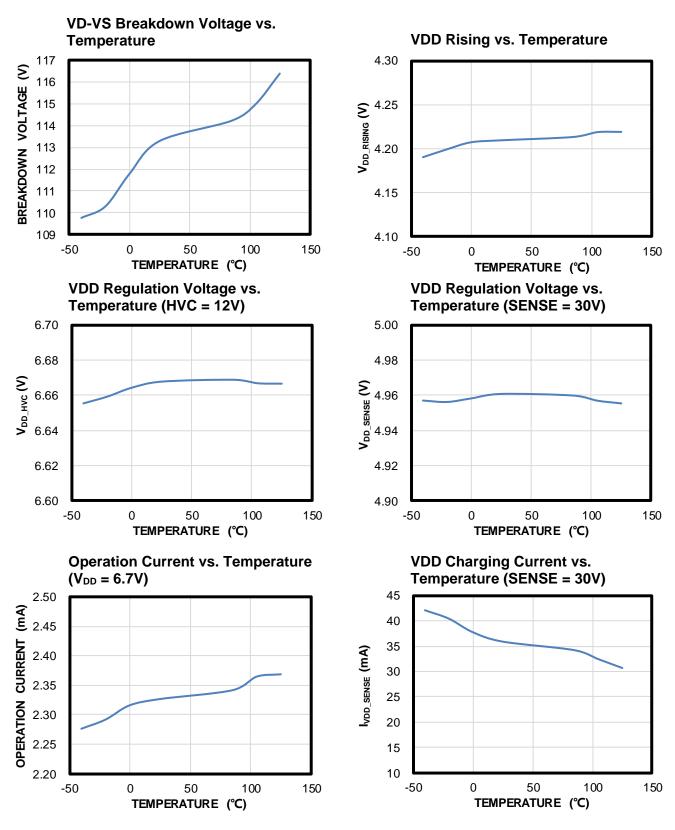

MP6972 Rev. 1.0 7/14/2020




### TYPICAL CHARACTERISTICS (continued)

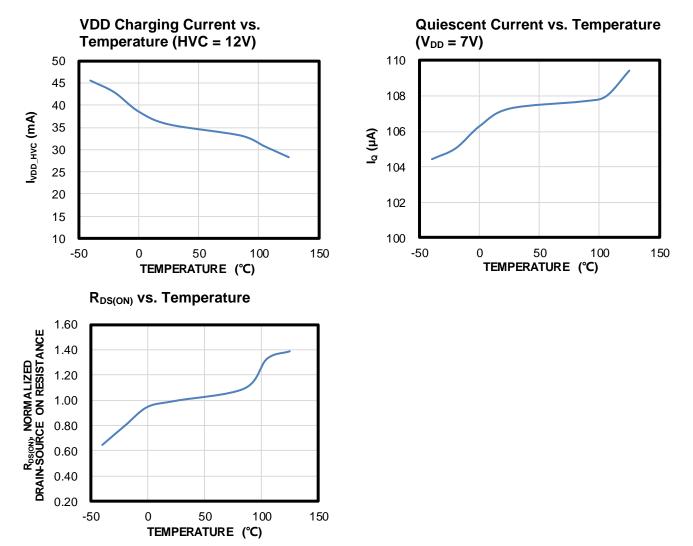



### **TYPICAL PERFORMANCE CHARACTERISTICS**

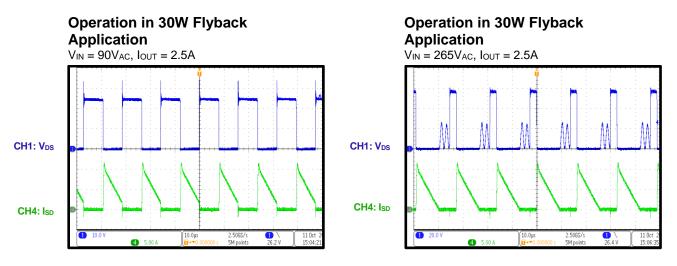



### FUNCTIONAL BLOCK DIAGRAM

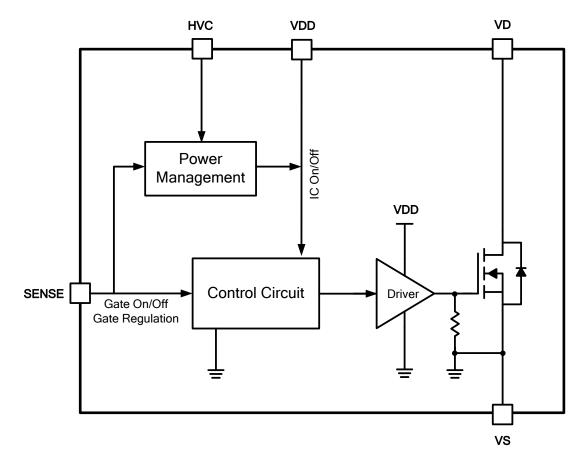


Figure 1: Functional Block Diagram



### **OPERATION**

The MP6972 supports operation in discontinuous conduction mode (DCM) and continuous conduction mode (CCM), as well as for quasi-resonant (QR) flyback converters. The control circuitry controls the gate in forward mode and turns the gate off when the synchronous rectification (SR) MOSFET current drops to zero.

#### **VDD Generation**

The external capacitor at VDD supplies power to the IC. First, SENSE charges the capacitor via a current source with  $I_{VDD\_SEN}$ , When UVLO <  $V_{DD}$ <  $V_{DD\_SENSE}$  (5V), both HVC and SENSE are allowed to charge VDD. When  $V_{DD}$  exceeds  $V_{DD\_SENSE}$ , HVC charges VDD alone via a current source with  $I_{VDD\_HVC}$ .

If  $V_{HVC} < 5.7V$ , VDD is regulated at  $V_{DD\_SENSE}$  (5V). When 5.7V <  $V_{HVC}$  < 6.7V, VDD is regulated at  $V_{HVC}$  - 0.7V (internal current-dependent forward diode voltage drop). When  $V_{HVC}$  > 6.7V, VDD is clamped at  $V_{DD\_HVC}$  (6.7V).

#### Start-Up and Under-Voltage Lockout (UVLO)

When  $V_{DD}$  exceeds the VDD UVLO rising threshold (4.2V), the MP6972 exits undervoltage lockout (UVLO) and is enabled. Once  $V_{DD}$  drops below 4.0V, the MP6972 enters sleep mode and  $V_{GS}$  is kept low.

#### Turn-On Phase

When  $V_{DS}$  drops to ~2V, a turn-on timer begins. If  $V_{DS}$  reaches the turn-on threshold (-80mV) from 2V within the turn-on slew rate detection time (30ns), the MOSFET turns on after a turnon delay ( $t_{D_ON}$ ), which is typically 20ns (see Figure 2). If  $V_{DS}$  crosses the turn-on threshold after the timer ends, the gate voltage remains off. This turn-on timer prevents the MP6972 from falsely turning on due to ringing in DCM or quasiresonant operations.

#### **Turn-On Blanking**

The control circuitry contains a blanking function. When the MOSFET turns on, the control circuit ensures that the on state lasts for a specific period of time. The turn-on blanking time ( $t_{B-ON}$ ) is ~1.2µs to prevent an accidental turn-off due to ringing. However, if V<sub>DS</sub> reaches 1.8V within the turn-on blanking time, then V<sub>GS</sub> is pulled low immediately.

#### **Conduction Phase**

Once  $V_{DS}$  exceeds the forward voltage drop, which is  $-V_{FWD}$  (-40mV), according to the decrease of the switching current, the MP6972 lowers the gate voltage level to enlarge the on resistance of the synchronous MOSFET.

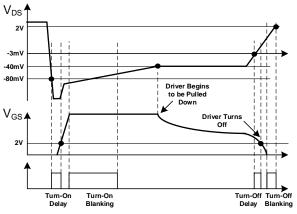


Figure 2: Turn-On/Turn-Off Timing Diagram

With this control scheme,  $V_{SD}$  is adjusted to be approximately equal to  $V_{FWD}$  even when the current through the MOSFET is fairly low. This function keeps the driver voltage at a very low level when the synchronous MOSFET is turned off, which boosts the turn-off speed and is especially important to CCM operation.

#### **Turn-Off Phase**

When  $V_{DS}$  rises to trigger the turn-off threshold (-3mV), the gate voltage is pulled to zero after a short turn-off delay ( $t_{D_OFF}$ ), typically 25ns (see Figure 2).

#### Turn-Off Blanking

After the gate driver ( $V_{GS}$ ) is pulled to zero by  $V_{DS}$  reaching the turn-off threshold (-3mV), a turn-off blanking time is applied, during which the gate driver signal is latched off. The turn-off blanking is removed when  $V_{DS}$  exceeds  $V_{B-OFF}$  (2V) (see Figure 2).



### **APPLICATION INFORMATION**

#### **Slew Rate Detection**

During DCM operation, the demagnetizing ringing may bring  $V_{DS}$  below 0V. If  $V_{DS}$  reaches the turn-on threshold during the ringing, SR controllers without slew rate detection may turn on the MOSFET by mistake. This not only increases power loss, but may also lead to shoot-through if the primary-side MOSFET is turned on within the minimum on time of the SR controller.

The falling slew rate of the ringing is always much less than when the primary MOSFET is off; this false turn-on situation can be prevented by slew rate detection. When the slew rate is below the threshold, the IC does not turn on the gate even when  $V_{DS}$  reaches the turn-on threshold. For more details, see the Turn-On Phase section on page 9.

#### **External Resistor on SENSE and HVC**

Over-voltage (OV) conditions may lead to the device malfunctioning or even being damaged, so the application design must be careful to guarantee safe operation, especially on the high-voltage pin.

One common OV condition occurs when the body diode of the SR MOSFET is turned on, as the forward voltage drop may exceed the negative rating on the SENSE pin. In this case, it is recommended to place an external resistor between SENSE and the MOSFET drain. The resistance is typically recommended to be between  $100\Omega$  and  $300\Omega$ .

On the other hand, this resistor also cannot be too large, because it may slow down the  $V_{DS}$ detection slew rate. In general, it is not recommended to use a resistor greater than  $300\Omega$ , but this should be checked for each case based on the slew rate conditions.

In applications where the HVC may suffer from negative voltage bias (e.g. in the high-side setup without auxiliary winding), there should also be a same resistor placed on the HVC externally.

#### **Typical System Implementations**

Figure 3 shows the typical system IC implementation in low-side rectification. The MP6972 is directly supplied by the output.

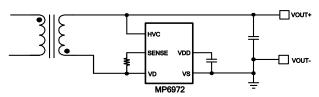


Figure 3: Low-Side Rectification

#### Maximum Output Current

The allowed temperature rise for the MP6972 limits the maximum output current the device can handle. The temperature rise is determined by the device's power loss. The MP6972's recommended rated output current for a typical universal input adapter is 2.5A. For certain designs, the power loss of the MP6972 can be calculated, so the maximum output current can be deduced.

The MP6972's power loss can be separated into several parts, including controller consumption and integrated MOSFET conduction loss. If the MP6972 works in continuous conduction mode (CCM), reverse-recovery loss of the integrated MOSFET must also be considered. Each part of the loss can be calculated based on Equation (1), Equation (2), and Equation (3), respectively:

$$P_{\text{LOSS}\_\text{CONTROLLER}} = V_{\text{HVC}} \times I_{\text{DD}} \quad (1)$$

$$P_{\text{LOSS}\_\text{SR}\_\text{CONDUCTION}} = f_{\text{SW}} \times \int_{0}^{t_{\text{S}\_\text{ON}}} V_{\text{SR}\_\text{SD}}(t) \times I_{\text{SR}\_\text{SD}}(t) dt \quad (2)$$

$$P_{\text{LOSS}_{SR}_{RR}} = \frac{1}{2} \times V_{\text{DS}} \times I_{\text{RR}} \times t_{\text{RR}} \times f_{\text{SW}}$$
(3)

Where  $I_{DD}$  is the MP6972's current,  $V_{HVC}$  is the voltage on HVC pin,  $t_{S_ON}$  is the SR on period,  $V_{SR_SD}$  is the voltage drop from the SR,  $I_{SR_SD}$  is the current flowing from the SR,  $I_{RR}$  is the peak reverse current, and  $t_{RR}$  is the reverse-recovery time.

The MP6972's total loss ( $P_{LOSS}$ ) is the sum of the above losses. If an RC snubber is used, the power loss caused by this snubber must also be taken into consideration.

The junction and case temperature rises can be calculated with the junction-to-ambient thermal resistance ( $\theta_{JA}$ ) and junction-to-case thermal



resistance ( $\theta_{JC}$ ). The junction temperature must be within ABS (typically 150°C). Calculate  $\Delta T_{JA}$ and  $\Delta T_{JC}$  with Equation (4) and Equation (5), respectively:

$$\Delta \mathsf{T}_{\mathsf{JA}} = \mathsf{P}_{\mathsf{LOSS}} \times \Theta_{\mathsf{JA}} \tag{4}$$

$$\Delta \mathsf{T}_{\mathsf{JC}} = \mathsf{P}_{\mathsf{LOSS}} \times \Theta_{\mathsf{JC}} \tag{5}$$

The thermal resistance can be reduced in one of several ways to lower the temperature: a thicker copper layer attached to VD and VS, additional via for thermal dissipation, or heatsinks. The real maximum output current can be determined by combining the real tested data.

#### **Design Example**

Figure 4 shows a layout example for a low-side application of a flyback power supply, specifically a single layer with a through-hole transformer. RSN and CSN comprise the RC snubber network for the internal MOSFET. The sensing loop (SENSE to the MOSFET drain) is optimized and kept separate from the power loop. The VDD decoupling capacitor (C2) is placed beside VDD.

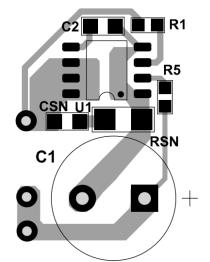


Figure 4: Layout Example in Flyback Low-Side Application

#### PCB Layout Guidelines

Efficient PCB layout is critical for stable operation. For the best results, refer to Figure 4 and Figure 5, and follow the guidelines below:

- 1. Connect the SENSE pin to a different position for an adjustable turn-off time during the fast transients in CCM. The further the junction point is from VD, the earlier the SR turns off (see Figure 5).
- 2. Keep the IC out of the power loop to prevent the sensing loop and power loop from interrupting each other.

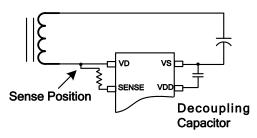



Figure 5: Voltage Sensing for VD/SENSE

 Place a decoupling ceramic capacitor between VDD and VS, close to the IC, for adequate filtering.




### PACKAGE INFORMATION

SOIC-8

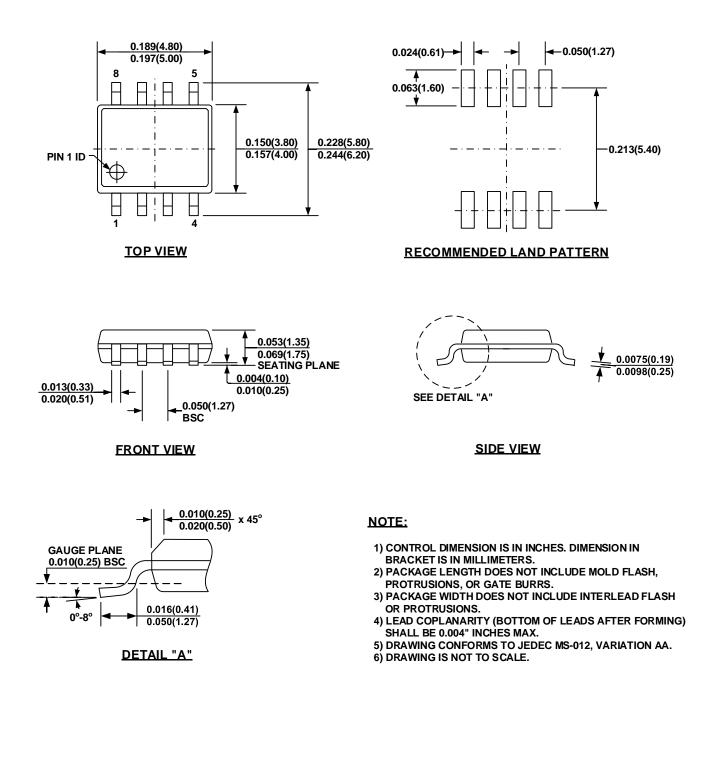



### **CARRIER INFORMATION**

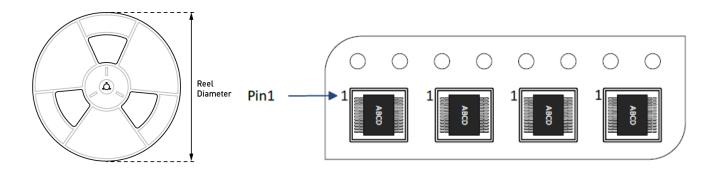

Part Number	Package Description	Quantity/ Reel	Quantity/ Tube	Quantity/ Tray	Reel Diameter	Carrier Tape Width	Carrier Tape Pitch
MP6972GS-Z	SOIC-8	2500	100	N/A	13in	12mm	8mm



### **Revision History**

Revision #	Revision Date	Description	Pages Updated
1.0	7/14/2020	Initial Release	-

**Notice** The information in this document is subject to change without notice. Users should warrant and guarantee that thirdparty Intellectual Property rights are not infringed upon when integrating MPS products into any application. MPS will not assume any legal responsibility for any said applications.

## **Mouser Electronics**

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Monolithic Power Systems (MPS):

MP6972GS-P MP6972GS-Z