


# RUTX12






## **HARDWARE**


#### **FRONT VIEW**

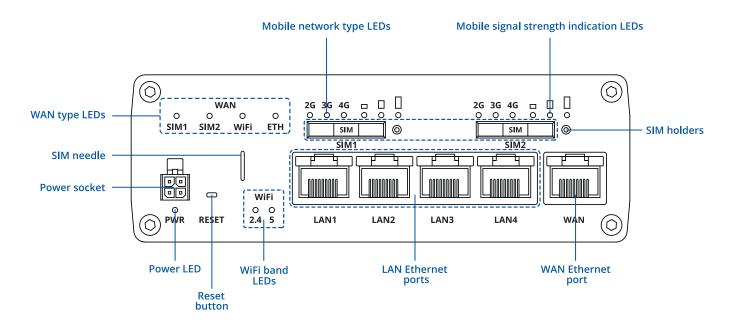

#### **BACK VIEW**

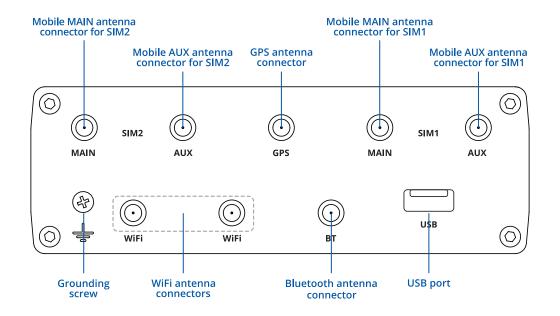

#### **POWER SOCKET PINOUT**





# **FEATURES**

Mobile module	2 x 4G (LTE) – Cat 6 up to 300 Mbps, 3G – up to 42 Mbps
SIM/mobile module switch	2 SIM cards, one for each mobile module, auto switch cases: weak signal, data limit, SMS limit, roaming, no network, network denied, data connection fail, SIM idle protection (planned)
Status	Signal strength, SINR, RSRP, RSRQ, Bytes sent/received, Mobile module in use
SMS	SMS status, SMS configuration, send/read SMS via HTTP POST/GET, Email to SMS, SMS to Email, SMS to TTP, SMS to SMS, SMS auto replay, scheduled SMS (planned), SMPP (planned)
Black/White list	Operator black/white list
Multiple PDN (planed)	Possibility to use different PDNs for multiple network access and services
Band management	Band lock, Used band status display
APN	Auto APN
Bridge mode	Direct connection (bridge) between mobile ISP and device on LAN

#### **WIRELESS**

Wireless mode	802.11b/g/n/ac (WiFi 5) with data transmission rates up to 867 Mbps (Dual Band, MU-MIMO), 802.11r fast transition, Access Point (AP), Station (STA)
WiFi security	WPA2-Enterprise-PEAP, WPA2-PSK, WPA-PSK, WEP; AES-CCMP, TKIP, Auto Cipher modes, client separation
ESSID	ESSID stealth mode
Wireless Hotspot	Captive portal (Hotspot), internal/external Radius server, built in customizable landing page

#### **ETHERNET**

WAN	WAN port (can be configured as LAN) 10/100/1000 Mbps, compliance with IEEE 802.3, IEEE 802.3u, 802.3az standards, supports auto MDI/MDIX crossover
LAN	4 x LAN ports, 10/100/1000 Mbps, compliance with IEEE 802.3, IEEE 802.3u, 802.3az standards, supports auto MDI/MDIX

#### **NETWORK**

Routing	Static routing, Dynamic routing (BGP, OSPF v2, RIP v1/v2, EIGRP, NHRP)
NetSnapper (optional)	Mobile connection management, data compression VPN client (not available in standard FW)
Network protocols	TCP, UDP, IPv4, IPv6, ICMP, NTP, DNS, HTTP, HTTPS, FTP, SMTP, SSL v3, TLS, ARP, VRRP, PPP, PPPoE, UPNP, SSH, DHCP, Telnet client, SNMP, MQTT, Wake on LAN (WOL)
VoIP passthrough support	H.323 and SIP-alg protocol NAT helpers, allowing proper routing of VoIP packets
Connection monitoring	Ping Reboot, Wget reboot, Periodic Reboot, LCP and ICMP for link inspection
Firewall	Port forwards, traffic rules, custom rules
DHCP	Static and dynamic IP allocation, DHCP Relay, Relayd
QoS	Traffic priority queuing by source/destination (planned), service (planned), protocol or port (planned), WMM, 802.11e
DDNS	Supported >25 service providers, others can be configured manually
Network backup	VRRP, Mobile, Wired and WiFi WAN options, each of which can be used as an automatic Failover
Load balancing	Balance Internet traffic over multiple WAN connections
SSHFS (optional)	Possibility to mount remote file system via SSH protocol (not available in standard FW)

#### FIRMWARE / CONFIGURATION

WEB UI	Update FW from file, check FW on server, configuration profiles, configuration backup
FOTA	Update FW/configuration from server
RMS	Update FW/configuration for multiple devices at once
Keep settings	Update FW without losing current configuration



#### **SECURITY**

Pre-shared key, digital certificates, X.509 certificates
Pre-configured firewall rules can be enabled via WebUI, unlimited firewall configuration via CLI; DMZ; NAT; NAT-T
DDOS prevention (SYN flood protection, SSH attack prevention, HTTP/HTTPS attack prevention), port scan prevention (SYN-FIN, SYN-RST, X-mas, NULL flags, FIN scan attacks)
Port based and tag based VLAN separation
Custom data limits for both SIM cards
Blacklist for blocking out unwanted websites, Whitelist for specifying allowed sites only
Flexible access control of TCP, UDP, ICMP packets, MAC address filter

#### VPN

OpenVPN	Multiple clients and a server can run simultaneously, 12 encryption methods	
OpenVPN Encryption	DES-CBC, RC2-CBC, DES-EDE-CBC, DES-EDE3-CBC, DESX-CBC, BF-CBC, RC2-40-CBC, CAST5-CBC, RC2-64-CBC, AES-128-CBC, AES-192-CBC, AES-256-CBC	
IPsec	IKEv1, IKEv2, with 5 encryption methods for IPsec (DES, 3DES, AES128, AES192, AES256)	
GRE	GRE tunnel	
PPTP, L2TP	Client/Server instances can run simultaneously	
Stunnel	Proxy designed to add TLS encryption functionality to existing clients and servers without any changes in the program's code	
DMVPN	Method of building scalable IPsec VPNs	
SSTP	SSTP client instance support	

#### **MONITORING & MANAGEMENT**

WEB UI	HTTP/HTTPS, status, configuration, FW update, CLI, troubleshoot, event log, system log, kernel log
FOTA	Firmware update from server, automatic notification
SSH	SSH (v1, v2)
SMS	SMS status, SMS configuration, send/read SMS via HTTP POST/GET
CALL	Reboot, Status, Mobile data on/off, Output on/off
TR-069	OpenACS, EasyCwmp, ACSLite, tGem, LibreACS, GenieACS, FreeACS, LibCWMP, Friendly tech, AVSystem
MQTT	MQTT Broker, MQTT publisher
SNMP	SNMP (v1, v2, v3), SNMP trap
JSON-RPC	Management API over HTTP/HTTPS
Modbus	Modbus TCP status/control
RMS	Teltonika Remote Management System (RMS)

#### **MODBUS**

Modbus TCP slave	ID filtering: Respond to one ID in range [1;255] or any Allow remote access: Allow access through WAN Custom registers: Modbus TCP custom register block, which allows to read/write to a file inside the router, and can be used to extend Modbus TCP slave functionality
Modbus TCP master	Supported functions: 01, 02, 03, 04, 05, 06, 15, 16 Supported data formats: 8 bit: INT, UINT; 16 bit: INT, UINT (MSB or LSB first); 32 bit: float, INT, UINT (ABCD (big-endian), DCBA (little-endian), CDAB, BADC)
MQTT gateway	Gateway Allows sending commands and receiving data from Modbus Master trough MQTT broker
Modbus data to server	Protocols HTTP(S), MQTT, Azure MQTT (planned)

#### SYSTEM CHARACTERISTICS

CPU	Quad-core ARM Cortex A7, 717 MHz
RAM	256 MB, DDR3
FLASH memory	256 MB Flash



#### **IOT PLATFORMS**

Clouds of things	Allows monitoring of: Device data, Mobile data, Network info, Availability
ThingWorx	Allows monitoring of: WAN Type, WAN IP Mobile Operator Name, Mobile Signal Strength, Mobile Network Type
Cumulocity	Allows monitoring of: Device Model, Revision and Serial Number, Mobile Cell ID, ICCID, IMEI, Connection Type, Operator, Signal Strength, WAN Type and IP
Azure IoT Hub	Can send device IP, Number of bytes send/received/ 3G connection state, Network link state, IMEI, ICCID, Model, Manufacturer, Serial, Revision, IMSI, Sim State, PIN state, GSM signal, WCDMA RSCP, WCDMA EC/IO, LTE RSRP, LTE SINR, LTE RSRQ, CELL ID, Operator, Operator number, Connection type, Temperature, PIN count to Azure IoT Hub server

#### FIRMWARE CUSTOMIZATION

Operating system	RutOS (OpenWrt based Linux OS)	
Supported languages	Busybox shell, Lua, C, C++	
Development tools	SDK package with build environment provided	

#### LOCATION TRACKING

GNSS	GPS, GLONASS, BeiDou, Galileo and QZSS	
Coordinates	GNSS coordinates via WebUI, SMS, TAVL, RMS	
NMEA	NMEA 0183	
Server software	Supported server software: TAVL, RMS	
Mobile Network Geolocation	Get approximate device location on RMS based on mobile cell tower position (without using GPS)	
Geofencing	Configurable multiple geofence zones	

#### USB

Data rate	USB 2.0	
Applications Samba share, custom scripts (planned)		
External devices	Possibility to connect external HDD, flash drive, additional modem, printer (planned)	
Storage formats	FAT, FAT32, NTFS	

#### INPUT/OUTPUT

Input	1x Digital Input
Output	1x Digital Output
Events	SMS, Email, RMS

#### **POWER**

Connector	4 pin industrial DC power socket	
Input voltage range	9 – 50 VDC, reverse polarity protection, voltage surge/transient protection	
PoE (passive)	Passive PoE. Possibility to power up through LAN1 port, not compatible with IEEE802.3af and 802.3at standards	
Power consumption	Idle: <4 W, Max: <22 W	

#### PHYSICAL INTERFACES (PORTS, LEDS, ANTENNAS, BUTTONS, SIM)

Ethernet	5 x RJ45 ports, 10/100/1000 Mbps	
I/Os	1 Digital Input, 1 Digital Output on 4 pin power connector	
Status LEDs	6 x connection status LEDs, 6 x connection strength LEDs, 10 x Ethernet port status LEDs, 4 x WAN status LEDs, 1x Power LED, 2.4G and 5G WiFi LEDs	
SIM	2 x SIM slots (Mini SIM - 2FF), 1.8 V/3 V, external SIM holders	
Power	4 pin DC connector	
Antennas	4 x SMA for LTE, 2 x RP-SMA for WiFi, 1 x RP-SMA for Bluetooth, 1 x SMA for GNNS	
USB	USB A port for external devices	
Reset	Reboot/User default reset/Factory reset button	



#### PHYSICAL SPECIFICATION

Casing material	Full aluminium housing	
Dimensions (W x H x D)	132 x 44 x 95 mm	
Weight	540 g	
Mounting options	DIN rail (can be mounted on two sides), flat surface placement	

#### **OPERATING ENVIRONMENT**

Operating temperature	-40 C to 75 C
Operating humidity	10 % to 90 % non-condensing


#### **BLUETOOTH**

Bluetooth 4.0 Bluetooth low energy (LE) for short range communication



## HARDWARE INSTALLATION

- 1. Pull out the SIM needle from the front panel of the router.
- 2. Push the SIM holder button with the SIM needle.
- 3. Pull out the SIM holder.
- 4. Insert your SIM card into the SIM holder.
- 5. Slide the SIM holder back into the router.
- 6. Attach all antennas.
- 7. Connect the power adapter to the socket on the front of the device. Then plug the other end of the power adapter into a power outlet.
- 8. Connect to the device wirelessly using SSID and password provided on the device information label or use an Ethernet cable connected to

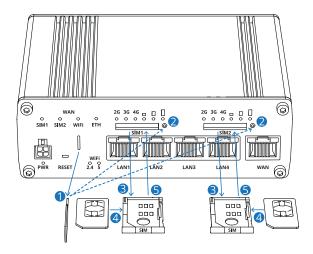

#### **LOGIN TO DEVICE**

- 1. To enter the router's Web interface (WebUI), type http://192.168.1.1 into the URL field of your Internet browser.
- 2. Use login information shown in image A when prompted for authentication.
- 3. After you log in, you will be prompted to change your password for security reasons. The new password must contain at least 8 characters, including at least one uppercase letter, one lowercase letter, and one digit. This step is mandatory, and you will not be able to interact with the router's WebUI before you change the password.
- 4. When you change the router's password, the Configuration Wizard will start. The Configuration Wizard is a tool used to set up some of the router's main operating parameters.
- 5. Go to the Overview page and pay attention to the Signal Strength indication (image B). To maximize the cellular performance try adjusting the antennas or changing the location of your device to achieve the best signal conditions.





#### **TECHNICAL INFORMATION**

	Radio specifications
RF technologies	3G, 4G, GNSS, WiFi, BLE
Max RF power	24 dBm@WCDMA, 23 dBm@LTE, 23 dBm@WiFi, 10 dBm@BLE
	Bundled accessories specifications*
Power adapter	Input: 0.6 A@100-240 VAC, Output: 12 VDC, 1.5 A, 4 pin plug
Mobile antenna	698~960/1710~2690 MHz, 50 Ω, VSWR<3, gain** 3 dBi, omnidirectional, SMA male connector
GNSS antenna	1575.42~1602 MHz, 2.2~5 VDC, VSWR<1.5, active total gain** 28 dB (typ.), RHCP polarization, SMA male connector
WiFi antenna	2400~2500 MHz/4950~5850 MHz, 50 Ω, VSWR<2, gain** 3 dBi, omnidirectional, RP-SMA male connector
BLE antenna	2400~2500 MHz, 50 Ω, VSWR<2.5, gain** 2.5 dBi, omnidirectional, RP-SMA male connector

<sup>\*</sup>Order code dependent.
\*\*Higher gain antenna can be connected to compensate for cable attenuation when a cable is used. The user is responsible for the compliance with the legal regulations.



# WHAT'S IN THE BOX?

#### **STANDARD PACKAGE CONTAINS**

- RUTX12
- 4 x LTE antennas (swivel, SMA male)
- 2 x WiFi antennas (magnetic mount, RP-SMA male, 1.5 m)
- 1 x GNSS antenna (adhesive, SMA male, 3 m cable)
- 1 x Bluetooth antenna (magnetic mount, RP-SMA male, 1.5 m)
- SIM needle
- 24 W Euro PSU
- Ethernet cable (1.5 m)
- QSG (Quick Start Guide)
- Packaging box











# **STANDARD ORDER CODES**

PRODUCT CODE	HS CODE	HTS CODE	PACKAGE CONTAINS
RUTX12000000	851762	8517.62.00	Standard package

For more information on all available packaging options – please contact us directly.

# **STANDARD ORDER CODES**

PRODUCT CODE	REGION (OPERATOR)	FREQUENCY
RUTX12 0****	Europe, the Middle East, Africa, APAC <sup>2</sup>	<ul> <li>4G (LTE-FDD): B1, B3, B5, B7, B8, B20, B28, B32¹</li> <li>4G (LTE-TDD): B38, B40, B41</li> <li>3G: B1, B3, B5, B8</li> </ul>

The price and lead-times for region (operator) specific versions may vary. For more information please contact us.

<sup>1</sup> - LTE-FDD B29 and B32 Support Rx Only, and in 2×CA it is Only for Secondary Component Carrier. 2 - Excluding Japan and CMCC



# **MOUNTING OPTIONS**

## **DIN RAIL KIT**

Parameter	Value
Mounting standard	35mm DIN Rail
Material	Low carbon steel
Weight	57g
Screws included	Philips Pan Head screw #6-32×3/16, 2pcs
Dimensions	82 mm x 46 mm x 20 mm
RoHS Compliant	V

#### **DIN RAIL KIT**

- DIN Rail adapter
- Philips Pan Head screw #6-32×3/16, 2pcs for RUT2xx/RUT9xx



For more information on all available packaging options – please contact us directly.

## **COMPACT DIN RAIL KIT**

Parameter	Value	
Mounting standard	35mm DIN Rail	
Material	ABS + PC plastic	
Weight	6.5 g	
Screws included	Philips Pan Head screw #6-32×3/16, 2pcs	
Dimensions	70 mm x 25 mm x 14,5 mm	
RoHS Compliant	V	

#### **DIN RAIL KIT**

- Compact plastic DIN Rail adapter (70x25x14,5mm)
- Philips Pan Head screw #6-32×3/16, 2pcs

ORDER CODE	PRODUCT CODE	HS CODE	HTS CODE
088-00270	PR5MEC11	73269098	7326.90.98

For more information on all available packaging options - please contact us directly.

# **SURFACE MOUNTING KIT**

Parameter	Value	
Mounting standard	Flat surface mount	
Material	ABS + PC plastic	
Weight	2x5 g	
Screws included	Philips Pan Head screw #6-32×3/16, 2pcs	
Dimensions	25 mm x 48 mm x 7.5 mm	
RoHS Compliant	V	

#### **DIN RAIL KIT**

- Surface mounting kit
- Philips Pan Head screw #6-32×3/16, 2pcs



For more information on all available packaging options – please contact us directly.



ODE	HTS CODE	
2008	7226.00.08	



# **RUTX12 SPATIAL MEASUREMENTS & WEIGHT**

#### MAIN MEASUREMENTS


H x W x D dimensions for RUTX12:

Device housing\*: 95 x 132 x 44 Box: 355 x 175 x 60

\*Housing measurements are presented without antenna connectors and screws; for measurements of other device elements look to the sections below.


#### **TOP VIEW**

The figure below depicts the measurements of RUTX12 and its components as seen from the top:

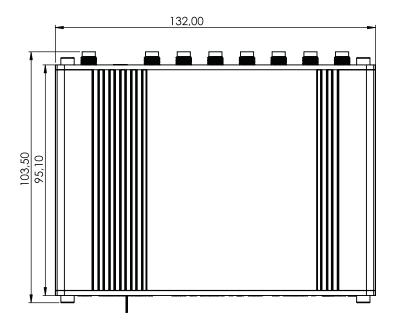

#### **RIGHT VIEW**


The figure below depicts the measurements of RUTX12 and its components as seen from the right side:

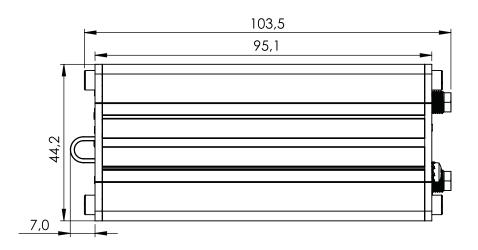




#### **FRONT VIEW**

The figure below depicts the measurements of RUTX12 and its components as seen from the front panel side:

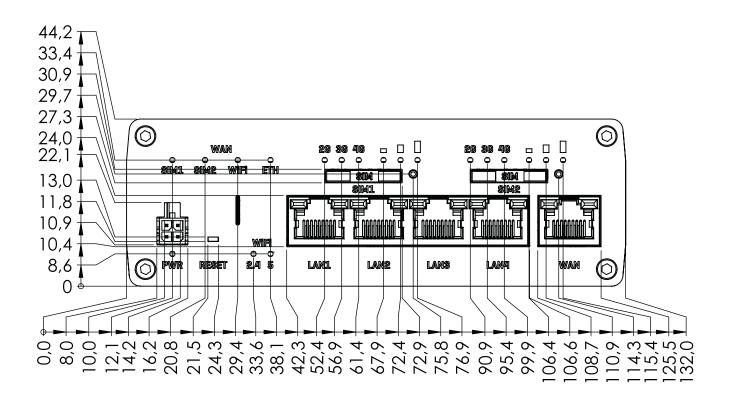

#### **REAR VIEW**


The figure below depicts the measurements of RUTX12 and its components as seen from the back panel side:

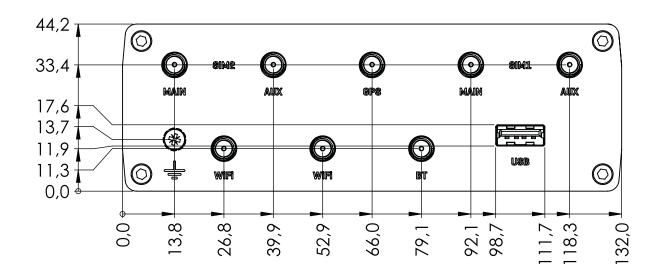



#### MOUNTING SPACE REQUIREMENTS


 $The figure \ below \ depicts \ an \ approximation \ of the \ device's \ dimensions \ when \ cables \ and \ antennas \ are \ attached:$ 

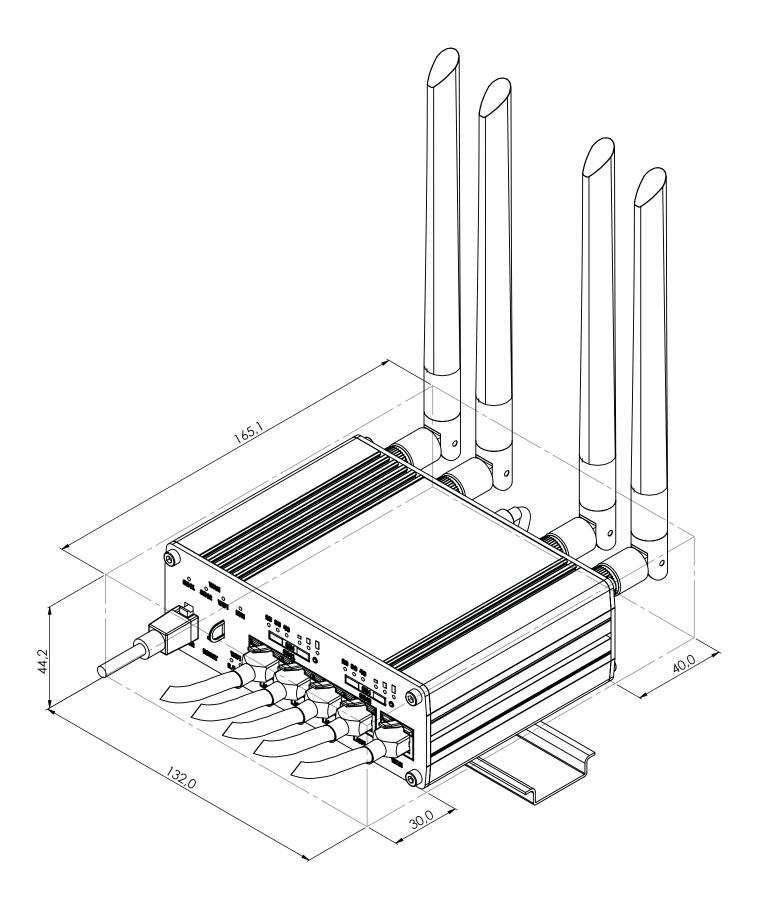



#### DIN RAIL

The scheme below depicts protrusion measurements of an attached DIN Rail:

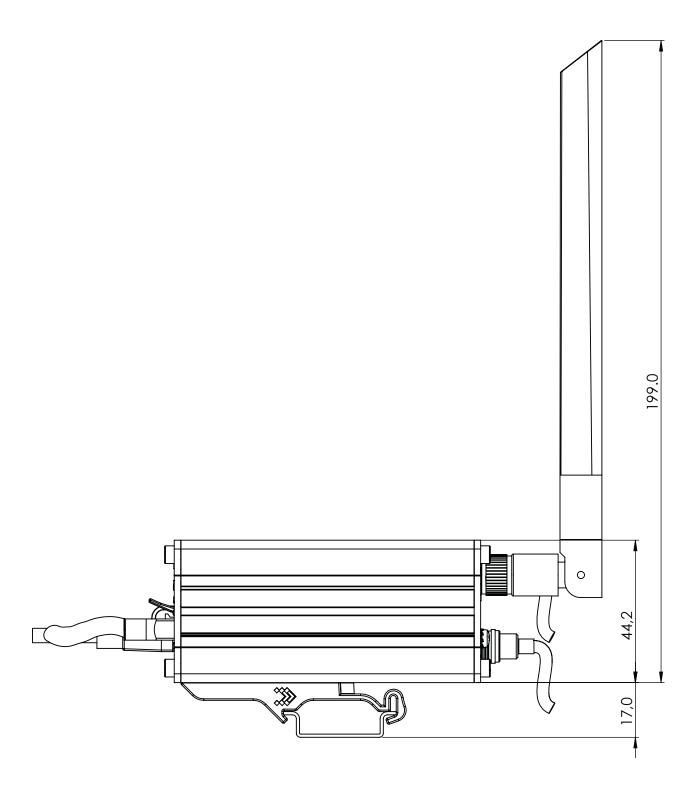

# **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Teltonika:

RUTX12000000