

TLF4277-2 Demo Board

Product Manual

Application Note

Rev. 1.3, 2015-11-18

Automotive Power



Introduction

1 Introduction

The TLF4277-2 Demoboard is a demonstration of the Infineon low drop out linear voltage regulator with integrated current monitor capability. The adjustable output voltage makes the TLF4277-2 suitable of supplying the majority of standard active antenna applications.

This application note contains information for the TLF4277-2 Demoboard.

1.1 General Description

The TLF4277-2 is the ideal companion IC to supply active antennas for car infotainment applications. The adjustable output voltage makes the TLF4277-2 capable of supplying the majority of standard active antennas such as:

- FM/AM
- DAB
- XM
- SIRIUS

The TLF4277-2 is a monolithic integrated low drop out voltage regulator capable of supplying loads up to 300 mA. For an input voltage up to 40 V the TLF4277-2 provides an adjustable output voltage in a range from 5 V up to 12 V. The integrated current monitor function is a unique feature that provides diagnosis and system protection functionality. Fault conditions such as overtemperature and output overvoltage are monitored and indicated at the current sense output. The maximum output current limit of the device is adjustable to provide additional protection to the connected load.

Via the enable function the IC can be disabled to lower the power consumption. The PG-SSOP14 EP package provides an enhanced thermal performance within a SO8 body size.

For more detailed information please see also data sheet [1].

1.2 TLF4277-2 Feature List

- Integrated Current Monitor
- Overvoltage, Overtemperature and Overcurrent Detection
- Adjustable Output Voltage
- · Output Current up to 300 mA
- Adjustable Output Current Limitation
- Very Low Current Consumption
- Very Low Dropout Voltage
- Stable with Ceramic Output Capacitor of 1 μF
- Wide Input Voltage Range up to 40 V
- · Reverse Polarity Protection
- Short Circuit Protected
- Overtemperature Shutdown
- Automotive Temperature Range -40 °C ≤ T_i ≤ 150 °C
- Green Product (RoHS and WEEE compliant)
- AEC Qualified

Application Note 2 Rev. 1.3, 2015-11-18



Introduction

1.3 Block Diagram

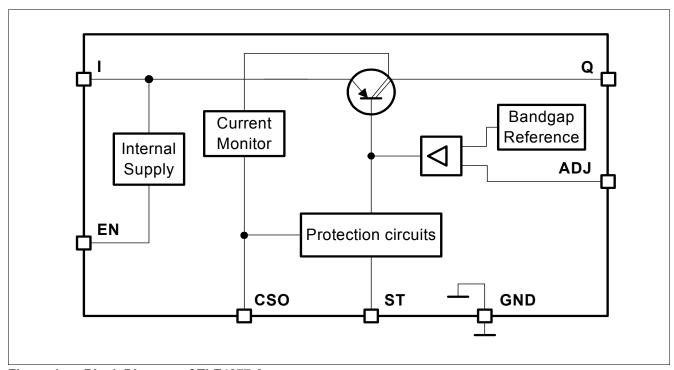


Figure 1 Block Diagram of TLF4277-2



Demo Board

2 Demo Board

The TLF4277-2 Demo Board is equiped by default with TLF4277-2 and all necessary components.



Figure 2 TLF4277-2 Demo Board

2.1 Operating Conditions

To avoid any electrical damage of the Demo Board, the maximum operating range defined in **Table 1** must be followed.

Table 1 Operating Range¹⁾

Parameter	Symbol	Limit Values		Unit	Note
		Min.	Max.		
Board Supply ²⁾	VIN	0	45	V	Power supply
Regulator Output	VOUT	0	12 ³⁾	V	Regulated output for loads up to 300mA
Enable Signal	EN	0	45	V	Enable signal to switch regulator on
Current Sense Out Signal	CSO	0	5	V	Current monitor and status output (e.g. connect to ADC of µC)
Status Output Signal	ST	0	45	V	Digital output signal (e.g. connect to GPIO or interrupt input of μC)
Ground	GND	0	0	V	System GND

¹⁾ The Demo Board operates at ambient temperature of 25°C.

Application Note 4 Rev. 1.3, 2015-11-18

²⁾ Functional input voltage range starts from V_Q + V_{dr} to 40 V.

³⁾ Nominal output voltage depends on applied resistor divider at pin ADJ (functional range is from 5 V to 12 V).



Demo Board

2.2 Board Configuration

The TLF4277-2 Demo Board can be easily configured via jumpers on the board. The board provides the following configuration options:

- Enable function (JP EN)
- Adjust slope of external enable signal via resistor R6 and capacitor C5
- Option to preset the output current limit function (JP_CL1, JP_CL2)
- Adjust output current limit (R7, R8)
- Placeholder for additional output capacitor (C3)
- Placeholder for additional bypass capacitor (C6)
- Option to preset the output voltage (JP VQ1, JP VQ2)
- Adjust output voltage (R4, R5, R9)
- Placeholder for pull up resisitor at status output signal (R1)

2.2.1 Enable Function

The jumper JP_EN can be used to configure the enable functionality.

Table 2 Jumper setting for enable function

JP_EN	Enable Function		
set to 1 - 2	EN is connected to GND; regulator is disabled		
set to 2 - 3	EN is connected to input (I); regulator is enabled while it is supplied 1)		
open	EN is supplied from external via connector EN (Banana jack) 2)		

¹⁾ Default setting.

2.2.2 Output Current Limit Function

The jumpers JP_CL1 and JP_CL2 can be used to configure the output current limit.

JP_CL1	JP_CL2	Output Current Limit (I _{Q,lim})
set	open	280 mA ¹⁾
open	set	10 mA
set	set	290 mA
open	open	An external resistor must be applied to CSO pin via connector "CSO" (Banana jack) ²⁾

¹⁾ Default setting.

Application Note 5 Rev. 1.3, 2015-11-18

²⁾ Without suppling a signal to EN, the regulator is disabled because of an internal pull down resistor.

²⁾ A resisitor $(850\Omega \text{ to } 25\text{k}5\Omega)$ must be applied to CSO pin, in order to guarantee the proper function of the output current monitor.



Demo Board

2.2.3 Output Voltage Function

The jumpers JP_VQ1 and JP_VQ2 can be used to configure the output voltage. Change jumper settings only, when demo board is not powered.

Table 4 Jumper setting for output voltage

JP_VQ1	JP_VQ2	Output Voltage (V _Q)
set	open	5 V ¹⁾
open	set	8.45 V
set	set	don't use (out of functional range for output voltage)
open	open	don't use (out of functional range for output voltage)

¹⁾ Default setting.

2.2.4 Signal Adaption

For easy signal adaption e.g. connecting probes for an oscilloscope, connectors CON1, CON2 and CON_GND can be used. See overview in table "Signals on connector" on Page 6.

Table 5 Signals on connector

Connector	Accessible Signals
CON1	- CSO (output current sense signal) - EN (enable input signal)
	- I (power supply)
CON2	- Q (output voltage) - ADJ (output voltage adjust signal)
	- GND - ST (status output signal)
CON_GND	- GND

Application Note 6 Rev. 1.3, 2015-11-18



Schematic and Layout

3 Schematic and Layout

3.1 Schematic

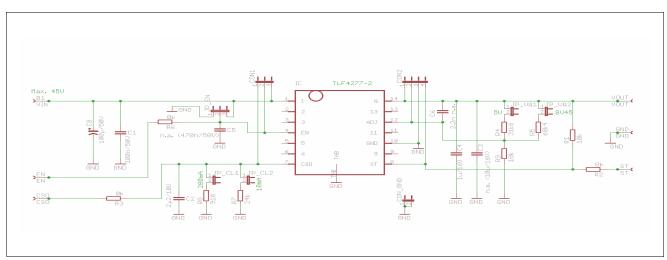


Figure 3 Schematic of TLF4277-2 Demo Board

3.2 Layout

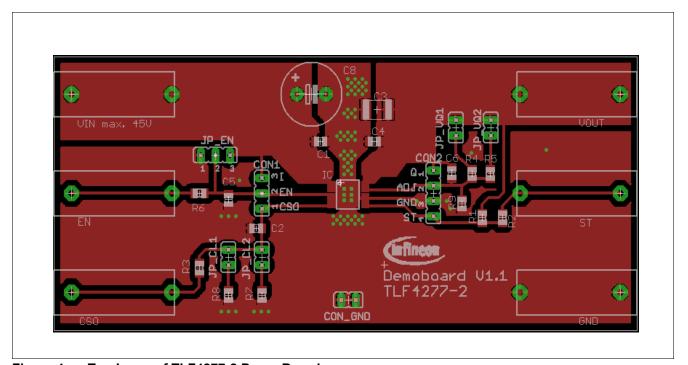


Figure 4 Top Layer of TLF4277-2 Demo Board

Application Note 7 Rev. 1.3, 2015-11-18



Schematic and Layout

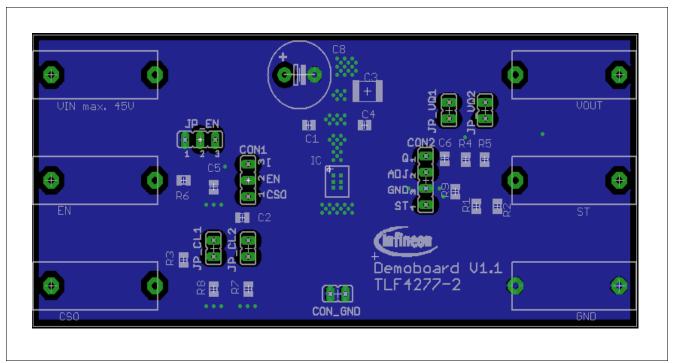


Figure 5 Bottom Layer of TLF4277-2 Demo Board

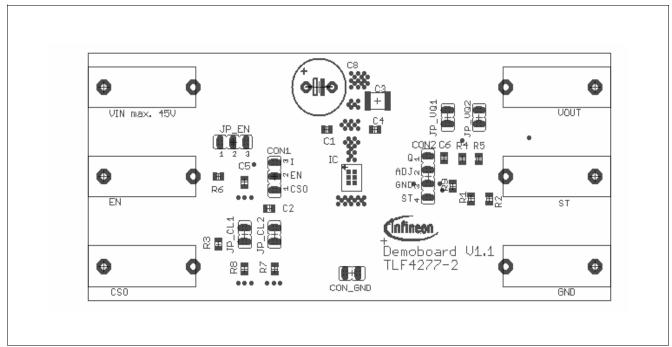


Figure 6 Top Layer components of TLF4277-2 Demo Board

Application Note 8 Rev. 1.3, 2015-11-18



Bill of Material

4 Bill of Material

Table 6 Bill of Material

Part	Value	Package
VIN	Banana jack	BABU4MM
VOUT	Banana jack	BABU4MM
ST	Banana jack	BABU4MM
CSO	Banana jack	BABU4MM
EN	Banana jack	BABU4MM
GND	Banana jack	BABU4MM
R1	10k, 1%	R0805
R2	0k, 1%	R0805
R3	0k, 1%	R0805
R4	31k6, 0.1%	R0805
R5	60k4, 0.1%	R0805
R6	0k, 1%	R0805
R7	24k, 0.1%	R0805
R8	910Ω, 0.1%	R0805
R9	10k, 0.1%	R0805
C1	100n/50V	C0805
C2	2μ2/10V	C0805
C3	n.a. (10µ/16V)	C1206
C4	1μ/16V	C0805
C5	n.a. (470n/50V)	C0805
C6	n.a. (2.2nF/50V)	C0805
C8	100µ/50V	E5-13
CON1	3 pin connector	
CON2	4 pin connector	
CON_GND	2 pin connector	
JP_CL1		jumper
JP_CL2		jumper
JP_EN		jumper
JP_VQ1		jumper
JP_VQ2		jumper
IC	TLF4277-2	PG-SSOP-14



General Information

5 General Information

5.1 Restrictions

This Demoboard is offering limited features allowing you only to evaluate and test the Infineon products. The Demoboard is not an end product (or finished appliance), nor is it intended or authorized by Infineon to be integrated into end products. You are not authorized to use the Demoboard in any production system.

5.2 Additional Information

[1] TLF4277-2 Data Sheet (For further information you may contact http://www.infineon.com/)

5.3 Revision History

Revision	Date	Changes
1.3	2015-11-18	Updated to demoboard version 1.1
1.2	2014-05-13	Updated adjustable current limit setting (R7 = 24k)
1.1	2013-08-06	Updated adjustable current limit setting (R7 = 4k7) Added tolerance of resistors in BOM (Table 6)
1.0	2013-04-10	Initial version

Application Note 10 Rev. 1.3, 2015-11-18

Edition 2015-11-18

Published by Infineon Technologies AG 81726 Munich, Germany © 2015 Infineon Technologies AG All Rights Reserved.

LEGAL DISCLAIMER

THE INFORMATION GIVEN IN THIS APPLICATION NOTE IS GIVEN AS A HINT FOR THE IMPLEMENTATION OF THE INFINEON TECHNOLOGIES COMPONENT ONLY AND SHALL NOT BE REGARDED AS ANY DESCRIPTION OR WARRANTY OF A CERTAIN FUNCTIONALITY, CONDITION OR QUALITY OF THE INFINEON TECHNOLOGIES COMPONENT. THE RECIPIENT OF THIS APPLICATION NOTE MUST VERIFY ANY FUNCTION DESCRIBED HEREIN IN THE REAL APPLICATION. INFINEON TECHNOLOGIES HEREBY DISCLAIMS ANY AND ALL WARRANTIES AND LIABILITIES OF ANY KIND (INCLUDING WITHOUT LIMITATION WARRANTIES OF NON-INFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS OF ANY THIRD PARTY) WITH RESPECT TO ANY AND ALL INFORMATION GIVEN IN THIS APPLICATION NOTE.

Information

For further information on technology, delivery terms and conditions and prices, please contact the nearest Infineon Technologies Office (www.infineon.com).

Warnings

Due to technical requirements, components may contain dangerous substances. For information on the types in question, please contact the nearest Infineon Technologies Office.

Infineon Technologies components may be used in life-support devices or systems only with the express written approval of Infineon Technologies, if a failure of such components can reasonably be expected to cause the failure of that life-support device or system or to affect the safety or effectiveness of that device or system. Life support devices or systems are intended to be implanted in the human body or to support and/or maintain and sustain and/or protect human life. If they fail, it is reasonable to assume that the health of the user or other persons may be endangered.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Infineon:

DEMOBOARDTLF42772ELTOBO1