

# EZ-BT™ MODULE ARDUINO EVALUATION BOARD

## CYBT-333047-EVAL



The EZ-BT Module Arduino Evaluation Board (CYBT-333047-EVAL) enables you to evaluate and develop applications on the EZ-BT WICED Module, CYBT-333047-02. CYBT-333047-EVAL can be used as a standalone evaluation kit or can be combined with Arduino compatible shields.


The CYBT-333047-02 WICED Module is fully integrated, fully certified, 12.0 mm x 13.5 mm x 1.95 mm, programmable, Bluetooth® Smart Ready module designed to reduce your time-to-market. The CYBT-333047-02 supports an external antenna via a u-FL connector. The CYBT-333047-EVAL kit is also the recommended for application development for the CYBT-333032-02 module.

For more information, visit:

[www.cypress.com/bluetooth\\_modules](http://www.cypress.com/bluetooth_modules) - EZ-BLE/EZ-BT Module home pages

[www.cypress.com/EZ-Serial](http://www.cypress.com/EZ-Serial) - EZ-Serial Bluetooth Firmware Platform page

[www.cypress.com/WICED](http://www.cypress.com/WICED) - WICED Platform page

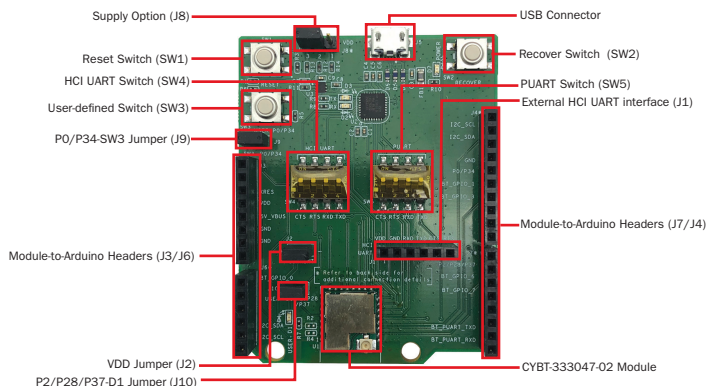

**Figure 1: : CYBT-333047-EVAL Top View**


To use the CYBT-333047-EVAL:

- 1) Configure the evaluation board headers/switches to the desired settings
- 2) Connect the evaluation board to a PC via a USB cable
- 3) Open the WICED Studio IDE, develop your application, program and test

The Arduino compatible headers (J3/J4/J6/J7) are optional connections, which provide additional I/O connections to the module and allow for other Arduino shields to be used during development.

# EZ-BT™ MODULE ARDUINO EVALUATION BOARD

## CYBT-333047-EVAL

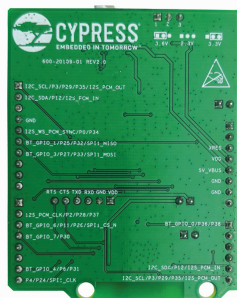

**Figure 2: CYBT-333047-EVAL Bottom View**

- SW1: Reset Switch routed to the XRES connection on the module.
- SW2: Recover Switch routed to the SPI2\_MOSI connection on the module.
- SW3: User-defined Switch routed to the P0/P34 connection on the module via J9.
- SW4: Switch connecting HCI UART connections on the module to host via USB.
- SW5: Switch connecting PUART connections on the module to host via USB.
- J1: Connection for external interface for direct HCI UART communication.
- J2: Used for power supply current measurement.
- J3/J4/J6/J7: Arduino-compatible headers used with an Arduino compatible shield.
- J8: Configures the VDD voltage input to the module as shown in the below table:

J8 Jumper Configuration	VDD Voltage Level
Short 1 & 2	3.6V
Short 2 & 3	3.3V
No Jumper	2.3V

- J9: Connects the P0/34 pad on the module to SW3.
- J10: Connects the P2/P28/37 pad on the module to LED D1.

The EZ-BT WICED Module is qualified for the Bluetooth 5 specification and are certified for the 2.4 GHz unlicensed frequency range in USA (FCC), Canada (ISED), Europe (CE) and Japan (MIC).

Visit [www.cypress.com/support](http://www.cypress.com/support) for technical support.

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Infineon:](#)

[CYBT-333047-EVAL](#)