

## SCR9L

### Universal Lamp Alarm Relay

CE



### Description


The SCR9L is a universal lamp alarm relay designed to sense the failure of flashing or steady LED beacon lamps or obstruction lamps. The SCR9L energizes when one or more lamps fail. It will monitor the operation of one to eight beacon or obstruction lamps. All monitored lamps must be the same wattage and voltage. When connected to a site monitoring system, it provides the remote lamp monitoring protection required by the FAA-AC No: 150/5345-43E.

### Operation

When a lamp fails, the SCR9L senses a decrease in current flow. After a 10s trip delay, the onboard LED glows and the two alarm outputs energize. The outputs and the LED are reset when the failed lamps are replaced and the unit is recalibrated. The SCR9L will sense an open flasher, it will not sense a continuously ON flasher (see FB Series). Removing input voltage de-energizes the output and the LED's. It does not change the calibration.


### Wiring Diagram

BEACON LAMP CONNECTION DIAGRAM

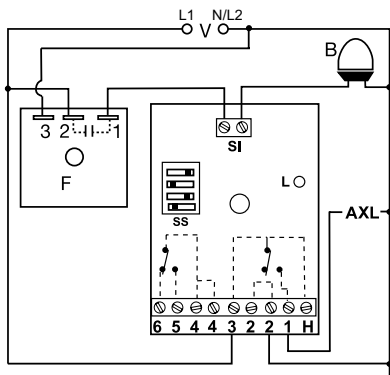

V = Voltage  
B = Beacon Lamps  
SS = Selector Switch  
L = LED Indicator  
F = Flasher  
AXL = Auxiliary Load/Alarm  
OL = Obstruction Lamps  
SI = Sensor Input  
H = "3" Spare AC Hot Connection (2A max.)

OBSTRUCTION LAMP CONNECTION DIAGRAM

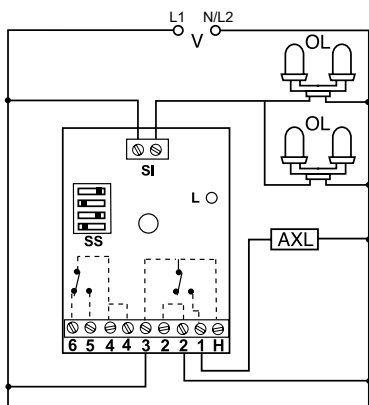

### Features & Benefits

FEATURES	BENEFITS
<b>Self calibrating</b>	Designed for use with all types of LED beacon and obstruction lamps
<b>Failsafe beacon monitoring</b>	Relay will also provide an alarm signal on a failed flasher (open)
<b>Number of lamps monitored is switch selectable up to 8</b>	User selection allows quick set up and easy adaption to multiple applications
<b>Universal voltage 120 to 230VAC</b>	Designed for use in most applications
<b>Isolated, 10A, SPDT alarm output contacts</b>	Provides remote beacon monitoring when connected to a site monitoring system, as is required by the FAA
<b>LED indication</b>	Provides visual relay status of operation, alarm, trip delay, and calibration
<b>Fully encapsulated</b>	Protects against shock, vibration, and humidity

### Accessories



#### C103PM (AL) DIN Rail

35 mm aluminum DIN rail available in a 36 in. (91.4 cm) length.



#### P1023-20 DIN Rail Adapter

Allows module to be mounted on a 35 mm DIN type rail with two #10 screws.

## SCR9L

CE

### Calibration

Alarm relays must be calibrated at initial installation and when LED lamps are replaced. Due to LED lamp aging, recalibration is recommended every 12 months.

1. Remove input voltage
2. Move calibration switch to off position
3. Re-apply input voltage
4. LED will flash red to indicate the unit is ready for calibration
5. Visually inspect structure's lighting to make sure all lamps and flashers (if used) are operating properly
6. Remove input voltage
7. Adjust lamp selector switches for the correct number of lamps to be monitored (see adjustment diagram below)
8. Re-apply input voltage
9. LED should flash red
10. Move calibrate switch to ON position
11. The LED will alternate flashing red and green
12. LED will glow steady green within 30 secs.  
Calibration is complete


### Calibration Failed

If the LED double blinks red, calibration failed. Remove input voltage and repeat steps 6-8.

### Notes:

- a. Monitoring a mixture of LED beacons and LED obstruction lamps is not possible with the SCR9L.
- b. This alarm relay is not designed to monitor incandescent lamps.
- c. Applying input voltage when the calibrate switch is in the OFF position, erases the previous calibration settings. The LED will flash Red. The output relays are OFF and the unit will not sense lamp failures.
- d. Only one temperature compensated LED beacon can be monitored with this product. A combination of temperature compensated and standard LED beacons cannot be monitored.

### Adjustment Example

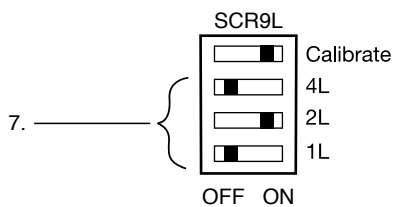

Example Shown: SCR9L two lamps are ON during normal operation.

### Indicator Table

L	Green	Input ON & Calibrated
L	Green Flashing	Trip Delay
L	Red	Lamp Failure
L	Red/Green Flashing	Calibrating
L	Red Flashing	Not Calibrated

### Specifications

#### Sensors

#### Calibration Range

(total all Lamps)

150mA - 8.0A

#### Absolute Max Current

(total all Lamps)

15A max. (may not calibrate above 8A)

#### Single Lamp Current

150mA - 8.0A (total all lamps < 8.0A)

#### Time Delay

#### Trip Delay

Factory fixed  $\approx 10s$

#### Input

#### Input Voltage/Tolerance

120 to 230VAC  $\pm 15\%$

#### AC Line Frequency

50/60Hz

#### Output

#### Line Voltage Output (SPNO)

To operate a spare lamp or alarm  
5A @ 240VAC or 30VDC resistive;  
1/4 hp @ 125VAC; 1/2 hp @ 250VAC  
10A @ 240VAC or 30VDC resistive;  
1/4 hp @ 125VAC; 1/2 hp @ 250VAC  
 $\leq 2A$  @ 230VAC

#### Isolated Alarm Output (SPDT)

#### Auxiliary Input Voltage (H)

#### Mechanical

#### Mounting

#### Dimensions

One #10 (M5 x 0.8) screw  
**H** 76.7 mm (3"); **W** 51.3 mm (2.02");  
**D** 41.7 mm (1.64")

#### Termination

IP20 screw terminals for up to 14 AWG  
(2.45 mm<sup>2</sup>) wire or two 16 AWG  
(1.3 mm<sup>2</sup>) wires

#### Protection

#### Circuitry

Encapsulated

#### Environmental

#### Operating / Storage

#### Temperature

-40° to 60°C / - 40° to 85°C

#### Weight

$\approx 3.9$  oz (111 g)

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Littelfuse:](#)

[SCR9L](#)