

# TouchXpress<sup>™</sup> Family CPT112S Data Sheet

The CPT112S device, part of the TouchXpress family, is designed to quickly add capacitive touch via an I2C interface by eliminating the firmware complexity and reducing the development time for capacitive sensing applications.

Supporting up to 12 capacitive sensor inputs in packages as small as a 3 mm x 3 mm QFN, the CPT112S is a highly-integrated device that interfaces via I2C to the host processor to provide a simple solution for adding capacitive touch. The device also comes with advanced features like moisture immunity, wake-on proximity, and buzzer feedback for an enhanced user experience. No firmware development is needed, and all the capacitive touch sense parameters can be configured using a simple GUI-based configurator. By eliminating the need for complex firmware development, the CPT112S device enables rapid user interface designs with minimal development effort.


The CPT112S device is ideal for a wide range of capacitive touch applications including the following:

- · Home appliances
- · Instrument / Control panels
- · White goods

- Medical equipment
- Consumer electronics
- · Lighting control

#### **KEY FEATURES**

- No firmware development required
- · Simple GUI-based configurator
- 12 Capacitive Sensor inputs with programmable sensitivity
- Configurable multi-button slider
- I2C interface to communicate to the host
- Lowest power capacitive sense solution
- Active 200 μA
- Sleep 1 µA
- · Wake on proximity
- Superior noise immunity: SNR up to 270:1
- · Moisture immunity
- · Mutually-exclusive touch qualifier
- Button touch time-out to avoid false touches
- · Buzzer output for audible touch feedback

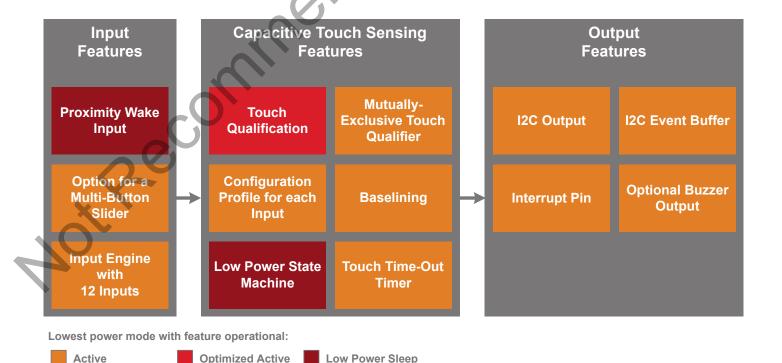

# 1. Feature List and Ordering Information

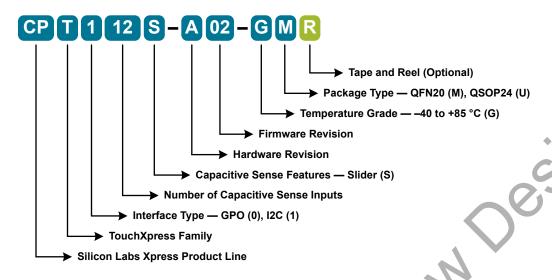


Figure 1.1. CPT112S Part Numbering

The CPT112S has the following features:

- · Capacitive sensing input engine with 12 inputs
- · Post-sample touch qualification engine
- · Configuration profile space in non-volatile memory
- I2C event buffer with interrupt pin to signal when new touch events have been qualified
- · Low power state machine to minimize current draw in all use cases
- · Capacitive proximity sensing input
- · Buzzer output
- · Mutually-exclusive touch qualifier
- · Touch time-out timer

1.1. Product Selection Guide

Ordering Part Number	Pb-free (RoHS Compliant)	Temperature Range	Package
CPT112S-A02-GM	Yes	-40 to +85 °C	QFN20
CPT112S-A02-GU	Yes	-40 to +85 °C	QSOP24

# 2. Typical Connection Diagrams

# 2.1 Signal, Analog, and Power connections

Figure 2.1 Connection Diagram on page 2 shows a typical connection diagram for the power pins of CPT112S devices.

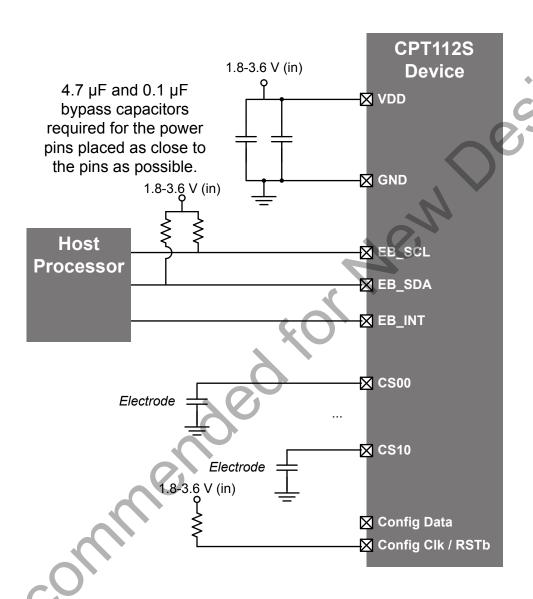


Figure 2.1. Connection Diagram

#### 2.2 Configuration

The diagram below shows a typical connection diagram for the configuration connections pins. The ToolStick Base Adapter is available on the evaluation board.

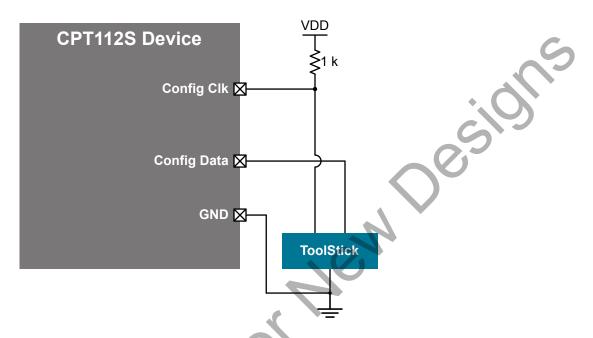


Figure 2.2. Configuration Connection Diagram

# 3. Electrical Specifications

#### 3.1 Electrical Characteristics

All electrical parameters in all tables are specified under the conditions listed in Table 3.1 Recommended Operating Conditions on page 4, unless stated otherwise.

#### 3.1.1 Recommended Operating Conditions

**Table 3.1. Recommended Operating Conditions** 

Parameter	Symbol	Test Condition	Min	Тур	Max	Unit
Operating Supply Voltage on VDD	$V_{DD}$		1.8	2.4	3.6	V
Minimum RAM Data Retention	V <sub>RAM</sub>	Not in Sleep Mode	_	1.4	_	V
Voltage on VDD <sup>1</sup>		Sleep Mode		0.3	0.5	V
Operating Ambient Temperature	T <sub>A</sub>		-40	1/4	85	°C

#### Note:

# 3.1.2 Power Consumption

See 3.4 Typical Performance Curves for power consumption plots.

**Table 3.2. Power Consumption** 

Parameter	Symbol	Test Condition	Min	Тур	Max	Unit
Active Mode Supply Current	I <sub>DD</sub>		_	3.1	_	mA
Optimized Active Mode Supply Current	I <sub>DD</sub>		_	180	_	μА
Sleep Mode Current <sup>1, 2</sup>	I <sub>DD</sub>	3 sensors or fewer	_	0.78	£	μA
		4 sensors	_	0.79	0	μA
		5 sensors	_	0.81	7	μA
		6 sensors	_	0.82	_	μA
		7 sensors	_	0.84	_	μA
		10 sensors	0	0.88	_	μA
		12 sensors	To	0.95	_	μA
System Current with Varying Scan	I <sub>DD</sub>	Scan period = 10 ms	_	154	_	μA
Time — Base with One Sensor <sup>1</sup>		Scan period = 20 ms	_	77	_	μA
		Scan period = 50 ms	_	31	_	μA
		Scan period = 75 ms	_	21	_	μA
		Scan period = 100 ms	_	16	_	μA
System Current with Varying Scan	I <sub>DD</sub>	Scan period = 10 ms	_	47	_	μA
Time — Each Additional Sensor <sup>1</sup>		Scan period = 20 ms	_	23	_	μA
		Scan period = 50 ms	_	9	_	μA
		Scan period = 75 ms	_	6	_	μA
	7	Scan period = 100 ms	_	5	_	μA

#### Note:

- 1. Measured with Free Run Mode disabled and sensors set to 4x accumulation, 8x gain.
- 2. Measured with scan period set to 250 ms.

# 3.1.3 Reset and Supply Monitor

Table 3.3. Reset and Supply Monitor

Parameter	Symbol	Test Condition	Min	Тур	Max	Unit
VDD Supply Monitor Threshold	$V_{VDDM}$	Reset Trigger	1.7	1.75	1.8	V
	V <sub>WARN</sub>	Early Warning	1.8	1.85	1.9	V
Power-On Reset (POR) Monitor	V <sub>POR</sub>	Rising Voltage on V <sub>DD</sub>	_	1.75	_	V
Threshold		Falling Voltage on V <sub>DD</sub>	0.75	1.0	1.3	V
V <sub>DD</sub> Ramp Time	t <sub>RMP</sub>	Time to V <sub>DD</sub> ≥ 1.8 V	_	_	3	ms
RST Low Time to Generate Reset	t <sub>RSTL</sub>		15		O	μs
Boot Time <sup>1</sup>	t <sub>boot</sub>	1 sensor	_	25	<b>)</b> –	ms
		2 sensors	_	40	_	ms
		3 sensors	-0	55	_	ms
		4 sensors	40	70		ms
		5 sensors	1	85		ms
		6 sensors	_	100	_	ms
		7 sensors	_	115	_	ms
		8 sensors	_	130		ms
		9 sensors	_	145	_	ms
		10 sensors	_	160	_	ms
		11 sensors	_	175	<u> </u>	ms
		12 sensors	_	200	_	ms

# Note:

# 3.1.4 Configuration Memory

**Table 3.4. Configuration Memory** 

Parameter	Symbol	Test Condition	Min	Тур	Max	Units
Endurance (Write/Erase Cycles)	N <sub>WE</sub>		20 k	100 k	_	Cycles

# Note:

1. Data Retention Information is published in the Quarterly Quality and Reliability Report.

<sup>1.</sup> Boot time is defined as the time from a power-on reset or /RST pin release until the first capacitive sense scan begins.

# 3.1.5 Capacitive Sense

Table 3.5. Capacitive Sense

Parameter	Symbol	Test Condition	Min	Тур	Max	Unit
Scan Time Per Sensor <sup>1</sup>	t <sub>SCAN</sub>	Accumulation = 1x	_	64	_	μs
		Accumulation = 4x	_	256	_	μs
		Accumulation = 8x	_	512	<u> </u>	μs
		Accumulation = 16x	_	1.024	- 1	ms
		Accumulation = 32x	_	2.048	-60	ms
		Accumulation = 64x	_	4.096	(2)	ms
Signal to Noise Ratio <sup>1, 2</sup>	SNR	Accumulation = 1x	_	90:1	) –	codes
		Accumulation = 4x	_	180:1	_	codes
		Accumulation = 8x		182:1	_	codes
		Accumulation = 16x	<b>\-</b> 0	210:1	_	codes
		Accumulation = 32x	7	230:1		codes
		Accumulation = 64x	_	270:1		codes
Conversion Time	t <sub>CONV</sub>	Gain = 1x	_	205	_	μs
		Gain = 2x	_	123	_	μs
		Gain = 3x	_	98	_	μs
		Gain = 4x	_	85	_	μs
		Gain = 5x	_	76	_	μs
		Gain = 6x	_	72	_	μs
		Gain = 7x	_	67	_	μs
		Gain = 8x	_	64	_	μs
Total Processing Time <sup>3</sup>	t <sub>PROC</sub>	1 sensor	_	576	_	μs
		2 sensors	_	796	_	μs
		3 sensors	_	1.0	_	ms
~O)		4 sensors	_	1.2	_	ms
70		5 sensors	_	1.4	_	ms
20		6 sensors	_	1.7	_	ms
		7 sensors	_	1.9	_	ms
Joi Pecol		8 sensors	_	2.1	_	ms
		9 sensors	_	2.3	_	ms
70		10 sensors	_	2.6	_	ms
		11 sensors	_	2.8	_	ms
		12 sensors	_	3.0	_	ms
Maximum External Capacitive	C <sub>EXTMAX</sub>	Gain = 8x	_	45	_	pF
		I .	1			

Parameter	Symbol	Test Condition	Min	Тур	Max	Unit
Maximum External Series Impedance	R <sub>EXTMAX</sub>	Gain = 8x	_	50		kΩ

#### Note:

- 1. Measured with gain set to 8x.
- 2. Measured with an evaluation board with 1/16" overlay using Capacitive Sense Profiler.
- 3. Sensors configured to 8x gain, 1x accumulation with sensor sampling and system processing time included and mutually-exclusive buttons, slider, buzzer, and touch time-outs disabled.

# 3.1.6 Buzzer Output

Table 3.6. Buzzer Output

Parameter	Symbol	Test Condition	Min	Тур	Max	Unit
Output High Voltage (High Drive)	V <sub>OH</sub>	I <sub>OH</sub> = -3 mA	V <sub>DD</sub> – 0.7	1	_	V
Output Low Voltage (High Drive)	V <sub>OL</sub>	I <sub>OL</sub> = 8.5 mA	-0	_	0.6	V
Output High Voltage (Low Drive)	V <sub>OH</sub>	I <sub>OH</sub> = -1 mA	V <sub>DD</sub> – 0.7	_	_	V
Output Low Voltage (Low Drive)	V <sub>OL</sub>	I <sub>OL</sub> = 1.4 mA	_	_	0.6	V
Weak Pull-Up Current	I <sub>PU</sub>	V <sub>DD</sub> = 1.8 V V <sub>IN</sub> = 0 V	_	-4	_	μА
		V <sub>DD</sub> = 3.6 V V <sub>IN</sub> = 0 V	-35	-20	_	μА

# 3.2 Thermal Conditions

Table 3.7. Thermal Conditions

Parameter	Symbol	Test Condition	Min	Тур	Max	Unit
Thermal Resistance*	$\theta_{JA}$	QFN20 Packages	_	60	_	°C/W
		QSOP24 Packages	_	65	_	°C/W

# Note:

1. Thermal resistance assumes a multi-layer PCB with any exposed pad soldered to a PCB pad.

#### 3.3 Absolute Maximum Ratings

Stresses above those listed in Table 3.8 Absolute Maximum Ratings on page 9 may cause permanent damage to the device. This is a stress rating only and functional operation of the devices at those or any other conditions above those indicated in the operation listings of this specification is not implied. Exposure to maximum rating conditions for extended periods may affect device reliability. For more information on the available quality and reliability data, see the Quality and Reliability Monitor Report at http://www.silabs.com/ support/quality/pages/default.aspx.

**Table 3.8. Absolute Maximum Ratings** 

Symbol  T <sub>BIAS</sub> T <sub>STG</sub> V <sub>DD</sub> V <sub>IN</sub> I <sub>VDD</sub> I <sub>GND</sub> I <sub>IO</sub> I <sub>IO</sub> T <sub>J</sub>	Test Condition	Min -55 -65 GND-0.3 GND-0.3 -100	Max 125 150 4.0 V <sub>DD</sub> + 0.3 400 —	°C °C V W MA
T <sub>STG</sub> V <sub>DD</sub> V <sub>IN</sub> I <sub>VDD</sub> I <sub>GND</sub> I <sub>IO</sub>		-65 GND-0.3 GND-0.3	150 4.0 V <sub>DD</sub> + 0.3 400	°C V V mA
V <sub>DD</sub> V <sub>IN</sub> I <sub>VDD</sub> I <sub>GND</sub> I <sub>IO</sub>		GND-0.3 GND-0.3	4.0 V <sub>DD</sub> + 0.3 400	V V m/
V <sub>IN</sub> I <sub>VDD</sub> I <sub>GND</sub> I <sub>IO</sub>		GND-0.3 - 400	V <sub>DD</sub> + 0.3 400 —	W m/
I <sub>VDD</sub> I <sub>GND</sub> I <sub>IO</sub>		400	400	m/
I <sub>GND</sub> I <sub>IO</sub>		2	_	m/
I <sub>IO</sub>		2	100	
Гютот		-100	100	m
			I I	
TJ		_	200	m/
	XO	-40	105	°C

# 3.4 Typical Performance Curves

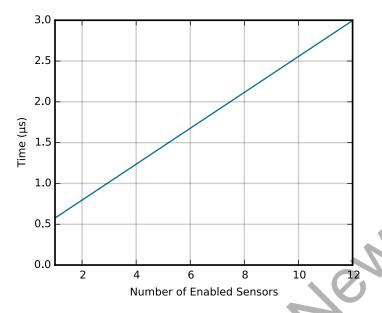


Figure 3.1. Active Mode Processing Time Per Sensor

Note: Active mode processing time per sensor measured with sensors configured to 1x accumulation, 8x gain. Sensor sampling and system processing time is included with mutually-exclusive buttons, the buzzer, slider, and touch time-outs disabled.

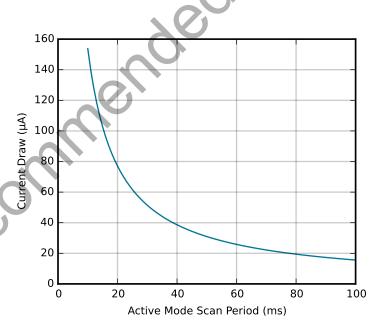


Figure 3.2. Current vs. Active Mode Scan Period — Base Current Consumption

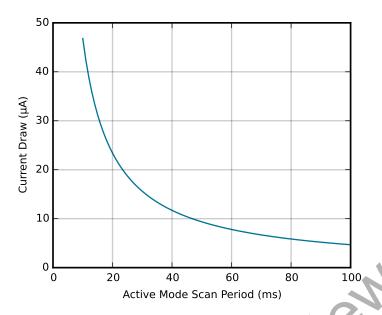


Figure 3.3. Current vs. Active Mode Scan Period — Current Consumption for Each Additional Sensor

**Note:** Active mode scan period current draw measured with free run mode disabled and all 12 sensors enabled at 4x accumulation, 8x gain. In addition, the buzzer, slider, and mutually-exclusive button groups were disabled.

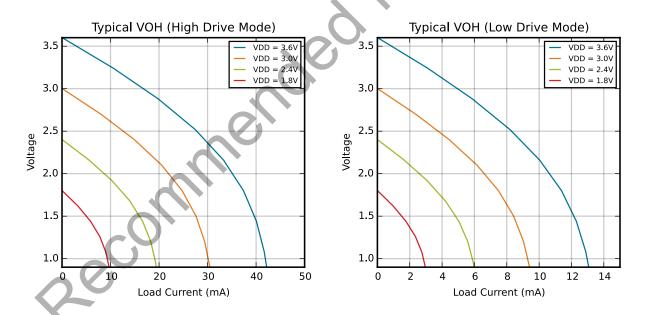


Figure 3.4. Typical V<sub>OH</sub> Curves

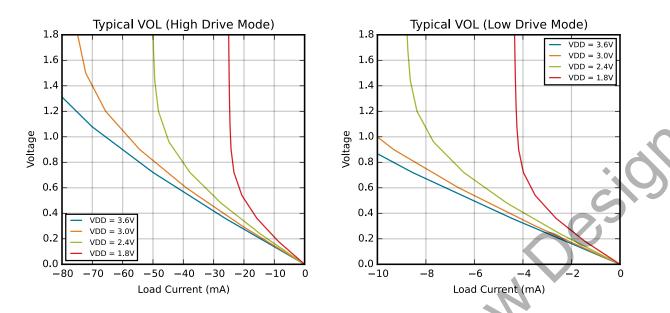


Figure 3.5. Typical V<sub>OL</sub> Curves Recommended

# 4. Functional Description

#### 4.1 Capacitive Sensing Input

#### 4.1.1 Introduction

The capacitive to digital converter uses an iterative, charge-timing self-capacitance technique to measure capacitance on an input pin. Sampling is configured and controlled by settings in the non-volatile configuration profile, which can be changed through the 2-pin configuration interface.

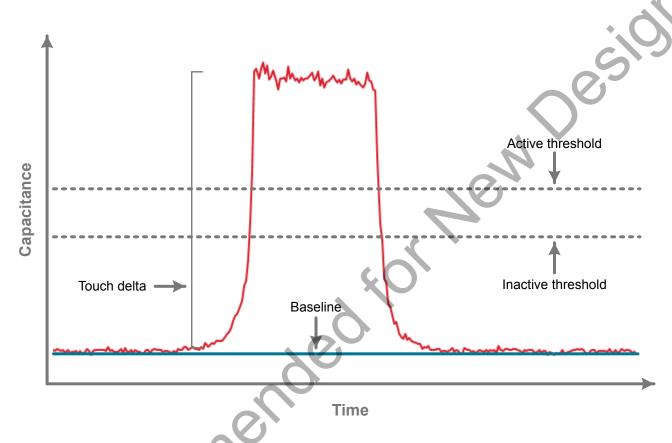


Figure 4.1. Capacitive Sense Data Types

#### 4.1.2 Touch Qualification Criteria

The device detects a touch event when an inactive (untouched) input enabled by the input enable mask detects an sequence of measurements that cross the active threshold.

The device detects a touch release event when an active (touched) input enabled by the input enable mask detects an sequence of measurements that cross the inactive threshold.

The debounce configuration profile parameter defines how many measurements in a row must cross a threshold before a touch or release is qualified. In electrically noisy environments more heavily filtered data is used for qualification.

#### 4.1.3 Thresholds

Capacitive sensing inputs use input-specific thresholds for touch qualification. Each input uses two thresholds, one to detect inactive-to-active transitions on the input, and another to determine active-to-inactive transitions on the input. The inputs use two thresholds to add hysteresis and prevent active/inactive ringing on inputs. Each threshold can be set through Simplicity Studio tools and all thresholds are stored in non-volatile memory in the device's configuration profile.

Thresholds are defined as percentages of a capacitive sensing input's touch delta.

#### 4.1.4 Debounce Counter

Each capacitive sensing input maintains its own debounce counter. For an inactive sensor, this counter tracks the number of successive samples which have crossed that input's active threshold. For an active sensor, this counter tracks the number of successive samples which have crossed the inactive threshold. When the counter reaches a terminal value defined in the the configuration profile, the touch/release event is qualified.

#### 4.1.5 Touch Deltas

Each capacitive sensing input uses a stored touch delta value that describes the expected difference between inactive and active capacitive sensing output codes. This value is stored in the configuration profile for the system and is used by the touch qualification engine, which defines inactive and active thresholds relative to the touch delta.

The touch deltas are stored in the configuration profile in a touch delta/16 format. For this reason, touch deltas must be configured as multiples of 16.

#### 4.1.6 Auto-Accumulation and Averaging

Capacitive sensing inputs have an auto-accumulate and average post-sample filter that can be used to improve signal strength if needed. Settings stored in the configuration profile can configure the engine to accumulate 1, 4, 8, 16, 32, or 64 samples. After the defined number of samples have been accumulated, the result is divided by either 1, 4, 8, 16, 32, or 64, depending on the accumulation setting. This auto-accumulated and averaged value is the sample output used for all touch qualification processing. Note that sample time per sensor increases as the level of accumulation increases. To reduce current consumption, the engine should not be set to auto-accumulate unless it is required to achieve acceptable signal strength due to thick overlays or other system-level factors.

#### 4.1.7 Drive strength

The drive strength of the current source used to charge the electrode being measured by the capacitive sensing input can be adjusted in integer increments from 1x to 8x (8x is the default). High drive strength gives the best sensitivity and resolution for small capacitors, such as those typically implemented as touch-sensitive PCB features. To measure larger capacitance values, the drive strength should be lowered accordingly. The highest drive strength setting that yields capacitive sensing output which does not saturate the sensing engine when the electrode is active (touched) should always be used to maximize input sensitivity.

#### 4.1.8 Active Mode Scan Enable

Active mode scanning of capacitive sensing inputs is controlled by an enable setting for each capacitive sensing input. This setting is stored in the configuration profile.

#### 4.1.9 Active Mode Scan Period

The capacitive sensing input engine stays in active mode whenever one or more inputs have qualified as active. During this time, the sensors scan at a periodicity defined by the active mode scan period, which is stored in the configuration profile. Every active mode scan pushes new samples through the processing engine, which checks for new touch and release events on all enabled inputs.

If free run mode is enabled, the engine will repeatedly scan all enabled inputs during the active mode scan period. In this mode of operation, the active mode scan period is used as a timer to determine how much time has passed since the last qualified active sensor has been seen. When a defined amount of time without a qualified touch event has occurred, the engine switches to a low power mode using the sleep mode scan period, and conserves current.

If free run mode is disabled, the engine will enter a low power state after completing one scan of all enabled inputs and processing the resulting samples. The engine will remain in this low power state until it wakes, at a time defined by active mode scan period, to perform another scan.

#### 4.1.10 Active Mode Scan Type

The active mode scan type, which is stored in the configuration profile, controls whether the capacitive sensing engine in active mode will scan only once during the active mode scan period before going to sleep, or whether the engine will continue scanning as quickly as possible during the active mode scan period, never entering a low power state.

For optimal responsiveness, the engine should be configured to run with free run mode enabled. Setting the scan mode to 'free run' causes touch qualification on a new touch to occur as quickly as the scanning engine can convert and process samples on all sensors. In this mode, qualification time is not bounded by active mode scan period, and is only bounded by scanning configuration factors such as the debounce setting, the number of enabled sensors, the accumulation setting on each sensor, and the timing constraints of any enabled component.

For optimal current draw when in active mode, the engine should be configured to use the 'one scan per period' mode setting. In this case, touch qualification is bound by the scan period and the debounce setting of the device.

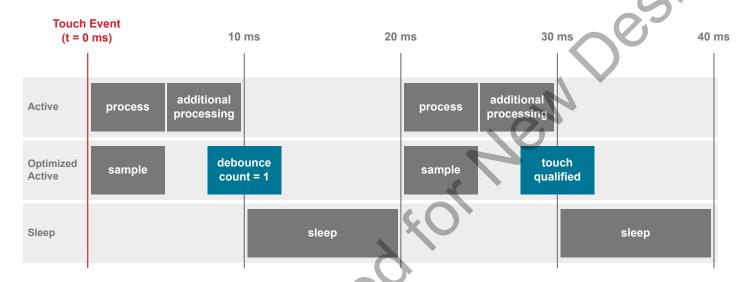


Figure 4.2. Timing and Current — One Sample Per Period Mode

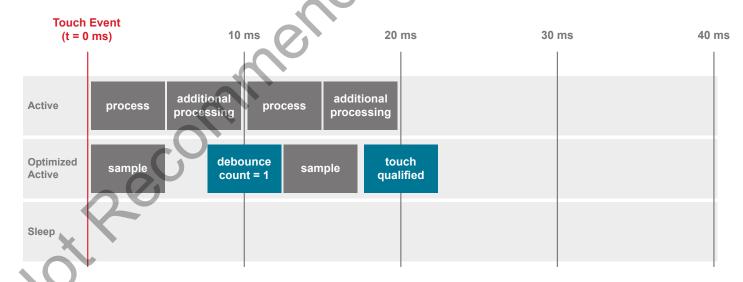


Figure 4.3. Timing and Current — Free Run Mode

#### 4.1.11 Sleep Mode Scan Period

The sleep mode scan period defines the rate at which a scan of the inputs enabled as wake-up sources are sampled. Each enabled sensor can also be enabled as a wake-up source. After the sleep mode scan completes, the scan is processed for a qualified candidate touch. If a candidate touch is qualified, the system wakes form sleep mode and enters active mode scanning.

The sleep mode scan period is stored in the configuration profile and is defined in units of ms.


#### 4.1.12 Active Mode and Sleep Mode Transitions

Capacitive sensing inputs will stay in active mode until no inputs detect qualified touches for a span of time defined by the counts until sleep parameter stored in the configuration profile. The scan period of enabled inputs is defined by the active mode scan period, also found in the configuration profile. If free run mode is enabled, the active mode sensing engine will remain awake and scanning the sensors as fast as possible. If free run mode is disabled, the engine will put itself into a low power state for the remainder of the active mode scan period, after a scan has completed.

When in sleep mode, the sensing engine will wake at a period defined by sleep mode scan period to do a scan on sensors that have been enabled as wakeup sources. If the engine finds a candidate touch in this state, the system reverts to active mode to continue scanning.

Note that in systems where a proximity input is selected, the sleep mode scan engine uses conversions on the proximity input instead of sensors enabled as wakeup sources.

Devices configured to wake on a touch will attempt to qualify the candidate touch that initiated the sleep-to-active transition. If qualification completes successfully, the device will signal this qualification to the external system. Touch qualification of this candidate touch uses the same active mode thresholds, debounce setting, and active mode scan period settings as any touch that occurs during active mode scanning.

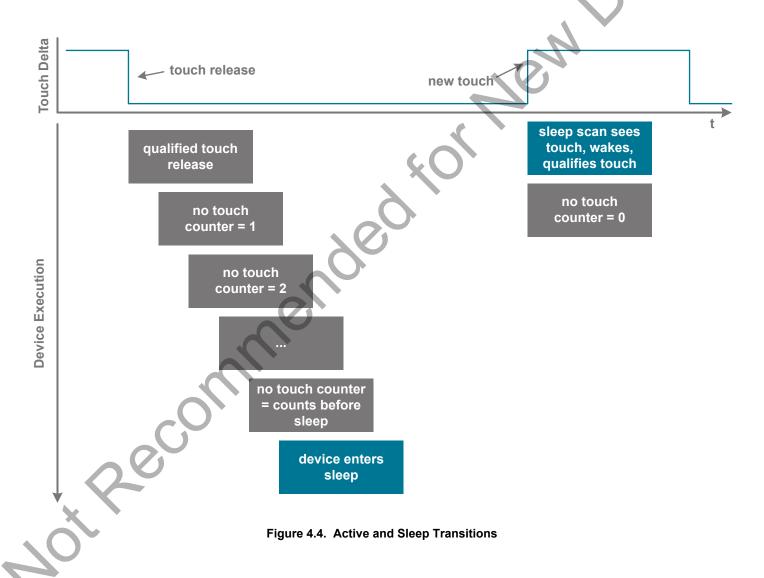

#### 4.2 I2C Event Buffer Interface

#### 4.2.1 Introduction

The event buffer I2C interface provides an event-driven, packetized communication system describing newly qualified events generated by the capacitive sensing input engine.

The interface provides access to a first-in-first-out buffer of data packets. When the sensing engine generates these packets and pushes them onto the buffer. The interface then signals a host to indicate that one or more packets are available in the buffer by activating the event buffer interrupt pin.

The interrupt pin is defined as active-low and operates as a push-pull digital output.

The host reads the packets through an I2C interface, with the host acting as an I2C master. Once all packets have been fully transmitted across the I2C interface, the event buffer interrupt pin is de-activated. The device will remain in active mode until no packets remain in the buffer, even if no sensors have been qualified as active for the period of time defined by the active mode scan period and the counts before sleep value.

#### 4.2.2 Packet retrieval in operational mode

When the least significant byte of the CRC of an event packet has been transferred during a master read transaction, that event is popped from the device's buffer. If only a part of the event is read, the event will stay in the buffer and will be transmitted again by the device during the next read.

If the host initiates a master read when the device is in operational mode but the interrupt pin is not active, signifying that the device has no events in its buffer to transmit, the device will NACK its slave address on the bus.

If the I2C master sends a stop condition on the bus before the entire three-byte packet has been read, the device will not pop the packet from its internal buffer. Instead, the I2C state machine will reset, and the next transaction will begin with the first byte of the same event that was being read in the previous, prematurely-terminated transaction.

The I2C event buffer has a depth of 22 events. If the host does not read events promptly after seeing the interrupt pin go active, there is the possibility of a buffer overflow. In the event of an overflow, the I2C engine will discard the oldest events first.

New I2C packets will only be generated at the active mode sample rate, and so the buffer will only fill at a maximum of 12 packets (in the case of 12 simultaneous touch/releases) per sample period. If the host runs the I2C bus at 400kHz and reads packets as soon as the interrupt pin activates, all packets can be read from the buffer in 1 to 2 ms, which is faster than the rate at which a new active mode scan sequence can complete.

#### 4.2.3 Event Packet Structure

Every qualified event detected by the capacitive sensing input engine generates a single packet that can be retrieved by the host processor through the event buffer I2C interface. The packet is an atomic data unit that fully describes the generated event.

**Note:** The bytes in the packet are transmitted MSB first.

Each packet has a standard structure that can be parsed by the host.

**Table 4.1. Standard Packet Structure** 

Byte #	Designator
0	I2C Slave Address + read bit
1	Packet counter and event type
2	Event description (byte 1)
3	Event description (byte 2)

The packet counter is a 4-bit number stored in the upper bits of byte 1. Each new event will be assigned a counter value that is +1 from the last qualified event. After event 15, the counter wraps back to 0 for the next event. The counter captures the temporal nature of touch events so that a host can reconstruct a sequence of events over time. Also, the host can use the counter value to determine if a packet has been lost due to a buffer overflow.

The event type is a 4-bit value describes the originator of the event. For instance, the source could be a capacitive sensing button. The event type is stored in the lower 4 bits of byte 1.

The event description bytes define characteristics of the event that have been qualified. Event descriptions are defined relative to the event source. An event source that is a capacitive sensing input will have a defined set of valid event description values. Those same values will mean something different for a different type of event source, such as a slider. Event description values are defined relative to the event type field of byte 1.

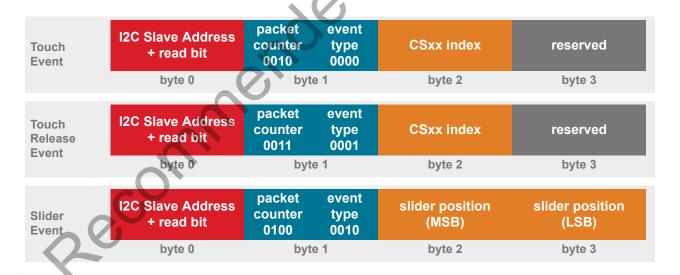


Figure 4.5. I2C Event Buffer Packet Structure

#### 4.2.4 Defined Event Types

The device assigns the following event types to events.

**Table 4.2. Event Type Mapping** 

Event Type Value	Mapping
0	Sensor activity - touch event
1	Sensor activity - release event
2	Slider activity

Note that this event type value is stored in the lower 4 bits of the first byte of a packet. The upper 4 bits are a packet counter value.

#### 4.2.5 Description Bytes for Touch Events

A touch or release event uses only one byte of the description field. That field identifies which sensor caused the touch or release event as shown below.

Table 4.3. Touch or Release Event Sensor Mapping

Value	Mapping
0	Capacitive sensing input 0
1	Capacitive sensing input 1
2	Capacitive sensing input 2
3	Capacitive sensing input 3
4	Capacitive sensing input 4
5	Capacitive sensing input 5
6	Capacitive sensing input 6
7	Capacitive sensing input 7
8	Capacitive sensing input 8
9	Capacitive sensing input 9
10	Capacitive sensing input 10
11	Capacitive sensing input 11

# 4.2.6 Description Bytes for Slider Events

The slider activity description field uses two bytes to describe the position of the slider, which can be any value between 0 (0x0000) and 65534 (0xFFFE). The most-significant byte of this value is transmitted in the first byte (byte 2 of the event packet), and the least-significant byte is transmitted second (byte 3 of the event packet).

When the slider is released, a final slider event will be transmitted with 0xFFFF in the two-byte field.

# 4.2.7 Event Buffer I2C Slave Address

The device's I2C slave address is configurable through the configuration profile. The device will ACK its slave address only when the interrupt pin is low, signalling that a packet is ready to be read by the host. If the interrupt pin is logic high, the device will not ACK its slave address.

#### 4.3 Capacitive Proximity Sensing

#### 4.3.1 Wake on Proximity

The wake on capacitive proximity detection engine monitors for the presence of a conductive object such as a hand to move within detectable range of the sensor. When the engine detects an object, the device wakes from sleep and can begin qualifying touch events on all sensors enabled for active mode sensing.

#### 4.3.2 Proximity Configuration

The proximity sensing feature uses a single sensor input for proximity qualification. The configuration profile stores the pin chosen by the user. The sensor used for proximity qualification should also have a drive strength setting that is as high as possible without saturating the input when no conductive object is in proximity to the proximity sensor. The accumulation setting of the input is also configurable.

The proximity threshold controls the sensitivity of the input. A lower threshold setting increases sensitivity and increases the range of the sensor.

A proximity sensing input cannot be used for touch qualification, and so the active and inactive thresholds are not used for proximity sensors. Additionally, the proximity input has no effect on other components of the device such as mutually exclusive button groups, buzzer output, touch time out timers, and sliders.

#### 4.4 Slider

The device supports creation of a single slider that is composed of two or more capacitive sensing input pins. The pins chosen as slider inputs are assigned to the slider feature through the configuration profile.

The configuration profile also stores a value designated as the highest positional value that can be derived by the slider engine. That highest value is used to derive the values of all intermediate positions on the slider array.

When a capacitive sensing input pin is designated as a slider input, it will no longer function as a 'button' input and will not generate button style touch/release events across the I2C buffer interface.

Touching the slider pads and moving a finger along a slider pad generates an event packet of type Slider, with the remaining two bytes of the packet describing the calculated active position of the slider.

The range of possible reported slider active positions can be 0 to the maximum value of the slider as defined in the configuration profile, which can be any value between 40 and 65534. The 65535 (0xFFFF) value is reserved for a slider untouched event.

Position 0 is always assigned to the lowest CSxx sensor enabled as a slider input. The maximum position value of the slider is assigned to the highest CSxx sensor enabled as a slider input. All slider inputs in between are assumed to be routed to the slider contiguously, lowest to highest.

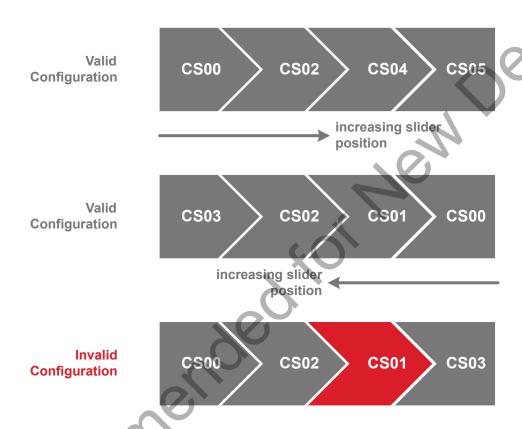


Figure 4.6. Slider Behavior and Layout Constraints

Slider touch qualification uses the same touch deltas and thresholds that are defined in the configuration profile for all enabled sensors. The user should configure slider sensors through the configuration profile, just as one would configure a sensor assigned to a capacitive button.

For optimal performance, each sensor used in the slider should have roughly the same touch surface area dimensions.

If the touch-timeout feature is enabled, slider-assigned inputs will also be subject to being qualified as releases by the touch-timeout feature.

The mutually exclusive button grouping feature does not affect slider-assigned sensors. Even if the mutually exclusive button grouping feature is enabled, multiple slider-assigned sensors can still be used to resolve a finger's position on the slider.

#### 4.5 Touch Time-Out

The touch time-out feature can be enabled and disabled through the configuration profile. When enabled, the device will monitor touch event duration on each input independently.

When a touch event exceeds a duration specified in the configuration profile, the device forces a release event, even if the user is still actively touching the sensor.

The feature qualifies a touch release by adding the configured touch delta value for that sensor to the sensor's current baseline value. By doing this, the raw data-to-baseline delta created by the touch will be removed, and the touch qualification engine will see this as a touch release event.

When the user removes a finger from a sensor that had been qualified active but has been qualified released through touch timeout, the resulting raw-to-baseline negative delta will be aggressively tracked downward by the baseline, resulting in a sensor that remains sensitive to successive touches.

The touch timeout duration is configured globally, so all inputs are monitored for the same touch duration.

If both the touch timeout feature and the mutually exclusive button group feature are enabled, the timeout timer will only run on the touch that is externally reported as being active.

#### 4.6 Buzzer Output

#### 4.6.1 Introduction

The buzzer output engine produces a square wave of a configurable duration and frequency when a capacitive sensing input goes from inactive to active. The feature can be enabled and disabled through the configuration profile. The configuration profile also includes the settings for active duration and frequency.

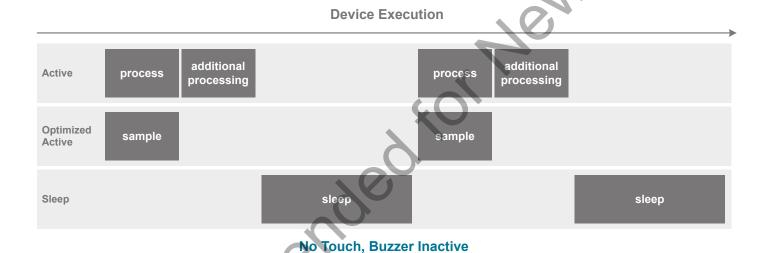


Figure 4.7. Effects of the Buzzer on Current Draw — Active Mode, No Touch, Buzzer Inactive

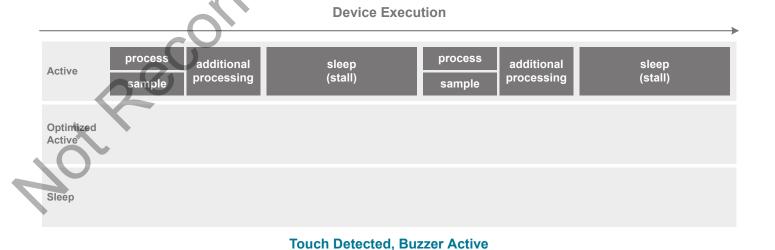


Figure 4.8. Effects of the Buzzer on Current Draw — Active Mode, Touch Detected, Buzzer Active

#### 4.6.2 Buzzer Configuration

When enabled, buzzer output will appear on the CS11/buzzer pin (pin 10) of the device. When buzzer output is enabled, CS11 is not available for capactive input sensing.

When activated, the buzzer will remain active for either the duration specified in the configuration profile, or until the last active sensor has qualified a touch release.

The configuration profile supports configuration of output frequencies ranging from 1 kHz to 4 kHz.

The configuration profile can configure the buzzer output pin to either push pull mode or open drain mode.

#### 4.7 Mutually Exclusive Buttons

When enabled through the configuration profile, this system allows one and only one capacitive sensing input to be qualified as active at a time. The first sensor active will remain the only sensor active until released. The device will internally qualify multiple touch and release events but will not report them.

If multiple sensors have been internally qualified as active, the first sensor's touch event will be reported. If a touch event occurs simultaneously on more than one sensor, the touch with the highest touch delta will be reported.

If two sensors are qualified as active and the sensor being reported as active qualifies a touch release, the device will report that release and then report a touch qualification on the still-active second sensor.

In the case where a device has simultaneously qualified more than two active sensors and the reported active sensor qualifies and reports a release, the remaining qualified sensor with the highest sensor name will then be reported. For example, if sensors CS00, CS01, and CS02 are active with CS00 externally reported as active, after CS00's release, CS02 would be externally reported as an active sensor unless the device has already qualified a touch release on CS02.

If both the touch timeout feature and the mutually exclusive button group feature are enabled, the timeout timer will only run on the touch that is externally reported as being active.

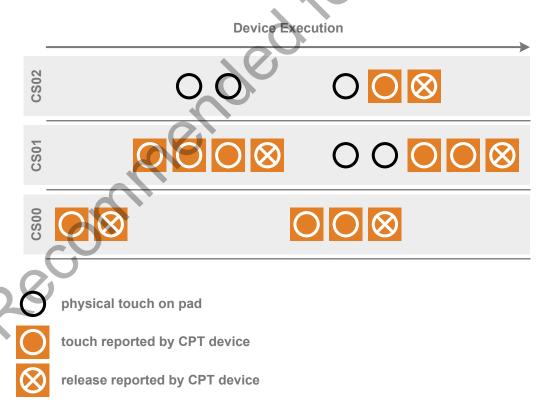


Figure 4.9. Mutually-Exclusive Button Operation

#### 4.8 Self Testing

#### 4.8.1 Introduction

When the self-test feature is enabled through the configuration profile, the device performs a check on all enabled capacitive sensing inputs upon startup to determine whether the sensing input pins are erroneously shorted to ground or supply. If a short or open is found on a sensor, the self test feature will signal that an error has been found through a port pin. The feature will then disable that sensor before beginning touch qualification scans on all sensors left enabled.

#### 4.8.2 Test Failure Signaling

If the self test check reveals an error, the device will toggle the I2C buffer interrupt pin at a frequency of 2 Hz. This toggling will persist for two seconds if the device detects one or more self test errors.

# 4.9 Configuration Profile

The configuration interface is used by the device to configure default values and performance characteristics that effect capacitive sensing. The configuration data can be programmed through the Configuration interface (Config Clk and Config Data pins) using [Configurator] in Simplicity Studio.

Several configuration profile templates are available in Simplicity Studio to provide a starting point for development.

# 5. Pin Definitions

#### 5.1 CPT112S QFN20 Pin Definitions

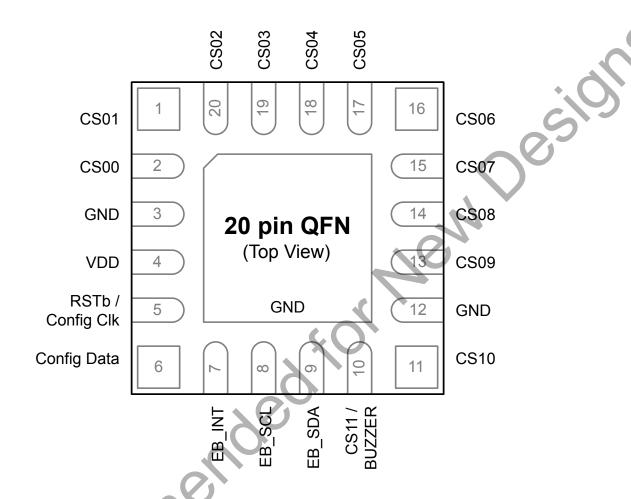


Figure 5.1. CPT112S QFN20 Pinout

Table 5.1. Pin Definitions for CPT112S QFN20

Pin Number	Pin Name	Description
Number	2004	A. d. d. d. d.
	CS01	Analog input
		Capactive sensing input 1
2	CS00	Analog input
		Capacitive sensing input 0
3	GND	Ground
4	VDD	Supply power input
5	RSTb /	Active-low reset /
	Config Clk	Configuration clock
6	Config Data	Configuration data

Pin	Pin Name	Description
Number		
7	EB_INT	Push-pull digital output
		Event buffer interrupt pin
8	EB_SCL	Open drain digital output
		Event buffer I2C SCL
9	EB_SDA	Open drain digital input
		Event buffer I2C SDA
10	CS11 /	Analog input, capacitive sensing input 11
	Buzzer	Digital output for buzzer
11	CS10	Analog input
		Capacitive sensing input 10
12	GND	Ground
13	CS09	Analog input
		Capacitive sensing input 9
14	CS08	Analog input
		Capacitive sensing input 9
15	CS07	Analog input
	<b>\</b>	Capacitive sensing input 7
16	CS06	Analog input
	20	Capacitive sensing input 6
17	CS05	Analog input
		Capacitive sensing input 5
18	CS04	Analog input
		Capacitive sensing input 4
19	CS03	Analog input
		Capacitive sensing input 3
20	CS02	Analog input
	P	Capacitive sensing input 2

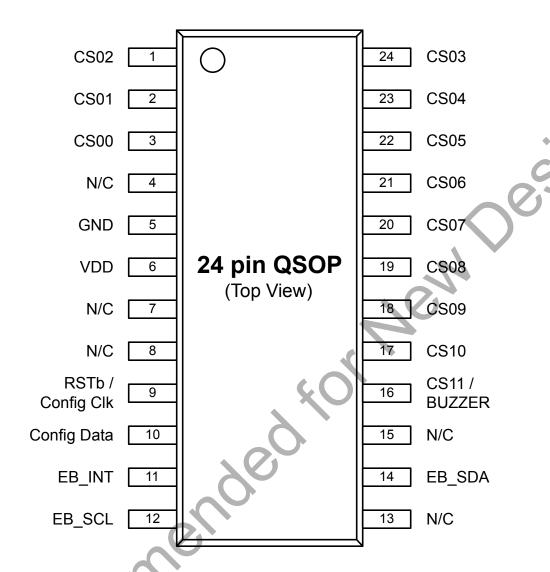


Figure 5.2. CPT112S QSOP24 Pinout

Table 5.2. Pin Definitions for CPT112S QSOP24

Pin Number	Pin Name	Description
1	CS02	Analog input
		Capacitive sensing input 2
2	CS01	Analog input
		Capactive sensing input 1
3	CS00	Analog input
		Capacitive sensing input 0
4	N/C	No Connect (leave this pin floating)
5	GND	Ground

Number    Supply power input	Pin	Pin Name	Description
7 N/C No Connect (leave this pin floating) 8 N/C Active-low reset / Config Clk Configuration clock 10 Config Data Configuration data 11 EB_INT Push-pull digital output Event buffer IzC SCL 13 N/C No Connect (leave this pin floating) 14 EB_SDA Open drain digital output Event buffer IzC SCL 15 N/C No Connect (leave this pin floating) 16 CS11 / Analog input (save this pin floating) 17 CS10 Analog input 18 CS09 Analog input 19 CS08 Analog input 20 CS07 Analog input 21 CS06 Analog input 22 CS05 Analog input 23 CS06 Analog input 24 Capacitive sensing input 1	Number		
8 N/C No Connect (leave this pin floating)  9 RSTb / Config Clk Configuration clock  10 Config Data Configuration data  11 EB_INT Push-pull digital output Event buffer interrupt pin  12 EB_SCL Open drain digital output Event buffer 12C SCL  13 N/C No Connect (leave this pin floating)  14 EB_SDA Open drain digital (input Event buffer 12C SDA)  15 N/C No Connect (leave this pin floating)  16 CS11 / Analog input, capacitive sensing input 11 Digital output for buzzer  17 CS10 Analog input Capacitive sensing input 10  18 CS09 Analog input  19 CS08 Analog input  Capacitive sensing input 9  Analog input  Capacitive sensing input 9  Analog input  Capacitive sensing input 7  Analog input  Capacitive sensing input 6  Analog input  Capacitive sensing input 6	6	VDD	Supply power input
RSTb / Config Cik Configuration clock  10 Config Data Configuration data  11 EB_INT Push-pull digital output Event buffer interrupt pin  12 EB_SCL Open drain digital output Event buffer I2C SCL  13 N/C No Connect (leave this pin floating)  14 EB_SDA Open drain digital input Event buffer I2C SDA  15 N/C No Connect (leave this pin floating)  16 CS11 / Analog input, capacitive sensing input 11 Digital output for buzzer  17 CS10 Analog input  Capacitive sensing input 10  18 CS09 Analog input  Capacitive sensing input 9  19 CS08 Analog input  Capacitive sensing input 7  Analog input  Capacitive sensing input 6  Analog input	7	N/C	No Connect (leave this pin floating)
Config Clk Config Data Configuration clock Configuration data Configuration data  Push-pull digital output Event buffer interrupt pin  EB_SCL Dopen drain digital output Event buffer I2C SCL  N/C No Connect (leave this pin floating)  EB_SDA Open drain digital input Event buffer I2C SDA  N/C No Connect (leave this pin floating)  No Connect (leave this pin floating)  CS11 / Analog input, capacitive sensing input 11  Buzzer Digital output for buzzer  Analog input Capacitive sensing input 10  Analog input Capacitive sensing input 9  Analog input Capacitive sensing input 9  CS08 Analog input Capacitive sensing input 9  CS07 Analog input Capacitive sensing input 7  Analog input Capacitive sensing input 6 Analog input Capacitive sensing input 6 Analog input	8	N/C	No Connect (leave this pin floating)
10 Config Data Configuration data  11 EB_INT Push-pull digital output Event buffer interrupt pin  12 EB_SCL Open drain digital output Event buffer 12C SCL  13 N/C No Connect (leave this pin floating)  14 EB_SDA Open drain digital input Event buffer 12C SDA  15 N/C No Connect (leave this pin floating)  16 CS11 / Analog input (leave this pin floating)  17 CS10 Analog input To buzzer  18 CS09 Analog input  19 CS08 Analog input  20 CS07 Analog input  20 CS07 Analog input  21 CS06 Analog input  Capacitive sensing input 7  21 CS05 Analog input  Capacitive sensing input 6  22 CS05 Analog input	9	RSTb /	Active-low reset /
EB_INT  EB_INT  Push-pull digital output Event buffer interrupt pin  12  EB_SCL  Open drain digital output Event buffer I2C SCL  13  N/C  No Connect (leave this pin floating)  14  EB_SDA  Open drain digital input Event buffer I2C SDA  15  N/C  No Cognect (leave this pin floating)  16  CS11 / Buzzer  No Cognect (leave this pin floating)  Digital output for buzzer  17  CS10  Analog input, capacitive sensing input 11  Digital output for buzzer  17  CS10  Analog input Capacitive sensing input 9  19  CS08  Analog input Capacitive sensing input 9  20  CS07  Analog input Capacitive sensing input 7  21  CS08  Analog input Capacitive sensing input 6  Analog input Capacitive sensing input 6		Config Clk	Configuration clock
Event buffer interrupt pin  Den drain digital output Event buffer I2C SCL  N/C  No Connect (leave this pin floating)  EB_SDA  Open drain digital input Event buffer I2C SDA  Doen drain digital input Event buffer I2C SDA  N/C  No Connect (leave this pin floating)  N/C  No Connect (leave this pin floating)  Analog input, capacitive sensing input 11  Digital output for buzzer  Analog input Capacitive sensing input 10  Rosos  Analog input Capacitive sensing input 9  Analog input Capacitive sensing input 9  Capacitive sensing input 9  Analog input Capacitive sensing input 9  Analog input Capacitive sensing input 7  Analog input Capacitive sensing input 7  Analog input Capacitive sensing input 6  Capacitive sensing input 6	10	Config Data	Configuration data
12 EB_SCL Open drain digital output Event buffer I2C SCL  13 N/C No Connect (leave this pin floating)  14 EB_SDA Open drain digital input Event buffer I2C SDA  15 N/C No Connect (leave this pin floating)  16 CS11 / Analog input, capacitive sensing input 11  Buzzer Digital output for buzzer  17 CS10 Analog input  Capacitive sensing input 10  18 CS09 Analog input  Capacitive sensing input 9  19 CS08 Analog input  Capacitive sensing input 9  20 CS07 Analog input  Capacitive sensing input 7  21 CS06 Analog input  Capacitive sensing input 6  Analog input  Capacitive sensing input 7  Analog input  Capacitive sensing input 7  Analog input  Capacitive sensing input 6  Analog input  Capacitive sensing input 6  Analog input	11	EB_INT	Push-pull digital output
Event buffer I2C SCL  13 N/C No Connect (leave this pin floating)  14 EB_SDA Open drain digital input Event buffer I2C SDA  15 N/C No Connect (leave this pin floating)  16 CS11 / Analog input, capacitive sensing input 11  Buzzer Digital output for buzzer  17 CS10 Analog input Capacitive sensing input 10  18 CS09 Analog input Capacitive sensing input 9  19 CS08 Analog input Capacitive sensing input 9  20 CS07 Analog input Capacitive sensing input 7  21 CS06 Analog input Capacitive sensing input 6  22 CS05 Analog input			Event buffer interrupt pin
No Connect (leave this pin floating)  14 EB_SDA Open drain digital input Event buffer I2C SDA  15 N/C No Connect (leave this pin floating)  16 CS11 / Analog input, capacitive sensing input 11 Buzzer Digital output for buzzer  17 CS10 Analog input Capacitive sensing input 10  18 CS09 Analog input Capacitive sensing input 9  19 CS08 Analog input Capacitive sensing input 9  20 CS07 Analog input Capacitive sensing input 7  21 CS06 Analog input Capacitive sensing input 6  Analog input Capacitive sensing input 7  Analog input Capacitive sensing input 7  Analog input Capacitive sensing input 6  Analog input Capacitive sensing input 6  Analog input	12	EB_SCL	Open drain digital output
14 EB_SDA Open drain digital input Event buffer I2C SDA 15 N/C No Connect (leave this pin floating) 16 CS11 / Analog input, capacitive sensing input 11 Buzzer Digital output for buzzer 17 CS10 Analog input Capacitive sensing input 10 18 CS09 Analog input Capacitive sensing input 9 19 CS08 Analog input Capacitive sensing input 9 20 CS07 Analog input Capacitive sensing input 7 21 CS06 Analog input Capacitive sensing input 6 22 CS05 Analog input			Event buffer I2C SCL
Event buffer I2C SDA  15 N/C No Connect (leave this pin floating)  16 CS11 / Analog input, capacitive sensing input 11  Buzzer Digital output for buzzer  17 CS10 Analog input  Capacitive sensing input 10  18 CS09 Analog input  Capacitive sensing input 9  19 CS08 Analog input  Capacitive sensing input 9  20 CS07 Analog input  Capacitive sensing input 7  21 CS06 Analog input  Capacitive sensing input 6  22 CS05 Analog input	13	N/C	No Connect (leave this pin floating)
15 N/C No Connect (leave this pin floating) 16 CS11 / Analog input, capacitive sensing input 11 Buzzer Digital output for buzzer 17 CS10 Analog input Capacitive sensing input 10 18 CS09 Analog input Capacitive sensing input 9 19 CS08 Analog input Capacitive sensing input 9 20 CS07 Analog input Capacitive sensing input 9 21 CS06 Analog input Capacitive sensing input 7 21 CS06 Analog input Capacitive sensing input 6 22 CS05 Analog input	14	EB_SDA	Open drain digital input
16 CS11 / Buzzer Digital output for buzzer  17 CS10 Analog input Capacitive sensing input 10  18 CS09 Analog input Capacitive sensing input 9  19 CS08 Analog input Capacitive sensing input 9  20 CS07 Analog input Capacitive sensing input 7  21 CS06 Analog input Capacitive sensing input 6  22 CS05 Analog input			Event buffer I2C SDA
Buzzer  Digital output for buzzer  Analog input Capacitive sensing input 10  Ranalog input Capacitive sensing input 9  Capacitive sensing input 9  Capacitive sensing input 9  Capacitive sensing input 9  Analog input Capacitive sensing input 9  Analog input Capacitive sensing input 7  Analog input Capacitive sensing input 7  Analog input Capacitive sensing input 6  Analog input Capacitive sensing input 6  Analog input	15	N/C	No Connect (leave this pin floating)
Analog input Capacitive sensing input 10  18 CS09 Analog input Capacitive sensing input 9  19 CS08 Analog input Capacitive sensing input 9  20 CS07 Analog input Capacitive sensing input 9  21 CS06 Analog input Capacitive sensing input 7  21 CS06 Analog input Capacitive sensing input 6  22 CS05 Analog input	16	CS11 /	Analog input, capacitive sensing input 11
Capacitive sensing input 10  18  CS09  Analog input Capacitive sensing input 9  19  CS08  Analog input Capacitive sensing input 9  20  CS07  Analog input Capacitive sensing input 7  21  CS06  Analog input Capacitive sensing input 7  Analog input Capacitive sensing input 6  Analog input Capacitive sensing input 6  Analog input		Buzzer	Digital output for buzzer
Analog input Capacitive sensing input 9  19  CS08  Analog input Capacitive sensing input 9  20  CS07  Analog input Capacitive sensing input 9  Capacitive sensing input 7  Analog input Capacitive sensing input 7  Analog input Capacitive sensing input 6  Capacitive sensing input 6	17	CS10	Analog input
Capacitive sensing input 9  19  CS08  Analog input Capacitive sensing input 9  20  CS07  Analog input Capacitive sensing input 7  21  CS06  Analog input Capacitive sensing input 6  Capacitive sensing input 6  Analog input Capacitive sensing input 6			Capacitive sensing input 10
19 CS08 Analog input Capacitive sensing input 9  20 CS07 Analog input Capacitive sensing input 7  21 CS06 Analog input Capacitive sensing input 6  22 CS05 Analog input	18	CS09	Analog input
Capacitive sensing input 9  Capacitive sensing input 9  Analog input Capacitive sensing input 7  Analog input Capacitive sensing input 6  Capacitive sensing input 6  Analog input Capacitive sensing input 6			Capacitive sensing input 9
20 CS07 Analog input Capacitive sensing input 7  21 CS06 Analog input Capacitive sensing input Capacitive sensing input 6  22 CS05 Analog input	19	CS08	Analog input
Capacitive sensing input 7  21 CS06 Analog input Capacitive sensing input 6  22 CS05 Analog input		~	Capacitive sensing input 9
21 CS06 Analog input Capacitive sensing input 6  22 CS05 Analog input	20	CS07	Analog input
Capacitive sensing input 6  CS05  Analog input			Capacitive sensing input 7
22 CS05 Analog input	21	CS06	Analog input
		O'	Capacitive sensing input 6
Capacitive sensing input 5	22	CS05	Analog input
	20		Capacitive sensing input 5
23 CS04 Analog input	23	CS04	Analog input
Capacitive sensing input 4	X		Capacitive sensing input 4
24 CS03 Analog input	24	CS03	Analog input
Capacitive sensing input 3	7		Capacitive sensing input 3

# 6. QFN20 Package Specifications

# 6.1 QFN20 Package Dimensions

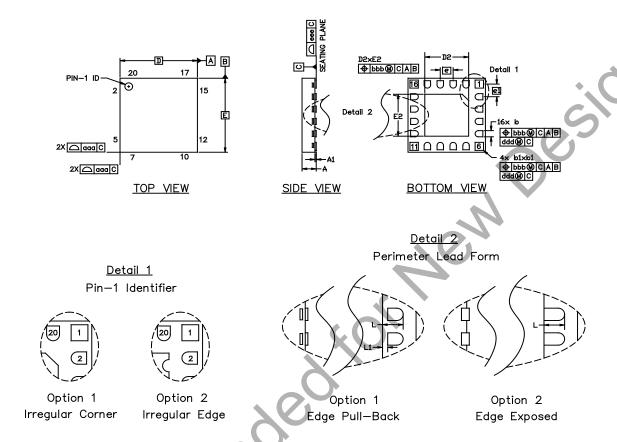


Figure 6.1. QFN20 Package Drawing

Table 6.1. QFN20 Package Dimensions

Dimension	Min	Тур	Max
A	0.50	0.55	0.60
A1	0.00	_	0.05
b	0.20	0.25	0.30
b1	0.275	0.325	0.375
D	3.00 BSC		
D2	1.6	1.70	1.80
е	0.50 BSC		
e1	0.513 BSC		
E	3.00 BSC		
E2	1.60	1.70	1.80
L	0.35	0.40	0.45

Dimension	Min	Тур	Max
L1	0.00	_	0.10
aaa	_	0.10	_
bbb	_	0.10	_
ddd	_	0.05	_
eee	_	_	0.08

#### Note:

- 1. All dimensions shown are in millimeters (mm) unless otherwise noted.
- 2. Dimensioning and Tolerancing per ANSI Y14.5M-1994.
- 3. This drawing is based upon JEDEC Solid State Product Outline MO-248 but includes custom features which are toleranced per supplier designation.
- 4. Recommended card reflow profile is per the JEDEC/IPC J-STD-020 specification for Small Body Components.

# 6.2 QFN20 PCB Land Pattern

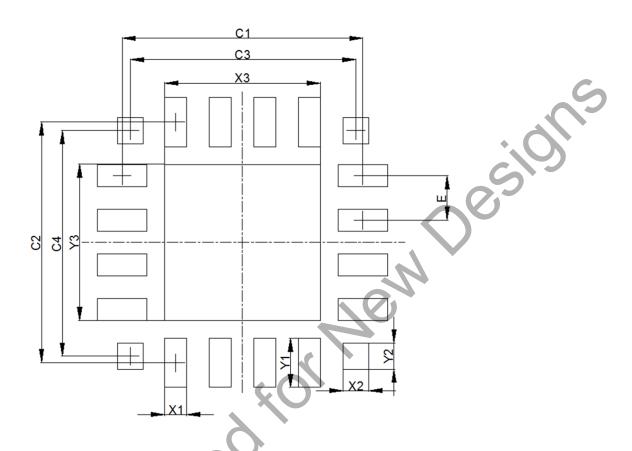


Figure 6.2. QFN20 PCB Land Pattern Drawing

Table 6.2. QFN20 PCB Land Pattern Dimensions

Dimension	Min	Max
C1		2.70
C2		2.70
C3		2.53
C4		2.53
E	0.	50 REF
X1	0.20	0.30
X2	0.24	.034
Х3	1.70	1.80
Y1 (	0.50	0.60
Y2	0.24	0.34
Y3	1.70	1.80

Dimension Min Max

#### Note:

- 1. All dimensions shown are in millimeters (mm) unless otherwise noted.
- 2. Dimensioning and Tolerancing is per the ANSI Y14.5M-1994 specification.
- 3. This Land Pattern Design is based on the IPC-7351 guidelines.
- 4. All metal pads are to be non-solder mask defined (NSMD). Clearance between the solder mask and the metal pad is to be 60 μm minimum, all the way around the pad.
- 5. A stainless steel, laser-cut and electro-polished stencil with trapezoidal walls should be used to assure good solder paste release.
- 6. The stencil thickness should be 0.125 mm (5 mils).
- 7. The ratio of stencil aperture to land pad size should be 1:1 for the perimeter pads.
- 8. A 2x2 array of 0.75 mm openings on a 0.95 mm pitch should be used for the center pad to assure proper paste volume.
- 9. A No-Clean, Type-3 solder paste is recommended.
- 10. The recommended card reflow profile is per the JEDEC/IPC J-STD-020 specification for Small Body Components

# 6.3 QFN20 Package Marking

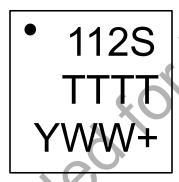


Figure 6.3. QFN20 Package Marking

The package marking consists of:

- 112S The part number designation.
- TTTT A trace or manufacturing code. The first letter of this code is the hardware revision.
- Y The last digit of the assembly year.
- WW The 2-digit workweek when the device was assembled.
- + Indicates the device is RoHS-compliant.

# 7. QSOP24 Package Specifications

# 7.1 QSOP24 Package Dimensions

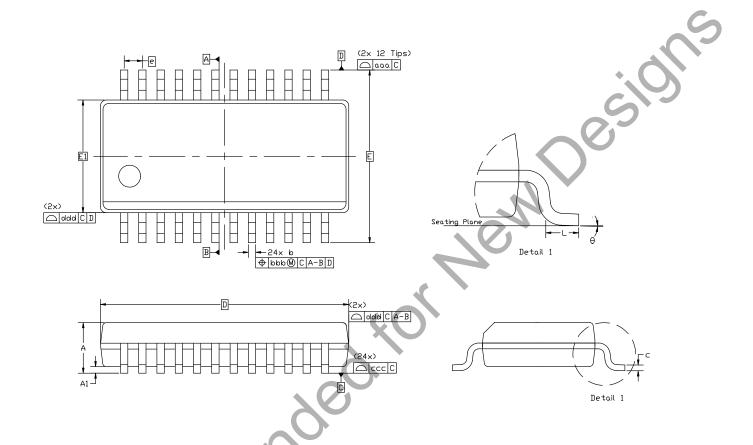


Figure 7.1. QSOP24 Package Drawing

Table 7.1. QSOP24 Package Dimensions

Dimension	Min	Тур	Max
A	_	_	1.75
A1	0.10	_	0.25
b	0.20	_	0.30
С	0.10	_	0.25
0	8.65 BSC		
E	6.00 BSC		
E1	3.90 BSC		
е	0.635 BSC		
L	0.40	_	1.27
theta	0°	_	8°

Dimension	Min	Тур	Max
aaa		0.20	
bbb		0.18	
ccc		0.10	
ddd		0.10	

# Note:

- 1. All dimensions shown are in millimeters (mm) unless otherwise noted.
- 2. Dimensioning and Tolerancing per ANSI Y14.5M-1994.
- 3. This drawing conforms to JEDEC outline MO-137, variation AE.
- 4. Recommended card reflow profile is per the JEDEC/IPC J-STD-020 specification for Small Body Components.

#### 7.2 QSOP24 PCB Land Pattern

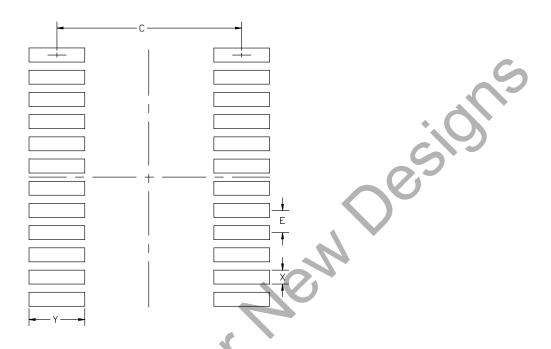


Figure 7.2. QSOP24 PCB Land Pattern Drawing

Table 7.2. QSOP24 PCB Land Pattern Dimensions

Dimension	Min	Max
С	5.20	5.30
E	0.63	BS BSC
X	0.30	0.40
Υ	1.50	1.60

# Note:

- 1. All dimensions shown are in millimeters (mm) unless otherwise noted.
- 2. This land pattern design is based on the IPC-7351 guidelines.
- 3. All metal pads are to be non-solder mask defined (NSMD). Clearance between the solder mask and the metal pad is to be 60  $\mu$ m minimum, all the way around the pad.
- 4. A stainless steel, laser-cut and electro-polished stencil with trapezoidal walls should be used to assure good solder paste release.
- 5. The stencil thickness should be 0.125 mm (5 mils).
- 6. The ratio of stencil aperture to land pad size should be 1:1 for all perimeter pads.
- 7. A No-Clean, Type-3 solder paste is recommended.
- 8. The recommended card reflow profile is per the JEDEC/IPC J-STD-020 specification for Small Body Components.

# 7.3 QSOP24 Package Marking

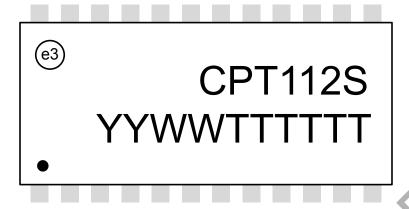


Figure 7.3. QSOP24 Package Marking

The package marking consists of:

- CPT112S The part number designation.
- TTTTTT A trace or manufacturing code. The first letter of this code is the hardware revision.
- YY The last two digits of the assembly year.
- WW The 2-digit workweek when the device was assembled.
- e3 Indicates the device is RoHS-compliant.

# 8. Relevant Application Notes

The following Application Notes are applicable to the CPT112S devices:

- AN957: TouchXpress™ Configuration and Profiling Guide This application note guides developers through the evaluation and configuration process of TouchXpress devices using Simplicity Studio [Xpress Configurator] and [Capacitive Sense Profiler].
- AN447: Printed Circuit Design Notes for Capacitive Sensing Performance This document describes hardware design guidelines specifically for capacitive sensing applications, including button placement and other layout guidelines.
- aming opti.

  es) or in Simplicity St.

  es) or in Simplicity St.

  Reconningerial R AN949: TouchXpress™ Programming Guide — This application note discusses the production programming options available for TouchXpress devices.

Application Notes can be accessed on the Silicon Labs website (www.silabs.com/interface-appnotes) or in Simplicity Studio using the [Application Notes] tile.

# 9. Revision History

#### 9.1 Revision 0.2

August 12th, 2016

whaver we will be siddly b

# **Table of Contents**

1.	Feature List and Ordering Information	1
2.	Typical Connection Diagrams	2
	2.1 Signal, Analog, and Power connections	2
	2.2 Configuration	3
3.	Electrical Specifications  3.1 Electrical Characteristics 3.1.1 Recommended Operating Conditions 3.1.2 Power Consumption 3.1.3 Reset and Supply Monitor 3.1.4 Configuration Memory 3.1.5 Capacitive Sense 3.1.6 Buzzer Output	4 4 4 5 6 6 7 8
	3.2 Thermal Conditions	8
	3.3 Absolute Maximum Ratings	
	3.4 Typical Performance Curves	
4.	Functional Description	
	4.1 Capacitive Sensing Input 4.1.1 Introduction 4.1.2 Touch Qualification Criteria. 4.1.3 Thresholds 4.1.4 Debounce Counter 4.1.5 Touch Deltas 4.1.6 Auto-Accumulation and Averaging 4.1.7 Drive strength 4.1.8 Active Mode Scan Enable 4.1.9 Active Mode Scan Period 4.1.10 Active Mode Scan Period 4.1.11 Sleep Mode Scan Period 4.1.12 Active Mode and Sleep Mode Transitions	13 13 14 14 14 14 14 15 15
	4.2 I2C Event Buffer Interface	
	<ul><li>4.2.1 Introduction</li></ul>	17
	4.2.4 Defined Event Types	19
1	4.2.5 Description Bytes for Touch Events	19
	4.3 Capacitive Proximity Sensing.	20
	4.4 Slider	20
	4.5 Touch Time-Out	21

	4.6 Buzzer Output	.22
	4.7 Mutually Exclusive Buttons	.23
	4.8 Self Testing	
	4.9 Configuration Profile	.24
5.	Pin Definitions	25
	5.1 CPT112S QFN20 Pin Definitions	.25
	5.2 CPT112S QSOP24 Pin Definitions	.27
6.	QFN20 Package Specifications	29
	6.1 QFN20 Package Dimensions	.29
	6.2 QFN20 PCB Land Pattern	.31
	6.3 QFN20 Package Marking	.32
7.	QSOP24 Package Specifications	33
	7.1 QSOP24 Package Dimensions	.33
	7.2 QSOP24 PCB Land Pattern	.35
	7.3 QSOP24 Package Marking	.36
8.	Relevant Application Notes	37
9.	Revision History	38
	9.1 Revision 0.2	.38
		.38





loT Portfolio www.silabs.com/loT



**SW/HW** www.silabs.com/simplicity



Quality www.silabs.com/quality



Support and Community community.silabs.com

#### Disclaimer

Silicon Laboratories intends to provide customers with the latest, accurate, and in-depth documentation of all peripherals and modules available for system and software implementers using or intending to use the Silicon Laboratories products. Characterization data, available modules and peripherals, memory sizes and memory addresses refer to each specific device, and "Typical" parameters provided can and do vary in different applications. Application examples described herein are for illustrative purposes only. Silicon Laboratories reserves the right to make changes without further notice and limitation to product information, specifications, and descriptions herein, and does not give warranties as to the accuracy or completeness of the included information. Silicon Laboratories shall have no liability for the consequences of use of the information supplied herein. This document does not imply or express copyright licenses granted hereunder to design or fabricate any integrated circuits. The products are not designed or authorized to be used within any Life Support System without the specific written consent of Silicon Laboratories. A "Life Support System" is any product or system intended to support or sustain life and/or health, which, if it fails, can be reasonably expected to result in significant personal injury or death. Silicon Laboratories products are not designed or authorized for military applications. Silicon Laboratories products shall under no circumstances be used in weapons of mass destruction including (but not limited to) nuclear, biological or chemical weapons, or missiles capable of delivering such weapons.

#### **Trademark Information**

Silicon Laboratories Inc.®, Silicon Laboratories®, Silicon Labs®, Silabs® and the Silicon Labs logo®, Bluegiga®, Bluegiga®, Bluegiga Logo®, Clockbuilder®, CMEMS®, DSPLL®, EFM®, EFM32®, EFR, Ember®, Energy Micro, Energy Micro, Energy Micro logo and combinations thereof, "the world's most energy friendly microcontrollers", Ember®, EZLink®, EZRadio®, EZRadioPRO®, Gecko®, ISOmodem®, Precision32®, ProSLIC®, Simplicity Studio®, SiPHY®, Telegesis, the Telegesis Logo®, USBXpress® and others are trademarks or registered trademarks of Silicon Laboratories Inc. ARM, CORTEX, Cortex-M3 and THUMB are trademarks or registered trademarks of ARM Holdings. Keil is a registered trademark of ARM Limited. All other products or brand names mentioned herein are trademarks of their respective holders.



Silicon Laboratories Inc. 400 West Cesar Chavez Austin, TX 78701

# **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

# Silicon Laboratories:

CPT112S-A01-GM CPT112S-A02-GUR CPT112S-A02-GU CPT112S-A02-GM CPT112S-A02-GMR