TOSHIBA

16 Bit Microcontroller TLCS-900/L1 Series TMP91FW60FG FMP91FW60DFG

TOSHIBA CORPORATION

Revision 1.9

The information contained herein is subject to change without notice.

TOSHIBA is continually working to improve the quality and reliability of its products. Nevertheless, semiconductor devices in general can malfunction or fail due to their inherent electrical sensitivity and vulnerability to physical stress.

It is the responsibility of the buyer, when utilizing TOSHIBA products, to comply with the standards of safety in making a safe design for the entire system, and to avoid situations in which a malfunction or failure of such TOSHIBA products could cause loss of human life, bodily injury or damage to property. In developing your designs, please ensure that TOSHIBA products are used within specified operating ranges as set forth in the most recent TOSHIBA products specifications.

Also, please keep in mind the precautions and conditions set forth in the "Handling Guide for Semiconductor Devices," or "TOSHIBA Semiconductor Reliability Handbook" etc.

The Toshiba products listed in this document are intended for usage in general electronics applications (computer, personal equipment, office equipment, measuring equipment, industrial robotics, domestic appliances, etc.).

These Toshiba products are neither intended nor warranted for usage in equipment that requires extraordinarily high quality and/or reliability or a malfunction or failure of which may cause loss of human life or bodily injury ("Unintended Usage"). Unintended Usage include atomic energy control instruments, airplane or spaceship instruments, transportation instruments, traffic signal instruments, combustion control instruments, medical instruments, all types of safety devices, etc. Unintended Usage of Toshiba products listed in this document shall be made at the customer's own risk.

The products described in this document shall not be used or embedded to any downstream products of which manufacture, use and/or sale are prohibited under any applicable laws and regulations.

The information contained herein is presented only as a guide for the applications of our products. No responsibility is assumed by TOSHIBA for any infringements of patents or other rights of the third parties which may result from its use. No license is granted by implication or otherwise under any patents or other rights of TOSHIBA or the third parties.

Please contact your sales representative for product-by-product details in this document regarding RoHS compatibility. Please use these products in this document in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances. Toshiba assumes no liability for damage or losses occurring as a result of noncompliance with applicable laws and regulations.

© 2007 TOSHIBA CORPORATION All Rights Reserved

Revision History

Date	Revision					
2006/2/28	0.1	TENTATIVE				
2006/3/06	0.2	Flash section is corrected.				
2006/3/13	0.3	Correction of a clerical error.				
2006/8/04	1.4	P99 Figure 5-3 is corrected.				
		P99 Figure 5-4 is deleted.				
		P272 The value is added to T.B.D of Specification section.				
		P126 Figure 7-1 P132-133 TMRB Mode register TA1OUT of TB3MOD and TB4MOD is corrected. TA1OUT -> TA3OUT, TA5OUT				
		P226 Table 14-6 is corrected				
		P178 9.3.3.14 The description is corrected.				
2006/10/31	1.5	SCOUT: System clock output fFPH -> fSYS				
		DC SPEC VIH/VIL is corrected.				
	,	Table 2-8 Sample Warm-up Times after Clearance of STOP Mode is corrected.				
		Table 4-2 I/O Port Setting List is corrected. PORT 3, 4, 7 control register/function register contrast table is corrected.				
		9.3.2 I2CBus Mode control Register Note1:Set the <bc2:0> to "000" before switching to a clocked-synchronous 8-bit SIO mode is deleted. 9.3.4.1 Device initialization SBI0CR1<p4en> is deleted. 9.3.4.2 Start condition and slave address generation (1) Master mode register settings is corrected.</p4en></bc2:0>				
		 6.4.1.2 Generating a 50% duty radio square wave pulse register settings example is corrected. 6.4.3 8-bit PPG output mode. Register settings is corrected. 6.4.4 8-bit PWM output mode Register settings example is corrected. 				
		Table 14-6 Correspondence between Operating Frequency and Baund Rate in Single Boot Mode is corrected.				
		15.2 DC Electrical Characteristics Peak current for intermittent operation T.B.D -> 20mA				

Date	Revision	
2007/2/16	1.6	1.1 Features Program patch logic
		2.3.4 Prescaler Clock Controller is corrected.
		16.Table of SFR's
		2.1 RESET 10 system clocks 16us -> 1us
		18. Points to Note and Restriction
2007/4/16	1.7	15.2 DC Electrical Characteristics Power down voltage Min 4.5V -> 2.0V
		14.6.10 Addresses of Program example are corrected
2007/8/27	1.8	DMAR register (89H) is corrected by RWM prohibition.
		18.2 Points of note j. Releasing the HALT mode by requesting an interruption is deleted.
		2.3.2 Note3 is added
		8.2.1 SIQ Plescaler is corrected, and Table 8-2 is corrected
		8.3 Note2 and Note3 are added
	/	18.2 Points of note Clocks for serial channels (SIO) is added
2007/10/15	1.9	7.3 SFR 16. Table of SFR's TB0FFCR, TB1FFCR, TB2FFCR, TB3FFCR and TB4FFCR register is corrected.

CMOS 16 Bit Microcontroller

TMP91FW60FG/DFG

Product No.	ROM (Flash ROM)	RAM	Package
TMP91FW60FG	128K bytes	8K bytes	LQFP100-P-1414-0,50F
TMP91FW60DFG	120K byles	on bytes	QFP100-P-1420-0.65A

1.1 **Features**

- High-speed 16-bit CPU (900/L1 CPU)
 - Instruction mnemonics are upward-compatible with TLCS-900,900/H,900/L
 - 16 Mbytes of linear address space
 - General-purpose registers and register banks
 - 16-bit multiplication and division instructions; bit transfer and arithmetic instructions
 - Micro DMA: 4 channels (800ns/2 bytes at 20MHz)
- Minimum instruction execution time: 200ns (at/20MHz)
- · Built-in memory
 - ROM:128K bytes (Flash ROM)
 - RAM:8K bytes
- · External memory expansion
 - Expandable up to 16 Mbytes (shared program/data area)
 - Can simultaneously support 8/16-bit width external data bus

Dynamic data bus/syzing

- 8-bit timers: 6 channels
- 16-bit timers: 5 channels
- General-purpose serial interface: 5 channels
 - UART/Synchronous mode: 3 channels
 - I²C bus mode: 2 channels
- 10-bit AD converter (Built-in Sample hold circuit): 16 channels
- Special timer for CLOCK

This product uses the Super-Flash® technology under the licence of Silicon Storage Technology, Inc. Super Flash® is registered trademark of Silicon Storage Technology, Inc.

20070701-EN

- The information contained herein is subject to change without notice.
 TOSHIBA is continually working to improve the quality and reliability of its products. Nevertheless, semiconductor devices in general can malfunction or fail due to their inherent electrical sensitivity and vulnerability to physical stress. It is the responsibility of the buyer, when utilizing TOSHIBA products, to comply with the standards of safety in making a safe design for the entire system, and to avoid situations in which a malfunction or failure of such TOSHIBA products could cause loss of human life, bodily injury or damage to property. In developing your designs, please ensure that TOSHIBA products are used within specified operating ranges as set forth in the most recent TOSHIBA products specifications. Also, please keep in mind the precautions and conditions set forth in the "Handling Guide for Semiconductor Devices," or "TOSHIBA Semiconductor Reliability Handbook" etc.
 The TOSHIBA products listed in this document are intended for usage in general electronics applications (computer, personal equipment, office equipment, measuring equipment, industrial robotics, domestic appliances, etc.). These TOSHIBA products are neither intended nor warranted for usage in equipment that requires extraordinarily high quality and/or reliability or a malfunctionor failure of
- intended nor warranted for usage in equipment that requires extraordinarily high quality and/or reliability or a malfunctionor failure of which may cause loss of human life or bodily injury ("Unintended Usage"). Unintended Usage include atomic energy control instruments, airplane or spaceship instruments, transportation instruments, traffic signal instruments, combustion control instruments, medical instruments, all types of safety devices, etc. Unintended Usage of TOSHIBA products listed in this document shall be made at the customer's
- own risk The products described in this document shall not be used or embedded to any downstream products of which manufacture, use and/or sale are prohibited under any applicable laws and regulations
- The information contained herein is presented only as a guide for the applications of our products. No responsibility is assumed by TOSHIBA for any infringements of patents or other rights of the third parties which may result from its use. No license is granted by impli-
- cation or otherwise under any patents or other rights of TOSHIBA or the third parties.

 Please contact your sales representative for product-by-product details in this document regarding RoHS compatibility. Please use these products in this document in compliance with all applicable laws and regulations that regulate the inclusion or use of controlled substances. Toshiba assumes no liability for damage or losses occurring as a result of noncompliance with applicable laws and regulations.

2007-10-15 Page 1

- · Watchdog timer
- Program patch logic: 6 banks
- Chip select/wait controller: 4 channels
- Interrupts: 57 interrupts
 - 9 CPU interrupts: Software interrupt instruction and illegal instruction
 - 36 internal interrupts: 7 priority levels are selectable
 - 12 external interrupts: 7 priority levels are selectable (among 1 interrupts are selectable edge mode)
- Input/output ports: 83 pins
- Standby function: Three HALT modes: IDLE2 (Programmable), IDLE1 and STOP
- Clock controller
 - Clock gear function: Select a High-frequency clock fc/1 to fc/16
 - Oscillator for CLOCK (fs = 32.768 kHz)
- · Operating voltage

Flash read operation

> Vcc=4.5 V - 5.5 V (fc max = 20MHz)


Flash write/erase operation

> Vcc=4.75 V - 5.25 V (fc max = 20MHz)


- Package
 - LQFP100-P-1414-0.50F (TMP91FW60FG)
 - QFP100-P-1420-0.65A (TMP91FW60DFG)

Page 2 2007-10-15

1.2 Pin Assignment Diagram

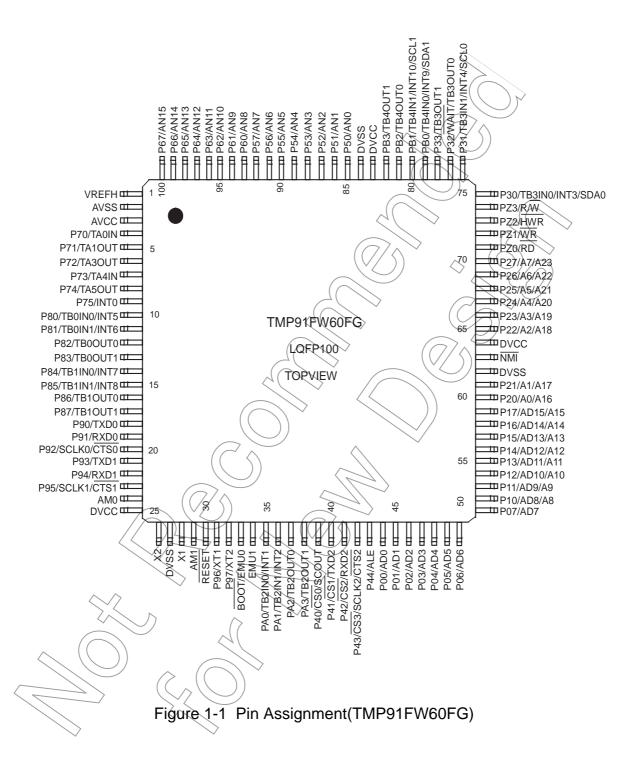

Page 3 2007-10-15

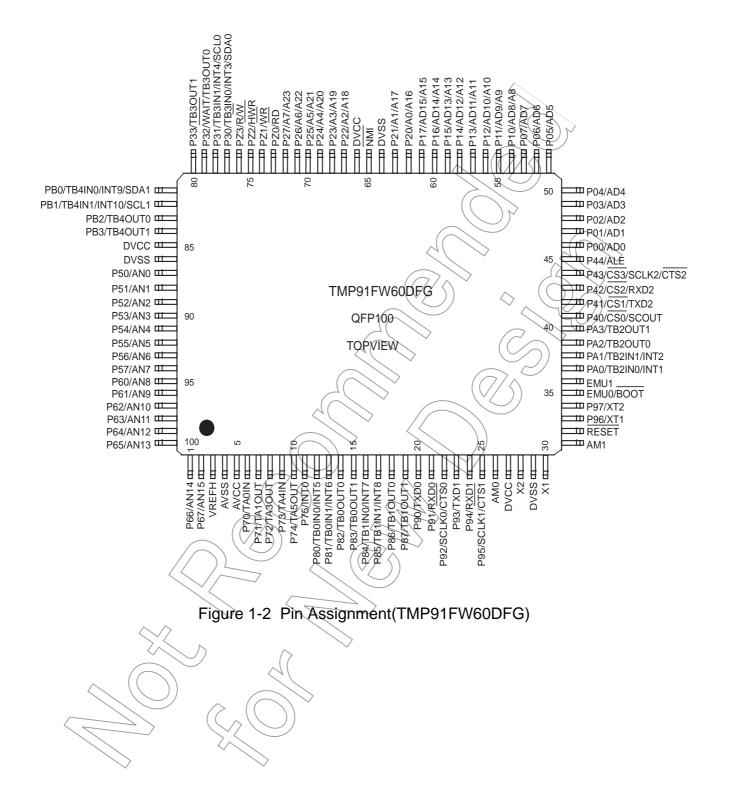

Page 4 2007-10-15

1.3 Block Diagram

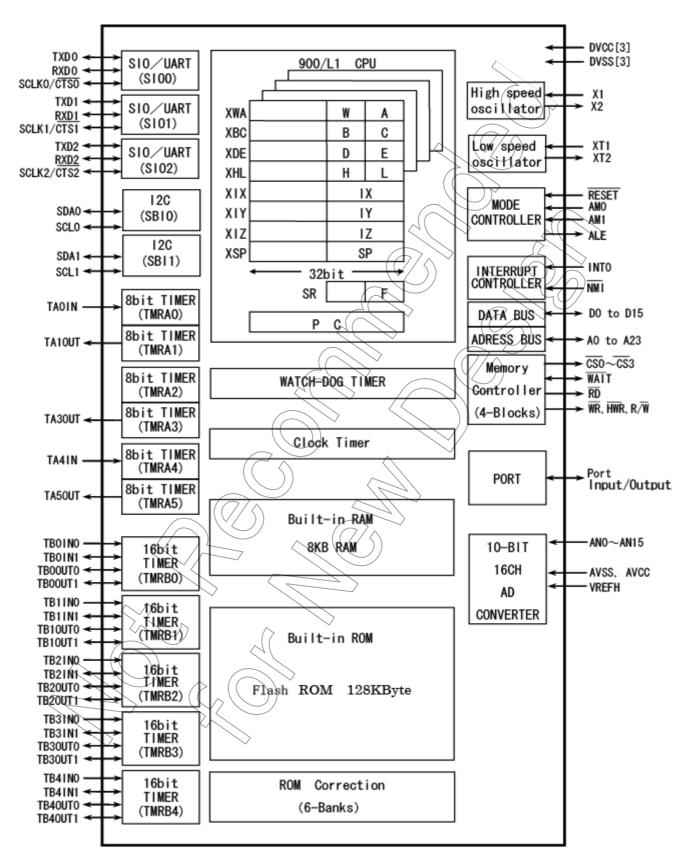


Figure 1-3 Block Diagram

Page 5 2007-10-15

1.4 Pin Names and Functions

Table 1-1 Pin Names and Functions(1/3)

Pin Name	Pin Number	Input / Output	Functions
P00-P07 AD0-AD7	8	10 10	Port 0: I/O port that allows I/O to be selected at the bit level Address data (Lower): 0 to 7 address/data bus
P10-P17 AD8-AD15 A8-A15	8	10 10 0	Port1: I/O port that allows I/O to be selected at the bit level Address data (Upper): 8 to 15 of address/data bus Address: 8 to 15 of address bus
P20-P27 A0-A7 A16-A23	8	0 0	Port 2: I/O port that allows I/O to be selected at the bit-level Address: 0 to 7 of address bus Address: 16 to 23 of address bus
PZ0 RD	1	0	Port Z0: Output port Read:Strobe signal for reading external memory
PZ1 WR	1	0	Port Z1: Output port Write: Strobe signal for writing data to pins AD0 to AD7
PZ2 HWR	1	10 0	Port Z2: I/O port (with pull-up resistor) High write: Strobe signal for writing data to pins AD8 to AD15
PZ3 R/W	1	10 0	Port Z3: I/O port (With pull-up resistor) Read/Write: 1 represents Read or Dummy cycle; 0 represents Write cycle.
P30 TB3IN0 INT3 SDA0	1	10 1 1 10	Port 30: I/O port 16-bit timer 3 input 0:Timer B3 count/capture trigger Input 0 Interrupt Request Pin 3: Interrupt request pin with programmable rising edge / falling edge. Serial bus interface data 0 in I2C bus Mode.
P31 TB3IN1 INT4 SCL0	1	10 1 10	Port 31: VO port 16-bit timer 3 input 1:Timer B3 count/capture trigger Input 1 Interrupt Request Pin 4: Interrupt request on rising edge Serial bus interface clock 0 in I2C bus Mode.
P32 WAIT TB3OUT0	1	0 1 0	Port 32: I/O port Wait: Pin used to request CPU bus wait ((1 N) wait mode) 16-bit timer 3 output 0: Timer-B3 Output 0
P33 TB3OUT1	1	90	Port 33: 10 port 16-bit timer 3 output 1: Timer B3 Output 1
P40 CS0 SCOUT) IO O O	Port 40: I/O port (with pull-up resistor) Chip Select 0: Outputs 0 when address is within specified address area System Clock Output: Outputs f _{SYS} or fs clock.
P41 CS1 TXD2	1	IO O Ø	Port 41: I/O port (with pull-up resistor) Chip Select 1: Outputs 0 when address is within specified address area Serial Send Data 2
P42 CS2 RXD2	1	10 0 1	Port 42: I/O port (with pull-up resistor) Chip Select 2: Outputs 0 when address is within specified address area Serial Receive Data 2
P43 CS3 SCLK2 CTS2	1	10 0 10 1	Port 43: I/O port (with pull-up resistor) Chip Select 3: Outputs 0 when address is within specified address area Serial Clock I/O 2 Serial Data Send Enable 2 (Clear to Send)
P44 ALE	1	10 0	Port 44: I/O port (with pull-up resistor) Address Latch Enable
P50-57 AN0-AN7	8	10 1	Port 5: I/O port Analog input: Pin used to input to AD converter

Page 6 2007-10-15

Table 1-1 Pin Names and Functions(2/3)

Pin Name	Pin Number	Input / Output	Functions
P60-67 AN8-AN15	8	IO I	Port 6: I/O port Analog input: Pin used to input to AD converter
P70 TAOIN	1	IO I	Port 70: I/O port 8-bit timer 0 input: Timer A0 Input
P71 TA1OUT	1	10 0	Port 71: I/O port 8-bit timer 1 output:Timer A1 Output
P72 TA3OUT	1	10 0	Port 72: I/O port 8-bit timer 3 output:Timer A3 Output
P73 TA4IN	1	IO I	Port 73: I/O port 8-bit timer 4 input: Timer A4 Input
P74 TA5OUT	1	10 0	Port 74: I/O port 8-bit timer 5 output:Timer A5 Output
P75 INT0	1	IO I	Port 75: I/O port Interrupt Request Pin 0: Interrupt request pin with programmable level / rising edge / falling edge.
P80 TB0IN0 INT5	1	IO I I	Port 80: I/O port 16-bit timer 0 input 0:Timer 80 count/capture trigger Input 0 Interrupt Request Pin 5: Interrupt request pin with programmable rising edge / falling edge.
P81 TB0IN1 INT6	1	IO 	Port 81: I/O port 16-bit timer 0 input 1:Timer B0 count/capture trigger Input 1 Interrupt Request Pin 6: Interrupt request on rising edge
P82 TB0OUT0	1	10 0	Port 82: I/O port) 16-bit timer 0 output 0: Timer B0 Output 0
P83 TB0OUT1	1	10	Port 83: I/O port 16-bit timer 0 output 1: Timer BO Output 1
P84 TB1IN0 INT7	1	10	Port 84: I/O port 16-bit timer 1 input 0:Timer B1 count/capture trigger Input 0 Interrupt Request Pin 7: Interrupt request pin with programmable rising edge / falling edge.
P85 TB1IN1 INT8	1	<u>o</u>	Port 85: I/O port 16-bit timer 1 input 1:Fimer B1 count/capture trigger Input 1 Interrupt Request Pin 8: Interrupt request on rising edge
P86 TB1OUT0) 0	Port 86: I/O port 16-bit timer 1 output 0: Timer B1 Output 0
P87 TB10UT1		0 0	Port 87: I/O port 16-bit timer 1 output 1: Timer B1 Output 1
P90 TXD0	> 1	000	Port 90: I/O port Serial Send Data 0
P91 RXD0	1	9 -	Port 91: I/O port Serial Receive Data 0
P92 SCLK0 CTS0	1	10 10 1	Port 92: I/O port Serial Clock I/O 0 Serial Data Send Enable 0 (Clear to Send)
P93 TXD1	1	10 0	Port 93: I/O port Serial Send Data 1
P94 RXD1	1	10 1	Port 94: I/O port Serial Receive Data 1

Page 7 2007-10-15

Table 1-1 Pin Names and Functions (3/3)

Pin Name	Pin Number	Input / Output	Functions
P95 SCLK1 CTS1	1	10 10 1	Port 95: I/O port Serial Clock I/O 1 Serial Data Send Enable 1 (Clear to Send)
P96 XT1	1	10 1	Port 96: I/O port Low-frequency oscillator connection pin
P97 XT2	1	10 0	Port 97: I/O port Low-frequency oscillator connection pin
PA0 TB2IN0 INT1	1	IO 	Port A0: I/O port 16-bit timer 2 input 0:Timer B2 count/capture trigger Input 0 Interrupt Request Pin 1: Interrupt request pin with programmable rising edge / falling edge.
PA1 TB2IN1 INT2	1	<u>0</u> - -	Port A1: I/O port 16-bit timer 2 input 1:Timer B2 count/capture trigger Input 1 Interrupt Request Pin 2: Interrupt request on rising edge
PA2 TB2OUT0	1	10 0	Port A2: I/O port 16-bit timer 2 output 0: Timer B2 Output 0
PA3 TB2OUT1	1	10 0	Port A3: I/O port 16-bit timer 2 output 1: Timer B2 Output 1
PB0 TB4IN0 INT9 SDA1	1	10 1 1 10	Port B0: I/O port 16-bit timer 4 input 0:Timer B4 count/capture trigger input 0 Interrupt Request Pin 9: Interrupt request pin with programmable rising edge / falling edge. Serial bus interface data 1 in I2C bus Mode.
PB1 TB4IN1 INT10 SCL1	1	IO I I IO	Port B1: I/O port 16-bit timer 4 input 1:Timer B4 count/capture trigger Input 1 Interrupt Request Pin 10: Interrupt request on rising edge Serial bus interface clock 1 in I2C bus Mode.
PB2 TB4OUT0	1	10	Port B2: I/O port 19-bit timer 4 output 0: Timer B4-Output 0
PB3 TB4OUT1	1	0	Port B3: I/Q port 16-bit timer 4 output 1: Timer B4 Output 1
NMI	1	\nearrow	Non-Maskable Interrupt Request Pin: Interrupt request pin with programmable falling edge or both edge.
AM0-1	2	ı	Operation mode:Fixed to AM1 "1", AM0 "1".
EMU0-1	2	0	Set to Open pins
RESET))	1	Reset: initializes TMP91FW60. (with pull-up resistor)
VREFH	1		Pin for reference voltage input to AD converter
AVCC	1	Ž,	Power supply pin for AD converter
AVSS	1		GND pin for AD converter (0 V)
X1/X2	2	Ю	High frequency oscillator connection pins
DVCC	3		Power supply pins (All DVCC pins should be connected with the power supply pin.)
DVSS	3		GND pins (0 V) (All DVSS pins should be connected with the GND (0V) pin.)

Note: All pins that have built-in pull-up resistors (other than the RESET pin) can be disconnected from the built-in pull-up resistor by software.

Page 8 2007-10-15

TOSHIBA TMP91FW60

2. CPU

The TMP91FW60 incorporates a high-performance 16-bit CPU (The 900/L1-CPU). For CPU operation, see the "TLCS-900/L1 CPU".

The following describe the unique function of the CPU used in the TMP91FW60; these functions are not covered in the TLCS-900/L1 CPU section.

2.1 RESET

When resetting the TMP91FW60 microcontroller, ensure that the power supply-voltage is within the operating voltage range, and that the internal high-frequency oscillator has stabilized. Then hold the RESET input to low level at least for 10 system clocks (1us at 20 MHz).

Thus, when turn on the switch, be set to the power supply voltage is within the operating voltage range, and that the internal high-frequency oscillator has stabilized. Then hold the RESET input to Low level at least for 10 system clocks.

It means that the system clock mode f_{SYS} is set to fc/2.

When the reset is accept, the CPU:

1. Sets as follows the program counter (PC) in accordance with the reset vector stored

at address FFFF00H to FFFF02H:

- PC (7:0) <- Value at FFFF00H address
- PC (15:8) <- Value at FFFF01H address
- PC (23:16) <- Value at FFFF02H address
- 2. Sets the stack pointer (XSP) to 100H.
- 3. Sets bits<IFF2:0> of the status register (SR) to 111 (Sets the interrupt level mask register to level 7).
- 4. Sets the <MAX> bit of the status register (SR) to 1 (MAX mode).
- 5. Clears bits<RFP2:0> of the status register (SR) to 000 (Sets the register bank to 0).

When reset is released, the CPU starts executing instructions in accordance with the program counter settings. CPU internal registers not mentioned above do not change when the reset is released.

When the reset is accepted, the CPU sets internal VO, ports, and other pins as follows.

- 1. Initializes the internal I/O registers.
- 2. Sets the port pins, including the pins that also act as internal I/O, to general-purpose input or output port mode.
- 3. Sets ALE pin to high impedance.

Note 1: The CPU internal register (except to PC, SR, XSP in CPU) and internal RAM data do not change by resetting.

Note 2: It is necessary to re-set up a stack pointer XSP by the user program.

Figure 2-1 is a reset timing chart of the TMP91FW60.

Page 9 2007-10-15


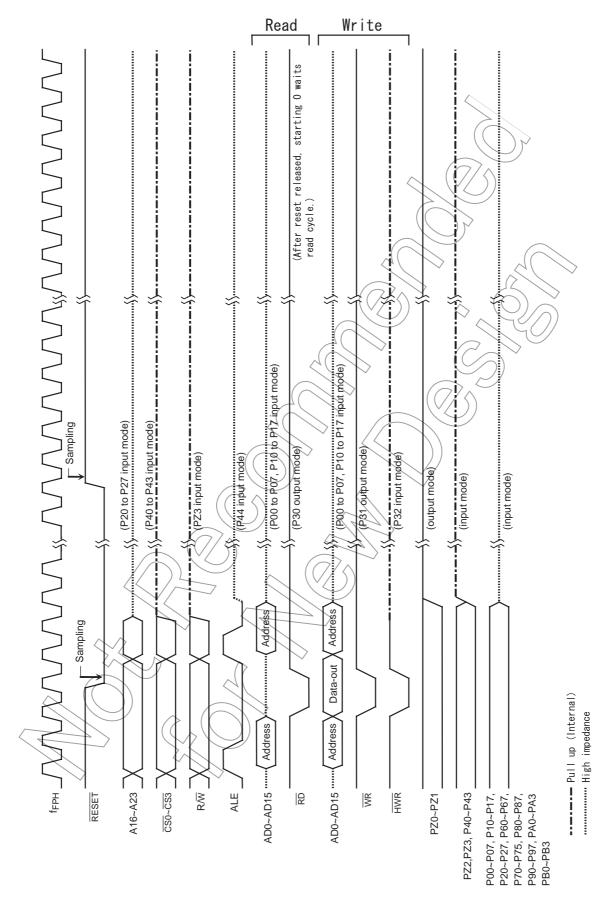


Figure 2-1 TMP91FW60 Reset Timing Chart

Page 10 2007-10-15

2.2 Memory Map

Figure 2-2 is a memory map of the TMP91FW60.

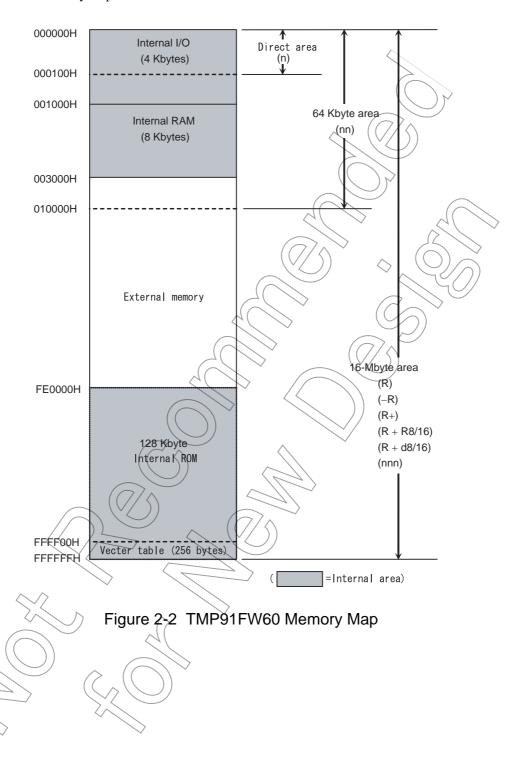

Page 11 2007-10-15

TOSHIBA TMP91FW60

2.3 System Clock Function and Standby Control

TMP91FW60 contains a clock gear, stand-by controller and noise-reduction circuit. It is used for low-noise systems.

The clock operating modes are as follows: (a) Single clock mode (X1 and X2 pins only), (b) Dual clock mode (X1,X2,XT1 and XT2 pins).

Figure 2-3 shows a transition figure.


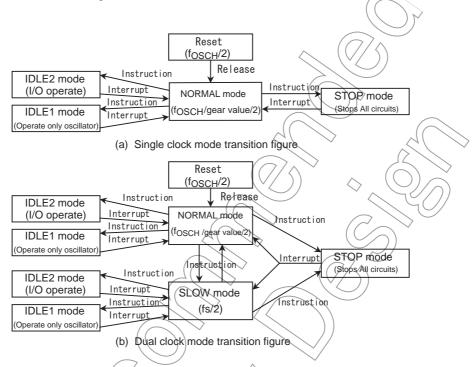


Figure 2-3 TMP91FW60 Clock Operating Mode

Note: The clock frequency input from the X1 and X2 pins is called foscH and the clock frequency input from the XT1 and XT2 pins is called fs. The clock frequency selected by SYSCR1<SYSCK> is called fFPH. The system clock fSYS is defined as the divided clock of fFPH, and one cycle of fSYS is regret to as one state.

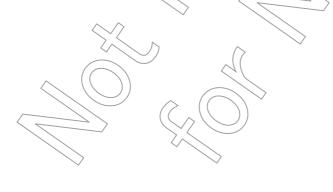

Page 12 2007-10-15

2.3.1 Block Diagram of System Clock

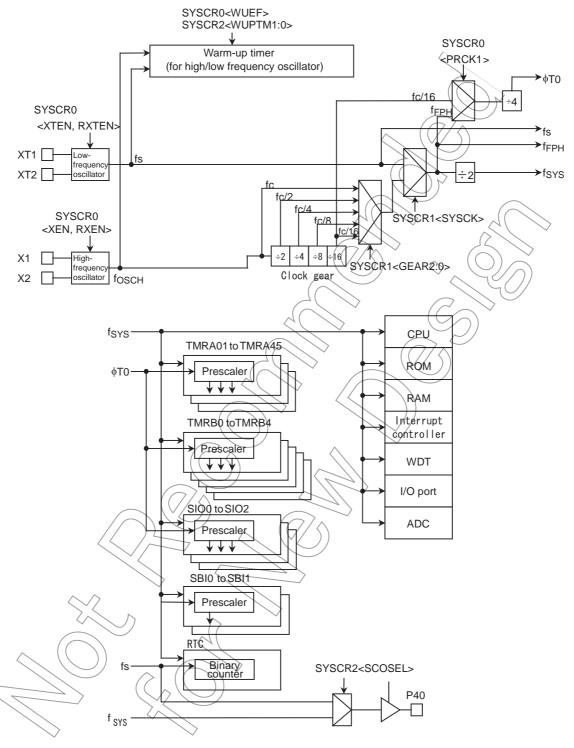


Figure 2-4 Block Diagram of System Clock

Page 13 2007-10-15

2.3.2 SFR

Table 2-1 SFR for System Clock

		7	6	5	4	3	2	1	0
	Bit Symbol	XEN	XTEN	RXEN	RXTEN	RSYSCK	WUEF	PRCK1	-
SYSCRO (00E0H)	Read/Write			•	(\bigcap)		-		
	After reset	1	0	1	0	0	(0	-
	Function	High- frequency oscillator 0:Stop 1:Oscillation	Low- frequency oscillator 0:Stop 1:Oscillation	High- frequency oscillator (fc) after release of STOP mode 0:Stop 1:Oscillation	Low- frequency oscillator (fs) after release of STOP mode 0:Stop 1:Oscillation	Selects clock after release of STOP mode 0:fc	Warm-up timer control 0 Write: Don't care 1 Write: Start warm-up 0 Read: End warm-up 1 Read: Do not end, warm-up	Select pres- caler clock 0:fpp+ 1:fc/16	>
	Bit Symbol	=	=	-		SYSCK	GEAR2	GEAR1	GEAR0
	Read/Write	=	=		\\ -		()) R	/W	
	After reset	=	=	4(-/	> - //	9	0	0	0
SYSCR1 (00E1H)	Function	_				Select system clock 0: fc 1: fs	Select gear v. 000:fc 001:fc/2 010:fc/4 011:fc/8 100:fc/16 101:reserved 110:reserved 111:reserved	alue of high fred	quency (fc)
	Bit Symbol	// -)]	SCOSEL	WUPTM1	/WURTMO	HALTM1	HALTM0	=	DRVE
	Read/Write	\ - /-			R/W	•	•	-	R/W
	After reset	1	0 (0	1	1	-	0
SYSCR2 (00E2H)	Function	<i>→</i>	Select SCOUT 0:fs 1:f _{SYS}	Select warm- oscillator 00:2 ¹⁸ /inputte 01:2 ⁸ /inputte 10:2 ¹⁴ /inputte	ed frequency d frequency ed frequency	HALT mode 00:reserved 01:STOP mo 10:IDLE1 mo 11:IDLE2 mo	de	-	Pin state control in STOP mode 0: I/O off 1: Remains the state before HALT

Note 1: "=" = Don't care

Note 2: SYSCR0<bit0>,SYSCR1<bit 7:4>,SYSCR2<bit7,bit1> are read as undefined value.

Note 3: As for the serial channels \$100, \$IO1 and \$IO2, a baud rate generator is unavailable as an input clock of an I/O interface and a clock for a serial transfer if a prescaler clock is set to fc/16 when \$YSCR0<PRCK1> is "1".

Page 14 2007-10-15

TMP91FW60

2.3.3 System Clock Controller

The system clock controller generates the system clock signal (f_{SYS}) for the CPU core and internal I/O.It contains two oscillation circuits and a clock gear circuit for high-frequency (fc) operation. The register SYSCR1<SYSCK> changes the system clock to either fc or fs, SYSCR0<XEN> and SYSCR0<XTEN> control enabling and disabling of each oscillator, and SYSCR1<GEAR2:0> sets the high-frequency clock gear to either 1, 2, 4, 8 or 16 (fc, fc/2, fc/4, fc/8 or fc/16). These functions can reduce the power consumption of the equipment in which the device is installed.

The combination of settings $\langle XEN \rangle = "1"$, $\langle XTEN \rangle = "0"$, $\langle SYSCK \rangle = "0"$ and $\langle GEAR2:0 \rangle = "000"$ will cause the system clock (f_{SYS}) to be set to fc/2 (=fc x 1/2) after a Reset. For example, f_{SYS} is set to 8 MHz when the 16 MHz oscillator connected to the X1 and X2 pins.

(1) Switching from NORMAL mode to SLOW mode

When the resonator is connected to the X1 and X2 pins, or to the XT1 and XT2 pins, the warm-up timer can be used to change the operation frequency after stable oscillation has been attained.

The warm-up time can be selected using SYSCR2<WUPTM1:0>.

This warm-up timer can be programmed to start and stop as shown in the following examples 1 and 2.

Table 2-2 shows the warm-up time.

Note 1: When using an oscillator (other than a resonator) with stable oscillation, a warm-up timer is not needed.

Note 2: The warm-up timer is operated by an oscillation clock. Hence, there may be some variation in warm-up time.

Note 3: Note of using low-frequency oscillator

When connect low-frequency-oscillator to ports 96 and 97, need below setting for cut consumption power.

(Case of resonators)

Set P9CR<P96C, P97C>= "11", P9<P96:97> = "00"

(Case of oscillator)

Set P9CR<P96C, P97C> = "11", P9<P96:97> = "10"

Table 2-2 Warm-up Times (when changing clock)


	Select Warm-up Time SYSCR2 <wuptm1:0></wuptm1:0>	Change to NORMAL (fc)	Change to SLOW (fs)
	01(28/frequency)	12.8[us]	7.8[ms]
	10(2 ¹⁴ /frequency)	0.819[ms]	500[ms]
/	11(2 ¹⁶ /frequency)	3.277[ms]	2000[ms]
	90(2 ¹⁸ /frequency)	13.107[ms]	8000[ms]

Note: At f_{OSCH}=20MHz, fs=32.768kHz

Page 15 2007-10-15

Example 1:

Changing from high frequency (fc) to low frequency (fs).

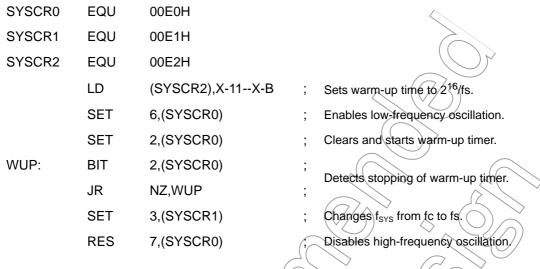

Note: X: Don't care, -: No change

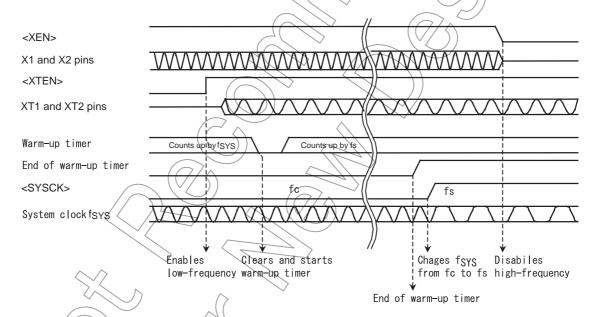


Figure 2-5 Changing from high frequency (fc) to low frequency (fs)

Page 16 2007-10-15

Example 2:

Changing from low frequency (fs) to high frequency (fc).

SYSCR0	EQU	00E0H	
SYSCR1	EQU	00E1H	
SYSCR2	EQU	00E2H	
	LD	(SYSCR2),X-10X-B	; Sets warm-up time to 214/fc.
	SET	7,(SYSCR0)	; Enables high-frequency oscillation.
	SET	2,(SYSCR0)	; Clears and starts warm-up timer.
WUP:	BIT	2,(SYSCR0)	; Detects stopping of warm-up timer.
	JR	NZ,WUP	;
	RES	3,(SYSCR1)	; Changes f _{sys} from fs to fc
	RES	6,(SYSCR0)	; Disables low-frequency oscillation.

Note: X: Don't care, -: No change

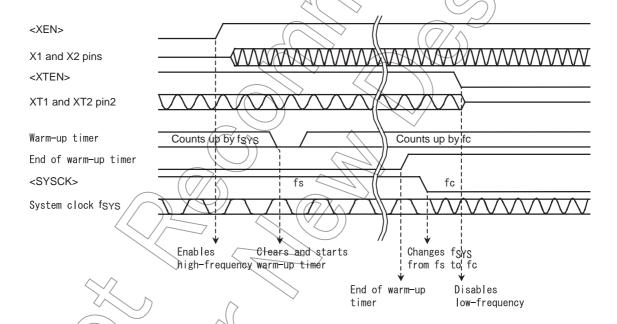


Figure 2-6 Changing from low frequency (fs) to high frequency (fc)

(2) Clock gear controller

When the high-frequency clock fc is selected by setting SYSCR1<SYSCK> = "0", f_{FPH} is set according to the contents of the clock gear select register SYSCR1<GEAR2:0> to either fc, fc/2, fc/4, fc/8 or fc/16. Using the clock gear to select a lower value of f_{FPH} reduces power consumption.

Below show example of changing clock gear.

Page 17 2007-10-15

Example 3:

Changing to a clock gear

SYSCR1 EQU 00E1H

LD (SYSCR1),XXXX0000B ; Changes f_{SYS} to fc/2

X:Don't care

(Clock gear changing)

To change the clock gear, write the register value to the SYSCR1 GEAR2:0> register. It is necessary the warm-up time until changing after writing the register value.

There is the possibility that the instruction next to the clock gear changing instruction is executed by the clock gear before changing. To execute the instruction next to the clock gear switching instruction by the clock gear after changing, input the dummy instruction as follows (instruction to execute the write cycle).

SYSCR1 EQU 00E1H

LD (SYSCR1),XXXX0000B ; Changes f_{SYS}

LD (DUMMY),00H ; Dummy instruction

Instruction to be executed after clock gear has changed.

(3)Internal clock output

The f_{SYS} or fs internal clock can be driven out from the P40/SCOUT pin.

The P40/SCOUT pin is configured as SCOUT (System clock output) by programming the port 4 registers as follows: P4CR<P40C>="1" and P4FC<P40F>= "1". The output clock is selected through the SYSCR2<SCOSEL bit.

Table 2-3 shows the pin states in each clocking mode when the P40/SCOUT pin is configured as SCOUT.

Table 2-3 SCOUT Output States

	NORMAL SLOW	\searrow	HALT mode	_
	NORWAL SLOW	IDLE2	IDLE1	STOP
<scosel>="0"</scosel>	The	fs clock is driven out	t.	HOLD at either "1"
<scosel>="1"</scosel>	The f _{sys} clock is	s driven out.		or "0"

2.3.4 Prescaler Clock Controller

For the internal I/O (TMRA01 to TMRA45, TMRB0 to TMRB4, SIO0 to SIO2, SBI0, SBI1) there is a prescaler which can divide the clock.

The ϕ T0 clock input to the prescaler is either the clock f_{FPH} divided by 2 or the clock fc/16 divided by 4. The setting of the SYSCR0<PRCK1> register determines which clock signal is input.

Page 18 2007-10-15

2.3.5 Runaway provision with SFR protection register

(Purpose)

Provision in runaway of program by noise mixing.

Write operation to specified SFR is prohibited so that provision program in runaway prevents that it is it in the state which is fetch impossibility by stopping of clock, memory control register (CS/WAIT controller) is changed.

Specified SFR list

CS/WAIT controller
 B0CS, B1CS, B2CS, B3CS, BEXCS,
 MSAR0, MSAR1, MSAR2, MSAR3,
 MAMR0, MAMR1, MAMR2, MAMR3

2. Clock gear (write enable only EMCCR1)
SYSCR0, SYSCR1, SYSCR2

Write signal to SFR

(Block diagram)

Protect register EMCCRO<PROTECT>

Write except "1FH" to EMCCR1 S Q
Write "1FH" to EMCCR1 R

-Write signal to specified SFR

- Write signal to other SFR

(Setting method)

If writing except "IFH" code to EMCCR1 register, it become protect ON. By this operation, write operation to specified SFR is disabling.

If writing "1FH" to EMCCR1 register, it become protect OFF. State of protect can to confirm by reading EMCCR0</br>

Table 2-4 SFR for EMCCR

		7	6	√ 5	4	3	2	1	0		
	Bit Symbol	PROTECT	, (-)	-	-	-	-	-	-		
	Read/Write	R)			R/W					
EMCCR0 (00E3H)	After reset	0	0	1	0	0	0	1	1		
(OUESH)	Function	Protect flag 0: OFF 1: ON	Write "0".	Write "1".	Write "0".	Write "0".	Write "0".	Write "1".	Write "1".		
	Bit Symbol										
EMCCR1	Read/Write		Protect OFF by writing "1FH".								
(00E4H)	After reset		Protect ON by writing except "1FH".								
	Function										

Page 19 2007-10-15

2.3.6 Standby Controller

(1)HALT modes

When the HALT instruction is executed, the operating mode switches to IDLE2, IDLE1 or STOP mode, depending on the contents of the SYSCR2<HALTM1:0> register.

The subsequent actions performed in each mode are as follows:

1. IDLE2: Only the CPU halts.

The internal I/O is available to select operation during IDLE2 mode by setting the following register.

Shows the registers of setting operation during IDLE2 mode.

Table 2-5 SFR Setting Operation during IDLE2 Mode

		_		_ / / /
Internal I/O	SFR		Internal I/O	SFR
TMRA01	TA01RUN <i2ta01></i2ta01>		SIO0	SC0MOD1<1250>
TMRA23	TA23RUN <i2ta23></i2ta23>		\$101	SC1MOD1<12S1>
TMRA45	TA45RUN <i2ta45></i2ta45>	4	SIO2	SC2MOD1<12S2>
TMRB0	TB0RUN <i2tb0></i2tb0>		SBIO	SBI0BR <i2sbi0></i2sbi0>
TMRB1	TB1RUN <i2tb1></i2tb1>		SBI1	SBI1BR <i2sbi1></i2sbi1>
TMRB2	TB2RUN <i2tb2></i2tb2>		AD	ADCCR2 <i2ad></i2ad>
TMRB3	TB3RUN <i2tb3></i2tb3>	\geq	WDT	WDMOD <i2wdt></i2wdt>
TMRB4	TB4RUN <i2tb4></i2tb4>			7

- 2. IDLE1: Only the oscillator and the RTC (Real time-clock) continue to operate.
- 3. STOP: All internal circuits stop operating.

The operation of each of the different HALT modes is described in Table 2-6.

Table 2-6 I/O Operation during HALT Modes

	HALT mode		IDLE2	IDLE1	STOP	
	SYSCR2 <haltm1:0></haltm1:0>		<u></u>	10	01	
	CPU (Stop			
_		I/O port	Keep the state when the executed.	he state when the HALT instruction was ed.		
\		TMRA,TMRB				
	L SIO SBI		\Rightarrow	Operate enable		
			Available to select operation block			
		AD			Stop	
	WDT Interrupt controller			3	пор	
			Operate			

Page 20 2007-10-15

OSHIBA TMP91FW60

(2)How to release the HALT mode

These halt states can be released by resetting or requesting an interrupt. The halt release sources are determined by the combination between the states of interrupt mask register <IFF2:0> and the HALT modes. The details for releasing the halt status are shown in Table 2-7.

Released by requesting an interrupt

The operating released from the HALT mode depends on the interrupt enabled status. When the interrupt request level set before executing the HALT instruction exceeds the value of interrupt mask register, the interrupt due to the source is processed after releasing the HALT mode, and CPU status executing an instruction that follows the HALT instruction. When the interrupt request level set before executing the HALT instruction is less than the value of the interrupt mask register, releasing the HALT mode is not executed. (In non-maskable interrupts, interrupt processing is processed after releasing the HALT mode regardless of the value of the mask register.) However only for INTO and RTC interrupts, even if the interrupt request level set before executing the HALT instruction is less than the value of the interrupt mask register, releasing the HALT mode is executed. In this case, interrupt processing, and CPU starts executing the instruction next to the HALT instruction, but the interrupt request flag is held at "1".

Note: Usually, interrupts can release all halts status. However, the interrupts (NMI, INTO, INTRTC) which can release the HALT mode may not be able to do so if they are input during the period CPU is shifting to the HALT mode (for about 5 clocks of f_{FPH}) with IDLE1 or STOP mode (IDLE2 is not applicable to this case). (In this case, an interrupt request is kept on hold internally.) If another interrupt is generated after it has shifted to HALT mode completely, halt status can be released without difficulty. The priority of this interrupt is compared with that of the interrupt kept on hold internally, and the interrupt with higher priority is handled first followed by the other interrupt.

Releasing by resetting

Releasing all halt status is executed by resetting.

When the STOP mode is released by RESET, it is necessary enough resetting time (See Table 2-6) to set the operation of the oscillator to be stable.

When releasing the HALT mode by resetting, the internal RAM data keeps the state before the "HALT" instruction is executed. However the other settings contents are initialized. (Releasing due to interrupts keeps the state before the "HALT" instruction is executed.)

Page 21 2007-10-15

Table 2-7 Source of Halt State Clearance and Halt Clearance Operation


Status of Received Interrupt HALT mode			Interrupt Enable (Interrupt level) ≥ (Interrupt mask)		Interrupt Disable (Interrupt level) < (Interrupt mask)			
			IDLE2	IDLE1	STOP	IDLE2	IDLE1	STOP
		NMI	•	•	♦ *1	-	(-)	
		INTWDT	•	×	×	- (-
Φ		INT0(Note 1)	•	•	♦ *1	$\langle o \rangle$	()o	O*1
clearance		INTRTC	•	•	×	0	0	×
	pt	INT1-INT10	♦ (Note 2)	×	×	\times	×	×
state	Interrupt	INTTA0-INTTA5	•	×	×	*	× <	(X)
Halt	п	INTTB00-40,INTTB01-41	•	×	(X)	×	×	×
Source of Halt state		INTTB0F0-4	•	×		× <	, <u>(</u>)	×
Source		INTRX0-INTRX2,TX0-TX2	•	× ((×	×	X	//×
0,		INTSBI0-1	•	×(×	× ((\nearrow	×
		INTAD	•	X	> ×	(*7)	×	×
		RESET	Initialize LSI					

- ♦: After clearing the HALT mode, CPU starts interrupt processing.
- O:After clearing the HALT mode, CPU resumes executing starting from instruction following the HALT instruction. (Interrupt routine don't execute.)
- ×:It can not be used to release the HALT mode.
- :The priority level (Interrupt request level) of non-maskable interrupts is fixed to 7, the highest priority level. There is not this combination type.
- *1:Releasing the HALT mode is executed after passing the warm-up time.
- Note 1: When the HALT mode is cleared by an INTO interrupt of the level mode in the interrupt enabled status, hold high level until starting interrupt process. If low level was set before interrupt process is stared, interrupt process is not started correctly.
- Note 2: If using external interrupt INT1 to INT10 in IDLE2 mode, set 16-bit timer RUN register TB0RUN</2TB0>, TB1RUN</2TB1>, TB2RUN</2TB2>, TB3RUN</2TB3>, TB4RUN</2TB4> to "1".

Page 22 2007-10-15

Example:Clearing halt state

An INT0 interrupt clears the halt state when the device is in IDLE1 mode.

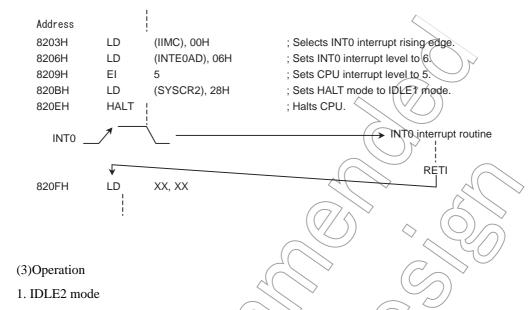

In IDLE2 mode only specific internal I/O operations, as designated by the IDLE2 setting register, can take place. Instruction execution by the CPU stops.

Figure 2-7 illustrates an example of the timing for clearance of the IDLE2 mode halt state by an interrupt.

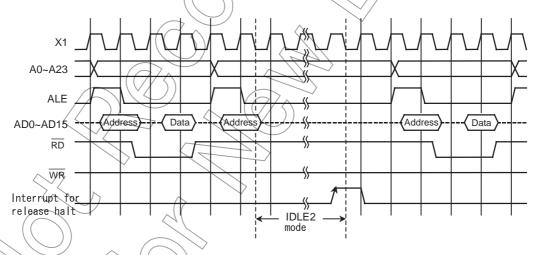


Figure 2-7 Timing Chart for IDLE2 Mode Halt State Cleared by Interrupt

Page 23 2007-10-15

2. IDLE1 mode

In IDLE1 mode, only the internal oscillator and the RTC continue to operate. The system clock in the MCU stops.

In the halt state, the interrupt request is sampled asynchronously with the system clock; however, clearance of the Halt state (e.g., restart of operation) is synchronous with it.

Figure 2-8 illustrates the timing for clearance of the IDLE1 mode halt state by an interrupt.


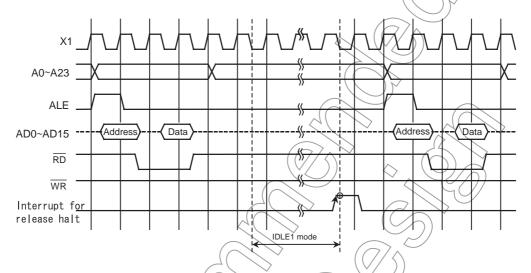


Figure 2-8 Timing Chart for LDLE1 Mode Halt State Cleared by Interrupt

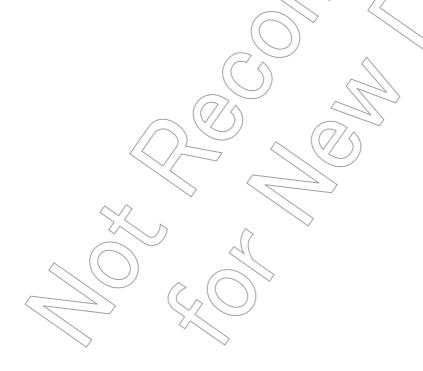

Page 24 2007-10-15

3. STOP mode

When STOP mode is selected, all internal circuits stop, including the internal oscillator. Pin status in STOP mode depends on the settings in the SYSCR2<DRVE> register. Table 2-9 summarizes the state of these pins in STOP mode.

After STOP mode has been cleared, system clock output starts when the warm-up time has elapsed, in order to allow oscillation to stabilize. After STOP mode has been cleared, either NORMAL mode or SLOW mode can be selected using the SYSCRO<RSYSCK> register. Therefore, RSYSCK>, RSYSCK>, RXEN> and RXTEN> must be set. See the sample warm-up times in Table 2-8.

Figure 2-9 illustrates the timing for clearance of the STOP mode halt state by an interrupt.

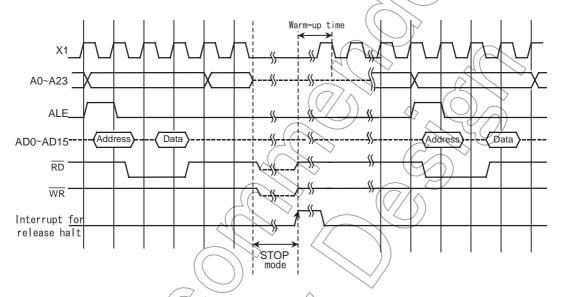


Figure 2-9 Timing Chart for STOP Mode Halt State Cleared by Interrupt

Table 2-8 Sample Warm-up Times after Clearance of STOP Mode


SYSCR0	SYSCR2 <wuptm1:0></wuptm1:0>					
<rsysck></rsysck>	01(28)	10(2 ¹⁴)	11(2 ¹⁶)	00(2 ¹⁸)		
0(fc)	12.8us	0.819ms	3.277ms	13.107ms		
1(fs)	7.8ms	500ms	2000ms	8000ms		

Note: foscH=20MHz, fs=32:768kHz

Page 25 2007-10-15

Example:

"The STOP mode is entered when the low-frequency operates, and high-frequency operates after releasing due to NMI.

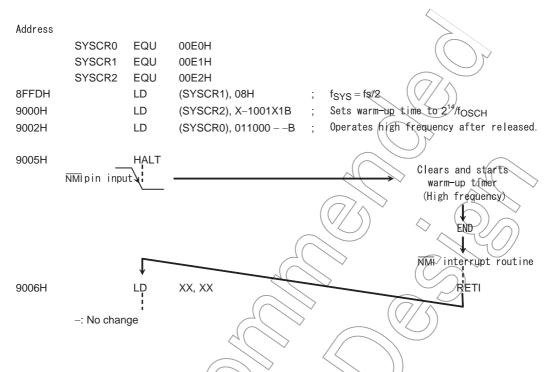

Note: When different modes are used before and after STOP mode as the above mentioned, there is possible to release the HALT mode without changing the operation mode by acceptance of the halt release interrupt request during execution of "HALT" instruction (during 6 state). In the system which accepts the interrupts during execution "HALT" instruction, set the same operation mode before and after the STOP mode.



Page 26 2007-10-15

Table 2-9 Input/output Buffer State Table

Port Name	Input / Output	<drve>=0</drve>	<drve>=1</drve>
P00-07	input mode output mode AD0-AD7		- output
P10-17	input mode output mode AD8-AD15		output
P20-27	input mode output mode,A0-A7/A16-A23	-	output
PZ0(RD),PZ1(WR)	output	- ((output
PZ2(HWR),PZ3(R/W)	input mode output mode	PU* PU*	PU* output
P30-33	input mode output mode		output
P40-44	input mode output mode	PU*	PU*
P50-57	input mode output mode analog input		output
P60-67	input mode output mode analog input		output -
P70-74	input mode output mode	(-)	input output
P75	input mode output mode	input -	input output
P80-87	input mode output mode		- output
P90-97	input mode / output mode		- output
PA0-A3	input mode output mode	<u> </u>	- output
PB0-B3	input mode output mode	-	- output
(NMJ/)	input	input	input
RESET	input	input	input
AMQ,AM1	input	input	input
(X1)	input	-	-
X2 (output	"H" level output	"H" level output

Input for input mode / input pins is invalid; output mode / output pin is at high impedance.

input: Input gate in operation. Fix input voltage to "L" or "H" so that input pin stays constant.

output: Output state

PU*: Programmable pull-up pin. Input gate disable state. No through current even if the pin is set high impedance.

Page 27 2007-10-15

TOSHIBA TMP91FW60

Interrupts

Interrupts are controlled by the CPU interrupt mask register SR<IFF2:0> and by the built-in interrupt controller.

The TMP91FW60 has a total of 57 interrupts divided into the following three types:

- Interrupts generated by CPU: 9 sources (Software interrupts, illegal instruction interrupt)
- Interrupts on external pins (NMI, INT0 to INT10): 12 sources
- Internal interrupts: 36 sources

A (fixed) individual interrupt vector number is assigned to each interrupt.

One of six (Variable) priority level can be assigned to each maskable interrupt.

The priority level of non-maskable interrupts are fixed at 7 as the highest level.

When an interrupt is generated, the interrupt controller sends the priority of that interrupt to the CPU. If multiple interrupts are generated simultaneously, the interrupt controller sends the interrupt with the highest priority to the CPU. (The highest priority is level 7 using for non-maskable interrupts.)

The CPU compares the priority level of the interrupt with the value of the CPU interrupt mask register <IFF2:0>. If the priority level of the interrupt is higher than the value of the interrupt mask register, the CPU accepts the interrupt.

The interrupt mask register <IFF2:0> value can be updated using the value of the EI instruction ("EI num" sets <IFF2:0> data to num).


For example, specifying "EI3" enables the maskable interrupts which priority level set in the interrupt controller is 3 or higher, and also non-maskable interrupts.

Operationally, the DI instruction (IFF2:0> "7") is identical to the "EI7" instruction. DI instruction is used to disable maskable interrupts because of the priority level of maskable interrupts is 0 to 6. The EI instruction is valid immediately after execution.

In addition to the above general-purpose interrupt processing mode, TLCS-900/L1 has a micro DMA interrupt processing mode as well. The CPU can transfer the data (1/2/4 bytes) automatically in micro DMA mode, therefore this mode is used for speed-up interrupt processing, such as transferring data to the internal or external peripheral I/O. Moreover, TMP91FW60 has software start function for micro DMA processing request by the software not by the hardware interrupt.

Figure 3-1 shows the overall interrupt processing flow.

Page 28 2007-10-15

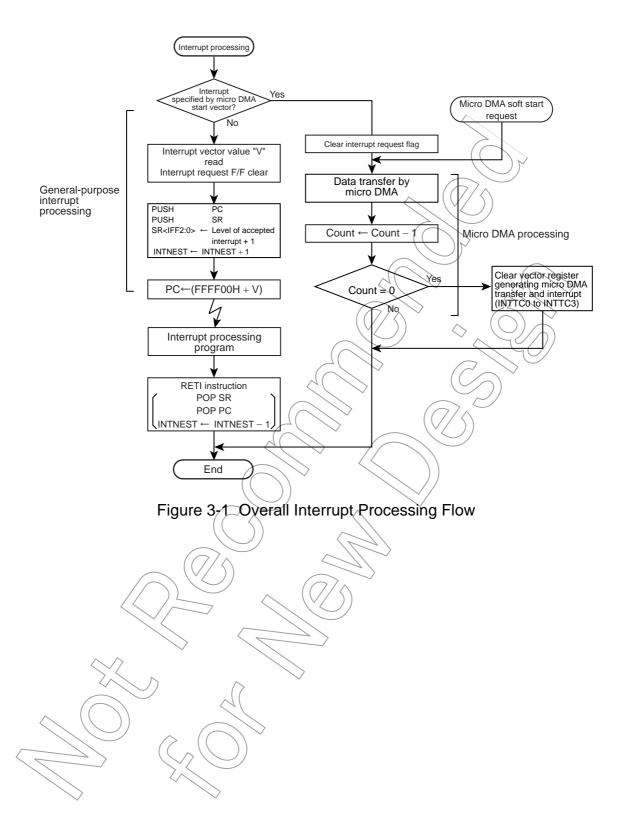

Page 29 2007-10-15

TOSHIBA TMP91FW60

3.1 General-purpose Interrupt Processing

When the CPU accepts an interrupt, it usually performs the following sequence of operations. That is also the same as TLCS-900/L and TLCS-900/H.

- 1. The CPU reads the interrupt vector from the interrupt controller.

 If the same level interrupts occur simultaneously, the interrupt controller generates an interrupt vector in accordance with the default priority and clears the interrupt request.

 (The default priority is already fixed for each interrupt. The smaller vector value has the higher priority level.)
- 2. The CPU pushes the value of program counter (PC) and status register (SR) onto the stack area (Indicated by XSP).
- 3. The CPU sets the value which is the priority level of the accepted interrupt plus 1 (+1) to the interrupt mask register <IFF2:0>. However, if the priority level of the accepted interrupt is 7, the register's value is set to 7.
- 4. The CPU increases the interrupt nesting counter INTNEST by 1 (+1).
- 5. The CPU jumps to the address indicated by the data at address "FFFF00H + Interrupt vector" and starts the interrupt processing routine.

The above processing time is 18 states (1.8 µs at 20 MHz) as the best case (16-bit data bus width and 0 waits).

When the CPU completed the interrupt processing, use the RETI instruction to return to the main routine. RETI restores the contents of program counter (PC) and status register (SR) from the stack and decreases the interrupt nesting counter INTNEST by 1 (-1).

Non-maskable interrupts cannot be disabled by a user program. Maskable interrupts, however, can be enabled or disabled by a user program. A program can set the priority level for each interrupt source. (A priority level setting of 0 or 7 will disable an interrupt request.)

If an interrupt request which has a priority level equal to or greater than the value of the CPU interrupt mask register <IFF2:0> comes out, the CPU accepts its interrupt. Then, the CPU interrupt mask register <IFF2:0> is set to the value of the priority level for the accepted interrupt plus 1 (+1).

Therefore, if an interrupt is generated with a higher level than the current interrupt during its processing, the CPU accepts the later interrupt and goes to the nesting status of interrupt processing.

Moreover, if the CPU receives another interrupt request while performing the said 1. to 5. processing steps of the current interrupt, the latest interrupt request is sampled immediately after execution of the first instruction of the current interrupt processing routine. Specifying DL as the start instruction disables maskable interrupt nesting.

A reset initializes the interrupt mask register <IFF2:0> to "111", disabling all maskable interrupts.

Table 3-1 shows the TMP91FW60 interrupt vectors and micro DMA start vectors. The address FFFF00H to FFFFFFH (256 bytes) is assigned for the interrupt vector area.

Page 30 2007-10-15

Table 3-1 TMP91FW60 Interrupt Vectors Table(1/2)

Default Priority	Туре	Interrupt Source and Source of Micro DMA Request	Vector Value (V)	Vector Reference Address	Micro DMA Start Vector
1		"Reset" or "SWI 0" instruction	0000H	FFFF00H	-
2		"SWI 1" instruction	0004H	FFFF04H	_
3		INTUNDEF: Illegal instruction or "SWI 2" instruction	0008H	FFFF08H	-
4		"SWI 3" instruction	000CH	FFFF0CH	-
5	Non-	"SWI 4" instruction	(0010H)	FFFF10H	-
6	maskable	"SWI 5" instruction	0014H	FFFF14H	_
7		"SWI 6" instruction	0018H	FFFF18H	_
8		"SWI 7" instruction	001CH	FFFF1CH	_
9		NMI:NMI pin	0020H	FFFF20H	> -
10		INTWD: Watchdog timer	0024H	FFFF24H	_
_		Micro DMA (MDMA)	\Diamond (9)	_
11		INTO: INTO pin	0028H	FFFF28H	0AH
12		INT1: INT1 pin	002CH	FFFF2CH	0BH
13		INT2: INT2 pin	0030H	FFFF30H	0CH
14		INT3: INT3 pin	0034H	FFFF34H	0DH
15		INT4: INT4 pin	0038H	FFFF38H	0EH
16		INT5: INT5 pin	003CH	FFFF3CH	0FH
17		INT6: INT6 pin	0040H	FFFF40H	10H
18		INT7: INT7 pin	0044H	FFFF44H	11H
19		INT8: INT8 pin	0048H	FFFF48H	12H
20		INT9: INT9-pin	004CH	FFFF4CH	13H
21		INT10: (NT10 pin	0050H	FFFF50H	14H
22		INTTAO: 8-bit timer 0	0054H	FFFF54H	15H
23	Maskable	INT/TA1: 8-bit/timer 1	0058H	FFFF58H	16H
24	iviaskable	INTTA2: 8-bit timer 2	005CH	FFFF5CH	17H
25	\wedge \wedge	INTTA3: 8-bit timer 3	0060H	FFFF60H	18H
26	7/	INTTA4: 8-bit timer 4	0064H	FFFF64H	19H
27		INTTA5: 8-bit timer 5	0068H	FFFF68H	1AH
28	$((\))$	INTTB00: 16-bit timer 0 (TB0RG0)	006CH	FFFF6CH	1BH
29		INTTB01: 16-bit timer 0 (TB0RG1)	0070H	FFFF70H	1CH
30		INTTB10: 16-bit timer 1 (TB1RG0)	0074H	FFFF74H	1DH
31		INTTB11: 16-bit timer 1 (TB1RG1)	0078H	FFFF78H	1EH
32		INTTB20: 16-bit timer 2 (TB2RG0)	007CH	FFFF7CH	1FH
33		INTTB21: 16-bit timer 2 (TB2RG1)	0080H	FFFF80H	20H
34		INTTB30: 16-bit timer 3 (TB3RG0)	0084H	FFFF84H	21H
35		INTTB31: 16-bit timer 3 (TB3RG1)	0088H	FFFF88H	22H
36		INTTB40: 16-bit timer 4 (TB4RG0)	008CH	FFFF8CH	23H
37		INTTB41: 16-bit timer 4 (TB4RG1)	0090H	FFFF90H	24H

Page 31 2007-10-15

Table 3-1 TMP91FW60 Interrupt Vectors Table(2/2)

Default Priority	Туре	Interrupt Source and Source of Micro DMA Request	Vector Value (V)	Vector Reference Address	Micro DMA Start Vector
38		INTTBOF0: 16-bit timer 0 (Over flow)	0094H	FFFF94H	25H
39		INTTBOF1: 16-bit timer 1 (Over flow)	0098H	FFFF98H	26H
40		INTTBOF2: 16-bit timer 2 (Over flow)	009CH	FFFF9CH	27H
41		INTTBOF3: 16-bit timer 3 (Over flow)	00A0H	FFFFA0H	28H
42		INTTBOF4: 16-bit timer 4 (Over flow)	00A4H	FFFFA4H	29H
43		INTRX0:Serial reception (Channel 0)	(00A8H	FFFFA8H	2AH
44		INTTX0:Serial transmission (Channel 0)	00ACH	FFFFACH	2BH
45		INTRX1:Serial reception (Channel 1)	00В0Н	FFFFB0H	2CH
46		INTTX1:Serial transmission (Channel 1)	00B4H	FFFFB4H	2DH
47		INTRX2:Serial reception (Channel 2)	> 00B8H	FFFFB8H	2EH
48	Maskable	INTTX2:Serial transmission (Channel 2)	00BCH	FFFFBCH	2FH
49		INTSBI0:Serial bus interface interrupt (Channel 0)	00С0Н (FFFFC0H	30H
50		INTSBI1:Serial bus interface interrupt (Channel 1)	00C4H	FFFFC4H	31H
51		INTRTC: Interrupt for special timer for CLOCK	00C8H	FFFFC8H	32H
52		INTAD: AD conversion end	ооссн	FFFFCCH	33H
53		INTTC0 Micro DMA end (Channel 0)	00D0H	FFFFD0H	-
54		INTTC1: Micro DMA end (Channel 1)	00D4H	FFFFD4H	_
55		INTTC2: Micro DMA end (Channel 2)	00D8H	FFFFD8H	_
56		INTTC3: Micro DMA end (Channel 3)) 00DCH	FFFFDCH	_
		(Reserved)	00E0H	FFFFE0H	_
		(Reserved)	: 00FCH	: FFFFFCH	: -

Note: Micro DMA default priority: Micro DMA stands up prior to other maskable interrupt.



TOSHIBA TMP91FW60

3.2 Micro DMA Processing

In addition to general-purpose interrupt processing, the TMP91FW60 supports a micro DMA function. Interrupt requests set by micro DMA perform micro DMA processing at the highest priority level (Level 6) among maskable interrupts, regardless of the priority level of the particular interrupt source. The micro DMA has 4 channels and is possible continuous transmission by specifying the described later burst mode.

The micro DMA has 4 channels and is possible continuous transmission by specifying the described later burst mode.

Because the micro DMA function has been implemented with the cooperative operation of CPU, when CPU goes to a standby mode (STOP, IDLE1 and IDLE2) by HALT instruction, the requirement of micro DMA will be ignored (Pending) and DMA transfer is started after release HALT.

3.2.1 Micro DMA Operation

When an interrupt request specified by the micro DMA start vector register is generated, the micro DMA triggers a micro DMA request to the CPU at interrupt priority level 6 and starts processing the request in spite of any interrupt source's level. The micro DMA is ignored on <IFF2:0> = "7".

The 4 micro DMA channels allow micro DMA processing to be set for up to 4 types of interrupts at any one time. When micro DMA is accepted, the interrupt request flip-flop assigned to that channel is cleared.

The data are automatically transferred once (1/2/4 bytes) from the transfer source address to the transfer destination address set in the control register, and the transfer counter is decreased by 1 (-1). If the decreased result is "0", the micro DMA transfer end interrupt (INTTC0 to INTTC3) passes from the CPU to the interrupt controller. In addition, the micro DMA start vector register DMAnV is cleared to 0, the next micro DMA is disabled and micro DMA processing completes. If the decreased result is other than "0", the micro DMA processing completes if it does not specify the described later burst mode. In this case, the micro DMA transfer end interrupt (INTTC0 to INTTC3) aren't generated.

If an interrupt request is triggered for the interrupt source in use during the interval between the clearing of the micro DMA start vector and the next setting, general-purpose interrupt processing executes at the interrupt level set. Therefore, if only using the interrupt for starting the micro DMA (Not using the interrupts as a general-purpose interrupt: Level 1 to 6), first set the interrupts level to 0 (Interrupt requests disabled).

If using micro DMA and general-purpose interrupts together, first set the level of the interrupt used to start micro DMA processing lower than all the other interrupt levels. (Note) In this case, the cause of general interrupt is limited to the edge interrupt.

The priority of the micro DMA transfer end interrupt (INTTC0 to INTTC3) is defined by the interrupt level and the default priority as the same as the other maskable interrupt.

If a micro DMA request is set for more than one channel at the same time, the priority is not based on the interrupt priority level but on the channel number. The smaller channel number has the higher priority (Channel 0 (High) > Channel 3 (Low)).

While the register for setting the transfer source/transfer destination addresses is a 32-bit control register, this register can only effectively output 24-bit addresses. Accordingly, micro DMA can access 16 Mbytes (The upper eight bits of the 32 bits are not valid).

Note: If the priority level of micro DMA is set higher than that of other interrupts, CPU operates as follows.

In case INTxxx interrupt is generated first and then INTyyy interrupt is generated between checking "Interrupt specified by micro DMA start vector" (in the Figure 3-1) and reading interrupt vector with setting below, the vector shifts to that of INTyyy at the time.

This is because the priority level of INTyyy is higher than that of INTxxx.

In the interrupt routine, CPU reads the vector of INTyyy because checking of micro DMA has been finished. And INTyyy is generated regardless of transfer counter of micro DMA.

INTxxx: level 1 without micro DMA INTyyy: level 6 with micro DMA

Page 33 2007-10-15

Three micro DMA transfer modes are supported: 1-byte transfer, 2-byte (One-word) transfer, and 4-byte transfer. After a transfer in any mode, the transfer source/destination addresses are increased, decreased, or remain unchanged.

This simplifies the transfer of data from I/O to memory, from memory to I/O, and from I/O to I/O. For details of the transfer modes, see" 3.2.4 Detailed Description of the Transfer Mode Register ".

As the transfer counter is a 16-bit counter, micro DMA processing can be set for up to 65536 times per interrupt source. (The micro DMA processing count is maximized when the transfer counter initial value is set to 0000H.)

Micro DMA processing can be started by the 42 interrupts shown in the micro DMA start vectors of Table 3-1 and by the micro DMA soft start, making a total of 43 interrupts.

Figure 3-2 shows the word transfer micro DMA cycle in transfer destination address INC mode (except for counter mode, the same as for other modes).

(The conditions for this cycle are based on an external 16-bit bus, 0 waits, transfer source/transfer destination addresses both even-numberd values).

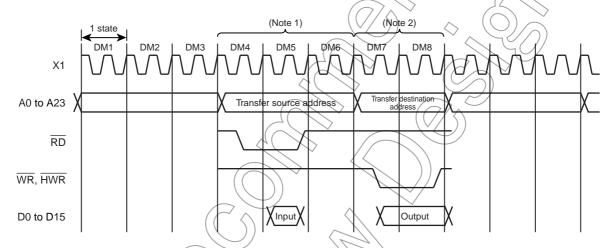


Figure 3-2 Timing for Micro DMA Cycle

States 1 to 3: Instruction fetch cycle (Gets next address code).

If 3 bytes and more instruction codes are inserted in the instruction queue buffer, this cycle becomes a dummy cycle.

States 4 to 5: Micro DMA read cycle

State 6: Dummy cycle (The address bus remains unchanged from state 5.)

States 7 to 8: Micro DMA write cycle

Note 1: If the source address area is an 8-bit bus, it is increased by two states.

If the source address area is a 16-bit bus and the address starts from an odd number, it is increased by two states.

Note 2: If the destination address area is an 8-bit bus, it is increased by two states.

If the destination address area is a 16-bit bus and the address starts from an odd number, it is increased by two states.

Page 34 2007-10-15

3.2.2 Soft Start Function

In addition to starting the micro DMA function by interrupts, TMP91FW60 includes a micro DMA software start function that starts micro DMA on the generation of the write cycle to the DMAR register.

Writing "1" to each bit of DMAR register causes micro DMA once (If write "0" to each bit, micro DMA doesn't operate) At the end of transfer, the corresponding bit of the DMAR register is automatically cleared to "0".

Only one-channel can be set once for micro DMA. (Do not write "1" to plural bits.)


When writing again "1" to the DMAR register, check whether the bit is "0" before writing "1". If read "1", micro DMA transfer isn't started yet.

When a burst is specified by DMAB register, data is continuously transferred until the value in the micro DMA transfer counter is "0" after start up of the micro DMA. If execute soft start during micro DMA transfer by interrupt source, micro DMA transfer counter doesn't change. Don't use Read-modify-write instruction to avoid writing to other bits by mistake.

Symbol	Name	Address	7	6	\(\sqrt{5} \)	4	3 ((2)	1	0		
	89H	ı	-		> -	DMAR3	DMAR2	DMAR1	DMAR0			
5,,,,,	DMA	instructions	-	-	7(-/>	-)) R	N			
DMAR	Request Register		-	-4(<u>-</u>	<i>F</i>		0	0	0		
	-	are prohib- ited.						DMA request				

3.2.3 Transfer Control Registers

The transfer source address and the transfer destination address are set in the following registers in CPU. Data setting for these registers is done by an "LDC cr, r" instruction.

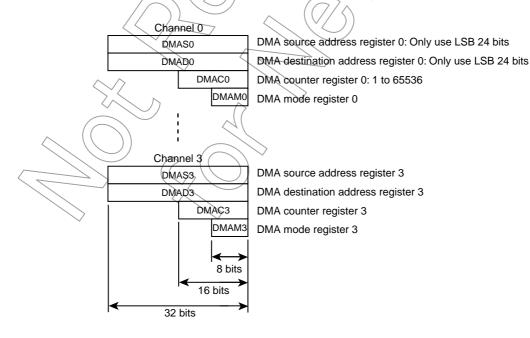

Page 35 2007-10-15

3.2.4 Detailed Description of the Transfer Mode Register

	(DMAM0 to DMAM3)									
	0	0	0		Mode Note: The upper three bit of data programmed to these regist	ers must always be 0.				
<u></u>		<u> </u>	 	<u> </u>	ZZ: 0 = Byte transfer, 1 = Word transfer, 2 = 4-byte transfer, 3 = Reserved	Execution time				
0	0	0	z	Z	Transfer destination address INC mode · · · · · · · · I/O to memory (DMADn+) ← (DMASn) DMACn ← DMACn − 1	8 states (800 ns) @ byte/word transfer 12 states (1200 ns)				
					if DMACn = 0 then INTTC is generated	@ 4-byte/word transfer				
	0	1	Z	Z	Transfer destination address DEC mode · · · · · · · · //O to memory (DMADn-) ← (DMASn)	8 states (800 ns) @ byte/word transfer				
	0 0 1	1	۷	۷	DMACn ← DMACn − 1 if DMACn = 0 then INTTC is generated	12 states (1200 ns) @ 4-byte/word transfer				
			_	_	Transfer source address INT mode · · · · · · · · · · · · · · memory to I/O (DMADn) ← (DMASn+)	8 states (800 ns) @ byte/word transfer				
0	1	0	Z	Z	DMACn ← DMACn − 1 if DMACn = 0 then INTTC is generated	12 states (1200 ns) @ 4-byte/word transfer				
	4	4	Z		Z	Transfer source address DEC mode · · · · · · · memory to t/O (DMADn) ← (DMASn-)	8 states (800 ns) @ byte/word transfer			
0	1	1	۷	۷	DMACn ← DMACn − 1 if DMACn = 0 then INTTC is generated	12 states (1200 ns) @ 4-byte/word transfer				
4	0	0	Z	7	Address fixed mode · · · · · · · · · · · · · · · · · · ·	8 states (800 ns) @ byte/word transfer				
1	U	0		Z Z	DMACn ← DMACn − 1 if DMACn = 0 then INTTC is generated	12 states (1200 ns) @ 4-byte/word transfer				
1	0	1	0	0	Counter mode for counting number of times interrupt is generated DMASn ← DMASn + 1	5 states				
	3		Ü	0	DMACn ← DMACn → 1 if DMACn = 0 then INTTC is generated	(500 ns)				

Note 1: "n" is the corresponding micro DMA channels 0 to 3.

DMADn+/DMASn+: Post-increment (Increment register value after transfer)

DMADn-/DMASn-: Post-decrement (Decrement register value after transfer)

The I/Os in the table mean fixed address and the memory means increment (INC) or decrement (DEC) addresses.

Note 2: Execution time is under the condition of:

16-bit bus width (Both transfer and destination address area)/0 waits/

 $fc = 20 \text{ MHz/selected high-frequency mode (fc <math>\times$ 1)

Note 3: Do not use an undefined code for the transfer mode register except for the defined codes listed in the above table.

Page 36 2007-10-15

TOSHIBA TMP91FW60

3.3 Interrupt Controller Operation

The block diagram in Figure 3-3 shows the interrupt circuits. The left-hand side of the diagram shows the interrupt controller circuit. The right-hand side shows the CPU interrupt request signal circuit and the halt release circuit.

For interrupt controller there is an interrupt request flag (Consisting of a flip-flop), an interrupt priority setting register and a micro DMA start vector register. The interrupt request flag latches interrupt requests from the peripherals. The flag is cleared to 0 in the following cases:

- · When reset occurs
- When the CPU reads the channel vector after accepted its interrupt
- When executing an instruction that clears the interrupt (Write DMA start vector to INTCLR register)
- When the CPU receives a micro DMA request (when micro DMA is set)
- When the micro DMA burst transfer is terminated

An interrupt priority can be set independently for each interrupt source by writing the priority to the interrupt priority setting register (e.g., INTE0AD or INTE56). 6 interrupt priorities levels (1 to 6) are provided. Setting an interrupt source's priority level to 0 (or 7) disables interrupt requests from that source. The priority of non-maskable interrupts (NMI pin interrupts and watchdog timer interrupts) is fixed at 7. If interrupt request with the same level are generated at the same time, the default priority is used to determine which interrupt request is accepted first.

The 3rd and 7th bits of the interrupt priority setting register indicate the state of the interrupt request flag and thus whether an interrupt request for a given channel has occurred.

The interrupt controller sends the interrupt request and its vector address to the CPU. The CPU compares the priority value <IFF2:0> in the status register by the interrupt request signal with the priority value set; if the latter is higher, the interrupt is accepted. Then the CPU sets a value higher than the priority value by 1 (+1) in the CPU SR<IFF2:0>. Interrupt request where the priority value equals or is higher than the set value are accepted simultaneously during the previous interrupt routine.

When interrupt processing is completed (after execution of the RETI instruction), the CPU restores the priority value saved in the stack before the interrupt was generated to the CPU SR<IFF2:0>.

The interrupt controller also has registers (4 channels) used to store the micro DMA start vector. Writing the start vector of the interrupt source for the micro DMA processing beforehand (see Table 3-1), enables the corresponding interrupt to be processed by micro DMA processing. The values must be set in the micro DMA parameter register (e.g., DMAS and DMAD) prior to the micro DMA processing.

Page 37 2007-10-15

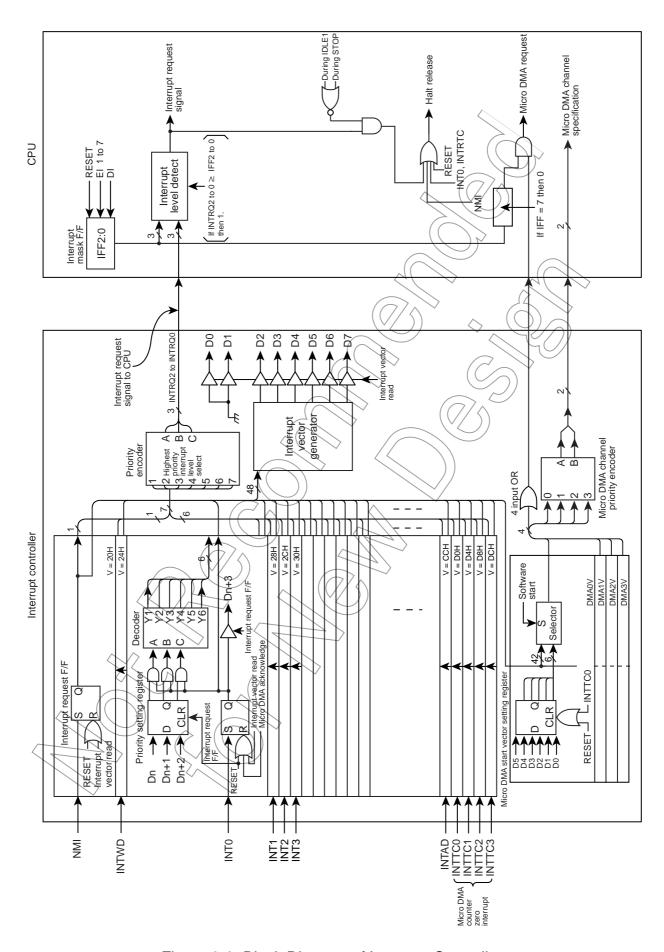


Figure 3-3 Block Diagram of Interrupt Controller

Page 38 2007-10-15

3.3.1 Interrupt Level Setting Registers

Interrupt Level Setting Registers

Symbol	Name	Address	7	6	5	4	3	2	1	0		
		90H		IN	TAD			II	NT0			
INTO & INTAD	INTO &		IADC	IADM2	IADM1	IADM0	IOC	10M2	IOM1	IOMO		
INTEUAD	enable		R		R/W		R		R/W			
			0	0	0	0	0	0	0	0		
			INT2						NT1	R/W		
INTE12	INT1 & INT2	91H	I2C	I2M2	I2M1	I2M0	TTG	I1M2	I1M1	I1M0		
INTLIZ	enable	9111	R		R/W		R		R/W			
			0	0	0	0	0	0	0	0		
				11	NT4		,		143			
INTE34	INT3 & INT4	92H	I4C	14M2	I4M1	14M0	V I3C	13M2	13M1	I3M0		
IIVI L34	enable	9211	R		R/W		R 🔷)}	R/W			
			0	0	0 (0	0	0	<u> </u>	0		
			INT6				((NT5			
INTE56	INT5 & INT6	93H	I6C	I6M2	I6M1	I6M0	I5C	_15M2	I5M1	I5M0		
1141230	enable	9311	R		R/W	/	(R)/<		R/W			
			0	0,(0	0		0	0	0		
			INT8				IN	INT7				
INTE78	INT7 & INT8	94H	I8C	(18M2)	18M1	I8M0	J7C	I7M2	I7M1	I7M0		
	enable	0	R		R/W	_	√ R		R/W			
			0((0	0	0	0	0	0	0		
					T10		INT9					
INTE910	INT9 & INT10	95H	(110¢ \	I10M2	I10M1	110M0	I9C	I9M2	I9M1	19M0		
	enable		R		(R/W)	~	R		R/W			
			9	0		0	0	0	0	0		
INTETA01		,	INTTA1(TMRA1)					INTTA0 (TMRA0)				
	INTTA0 & INTTA1 enable	96H	> ITA1C	ITA1M2	ITA1M1	ITA1M0	ITA0C	ITA0M2	ITA0M1	ITA0M0		
		7	R		→ R/W	Г	R		R/W	1		
		$\langle \vee \rangle$	0) 0	0	0	0	0	0	0		

IxxxC
Interrupt request flag

lxxM2	lxxM1	IxxM0	Function (Write)
0	0	0	Disables interrupt requests
0	0	1	Sets interrupt priority level to 1
0	1	0	Sets interrupt priority level to 2
0	1	1	Sets interrupt priority level to 3
1	0	0	Sets interrupt priority level to 4
1	0	1	Sets interrupt priority level to 5
1	1	0	Sets interrupt priority level to 6
1	1	1	Disables interrupt requests

Page 39 2007-10-15

Interrupt Level Setting Registers

Symbol	Name	Address	7	6	5	4	3	2	1	0	
				INTTA3	(TMRA3)			INTTA2	(TMRA2)		
	INTTA2 & INTTA3	97H	ITA3C	ITA3M2	ITA3M1	ITA3M0	ITA2C <	ITA2M2	ITA2M1	ITA2M0	
INTETA23	enable		R		R/W		R		R/W		
			0	0	0	0	0	((0))	0	0	
				INTTA5	(TMRA5)			INITA4	(TMRA4)		
INTETA45	INTTA4 & INTTA5	98H	ITA5C	ITA5M2	ITA5M1	ITA5M0	ITA4C//	JTA4M2	ITA4M1	ITA4M0	
INTETA45	enable	9011	R		R/W		R		R/W		
			0	0	0	0	(0)	0	0	0	
				INTTB01	(TMRB0))	INTTB00	(TMRB0)		
INTETB0	Interrupt enable	0011	ITB01C	ITB01M2	ITB01M1	ITB01M0	11B00C	ITB00M2	ITB00M1	ITB00M0	
INTLIBO	TMRB0	99H	R		R/W		R		R/W		
			0	0	0	(//0 \)	0 🚫	(\bigcirc)	0	0	
				INTTB11	(TMRB1)		V	INTTB10(TMRB1)			
INTETB1	Interrupt enable TMRB1	9AH	ITB11C	ITB11M2	ITB11M1	ITB11M0	ITB10C	TB10M2	TB10M1	ITB10M0	
INTERD			R		K/W	\supset	R C	$\langle \gamma \rangle$	R/W		
			0	0	0	0	0	\mathcal{O}_0	0	0	
		nable 9BH	INTTB21(TMRB2)			$(\vee /)$) INTTB20	(TMRB2)			
INTETB2	Interrupt enable		ITB21C	ITB21M2	1TB21M1	ITB21M0	ITB20C	ITB20M2	ITB20M1	ITB20M0	
INTERD	TMRB2		R		> R/W		R		R/W		
			0 \	(0))	0	0	// 0	0	0	0	
			INTTB31(TMRB3)			>	0 0 0 0 INTTB30(TMRB3)				
INTETB3	Interrupt enable	9CH	ІТВ31С)ITB31M2	ITB31M1	ІТВ31М0	ITB30C	ITB30M2	ITB30M1	ITB30M0	
INTERBO	TMRB3	9CH	R		R/W		R		R/W		
			(// o))	0	0	0	0	0	0	0	
	/	$//$) \downarrow		INTTB41	(TMRB4)			INTTB40	(TMRB4)		
INTETB4	Interrupt enable	9DH	17B41C	ITB41M2	ITB41M1	ITB41M0	ITB40C	ITB40M2	ITB40M1	ITB40M0	
INTERD	TMRB4	350	R <		R/W		R		R/W		
	\wedge \wedge		0	0	0	0	0	0	0	0	
	Interrupt	\ \ \ \	11	NTTBOF1(TM	RB1 Over flo	w)	11	NTTBOF0(TM	IRB0 Over flow	v)	
INTETB01V	enable	9EH	ITF10	ITF1M2	ITF1M1	ITF1M0	ITF0C	ITF0M2	ITF0M1	ITF0M0	
	TMRB0/1 (Over flow)	JEII	R		R/W		R		R/W		
	(5,43,110,4)	\wedge	0	0	0	0	0	0	0	0	
	7/			1		-					

IxxxC	
	-
Interrupt request flag	

lxxM2	lxxM1	lxxM0	Function (Write)			
0	0	0	Disables interrupt requests			
0	0	1	Sets interrupt priority level to 1			
0	1	0	Sets interrupt priority level to 2			
0	1	1	Sets interrupt priority level to 3			
1	0	0	Sets interrupt priority level to 4			
1	0	1	Sets interrupt priority level to 5			
1	1	0	Sets interrupt priority level to 6			
1	1	1	Disables interrupt requests			

Page 40 2007-10-15

Interrupt Level Setting Registers

Symbol	Name	Address	7	6	5	4	3	2	1	0	
			II.	NTTBOF3(TM	IRB3 Over flo	w)	11	NTTBOF2(TM	IRB2 Over flow	v)	
INTETB23V	Interrupt enable	9FH	ITF3C	ITF3M2	ITF3M1	ITF3M0	ITF2C <	ITF2M2	ITF2M1	ITF2M0	
INTETB23V	TMRB2/3 (Over flow)		R		R/W		R		R/W		
	(Over now)		0	0	0	0	0	((0))	0	0	
	Interrupt			INT	RTC		=	NTTBOE4(TM	IRB4 Over flow	v)	
INTETB4VRTC	Interrupt enable	A0H	IRTCC	IRTCM2	IRTCM1	IRTCM0	ITF4C/	JTF4M2	ITF4M1	ITF4M0	
INTETB4VKTC	TMRB4/ INTRTC	AUI	R		R/W		R		R/W		
	INTRIC		0	0	0	0	(0)	0	0	0	
				INT	TX0)	INTRX0			
INTES0	INTRX0 & INTTX0	A1H	ITX0C	ITX0M2	ITX0M1	ОМОХТІ	IRX0C	IRX0M2	IRX0M1	IRX0M0	
INTESO	enable	AIII	R		R/W		R		R/W		
			0	0	0	(//0 \)	0 🚫	(\bullet)	0	0	
	INTRX1 & INTTX1 enable	X1 A2H		INT	TX1		V	UNT	RX1//		
INTES1			ITX1C	ITX1M2	ITX1M1	ITX1M0	IRX1C	RX1M2	TRX1M1	IRX1M0	
INTEGT			R		(R/W)	\supset	R C	$\langle \gamma \rangle$	R/W		
			0	0	0	0	0	\mathcal{O}_0	0	0	
				INT	TX2) INT	RX2		
INTES2	INTRX2 & INTTX2	A3H	ITX2C	ITX2M2	ITX2M1	ITX2M0	IRX2C	IRX2M2	IRX2M1	IRX2M0	
1111 202	enable	АЗП	R		> R/W		R		R/W		
			0 ((0))	0	0	// 0	0	0	0	
				INT	SBI1		>	INT	IRXOM1		
INTESBI01	INTSBI0 & INTSBI1	A4H	ISBITC) I\$BI1M2	ISBI1M1	ISBI1M0	ISBI0C	ISBI0M2	ISBI0M1	ISBI0M0	
INTEGRIOT	enable	/(411	R		R/W		R		R/W		
			(// o))	0	0	0	0	0	0	0	
	/	$//$) \downarrow		✓ INT	TC1//			INTTC0			
INTETC01	INTTC0 & \(\) INTTC1	A5H	PTC1C	ITC1M2	ITC1M1	ITC1M0	ITC0C	ITC0M2	ITC0M1	ITC0M0	
INTETOOT	enable	7.50	R <		≥ R/W		R		R/W		
	^ ^		0	0	0	0	0	0	0	0	
	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	\ \ \ \		INI	тсз			INT	TC2		
INTETC23	INTTC2 &	A6H	ІТСЗС (ITC3M2	ITC3M1	ITC3M0	ITC2C	ITC2M2	ITC2M1	ITC2M0	
11111020	enable	7.011	R		R/W		R		R/W		
		\wedge	0	0	0	0	0	0	0	0	
	7/		, \)	<u> </u>				·		

1	IxxxC
ı	
	Interrupt request flag

lxxM2	lxxM1	IxxM0	Function (Write)			
0	0	0	Disables interrupt requests			
0	0	1	Sets interrupt priority level to 1			
0	1	0	Sets interrupt priority level to 2			
0	1	1	Sets interrupt priority level to 3			
1	0	0	Sets interrupt priority level to 4			
1	0	1	Sets interrupt priority level to 5			
1	1	0	Sets interrupt priority level to 6			
1	1	1	Disables interrupt requests			

3.3.2 External Interrupt Control

External Interrupt Control Register (IIMC)

Symbol	Name	Address	7	6	5	4	3	2	1	0	
			-	-	-	-	-	10EDGE	IOLE	NMIREE	
			W								
	Interrupt	ıpt 8CH	0	0	0	0	0		0	0	
IIMC	input mode control	RMW instruc- tions are pro- hibited.	Always write "0".	1	1	- ((INTO EDGE 0: Rising 1: Falling	INT0 mode 0: Edge 1: Level	1:Oper- ates even on rising/ falling edge of NMI	

INT0 setting

			, comg	
P7FC <p75f></p75f>	<iole></iole>	<ioedge></ioedge>	OTAN	
1	0	0	Rising edge interruption	\Diamond \bigcirc
1	0	1	Falling edge interruption	170
1	1	0	"H" level INT	
1	1	1 <	"L" level INT	

NMI rising edge enable

0	INT request generation at falling edge
1	INT request generation at rising/falling edge

3.3.3 Interrupt Request Flag Clear Register

The interrupt request flag is cleared by writing the appropriate micro DMA start vector, as given in Table 3-1, to the register INTCLR.

For example, to clear the interrupt flag INTO, perform the following register operation after execution of the DI instruction.

INTCLR ← 0AH; Clears interrupt request flag INTO.

Interrupt Request Flag Clear Register (INTCLR)

Symbol	Name	Address	7 (> 6	5	4	3	2	1	0	
^		88H	- <	_	CLRV5	CLRV4	CLRV3	CLRV2	CLRV1	CLRV0	
Interrupt		RMW	-	\rightarrow	W						
INTCLR	Clear Control	instructions	$\sqrt{1}$)) –	0	0	0	0	0	0	
		are prohibited.			Interrupt vector						

Page 42 2007-10-15

3.3.4 Micro DMA Start Vector Registers

This register assigns micro DMA processing to which interrupt source. The interrupt source with a micro DMA start vector that matches the vector set in this register is assigned as the micro DMA start source.

When the micro DMA transfer counter value reaches 0, the micro DMA transfer end interrupt corresponding to the channel is sent to the interrupt controller, the micro DMA start vector register is cleared, and the micro DMA start source for the channel is cleared. Therefore, to continue micro DMA processing, set the micro DMA start vector register again during the processing of the micro DMA transfer end interrupt.

If the same vector is set in the micro DMA start vector registers of more than one channel, the channel with the lowest number has a higher priority.

Accordingly, if the same vector is set in the micro DMA start vector registers of two channels, the interrupt generated in the channel with the lower number is executed until micro DMA transfer is complete. If the micro DMA start vector for this channel is not set again, the next micro DMA is started for the channel with the higher number. (Micro DMA chaining)

Micro DMA Start Vector Registers (DMAnV)

Symbol	Name	Address	7	6	5	4	3 ((2	1	0
			-	-	DMA0V5	DMA0V4	DMA0V3	DMA0V2	DMA0V1	DMA0V0
DMA OV	DMA0	0011	-	-		7	(// R	ŵy		
DMA0V	Start Vector	80H	-	((\\Q	0		0	0	0
					,		DMA0 st	art vector		
			1		DMA1V5	DMA1V4	DMA1V3	DMA1V2	DMA1V1	DMA1V0
DMA1 DMA1V Start	81H	-			R/W					
DIVIATV	Vector	опп	- ((\sim	0 ~	0	0	0	0	0
						(2)	DMA1 st	art vector		
			((/-//^	_	DMA2V5	DMA2V4	DMA2V3	DMA2V2	DMA2V1	DMA2V0
DMA2V	DMA2 Start	92LJ			R/W					
DIVIAZV	Vector	82H		-	(6)	0	0	0	0	0
			/			DMA2 start vector				
	^	^	-	+//	DMA3V5	DMA3V4	DMA3V3	DMA3V2	DMA3V1	DMA3V0
DMA3V	DMA3 Start	001	_	_	\supset		R	/W		
DIVIASV	Vector	83H	- <	(-	0	0	0	0	0	0
<i>(</i>							DMA3 st	art vector		

Page 43 2007-10-15

3.3.5 Micro DMA Burst Specification

Specifying the micro DMA burst continues the micro DMA transfer until the transfer counter register reaches 0 after micro DMA start. Setting a bit which corresponds to the micro DMA channel of the DMAB registers mentioned below to "1" specifies a burst.

If other interrupts (maskable/nonmaskable is not concerned) are generated during burst transfer, interrupt is executed after completed burst transfer.

Micro DMA Burst Request Registers (DMAR)

Symbol	Name	Address	7	6	5	4	(3)	2	1	0
		89H	-	-	-	- (DMAR3	DMAR2	DMAR1	DMAR0
51445	DMA Software	RMW	_	-	-	4	$\langle \rangle$	R	w >	
DMAR Request		est instructions	-	-	-		> o	0/2	9	0
	Register							1: DMA soft	ware request	
		8AH	-	-	- (\\- <u>-</u>	DMAB3	DMAB2	OMAB1	DMAB0
DMAD	DMA		-	-	(T)	<u>-</u>	((R	/W	
DMAB	Burst Register		-	-		_	0		0	0
						7	(7/<	1: DMA bu	urst request	

Page 44

2007-10-15

TMP91FW60

3.3.6 Attention Point

The instruction execution unit and the bus interface unit of this CPU operate independently. Therefore, immediately before an interrupt is generated, if the CPU fetches an instruction that clears the corresponding interrupt request flag, the CPU may execute the instruction that clears the interrupt request flag (Note) between accepting and reading the interrupt vector. In this case, the CPU reads the default vector 0008H and reads the interrupt vector address FFFF08H.

To avoid the above problem, place instructions that clear interrupt request flags after a DI instruction. And in the case of setting an interrupt enable again by EI instruction after the execution of clearing instruction, execute EI instruction after clearing and more than 1-instructions (ex. "NOP" * 1 times). If executed EI instruction without waiting NOP instruction after execution of clearing instruction, interrupt will be enable before request flag is cleared.

In the case of changing the value of the interrupt mask register <IFF2:0> by execution of POP SR instruction, disable an interrupt by DI instruction before execution of POP SR instruction.

In addition, take care as the following 2 circuits are exceptional and demand special attention.

	In level mode INT0 is not an edge-triggered interrupt. Hence, in level mode the interrupt request flip-flop for INT0 does not function. The peripheral interrupt request passes through the S input of the flip-flop and becomes the Q output. If the interrupt input mode is changed from edge mode to level mode, the interrupt request flag is cleared automatically.
INT0 level mode	If the CPU enters the interrupt response sequence as a result of INTO going from 0 to 1, INTO must then be held at 1 until the interrupt response sequence has been completed. If INTO is set to level mode so as to release a halt state, INTO must be held at 1 from the time INTO changes from 0 to 1 until the halt state is released. (Hence, it is necessary to ensure that input noise is not interpreted as a 0, causing INTO to revert to 0 before the halt state has been released.)
	When the mode changes from level mode to edge mode, interrupt request flags which were set in level mode will not be cleared interrupt request flags must be cleared using the following sequence. D (IMMC) 00H ; Switches interrupt input mode from level mode to edge mode. LD (INTCLR), 0AH ; Clears interrupt request flag.
	NOP ; Wait El (instruction
INTRXn	The interrupt request flip-flop can only be cleared by reset or by reading the serial channel receive buffer. It cannot be cleared by writing INTCLR register.

Note: The following instructions or pin input state changes are equivalent to instructions that clear the interrupt request flag. INTO: Instructions which switch to level mode after an interrupt request has been generated in edge mode.

ophe pin input change from high to low after interrupt request has been generated in level mode. (H o L)

INTRXn: Instruction which reads the receive buffer.

Page 45 2007-10-15

TMP91FW60

4. Port Function

The TMP91FW60 features 83 bit settings which relate to the various I/O ports.

As well as general-purpose I/O port functionality, the port pins also have I/O functions which relate to the built-in CPU and internal I/Os. Table 4-1 lists the functions of each port pin. Table 4-1 lists the functions of each port pin. Table 4-2 lists I/O registers and their specifications.

Table 4-1 Port Functions (R: PU = with programmable pull-up resistor) (1/2)

					<u> </u>	
Port Names	Pin Names	Number of Pins	Direction	R	Direction Setting Unit	Pin Names for Built-in Functions
Port0	P00 to P07	8	I/O	ı	Bit	ADD to AD7
Port1	P10 to P17	8	I/O	ı	Bit	AD8 to AD15/A8 to A15
Port2	P20~P27	8	I/O	-	Bit	A16 to A23/A0 to A7
	P30	1	I/O	- (()	Bit	TB3IN0, INT3, SDA0
Double	P31	1	I/O		Bit	TB3IN1, INT4, SCLO
Port3	P32	1	I/O		Bit	WAIT, TB30UT0
	P33	1	I/O	(-)	Bit	TB30UT1)
	P40	1	1/0	Þ	Bit	CSO, SCOUT
	P41	1	1/9	₽U	Bit	(CS1), TXD2
Port4	P42	1	10	> PU	Bit	CS2 RXD2
	P43	1	10	PU	Bit	CS3, SCLK2, CTS2
	P44	1	(/0)	PU	Bit	ALE
	P50	1	7 170	- <	Bit	AN0
	P51	1	<u>)</u> //o		Bit	AN1
	P52	(7)	1/0		Bit	AN2
Dowle	P53		I/O	\bigcap_{Λ}	Bit	AN3
Port5	P54	1	40	$\left\langle \left\langle \right\rangle \right\rangle$	Bit	AN4
	P55	1	1/0	_	Bit	AN5
	P56	√ 1	1/0		Bit	AN6
	P67	1	1/0	-	Bit	AN7
	P60	1 ^	0/1	=	Bit	AN8
	P61	1	1/0	=	Bit	AN9
	P62	> (1)	1/0	-	Bit	AN10
	P63	\searrow 1	// //0	-	Bit	AN11
Port6	P64		I/O	-	Bit	AN12
	P65	1	I/O	_	Bit	AN13
	P66	1	I/O	-	Bit	AN14
	P67	1	I/O	-	Bit	AN15

Page 46 2007-10-15

Table 4-1 Port Functions (R: PU = with programmable pull-up resistor) (2/2)

Port Names	Pin Names	Number of Pins	Direction	R	Direction Setting Unit	Pin Names for Built-in Functions
	P70	1	I/O	=	Bit	TAOIN
	P71	1	I/O	_	Bit	TA1OUT
	P72	1	I/O	=	Bit	TA3OUT
Port7	P73	1	I/O	_	Bit	TA4IN
	P74	1	I/O	_	Bit	TASOUT
	P75	1	I/O	-	Bit	(INTØ)
	P80	1	I/O	=	Bit	TB0IN0, INT5
	P81	1	I/O	_	Bit	TB0IN1, INT6
	P82	1	I/O	_	Bit	TB0OUT0
Port8	P83	1	I/O	-	Bit	TB0OUT1
1 Oito	P84	1	I/O	- ((Bit	TB1IN0, INT7
	P85	1	I/O		Bit	TB1IN1, INT8
	P86	1	I/O		Bit	TB10UT0
	P87	1	I/O	4(-)	Bit	TB10UT1)
	P90	1	1/0		Bit	TXD0
	P91	1	1/0	<u> </u>	Bit	(RXD)
	P92	1	1/0	· - /	Bit	SCLK0, CTS0
Port9	P93	1	(1/0)	_	Bit	TXD1
	P94	1	10	-	Bit	RXD1
	P95	1 ((\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	-	Bit	SCLK1, CTS1
	P96	1	<u>//</u> 0		Bit	XT1
	P97		I/O		Bit	XT2
	PA0	1	1/0	(//₹)	Bit	TB2IN0, INT1
PortA	PAT	4	1/0		Bit	TB2IN1, INT2
	PA2		10	_	Bit	TB2OUT0
	PA3	1	YQ	_	Bit	TB2OUT1
<u> </u>	PB0	1	\rangle 1/0	-	Bit	TB4IN0, INT9, SDA1
PortB	PB1	1 <	1/0	_	Bit	TB4IN1, INT10, SCL1
	PB2	> 1	1/0	_	Bit	TB4OUT0
	PB3	1))	_	Bit	TB4OUT1
	PZ0)	Output	_	Bit	RD
PortZ	PZ1	1	Output		Bit	WR
	PZ2	1	I/O	PU	Bit	HWR B. W.
	PZ3	1	I/O	PU	Bit	R/W

Page 47 2007-10-15

Table 4-2 I/O Port Setting List(1/4)

Б	D: N	0 %		I/O Re	gister Setting	Values	
Ports	Pin Names	Specifications	Pn	PnCR	PnFC	PnFC2	ODE
		Input port	×	0			
Port0	P00 to P07	Output port	×	1	None	None	None
		AD0 to AD7 bus ^{#1}	×	×			
		Input port	×	0		7	
Dorts	P10 to P17	Output port	×	_ 1 (($\bigg)_{\mathbb{R}}$	None	None
Port1	F10 10 F17	AD8 to AD15 bus	×	0	<u></u>	None	None
		A8 to A15 output	×	1) 1		
		Input port	×		0		
Port2	P20 to P27	Output port	×	/	0	None	None
POILZ	P20 10 P27	A0 to A7 output	×	0	1		
		A16 to A23 output	((*/ 5)) 1 <) 1(C		
		Input port) ×	0		7	-
	P30 to P31	Output port (CMOS output)	×	1 /		0	0
		Output port (open drain output)	×	1		0	1
	P32 to P33	Input port	×	(0)	\bigcirc 0	None	None
		Output port	X		<i>)</i> 0	None	None
		TB3IN0 Input, INT3 Input	< <u> </u>	0	1	0	_
Port3	P30	SDA0 input/output (CMOS output)	×	1/	0	1	0
Polis		SDA0 input/output (open drain output)#2	×	1	0	1	1
		TB3IN1 Input, INT4 Input	X	0	1	0	_
	P31	SCL0 input/output (CMOS output)	$\langle \rangle$	1	0	1	0
		SCL0 input/output (open drain output)#2	×	1	0	1	1
	P32	WAIT output) ×	0	1		
	F 32	TB3OUT0 output	×	1	1	None	None
	P33	TB3OUT1 output	×	1	1	1	

Page 48

Table 4-2 I/O Port Setting List(2/4)

5.	D: 11	0 " "		I/O Re	egister Setting	Values	
Ports	Pin Names	Specifications	Pn	PnCR	PnFC	PnFC2	ODE
		Input port (without pull up)	0	0	0	0	
	P40, P43	Input port (with pull up)	1	0	0	0	None
		Output port	×	1	0	0	
		Input port (without pull up)	0	0		7	
	P42, P44	Input port (with pull up)	1	0	77/9	None	None
		Output port	×	7	$\bigcirc g$		
		Input port (without pull up)	0	0	0	0	-
	D44	Input port (with pull up)	1		0	0	-
	P41	Output port (CMOS output)	× </td <td>1</td> <td>0</td> <td>0</td> <td>0</td>	1	0	0	0
		Output port (open drain output)	×) 1	0 /2	10	1
	D40	CS0 output	((*/ 5) 1 <	, 1(0	Ness
Port4	P40	SCOUT output	X	1	COL		None
		CS1 output (CMOS output)	×	1 /	7	, 0	0
	5	CS1 output (open drain output)	×	1		0	1
	P41	TXD2 output (CMOS output)	×	(17/	\bigcirc 0	1	0
		TXD2 output (open drain output)#2	X		0	1	1
		CS2 output	4	1	1		
	P42	RXD2 Input	×	/9/	0	None	None
		CS3 output	^ ×	1	1	0	
		SCLK2 Input	X	0	0	0	
	P43	SCLK2 output	(X)	1	0	1	None
		CTS2 Input	×	0	0	0	
	P44	ALE output) ×	1	1	None	None
		Input port	×	0	1		
Port5	P50 to P57	Output port	×	1	0	None	None
	$\langle \rangle$	AN0 to AN7 Input #3	×	0	0		
		Input port	×	0	1		
Port6	P60 to P67	Output port	×	1	0	None	None
		AN8 to AN15 Input #3	×	0	0		
		Input port	×	0	0		
	P70 to P75	Output port	×	1	0		
	P70	TA0IN Input	×	0	None		
_	P71	TA1OUT output	×	1	1		
Port7	P72	TA3OUT output	×	1	1	None	None
	P73	TA4IN Input	×	0	None		
	P74	TA5OUT output	×	1	1		
	P75	INT0 Input	×	0	1		

Page 49 2007-10-15

Table 4-2 I/O Port Setting List(3/4)

		<u> </u>		I/O Re	egister Setting	Values	
Ports	Pin Names	Specifications	Pn	PnCR	PnFC	PnFC2	ODE
	D00 to D07	Input port	×	0	0		
	P80 to P87	Output port	×	1	0		
	P80	TB0IN0, INT5 Input	×	0	1		
	P81	TB0IN1, INT6 Input	×	0		7	
D40	P82	TB0OUT0 output	×	_ 1 ((774	Nana	Nana
Port8	P83	TB0OUT1 output	×	1	(J)	None	None
	P84	TB1IN0, INT7 Input	×	0	1		
	P85	TB1IN1, INT8 Input	×		1		
	P86	TB1OUT0 output	× </td <td>1</td> <td>1</td> <td></td> <td></td>	1	1		
	P87	TB1OUT1 output	X) 1	1		
	P91 to P92,	Input port	((*/ 5) 0 <	> (Nama
	P94 to P95	Output port	X	1	COL	70)	None
		Input port	×	0 (70	,)	-
	P90, P93	Output port (CMOS output)	×	1		·	0
		Output port (open drain output)	×	(17/	0		1
	P90	TXD0 output (CMOS output)	X		1		0
		TXD0 output (open drain output)#2	< <u> </u>	1	1		1
	P91	RXD0 Input	×	\ 9	None		None
		SCLK0 Input	^ ×	0	0		
Dorto	P92	SCLK0 output	X	1	1	None	None
Port9		CTS0 Input	$\langle \times \rangle$	0	0	None	
	P93	TXD1 output (CMOS output)	×	1	1		0
	F93	TXD1-output (open drain output)#2	×	1	1		1
	P94	RXD1 Input	×	0	None		None
		SCLK1 Input	×	0	0		
	P95	SCLK1 output	×	1	1		None
		CTS1 Input	×	0	0		
\wedge		Input port	×	0	1		
	P96 to P97	Output port	×	1	1		None
		XT1 to XT2 #4	×	0	0		
	DAO to DAG	Input port	×	0	0		
	PA0 to PA3	Output port	×	1	0		
Dort ^	PA0	TB2IN0 Input, INT1 Input	×	0	1	None	None
PortA	PA1	TB2IN1 Input, INT2 Input	×	0	1	None	None
	PA2	TB2OUT0	×	1	1		
	PA3	TB2OUT1	×	1	1		

Page 50 2007-10-15

Table 4-2 I/O Port Setting List(4/4)

5 .	D: 11	0 17 1		I/O Re	gister Setting	Values	
Ports	Pin Names	Specifications	Pn	PnCR	PnFC	PnFC2	ODE
		Input port	×	0	0	0	-
	PB0 to PB1	Output port (CMOS output)	×	1	0	0	0
		Output port (open drain output)	×	1	0	0	1
	PB2 to PB3	Input port	×	0		Nana	None
	PB2 10 PB3	Output port	×	1 (7) (9	None	None
		TB4IN0 Input, INT9 Input	×	0	(J)	0	-
PortB	PB0	SDA1 input/output (CMOS output)	×	1	0	1	0
		SDA1 input/output (open drain output)#2	×)	0	1	1
		TB4IN1 Input, INT10 Input	× </td <td>0</td> <td>1</td> <td>0</td> <td>_</td>	0	1	0	_
	PB1	SCL1 input/output (CMOS output)	X	1	0 🔀		0
		SCL1 input/output (open drain output)#2	((\s\/ 5)) 1 <	> (()	1
	PB2	TB4OUT0 output	×	1	7	7 71/22	None
	PB3	TB4OUT1 output	×	1 (7	None	None
		Output port	×				
	PZ0	RD output only when accessing an external	1	None	<u>1</u>		
		Always RD output	9		1		
	PZ1	Output port	< <u> </u>	None	0		
D- 47	FZI	WR output only when accessing an external	×	Notic	1	None	None
PortZ		Input port (without pull up)	0	0	0	None	None
	PZ2 to PZ3	Input port (with pull up)	1	0	0		
		Output port	(*)	1	0		
	PZ2	HWR output	<u> </u>	1	1		
	PZ3	R)W output	×	0	1		

^{#1}

Note: x:Don't care

2007-10-15 Page 51

There is not port setting for changing AD0 to AD7. When accessing external area, it changes automatically. If using P30/P31/P41/P90/P93/PB0/PB1 as open-drain output in SDA0/SCL0/TXD2/TXD0/TXD1/SDA1/SCL1 output, #2 please set ODE.


If using P50 to P57,P60 to P67 as an analog input, please set ADCCR1<SAIN3:0>. If using P96 to P97 as XT1-XT2, please set SYSCR0.

4.1 Port 0 (P00 to P07)

Port 0 is an 8-bit general-purpose I/O port. Each bit can be set individually for input or output using the control register P0CR. Reset operation initializes all bits of the control register P0CR to "0" and sets port 0 to input port.

In addition to functioning as a general-purpose I/O port, port 0 can also function as address data bus (AD0 to AD7).

When accessing external area, port 0 functions as address data bus (AD0 to AD7) automatically, and P0CR is cleared to "0".

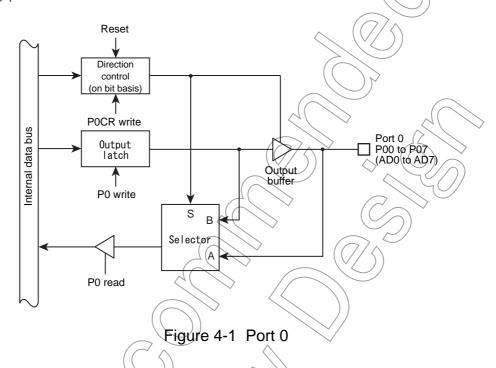

Port 0 Register

P0 (0000H)

				\bigcirc							
	// 7)	6	5 ((// \4	3	2	1	0			
Bit symbol	P07	/P06	P05	P04	P03	P02	P01	P00			
Read/Write		R/W									
After reset		Data from external port (Output latch register is undefined.)									

Port 0 Control Register (Read-modify-write instructions are prohibited.)

		7	6	√ 5	4	3	2	1	0
	Bit symbol	P07C	P06C	P05C	P04C	P03C	P02C	P01C	P00C
P0CR (0002H)	Read/Write				W				
, , ,	After reset	0	9	0	0	0	0	0	0
	and this registe	er is cleared to '	0".)						

access	P0xC	P07 function	P06 function	P05 function	P04 function	P03 function	P02 function	P01 function	P00 function
internal	0	input port							
internal	1	output port							
external	cleared to "0"	AD7	AD6	AD5	AD4	AD3	AD2	AD1	AD0

Note: <P0xC> is bit X of each register P0CR.


Page 52 2007-10-15

TMP91FW60

4.2 Port 1 (P10 to P17)

Port 1 is an 8-bit general-purpose I/O port. Each bit can be set individually for input or output using the control register P1CR and function register P1FC. Reset operation initializes all bits of output latch P1, the control register P1CR and function register P1FC to "0" and sets port 1 to input port.

In addition to functioning as a general-purpose I/O port, port 1 can also function as address data bus (AD8 to AD15) and address bus (A8 to A15).

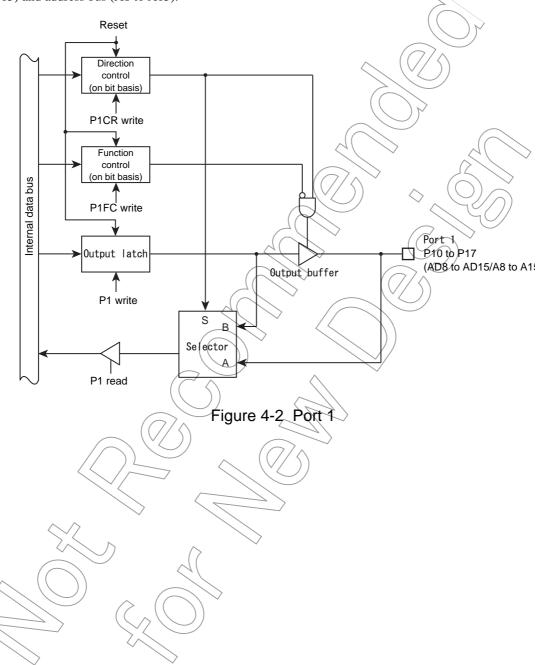

Page 53 2007-10-15

Port 1 Register

P1 (0001H)

	7	6	5	4	3	2	1	0		
Bit symbol	P17	P16	P15	P14	P13	P12	P11	P10		
Read/Write	R/W									
After reset	Data from external port (Output latch register is cleared to "0".)									

Port 1 Control Register (Read-modify-write instructions are prohibited.)

P1CR (0004H)

	7	6	5	4	3	2	1	0				
Bit symbol	P17C	P16C	P15C	P14C	P13C	(P12C)	P11C	P10C				
Read/Write		W										
After reset	0	0	0	0	6) > o	0	0				
Function		< <refer colump="" of="" r1fg="" to="">></refer>										

Port 1 Function Register (Read-modify-write instructions are prohibited.)

P1FC (0005H)

	7	6	5	4	3	2	(1)	0		
Bit symbol	P17F	P16F	P15F	P14F	P13F	P12F	P1/F	P10F		
Read/Write			^	(\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	I		~			
After reset	0	0	0	0	0		0	0		
Function	P1FC/P1CR = 00; Input, 91: Output, 10: AD15 to AD8, 11: A15 to A8									

P1xF	P1xC	P17 function	P16 function	P15 function	P14 function	P13 function	P12 function	P11 function	P10 function
0	0	input port	input port	input port	input port	input port/	input port	input port	input port
0	1	output port							
1	0	AD15	AD14	// AD13	AD12	AD11	AD10	AD9	AD8
1	1	A15 (A14	A13	A12	A11	A10	A9	A8

Note:<P1XF>/<P1XC> is bit X of each register P1FC/P1CR.




TMP91FW60

4.3 Port 2 (P20 to P27)

Port 2 is an 8-bit general-purpose I/O port. Each bit can be set individually for input or output using the control register P2CR and function register P2FC. Reset operation initializes all bits of output latch P2 to "1", and the control register P2CR and function register P2FC to "0", and sets port 2 to input port.

In addition to functioning as a general-purpose I/O port, port 2 can also function as address bus (A0 to A5) and address bus (A16 to A23).

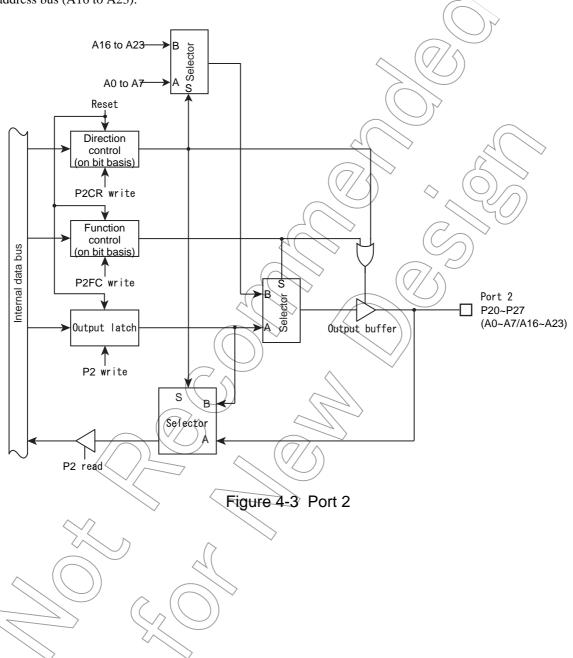

Page 55 2007-10-15

Port 2 Register

P2 (0006H)

	7	6	5	4	3	2	1	0		
Bit symbol	P27	P26	P25	P24	P23	P22	P21	P20		
Read/Write	R/W									
After reset	Data from external port (Output latch register is set to "1".)									

Port 2 Control Register (Read-modify-write instructions are prohibited.)

P2CR (0008H)

	7	6	5	4	3	()2 \	1	0				
Bit symbol	P27C	P26C	P25C	P24C	P23C	P22C	P21C	P20C				
Read/Write		W										
After reset	0	0	0	0	Q () > 0	0	0				
Function		< <refer column="" of="" p2fc="" to="">></refer>										


Port 2 Function Register (Read-modify-write instructions are prohibited.)

P2FC (0009H)

	7	6	5	4	<u> </u>	2	(//1))	0			
Bit symbol	P27F	P26F	P25F	P24F	P23F	P22F	P21F	P20F			
Read/Write			^	(v	V		V				
After reset	0	0	0	0	0		0	0			
Function	P2FC/P2CR = 00: Input, 01: Output, 10: A7 to A0 11: A23 to A16										

P2xF	P2xC	P27 function	P26 function	P25 function	P24 function	P23 function	P22 function	P21 function	P20 function
0	0	input port							
0	1	output port							
1	0	A7	A6	/ A5	A4	△ \ A3	A2	A1	A0
1	1	A23 (A22	A21	A20	A19	A18	A17	A16

Note: <P2XF>/<P2XC> is bit X of each register P2FC/P2CR. When setting to address bus A23 to A16, set P2FC after setting P2CR. If P2CR is set after setting P2FC, A7 to A0 are outputted between setting P2FC and setting P2CR when P2CR is "0".

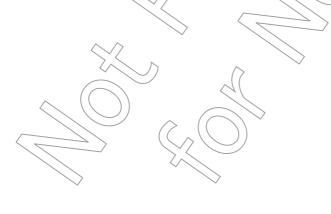

Page 56 2007-10-15

TOSHIBA TMP91FW60

4.4 Port3 (P30 to P33)

Port 3 is an 4-bit general-purpose I/O port. Reset operation initializes to input port. All bits of output latch register P3 are set to "1".

There are the following functions in addition to an I/O port. This function enable each function by writing "1" to applicable bit of port 3 function register P3FC.

- •The input function of wait control (WAIT)
- •The input function of external interrupt (INT3, INT4)
- •The input function of 16-bit timer 3 (TB3IN0, TB3IN1)
- •The output function of 16-bit timer 3 (TB3OUT0, TB3OUT1)
- •The I/O function of serial bus interface 0 (SDA0, SCL0)

Reset operation initializes, P3CR,P3FC and P3FC2 to "0", all bits are set to input port.

And Port 30 and 31 have a programmable open-drain function which can be controlled by the ODE register.

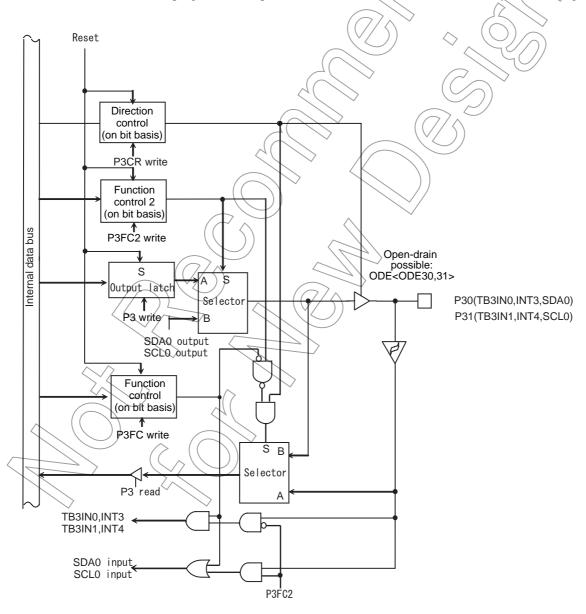


Figure 4-4 Port 30 and 31

Page 57 2007-10-15

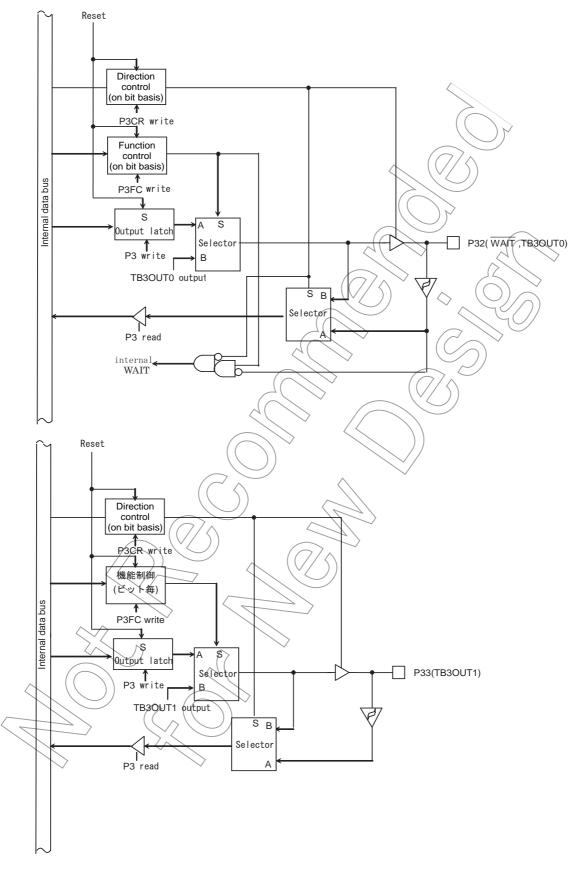


Figure 4-5 Port 32 and 33

Page 58 2007-10-15

Port 3 Register

P3 (000CH)

	7	6	5	4	3	2	1	0	
Bit symbol	_		ı	_	P33	P32	P31	P30	
Read/Write	-	_	-	-	R/W				
After reset	-	_	-	-	Data from external port (Output latch register is set to "1".)				
Function			-			outpu	t mode		

Port 3 Control Register (Read-modify-write instructions are prohibited.)

P3CR (000EH)

	7	6	5	4	3 2	1	0
Bit symbol	-	ı	-	ı	P33C P32C	P31C	P30C
Read/Write	-	-	-	-		W	
After reset	_	-	-	-	0 0	0	0
Function			-	4	0:Inpu	t 1:Output	>

Port 3 Function Register (Read-modify-write instructions are prohibited.)

P3FC (000FH)

	7	6	5	4	3	2	<u>\</u>	0
Bit symbol	-	ı	- <		P33F	P32F)	P31F	P30F
Read/Write		ı	-(/>	6	>> \	W	
After reset	=	=		<u> </u>	0 (/))0	0	0

Port 3 Function Register 2 (Read-modify-write instructions are prohibited.)

P3FC2 (000DH)

	7	6	5	4	3	2	1	0
Bit symbol	ı	(+	_	-//	ı	ı	P31F2	P30F2
Read/Write	I		/ -	1	_	ı	V	V
After reset	- (\bigcirc/\rightarrow	-	Z-7/	_	-	0	0

		\ / \	/		//	
P3xF2	P3xF	РЗХС	P33 function	R32 function	P31 function	P30 function
0	0	0	input port	input port	input port	input port
0)) (7	output port	output port	output port	output port
0	1		reserved	WAIT	TB3IN1/INT4	TB3IN0/INT3
0		1	TB3OUT1	TB3OUT0	reserved	reserved
1		0	reserved	reserved	reserved	reserved
1	0	1((reserved	reserved	SCL0	SDA0
$\sqrt{1}$		0	reserved	reserved	reserved	reserved
1	1	1	reserved	reserved	reserved	reserved

Note 1: <P3xF2>/<P3xF>/<P3xC> is bit X of each register P3FC2/P3FC/P3CR.

Note 2: Wen P32/WAIT pin is used as a WAIT pin, set P3CR<P32C> to "0" and Chip Select/WAIT control register <BnW2:0> to "010".

Page 59 2007-10-15

TOSHIBA TMP91FW60

4.5 Port 4 (P40 to P44)

Port 4 is an 5-bit general-purpose I/O port. Reset operation initializes to input port, and connects a pull-up resistor. All bits of output latch register P4 are set to "1".

There are the following functions in addition to an I/O port. This function enable each function by writing "1" to applicable bit of port 4 function register P4FC.

- •The output function of a chip select signal ($\overline{CS0}$ to $\overline{CS3}$)
- •The I/O function of the serial channel 2 (RXD2, TXD2, SCLK2/CTS2)
- •The output function of an Address latch enable signal (ALE)
- •The output function of a system clock signal (SCOUT)

Reset operation initializes, P4CR,P4FC and P4FC2 to "0", all bits are set to input port.

And Port 41 have a programmable open-drain function which can be controlled by the ODE register.



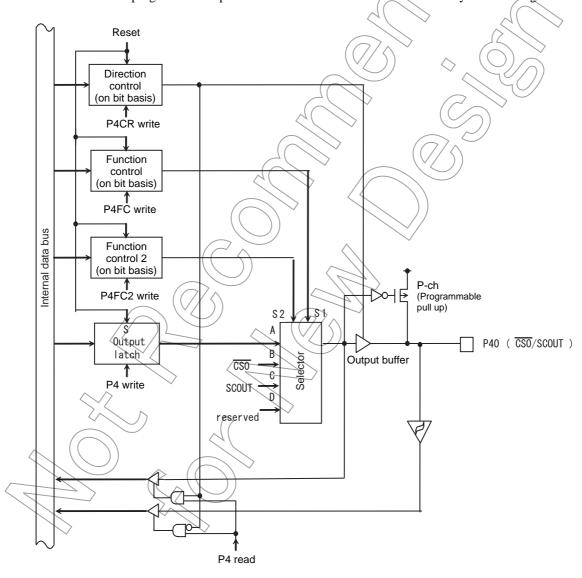


Figure 4-6 Port 40


Page 60 2007-10-15

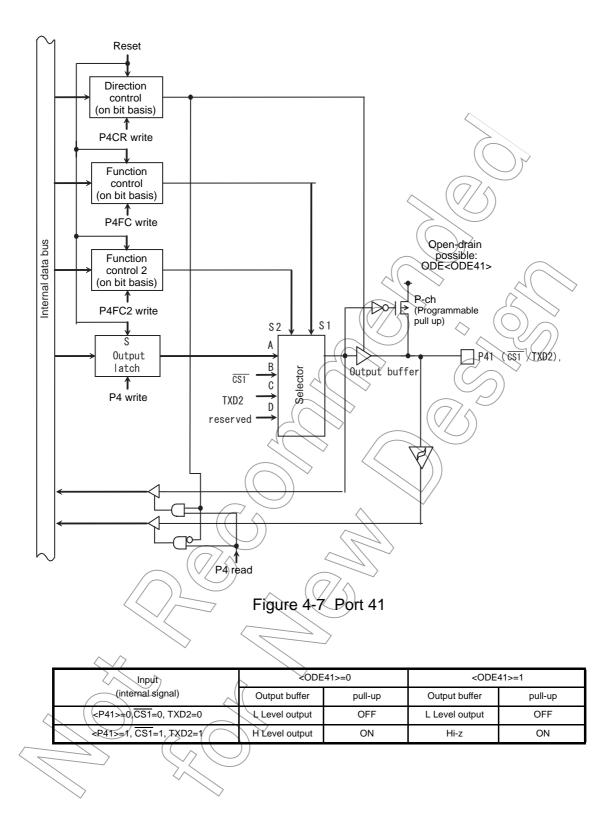


Page 61 2007-10-15

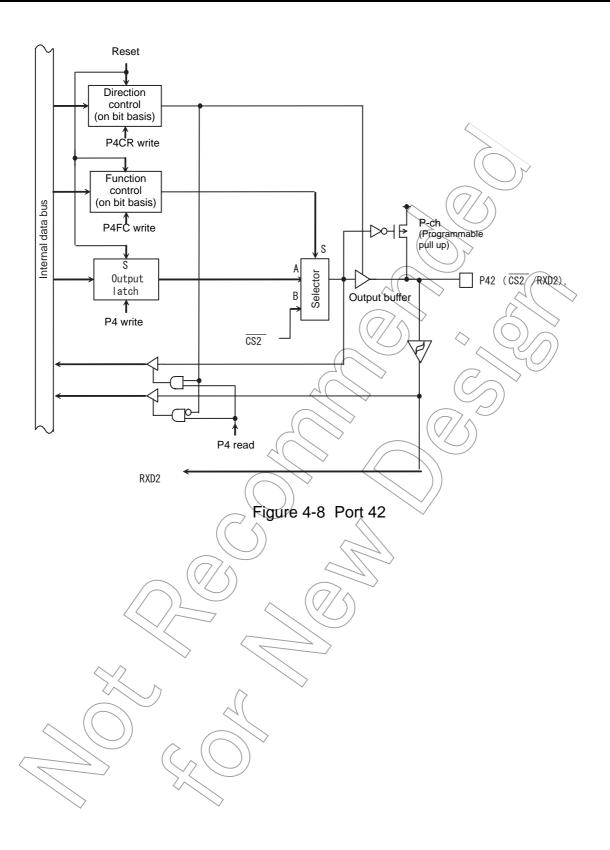

Page 62 2007-10-15

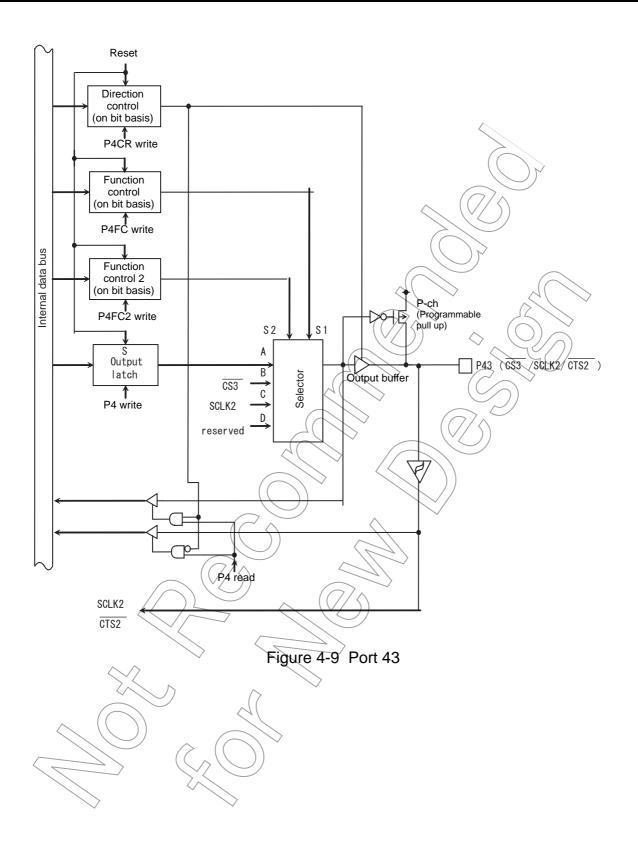

Page 63 2007-10-15

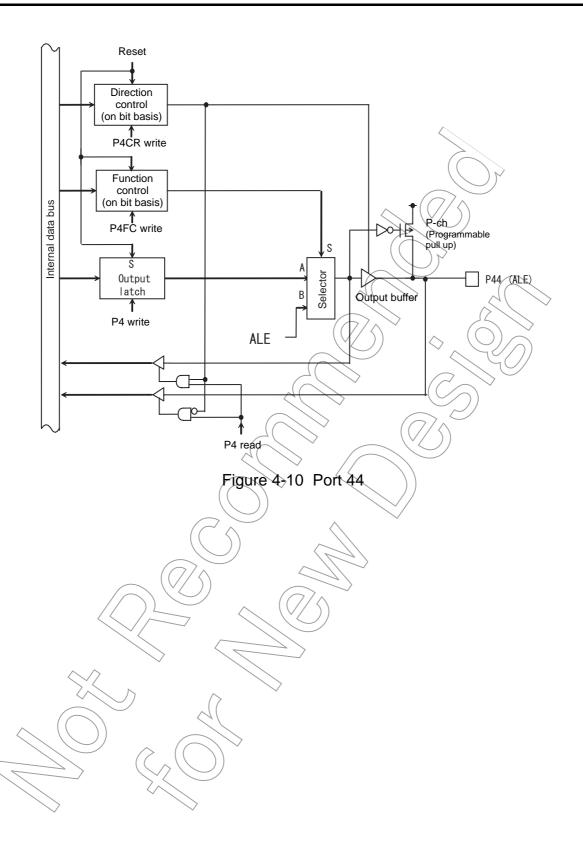

Page 64 2007-10-15

Port 4 Register

P4 (0010H)

	7	6	5	4	3	2	1	0		
Bit symbol	_	-	-	P44	P43	P42	P41	P40		
Read/Write	_	-	-	R/W						
After reset	-	-	-		Data from external port (Output latch register is set to "1".)					
Function				0 (Output latch register): Pull-up resistor OFF 1 (Output latch register): Pull-up resistor ON						

Port 4 Control Register (Read-modify-write instructions are prohibited.)

P4CR (0012H)

	7	6	5	4	3	2	1	0
Bit symbol	-	-	-	P44C	P43C) P42C	P41C	P40C
Read/Write	-	-	-			W		
After reset	-	-	-	0	0	0		0
Function					0:	Input 1: Outp	ut \	

Port 4 Function Register (Read-modify-write instructions are prohibited.)

P4FC (0013H)

	7	6	5	3	2	1	0
Bit symbol	-	1	- P4	14F P43F	P42F	P41F	P40F
Read/Write	-	1			✓ /w		
After reset	-	1	(, F)	0 0	0	0	0

Port 4 Function Register 2 (Read-modify-write instructions are prohibited.)

P4FC2 (0011H)

	7	6)) 5	(4)	3	2	1	0
Bit symbol	- /		_	7	> P43F2	_	P41F2	P40F2
Read/Write		$\left(\left\langle \left\langle -\right\rangle \right) \right)$	- /		W	_	\	V
After reset	// -))		((// (0	-	0	0

			V				
P4xF2	P4xF	P4xC	P44 function	P43 function	P42 function	P41 function	P40 function
0	0	0	input port	input port (SCLK2/CTS2)	input port (RXD2)	input port	input port
(0)	0)	1	output port	output port	output port	output port	output port
0)	0	reserved	reserved	reserved	reserved	reserved
	\\	1	ALE output	CS3	CS2	CS1	CS0
1	0	0	input port	reserved	input port (RXD2)	reserved	reserved
1	0	1	output port	SCLK2	output port	TXD2	SCOUT
1	1	0	reserved	reserved	reserved	reserved	reserved
1	1	1	ALE output	reserved	CS2	reserved	reserved

Note 1: <P4xF2>/<P4xF>/<P4xC> is bit X of each register P4FC2/P4FC/P4CR.


- Note 2: When port 4 is used as input mode, P4 register controls internal pull-up resistor. Read-modify-write instruction is prohibited in input mode or I/O mode. Setting the internal pull-up resistor may be depended on the states of the input pin.
- Note 3: When outputting chip select signal ($\overline{\text{CS0}}$ to $\overline{\text{CS3}}$), set bit of control register (P4CR) to "1" after setting bit of function register (P4FC) to "1". If P4FC is set after setting P4CR, value of P4 register is outputted between setting P4CR and setting P4FC.
- Note 4: When setting TXD2 pin to open-drain output, write "1" to bit2 of ODE register. P42/RXD2 pin does not have a register which changes Port/Function. For example, when it is also used as an input port, the input signal is inputted to SIO as serial receiving data.

Page 65 2007-10-15

4.6 Port 5 (P50 to P57)

Port 5 is an 8-bit general-purpose I/O port. By the reset action, it becomes Hi-Z and becomes analog input permission. All bits of output latch register P5 are set to "1".

There are the following functions in addition to an I/O port.

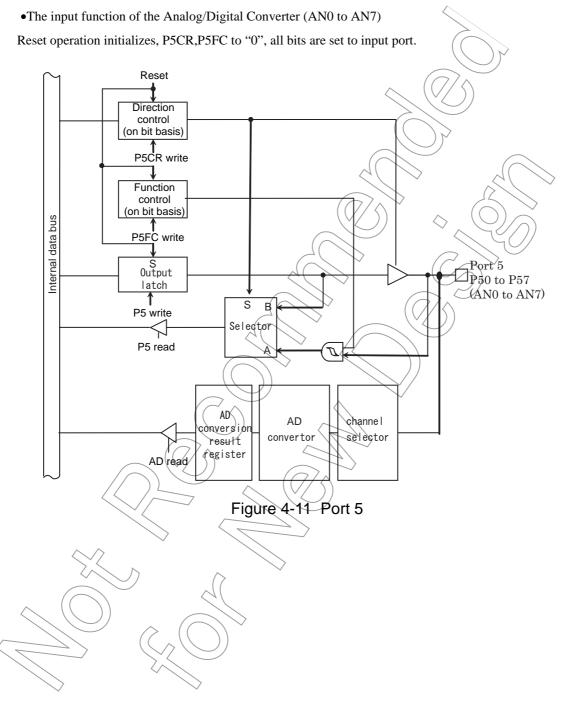

Page 66 2007-10-15

Port 5 Register

P5 (0014H)

	7	6	5	4	3	2	1	0		
Bit symbol	P57	P56	P55	P54	P53	P52	P51	P50		
Read/Write		RW								
After reset		Data from external port (Output latch register is set to 1.)								

Port 5 Control Register (Read-modify-write instructions are prohibited.)

P5CR (0016H)

						<u> </u>		
	7	6	5	4	3	2	1	0
Bit symbol	P57C	P56C	P55C	P54C	P53¢	P52C	P51C	P50C
Read/Write				1	N _			
After reset	0	0	0	0	(0)	0	0	0
Function				0: Input	1: Qutput	/		

Port 5 Function Register (Read-modify-write instructions are prohibited.)

P5FC (0017H)

	7	6	5	4	3	(2	√ 1	0
Bit symbol	P57F	P56F	P55F	P54F	P53F	P52F)	P51F	P50F
Read/Write				//> /	N (C	77/\		
After reset	0	0	0	> 0	0	())0	0	0
Function	P57 input 0:disable 1:enable	P56 input 0:disable 1:enable	P55 input 0:disable 1:enable	P54 input 0:disable 1:enable	P53 input 0:disable 1:enable	P52 input 0:disable 1:enable	P51 input 0:disable 1:enable	P50 input 0:disable 1:enable

P5xF	P5xC	P57 function	P56 function	P55 function	P54 function	P53 function	P52 function	P51 function	P50 function
0	0	input disable							
0	1	output port							
1	0 /	input enable							
1	1	output port							

Note 1: <P5xF>/<P5xC> is bit X of each register P5FC/P5CR.


Note 2: The input channel selection of AD converter are set by AD converter mode register ADCCR1.



4.7 Port 6 (P60 to P67)

Port 6 is an 8-bit general-purpose I/O port. By the reset action, it becomes Hi-Z and becomes analog input permission. All bits of output latch register P6 are set to "1".

There are the following functions in addition to an I/O port.

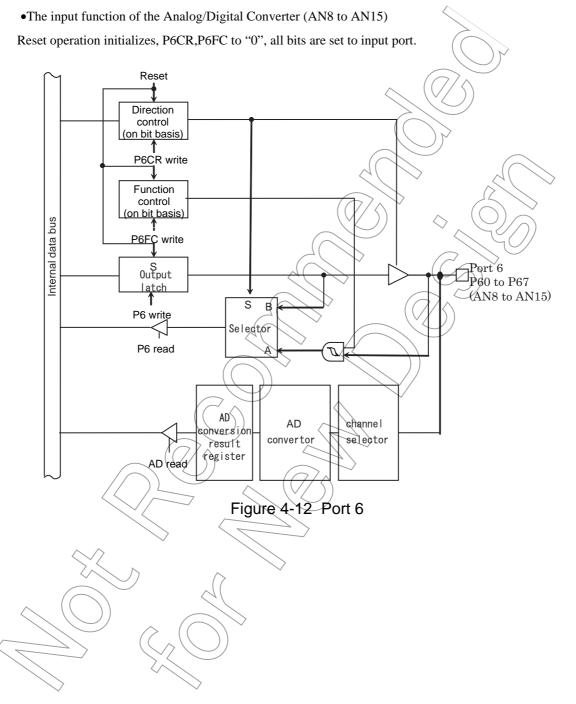

Page 68 2007-10-15

Port 6 Register

P6 (0018H)

	7	6	5	4	3	2	1	0			
Bit symbol	P67	P66	P65	P64	P63	P62	P61	P60			
Read/Write		R/W									
After reset		Data from external port (Output latch register is set to "4".)									

Port 6 Control Register (Read-modify-write instructions are prohibited.)

P6CR (001AH)

						\				
	7	6	5	4	3	2	1	0		
Bit symbol	P67C	P66C	P65C	P64C	P63¢	P62C	P61C	P60C		
Read/Write		W								
After reset	0	0	0	0	(0)	0	0	0		
Function				0: Input	1: Qutput					

Port 6 Function Register (Read-modify-write instructions are prohibited/)

P6FC (001BH)

	7	6	5	4	3	(2	√ 1	0
Bit symbol	P67F	P66F	P65F	P64F	P63F	P62F)	P61F	P60F
Read/Write				//> /	v (77/^		
After reset	0	0	0	> 0	0 \)0	0	0
Function	P67 input 0:disable 1:enable	P66 input 0:disable 1:enable	P65 input 0:disable 1:enable	P64 input 0:disable 1:enable	P63 input 0:disable 1:enable	P62 input 0:disable 1:enable	P61 input 0:disable 1:enable	P60 input 0:disable 1:enable

P6xF	P6xC	P67 function	P66 function	P65 function	P64 function	P63 function	P62 function	P61 function	P60 function
0	0	input disable							
0	1	output port	output/port	output port					
1	0 /	input enable							
1	1	output port							

Page 69

Note 1: <P6xF>/<P6xC> is bit X of each register P6FC/P6CR.

Note 2: The input channel selection of AD converter are set by AD converter mode register ADCCR1.

2007-10-15

TOSHIBA TMP91FW60

4.8 Port 7 (P70 to P75)

Port 7 is an 6-bit general-purpose I/O port. Reset operation initializes to input port. All bits of output latch register P7 are set to "1".

There are the following functions in addition to an I/O port. This function enable each function by writing "1" to applicable bit of port 7 function register P7FC.

- •The I/O function of 8-bit timer 01 (TA0IN,TA1OUT)
- •The output function of 8-bit timer 23 (TA3OUT)
- •The I/O function of 8-bit timer 45 (TA4IN,TA5OUT)
- •The input function of external interrupt (INT0)

Reset operation initializes, P7CR and P7FC to "0", all bits are set to input port


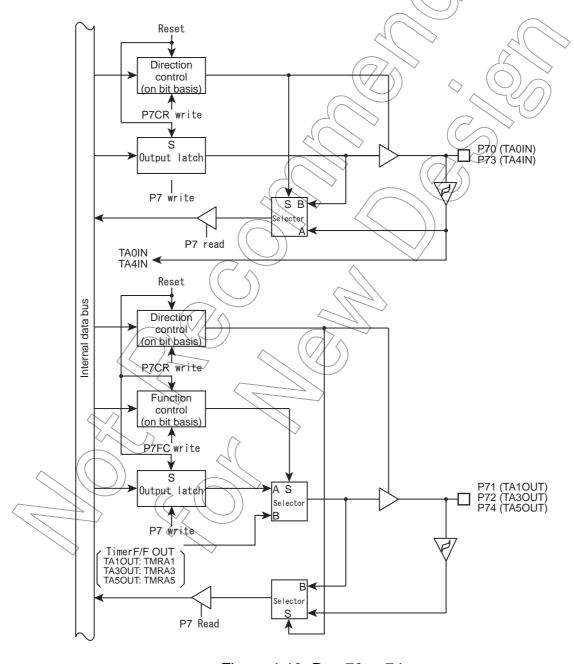


Figure 4-13 Port 70 to 74

Page 70 2007-10-15

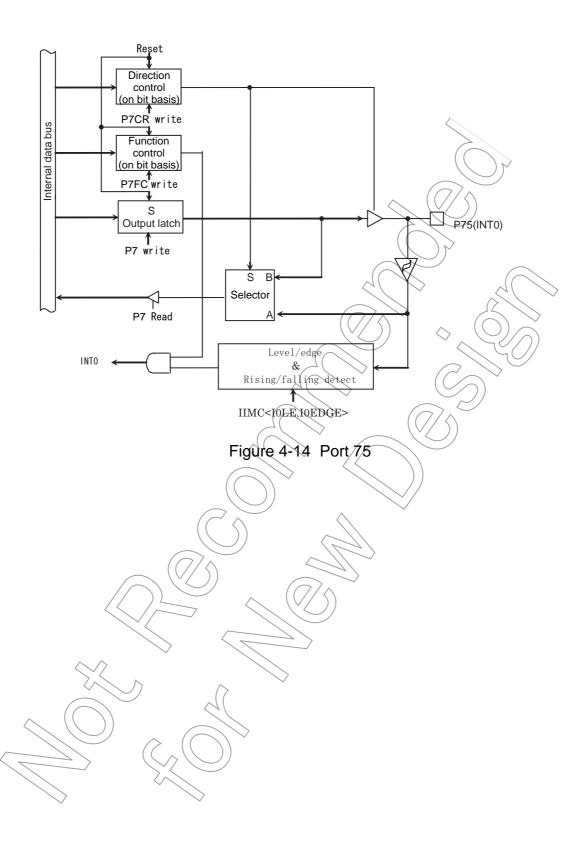

Page 71 2007-10-15

Port 7 Register

P7 (001CH)

	7	6	5	4	3	2	1	0			
Bit symbol	_	-	P75	P74	P73	P72	P71	P70			
Read/Write	_	-		R/W							
After reset	-	-		Data from external port (Output latch register is set to "1".)							

Port 7 Control Register (Read-modify-write instructions are prohibited.)

P7CR (001EH)

	7	6	5	4	3 (7/2)	1	0		
Bit symbol	_	_	P75C	P74C	P73C P72C	P71C	P70C		
Read/Write	_	_		W					
After reset	_	_	0	0	0 0	0	0		
Function					0: Input 1: Output				

Port 7 Function Register (Read-modify-write instructions are prohibited.)

P7FC (001FH)

					_ / /		///\	
	7	6	5	4	3	2	50/	0
Bit symbol	-	1	P75F	P74F	_	P72F) P71F	_
Read/Write	-	1	♦	W \	1		N	-
After reset	-	1	0	9	- (0	-
Function			0: port 1: INT0	0: port 1: TA5OUT		0: port 1: TA3OUT	0: port 1: TA1OUT	

P75 INTO setting

<p75f></p75f>	<iole></iole>	<ioedge></ioedge>	ито
1	0		Rising edge detect INT
1	0 (1	falling edge detect INT
1	1	<u> </u>	H level INT
1	$(/ / \wedge)$	1	L leveLINT

				/		/		
	P7xF	P7xC	P75 function	P74 function	P73 function	P72 function	P71 function	P70 function
	0	○ ○	input port	input port	input port (TA4IN)	input port	input port	input port (TA0IN)
	0	\n'\	output port	output port	output port	output port	output port	output port
	1	0) INTO	reserved	reserved	reserved	reserved	reserved
Į	<u>\</u>	(1))	reserved	TASOUT	reserved	TA3OUT	TA1OUT	reserved

Note 1: <P7xF>/<P7xC> is bit X of each register P7FC/P7CR.

Note 2: P70/TA0IN, P73/TA4IN pin dose not have a register changing PORT/FUNCTION. For example, when it is used as an input port, the input signal is inputted to 8bit Timer.

Page 72 2007-10-15

TOSHIBA TMP91FW60

4.9 Port 8 (P80 to P87)

Port 8 is an 8-bit general-purpose I/O port. Reset operation initializes to input port. All bits of output latch register P8 are set to "1".

There are the following functions in addition to an I/O port. This function enable each function by writing "1" to applicable bit of port 8 function register P8FC.

- •The I/O function of 16-bit timer 0 (TB0IN0,TB0IN1,TB0OUT0,TB0OUT1)
- •The I/O function of 16-bit timer 1 (TB1IN0,TB1IN1,TB1OUT0,TB1OUT1)
- •The input function of external interrupt (INT5 to INT8)

Reset operation initializes, P8CR and P8FC to "0", all bits are set to input port

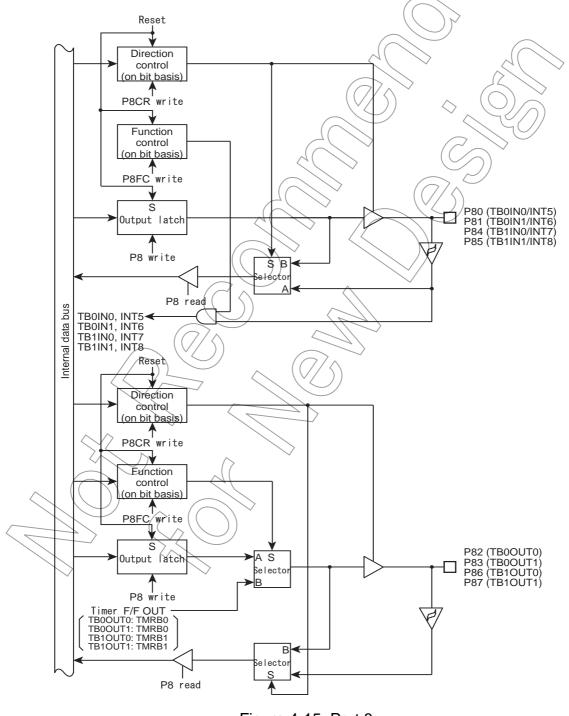


Figure 4-15 Port 8

Page 73 2007-10-15

Port 8 Register

P8 (0020H)

	7	6	5	4	3	2	1	0		
Bit symbol	P87	P86	P85	P84	P83	P82	P81	P80		
Read/Write		RW								
After reset		Data from external port (Output latch register is set to "1".)								

Port 8 Control Register (Read-modify-write instructions are prohibited.)

P8CR (0022H)

	7	6	5	4	3 2	1	0			
Bit symbol	P87C	P86C	P85C	P84C	P83C P82C	P81C	P80C			
Read/Write		w								
After reset	0	0	0	0	0 0	0	0			
Function		0: Input 1: Output								

Port 8 Function Register (Read-modify-write instructions are prohibited.)

P8FC (0023H)

	7	6	5	4	3	_2	>	0
Bit symbol	P87F	P86F	P85F <	P84F	P83F	(P82F)	P81F	P80F
Read/Write				/// ' /	N			
After reset	0	0	0	0	0 ((/	/\\\\ 0	0	0
Function	0: port 1: TB1OUT1	0: port 1: TB1OUT0	0: port 1: TB1JN1, JNT8	0: port 1: TB1IN0, INT7	0: port 1: TB0QUT1	0: pørt 1: TB0OUT0	0: port 1: TB0IN1, INT6	0: port 1: TB0IN0, INT5

						~			
P8xF	P8xC	P87 function	P86 function	P85 function	P84 function	P83 function	P82 function	P81 function	P80 function
0	0	input port							
0	1	output port							
1	0 <	reserved	reserved	TB1IN1/	TB1NO/ INT7	reserved	reserved	TB0IN1/ INT6	TB0IN0/ INT5
1	1	TB10UT1	TB1OUT0	reserved	reserved	TB0OUT1	TB0OUT0	reserved	reserved

Note: <P8xF>/<P8xC> is bit X of each register R8FC/P8CR.



TOSHIBA TMP91FW60

4.10 Port 9 (P90 to P97)

• Port 90 to 95

Port 90 to 95 are a 6-bit general-purpose I/O port. Reset operation initializes to input port. All bits of output latch register are set to "1".

In addition to functioning as a I/O port, port 90 to 95 can also function as I/O of SIO0, SIO1. This function enable each function by writing "1" to applicable bit of port 9 function register P9FC.

Reset operation initializes P9CR and P9FC to "0", all bits are set to input port,


• Port 96 to 97

Port 96 to 97 are a 2-bit general-purpose I/O port. In case of output port, this is open drain output. Reset operation initializes output latch register and control register to "1", and it is set to "High-Z" (High impedance).

In addition to functioning as a I/O port, port 96 to 97 can also function as low-frequency oscillator connection pin (XT1 and XT2) during using low speed clock function. Therefore, dual clock function can use by setting of system clock control registers SYSCR0 and SYSCR1.

4.10.1 Port 90 and 93 (TXD0 and TXD1)


In addition to functioning as a I/O port, Port 90 and 93 can also function as TXD output pin of serial channel. And Port 90 and 93 have a programmable open-drain function which can be controlled by the ODE register.

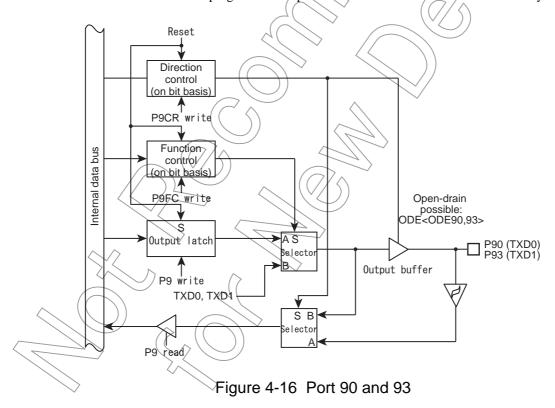

Page 75 2007-10-15

4.10.2 Port91(RXD0), 94 (RXD1)


In addition to functioning as a I/O port, port 91 and 94 can also function as RXD input pin of serial channel.

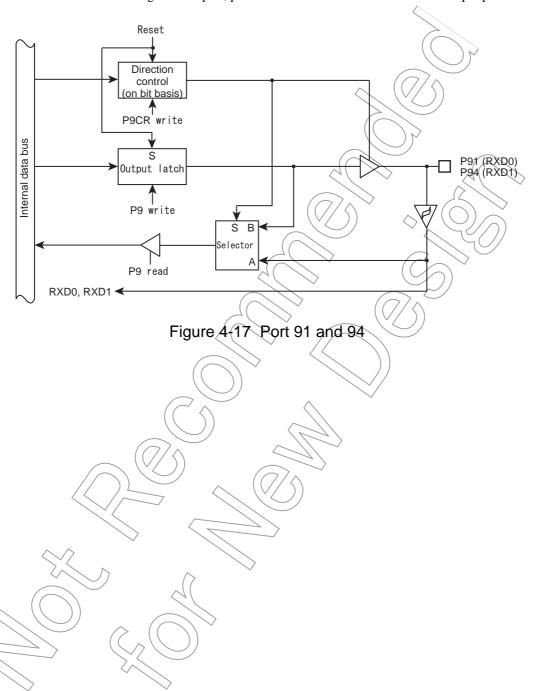

Page 76 2007-10-15

4.10.3 Port 92(CTS0/SCLK0), 95 (CTS1/SCLK1)

In addition to functioning as a I/O port, port 92 and 95 can also function as CTS input pin or SCLK I/O pin of serial channel

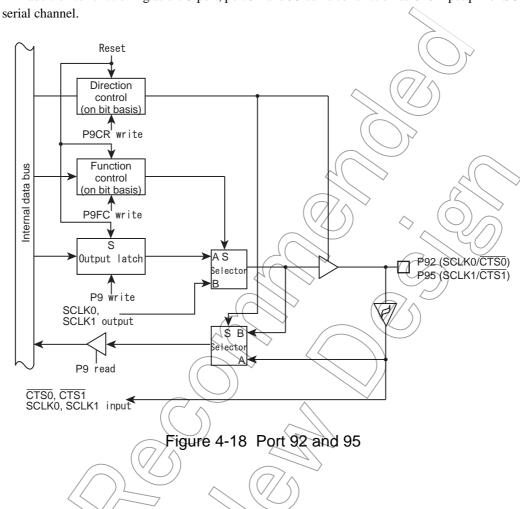

Page 77

2007-10-15

4.10.4 Port 96 (XT1), 97 (XT2)

In addition to functioning as a I/O port, port 96 and 97 can also function as low frequency oscillator connection pins.

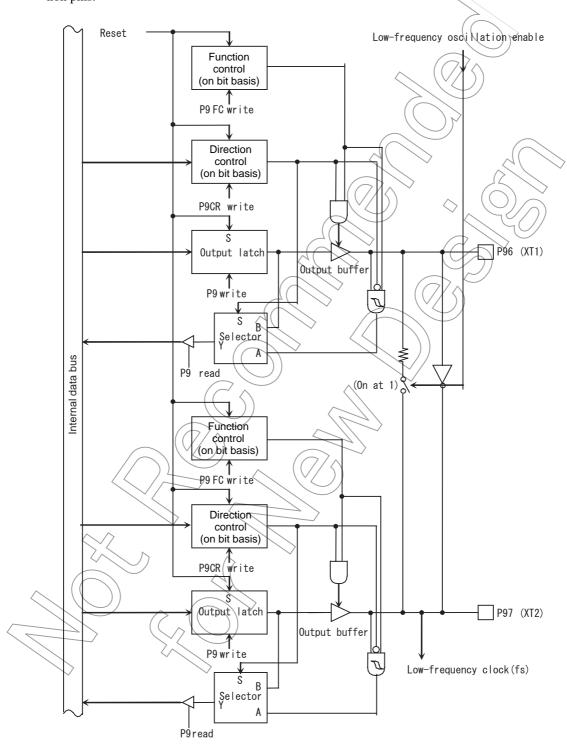


Figure 4-19 Port 96 and 97

Page 78 2007-10-15

Port 9 Register

P9 (0024H)

	7	6	5	4	3	2	1	0			
Bit symbol	P97	P96	P95	P94	P93	P92	P91	P90			
Read/Write		RW									
After reset		Data from external port (Output latch register is set to "1".)									

Port 9 Control Register (Read-modify-write instructions are prohibited.)

P9CR (0026H)

	7	6	5	4	3	2	1	0			
Bit symbol	P97C	P96C	P95C	P94C	P93C	(P92C)	P91C	P90C			
Read/Write		W									
After reset	1	1	0	0	6) > o	0	0			
Function		0: Input 1: Output									

Port 9 Function Register (Read-modify-write instructions are prohibited.)

P9FC (0027H)

				1 / /	<u> </u>			
	7	6	5	4	3	2	(//1))	0
Bit Symbol	P97F	P96F	P95F	7(-//	P93F	P92F		P90F
Read/Write		W	^	('	N()	_	W
After reset	0	0	0		0		-	0
Function	Port 0: disable 1: enable	Port 0: disable 1: enable	0: port 1: SCLK1 output		0: port 1: TXD1 out-	0: port 1: \$CLK0 output		0: port 1: TXD0 out- put

P9xF	P9xC	P97 function	P96 function	P95 function	P94 function	P93 function	P92 function	P91 function	P90 function
0	0	XT2	XT1) input port	input port	input port	input port	input port	input port
0	1	reserved	reserved	output port					
1	0	input port	input port	reserved	reserved	reserved	reserved	reserved	reserved
1	1	output port	output port	SCLK1	reserved	TXD1	SCLK0	reserved	TXD0

Note 1: <P9xF>/<P9xC> is bit X of each register P9FC/P9CR

Note 2: When setting TXD pin to open-drain output, write "1" to bit3 of ODE register (for TXD0 pin), or bit4 (for TXD1 pin). P91/RXD0 and P94/RXD1 pin does not have a register which changes Port/Function.

For example, when it is also used as an input port, the input signal is inputted to SIO as serial receiving data.

Note 3: Low frequency oscillation circuit

To connect a low frequency resonator to port 96 and 97, it is necessary to set a following procedure to reduce the consumption power supply.

(Case of resonator connection)

P9CR<P96C, P97C> = "11", P9<P96:97> = "00"

(Case of external clock input)

P9CR<P96C, P97C> = "11", P9<P96:97> = "10"

Page 79 2007-10-15

4.11 Port A (PA0 to PA3)

Port A is an 4-bit general-purpose I/O port. Reset operation initializes to input port. All bits of output latch register PA are set to "1".

There are the following functions in addition to an I/O port. This function enable each function by writing "1" to applicable bit of port A function register PAFC.

•The I/O function of 16-bit timer 2 (TB2IN0,TB2IN1,TB2OUT0,TB2OUT1)

•The input function of external interrupt (INT1, INT2)

Reset operation initializes, PACR and PAFC to "0", all bits are set to input port. Direction control (on bit basis) PACR write Function control (on bit basis) PAFC write PA0 (TB2IN0/INT1) PA1 (TB2IN1/INT2) Output latch PΑ SB elector PA read Internal data bus TB2IN0, INT1 TB2IN1, INT2 Reset Direction control (on bit/basis) PACR write Function control (on bit basis) → T PAFC write Output Patch A S PA2 (TB2OUT0) PA3 (TB2OUT1) PΑ Timer F/F OUT TB02UT0: TMRB2 TB02UT1: TMRB2 PA read

Figure 4-20 Port A

Page 80 2007-10-15

Port A Register

PA (0028H)

	7	6	5	4	3	2	1	0	
Bit symbol	-	-	-	-	PA3	PA2	PA1	PA0	
Read/Write	-	-	-	-	R/W				
After reset	-	-	-	-	Data from external port (Output latch register is set to "1".)				

Port A Control Register (Read-modify-write instructions are prohibited.)

PACR (002AH)

	7	6	5	4	3 2 1 0			
Bit symbol	-	-	_	-	PA3C PA2C PA1C PA0C			
Read/Write	_	_	1	ı	W			
After reset	-	-	-	Ì	0 0			
Function	-	-	-	-	0: Input 1: Output			

Port A Function Register (Read-modify-write instructions are prohibited.)

PAFC (002BH)

	7	6	5	4	3	2	(//1))	0
Bit symbol	_	-	_	_(-/	PA3F	PA2F	PATE	PA0F
Read/Write	_	-	- ^				M	
After reset	_	-	-		0		0	0
Function	-	-		\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	0: port 1: TB2OUT1	0:port 1: TB2OUT0	0: port 1: TB2IN1, INT2	0: port 1: TB2IN0, INT1

PAxC	PAxF	PA3	PA2 \	PA1	PA0
TAXO	I AXI	function	function	function	function
0	0	input port	input port) input port	input port
0	1	output port	output port	output port	output port
1	0	reserved	reserved	TB2IN1/ INT2	TB2IN0/INT1
1	1	TB2OUT1	TB2OUT0	reserved	reserved

Note: <PAxF>/<PAXC> is bit X of each register PAFC/PACR.



TOSHIBA TMP91FW60

4.12 Port B (PB0 to PB3)

Port B is an 4-bit general-purpose I/O port. Reset operation initializes to input port. All bits of output latch register PB are set to "1".

There are the following functions in addition to an I/O port. This function enable each function by writing "1" to applicable bit of port B function register PBFC.

•The I/O function of 16-bit timer 4 (TB4IN0,TB4IN1,TB4OUT0,TB4OUT1)

•The input function of external interrupt (INT9, INT10)

•The I/O function of serial bus interface 1 (SDA1, SCL1)

Reset operation initializes, PBCR and PBFC to "0", all bits are set to input port


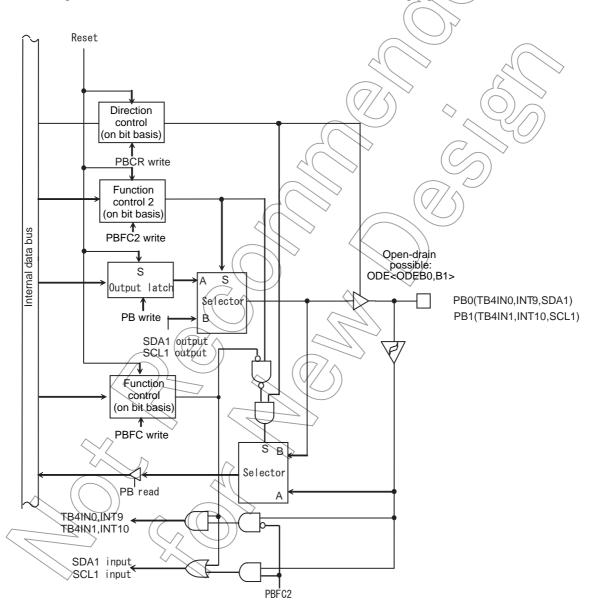


Figure 4-21 Port B0 and B1

Page 82 2007-10-15

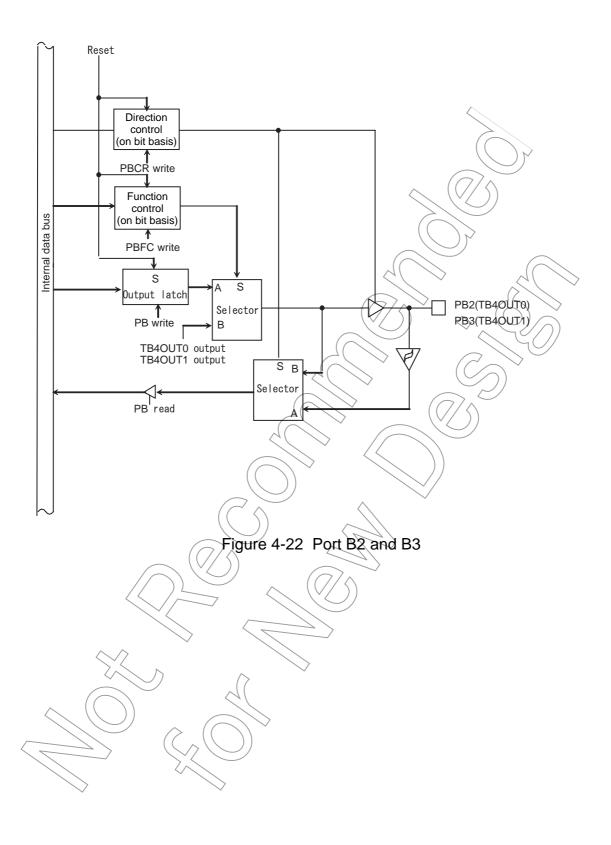

Page 83 2007-10-15

Port B Register

PB (002CH)

	7	6	5	4	3	2	1	0	
Bit symbol	-	-	-	-	PB3	PB2	PB1	PB0	
Read/Write	-	_	-	-	R/W				
After reset	-	_	-	-	Data from external port (Output latch register is set to "1".)				

Port B Control Register (Read-modify-write instructions are prohibited.)

PBCR (002EH)

	7	6	5	4	3 2	1	0	
Bit symbol	-	_	1	ı	PB3C PB2C	PB1C	PB0C	
Read/Write	-	_	1	ı	W			
After reset	_	-	-	Ì	0 0	0	0	
Function	-	-	_	-	0: Input 1: Output			

Port B Function Register (Read-modify-write instructions are prohibited.)

PBFC (002FH)

	7	6	5	4	3	2	(1/1)	0
Bit symbol	-	1	_	_(-//	PB3F	PB2F	PB2F	PB0F
Read/Write	-	1	- ^				Ň	
After reset	-	-	- (\\ -\\	0		0	0

Port B Function Register 2 (Read-modify-write instructions are prohibited.)

PBFC2 (002DH)

	7	6	5	4	3))	2	1	0
Bit symbol	-	- \		-		-	PB1F2	PB0F2
Read/Write	-	$f \supset 1$		-<		-	١	V

					_ \	
PBxC	PBxF	PBxF2	PB3 function	PB2 function	PB1 function	PB0 function
0	0	\o\	input port	input port	input port	input port
1	0	0	output port	output port	output port	output port
0	1	0	reserved	reserved	TB4IN1/INT10	TB4IN0/INT9
1	21/	8	TB4OUT1	TB4OUT0	reserved	reserved
0	0		reserved	reserved	reserved	reserved
^1	0	1	reserved	reserved	SCL1	SDA1
0	+	1 ^	reserved	reserved	reserved	reserved
1	1	1((reserved	reserved	reserved	reserved

Note: <PBxF>/<PBxC> is bit X of each register PBFC/PBCR.

Page 84 2007-10-15

TOSHIBA TMP91FW60


4.13 Port Z (PZ0 to PZ3)

Port Z is a 4-bit general-purpose I/O port (however PZ0 and PZ1 are only output port). Each bit can be set individually for input or output using the control register PZCR and function register PZFC. Reset operation initializes all bits of output latch PZ to "1", and the control register PZCR and function register PZFC to "0". And PZ0 and PZ1 output "High", and sets PZ2 and PZ3 to input port with pull-up resister.

In addition to functioning as a general-purpose I/O port, port Z can also function as the output for the CPU's control/status signal.

If PZ0 is defined as \overline{RD} signal output mode ($\langle PZ0F \rangle = "1"$) and the output latch register $\langle PZ0 \rangle$ is cleared to "0", \overline{RD} strobe of PZ0 is outputted (for pseudo static RAM) even when accessing internal address.

If <PZ0 > remains "1", RD strobe signal is output only when external address area is accessed.

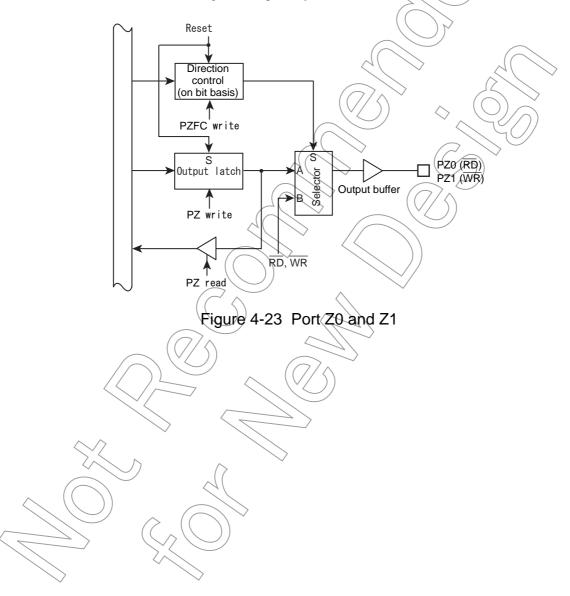

Page 85 2007-10-15

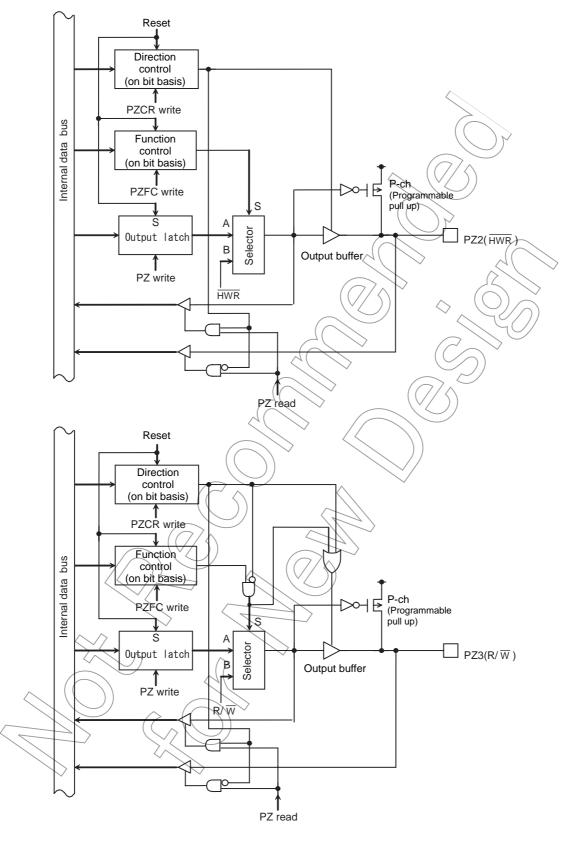


Figure 4-24 Port Z2 and Z3

Page 86 2007-10-15

Port Z Register

PZ (007DH)

	7	6	5	4	3	2	1	0	
Bit symbol	-	_	-	-	PZ3	PZ2	PZ1	PZ0	
Read/Write	-	1	-	-	R/W				
After reset	-	-	-	-	(Output latch	external port register is set '1".)	1	1	
Function			_		Pull-up re 1 (Output la	tch register): sistor OFF tch register): esistor ON	outpu	t mode	

Port Z Control Register (Read-modify-write instructions are prohibited.)

PZCR (007EH)

	7	6	5	4 3 2 0
Bit symbol	-	_	-	- RZ3C PZ2C
Read/Write	-	-	-	- () w
After reset	-	1	1	- 0 0 -
Function			-	0:Input 1:Output

Port Z Function Register (Read-modify-write instructions are prohibited.)

PZFC (007FH)

	7	6	5	√ 4	3 🗸	())2	1	0
Bit symbol	-	-	4- /	> - //	PZ3F	PZ2F	PZ1F	PZ0F
Read/Write	-	-		- <<		1	N	
After reset	_	- (()-	-	0//	0	0	0
Function	-			-	0: port 1:R/ W	0: port 1: HWR	0: port 1: WR	0: port 1: RD

			101					
PZxF	PZxC	PZx	function PZ2 function		PZ1 function	PZ0 function		
0	0 <	0/~	input port	input port	Output "0".	Output "0".		
0	0	\\1\	input port	input port	Output "1".	Output "1".		
0	1	0	output port	output port	Output "0".	Output "0".		
0	⟨¹/⟩	1	output port	output port	Output "1".	Output "1".		
1	0		R/W	reserved	WR is output only during external accesses.	Always output $\overline{\text{RD}}$.(Correspond to pseudo SRAM)		
_1	0	1	R/W	reserved	WR is output only during external accesses.	RD is output only during external accesses.		
1) -	0	reserved	HWR	WR is output only during external accesses.	Always output RD.(Correspond to pseudo SRAM)		
1	1	1	reserved	HWR	WR is output only during external accesses.	RD is output only during external accesses.		

Note 1: <PZxF>/<PZxC> is bit X of each register PZFC/PZCR.

Note 2: When port Z is used as input mode, PZ register controls internal pull-up resistor. Read-modify-write instruction is prohibited in input mode or I/O mode. Setting the internal pull-up resistor may be depended on the states of the input pin.

Page 87 2007-10-15

TMP91FW60

4.14 Open-drain Control

P30,P31,P41,P90,P93,PB0,PB1 can perform selection of an open-drain output per bit. Reset operation initializes all bits of the control register ODE to "0" and sets to CMOS output.

Open-drain Control Register

ODE (003FH)

in Control R	egister							
	7	6	5	4	3	2	1	0
Bit symbol	_	ODEB1	ODEB0	ODE93	ODE90	ODE41	ODE31	ODE30
Read/Write	_				R/W			
After reset	_	0	0	0	<u>⟨</u> 0_	((// 0))	0	0
Function					0: CMOS output: Open drain out			



Page 88 2007-10-15

TMP91FW60

5. Chip Select/Wait Controller

On the TMP91FW60, four user specifiable address areas (CS0 to CS3) can be set. The data bus width and the number of waits can be set independently for each address area (CS0 to CS3 and others).

The pins $\overline{\text{CS0}}$ to $\overline{\text{CS3}}$ (which can also function as port pins P40 to P43) are the respective output pins for the areas CS0 to CS3. When the CPU specifies an address in one of these areas, the corresponding $\overline{\text{CS0}}$ to $\overline{\text{CS3}}$ pin outputs the chip select signal for the specified address area (in ROM or SRAM). However, in order for the chip select signal to be output, the port 6 function register P4FC,P4FC2 must be set.

The areas CS0 to CS3 are defined by the values in the memory start address registers MSAR0 to MSAR3 and the memory address mask registers MAMR0 to MAMR3.

The chip select/wait control registers B0CS to B3CS and BEXCS should be used to specify the master enable/disable status the data bus width and the number of waits for each address area.

The input pin controlling these states is the bus wait request pin (WAIT).

5.1 Specifying an Address Area

The CS0 to CS3 address areas are specified using the start address registers (MSAR0 to MSAR3) and memory address mask registers (MAMR0 to MAMR3).

At each bus cycle, a compare operation is performed to determine if the address on the specified a location in the CS0 to CS3 area. If the result of the comparison is a match, this indicates an access to the corresponding CS area. In this case, the $\overline{CS0}$ to $\overline{CS3}$ pin outputs the chip select signal and the bus cycle operates in accordance with the settings in chip select/wait control registers B0CS to B3CS. (See "5.2 Chip Select/Wait Control Registers".)

5.1.1 Memory start address registers

The memory start address registers MSAR0 to MSAR3 set the start addresses for the CS0 to CS3 areas. Set the upper 8 bits (A23 to A16) of the start address in <\$23:16. The lower 16 bits of the start address (A15 to A0) are permanently set (o.). Accordingly, the start address can only be set in 64-Kbyte increments, starting from 000000H Figure 5-1 shows the relationship between the start address and the start address register value.

Memory Start Address Registers (for areas CS0 to CS3)

		7	6	5	4	3	2	1	0
MSAR0	Bit symbol	S23	S22	S21	S20	S19	S18	S17	S16
(00C8H)	Read/Write		\wedge		R	/W			
MSAR1	After reset	1 <	1	1	1	1	1	1	1
(00CAH)		>							
MSAR2 (00CCH)	(())	Dete	rmine A23 to A	A16 of start ad	dress		
(00001)	_/Function	2/		(Set sta	rt addresses f	or areas CS0 t	to CS3.)		
MSAR3 (00CEH)		`							

Page 89 2007-10-15

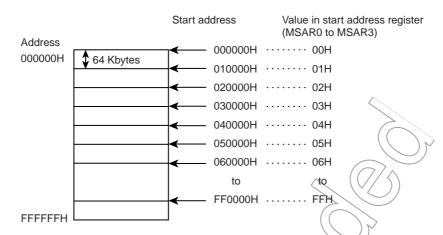


Figure 5-1 Relationship between Start Address and Start Address Register Value

5.1.2 Memory address mask registers

Memory address mask registers MAMR0 to MAMR3 are used to set the size of the CS0 to CS3 areas by specifying a mask for each bit of the start address set in memory start address registers MAMR0 to MAMR3. The compare operation used to determine if an address is in the CS0 to CS3 areas is only performed for bus address bits corresponding to bits set to "0" in these registers. Also, the address bits that can be masked by MAMR0 to MAMR3 differ between CS0 to CS3 areas. Accordingly, the size that can be each area is different.

Memory Address Mask Register (for CS0 area)

MAMR0 (00C9H)

			\sim		1 1			
	7	(6	5	4	/3/	2	1	0
Bit symbol	V20	V19	V18	V17	V16	V15	V14 to V9	V8
Read/Write	(R	W			
After reset	1		1 '	(1/2)	1	1	1	1
Function	(O/	^	Set size of C	SSO area 0:	Used for addr	ess compare		

Note: Range of possible settings for CS0 area size: 256 bytes to 2 Mbytes.

Memory Address Mask Register (CS1)

MAMR1 (00CBH)

\wedge	7	6	5	4	3	2	1	0		
Bit symbol	V21	V20	V19	V18	V17	V16	V15 to V9	V8		
Read/Write		R/W								
After reset	1	1	1	1	1	1	1	1		
Function	^ (Set size of CS1 area 0: Used for address compare								

Note: Range of possible settings for CS1 area size: 256 bytes to 4 Mbytes.

Memory Address Mask Register (CS2, CS3)

MAMR2 (00CDH) MAMR3 (00CFH)

	7	6	5	4	3	2	1	0			
Bit symbol	V22	V21	V20	V19	V18	V17	V16	V15			
Read/Write		R/W									
After reset	1	1	1	1	1	1	1	1			
Function		Set size of CS1 area 0: Used for address compare									

Note: Range of possible settings for CS2 and CS3 area sizes: 32 Kbytes to 8 Mbytes.

Page 90 2007-10-15

TMP91FW60

5.1.3 Setting memory start addresses and address areas

Figure 5-2 shows an example of specifying a 64-Kbyte address area starting from 010000H using the CS0 areas.

Set "01H" in memory start address register MSAR0<S23:16> (Corresponding to the upper 8 bits of the start address). Next, calculate the difference between the start address and the anticipated end address (01FFFFH). Bits 20 to 8 of the result correspond to the mask value to be set for the CS0 area. Setting this value in memory address mask register MAMR0<V20:8> sets the area size.

This example sets "07H" in MAMR0 to specify a 64-Kbyte area.

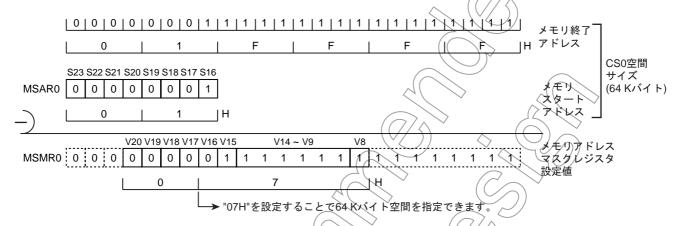


Figure 5-2 Example Spowing How to Set the CS0 Area

After a reset, MSAR0 to MSAR3 and MAMR0 to MAMR3 are set to "FFH". B0CS<B0E>, B1CS<B1E> and B3CS<B3E> are reset to "0". This disables the CS0, CS1 and CS3 areas. However, as B2CS<B2M> to "0" and B2CS<B2E> to "1", CS2 is enabled "002000 to FDFFFF" in TMP91FW60. Also, the bus width and number of waits specified in BEXCS are used for accessing addresses outside the specified CS0 to CS3 area.



Page 91 2007-10-15

5.1.4 Address area size specification

Table 5-1 shows the relationship between CS area and area size. " Δ " indicates areas that cannot be set by memory start address register and address mask register combinations. When setting an area size using a combination indicated by " Δ ", set the start address mask register in the desired steps starting from 000000H.

If the CS2 area is set to 16 Mbytes or if two or more areas overlap, the smaller CS area number has the higher priority.

To set the area size for CS0 to 128 Kbytes: 5.1.4.1 Example: Valid start addresses 000000H ↓ (128 Kbytes) 020000H ↓ (128 Kbytes) Any of these addresses may be set as the start address 040000H ↓ (128 Kbytes) 060000H Example: Invalid start addresses 000000H ↓ (64 Kbytes) 010000H This is not an integer multiple of the desired area size setting. ↓ (128 Kbytes) Hence, none of these addresses can be set as the start address. 030000H ↓ (128 Kbytes) 050000H

Table 5-1 Valid Area Sizes for Each CS Area

	\ ((Size (Bytes)				
		256	512	32 K	64 K	128 K	256 K	512 K	1 M	2 M	4 M	8 M
	CS0	<u></u> 0	Q./) o	Δ	Δ	Δ	Δ	Δ		
area	CS1	О	O _{<}		О	Δ	Δ	Δ	Δ	Δ	Δ	
SS	CS2			0	О	Δ	Δ	Δ	Δ	Δ	Δ	Δ
	CS3		·	О	О	Δ	Δ	Δ	Δ	Δ	Δ	Δ

Note: "\Delta" indicates areas that cannot be set by memory start address register and address mask register combinations.

Page 92 2007-10-15

5.2 Chip Select/Wait Control Registers

The master enable/disable, chip select output waveform, data bus width and number of wait states for each address area (CS0 to CS3 and others) are set in their respective chip select/wait control registers, B0CS to B3CS and BEXCS.

Chip Select/Wait Control Registers

						/	///		
		7	6	5	4	⟨3√	(// 2))	1	0
	Bit symbol	B0E	-	B0OM1	B0OM0	B0BUS	B0W2	B0W1	B0W0
D000	Read/Write	W	-				M >		
B0CS (00C0H)	After reset	0	-	0	0	0	<i>)</i> 0	0	0
RMW instructions are prohibited.	Function	0: Disable 1: Enable		00: For ROM/SRAM 01: Don't care		Data bus width 0: 16 bits 1: 8 bits	Number of waits 000: 2 WAIT 100: Reserved 001: 1 WAIT 104: 3 WAIT 110: 4 WAIT 111: 8 WAIT		AIT AIT
	Bit symbol	B1E	-	B1OM1	B1OM0	B1BUS	B1W2	B1W1	B1W0
B1CS	Read/Write	W	=	7(//		V	W(\(\)	•	
(00C1H) RMW instructions are prohibited.	After reset	0	=	0 (0	0	() ()	0	0
	Function	0: Disable 1: Enable	(Chip select ou selection 00; For ROM/S 01: Don't care 10: Don't care 11: Don't care	RAM	Data bus width 0: 16 bits 1: 8 bits	Number of waits		
	Bit symbol	B2E	B2M_	B2OM1	B2OM0	B2BUS	B2W2	B2W1	B2W0
B2CS	Read/Write	W		\wedge		W			
(00C2H)	After reset	1	9/	// o	Q	0	0	0	0
RMW instructions are prohibited.	Function	0: Disable 1: Enable	CS2 area selection 0: 16-Mbyte area 1: CS area	Chip select output waveform selection 00: For ROM/SRAM 01: Don't care 10: Don't care 11: Don't care		Data bus width 0: 16 bits 1: 8 bits	Number of waits 000: 2 WAIT 100: Reserved 001: 1 WAIT 101: 3 WAIT 010: 1 WAIT+N 110: 4 WAIT 011: 0 WAIT 111: 8 WAIT		AIT AIT
	Bit symbol	B3E	> -	B3OM1	—∕ B3OM0	B3BUS	B3W2	B3W1	B3W0
B3CS	Read/Write/	> w	-			V	V		
(00C3H)	After reset		- >	0	0	0	0	0	0
RMW instructions are prohibited.	Function	0: Disable 1: Enable		Chip select ou selection 00: For ROM/S 01: Don't care 10: Don't care 11: Don't care		Data bus width 0: 16 bits 1: 8 bits	Number of wai 000: 2 WAIT 001: 1 WAIT 010: 1 WAIT+1 011: 0 WAIT	100: Res 101: 3 W	AIT AIT

Master enable bit

BnE	0	Disable
(n = 0 to 3)	1	Enable

Chip select output waveform selection

BnOM1:0 (n = 0 to 3)	00	for ROM/SRAM
	01	
	10	Don't care
	11	

CS2 area selection

B2M	0	16-Mbyte area
	1	Specified address area

Data bus width selection

BnBUS	0	16-bit data bus
(n = 0 to EX)	1	8-bit data bus

Page 93 2007-10-15

BEXCS (00C7H) RMW instructions are prohibited.

		7	6	5	4	3	2	1	0
	Bit symbol	-	-	-	-	BEXBUS	BEXW2	BEXW1	BEXW0
	Read/Write	-	-	-	-		/	N	
	After reset	_	1	-	-	0	9	0	0
6	Function					Data bus width 0: 16 bits 1: 8 bits	Number of wait 000: 2 WAIT 001: 1 WAIT 010: 1 WAIT+1 011: 0 WAIT	100: Res 101: 3 W	AIT AIT

Number of address area waits

BnW2:0 (n = 0 to EX)	See" 5.2.3 Wait control "
-------------------------	---------------------------


5.2.1 Master enable bits

Bit7 (<B0E>, <B1E>, <B2E> or <B3E>) of a chip select/wait control register is the master bit which is used to enable or disable settings for the corresponding address area. Writing "1" to this bit enables the settings. Reset disables (Sets to "0") <B0E>, <B1E> and <B3E>, and enabled (Sets to "1") <B2E>. This enables area CS2 only.

5.2.2 Data bus width selection

Bit3 (<B0BUS>, <B1BUS>, <B2BUS> /<B3BUS> or <BEXBUS>) of a chip select/wait control register specifies the width of the data bus. This bit should be set to "0" when memory is to be accessed using a 16-bit data bus and to "1" when an 8-bit data bus is to be used.

This process of changing the data bus width according to the address being accessed is known as "Dynamic bus sizing". For details of this bus operation see Table 5-2.

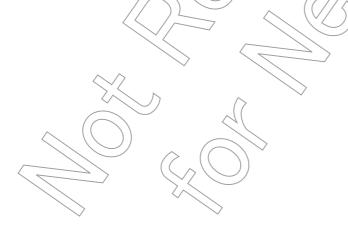

Page 94 2007-10-15

Table 5-2 Dynamic Bus Sizing

Operand Data	Operand Start	Memory Data	CPU Address	CPU	Data
Bus Width	Address	Bus Width	CFO Address	D15 to D8	D7 to D0
	2n + 0	8 bits	2n + 0	xxxxx	b7 to b0
8 bits	(Even number)	16 bits	2n + 0	xxxxx	b7 to b0
o bits	2n + 1	8 bits	2n + 1	xxxxx	b7 to b0
	(Odd number)	16 bits	2n + 1	67 to 60	xxxxx
	2n + 0	8 bits	2n + 0 2n + 1	XXXXX	b7 to b0 b15 to b8
	(Even number)	16 bits	2n + 0	b15 to b8	b7 to b0
16 bits	2n + 1 (Odd number)	8 bits	2n + 1 2n + 2	XXXXX	b7 to b0 b15 to b8
		16 bits	2n + 1 2n + 2	b7 to b0	xxxxx b15 to b8
	2n + 0 (Even number) 2n + 1 (Odd number)	8 bits	2n+0 2n+1 2n+2 2n+3	XXXXX	b7 to b0 b15 to b8 b23 to b16 b31 to b24
		16 bits	2n + 0 2n + 2	b15 to b8 b31 to b24	b7 to b0 b23 to b16
32 bits		8 bits	2n+1 2n+2 2n+3 2n+4	xxxxx xxxxx xxxxx	b7 to b0 b15 to b8 b23 to b16 b31 to b24
		16 bits	2n + 1 2n + 2 2n + 4	b7 to b0 b23 to b16 xxxxx	xxxxx b15 to b8 b31 to b24

Note: "xxxxx" indicates that the input data from these bits are ignored during a read. During a write, indicates that the bus for these bits goes too high impedance; also, that the write strobe signal for the bus remains inactive.

5.2.3 Wait control

Bits 0 to 2 (<B0W0:2>, <B1W0:2>, <B2W0:2>, <B2W0:2>, <BEXW0:2>) of a chip select/wait control register specify the number of waits that are to be inserted when the corresponding memory area is accessed.

The following types of wait operation can be specified using these bits. Bit settings other than those listed in the table should not be made. A reset sets these bit to "000" (2 waits).

Table 5-3 Wait Operation Settings

<bxw2:0></bxw2:0>	Number of Waits	Wait Operation
000	2 waits	Inserts a wait of 2 states, irrespective of the WAIT pin state.
001	1 wait	Inserts a wait of 1 state, irrespective of the WAIT pin state.
010	(1 + N) waits	Samples the state of the WAIT pin after inserting a wait of one state. If the WAIT pin is low, the waits continue and the bus cycle is extended until the pin goes high.
011	0 waits	Ends the bus cycle without a wait, regardless of the WAIT pin state.
100	Reserved	Invalid setting
101	3 waits	Inserts a wait of 3 state, irrespective of the WAIT pin state.
110	4 waits	Inserts a wait of 4 state, irrespective of the WAIT pin state.
111	8 waits	Inserts a wait of 8 state, irrespective of the WAIT pin state.

Page 95 2007-10-15

TMP91FW60

5.2.4 Bus width and wait control for an area other than CS0 to CS3

The chip select/wait control register BEXCS controls the bus width and number of waits when memory locations which are not in one of the four user-specified address areas (CS0 to CS3) are accessed. The BEXCS register settings are always enabled for areas other than CS0 to CS3.

5.2.5 Selecting 16-Mbyte area/specified address area

Setting B2CS<B2M> (Bit6 of the chip select/wait control register for CS2) to "0" designates the 16-Mbyte area "002000 to FDFFFF" as the CS2 area. Setting B2CS<B2M> to "1" designates the address area specified by the start address register MSAR2 and the address mask register MAMR2 as CS2 (e.g., if B2CS<B2M> = 1, CS2 is specified in the same manner as CS0, CS1 and CS3 are).

A reset clears this bit to "0", specifying CS2 as a 16-Mbyte address area.

5.2.6 Procedure for setting chip select/wait control

When using the chip select/wait control function, set the registers in the following order,

- 1. Set the memory start address registers MSAR0 to MSAR3. Set the start addresses for CS0 to CS3
- 2. Set the memory address mask registers MAMR0 to MAMR3. Set the sizes of CS0 to CS3.
- 3. Set the chip select/wait control registers BOCS to B3CS.

Set the chip select output waveform, data bus width, number of waits and master enable/disable status for CSO to CS3.

The CS0 to CS3 pins can also function as pins P40 to P43. To output a chip select signal using one of these pins, set the corresponding bit in the port 6 function register P4FC/P4FC2 to "1".

If a CS0 to CS3 address is specified which is actually an internal I/O and RAM area address, the CPU accesses the internal address area and no chip select signal is output on any of the CS0 to CS3 pins.

Example :In this example CS0 is set to the 64-Kbyte area 010000H to 01FFFFH. The bus width is set to 16 bits and the number of waits is set to 0.

(MSAR0), 01H

; Start address: 010000H

LD LD

(MAMR0), 07H ; Address area: 64 Kbytes

_D (B0CS), 83H

; ROM/SRAM, 16-bit data bus, 0 waits, CS0 area settings enabled

Page 96 2007-10-15

5.3 Connecting External Memory

Figure 5-3 shows an example of how to connect external memory to TMP91FW60.

In this example the ROM is connected using a 16-bit bus. The RAM and I/O are connected using an 8-bit bus.


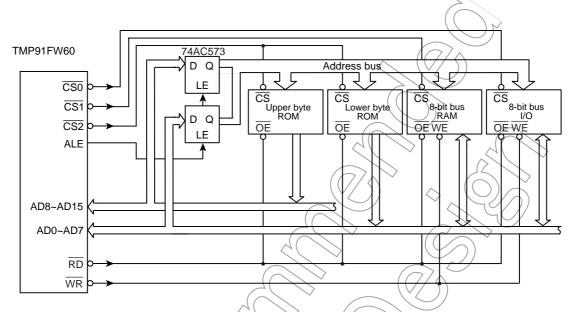


Figure 5-3 Example of External Memory Connection (ROM uses 16-bit bus, RAM and I/O use 8-bit bus.

A reset clears all bits of the port 4 control register P4CR and the port 4 function register P4FC/P4FC2 to "0" and disables output of the CS signal. To output the CS signal, the appropriate bit must be set to "1".

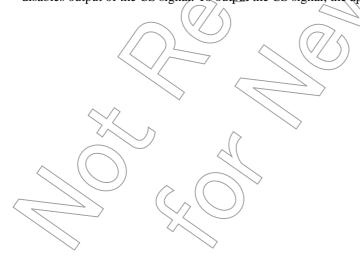

Page 97 2007-10-15

TOSHIBA TMP91FW60

6. 8-Bit Timers (TMRA)

The TMP91FW60 features 6 channels (TMRA0 to TMRA5) built-in 8-bit timers.

These timers are paired into 3 modules: TMRA01, TMRA23 and TMRA45. Each module consists of 2 channels and can operate in any of the following 4 operating modes.

- 8-bit interval timer mode
- 16-bit interval timer mode
- 8-bit programmable square wave pulse generation output mode (PPG Variable duty cycle with variable period)
- 8-bit pulse width modulation output mode (PWM Variable duty eycle with constant period)

Figure 6-1 to Figure 6-3 show block diagrams for TMRA01, TMRA23 and TMRA45.

Each channel consists of an 8-bit up counter, an 8-bit comparator and an 8-bit timer register. In addition, a timer flip-flop and a prescaler are provided for each pair of channels.

The operation mode and timer flip-flops are controlled by 5-byte registers SFRs (Special function registers).

Each of the three modules (TMRA01, TMRA23 and TMRA45) can be operated independently. All modules operate in the same manner; hence only the operation of TMRA01 is explained here.

Table 6-1 Registers and Pins for Each Module

Specification	Module	TMRA01	TMRA23	TMRA45
External pin	Input pin for external clock	TA0IN (Shared with P70)	None	TA4IN (Shared with P73)
External pin	Output pin for timer flip-flop	TA1OUT (Shared with P71)	TA3OUT (Shared with P72)	TA5OUT (Shared with P74)
	Timer run register	TA01RUN (0100H)	TA23RUN (0108H)	TA45RUN (0110H)
SFR (Address)	Timer register	TAOREG (0102H) TA1REG (0103H)	TA2REG (010AH) TA3REG (010BH)	TA4REG (0112H) TA5REG (0113H)
	Timer mode register	TA01MOD (0104H)	TA23MOD (010CH)	TA45MOD (0114H)
	Timer flip-flop control register	TATEFOR (0105H)	TA3FFCR (010DH)	TA5FFCR (0115H)

Page 98 2007-10-15

6.1 Block Diagrams



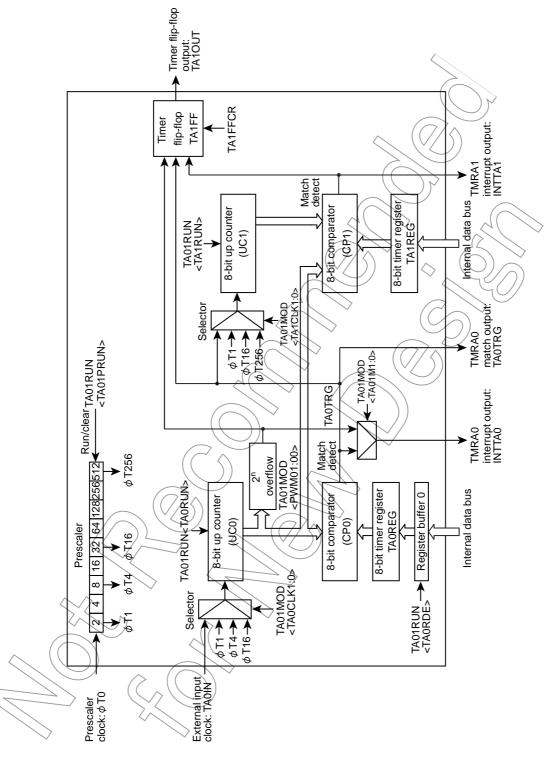


Figure 6-1 TMRA01 Block Diagram

Page 99 2007-10-15

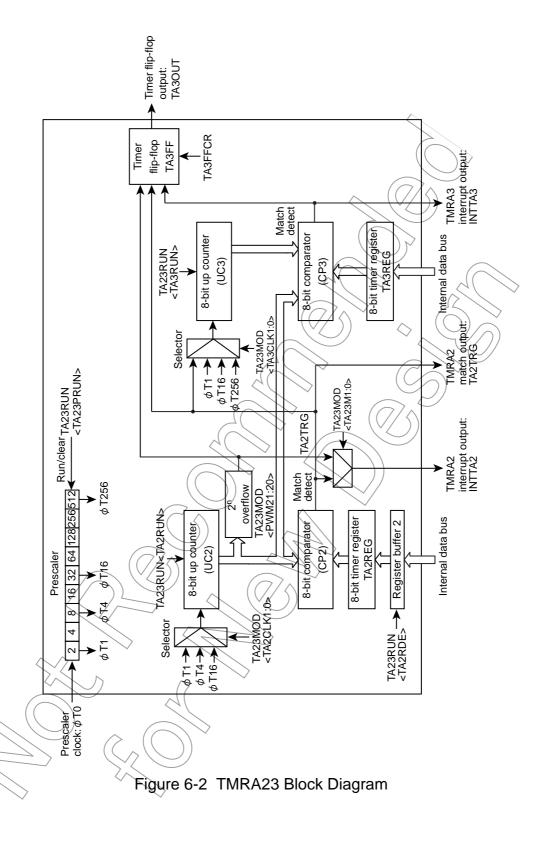

Page 100 2007-10-15

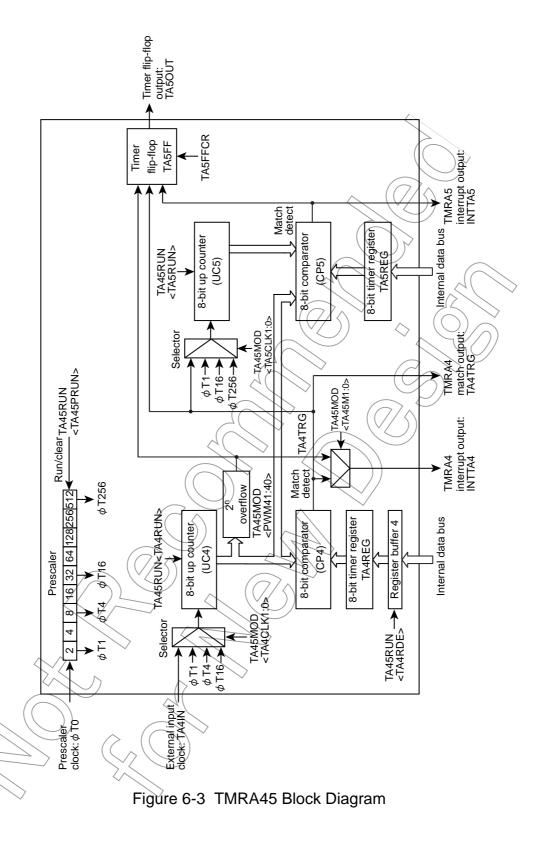

Page 101 2007-10-15

TOSHIBA TMP91FW60

6.2 Operation of Each Circuit

6.2.1 Prescalers

A 9-bit prescaler generates the input clock to TMRA01.

The "φT0" as the input clock to prescaler is a clock divided by 4 which is selected using the prescaler clock selection register SYSCR0<PRCK1>.

The prescaler's operation can be controlled using TA01RUN<TA01PRUN> in the timer control register. Setting <TA01PRUN> to "1" starts the count; setting <TA01PRUN> to "0" clears the prescaler to "0" and stops operation. Table 6-2 shows the various prescaler output clock resolutions.

Table 6-2 Prescaler Output Clock Resolution

@ fc = 20 MHz, fs = 32.768 kHz

System Clock	Gear Value	Prescaler Clock	Prescaler Output Clock Resolution				
Selection SYSCR1 <sysck></sysck>	SYSCR1 <gear2:0></gear2:0>	Selection SYSCR0 <prck1></prck1>	φT1 (1/2)	φT4 (1/8)	φT16 (1/32)	φT256 (1/512)	
1 (fs)	xxx		2 ³ /fs (244 μs)	2 ⁵ /fs (977 μs)	2 ⁷ /fs (3.9 ms)	2 ¹¹ /fs (62.5 ms)	
	000 (fc)	0 (1/1) f _{FPH}	2 ³ /fc (0.4 μs)	2 ⁵ /fc (1.6 μs) (2 ⁷ /fc(6.4 μs)	2 ¹¹ /fc (102.4 μs)	
	001 (fc/2)		2 ⁴ /fc (0.8 μs)	2 ⁶ /fc (3.2 μs)	2 ⁸ /fc (12.8 μs)	2 ¹² /fc (204.8 μs)	
	010 (fc/4)		2 ⁵ /fc (1.6 μs)	2 ⁷ /fc (6.4 µs)) 2 ⁹ /fc (25.6 µs)	2 ¹³ /fc (409.6 μs)	
0 (fc)	011 (fc/8)		2 ⁶ /fc (3.2 μs)	2 ⁸ /fc (12.8 μs)	2 ¹⁰ /fc (51.2 μs)	2 ¹⁴ /fc (819.2 μs)	
	100 (fc/16)		2 ⁷ /fc (6.4 μs)	2 ⁹ /fc (25.6 µs)	2 ¹¹ /fc (102.4 μs)	2 ¹⁵ /fc (1638.4 μs)	
	XXX	1 (1/16) fc/16 CLOCK	2 ⁷ /fc (6.4 μs)	2 ⁹ /fc (25.6 μs)	2 ¹¹ /fc (102.4 μs)	2 ¹⁵ /fc (1638.4 μs)	

Note: xxx: Don't care

6.2.2 Up counters (UC0 and UC1)

These are 8-bit binary counters which count up the input clock pulses for the clock specified by TA01MOD.

The input clock for UC0 is selectable and can be either the external clock input via the TA0IN pin or one of the three internal clocks ϕ T1, ϕ T4, or ϕ T16. The clock setting is specified by the value set in TA01MOD TA01CLK1:0>.

The input clock for UC1 depends on the operation mode. In 16-bit timer mode, the overflow output from UC0 is used as the input clock. In any mode other than 16-bit timer mode, the input clock is selectable and can either be one of the internal clocks ϕ T1, ϕ T16 or ϕ T256, or the comparator output (The match detection signal) from TMRA0.

For each interval timer the timer operation control register bits TA01RUN<TA0RUN> and TA01RUN<TA1RUN> can be used to stop and clear the up counters and to control their count. A reset clears both up counters, stopping the timers.

Page 102 2007-10-15

6.2.3 Timer registers (TA0REG and TA1REG)

These are 8-bit registers which can be used to set a time interval. When the value set in the timer register TA0REG or TA1REG matches the value in the corresponding up counter, the comparator match detect signal goes active. If the value set in the timer register is 00H, the signal goes active when the up counter overflows.

The TAOREG are double buffer structure, each of which makes a pair with register buffer.

The setting of the bit TA01RUN<TA0RDE> determines whether TA0REG's double buffer structure is enabled or disabled. It is disabled if <TA0RDE> = "0" and enabled if <TA0RDE> = "1".

When the double buffer is enabled, data is transferred from the register buffer to the timer register when a 2ⁿ overflow occurs in PWM mode, or at the start of the PPG cycle in PPG mode. Hence the double buffer cannot be used in timer mode.

A reset initializes <TA0RDE> to "0", disabling the double buffer. To use the double buffer, write data to the timer register, set <TA0RDE> to "1", and write the following data to the register buffer. Figure 6-4 shows the configuration of TA0REG.

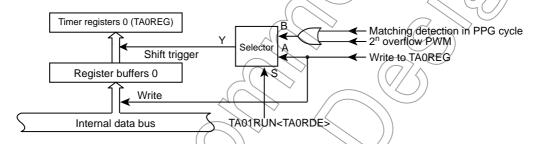


Figure 6-4 Configuration of TAOREG

Note: The same memory address is allocated to the timer register TAOREG and the register buffer 0. When <TAORDE> = 0, the same value is written to the register buffer 0 and the timer register TAOREG; when <TAORDE> = 1, only the register buffer 0 is written to.

Page 103 2007-10-15

TMP91FW60

6.2.4 Comparator (CP0 and CP1)

The comparator compares the value in an up counter with the value set in a timer register. If they match, the up counter is cleared to 0 and an interrupt signal (INTTA0 or INTTA1) is generated. If timer flip-flop inversion is enabled, the timer flip-flop is inverted at the same time.

Note: If a value smaller than the up-counter value is written to the timer register while the timer is counting up, this will cause the timer to overflow and an interrupt cannot be generated at the expected time. (The value in the timer register can be changed without any problem if the new value is larger than the up-counter value.) In 16-bit interval timer mode, be sure to write to both TAOREG and TA1REG in this order (16 bits in total), The compare circuit will not function if only the lower 8 bits are set.

6.2.5 Timer flip-flop (TA1FF)

The timer flip-flop (TA1FF) is a flip-flop inverted by the match detects signal (8-bit comparator output) of each interval timer.

Whether inversion is enabled or disabled is determined by the setting of the bit TA1FFCR TA1FFIE> in the timer flip-flop control register.

A reset clears the value of TA1FF1 to "0".

Writing "01" or "10" to TA1FFCR<TA1FFC1:0> sets TA1FF to 0 or 1. Writing "00" to these bits inverts the value of TA1FF (This is known as software inversion).

The TA1FF signal is output via the TA1OUT pin (Concurrent with P71). When this pin is used as the timer output, the timer flip-flop should be set beforehand using the port 7 function registers P7CR, P7FC.

The condition for TA1FF inversion varies with mode as shown below

8-bit interval timer mode

TUC0 matches TA0REG or UC1 matches TA1REG

(Select either one of the two)

16-bit interval timer mode

: UC0 matches TA0REG or UC1 matches TA1REG

8 bit PWM mode

: UC0 matches TAOREG or a 2n overflow occurs

8 bit PPG mode : UC0 matches TA0REG or UC0 matches TA1REG

Note: If an inversion by the match-detect signal and a setting change via the TMRA1 flip-flop control register occur simultaneously, the resultant operation varies depending on the situation, as shown below.

- If an inversion by the match-detect signal and an inversion via the register occur simultaneously, the flip-flop will be inverted only once.
- If an inversion by the match-detect signal and an attempt to set the flip-flop to 1 via the register occur simultaneously, the timer flip-flop will be set to 1.
- If an inversion by the match-detect signal and an attempt to clear the flip-flop to 0 via the register occur simultaneously the flip-flop will be cleared to 1.

Be sure to stop the timer before changing the flip-flop insertion setting.

If the setting is changed while the timer is counting, proper operation cannot be obtained.

Page 104 2007-10-15

6.3 SFR

TMRA01 Run Register

TA01RUN (0100H)

	7	6	5	4	3	2	1	0
Bit symbol	TA0RDE	-	-	-	I2TA01	TA01PRUN	TA1RUN	TA0RUN
Read/Write	R/W	-	-	-		R	w	
After Reset	0	-	-	-	0) 0	0
Function	Double buffer 0: Disable				IDLE2 0: Stop	TMRA01 prescaler	Up counter (UC1)	Up counter (UC0)
	1: Enable				1: Operate	0: Stop and cl 1: Run (count		

Count operation

TA01PRUN TA1RUN / TA0RUN	0	Stop and clear
	1	Run (Count up)

TA0REG double buffer control

TAORDE /	$\langle \langle \langle \rangle \rangle$	Disable
TAURDE	4	Enable

Note: The values of bits 4 to 6 of TA01RUN are "1" when read

TMRA23 Run Register

TA23RUN (0108H)

	7	6	5	4	3	2	1	0
Bit symbol	TA2RDE	-		>> -	I2TA23	TA23PRUN	TA3RUN	TA2RUN
Read/Write	R/W	-	46	> - //		R	/W	
After Reset	0	- /	-	-	0))	0	0	0
Function	Double buffer			^	IDLE2 0: Stop	TMRA23 prescaler	Up counter (UC3)	Up counter (UC2)
Function	0: Disable 1: Enable				1: Operate	0: Stop and cl 1: Run (count		

Count operation ___

	~ / / /	
TA23PRUN		Stop and clear
TA3RUN TA2RUN	1	Run (Count up)

TA2REG double buffer control

TA2RDE	0	Disable
TAZNOL	1	Enable

Note: The values of bits 4 to 6 of TA23RUN are "1" when read.

TMRA45 Run Register

TA45RUN (0110H)

	7	6	5	4	3	2	1	0
Bit symbol	TA4RDE	<u></u>	> -	-	I2TA45	TA45PRUN	TA5RUN	TA4RUN
Read/Write	R/W	>(-)	-	-		R	W	
After Reset	0)-	-	-	0	0	0	0
Function	Double buffer				IDLE2 0: Stop	TMRA45 prescaler	Up counter (UC5)	Up counter (UC4)
FUNCTION	0: Disable 1: Enable				1: Operate	0: Stop and clo 1: Run (count		

Count operation

TA45PRUN	0	Stop and clear
TA5RUN / TA4RUN	1	Run (Count up)

TA4REG double buffer control

TA4RDF	0	Disable
1A4RDE	1	Enable

Note: The values of bits 4 to 6 of TA45RUN are "1" when read.

Page 105 2007-10-15

TMRA01 Mode Register

TA01MOD (0104H)

	7	6	5	4	3	2	1	0
Bit symbol	TA01M1	TA01M0	PWM01	PWM00	TA1CLK1	TA1CLK0	TA0CLK1	TA0CLK0
Read/Write	R/W							
After reset	0	0	0	0	0	0	0	0
Function	Operation mo 00: 8-bit timer 01: 16-bit time 10: 8-bit PPG 11: 8-bit PWM	mode er mode mode	PWM cycle 00: Reserved 01: 2 ⁶ 10: 2 ⁷ 11: 2 ⁸		Input clock for 00: TA0TRG 01: \$T1 10: \$T16 11: \$T256	TMRAI	Input clock for 00: TAOIN pin 01: φT1 10: φT4 11: φT16	TMRA0

TMRA0 input clock selection

	00	TAOINì,óÕ
<ta0clk1:0></ta0clk1:0>	01	φТ1
CIAOOLICI.02	10	φТ4
	11	φT16 (V/))

TMRA1 input clock selection

		TA01MOD <ta01m1:0> ≠ 01</ta01m1:0>	TA01MOD <ta01m1:0> = 01</ta01m1:0>
	00	Comparator output from TMRA0	7
<ta1clk1:0></ta1clk1:0>	01	♦1)	Overflow output from TMRA0 (16-bit timer mode)
	(10	φT16	(10 bit timer mode)
	11	фТ256	

PWM cycle selection

	00	Reserved
<pwm01:00></pwm01:00>)) 01	2 ⁶ × Clock source
<pwiniot.ous< th=""><td>10</td><td>2⁷ × Clock source</td></pwiniot.ous<>	10	2 ⁷ × Clock source
	11	28 × Clock source

TMRA01 operation mode selection

	(//.	O 7
~~	00	8-bit timers 2ch
<ta01m1:0></ta01m1:0>	01	16-bit timer
CIAOTIVIT.0>	10	8-bit PPG
\ \ \	11	8-bit PWM (TMRA0) + 8-bit timer (TMRA1)

Page 106 2007-10-15

TMRA23 Mode Register

TA23MOD (010CH)

	7	6	5	4	3	2	1	0
Bit symbol	TA23M1	TA23M0	PWM21	PWM20	TA3CLK1	TA3CLK0	TA2CLK1	TA2CLK0
Read/Write				R	/W			
After reset	0	0	0	0	0	0	0	0
Function	Operation mo 00: 8-bit timer 01: 16-bit time 10: 8-bit PPG 11: 8-bit PWM	mode er mode mode	PWM cycle 00: Reserved 01: 2 ⁶ 10: 2 ⁷ 11: 2 ⁸		Input clock for 00: TA2TRG 01: φT1 10: φT16 11: φT256	TMRA3	Input clock for 00: Reserved 01: φT1 10: φT4 11: φT16	TMRA2

TMRA2 input clock selection

	00	Reserved	
<ta2clk1:0></ta2clk1:0>	01	φТ1	
CIAZOLICI.02	10	φТ4	//
	11	фТ16	

TMRA3 input clock selection

		\ \ \ / / / /	
		TA23MOD <ta23m1:0> ≠ 01</ta23m1:0>	TA23MOD <ta23m1:0> = 01</ta23m1:0>
	00	Comparator output from TMRA2	
<ta3clk1:0></ta3clk1:0>	01	\bullet_1 \rightarrow	Overflow output from TMRA2 (16-bit timer mode)
	10	φT16	(10 bit tillion mode)
	11	∮T256	

PWM cycle selection

00	Reserved
<pwm21:20></pwm21:20>	2 ⁶ × Clock source
<pvvivi21:205 10<="" th=""><th>2⁷ × Clock source</th></pvvivi21:205>	2 ⁷ × Clock source
11	2 ⁸ × Clock source

TMRA23 operation mode selection

	TWI U LE GENERAL MOLE COLORIGI				
	00 ((8-bit timers 2ch			
<ta23m1:0></ta23m1:0>	01	16-bit timer			
VIAZSWI1.05	10	8-bit PPG			
		8-bit PWM (TMRA2) + 8-bit timer (TMRA3)			

Page 107 2007-10-15

TMRA45 Mode Register

TA45MOD (0114H)

	7	6	5	4	3	2	1	0
Bit symbol	TA45M1	TA45M0	PWM41	PWM40	TA5CLK1	TA5CLK0	TA4CLK1	TA4CLK0
Read/Write				R	/W			
After reset	0	0	0	0	0	0	0	0
Function	Operation mo 00: 8-bit timer 01: 16-bit time 10: 8-bit PPG 11: 8-bit PWM	mode er mode mode	PWM cycle 00: Reserved 01: 2 ⁶ 10: 2 ⁷ 11: 2 ⁸		Input clock for 00: TA4TRG 01: φT1 10: φT16 11: φT256	T TMRAS	Input clock for 00: TA4IN pin 01: \phiT1 10: \phiT4 11: \phiT16	

TMRA4 input clock selection

	00	TA4IN	
<ta4clk1:0></ta4clk1:0>	01	φ T 1	
CIA40LICI.02	10	φТ4	
	11	φT16	

TMRA5 input clock selection

		\ \ \ / / / /	
		TA45MOD <ta45m1:0> ≠ 01</ta45m1:0>	TA45MOD <ta45m1:0> = 01</ta45m1:0>
	00	Comparator output from TMRA4	
<ta5clk1:0></ta5clk1:0>	01	\bullet_1 \rightarrow	Overflow output from TMRA4 (16-bit timer mode)
	10	φT16	(10 bit tillion mode)
	11	∮T256	

PWM cycle selection

	96	Reserved
	01)	2 ⁶ × Clock source
<pwm41:40></pwm41:40>	10	2 ⁷ × Clock source
	11	2 ⁸ × Clock source

TMRA45 operation mode selection

	Time the abolation mode colociton				
	00 ((8-bit timers 2ch			
<ta45m1:0></ta45m1:0>	01	16-bit timer			
CIA40WI1.02	10	8-bit PPG			
		8-bit PWM (TMRA4) + 8-bit timer (TMRA5)			

Page 108 2007-10-15

TMRA1 Flip-Flop Control Register

TA1FFCR (0105H)

	7	6	5	4	3	2	1	0
Bit symbol	-	_	-	-	TA1FFC1	TA1FFC0	TA1FFIE	TA1FFIS
Read/Write	-	Ī	ı	ı	R	/W	R	W
After reset	-	-	-	-	1	<u>,</u> 1	0	0
Function					00: Invert TA1 01: Set TA1FF 10: Clear TA1 11: Don't care	FF	TA1FF control for inversion 0: Disable 1: Enable	TA1FF inversion select 0: TMRA0 1:TMRA1

Inverse signal for timer flip-flop 1 (TA1FF) (Don't care except in 8-bit timer mode)

TA1FFIS	0	Inversion by TMRA0
17(11110	1	Inversion by TMRA1

Inversion of TA1FF

TA1FFIF	0	Disabled
I/(IIII)	1	Enabled

Control of TA1FE

	00	Inverts the value of TA1FF (Software inversion)
<ta1ffc1:0></ta1ffc1:0>	01 <	Sets TA1FF to "1"
CIAII 1 01.02	10	Clears TA1FF to "0"
	11	Don't care

Note: The values of bits 4 to 7 of TA1FFCR are "1" when read.

TMRA3 Flip-Flop Control Register

TA3FFCR (010DH)

	7	6	5	4	3	2	1	0
Bit symbol	-	[-)) –		TA3FFC1	TA3FFC0	TA3FFIE	TA3FFIS
Read/Write	- /		-	2	R	/W	R	W
After reset		(-)	- (7	1	1	0	0
Function		<i>U</i> (<u>()</u>	00: Invert TA3 01: Set TA3FF 10: Clear TA3 11: Don't care	FF	TA3FF control for inversion 0: Disable 1: Enable	TA3FF inversion select 0: TMRA2 1:TMRA3

Inverse signal for timer/flip-flop 3 (TA3FF) (Don't care except in 8-bit timer mode)

TA3FFIS	0	Inversion by TMRA2
I/OFFIC	1	Inversion by TMRA3

Inversion of TA3FF

TAGESIE	0	Disabled
(A)SELIE	1	Enabled

Control of TA3FF

	00	Inverts the value of TA3FF (Software inversion)
<ta3ffc1:0></ta3ffc1:0>	01	Sets TA3FF to "1"
(1A311 01.02	10	Clears TA3FF to "0"
	11	Don't care

Note: The values of bits 4 to 7 of TA3FFCR are "1" when read.

Page 109 2007-10-15

TMRA5 Flip-Flop Control Register

TA5FFCR (0115H)

	7	6	5	4	3	2	1	0
Bit symbol	-	-	-	-	TA5FFC1	TA5FFC0	TA5FFIE	TA5FFIS
Read/Write	-	-	ı	ı	R	w <	R	W
After reset	-	-	ı	ı	1	1	0	0
Function					00: Invert TA5 01: Set TA5FF 10: Clear TA5 11: Don't care	FF // \	TA5FF control for inversion 0: Disable 1: Enable	TA5FF inversion select 0: TMRA4 1:TMRA5

Inverse signal for timer flip-flop 5 (TA5FF) (Don't care except in 8-bit timer mode)

TA5FFIS	0	Inversion by TMRA4
1731110	1	Inversion by TMRA5

Inversion of TA5FF

1 Enabled	TA5FFIE	0	Disabled	0.0
	IAOFFIE	1	Enabled	

Control of TA5FF

	00 Inverts the value of TA5FF (Software inversion)
<ta5ffc1:0></ta5ffc1:0>	01 Sets TA5FF to "1"
	10 Clears TA5FF to "0"
	14 Don't care

Note: The values of bits 4 to 7 of TA5FFCR are "1" when read.

Timer Register

		7 6 5	3	2	1	0
	Bit symbol		<u></u>			
TA0REG (0102H)	Read/Write		√ w			
(/	After Reset		0			
	Bit symbol		-			
TA1REG (0103H)	Read/Write		W			
(5.55.7)	After Reset		0			
	Bit symbol		-			
TA2REG (010AH)	Read/Write		W			
(* 101 11.7)	After Reset		0			
	Bit symbol		-			
TA3REG (010BH)	Read/Write		W			
(= - /	After Reset	~	0			
	Bit symbol		-			
TA4REG (0112H)	Read/Write		W			
(- /	After Reset		0			
	Bit symbol		-			
TA5REG (0113H)	Read/Write		W			
, ,	After Reset		0			

Page 110 2007-10-15

TOSHIBA TMP91FW60

6.4 Operation in Each Mode

6.4.1 8-bit timer mode

Both TMRA0 and TMRA1 can be used independently as 8-bit interval timers.

Set its function or counter data for TMRA0 and TMRA1 after stop these registers.

System clock

6.4.1.1 Generating interrupts at a fixed interval (Using TMRA1)

To generate interrupts at constant intervals using TMRA1 (INTTA1), first stop TMRA1 then set the operation mode, input clock and a cycle to TA01MOD and TA1REG register, respectively. Then, enable the interrupt INTTA1 and start TMRA1 counting.

. High frequency (fc)

Example: To generate an INTTA1 interrupt every 12 μ s at fc = 20 MHz, set each register as follows:

				Prescale	er clock	(:f _{FPH}
				Clock ge	ear	(:1 (fc)
					<	(
	MSB					LSB	
	7	6	5	4 3 2	1 (1	0	> ((//5)
TA01RUN	-	X	Χ	x - </td <td>0</td> <td>></td> <td>Stop TMRA1 and clear it to 0.</td>	0	>	Stop TMRA1 and clear it to 0.
TA01MOD	0	0	Х	X 0 1	*	X	Select 8-bit timer mode and select $\phi T1$ (0.4 μs at fc = 20 MHz) as the input clock.
TA1REG	0	0	0	1/1) 1	0	Set TA1REG to $12^{\circ}\mu s \div \phi T1 = 30 = 1EH$
INTETA01	Х	1	Ø	7 X -	-	-	Enable INTTA1 and set it to level 5.
TA01RUN	_	X	X	x)-) 1	1	_	Start TMRA1 counting.
			_ \				

Note: X: Don't care, -: No change

* Clock state

Select the input clock using Table 6-2

Note: The input clocks for TMRA0 and TMRA1 are different from as follows.

TMRA0: TA0IN input, ϕ T1, ϕ T4 or ϕ T16

TMRA1: Match output of TMRA0, \$\phi T1, \$\psi T16, \$\phi T256

Page 111 2007-10-15

6.4.1.2 Generating a 50% duty ratio square wave pulse

The state of the timer flip-flop (TA1FF) is inverted at constant intervals and its status output via the timer output pin (TA1OUT).

Example: To output a 2.4 μ s square wave pulse from the TA1OUT pin at t=20 MHz, use the following procedure to make the appropriate register settings. This example uses TMRA1; however, either TMRA0 or TMRA1 may be used.

* Clock st	tate				Syste	m clc	ck		:High frequency (fc)
					Presc	aler o	clock		(f _{FPH})
					Clock	gear			1.(6)
MSB								LSB	
	7	6	5	4	3	2	1	0	
TA01RUN	-	Χ	Χ	Χ	-	-	0	<u></u>	Stop TMRA1 and clear it to 0.
TA01MOD	0	0	Х	Х	0	1	<	(<u> </u>	Select 8-bit timer mode and select ϕ T1 (0.4 μ s at fc = 20 MHz) as the input clock.
TA1REG	0	0	0	0	0	0	1	1	Set the timer register to 2.4 μs ÷ φT1 ÷ 2 = 03H
TA1FFCR	Х	Х	Х	Х	1	0	4	1	Clear TA1FF to "0" and set if to invert on the match detects signal from TMRA1.
P7CR	Χ	Χ	Χ	-/		\ <u>_</u>	\ 1	-	Set P71 to function as the TA1OUT pin.
P7FC	Χ	Χ	Χ	+ ((-))-}	1	-	
TA01RUN	-	Χ	X	X	-	/1/	1	-	Start TMRA1 counting.
Note: X: Don't	care	, –: N	16 ch	ang	e)			<	
	(7	7/						
) (\bigvee	ر(ر))				77	^
			7				(_	
				<	_	=	\leq	>	
$\wedge \wedge$	~								
ZX N				^			\supset		
			^						
$\langle (() \rangle \rangle$									
	>			Λ.	\checkmark				
	\searrow	> //							
	7								

Page 112 2007-10-15

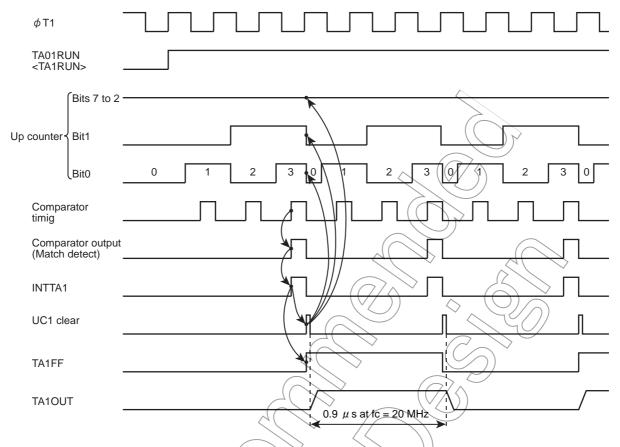


Figure 6-5 Square Wave Output Timing Chart (50% duty)

6.4.1.3 Making TMRA1 count up on the match signal from the TMRA0 comparator

Select 8-bit timer mode and set the comparator output from TMRA0 to be the input clock to TMRA1.

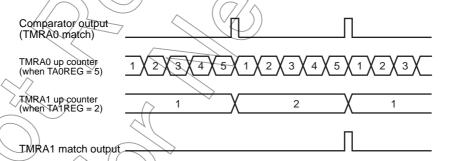


Figure 6-6 TMRA1 Count Up on Signal from TMRA0

Page 113 2007-10-15

6.4.2 16-bit timer mode

A 16-bit interval timer is configured by pairing the two 8-bit timers TMRA0 and TMRA1.

To make a 16-bit interval timer in which TMRA0 and TMRA1 are cascaded together, set TA01MOD<TA01M1:0> to 01.

In 16-bit timer mode, the overflow output from TMRA0 is used as the input clock for TMRA1, regardless of the value set in TA01MOD<TA1CLK1:0>. Table 6-2 shows the cycle of the input clock for TMRA0.

LSB 8-bit set to TA0REG and MSB 8-bit is for TA1REG. Please keep setting TA0REG first because setting data for TA1REG inhibit its compare function and setting data for TA1REG permit it.

Example: To generate an INTTA1 interrupt every 0.4 [s] at fe=20 MHz, set the timer registers TA0REG and TA1REG as follows:

* Clock state

System clock

Prescaler clock

Clock gear

* High frequency (fc)

: f_{FPH}

: 1 (fc)

If $\phi T16$ (2⁷/fc μ s at fc = 20 MHz) is used as the input clock for counting, set the following value in the registers: 0.4 s/(2⁷/fc) μ s \rightleftharpoons 62500 = F424H (e.g., set TA1REG to F4H and TA0REG to 24H). As a result, INTTA1 interrupt can be generated every 0.4 [s].

The comparator match signal is output from TMRA0 each time the up counter UC0 matches TA0REG, though the up counter UC0 is not cleared and also INTTA0 is not generated.

In the case of the TMRA1 comparator, the match detect signal is output on each comparator pulse on which the values in the up counter UC1 and TA1REG match.

When the match detect signal is output simultaneously from both the comparators TMRA0 and TMRA1, the up counters UC0 and UC1 are cleared to 0 and the interrupt INTTA1 is generated. Also, if inversion is enabled, the value of the timer flip-flop TA1FF is inverted.

Example: When TA1REG = 04H and TA0REG = 80H

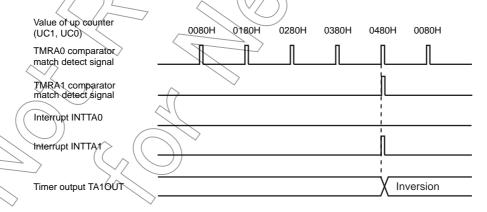


Figure 6-7 Timer Output by 16-Bit Timer Mode

Page 114 2007-10-15

6.4.3 8-bit PPG (Programmable pulse generation) output mode

Square wave pulses can be generated at any frequency and duty ratio by TMRA0. The output pulses may be active low or active high. In this mode TMRA1 cannot be used.

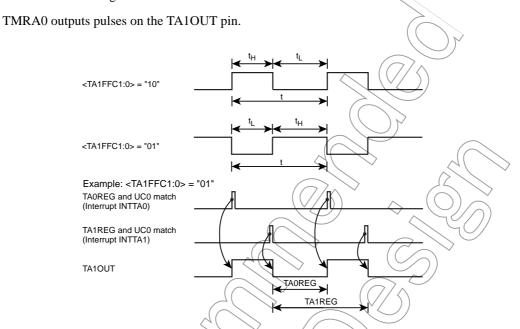


Figure 6-8 8-Bit PPG Output Waveforms

In this mode, a programmable square wave is generated by inverting the timer output each time the 8-bit up counter (UC0) matches the value in one of the timer registers TA0REG or TA1REG.

The value set in TAOREG must be smaller than the value set in TA1REG.

Although the up-counter for TMRA1 (UC1) is not used in this mode, TA01RUN<TA1RUN> should be set to "1", so that UC1 is set for counting.

Figure 6-9 shows a block diagram representing this mode.

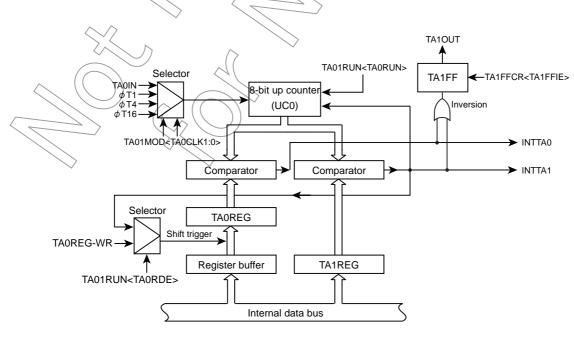


Figure 6-9 Block Diagram of 8-Bit PPG Output Mode

Page 115 2007-10-15

If the TA0REG double buffer is enabled in this mode, the value of the register buffer will be shifted into TA0REG each time TA1REG matches UC0.

Use of the double buffer facilitates the handling of low-duty waves (when duty is varied).


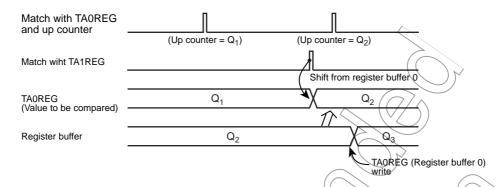


Figure 6-10 Operation of Register Buffer 0

Note: The values that can be set in TAxREG range from 01h to 00h (equivalent to 100h). If the maximum value 00h is set, the match-detect signal goes active when the up-counter overfolws.

Example: To generate 1/4-duty 50-kHz pulses (at fc = 20 MHz):

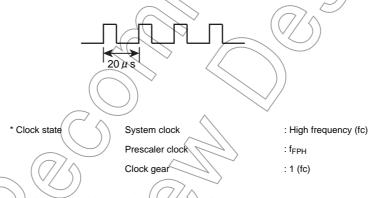

Calculate the value which should be set in the timer register.

To obtain a frequency of 50 kHz, the pulse cycle t should be: $t = 1/50 \text{ kHz} = 20 \mu \text{s}$

$$\phi T1 = 2^3/\text{fc} \text{ } \mu \text{s} \text{ (at fc} = 20 \text{ MHz)};$$

$$20 \,\mu\text{s}/(2^3/\text{fc}) \,\mu\text{s} = 50$$

Therefore set TA1REG to 50(32H), and 50-kHz pulses can be obtained.

The duty is to be set to 1/4: $t \times 1/4 = 20 \mu s \times 1/4 = 5 \mu s$

$$5 \,\mu\text{s}/(2^3/\text{fc}) \,\mu\text{s} \stackrel{.}{=} 13$$

Therefore, set TA0REG = 13 = 0DH.

Page 116 2007-10-15

	7	6	5	4	3	2	1	0	
TA01RUN	0	Х	Х	Х	-	-	0	0	Stop TMRA0 and TMRA01 and clear it to "0".(Double buffer disable)
TA01MOD	1	0	Х	Х	Х	Х	0	1	Set the 8-bit PPG mode, and select φT1 as input clock.
TA0REG	0	0	0	0	1	1	0	1	Write 0DH.
TA1REG	0	0	1	1	0	0	1	0	Write 32H.
TA1FFCR	Х	Х	Χ	Χ	0	1	1	Χ	Set TA1FF, enabling both inversion and the double buffer.
									Writing "10" provides negative logic pulse.
P7CR	X	Χ	Χ	-	-	-	1	-	Set P71 as the TA1OUT pin.
P7FC	Х	Χ	Χ	-	-	-	1	-	30177 40 1170
TA01RUN	1	Χ	Χ	Х	-	1	1	1	Start TMRA9 and TMRA01 counting.(Double buffer enable)
Note:X: Don't Care	e -: N	o cha	ange						
	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\								

Page 117 2007-10-15

6.4.4 8-bit PWM output mode

This mode is only valid for TMRA0. In this mode, a PWM pulse with the maximum resolution of 8 bits can be output.

When TMRA0 is used the PWM pulse is output on the TA1OUT pin. TMRA1 can also be used as an 8-bit timer.

The timer output is inverted when the up counter (UC0) matches the value set in the timer register TA0REG or when 2^n counter overflow occurs (n = 6, 7 or 8 as specified by TA01MOD<PWM01:00>). The up counter UC0 is cleared when 2^n counter overflow occurs.

The following conditions must be satisfied before this PWM mode can be used.

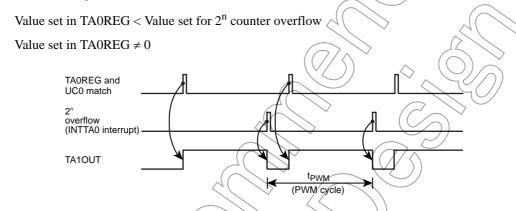


Figure 6-11 8-Bit PWM Waveforms

Figure 6-12 shows a block diagram representing this mode.

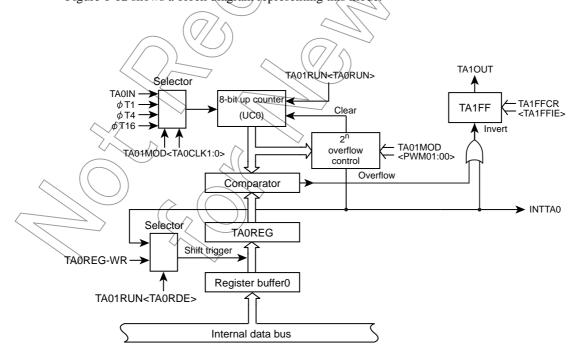


Figure 6-12 Block Diagram of 8-Bit PWM Mode

In this mode, the value of the register buffer will be shifted into TA0REG if 2ⁿ overflow is detected when the TA0REG double buffer is enabled.

Page 118 2007-10-15

Use of the double buffer facilitates the handling of low duty ratio waves.


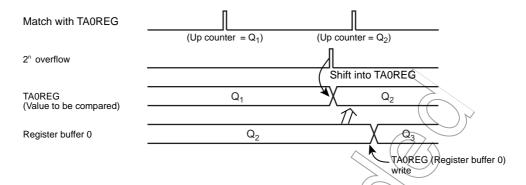


Figure 6-13 Operation of Register Buffer 0

Example: To output the following PWM waves on the TA1QUT pin at fc = 20 MHz

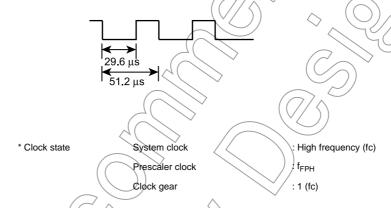


To achieve a 51.2 μ s PWM cycle by setting ϕ T1 to 2^3 /fc μ s (at fc = 20 MHz):

51.2 μs/(2³/fc) μs
$$=$$
 128 \neq 2ⁿ

Therefore n should be set to 7

Since the low-level period is 29.6 μ s when $\phi T1 = 2^3/fc$ μ s (at fc = 20 MHz), set the following value for TA0REG:

29.6
$$\mu s/(2^3/fc) \mu s = 74 = 4AH$$

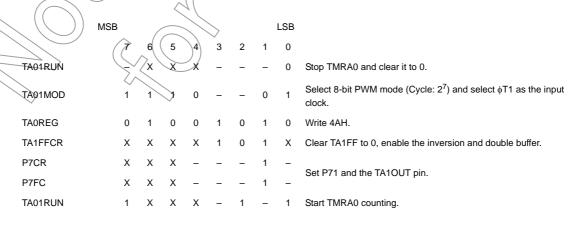

Note:X: Don't Care -: No change

Page 119 2007-10-15

Table 6-3 PWM Cycle

@ fc = 20 MHz, fs = 32.768 kHz

Select Sys-	Gear Value	Select Prescaler		PWM cycle									
tem Clock SYSCR1	SYSCR1 <gear2:0></gear2:0>	Clock SYSCR0 <prck1></prck1>		2 ⁶			2 ⁷		28				
<sysck></sysck>			φΤ1	φΤ4	φT16	φΤ1	φΤ4	∳T16	φΤ1	φΤ4	φT16		
1 (fs)	XXX		15.6 ms	62.5 ms	250 ms	31.3 ms	125 ms	500 ms	62.5 ms	250 ms	1000 ms		
	000 (fc)		25.6 μs	102.4 μs	409.6 μs	51.2 μs	204.8 μs	819.2 µs	102.4 μs	409.6 μs	1638 μs		
	001 (fc/2)	0 (1/1) f _{FPH}	51.2 μs	204.8 μs	819.2 μs	102.4 μs	409.6 μs	1638 μs	204.8 μs	819.2 μs	3277 μs		
	010 (fc/4)		102.4 μs	409.6 μs	1638 μs	204.8 μs	810.2 μs	3277 µs	409.6 μs	1638 μs	6554 μs		
0 (fc)	011 (fc/8)		204.8 μs	819.2 μs	3277 μs	409.6 μs	1638 μs	6554 μs	819.2 μs	3277 μs	13107 μs		
	100 (fc/16)		409.6 μs	1638 μs	6554 μs	819.2 μs	3277 µs)13107 μs	1638 μs	6554 μs	26214 μs		
	XXX	1 (1/16) fc/16 clock	409.6 μs	1638 μs	6554 μs	819.2 µs	3277 µs	13107 μs	1638 µs	6554 μs	26214 μs		

Note: xxx: Don't care

6.4.5 Settings for each mode

Table 6-4 shows the SFR settings for each mode.

Table 6-4 Timer Mode Setting Registers

Register Name		TAC	01MOD		TA1FFCR
<bit symbol=""></bit>	<ta01m1:0></ta01m1:0>	<pwm01:00></pwm01:00>	<ta1clk1:0></ta1clk1:0>	<ta0clk1:0></ta0clk1:0>	TA1FFIS
Function	Timer Mode	PWM Cycle	Upper Timer Input Clock	Lower Timer Input Clock	Timer F/F Invert Signal Select
8-bit timer × 2 channels) - <	Lower timer match \$\psi T1, \$\psi T16, \$\psi T256\$ (00, 01, 10, 11)	External clock φT1 φT4, φT16 (00, 01, 10, 11)	0: Lower timer output 1: Upper timer output
16-bit timer mode	91		<u> </u>	External clock φT1, φT4, φT16 (00, 01, 10, 11)	-
8-bit PPG × 1 channel	10		-	External clock φT1, φT4, φT16 (00, 01, 10, 11)	-
8-bit PWM × 1 channel	11	2 ⁶ , 2 ⁷ , 2 ⁸ (01, 10, 11)	-	External clock φT1, φT4, φT16 (00, 01, 10, 11)	-
8-bit timer x 1 channel	11	_	φΤ1, φΤ16, φΤ256 (01, 10, 11)	_	Output disabled

Note: -: Don't care

Page 120 2007-10-15

TOSHIBA TMP91FW60

7. 16-Bit Timer/Event Counters (TMRB)

The TMP91FW60 incorporates five multifunctional 16-bit timer/event counters (TMRB0, TMRB1, TMRB2, TMRB3, TMRB4) which have the following operation modes:

- 16-bit interval timer mode
- 16-bit event counter mode
- 16-bit programmable pulse generation (PPG) output mode

The capture function enables selection of the following modes:

- · Frequency measurement mode
- Pulse width measurement mode
- · Time differential measurement

Figure 7-1 show block diagrams for TMRB0, TMRB1, TMRB2, TMRB3 and TMRB4.

Each timer/event counter channel consists of a 16-bit up-counter, two 16-bit timer registers (one of them with a double-buffer structure), two 16-bit capture registers, two comparators, a capture input controller, two timer flip-flops and a timer flip-flop controller.

Each timer/event counter is controlled by an 11-byte SFR (special-function register).

Each of the five channels (TMRB0, TMRB1, TMRB2, TMRB3, TMRB4) can be used independently. Each channel features the same operations except for those described in Table 7-1. Hence, only the operation of TMRB0 is explained below.

Table 7-1 Registers and Pins for TMRB

Specification	Channel	TMRB0	TMRB1	TMRB2	TMRB3	TMRB4
External	External clock/capture trigger input pins	TB0IN0 (also used as P80) TB0IN1 (also used as P81)	TB1IN0 (also used as P84) TB1IN1 (also used as P85)	TB2IN0 (also used as PA0) TB2IN1 (also used as PA1)	TB3IN0 (also used as P30) TB3IN1 (also used as P31)	TB4IN0 (also used as PB0) TB4IN1 (also used as PB1)
pins	Timer flip-flop output pins	TB0OUT0 (also used as P82) TB0OUT1 (also used as P83)	TB1OUT0 (also used as P86) TB1OUT1 (also used as P87)	TB2OUT0 (also used as PA2) TB2OUT1 (also used as PA3)	TB3OUT0 (also used as P32) TB3OUT1 (also used as P33)	TB4OUT0 (also used as PB2) TB4OUT1 (also used as PB3)
	Timer run register	TB0RUN (0180H)	TB1RUN (0190H)	TB2RUN (01A0H)	TB3RUN (01B0H)	TB4RUN (01C0H)
	Timer mode register	TB0MOD (0182H)	TB1MOD (0192H)	TB2MOD (01A2H)	TB3MOD (01B2H)	TB4MOD (01C2H)
	Timer flip-flop control register	TB0FFCR (0183H)	TB1FFCR (0193H)	TB2FFCR (01A3H)	TB3FFCR (01B3H)	TB4FFCR (01C3H)
		TB0RG0L (0188H)	TB1RG0L (0198H)	TB2RG0L (01A8H)	TB3RG0L (01B8H)	TB4RG0L (01C8H)
SFR	Time a sistem	TB0RG0H (0189H)	TB1RG0H (0199H)	TB2RG0H (01A9H)	TB3RG0H (01B9H)	TB4RG0H (01C9H)
(address)	Timer registers	TB0RG1L (018AH)	TB1RG1L (019AH)	TB2RG1L (01AAH)	TB3RG1L (01BAH)	TB4RG1L (01CAH)
		TB0RG1H (018BH)	TB1RG1H (019BH)	TB2RG1H (01ABH)	TB3RG1H (01BBH)	TB4RG1H (01CBH)
		TB0CP0L (018CH)	TB1CP0L (019CH)	TB2CP0L (01ACH)	TB3CP0L (01BCH)	TB4CP0L (01CCH)
		TB0CP0H (018DH)	TB1CP0H (019DH)	TB2CP0H (01ADH)	TB3CP0H (01BDH)	TB4CP0H (01CDH)
	Capture registers	TB0CP1L (018EH)	TB1CP1L (019EH)	TB2CP1L (01AEH)	TB3CP1L (01BEH)	TB4CP1L (01CEH)
		TB0CP1H (018FH)	TB1CP1H (019FH)	TB2CP1H (01AFH)	TB3CP1H (01BFH)	TB4CP1H (01CFH)

Page 121 2007-10-15

7.1 Block Diagrams

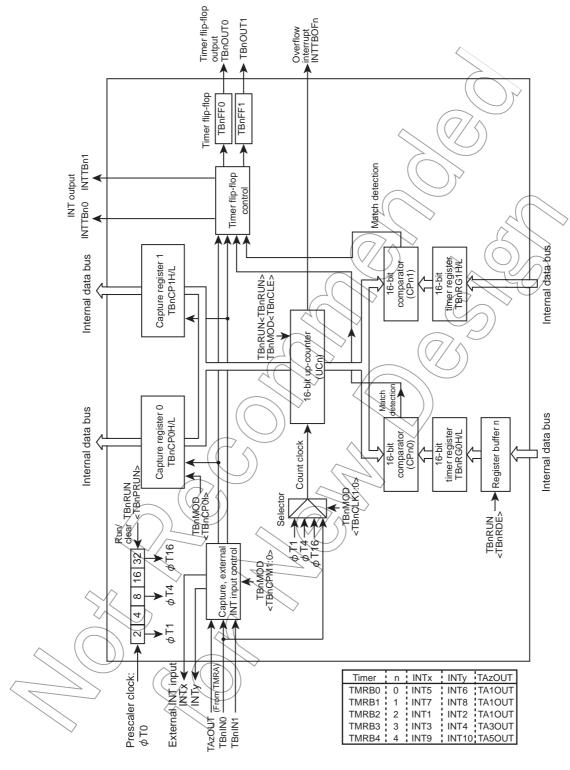


Figure 7-1 Block Diagrams of TMRB0 to TMRB4

Page 122 2007-10-15

TOSHIBA TMP91FW60

7.2 Operation of Each Block

7.2.1 Prescaler

The 5-bit prescaler generates the source clock for TMRB0. The prescaler clock (ϕ T0) is divided clock (divided by 4) from selected clock by the register SYSCR0<PRCK1> of clock gear.

This prescaler can be started or stopped using TB0RUN<TB0PRUN>. Counting starts when <TB0PRUN> is set to 1; the prescaler is cleared to 0 and stops operation when <TB0PRUN> is cleared to 0. Table 7-2 show prescaler output clock resolution.

Table 7-2 Prescaler Output Clock Resolution

@fc = 20 MHz, fs = 32.768 kHz

System Clock	Clock Gear Value	Prescaler Clock	Presca	Prescaler Output Clock Resolution					
SelectionSYSC1< SYSCK>	SYSCR1 <gear2:0></gear2:0>	Selection <prck1></prck1>	φT1 (1/2)	φT4 (1/8)	φT16 (1/32)				
1 (fs)	XXX		2 ³ /fs (244 μs)	²⁵ /fs (977 μs)	2 ⁷ /fs (3.9 ms)				
	000 (fc)		2 ³ /fc (0:4 µs)	2 ⁵ /fc (1.6 μs)	2 ⁷ /fc(6.4)μs)				
	001 (fc/2)	0 (1/1)	2 ⁴ /fc (0.8 μs)	2 ⁶ /fc (3.2 μs)	2 ⁸ /fc (12.8 μs)				
	010 (fc/4)	f _{FPH}	2 ⁵ /fc (1.6 μs)	2 ⁷ /fc (6.4 μs)	2 ⁹ /fc (25.6 μs)				
0 (fc)	011 (fc/8)		2 ⁶ /fc (3.2 μs)	2 ⁸ /fc (12.8 μs)	2 ¹⁰ /fc (51.2 μs)				
	100 (fc/16)		2 ⁷ /fc (6.4 μs)	2 ⁹ /fc (25.6 μs)	2 ¹¹ /fc (102.4 μs)				
	xxx	1 (1/16) fc/16 clock	2 ⁷ /(c (6.4 μs)	2 ⁹ /fc (25.6 μs)	2 ¹¹ /fc (102.4 μs)				

Note: xxx: Don't care

7.2.2 Up counter (UC0)

UC0 is a 16-bit binary counter which counts up according to input from the clock specified by TB0MOD<TB0CLK1:0> register.

As the input clock, one of the prescaler internal clocks $\phi T1$, $\phi T4$ and $\phi T16$ or an external clock from TB0IN0 pin can be selected. Counting or stopping and clearing of the counter is controlled by timer operation control register TB0RUN<TB0RUN>.

When clearing is enabled, the up counter UCO will be cleared to 0 each time its value matches the value in the timer register TB0RG1H/L. If clearing is disabled, the counter operates as a free-running counter. Clearing can be enabled or disabled by using TB0MOD<TB0CLE>.

A timer-overflow interrupt (INTTBOFO) is generated when UCO overflow occurs.

7.2.3 Timer registers (TB0RG0H/L, TB0RG1H/L)

These two 16-bit registers are used to set the interval time. When the value in the up counter UC0 matches the value set in this timer register, the comparator match detect signal will go active.

Setting data for both upper and lower timer registers is needed. For example, using 2-byte data transfer instruction or using 1-byte data transfer instruction twice for lower 8 bits and upper 8 bits in order. (The compare circuit will not operate if only the lower 8 bits are written. Be sure to write to both timer registers (16 bits) from the lower 8 bits followed by the upper 8 bits.)

The TB0RG0H/L timer register has a double-buffer structure, which is paired with register buffer 0. The value set in TB0RUN<TB0RDE> determines whether the double-buffer structure is enabled or disabled: it is disabled when <TB0RDE> = "0", and enabled when <TB0RDE> = "1".

Page 123 2007-10-15

When the double buffer is enabled, data is transferred from the register buffer 0 to the timer register when the values in the up counter (UC0) and the timer register TB0RG1H/L match.

The double buffer circuit incorporates two flags to indicate whether or not data is written to the lower 8 bits and the upper 8 bits of the register buffer, respectively. Only when both flags are set can data be transferred from the register buffer to the timer register by a match between the up-counter UC0 and the timer register TB0RG1. This data transfer is performed so long as 16-bit data is written in the register buffer regardless of the register buffer to the timer register unexpectedly as explained below.

For example, let us assume that an interrupt occurs when only the lower 8 bits (L1) of the register buffer data (H1L1) have been written and the interrupt routine includes writes to all 16 bits in the register buffer and a transfer of the data to the timer register. In this case, if the higher 8 bits (H1) are written after the interrupt routine is completed, only the flag for the higher 8 bits will be set, the flag for the lower 8 bits having been cleared in the interrupt routine. Therefore, even if a match occurs between UC0 and TB0RG1, no data transfer will be performed.

Then, in an attempt to set the next set of data (H2L2) in the register buffer, when the lower 8 bits (L2) are written, this will cause the flag for the lower 8 bits to be set as well as the flag for the higher 8 bits which has been set by writing the previous data (H1). If a match between UC0 and TB0RG1 occurs before the higher 8 bits (H2) are written, this will cause unexpected data (H1L2) to be sent to the timer register instead of the intended data (H2L2).


To avoid such transfer timing problems due to interrupts, the DI instruction (disable interrupts) and the EI (enable interrupts) can be executed before and after setting data in the register buffer, respectively.

After a reset, TB0RG0H/L and TB0RG1H/L are undefined. If the 16-bit timer is to be used after a reset, data should be written to it beforehand.

On a reset <TB0RDE> is initialized to "0", disabling the double buffer. To use the double buffer, write data to the timer register, set <TB0RDE> to "1", then write data to the register buffer 10 as shown below.

TB0RG0H/L and the register buffer 0 both have the same memory addresses (0188H and 0189H) allocated to them. If <TB0RDE> = "0", the value is written to both the timer register and the register buffer 0. If <TB0RDE> = "1", the value is written to the register buffer 0 only.

The addresses of the timer registers are as follows:

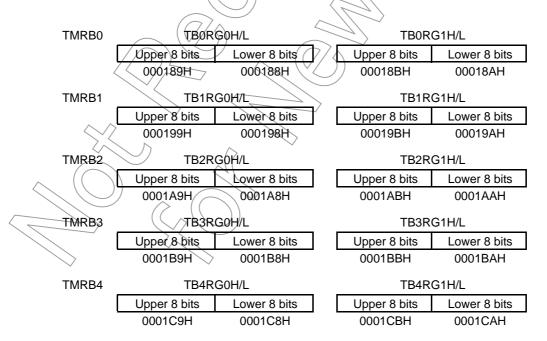

Note: The timer registers are write-only registers and thus cannot be read.

Page 124 2007-10-15


7.2.4 Capture registers (TB0CP0H/L, TB0CP1H/L)

These 16-bit registers are used to latch the values in the up counter (UC0).

Data in the capture registers should be read all 16 bits. For example, using a 2-byte data load instruction or two 1-byte data load instructions. The least significant byte is read first, followed by the most significant byte.

(during capture is read, capture operation is prohibited. In that case, the lower 8 bits should be read first, followed by the 8 bits.)

The addresses of the capture registers are as follows;

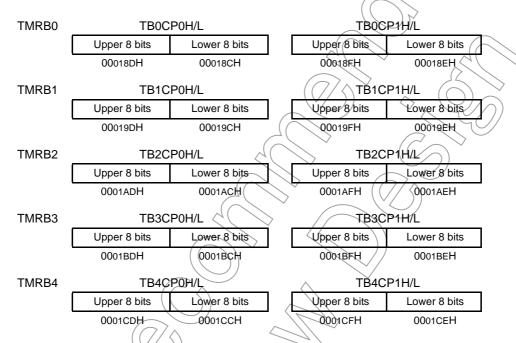

Note: The capture registers are read-only registers and thus cannot be written to.

7.2.5 Capture Input Control and External Interrupt Control

T).

This circuit controls the timing to latch the value of up-counter UC0 into TB0CP0H/L and TB0CP1H/L, and generates external interrupt. The latch timing of capture register and selection of edge for external interrupt is controlled by TB0MOD<TB0CPM1:0>.

The value in the up-counter (UC0) can be loaded into a capture register by software. Whenever 0 is written to TB0MOD TB0CP0I>, the current value in the up counter (UC0) is loaded into capture register TB0CP0H/L. It is necessary to keep the prescaler in RUN mode (e.g., TB0RUN<TB0PRUN> must be held at a value of

Page 125 2007-10-15

7.2.6 Comparators (CP00, CP01)

CP10 and CP11 are 16-bit comparators which compare the value in the up counter UC0 with the value set in TB0RG0H/L or TB0RG1H/L respectively, in order to detect a match. If a match is detected, the comparator generates an interrupt (INTTB00 or INTTB01 respectively).

7.2.7 Timer flip-flops (TB0FF0, TB0FF1)

These flip-flops are inverted by the match detect signals from the comparators and the latch signals to the capture registers. Inversion can be enabled and disabled for each element using TB0FFCR<TB0C0T1, TB0E1T1, TB0E0T1>.

After a reset the value of TB0FF0 is undefined. If "00" is written to TB0FFCR TB0FF0C1:0> or <TB0FF1C1:0>, TB0FF0 will be inverted. If "01" is written to the capture registers, the value of TB0FF0 will be set to "1". If "10" is written to the capture registers, the value of TB0FF0 will be set to "0".

Note: If an inversion by the match-detect signal and a setting change via the TB0FFCR register occurs simultaneously, the resultant operation varies depending on the situation, as shown below.

- If an inversion by the match-detect signal and an inversion via the register occur simultaneously, the flip-flop will be inverted only once.
- If an inversion by the match-detect signal and an attempt to set the flip-flop to 1 via the register occur simultaneously, the flip-flop will be set to 1.
- If an inversion by the match-detect signal and an attempt to clear the (lip-flop to 0 via the register occur simultaneously, the flip-flop will be cleared to 0.

If an inversion by match-detect signal and inversion disable setting occur simultaneously, two case (it is inverted and it is not inverted) are occurred. Therefore, if changing inversion control (inversion enable/disable), stop timer operation beforehand.

The values of TB0FF0 and TB0FF1 can be output via the timer output pins TB0OUT0 (which is shared with P82 and TB0OUT1 (which is shared with P83). Timer output should be specified using the port P function register.

Page 126 2007-10-15

7.3 SFR

1RB Rur	n Register								
		7	6	5	4	3	(2)	1	0
	Bit symbol	TB0RDE	_	-	-	I2TB0	TBORRUN) > -	TB0RUN
ORUN 80H)	Read/Write	R/W	R/W	-	-	R/W	R/W	-	R/W
011)	After reset	0	0			0	(V/ o))	-	0
	Function	Double Buffer 0: Disable 1: Enable	Always write 0.	Not i	in use	IDLE2 0: Stop 1: Operate	TMRB0 prescaler 0: Stop and C 1: Run (count		UC0
	Bit symbol	TB1RDE	-	-	- 4	I2TB1	TB1PRUN	1 - >	TB1RUN
N)	Read/Write	R/W	R/W	-	- (R/W	R/W		R/W
	After reset	0	0			1 0			0
	Function	Double Buffer 0: Disable	Always write 0.	Not i	nuse	IDLE2 0: Stop 1: Operate	TMRB1 prescaler 0: Stop and C		UC1
		1: Enable					1: Run (count		
JN	Bit symbol	TB2RDE	-	-(($\langle \rangle$	I2TB2	TB2PRUN	-	TB2RUN
I)	Read/Write	R/W	R/W		▽ -	R/W\	R/W	_	R/W
	After reset	0	0	4/		0	0	-	0
	Function	Double Buffer 0: Disable 1: Enable	Always write 0.	Not i	in use	IDLE2 0: Stop 1: Operate	TMRB2 prescaler 0: Stop and C 1: Run (count		UC2
	Bit symbol	TB3RDE	(-(-	\\	I2TB3	TB3PRUN	_	TB3RUN
N)	Read/Write	R/W	R/W	/ -	(F)	\ R/W	R/W	-	R/W
	After reset	0 ((//0\			0	0	_	0
	Function 4	Double Buffer	Always write	Not	nuse	IDLE2 0: Stop	TMRB3 prescaler		UC3
	Tunodon	0: Disable 1: Enable	φ.			1: Operate	0: Stop and C 1: Run (count		
	Bit symbol	TB4RDE	-	\ <u>-</u>		I2TB4	TB4PRUN	-	TB4RUN
))	Read/Write	R/W	R/W	-	-	R/W	R/W	-	R/W
,	After reset	\searrow	0 />			0	0	-	0
<u> </u>	Function	Double Buffer	Always write	Not i	n use	IDLE2 0: Stop	TMRB4 prescaler		UC4
_	Turion	0: Disable 1: Enable	0.	V Not I	11 430	1: Operate	0: Stop and C 1: Run (count		
		\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\							
		V		(ID! 56			Operation		
		I2TB2, I2TB3, I	·				0		d Clear
	TB0PRUN, TE	B1PRUN, TB2P	RUN, TB3PRUI	n, tb4prun: C	peration of pr	escaler	1	Co	unt

Note: Bits 1, 4 and 5 of TB0RUN/TB1RUN/TB2RUN/TB3RUN/TB4RUN are "1" when read.

TB0RUN, TB1RUN, TB2RUN, TB3RUN, TB4RUN: Operation of TMRB

Page 127 2007-10-15

TMRB Mode Register (Read-modify-write instructions are prohibited.) (1/2)

		7	6	5	4	3	2	1	0	
	Bit symbol	TB0CT1	TB0ET1	TB0CP0I	TB0CPM1	TB0CPM0	TB0CLE	TB0CLK1	TB0CLK0	
TB0MOD	Read/Write		/W	W*	. 200	.200	R/W		. 2002.10	
(0182H)	After reset	0	0	1	0	0	0	0	0	
	Function	TB0FF1 invers 0: Trigger disa 1: Trigger ena Invert when UC0 is loaded into TB0CP1H/L	ible	Software capture control 0: Software capture 1: Undefined	01: TB0IN0↑ TI INT5 occurs 10: TB0IN0↑ TI INT5 occurs 11: TA1OUT↑ T	s at rising edge B0IN0↓ s at falling edge	Up counter control 0. Clear disable 1. Clear enable		10: φT4 11: φT16	
TD OD	Bit symbol	TB1CT1	TB1ET1	TB1CP0I	TB1CPM1	TB1CPM0	TB1CLE	TB1CLK1	TB1CLK0	
TB1MOD (0192H)	Read/Write	R	/W	W*			R/W			
(/	After reset	0	0	1	0	\\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\	0	0	0	
	Function	TB1FF1 inversion trigg 0: Trigger disable 1: Trigger enable Invert when UC1 is loaded into TB1CP1H/L TB1RG		Software capture control 0: Software capture 1: Undefined	01: TB1 N0↑ TI INTY occurs 10: TB1 N0↑ TI INTY occurs 11: TA1OUT↑ T	s at rising edge B1IN1↑ s at rising edge B1IN0↓ s at falling edge	Up counter Control 6: Clear disable 1: Clear enable Up counter TMRB1 input clock sel 00: TB1IN0 pin input 01: \phiT1 10: \phiT4 11: \phiT16			
	Bit symbol	TB2CT1	TB2ET1	TB2CP0L	TB2CPM1	TB2CPM0	TB2CLE	TB2CLK1	TB2CLK0	
TB2MOD	Read/Write		W /	W*	TBZOT WIT	1BZGI WIO	R/W	TBZOLIKI	IBZOLNO	
(01A2H)	After reset	0	0		0	0/	0	0	0	
	Function	TB2FF1 inversion trigger 0: Trigger disable 1: Trigger enable		Software capture control 0: Software capture 1: Undefined	01: TB2IN0↑ TI INT1 occurs 10: TB2IN0↑ TI INT1 occurs 11: TA1OUT↑ T	s at rising edge B2IN0↓ s at falling edge	Up counter control 0: Clear disable 1: Clear enable	TMRB2 input clock select 00: TB2IN0 pin input 01: \phiT1 10: \phiT4 11: \phiT16		
TDOMOD	Bit symbol	TB3CT1	TB3ET1	TB3CP0I	_/TB3CPM1	TB3CPM0	TB3CLE	TB3CLK1	TB3CLK0	
TB3MOD (01B2H)	Read/Write_/	> R	/W	W*			R/W			
, ,	After reset		0 >	1	0	0	0	0	0	
Function Invert UC3 i loaded		0: Trigger disa	TB3FF1 inversion trigger 0: Trigger disable 1: Trigger enable Invert when UC3 is loaded into with		Capture timing 00: Disable INT3 occurs at rising edge 01: TB3IN0↑ TB3IN1↑ INT3 occurs at rising edge 10: TB3IN0↑ TB3IN0↓ INT3 occurs at falling edge 11: TA3OUT↑ TA3OUT↓ INT3 occurs at rising edge		Up counter control 0: Clear disable 1: Clear enable	in the state of th		

Page 128 2007-10-15

TMRB Mode Register (Read-modify-write instructions are prohibited.) (2/2)

TB4MOD (01C2H)

	7	6	5	4	3	2	1	0
Bit symbol	TB4CT1	TB4ET1	TB4CP0I	TB4CPM1	TB4CPM0	TB4CLE	TB4CLK1	TB4CLK0
Read/Write	R	/W	W*			R/W		
After reset	0	0	1	0	0	9(0	0
	TB4FF1 inver 0: Trigger disa 1: Trigger ena	able	Software capture		s at rising edge	Up counter control	TMRB4 input	
Function	Invert when UC4 is loaded into TB4CP1H/L	Invert when UC4 matches with TB4RG1H/L	control 0: Software capture 1: Undefined	10: TB4IN0↑ T INT9 occur 11: TA5OUT↑	s at rising edge B4IN0↓ s at falling edge	0: Clear disable 1: Clear	00: TB4IN0 pi 01: φT1 10: φT4 11: φT16	n input

TMRB source clock

00 External input clock (TBnIN0 pin in	out)
<tbnclk1:0> 01 φT1</tbnclk1:0>	
10 \(\phi T.4	
11 øT16	7

Up counter clear control (UCn)

<tbncle></tbncle>	0	Disable to clear up counter	7/<)	
	(1)	Clear by match with TBnR	Ğ1H/L	\mathcal{I}	

Capture/Interrupt timing

		Capture control	INT5 control
	000	Disable capture	INT generate at ris-
	<u></u>	Capture to TBnCP0H/L at rising edge of TBnIN0 Capture to TBnCP1H/L at rising edge of TBnIN1	ing edge of TBnIN0
<tb0cpm1:0></tb0cpm1:0>	10	Capture to TBnCP0H/L at rising edge of TBnIN0 Capture to TBnCP1H/L at falling edge of TBnIN0	INT generate at fall- ing edge of TBnIN0
		Capture to TBnCP0H/L at rising edge of TAzOUT Capture to TBnCP1H/L at falling edge of TAzOUT	INT generate at ris- ing edge of TBnIN0

Software capture

<tbncp0i></tbncp0i>	0	Capture value of up counter to TBnCP0H/L.
\rightarrow \lambda \rightarrow \rightarro	1	Undefined (Note 3)

Note 1: n=0,1,2,3,4

Note 2: z=1,3,5

Note 3: As described above, whenever 0 is written to TBnMOD<TBnCP0I>, the current value in the up counter is loaded into capture register TBnCP0H/L. However, note that the current value in the up counter is also loaded into capture register TBnCP0H/L when 1 is written to TBnMOD<TBnCP0I> while this bit is holding 0.

Page 129 2007-10-15

TMRB Flip-Flop Control Register (Read-modify-write instructions are prohibited.) (1/2)

		7	6	5	4	3	2	1	0
	Bit symbol	TB0FF1C1	TB0FF1C0	TB0C1T1	TB0C0T1	TB0E1T1	TB0E0T1	TB0FF0C1	TB0FF0C0
TB0FFCR (0183H)	Read/Write	V	V*		R	W	_	٧	/ *
(0.00.1)	After reset	1	1	0	0	0	0	1	1
00: In 01: S		TB0FF1 control 00: Invert 01: Set 10: Clear		TB0FF0 inver 0: Disable 1: Enable		Invest when	(Invert when	TB0FF0 control) 00: Invert 01: Set 10: Clear	
		11: Don't care Note: Always		Invert when UC0 is loaded into TB0CP1H/L.	Invert when UC0 is loaded into TB0CP0H/L.	Invert when UC0 matches TB0RG1H/L.	matches TB0RG0H/L.	11: Don't care Note: Always	read as 11.
	Bit symbol	TB1FF1C1	TB1FF1C0	TB1C1T1	TB1C0T1	TB1E1T1	TB1E0T1	TB1FF0C1	TB1FF0C0
TB1FFCR	Read/Write	V	V*		R	W		V	/ *
(0193H)	After reset	1	1	0	0	(0	0	d 1	1
		TB1FF1 contro 00: Invert 01: Set	ol	TB1FF0 inver 0: Disable 1: Enable	sion trigger		\$ \(\)	TB1FF0 contro 00: Invert 01: Set	ol
	Function	10: Clear 11: Don't care Note: Always		Invert when UC1 is loaded into TB1CP1H/L.	Invert when UC1 is loaded into TB1CP0H/L.	Invert when UC1 matches TB1RG1H/L.	Invert when UC1 matches TB1RG0H/L.	10: Clear 11: Don't care Note: Always	read as 11.
TRAFFOR	Bit symbol	TB2FF1C1	TB2FF1C0	TB2C1T1	TB2C0T1	TB2E171	TB2E0T1	TB2FF0C1	TB2FF0C0
TB2FFCR (01A3H)	Read/Write	V	V*		R ₂	W		٧	/ *
,	After reset	1	1		> 0 //	8	0	1	1
	Function	TB2FF1 control 00: Invert 01: Set 10: Clear 11: Don't care		TB2FF0 inver 0: Disable 1: Enable Invert when UC2 is loaded into TB2CP1H/L.	Invert when UC2 is loaded into TB2CR0H/L.	Invert when UC2 matches	Invert when UC2 matches TB2RG0H/L.	TB2FF0 contro 00: Invert 01: Set 10: Clear 11: Don't care	
	Bit symbol	TB3FF1C1	TB3FF1C0	TB3C1T1	TB3C0T1	TB3E1T1	TB3E0T1	TB3FF0C1	TB3FF0C0
TB3FFCR (01B3H)	Read/Write	//) v	V*	\ ((// \ R	/W		٧	/ *
(012011)	After reset	1//-		0		0	0	1	1
Function		TB3FF1 contr 00: Invert 01: Set 10: Clear 11: Don't care		TB3FF0 inver 6: Disable 1: Enable Invert when UC3 is	Invert when UC3 is	Invert when UC3	Invert when UC3	TB3FF0 control 00: Invert 01: Set 10: Clear 11: Don't care	ol
<u> </u>		Note: Always	read as 11	loaded into TB3CP1H/L.	loaded into TB3CP0H/L.	matches TB3RG1H/L.	matches TB3RG0H/L.	Note: Always	read as 11.
				~					

Page 130 2007-10-15

TMRB Flip-Flop Control Register (Read-modify-write instructions are prohibited.) (2/2)

TB4FFCR (01C3H)

	7	6	5	4	3	2	1	0	
Bit symbol	TB4FF1C1	TB4FF1C0	TB4C1T1	TB4C0T1	TB4E1T1	TB4E0T1	TB4FF0C1	TB4FF0C0	
Read/Write	V	V*		R/W			V	W*	
After reset	1	1	0	0	0	0	1	1	
	TB4FF1 contr 00: Invert 01: Set	ol	TB4FF0 inver 0: Disable 1: Enable	sion trigger			TB4FF0 contr 00: Invert 01: Set	ol	
Function	10: Clear 11: Don't care		Invert when UC4 is loaded into	Invert when UC4 is loaded into	Invert when UC4 matches	Invert when UC4 matches	10: Clear 11: Don't care		
	Note: Always	read as 11.	TB4CP1H/L.	TB4CP0H/L.	TB4RG1(H/L.	TB4RG0H/L.	Note: Always	read as 11.	

<TBnFF0C1:0>Timer flip-flop (TBnFF0) control

00	Invert TBnFF0
01	Set TBnFF0 to 1.
10	Clear TBnFF0/to 0.
11	Don't care
	01

<TBnE0T1> TBnFF0 inversion when UCn matches TBnRG0H/L

<trnf0t1></trnf0t1>	0 <	Disable trigger (disable inversion).
CIBILOTI>	1	Enable trigger (enable inversion):

<TBnE1T1> TBnFF0 inversion when UCn matches TBnRG1H/L

<tbne1t1></tbne1t1>	0	Disable trigger (disable inversion).
	1	Enable trigger (enable inversion).

<TBnC0T1> TBnFF0 inversion when UCn is loaded into TBnCP0H/L

	/_		^
<tbnc0t1></tbnc0t1>	<	0	Disable trigger (disable inversion).
CIBICOTIS	\setminus	/ 1	Enable trigger (enable inversion).

<TBnC1T1> TBnFF0 inversion when UCn is loaded into TBnCP1H/L

TRnC1T1>	0 (Disable trigger (disable inversion).
TDHCTT	1	Enable trigger (enable inversion).

<TBnFF1C1:0>Timer flip-flop (TBnFF1) control

·	90	Invert TBnFF1.	
∕kTBnFF1C1:0> ∧	01	Set TBnFF1 to 1.	
CIBIII I IOI.0	10	Clear TBnFF1 to 0.	
	11	Don't care	

Note: n=0,1,2,3,4

Page 131 2007-10-15

7.4 Operation in Each Mode

7.4.1 16-Bit Interval Timer Mode


Generating interrupts at fixed intervals

In this example the interrupt INTTB01 is set to be generated at fixed intervals. The interval time is set in the timer register TB0RG1H/L.

Note: X: Don't care, -: No change

7.4.2 16-Bit Event Counter Mode

If the external clock (TB0IN0 pin input) is selected as the input clock in 16-bit timer mode, the timer can be used as an event counter. The up-counter counts up on the rising edge of TB0IN0 input. To read the value of the counter, first perform software capture once, then read the captured value.

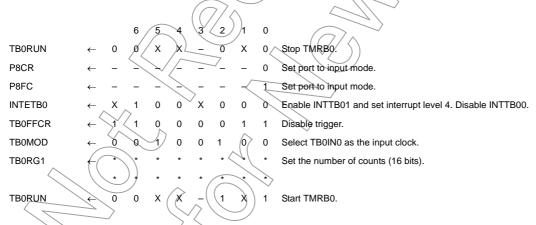

Note 1: X: Don't care, -: No change

Note 2: When the timer is used as an event counter, set the prescaler to run mode (TB0RUN<TB0PRUN> = 1).

Page 132 2007-10-15

7.4.3 16-Bit Programmable Pulse Generation (PPG) Output Mode

Square wave pulses can be generated at any frequency and duty ratio. The output pulse may be either active-Low or active-High.

In PPG mode a match between the value of the up-counter UC0 and either timer register TB0RG0 or TB0RG1 inverts the output value for timer flip-flop TB0FF0. The TB0FF0 output value is output on TB0OUT0. In this mode the following conditions must be satisfied.

(value set in TB0RG0) < (value set in TB0RG1)

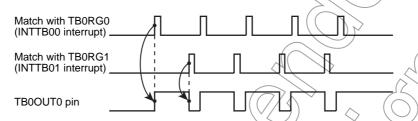


Figure 7-2 Programmable Pulse Generation (PPG) Output Waveforms

When the TB0RG0 double buffer is enabled in this mode, the value of register buffer 0 will be shifted into TB0RG0 when the up-counter value matches TB0RG1. This feature facilitates the handling of low-duty waves.

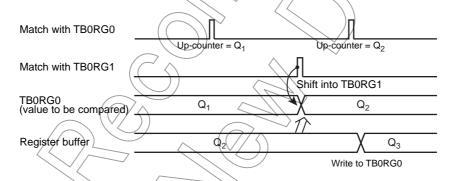


Figure 7-3 Operation of Register Buffer

Note: The values that can be set in TBxRGx range from 0001h to 0000h (equivalent to 10000h). If the maximum value 0000h is set, the match-detect signal goes active when the up-counter overflows.

Page 133 2007-10-15

The following block diagram illustrates this mode.


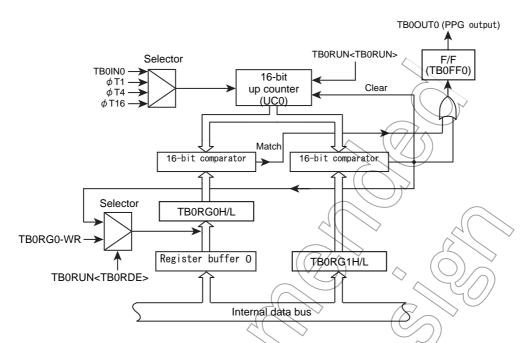


Figure 7-4 Block Diagram of 16-Bit PPG Mode

The following example shows how to set 16-bit PPG output mode:

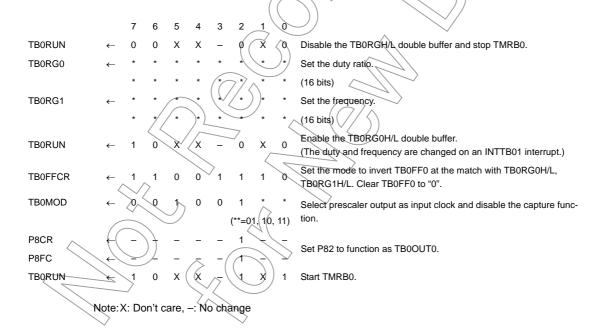

Page 134 2007-10-15

7.4.4 Capture function examples

Used capture function, they can be applicable in many ways, for example:

- 1. One-shot pulse output from external trigger pulse
- 2. Frequency measurement
- 3. Pulse width measurement
- 4. Time difference measurement

7.4.4.1 One-shot pulse output from external trigger pulse

Set the up counter UC0 in free-running mode with the internal input clock, input the external trigger pulse from TB0IN0 pin, and load the value of up-counter into capture register TB0CP0H/L at the rise edge of the TB0IN0 pin.

When the interrupt INT5 is generated at the rise edge of TB0IN0 input, set the TB0CP0H/L value (c) plus a delay time (d) to TB0RG0H/L (= c + d), and set the above set value (c + d) plus a one-shot width (p) to TB0RG1H/L (= c + d + p). And, set "14" to timer flip-flop control register TB0FFCR<TB0E1T1, TB0E0T1>. Set to trigger enable for be inverted timer flip-flop TB0FF0 by UC0 matching with TB0RG0H/L and with TB0RG1H/L. When interrupt INTTB01 occurs, this inversion will be disabled after one-shot pulse is output.

The (c), (d) and (p) correspond to (c, d and p Figure 7-5


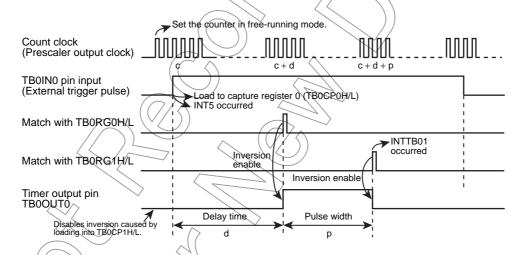


Figure 7-5 One-shot Pulse Output (with delay)

Page 135 2007-10-15

Example: To output a 2-ms one-shot pulse with a 3-ms delay to the external trigger pulse to the TB0IN0 pin.

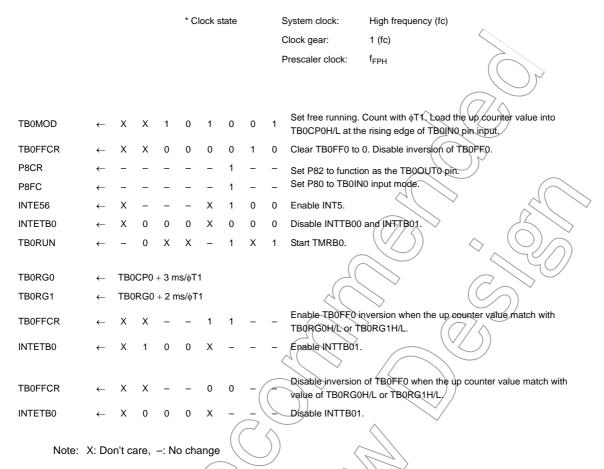

When delay time is unnecessary, invert timer flip flop TB0FF0 when up-counter value is loaded into capture register (TB0CP0H/L), and set the TB0CP0H/L value (c) plus the one-shot pulse width (p) to TB0RG1H/L when the interrupt INT5 occurs. The TB0FF0 inversion should be enable when the up counter (UC10) value matches TB0RG1H/L, and disabled when generating the interrupt INTTB01.

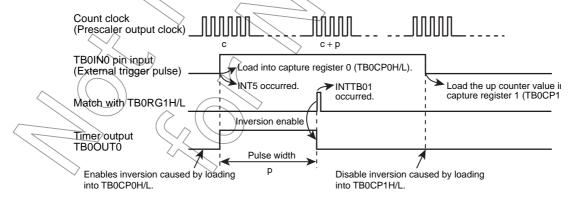


Figure 7-6 One-shot Pulse Output (without delay)

Page 136 2007-10-15

7.4.4.2 Frequency measurement

The frequency of the external clock can be measured in this mode. The clock is input through the TB0IN0 pin, and its frequency is measured by the 8-bit timers TMRA01 and the 16-bit timer/event counter (TMRB0). (TMRA01 is used to setting of measurement time by inversion TA1FF.)

The TB0IN0 pin input should be for the input clock of TMRB0. Set to TB0MOD <TB0CPM1:0> = "11". The value of the up counter (UC10) is loaded into the capture register TB0CP0H/L at the rise edge of the timer flip-flop TA1FF of 8-bit timers (TMRA01), and into TB0CP1H/L at its fall edge.

The frequency is calculated by difference between the loaded values in TB0CP0H/L and TB0CP1H/L when the interrupt (INTTA0 or INTTA1) is generates by either 8-bit timer.


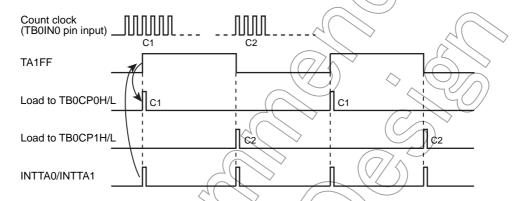


Figure 7-7 Frequency Measurement

For example, if the value for the level 1 width of TA1FF of the 8-bit timer is set to 0.5 s and the difference between the values in TB0CP0H/L and TB0CP1H/L is 100, the frequency is $100 \div 0.5 \text{ s} = 200 \text{ Hz}$.



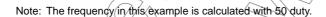

7.4.4.3 Pulse width measurement

This mode allows to measure the high-level width of an external pulse. While keeping the 16-bit timer/event counter counting (Free running) with the internal clock input, external pulse is input through the TB0IN0 pin. Then the capture function is used to load the UC0 values into TB0CP0H/L and TB0CP1H/L at the rising edge and falling edge of the external trigger pulse respectively. The interrupt INT5 occurs at the falling edge of TB0IN0.

The pulse width is obtained from the difference between the values of TB0CP0H/L and TB0CP1H/L and the internal clock cycle.

For example, if the internal clock is $0.8~\mu s$ and the difference between TB0CP0H/L and TB0CP1H/L is 100, the pulse width will be $100 \times 0.8~\mu s = 80~\mu s$.

Additionally, the pulse width which is over the UC0 maximum count time specified by the clock source, can be measured by changing software.

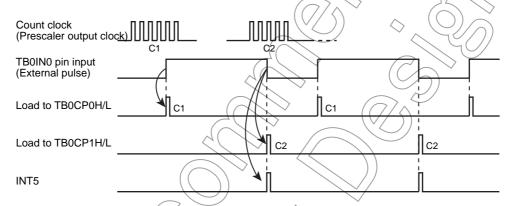


Figure 7-8 Pulse Width Measurement

Note: Only in this pulse width measuring mode (TB0MOD<TB0CPM1:0> = 10), external interrupt INT5 occurs at the falling edge of TB0IN0 pin input. In other modes, it occurs at the rising edge.

The width of low-level can be measured from the difference between the first C2 and the second C1 at the second INT5 interrupt.

Page 138 2007-10-15

7.4.4.4 Time Difference Measurement

This mode is used to measure the difference in time between the rising edges of external pulses input through TB0IN0 and TB0IN1.

Keep the 16-bit timer/event counter (TMRB0) counting (Free running) with the internal clock, and load the UC0 value into TB0CP0H/L at the rising edge of the input pulse to TB0IN0. Then the interrupt INT5 is generated.

Similarly, the UCO value is loaded into TB0CP1H/L at the rising edge of the input pulse to TB0IN1, generating the interrupt INT6.

The time difference between these pulses can be obtained by multiplying the value subtracted TB0CP0H/L from TB0CP1H/L and the internal clock cycle together at which loading the up counter value into TB0CP0H/L and TB0CP1H/L has been done.

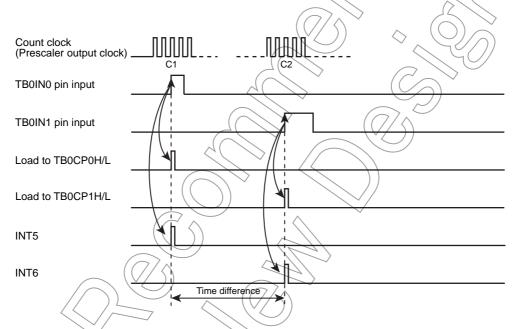


Figure 7-9 Time Difference Measurement

Page 139 2007-10-15

TOSHIBA TMP91FW60

8. Serial Channels (SIO)

TMP91FW60 includes 3 serial I/O channels. For both channels either UART mode (Asynchronous transmission) or I/O interface mode (Synchronous transmission) can be selected.

- 1. I/O interface mode
 - Mode 0: For transmitting and receiving I/O data using the synchronizing signal SCLK for extending I/O
- 2. UART mode
 - Mode 1: 7-bit data
 - Mode 1: 8-bit data
 - · Mode 1: 9-bit data

In mode 1 and mode 2, a parity bit can be added. Mode 3 has a wakeup function for the master controller to start slave controllers via a serial link (A multi-controller system).

Figure 8-2 are block diagrams for each channel.

SIO is compounded mainly prescaler, serial clock generation circuit, receiving buffer and control circuit, transmission buffer and control circuit.

Both channels operate in the same function except for the following points; hence only the operation of channel 0 is explained below.

Table 8-1 Differences in Serial Channel Specifications

		/ (
	\$100	SIO1	SIO2
Pin name	TXD0 (P90) RXD0 (P91)	TXD1 (P93) RXD1 (P94)	TXD2 (P41) RXD2 (P42)
	CTS0/SCLK0 (P92)	CTS1/SCLK1 (P95)	CTS2/SCLK2 (P43)


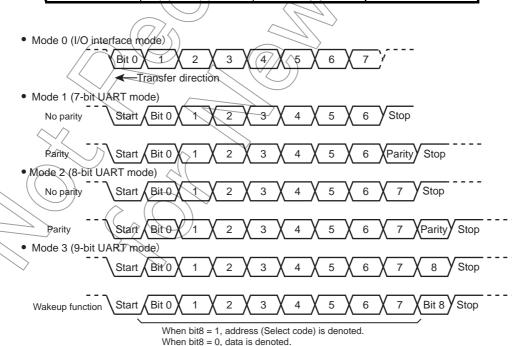


Figure 8-1 Data Formats

Page 140 2007-10-15

8.1 Block Diagrams

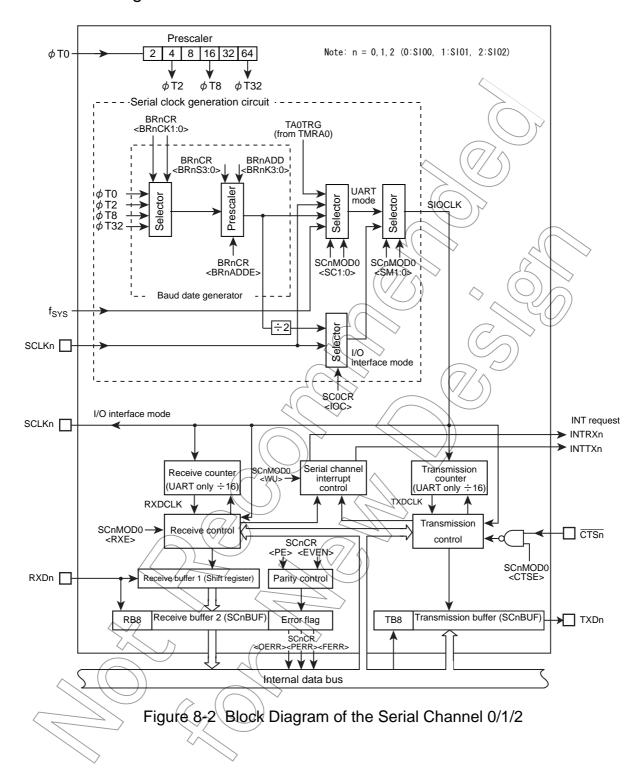

Page 141 2007-10-15

TOSHIBA TMP91FW60

8.2 Operation of Each Circuit

8.2.1 Prescaler

A 6-bit prescaler generates an operation clock for SIO0. The prescaler is active only when a baud rate generator is specified as a serial transfer clock. As an input clock of the prescaler, be sure to set SYSCR0<PRCK1> to "0" and then specify f_{FPH} . This clock is used for ϕ T0 with being divided by ϕ .

Table 8-2 shows prescaler clock resolution into the baud rate generator.

Table 8-2 Prescaler Clock Resolution to Baud Rate Generator

Select System Clock	Gear Value	Gear Value Select Prescaler Clock		Prescaler Output Clock Resolution					
<sysck></sysck>	<sysck> <gear2:0></gear2:0></sysck>		φТО	фТ2	φТ8	φТ32			
1 (fs)	XXX		2 ² /fs	2 ⁴ /fs	2 ⁶ /fs	2 ⁸ /fs			
	000 (fc)		2 ² /fc	2 ⁴ /fc	2 ⁶ /fc	2 ⁸ /fc			
	001 (fc/2)	0 (1/1)	2 ³ /fc	2 ⁵ /fc <	27/fe	2 ⁹ /fc			
0 (fc)	010 (fc/4)	f _{FPH}	2 ⁴ /fc	2 ⁶ /fc	2 ⁸ /fc	2 ¹⁰ /fc			
	011 (fc/8)		2 ⁵ /fc	2 ⁷ /fc	2 ⁹ /fc	2 ¹¹ /fc			
	100 (fc/16)		2 ⁶ /tc	2 ⁸ /fc	2 ¹⁰ /fc	2 ¹² /fc			

The baud rate generator selects between 4 clock inputs: \$\phi T0, \phi T2, \phi T8, and \phi T32 among the prescaler outputs.

8.2.2 Baud rate generator

The baud rate generator is a circuit which generates transmission and receiving clocks which determine the transmission rate of the serial channels.

The input clock to the band rate generator, $\phi T0$, $\phi T2$, $\phi T8$ or $\phi T32$, is generated by the 6-bit prescaler which is shared by the timers. One of these input clocks is selected using the BR0CR<BR0CK1:0> field in the band rate generator control register.

The baud rate generator includes a frequency divider, which divides the frequency by 1, N + (16 - K)/16 or 16 values, determining the transmission rate. The transmission rate is determined by the settings of BROCR<BROADDE><BROS3:0> and BROADD<BROK3:0>.

Page 142 2007-10-15

8.2.2.1 In UART mode

(1) When BROCR < BROADDE > = 0

The settings BR0ADD<BR0K3:0> are ignored. The baud rate generator divides the selected prescaler clock by N, which is set in BR0CK<BR0S3:0>. (N = 1, 2, 3...16)

(2) When BR0CR<BR0ADDE> = 1

The N + (16 - K)/16 division function is enabled. The band rate generator divides the selected prescaler clock by N + (16 - K)/16 using the value of N set in BR0CR<BR0S3:0> (N = 2, 3 ... 15) and the value of K set in BR0ADD<BR0K3:0> (K = 1, 2, 3 ... 15)

Note: If N = 1 and N = 16, the N + (16 - K)/16 division function is disabled. Set BROADDE> to "0".

8.2.2.2 In I/O interface mode

The N + (16 - K)/16 division function is not available in I/O interface mode. Set BR0CR<BR0ADDE> to "0" before dividing by N.

The method for calculating the transmission rate when the band-rate generator is used is explained below.

(1) In UART mode

Baud rate = Input clock of baud rate generator Frequency divider for baud rate generator ÷ 16

(2) In I/O interface mode

Baud rate = Input clock of baud rate generator Frequency divider for baud rate generator ÷ 2

8.2.2.3 Integer divider (N divider)

For example, when the source clock frequency (fc) = 19.6608 MHz, the input clock frequency = ϕ T2 (fc/16), the frequency divider N (BR0CR<BR0S3:0>) = 8, and BR0CR<BR0ADDE> = 0, the baud rate in UART mode is as follows:

*Clock state System clock: High frequency (fc)

Clock gear: 1 (fc)

Prescaler clock: f_{FPH}

Baudrate= $\frac{\text{fc/16}}{8} \div 16$ = $19.6608 \times 10^6 \div 16 \div 8 \div 16 = 9600 \text{ (bps)}$

Note: The + (16 - K)/16 division function is disabled and setting BR0ADD<BR0K3:0> is invalid.

Page 143 2007-10-15

8.2.2.4 N + (16 - K)/16 divider (UART mode only)

Accordingly, when the source clock frequency (fc) = 15.9744 MHz, the input clock frequency = ϕ T2, the frequency divider N (BR0CR<BR0S3:0>) = 6, K (BR0ADD<BR0K3:0>) = 8, and BR0CR<BR0ADDE> = 1, the baud rate in UART mode is as follows:

*Clock state System clock: High frequency (fc)

Clock gear: 1 (fc)

Prescaler clock: f_{FPH}

Baudrate=
$$\left(\frac{\text{fc/16}}{6 + \frac{(16 - 8)}{16}} \div 16\right)$$

= $15.9744 \times 10^6 \div 16 \div \left(6 + \frac{8}{16}\right) \div 16 = 9600 \text{(bps)}$

Table 8-3 show examples of UART mode transfer rates.

Additionally, the external clock input is available in the serial clock.

The method for calculating the baud rate is explained below:

- In UART mode
 Baud rate = External clock input frequency ÷ 16
 It is necessary to satisfy (External clock input cycle) ≥ 4/f_{SYS}
- In I/O interface mode

 Baud rate = External clock input frequency

 It is necessary to satisfy (External clock input cycle) ≥ 16/f_{SYS}

Table 8-3 UART Baud Rate Selection

(When baud rate generator is used and BR0CR<BR0ADDE>=0, SYSCR0<PRCK>=0) Unit (kbps)

fc [MHz]	Frequency Divider N	\$\\\(\forall 10\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	φT2 (fc/16)	φT8 (fc/64)	φT32 (fc/256)
7.3728	1	115.200	28.800	7.200	1.800
↑	3	38.400	9.600	2.400	0.600
↑	6	19.200	4.800	1.200	0.300
1	Α >	11.520	2.880	0.720	0.180
↑	c	9.600	2.400	0.600	0.150
$\uparrow (($	F	7.680	1.920	0.480	0.120
9.8304		153.600	38.400	9.600	2.400
	2	76.800	19.200	4.800	1.200
\uparrow	4	38.400	9.600	2.400	0.600
7	5	30.720	7.680	1.920	0.480
↑	8	19.200	4.800	1.200	0.300
↑	10	9.600	2.400	0.600	0.150

Note: Transmission rates in I/O interface mode are eight times faster than the values given above.

Page 144 2007-10-15

Timer out clock (TA0TRG) can be used for source clock of UART mode only.

Calculation method the frequency of TA0TRG

Frequency of TA0TRG = Baud rate \times 16

Note: In case of I/O interface mode, prohibit to use TA0TRG for source clock.

8.2.3 Serial clock generation circuit

This circuit generates the basic clock for transmission and receiving data.

8.2.3.1 In I/O interface mode

In SCLK output mode with the setting SCOCR<IOC> ("0", the basic clock is generated by dividing the output of the baud rate generator by 2, as described previously.

In SCLK input mode with the setting SCOCR<IOC = "1", the rising edge or falling edge will be detected according to the setting of the SCOCR<SCLKS register to generate the basic clock.

8.2.3.2 In UART mode

The SC0MOD0<SC1:0> setting determines whether the baud rate generator clock, the internal system clock f_{SYS}, the match detect signal from timer TMRA0 or the external clock (SCLK0) is used to generate the basic clock SIOCLK.

8.2.4 Receiving counter

The receiving counter is a 4-bit binary counter used in UART mode which counts up the pulses of the SIO-CLK clock. It takes 16 SIOCLK pulses to receive 1 bit of data; each data bit is sampled three times – on the 7th, 8th and 9th clock cycles.

The value of the data bit is determined from these three samples using the majority rule.

For example, if the data bit is sampled respectively as "1", "0" and "1" on 7th, 8th and 9th clock cycles, the received data bit is taken to be "1". A data bit sampled as "0", "0" and "1" is taken to be "0".

8.2.5 Receiving control

8.2.5.1 In I/O interface mode

In SCLK output mode with the setting SC0CR<IOC> = "0", the RXD0 signal is sampled on the rising or falling edge of the shift clock which is output on the SCLK0 pin, according to the SC0CR<SCLKS> setting.

In SCLK input mode with the setting SC0CR<IOC> = "1", the RXD0 signal is sampled on the rising or falling edge of the SCLK0 input, according to the SC0CR<SCLKS> setting.

8.2.5.2 In UART mode

The receiving control block has a circuit which detects a start bit using the majority rule. Received bits are sampled three times; when two or more out of three samples are "0", the bit is recognized as the start bit and the receiving operation commences.

The values of the data bits that are received are also determined using the majority rule.

Page 145 2007-10-15

8.2.6 Receiving buffers

To prevent overrun errors, the receiving buffers are arranged in a double-buffer structure.

Received data is stored one bit at a time in receiving buffer 1 (which is a shift register).

When 7 or 8 bits of data have been stored in receiving buffer 1, the stored data is transmitted to receiving buffer 2 (SC0BUF); this causes an INTRX0 interrupt to be generated. The CPU only reads receiving buffer 2 (SC0BUF). Even before the CPU reads receiving buffer 2 (SC0BUF), the received data can be stored in receiving buffer 1. However, unless receiving buffer 2 (SC0BUF) is read before all bits of the next data are received by receiving buffer 1, an overrun error occurs. If an overrun error occurs, the contents of receiving buffer 1 will be lost, although the contents of receiving buffer 2 and SC0CR<RB8> will be preserved.

SCOCR<RB8> is used to store either the parity bit – added in 8-bit UART mode – or the most significant bit (MSB) – in 9-bit UART mode.

In 9-bit UART mode the wakeup function for the slave controller is enabled by setting SC0MOD0<WU> to "1"; in this mode INTRX0 interrupts occur only when the value of SC0CR<RB8> is "1"

Note 1: The double buffer structure does not support SC0CR<RV08>

Note 2: If the CPU reads receive buffer 2 while data is being transferred from receive buffer 1 to receive buffer 2, the data may not be read properly. To avoid this situation, a read of receive buffer 2 should be triggered by a receive interrupt.

8.2.7 Transmission counter

The transmission counter is a 4-bit binary counter which is used in UART mode and which, like the receiving counter, counts the SIOCLK clock pulses; a TXDCLK pulse is generated every 16 SIOCLK clock pulses.

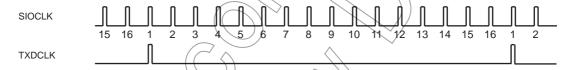


Figure 8-3 Generation of the Transmission Clock

8.2.8 Transmission controller

8.2.8.1 [n, I/O interface mode

In SCLK output mode with the setting SCOCR<IOC> = "0", the data in the transmission buffer is output one bit at a time to the TXDO pin on the rising or falling edge of the shift clock which is output on the SCLKO pin, according to the SCOCR<SCLKS> setting.

In SCLK input mode with the setting SCOCR<IOC> = "1", the data in the transmission buffer is output one bit at a time on the TXDO pin on the rising or falling edge of the SCLKO input, according to the SCOCR<SCLKS setting.

8.2.8.2 In UART mode

When transmission data sent from the CPU is written to the transmission buffer, transmission starts on the rising edge of the next TXDCLK.

Page 146 2007-10-15


DSHIBA TMP91FW60

8.2.8.3 Handshake function

Use of CTSO pin allows data can be sent in units of one frame; thus, overrun errors can be avoided. The handshake function is enabled or disabled by the SCOMODO<CTSE> setting.

When the $\overline{\text{CTS0}}$ pin goes high on completion of the current data send, data transmission is halted until the $\overline{\text{CTS0}}$ pin goes low again. However, the INTTX0 interrupt is generated, it requests the next data send to the CPU. The next data is written in the transmission buffer and data transmission is halted.

Though there is no \overline{RTS} pin, a handshake function can be easily configured by setting any port assigned to be the \overline{RTS} function. The \overline{RTS} should be output "high" to request send data halt after data receive is completed by software in the \overline{RXD} interrupt routine.

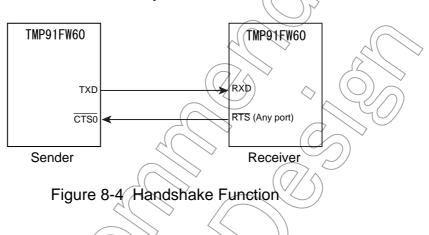

Timing to write to the transmission buffer

Transmission is suspended during buffer this period buffer at 13 14 15 16 1 2 3 13 14 15 16 1 2 3

TXDCLK

TXDCLK

Start bit

Bit 0

Note 1: If the CTSO signal goes high during transmission, no more data will be sent after completion of the current transmission.

Note 2: Transmission starts on the first falling edge of the TXDCLK clock after the CTSO signal has fallen.

Figure 8-5 CTS0 (Clear to send) Timing

Page 147 2007-10-15

TOSHIBA TMP91FW60

8.2.9 Transmission buffer

The transmission buffer (SC0BUF) shifts out and sends the transmission data written from the CPU from the least significant bit (LSB) in order. When all the bits are shifted out, the transmission buffer becomes empty and generates an INTTX0 interrupt.

8.2.10 Parity control circuit

When SCOCR<PE> in the serial channel control register is set to "1", it is possible to transmit and receive data with parity. However, parity can be added only in 7-bit UART mode or 8-bit UART mode. The SCOCR<EVEN> field in the serial channel control register allows either even or odd parity to be selected.

In the case of transmission, parity is automatically generated when data is written to the transmission buffer SC0BUF. The data is transmitted after the parity bit has been stored in SC0BUF<TB7 in 7-bit UART mode or in SC0MOD0<TB8> in 8-bit UART mode. SC0CR<PE and SC0CR<EVEN> must be set before the transmission data is written to the transmission buffer.

In the case of receiving, data is shifted into receiving buffer 1, and the parity is added after the data has been transmitted to receiving buffer 2 (SC0BUF), and then compared with SC0BUF RB7> in 7-bit UART mode or with SC0CR<RB8> in 8-bit UART mode. If they are not equal, a parity error is generated and the SC0CR<PERR> flag is set.

8.2.11 Error flags

Three error flags are provided to increase the reliability of data reception.

8.2.11.1 Overrun error <OERR>

If all the bits of the next data item have been received in receiving buffer 1 while valid data still remains stored in receiving buffer 2 (SC0BUF), an overrun error is generated.

The below is a recommended flow when the overrun error is generated.

(INTRX interrupt routine)

- 1. Read receiving buffer
- 2. Read error flag
- if < OERR > = 1

then

- a. Set to disable receiving (Write "0" to SC0MOD0<RXE>)
- b. Wait to terminate current frame
- c. Read receiving buffer
- d. Read error flag
- e. Set to enable receiving (Write "1" to SC0MOD0<RXE>)
- f. Request to transmit again
- 4. Other

Note: Overrun errors are generated only with regard to receive buffer 2 (SC0BUF). Thus, if SC0CR<RB8> is not read, no overrun error will occur.

Page 148 2007-10-15

8.2.11.2 Parity error <PERR>

The parity generated for the data shifted into receiving buffer 2 (SC0BUF) is compared with the parity bit received via the RXD pin. If they are not equal, a parity error is generated.

Note: The parity error flag is cleared every time it is read. However, if a parity error is detected twice in succession and the parity error flag is read between the two parity errors, it may seem as if the flag had not been cleared. To avoid this situation, a read of the parity error flag should be triggered by a receive interrupt.

8.2.11.3 Framing error <FERR>

The stop bit for the received data is sampled three times around the center. If the majority of the samples are "0", a framing error is generated.

8.2.12 Timing generation

8.2.12.1 In UART mode

Table 8-4 Receiving

Mode	9 Bits	8 Bits + Parity	8/Bits, 7 Bits + Parity, 7 Bits
Interrupt timing	Center of last bit (Bit8)	Center of last bit (Parity bit)	Center of stop bit
Framing error timing	Center of stop bit	Center of stop bit	Center of stop bit
Parity error timing		Center of last bit (Parity bit)	Center of stop bit
Overrun error timing	Center of last bit (Bit8)	Center of last bit (Parity bit)	Center of stop bit

Note 1: In 9 Bits and 8 Bits + Parity mode, interrupts coincide with the ninth bit pulse. Thus, when servicing the interrupt, it is necessary to wait for a 1-bit period (to allow the stop bit to be transferred) to allow checking for a framing error.

Note 2: The higher the transfer rate, the later than the middle receive interrupts and errors occur.

Table 8-5 Transmitting

Mode	9 Bits	8 Bits + Parity	8 Bits, 7 Bits + Parity, 7 Bits
Interrupt timing	Just before stop bit is trans- mitted	Just before stop bit is transmitted	Just before stop bit is transmitted

8.2.12.2 I/O interface

	*				
Transmission interrupt	SCLK output mode	Immediately after the last bit. (See Figure 8-8)			
timing	SCLK input mode	Immediately after rise of last SCLK signal rising mode, or immediately after fall in falling mode. (See Figure 8-9)			
Receiving interrupt	SCLK output mode	Timing used to transmit received data to receive buffer 2 (SC0BUF) (e.g., immediately after last SCLK). (See Figure 8-10)			
timing	SCLK input mode	Timing used to transmit received data to receive buffer 2 (SC0BUF) (e.g., immediately after last SCLK). (See Figure 8-11)			

Page 149 2007-10-15

8.3 SFR

Serial Control Register (Read-modify-write instructions are prohibited.)

SC0CR (0201H)

SC1CR (0209H)

SC2CR (0211H)

	7	6	5	4	3	2	1	0
Bit symbol	RB8	EVEN	PE	OERR	PERR	FERR	SCLKS	IOC
Read/Write	R	R	/W	R (Cle	ared to "0" whe	n read)	R	W
After reset	Undefined	0	0	0	0	0) > 0	0
Function	Received data bit8	Parity 0: Odd 1: Even	Parity addition 0: Disable 1: Enable	Overrun error flag 0: Undetect error 1: Detect error	Parity error flag 0: Undetect error 1: Detect error	Framing, error flag 0: Undetect error 1: Detect error	Edge selection for SCLK pin (I/O mode) 0: SCLK↑ 1: SCLK↓	I/O interface input clock selection 0: Baud rate generator 1: SCLK pin input

Note1: As all error flags are cleared after reading, do not test only a single bit with a bit-testing instruction.

Note2: A baud rate generator SCnCR<IOC> = "0" is unavailable as an input clock for an I/O interface if a prescaler clock is set to fc/16 whenSYSCR0<PRCK1> is "1".

Note3: n =0, 1, 2.

Serial Mode Control Register 0

SC0MOD0 (0202H) SC1MOD0 (020AH) SC2MOD0

(0212H)

	7	6	5 <	4	3	(2)	1	0
Bit symbol	TB8	CTSE	RXE	WU	SM1	SMO	SC1	SC0
Read/Write				V R	w (/	/		
After reset	0	0	40) 0 /	0	<u> </u>	0	0
Function	Transmission data	Handshake function 0: Disable 1: Enable	Receive function 0: Disable 1: Enable	Wakeup function 0: Disable 1: Enable	Serial transmis 00: I/O interfac 01: 7-bit /JART 10: 8-bit UART 11: 9-bit UART	ce mode Γ mode Γ mode	Serial transmi (UART) 00: Timer TA0 01: Baud rate 10: Internal cl 11: External c (SCLK inpu	TRG generator ock f _{SYS} lock

Note1: SCLKpin and CT\$ pin

	SCLK pin	CTS pin
SIO0	SCLKO	CTS0
SI01	SCLK1	CTS1
SIO2	SCLK2	CTS2

Note2: A baud rate generator SCnMOD0<SC1:0> = "01" is unavailable as a serial transfer clock if a prescaler clock is set to fc/16 when SYSCR0<PRCK1> is "1".

Note3: n =0, 1, 2.

Serial Mode Control Register 1

SC0MOD1 (0205H) SC1MOD1 (020DH)

SC2MOD1 (0215H)

	7	6	5	4	3	2	1	0
Bit symbol	1280	FDPX0	-	_	_	-	-	_
Read/Write	R/W	R/W	-	-	_	-	-	-
After reset	0	0	-	-	-	-	-	-
Bit symbol	I2S1	FDPX1	-	_	_	_	_	_
Read/Write	R/W	R/W	-	_	-	_	-	-
After reset	0	0	_	-	_	-	_	-
Bit symbol	12\$2	FDPX2	-	-	-	-	-	-
Read/Write	R/W	R/W	_	-	_	-	_	-
After reset	0	0	-	-	-	-	-	-
Function	IDLE2 0: Stop 1: Run	Duplex 0: Half 1: Full						

Page 150 2007-10-15

Baud Rate Generator Control

BR0CR (0203H)

BR1CR (020BH)

BR2CR (0213H)

	7	6	5	4	3	2	1	0
Bit symbol	-	BR0ADDE	BR0CK1	BR0CK0	BR0S3	BR0S2	BR0S1	BR0S0
Read/Write				R	W			
After reset	0	0	0	0	0	0	0	0
Bit symbol	_	BR1ADDE	BR1CK1	BR1CK0	BR1S3	BR1S2	BR1S1	BR1S0
Read/Write				R	W)) ′	
After reset	0	0	0	0	0	0	0	0
Bit symbol	-	BR2ADDE	BR2CK1	BR2CK0	BR2S3	BR2\$2	BR2S1	BR2S0
Read/Write				R	W			
After reset	0	0	0	0	6) > 0	0	0
Function	Always write "0".	+ (16 - K)/16 division 0: Disable 1: Enable	Input clock se baud rate gen 00: φT0 01: φT2 10: φT8 11: φT32			setting of the divi	ded frequency	N"

BR0ADD (0204H)

BR1ADD (020CH)

BR2ADD (0214H)

							$\mathcal{A}(\mathcal{A})$	
	7	6	5	4	3	2	\rightarrow	0
Bit symbol	-	-	- <		BR0K3	BR0K2	BR0K1	BR0K0
Read/Write	-	-	-	<u> </u>		\sim R	/W	
After reset	-	_	(\ <u>\</u>	0 ((/	/ { \ 0	0	0
Bit symbol	-	_	4-	- /	BR1K3	BR1K2	BR1K1	BR1K0
Read/Write	-	-	<u>-</u>	- //		R	/W	
After reset	-	- (\nearrow	-	0))	0	0	0
Bit symbol	-	- \	<u> </u>	-	BR2K3	BR2K2	BR2K1	BR2K0
Read/Write	-)-	-		R	/W	
After reset	-	[-[)) –		0	0	0	0
Function					\rightarrow	•	cy divisor "K" + (16 - K)/16)	

Baud rate generator frequency divisor setting

	BRnCR <br< th=""><th>nADDE> = 1</th><th>BRnCR<brnadde> = 0</brnadde></th></br<>	nADDE> = 1	BRnCR <brnadde> = 0</brnadde>
BRnCR <brns3:0> BRnADD <brnk3:0></brnk3:0></brns3:0>	0000(N=16) or 0001(N=1)	0010(N=2) to 1111(N=15)	0001(N=1)UART only to 1111(N=15) 0000(N=16)
0000	Disable	Disable	
0001 (K = 1) to 11)11 (K = 15)	Disable	Divided by N + (16 - K)/ 16	Divided by N

Note: Availability of +(16 - K)/16 division function

N	UART mode	I/O mode
2 to 15	0	х
1, 16	х	х


The baud rate generator can be set "1" in UART mode and disable + (16 - K)/16 division function. Don't use in I/O interface mode.

Note: Set BR1CR<BR1ADDE> to 1 after setting K (K = 1 to 15) to BR1ADD<BR1K3:0> when N+ (16 - K)/16 division function is used.

Note: n = 0,1,2

Page 151 2007-10-15

Serial Transmission/receiving Buffer Registers (Read-modify-write instructions are prohibited.)

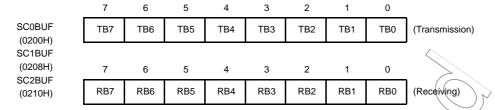

8.4 Operation in Each Mode

8.4.1 Mode 0 (I/O interface mode)

This mode allows an increase in the number of I/O pins available for transmitting data to or receiving data from an external shift register.

This mode includes the SCLK output mode to output synchronous clock SCLK and SCLK input mode to input external synchronous clock SCLK.

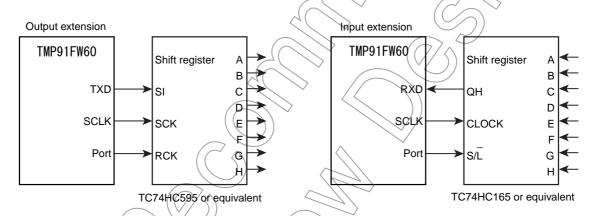


Figure 8-6 SCLK Output Mode Connection Example

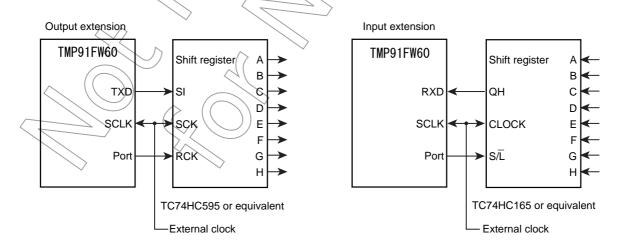


Figure 8-7 SCLK Input Mode Connection Example

Page 152 2007-10-15

8.4.1.1 Transmission

In SCLK output mode 8-bit data and a synchronous clock are output on the TXD0 and SCLK0 pins respectively each time the CPU writes the data to the transmission buffer. When all data is output, INTES0<ITX0C> will be set to generate the INTTX0 interrupt.

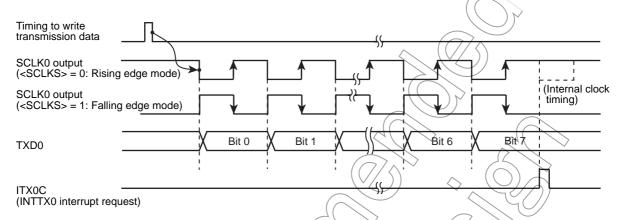


Figure 8-8 Transmitting Operation in MQ Interface Mode (SCLK output mode)

In SCLK input mode, 8-bit data is output on the TXD0 pin when the SCLK0 input becomes active after the data has been written to the transmission buffer by the CPU.

When all data is output, INTESO<ITXOC> will be set to generate INTTXO interrupt.

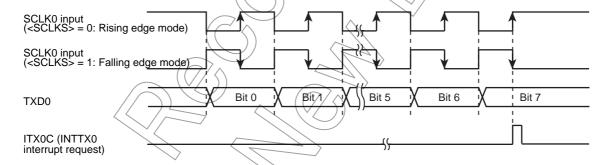


Figure 8-9 Transmitting Operation in I/O Interface Mode (SCLK input mode)

Page 153 2007-10-15

8.4.1.2 Receiving

In SCLK output mode, the synchronous clock is outputted from SCLK0 pin and the data is shifted to receiving buffer 1. This starts when the receive interrupt flag INTESO<IRX0C> is cleared by reading the received data. When 8-bit data are received, the data will be transmitted to receiving buffer 2 (SC0BUF according to the timing shown below) and INTESO<IRX0C> will be set to generate INTRX0 interrupt.

The outputting for the first SCLK0 starts by setting SC0MOD0<RXE> to "1"

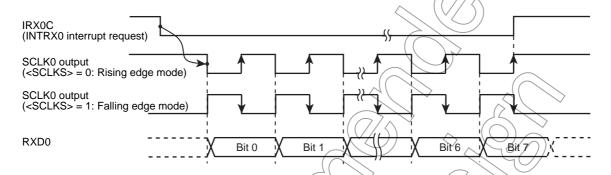


Figure 8-10 Receiving Operation in I/O Interface Mode (\$CLK output mode)

In SCLK input mode, the data is shifted to receiving buffer 1 when the SCLK input becomes active after the receive interrupt flag INTESO IRXOC is cleared by reading the received data. When 8-bit data is received, the data will be shifted to receiving buffer 2 (SC0BUF according to the timing shown below) and INTESO IRXOC will be set again to be generate INTRX0 interrupt.

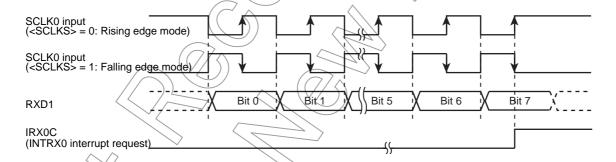


Figure 8-11 Receiving Operation in I/O Interface Mode (SCLK input mode)

Note: The system must be put in the receive enable state (SC0MOD0<RXE> = 1) before data can be received.

Page 154 2007-10-15

8.4.1.3 Transmission and receiving (Full duplex mode)

When the full duplex mode is used, set the level of receive interrupt to "0" and set enable the interrupt level (1 to 6) to the transmission interrupt. In the transmission interrupt program, the receiving operation should be done like the above example before setting the next transmission data.



Page 155 2007-10-15


TMP91FW60

8.4.2 Mode 1 (7-bit UART mode)

7-bit UART mode is selected by setting serial channel mode register SC0MOD0<SM1:0> to "01".

In this mode, a parity bit can be added. Use of a parity bit is enabled or disabled by the setting of the serial channel control register SC0CR<PE> bit; whether even parity or odd parity will be used is determined by the SC0CR<EVEN> setting when SC0CR<PE> is set to "1" (Enabled).

Example: When transmission data of the following format, the control registers should be set as described below. This explanation applies to channel 0.

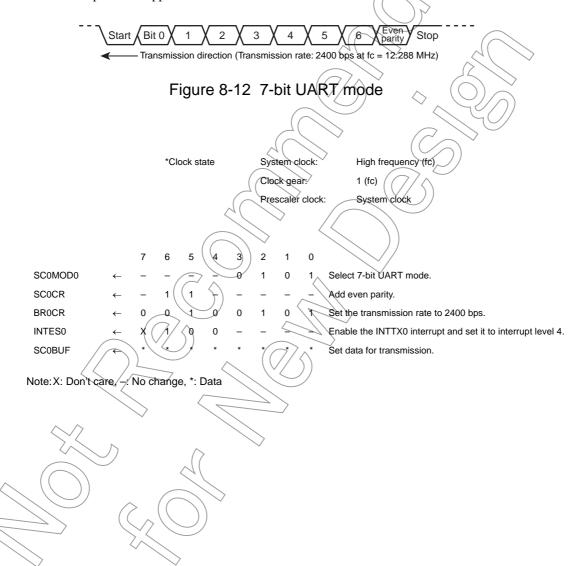


Page 156 2007-10-15

TMP91FW60

8.4.3 Mode 2 (8-bit UART mode)

8-bit UART mode is selected by setting SC0MOD0<SM1:0> to "10". In this mode, a parity bit can be added (Use of a parity bit is enabled or disabled by the setting of SC0CR<PE>); whether even parity or odd parity will be used is determined by the SC0CR<EVEN> setting when SC0CR<PE> is set to "1" (Enabled).

Example: When receiving data of the following format, the control registers should be set as described below.

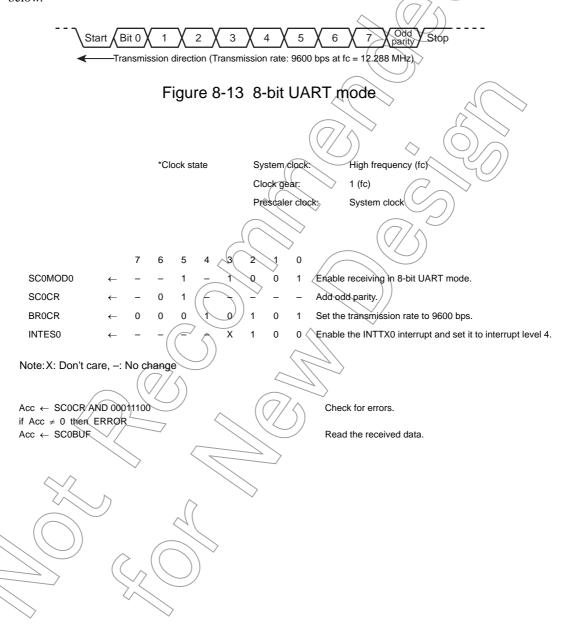

Page 157 2007-10-15


8.4.4 Mode 3 (9-bit UART mode)

9-bit UART mode is selected by setting SC0MOD0<SM1:0> to "11". In this mode parity bit cannot be added.

In the case of transmission, the MSB (9th bit) is written to SC0MOD0<TB8> In the case of receiving, it is stored in SC0CR<RB8>. When the buffer is written and read, the MSB is read or written first, before the rest of the SC0BUF data.


8.4.4.1 Wakeup function

In 9-bit UART mode, the wakeup function for slave controllers is enabled by setting SC0MOD0<WU> to "1". The interrupt INTRX0 occurs only when <RB8> + "T".

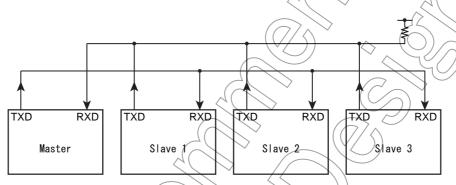

Note: The TXD pin of each slave controller must be in open-drain output mode.


Figure 8-14 Serial Link Using Wakeup Function

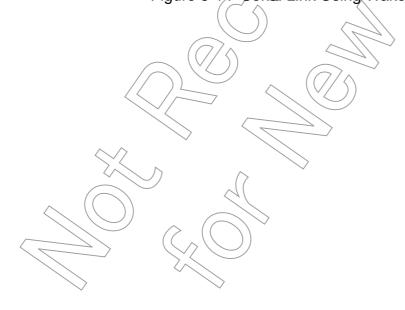

Page 158 2007-10-15

8.4.4.2 Protocol

- 1. Select 9-bit UART mode on the master and slave controllers.
- 2. Set the SC0MOD0<WU> bit on each slave controller to "1" to enable data receiving.
- 3. The master controller transmits one-frame data including the 8-bit select code for the slave controllers. The MSB (Bit8) <TB8> is set to "1".

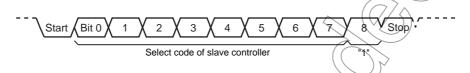


- 4. Each slave controller receives the above frame. Each controller checks the above select code against its own select code. The controller whose code matches clears its WU bit to "0".
- 5. The master controller transmits data to the specified slave controller whose SC0MOD0<WU> bit is cleared to "0". The MSB (Bit8) <TB8 is cleared to "0".



6. The other slave controllers (whose < WU> bits remain at "1") ignore the received data because their MSBs (Bit8 or <RB8>) are set to "0", disabling INTRX0 interrupts.

The slave controller (WU bit = "0") can transmit data to the master controller, and it is possible


The slave controller (WU bit = "0") can transmit data to the master controller, and it is possible to indicate the end of data receiving to the master controller by this transmission.

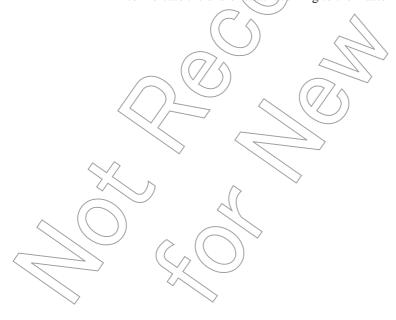

Page 159 2007-10-15

8.4.4.3 Example

To link two slave controllers serially with the master controller using the internal clock f_{SYS} as the transfer clock.

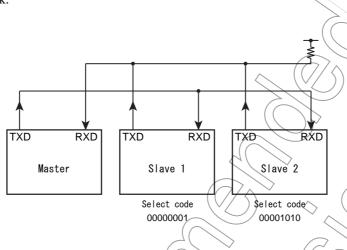

Main settings (except port setting)


Register	MSB	3				(, (LSB
		7	6	5	4	3	2	1	0
INTES0	←	Х	1	0	0	X	1>	0	1
SC0MOD0	←	1	0	1	0		1	1	0
SC0BUF	←	0	0 ((0	0	0	0	0	1

Enable the INTTX0 interrupt and set it to interrupt level 4. Enable the INTRX0 interrupt and set it to interrupt level 5.

Set f_{SYS} as the transmission clock for 9-bit UART mode.


Set the select code for slave controller 1.

INTTX0 interrupt

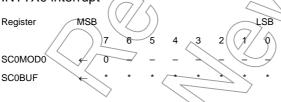

Set data for transmission.

Main settings (except port setting)

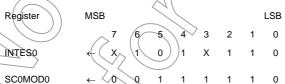

Enable INTRX0 and INTTX0.

Set TB8 to "0".

Set <WU> to "1" in 9-bit UART transmission mode using $f_{\mbox{\scriptsize SYS}}$ as the transmission clock.

INTRX0 interrupt

Register LSB Acc ← SC0BUF, if Acc = select code then SC0MOD0 Clear <WU> to "0".

> 2007-10-15 Page 160

9. Serial Bus Interface (SBI)

The TMP91FW60 has a 2-channel serial bus interface which an I^2C bus mode. This circuit supports only I^2C bus mode (Multi master).

The serial bus interface is connected to an external device through SDA0,SCL0,SDA1 and SCL1 in the I²C bus mode.

9.1 Configuration

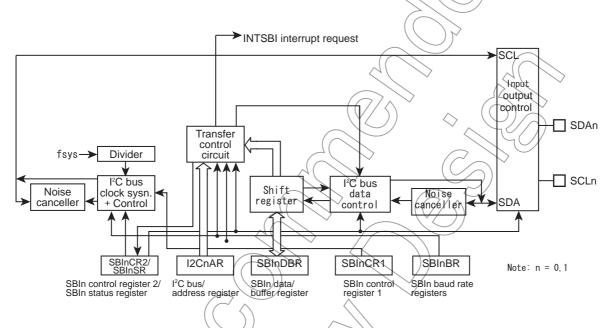


Figure 9-1 Serial Bus Interface (SBI)

9.2 Serial Bus Interface (SBI) Control


The following registers are used to control the serial bus interface and monitor the operation status.

- Serial bus interface control register 0 (SBIOCR0, SBI1CR0)
- Serial bus interface control register 1 (SBI0CR1, SBI1CR1)
- Serial bus interface control register 2 (SBI0CR2, SBI1CR2)
- Serial bus interface data buffer register (SBI0DBR, SBI1DBR)
- I²C bus address register (I2COAR, I2C1AR)
- Serial bus interface status register (SBI0SR, SBI1SR)
- IDLE2 control register (SBI0BR, SBI1BR)

Page 161 2007-10-15

9.3 Operation in I²C Bus Mode

Both channels operate in the same function except for the following points; hence only the operation of channel 0 is explained below.

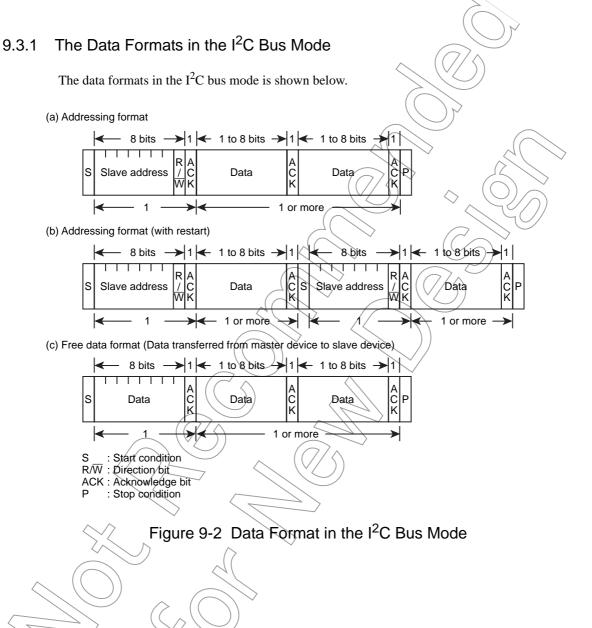

Page 162 2007-10-15

9.3.2 I²C Bus Mode Control Register

The following registers are used to control and monitor the operation status when using the serial bus interface (SBI) in the I^2C bus mode.

Serial Bus Interface Control Register 0 (Read-modify-write instructions are prohibited.)

SBI0CR0 (0247H)

SBI1CR0 (024FH)

						\sim		
	7	6	5	4	_3	(//2\)	1	0
Bit symbol	SBI0EN	_	-	-	7/		-	_
Read/Write	R/W				R			
After reset	0	0	0	0	9/)) o	0	0
Bit symbol	SBI1EN	1	-	-		-		-
Read/Write	R/W			•	R		41 >>	
After reset	0	0	0	0		0 /4	0	0
Function	SBI operation 0: disable 1: enable		Always read "0".					

Note <SBIEN>: When using SBI, <SBIEN> should be set "1" (SBI operation enable) before setting each register of SBI module.

Serial Bus Interface Control Register 1 (Read-modify-write instructions are prohibited.))

SBI0CR1 (0240H)

SBI1CR1 (0248H)

Interiace o	ontroi regi	oter i (iteaa	-modry write	RISTIGUIOTIS	are promote	ed.))		
	7	6	(5)	4 //	3	2	1	0
Bit symbol	BC2	BC1	BC0	ACK	-))	SCK2	SCK1	SCK0/ SWRMON
Read/Write		W		R/W	-/	\	V	R/W
After reset	0	(9-/	0	0	-	0	0	0/1
Bit symbol	BC2	BC1	BC0	ACK	> -	SCK2	SCK1	SCK0/ SWRMON
Read/Write		(//vv)		R/W	_	1	V	R/W
After reset	0		0 ((7/\0	-	0	0	0/1
Function	Num	ber of transferre (Note 1)	d bits	Acknowl- edge mode specification		Internal seria	clock selection reset monitor (Note 2)	and software

Internal serial clock selection <SCK2:0> at write

7	Internal serial clock selection <sck2:0> at write</sck2:0>							
	000 >	n = 4	- (Note3)					
	001	n = 5	73.53 kHz					
	010	n = 6	50.00 kHz	System clock: fc				
SCK2:0	011	n = 7	30.49 kHz	Clock gear: fc/1 fc =20 MHz (Internal SCL output)				
SCR2.0	100	n = 8	17.12 kHz	$fscl = (f_{SYS}/2) / (2^n + 36) [Hz]$				
\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	101	n = 9	9.12 kHz					
	110	n = 10	4.72 kHz					
	111	(Reserved)	(Reserved)					

Software reset state monitor <SWRMON> at read

SWRMON	0	During software reset
OWNINGIV	1	Initial data

Acknowledge mode specification

ACK	0	Not generate clock pulse for acknowledge signal
ACK	1	Generate clock pulse for acknowledge signal

Page 163 2007-10-15

Number of bits transferred

		<ach< th=""><th><> = 0</th><th colspan="3"><ack> = 1</ack></th></ach<>	<> = 0	<ack> = 1</ack>		
	<bc2:0></bc2:0>	Number of clock pulses	Bits	Number of clock pulses	Bits	
	000	8	8	9	8	
	001	1	1	2	_ 1	
BC2:0	010	2	2	3	2	
	011	3	3	4	(3)	
	100	4	4	5	4	
	101	5	5	6	5	
	110	6	6	X	9	
	111	7	7	8	7	

Note 1: For the frequency of the SCL line clock, see 9.3.3.3 "Serial clock".

Note 2: Initial data of SCK0 is "0", SWRMON is "1".

Note 3: This I²C bus circuit dose not support high-speed mode, it supports standard mode only. The fact speed can be selected over 100 kbps by fc and <SCK2:0>, however it's irregular operation.



Serial Bus Interface Control Register 2 (Read-modify-write instructions are prohibited.)

SBI0CR2 (0243H)

SBI1CR2 (024BH)

	7	6	5	4	3	2	1	0
Bit symbol	MST	TRX	BB	PIN	SBIM1	SBIM0	SWRST1	SWRST0
Read/Write	w				V	v <	1	N
After reset	0	0	0	1	0	0	0	0
Bit symbol	MST	TRX	BB	PIN	SBIM1	SBIM0	SWRST1	SWRST0
Read/Write	W			y	y C	'	N	
After reset	0	0	0	1	√ 0 (// ô	0	0
Function	Master/slave selection	Transmitter/ receiver selection	Start/stop condition generation	Cancel INTSBI interrupt request	Serial bus interface operation mode selection Software reset generation		et generate	

Software reset generate

	10	
SWRST1:0	\downarrow	Write "10" and "01", then an internal reset signal is generated
	01	

Serial bus interface operating mode selection (Note 2)

	00	Port mode (Serial bus interface output disabled)
SBIM1:0	01	(Reserved)
SBIIVIT.0	10	I ² C bus mode
	11	(Reserved)

INTSBI interrupt request

PIN	0 (-
	1	Cancel interrupt request

Start/stop condition generation

BB /		Generates the stop condition
	(// 1))	Generates the start condition

Transmitter/receiver selection

 1		
TPY	0	Receiver
HKX	1 <	Transmitter

Master/slave selection

` <			
^	MST	0	Slave
\	JUNOT	2/	Master

Note 1: Reading this register functions as SBIOSR/SBI1SR register.

Note 2: Switch to port mode after confirming that the bus is free.

Switch a mode between 1²C bus mode and clocked-synchronous 8-bit SIO mode after confirming that input signals via port are high level.

Page 165 2007-10-15

Serial Bus Interface Status Register (Read-modify-write instructions are prohibited.)

SBI0SR (0243H)

SBI1SR (024BH)

	7	6	5	4	3	2	1	0
Bit symbol	MST	TRX	BB	PIN	AL	AAS	AD0	LRB
Read/Write		•		F	?			
After reset	0	0	0	1	0	0	0	0
Bit symbol	MST	TRX	BB	PIN	AL	ÁAS	AD0	LRB
Read/Write	R							
After reset	0	0	0	1	√ 0 (// ô	0	0
Function	Master/slave status moni- tor	Transmitter/ receiver sta- tus monitor	I ² C bus status monitor	INTSBI interrupt request monitor	Arbitration lost detection monitor	Stave address match detec- tion monitor	GENERAL CALL detec- tion monitor	Last received bit monitor

Last received bit monitor <

LRB	0	Last received bit was 0
LIND	1	Last received bit was 1

GENERAL CALL detection monitor

AD0	0	Undetected	/
ABO	1	GENERAL CALL detected	

Slave address match detection monitor

AAS	0	Undetected
AAO	1	Slave address match or GENERAL CALL detected

Arbitration lost detection monitor

ΔΙ	0		<u>-</u>	
AL	(1	/	Arbitrati	ion lost detected

INTSBI interrupt request monitor

PIN	(// 0)	Interrupt requested
		Interrupt canceled
//		

I²C bus status monitor

ВВ	. 0 <	Free
)	1	Buşy

Transmitter/receiver status monitor

\	TDY	0/	Receiver
	TIXX	-	Transmitter

Master/slave status monitor

MST 📐)0	Slave
WOT	1	Master

Note 1: Writing in this register functions as SBI0CR2/SBI1CR2.

Note 2: The initial data SBI0SR/SBI1SR<PIN> is "1" if SBI operation is enable (SBI0CR0<SBI0EN>/SBI1CR0<SBI1EN> "1"). If SBI operation is disable (SBI0CR0<SBI0EN>/SBI1CR0<SBI1EN> "0"), the initial data of SBI0SR/SBI1SR<PIN> is "0".

Page 166 2007-10-15

IDLE2 Control Register (Read-modify-write instructions are prohibited.)

SBI0BR (0244H)

SBI1BR (024CH)

	7	6	5	4	3	2	1	0
Bit symbol	-	I2SBI0	_	-	_	-	_	-
Read/Write	W	R/W	-	-	-	\ -	-	R/W
After reset	0	0	-	-	-		-	0
Bit symbol	-	I2SBI1	-	-	-	(-)	\rangle -	-
Read/Write	W	R/W	-	-	-		_	R/W
After reset	0	0	-	-	<u>~</u> ((// 🖒	-	0
Function	Always write "0"	Operation in IDLE2 mode 0: Stop 1: Operate						Always write "0"

Serial Bus Interface Data Buffer Register (Read-modify-write instructions are prohibited.)

SBI0DBR (0241H)

SBI1DBR (0249H)

					/ { \			
	7	6	5	4	<i>))</i> 3	2	(// ₁)	0
Bit symbol	DB7	DB6	DB5	DB4	DB3	DB2	√0B1	DB0
Read/Write	R (Received)/W (Transfer)							
After reset	Undefined							
Bit symbol	DB7	DB6	DB5	DB4	DB3	DB2	DB1	DB0
Read/Write	R (Received)/W (Transfer)							
After reset	Undefined							

Note 1: When writing transmitted data, start from the MSB (bit7). Receiving data is placed from LSB (bit0).

Note 2: SBIODBR can't be read the written data. Therefore read-modify-write instruction (e.g., "BIT" instruction) is prohibitted.

I²C Bus Address Register (Read-modify-write instructions are prohibited.)

I2C0AR (0242H)

I2C1AR (024AH)

3	(11011)			1671				
	7	6	5	4	3	2	1	0
Bit symbol	SA6	SA5	SA4	SA3	SA2	SA1	SA0	ALS
Read/Write	//) w							
After reset	0/	0	0	0	0	0	0	0
Bit symbol	SA6	SA5	SA4	> SA3	SA2	SA1	SA0	ALS
Read/Write	w w							
After reset	0	0	0	0	0	0	0	0
Function	Slave address selection for when device is operating as slave device					Address recognition mode speci- fication		

Address recognition mode specification

	/ sp				
ΔI S	0	Slave address recognition			
ALO	√1	Non slave address recognition			

Page 167 2007-10-15

9.3.3 Control in I²C Bus Mode

9.3.3.1 Acknowledge mode specification

Set the SBI0CR1<ACK> to "1" for operation in the acknowledge mode. The TMP91FW60 generates an additional clock pulse for an acknowledge signal when operating in master mode. In the transmitter mode during the clock pulse cycle, the SDA pin is released in order to receive the acknowledge signal from the receiver. In the receiver mode during the clock pulse cycle, the SDA pin is set to the low in order to generate the acknowledge signal.

Clear the <ACK> to "0" for operation in the non-acknowledge mode, the TMP91FW60 does not generate a clock pulse for the acknowledge signal when operating in the master mode.

9.3.3.2 Number of transfer bits

The SBIOCR1<BC2:0> is used to select a number of bits for next transmitting and receiving data.

Since the <BC2:0> is cleared to "000" as a start condition, a slave address and direction bit transmission are always executed in 8 bits. Other than these, the <BC2:0> retains a specified value.


9.3.3.3 Serial clock

Clock source

The SBIOCR1<SCK2:0> is used to select a maximum transfer frequency outputted on the SCL pin in master mode. Set the baud rates, which have been calculated according to the formula below, to meet the specifications of the I2C bus, such as the smallest pulse width of tLOW.



Figure 9-3 Clock Source

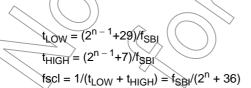

SBI0CR1 <sck2:0></sck2:0>	n
000	4
001	5
010	6
011	7
100	8
101	9
110	10

Note: f_{SBI} shows f_{SYS}/2

Page 168 2007-10-15

(2) Clock synchronization

In the I²C bus mode, in order to wired-AND a bus, a master device which pulls down a clock line to low level, in the first place, invalidate a clock pulse of another master device which generates a high-level clock pulse. The master device with a high-level clock pulse needs to detect the situation and implement the following procedure.

The TMP91FW60 has a clock synchronization function for normal data transfer even when more than one master exists on the bus.

The example explains the clock synchronization procedures when two masters simultaneously exist on a bus.

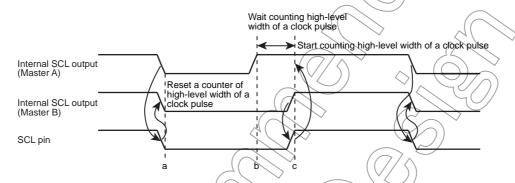


Figure 9-4 Clock Synchronization

As master A pulls down the internal SCL output to the low level at point "a", the SCL line of the bus becomes the low level. After detecting this situation, master B resets a counter of high-level width of an own clock pulse and sets the internal SCL output to the low level.

Master A finishes counting low-level width of an own clock pulse at point "b" and sets the internal SCL output to the high level. Since master B holds the SCL line of the bus at the low level, master A waits for counting high-level width of an own clock pulse. After master B finishes counting low-level width of an own clock pulse at point "c" and master A detects the SCL line of the bus at the high level and starts counting high level of an own clock pulse. The clock pulse on the bus is determined by the master device with the shortest high-level width and the master device with the longest low-level width from among those master devices connected to the bus.

9.3.3.4 Slave address and address recognition mode specification

When the TMP91FW60 is used as a slave device, set the slave address <SA6:0> and <ALS> to the I2C0AR. Clear the <ALS> to "0" for the address recognition mode.

9.3.3.5 Master/slave selection

Set the SBI0CR2<MST> to "1" for operating the TMP91FW60 as a master device. Clear the SBI0CR2<MST> to "0" for operation as a slave device. The <MST> is cleared to "0" by the hardware after a stop condition on the bus is detected or arbitration is lost.

Page 169 2007-10-15

9.3.3.6 Transmitter/receiver selection

Set the SBI0CR2<TRX> to "1" for operating the TMP91FW60 as a transmitter. Clear the <TRX> to "0" for operation as a receiver.

When data with an addressing format is transferred in slave mode, when a slave address with the same value that an I2C0AR or a GENERAL CALL is received (All 8-bit data are "0" after a start condition), the $\langle TRX \rangle$ is set to "1" by the hardware if the direction bit $\langle R/\overline{W} \rangle$ sent from the master device is "1", and $\langle TRX \rangle$ is cleared to "0" by the hardware if direction bit is "0".

In the master mode, after an acknowledge signal is returned from the slave device, the <TRX> is cleared to "0" by the hardware if a transmitted direction bit is "1", and <TRX> is set to "1" by the hardware if direction is "0". When an acknowledge signal is not returned, the current condition is maintained.

The <TRX> is cleared to "0" by the hardware after a stop condition on the I²C bus is detected or arbitration is lost.

9.3.3.7 Start/stop condition generation

When the SBIOSR<BB> is "0", slave address and direction bit which are set to SBIODBR are output on a bus after generating a start condition by writing "1" to the SBIOCR2<MST, TRX, BB, PIN>. It is necessary to set transmitted data to the data buffer register (SBIODBR) and set "1" to <ACK> beforehand.

SCL pin

SDA pin

Start condition

Start condition

Figure 9-5 Start Condition Generation and Slave Address Generation

When the <BB is "1", a sequence of generating a stop condition is started on the bus by writing "1" to the <MST, TRX, PIN>, and "0" to the <BB>. Do not modify the contents of <MST, TRX, BB, PIN> until a stop condition is generated on the bus.

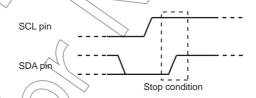


Figure 9-6 Stop Condition Generation

The state of the bus can be ascertained by reading the contents of SBI0SR<BB>. SBI0SR<BB> will be set to "1" if a start condition has been detected on the bus, and will be cleared to "0" if a stop condition has been detected.

Page 170 2007-10-15

9.3.3.8 Interrupt service requests and interrupt cancellation

When a serial bus interface interrupt request (INTSBI) occurs, the SBI0CR2<PIN> is cleared to "0". During the time that the SBI0CR2<PIN> is "0", the SCL line is pulled down to the low level.

The <PIN> is cleared to "0" when an 1 word of data is transmitted or received. Either writing/reading data to/from SBI0DBR sets the <PIN> to "1".

The time from the <PIN> being set to "1" until the SCL line is released takes tLOW.

In the address recognition mode (<ALS> = "0"), <PIN> is cleared to "0" when the received slave address is the same as the value set at the I2C0AR or when a GENERAL CALL is received (All 8-bit data are "0" after a start condition). Although SBIOCR2<PIN> can be set to "1" by the program, the <PIN> is not cleared to "0" when it is written "0".

9.3.3.9 Serial bus interface operation mode selection

SBIOCR2<SBIM1:0> is used to specify the serial bus interface operation mode

Set SBI0CR2<SBIM1:0> to "10" when the device is to be used in 12°C bus mode after confirming pin condition of serial bus interface to "H".

Switch to port mode after confirming a bus is free.

9.3.3.10 Arbitration lost detection monitor

Since more than one master device can exist simultaneously on the bus in I²C bus mode, a bus arbitration procedure has been implemented in order to guarantee the integrity of transferred data.

Data on the SDA line is used for I²C bus arbitration.

The following shows an example of a bus arbitration procedure when two master devices exist simultaneously on the bus. Master A and master B output the same data until point "a". After master A outputs "L" and master B, "H", the SDA line of the bus is wired-AND and the SDA line is pulled down to the low level by master A. When the SCL line of the bus is pulled up at point b, the slave device reads the data on the SDA line, that is, data in master A. A data transmitted from master B becomes invalid. The state in master B is called "ARBITRATION LOST". Master B device which loses arbitration releases the internal SDA output in order not to affect data transmitted from other masters with arbitration. When more than one master sends the same data at the first word, arbitration occurs continuously after the second word.

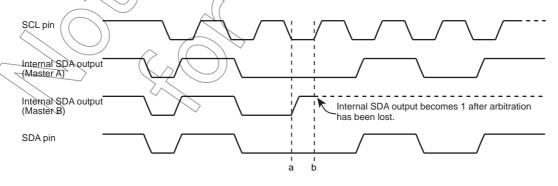


Figure 9-7 Arbitration Lost

The TMP91FW60 compares the levels on the bus's SDA line with those of the internal SDA output on the rising edge of the SCL line. If the levels do not match, arbitration is lost and SBI0SR<AL> is set to "1".

Page 171 2007-10-15

When SBIOSR<AL> is set to "1", SBIOSR<MST, TRX> are cleared to "00" and the mode is switched to slave receiver mode. Thus, clock output is stopped in data transfer after setting <AL> = "1".

SBIOSR<AL> is cleared to "0" when data is written to or read from SBIODBR or when data is written to SBIOCR2.

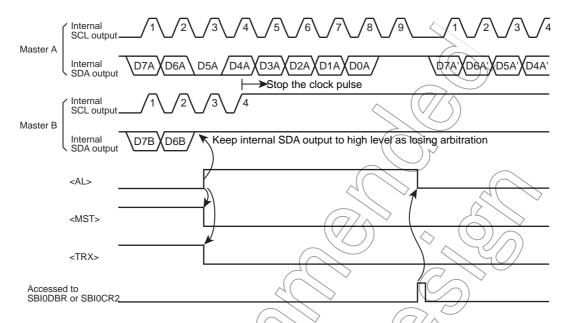


Figure 9-8 Example of when TMP91FW60 is a Master Device B (D7A = D7B, D6A = D6B)

9.3.3.11 Slave address match detection monitor

SBIOSR<AAS> is set to "1" in slave mode, in address recognition mode (e.g., when I2COAR<ALS> = "0"), when a GENERAL CALL is received, or when a slave address matches the value set in I2COAR. When I2COAR<ALS> = "1", SBIOSR<AAS> is set to "1" after the first word of data has been received. SBIOSR<AAS> is cleared to "0" when data is written to or read from the data buffer register SBIODBR.

9.3.3.12 GENERAL CALL detection monitor

SBIOSR<AD0> is set to "1" in slave mode, when a GENERAL CALL is received (All 8-bit received data is "0" after a start condition). SBIOSR<AD0> is cleared to "0" when a start condition or stop condition is detected on the bus.

9.3.3.13 Last received bit monitor

The SDA line value stored at the rising edge of the SCL line is set to the SBIOSR<LRB>. In the acknowledge mode, immediately after an INTSBI interrupt request is generated, an acknowledge signal is read by reading the contents of the SBIOSR<LRB>.

9.3.3.14 Software reset function

The software reset function is used to initialize the SBI circuit, when SBI is locked by external noises, etc.

An internal reset signal pulse can be generated by setting SBIOCR2<SWRST1:0> to "10" and "01". This initializes the SBI circuit internally. All control registers and status registers are initialized as well.

SBIOCR1<SWRMON> is automatically set to "1" after the SBI circuit has been initialized.

Note: If the software reset is executed, operation selection is reset, and its mode is set to port mode from I²C mode.

Page 172 2007-10-15

TMP91FW60

9.3.3.15 Serial bus interface data buffer register (SBI0DBR)

The received data can be read and transferred data can be written by reading or writing the SBIODBR.

In the master mode, after the start condition is generated the slave address and the direction bit are set in this register.

9.3.3.16 I²CBUS address register (I2C0AR)

I2C0AR<SA6:0> is used to set the slave address when the TMP91FW60 functions as a slave device.

The slave address output from the master device is recognized by setting the I2C0AR<ALS> to "0". The data format is the addressing format. When the slave address is not recognized at the <ALS> = "1", the data format is the free data format.

9.3.3.17 Setting register for IDLE2 mode operation (SBIOBRO)

SBI0BR0<I2SBI0> is the register setting operation/stop during IDLE2 mode. Therefore, setting <I2SBI0> is necessary before the HALT instruction is executed.

9.3.4 Data Transfer in I²C Bus Mode

9.3.4.1 Device initialization

Set the SBIOCR1<ACK, SCK2:0>, clear bits 2 to 0 and 4 in the \$BIOCR1 to "0".

Set a slave address <SA6:0> and the <ALS> (<ALS> = "0" when an addressing format) to the I2C0AR.

For specifying the default setting to a slave receiver mode, clear "0" to the SBIOCR2<MST, TRX, BB>, set "1" to the <PIN>, "10" to the <SBIM1:0>, and write "0" to bit 1, 0.

Page 173 2007-10-15

IIRA TMP91FW60

9.3.4.2 Start condition and slave address generation

(1) Master mode


In the master mode, the start condition and the slave address are generated as follows.

Check a bus free status (when $\langle BB \rangle = "0"$).

Set the SBI0CR1<ACK> to "1" (Acknowledge mode) and specify a slave address and a direction bit to be transmitted to the SBI0DBR.

When SBIOCR2<BB> = "0", the start condition are generated by writing "1" to SBIOCR2<MST, TRX, BB, PIN>. Subsequently to the start condition, nine clocks are output from the SCL pin. While eight clocks are output, the slave address and the direction bit which are set to the SBIODBR. At the 9th clock, the SDA line is released and the acknowledge signal is received from the slave device.

An INTSBI0 interrupt request occurs at the falling edge of the 9th clock. The PIN> is cleared to "0". In the master mode, the SCL pin is pulled down to the low level while PIN> is "0". When an interrupt request occurs, the <TRX> is changed according to the direction bit only when an acknowledge signal is returned from the slave device.

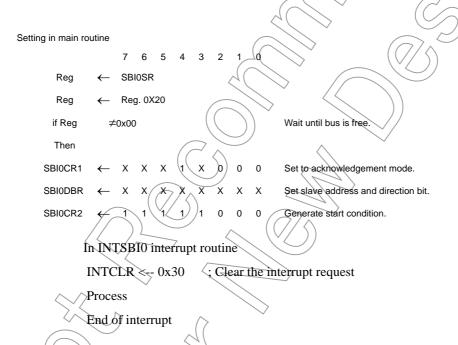

2) Slave mode

In the slave mode, the start condition and the slave address are received.

After the start condition is received from the master device, while eight clocks are output from the SCL pin, the slave address and the direction bit which are output from the master device are received.

When a GENERAL CALL or the same address as the slave address set in I2C0AR is received, the SDA line is pulled down to the low level at the 9th clock, and the acknowledge signal is output.

An INTSBI0 interrupt request occurs on the falling edge of the 9th clock. The $\langle PIN \rangle$ is cleared to "0". In slave mode the SCL line is pulled down to the low level while the $\langle PIN \rangle$ = "0".

Page 174 2007-10-15

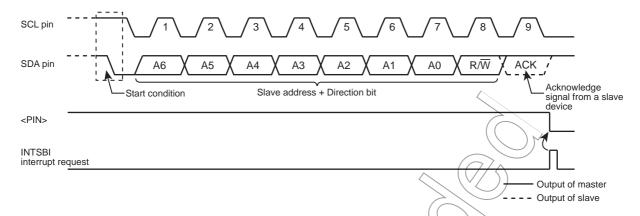


Figure 9-9 Start Condition Generation and Slave Address Transfer

9.3.4.3 1-word data transfer

Check the <MST> by the INTSBI0 interrupt process after the 1-word data transfer is completed, and determine whether the mode is a master or slave.

(1) If <MST> = "1" (Master mode)

Check the <TRX> and determine whether the mode is a transmitter or receiver.

(a) When the <TRX> (= "1") (Transmitter mode)

Check the <LRB> When <LRB> is "1", a receiver does not request data. Implement the process to generate a stop condition (Refer to below) and terminate data transfer.

When the LRB> is "0", the receiver requests new data. When the next transmitted data is 8 bits, write the transmitted data to SBI0DBR. When the next transmitted data is other than 8 bits, set the BC2:0> ACK> and write the transmitted data to SBI0DBR. After written the data, PIN> becomes "1", a serial clock pulse is generated for transferring a new 1 word of data from the SCL pin, and then the 1-word data is transmitted. After the data is transmitted, an INTSBI interrupt request occurs. The PIN> becomes "0" and the SCL line is pulled down to the low level. If the data to be transferred is more than one word in length, repeat the procedure from the <LRB> checking above.

f MST = 0
Then shift to the process when slave mode

it.TRX = 0
Then shift to the process when receiver mode.

if LRB = 0

Then shift to the process that generates stop condition.

SBI0CR1 ← 0 0 0 1 X X X X Set the bit number of transmit and ACK.

SBI0DBR \leftarrow X X X X X X X X Write the transmit data.

3

End of interrupt

Note: X: Don't care

Page 175 2007-10-15

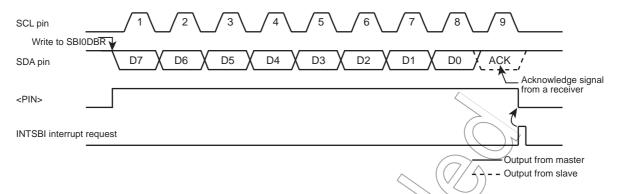


Figure 9-10 Example in which <BC2:0> = "000" and <ACK> = "1" in Transmitter Mode

(b) When the <TRX> is "0" (Receiver mode)

When the next transmitted data is other than 8 bits, set <BC2:0> <ACK> and read the received data from SBI0DBR to release the SCL line (Data which is read immediately after a slave address is sent is undefined). After the data is read, <PIN> becomes "1". Serial clock pulse for transferring new 1 word of data is defined SCL and outputs "L" level from SDA pin with acknowledge timing.

An INTSBIO interrupt request then occurs and the PIN> becomes "0", then the TMP91FW60 pulls down the SCL pin to the low level. The TMP91FW60 outputs a clock pulse for 1 word of data transfer and the acknowledge signal each time that received data is read from the SBIODBR.


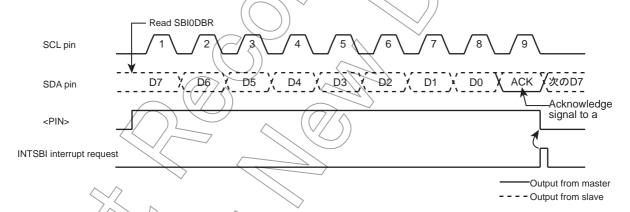


Figure 9-11 Example of when <BC2:0> = "000", <ACK> = "1" in Receiver Mode

In order to terminate the transmission of data to a transmitter, clear <ACK> to "0" before reading data which is 1 word before the last data to be received. The last data word does not generate a clock pulse as the acknowledge signal. After the data has been transmitted and an interrupt request has been generated, set <BC2:0> to "001" and read the data. The TMP91FW60 generates a clock pulse for an 1-bit data transfer. Since the master device is a receiver, the SDA line on the bus remains high. The transmitter interprets the high signal as an ACK signal. The receiver indicates to the transmitter that data transfer is complete.

After the one data bit has been received and an interrupt request been generated, the TMP91FW60 generates a stop condition and terminates data transfer.

Page 176 2007-10-15

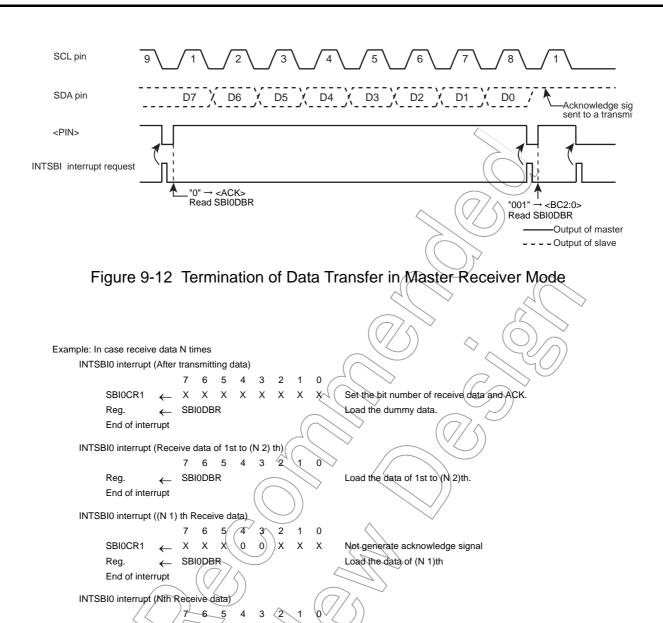

(2) If <MST> = 0 (Slave mode)

0

SBIODBR

The process of generating stop condition

0

SBI0CR

End of interrupt

End of interrupt Note: X:\Don't care

INTSBIQ interrupt (After receiving data)

Reg.

In the slave mode the TMP91FW60 operates either in normal slave mode or in slave mode after losing arbitration.

Generate the clock for 1bit transmit

Receive the data of Nth.

Finish the transmit of data

In the slave mode, an INTSBI0 interrupt request occurs when the TMP91FW60 receives a slave address or a GENERAL CALL from the master device, or when a GENERAL CALL is received and data transfer is complete, or after matching received address. In the master mode, the TMP91FW60 operates in a slave mode if it detects losing arbitration. An INTSBI0 interrupt request occurs when a word data transfer terminates after losing arbitration. When an INTSBI0 interrupt request occurs the <PIN> is cleared to "0" and the SCL pin is pulled down to the low level. Either reading/writing from/ to the SBI0DBR or setting the <PIN> to "1" will release the SCL pin after taking t_{LOW} time.

Check the SBI0SR<AL>, <TRX>, <AAS>, and <AD0> and implements processes according to conditions listed in the next table.

Page 177 2007-10-15

Example: In case matching slave address in slave receive mode, direction bit is "1".

INTSBI0 interrupt

if TRX = 0

Then shift to other process

if AL = 1

Then shift to other process

if AAS = 0

Then shift to other process

7 6 5 4 3 2 1 0

 $\texttt{SBI0CR1} \hspace{0.1in} \longleftarrow \hspace{0.1in} \hspace{0.1i$

Set the bit number of transmit. SBIODBR \leftarrow X X X X X X X X Set the data of transmit,

Note: X: Don't care

Table 9-1 Operation in the Slave Mode

Table 5 1					\(\(\) \(\) \(\)
<trx></trx>	<al></al>	<aas></aas>	<ad0></ad0>	Conditions	Process
	1	1	0	The TMP91FW60 loses arbitration when transmitting a slave address and receives a slave address for which the value of the direction bit sent from another master is "1".	Set the number of bits a word in <bc2:0> and write the transmitted data to</bc2:0>
1		1	0	In slave receiver mode, the TMP91FW60 receives a slave address for which the value of the direction bit sent from the master is "1".	\$BIODBR.
	0	0		In slave transmitter mode, a single word of data is transmitted.	Check the <lrb> setting. If <lrb> is set to "1", set <pin> to "1" since the receiver win no request the data which follows. Then, clear <trx> to "0" to release the bus. If <lrb> is cleared to "0", set <bc2:0> to the number of bits in a word and write the transmitted data to SBIODBR since the receiver requests next data.</bc2:0></lrb></trx></pin></lrb></lrb>
		1	1/0	The TMP91FW60 loses arbitration when transmitting a slave address and receives a slave address or GENERAL CALL for which the value of the direction bit sent from another master is "0".	
0		0		The TMP91FW60 loses arbitration when transmitting a slave address or data and terminates word data transfer.	Read the SBI0DBR for setting the <pin> to "1" (Reading dummy data) or set the <pin> to "1".</pin></pin>
		12/	1/0	In slave receiver mode, the TMP91FW60 receives a slave address or GENERAL CALL for which the value of the direction bit sent from the master is "0".	
		0	1/0	In slave receiver mode, the TMP91FW60 terminates receiving word data.	Set <bc2:0> to the number of bits in a word and read the received data from SBI0DBR.</bc2:0>

2007-10-15 Page 178

9.3.4.4 Stop condition generation

When SBIOSR<BB> = "1", the sequence for generating a stop condition is started by writing "1" to SBIOCR2<MST, TRX, PIN> and "0" to SBIOCR2<BB>. Do not modify the contents of SBIOCR2<MST, TRX, PIN, BB> until a stop condition has been generated on the bus. When the bus's SCL line has been pulled low by another device, the TMP91FW60 generates a stop condition when the other device has released the SCL line and SDA pin rising.

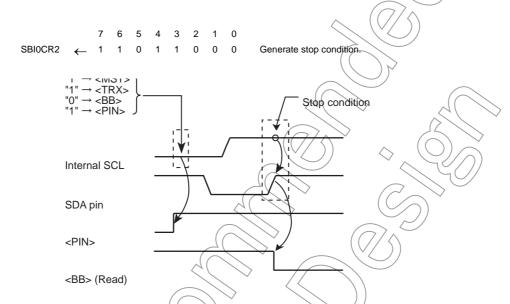


Figure 9-13 Stop Condition Generation (Single master)

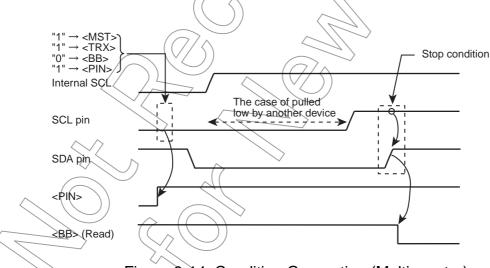


Figure 9-14 Condition Generation (Multi master)

Page 179 2007-10-15

TOSHIBA TMP91FW60

9.3.4.5 Restart

Restart is used during data transfer between a master device and a slave to change the data transfer direction.

The following description explains how to restart when the TMP91FW60 is in Master mode.

Clear SBI0CR2<MST, TRX, BB> to "0" and set SBI0CR2<PIN> to "1" to release the bus. The SDA line remains High and the SCL pin is released. Since a stop condition has not been generated on the bus, other devices assume the bus to be in busy state.

And confirm SCL pin, that SCL pin is released and become bus-free-state by SBIOSR<BB> = "0" or signal level "1" of SCL pin by sensing its port (change to input mode). Check the <LRB> until it becomes "1" to check that the SCL line on a bus is not pulled down to the low level by other devices. After confirming that the bus remains in a free state, generate a start condition using the procedure described in 9.3.4.2.

In order to satisfy the setup time requirements when restarting, take at least 4.7 µs of waiting time by software from the time of restarting to confirm that the bus is free until the time to generate the start condition.

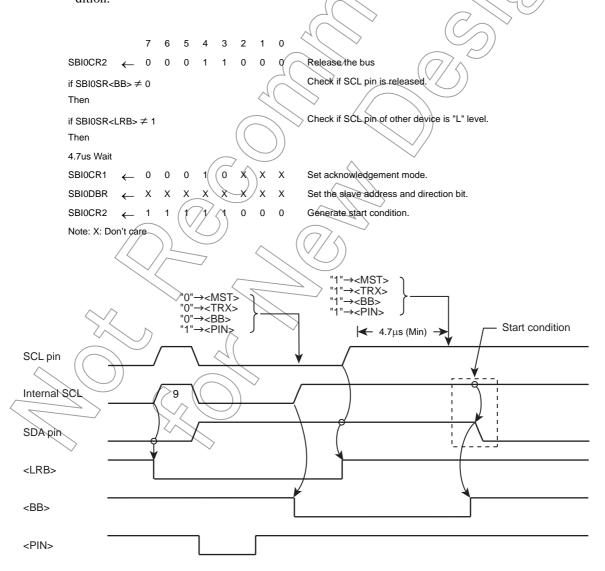


Figure 9-15 Timing Diagram for TMP91FW60 Restart

Note: Don't write <MST> "0", when <MST> "0" condition. (Cannot be restarted)

Page 180 2007-10-15

TOSHIBA TMP91FW60


10. 10-bit AD Converter (ADC)

The TMP91FW60 have a 10-bit successive approximation type AD converter.

10.1 Configuration

The circuit configuration of the 10-bit AD converter is shown in Figure 10-1.

It consists of control register ADCCR1 and ADCCR2, converted value register ADCDRH and ADCDRL, a DA converter, a sample-hold circuit, a comparator, and a successive comparison circuit.

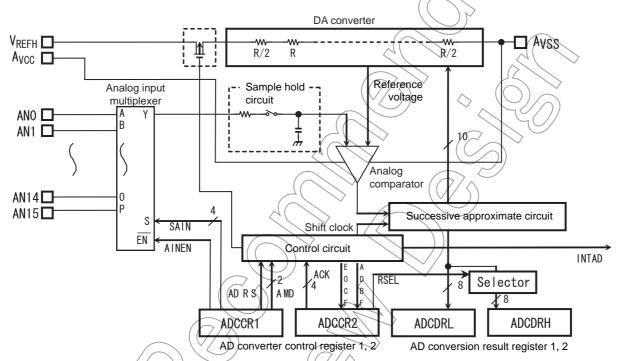

Note: Before using AD converter, set appropriate value to WO port register combining a analog input port. For details, see the section on "I/O ports".

Figure 10-1 10-bit AD Converter

10.2 Register configuration

The AD converter consists of the following four registers:

1. AD converter control register 1 (ADCCR1)

This register selects the analog channels and operation mode (single or repeat) in which to perform AD conversion and controls the AD converter as it starts operating.

2. AD converter control register 2 (ADCCR2)

This register selects the AD conversion time and controls the connection of the DA converter (Ladder resistor network) and monitors the operating status of the AD converter.

3. AD converted value register (ADCDRH, ADCDRL)

This register used to store the digital value after being converted by the AD converter.

Page 181 2007-10-15

AD Converter Control Register 1

ADCCR1 (02B0H)

	7	6	5	4	3	2	1	0		
Bit symbol	ADRS	AM	MD	AINEN	SAIN					
Read/Write	RW									
After reset	0	0	0	0	0		0	0		
	AD conver-	AD operating	mode	Analaa innut	Analog input channel select					
Function	sion start 0: - 1: AD con- version start	00: AD operation disable 01: single mode 10: Reserved 11: Repeat mode		Analog input control 0:disable 1:enable	0000: AN0 0001: AN1 0010: AN2 0011: AN3	0100: AN4 0101: AN5 0110: AN6 0111: AN7	1000: AN8 1001: AN9 1010: AN10 1011: AN11	1100: AN12 1101: AN13 1110: AN14 1111: AN15		

- Note 1: Select analog input channel during AD converter stops (ADCCR2<ADBF>="0")
- Note 2: When the analog input channel is all use disabling, the ADCCR1<AINEN> should be set to "0".
- Note 3: During conversion, Do not perform port output instruction to maintain a precision for all of the pins because analog input port use as general input port. And for port near to analog input, Do not input intense signaling of change.
- Note 4: The ADCCR1<ADRS> is automatically cleared to "0" after starting conversion.
- Note 5: Do not set ADCCR1<ADRS> newly again during AD conversion. Before setting ADCCR1<ADRS> newly again, check ADCDR2<EOCF> to see that the conversion is completed or wait until the interrupt signal (INTADC) is generated (e.g., interrupt handling routine).
- Note 6: Starting of STOP mode, SLOW mode, and the IDLE1 mode initializes the AD control register (ADCCR1) except for SAIN. Moreover, in the case of the IDLE2 mode, it controls by the <I2AD> bit of ADCCR2 Therefore, to use AD converter again, set the ADCCR1 newly after returning to NORMAL mode.

AD Converter Control Register 2 (Read-modify-write instructions are prohibited.)

ADCCR2 (02B1H)

	7	6	5	4 <<	3	2	1	0
Bit symbol	EOCF	ADBF (RSEL	I2AD	ACK			
Read/Write	R			R/W				
After reset	0	(0	0	0	1	1	0	0
Function	AD conversion end flag 0:Before or during conversion 1: Conversion completed	AD conver- sion BUSY flag 0: During stop of AD conversion 1: During AD conversion	Storing of an AD conversion result 0: 10bit mode 1: 8bit mode	HDLE2 con- trol 0:Stop 1:Operation	See" Tabl		on time select	sion time "

Note 1: Starting of STOP mode, SLOW mode, and the IDLE1 mode initializes the AD control register 2 (ADCCR2) except for ACK and I2AD Moreover, in the case of the IDLE2 mode, it controls by the <I2AD> bit of ADCCR2. Therefore, to use AD converter again, set the ADCCR2 newly after returning to NORMAL mode. Therefore, the AD conversion result should be read to ADCDRL more first than ADCDRH.

Note 2: The ADCCR2<EOCF is cleared to "0" when reading the ADCDRH.

Note 3: The ADCCR2<ADBF > is set to "1" when AD conversion starts, and cleared to "0" when AD conversion finished.

Page 182 2007-10-15

Table 10-1 ACK setting and Conversion time

Condition	Conversion	20MHz	16MHz	10 MHz	8MHz	4 MHz	2 MHz			
ACK	time	ZUIVITZ	TOWINZ	TO IVIEZ	OIVITZ	4 IVITZ	Z IVITIZ			
0xxx				Reserved						
1000	Reserved									
1001	Reserved									
1010	78/fc	=	-	-	-	19.5 μs	39.0 μs			
1011	156/fc	-	-	15.6 μs	19.5 μs	39.0 µs	78.0 μs			
1100	312/fc	15.6 μs	19.5 μs	31.2 μs	31.2 μs 39.0 μs		156.0 μs			
1101	624/fc	31.2 μs	39.0 μs	62.4 μs	78.0 μs) 156.0 μs	-			
1110	1248/fc	62.4 μs	78.0 μs	124.8 μs	156.0 µs	-				
1111	Reserved									

Note 1: Setting for "-" in the above table are inhibited. fc: High Frequency oscillation clock [Hz]

Note 2: Set conversion time setting should be kept more than the following time by Analog reference voltage.

- V_{REFH} = 4.5 to 5.5 V

15.6 us and more

AD Converted value Register H (8-bit storing mode)

ADCDRH (02B3H)

	7	6	(5)	4 //	3		1	0	
Bit symbol	AD09	AD08	AD07	AD06	AD05	AD04	AD03	AD02	
Read/Write		R							
After reset	0	0	0	0 <	0	0	0	0	

AD Converted value Register H (10-bit storing mode)

ADCDRH (02B3H)

	7 ((// 6))	5	3	2	1	0
Bit symbol		~ - (V/\f)	=	-	AD09	AD08
Read/Write			₹			
After reset	0 0	0	0	0	0	0

AD Converted value Register L

ADCDRL (02B2H)

	<u></u>	6 ()	5	4	3	2	1	0
Bit symbol	AD07	AD06	AD05	AD04	AD03	AD02	AD01	AD00
Read/Write			\Rightarrow	F	₹			
After reset	0(0	0	0	0	0	0

Note: At the time of 10-bit storing mode, if the bit 7 to 2 of ADCDRH is read, "0" will be read.

Page 183 2007-10-15

TOSHIBA TMP91FW60


10.3 Function

10.3.1 Single mode

After setting ADCCR1<AMD> to "01" (single mode), set ADCCR1<ADRS> to "1". AD conversion of the voltage at the analog input pin specified by ADCCR1<SAIN> is thereby started.

After completion of the AD conversion, the conversion result is stored in AD converted value registers (ADCDRH, ADCDRL) and at the same time ADCCR2<EOCF> is set to 1, the AD conversion finished interrupt (INTADC) is generated.

ADCCR1<ADRS> is automatically cleared after AD conversion has started. Do not set ADCCR1<ADRS> newly again (Restart) during AD conversion. Before setting ADCCR1<ADRS> newly again, check ADCCR2<EOCF> to see that the conversion is completed or wait until the interrupt signal (INTADC) is generated (e.g., interrupt handling routine).

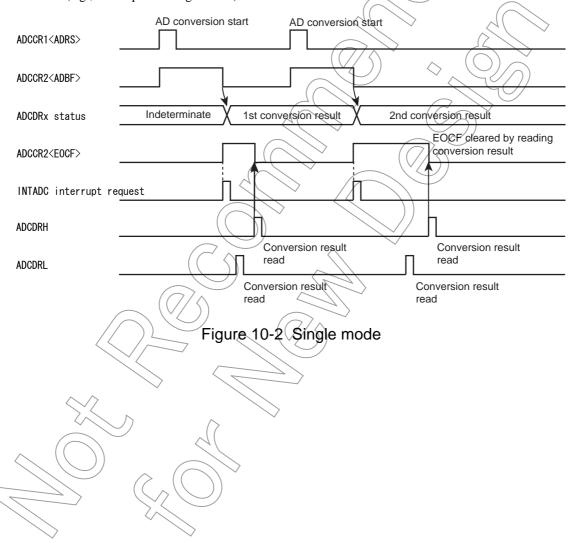

Page 184 2007-10-15

10.3.2 Repeat Mode

AD conversion of the voltage at the analog input pin specified by ADCCR1<SAIN> is performed repeatedly. In this mode, AD conversion is started by setting ADCCR1<ADRS> to "1" after setting ADCCR1<AMD> to "11" (Repeat mode).

After completion of the AD conversion, the conversion result is stored in AD converted value registers (ADCDRL, ADCDRH) and at the same time ADCCR2<EOCF> is set to 1, the AD conversion finished interrupt (INTADC) is generated.

In repeat mode, each time one AD conversion is completed, the next AD conversion is started. To stop AD conversion, set ADCCR1<AMD> to "00" (Disable mode) by writing 0s. The AD convert operation is stopped immediately. The converted value at this time is not stored in the AD converted value register.

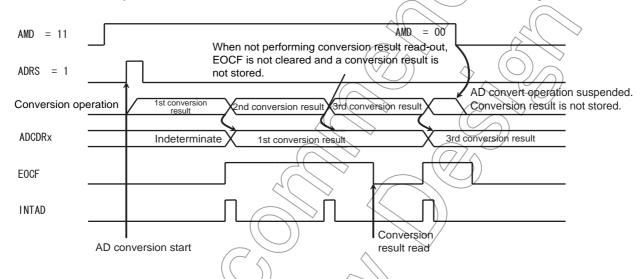


Figure 10-3 Repeat Mode

10.3.3 Register Setting

- 1. Set up the AD converter control register 1 (ADCCR1) as follows:
 - Choose the channel to AD convert using AD input channel select (SAIN).
 - Specify analog input enable for analog input control (AINDS).
 - Specify AMD for the AD converter control operation mode (ssingle or repeat mode).
- 2. Set up the AD converter control register 2 (ADCCR2) as follows:

Set the AD conversion time using AD conversion time (ACK). For details on how to set the conversion time, refer to Table 10-1 and AD converter control register 2.

- 3. After setting up (1) and (2) above, set AD conversion start (ADRS) of AD converter control register 1 (ADCCR1) to "1". If software start mode has been selected, AD conversion starts immediately.
- 4. After an elapse of the specified AD conversion time, the AD converted value is stored in AD converted value register (ADCDRH and ADCDRL) and the AD conversion finished flag (EOCF) of AD converter control register 2 (ADCCR2) is set to "1", upon which time AD conversion interrupt INTADC is generated.
- 5. EOCF is cleared to "0" by a read of the conversion result. However, if reconverted before a register read, although EOCF is cleared the previous conversion result is retained until the next conversion is completed.

Page 185 2007-10-15

Example :After selecting the conversion time 19.5 µs at 16 MHz and the analog input channel AIN3 pin, perform AD conversion once. After checking EOCF, read the converted value, store the lower 2 bits in address 0009EH nd store the upper 8 bits in address 0009FH in RAM. The operation mode is single mode.

	LD	(ADCCR1), 00110011B	; Select AJN3
	LD	(ADCCR2), 00001100B	;Select conversion time(312/fc) and operation mode
	SET	(ADCCR1).7	; ADRS = 1 (AD conversion start)
SLOOP:	TEST	(ADCCR2).7	;EOCF=1?
	JRS	T, SLOOP	
	LD	A , (ADCDRL)	Read result data
	LD	(9EH) , A	4(> 4(>
	LD	A , (ADCDRH)	; Read result data
	LD	(9FH), A	(J) \$. (Q) \(\tilde{\

10.4 IDLE1/STOP/SLOW Modes during (AD Conversion

When standby mode (IDLE1,STOP or SLOW mode) is entered forcibly during AD conversion, the AD convert operation is suspended and the AD converter is initialized (ADCCR1 and ADCCR2 are initialized to initial value). Also, the conversion result is indeterminate. (Conversion results up to the previous operation are cleared, so be sure to read the conversion results before entering standby mode (IDLE1,STOP or SLOW mode).) When restored from standby mode (IDLE1,STOP or SLOW mode), AD conversion is not automatically restarted, so it is necessary to restart AD conversion. Note that since the analog reference voltage is automatically disconnected, there is no possibility of current flowing into the analog reference voltage.

Moreover, in the case of the IDLE2 mode, it controls by the <12AD> bit of ADCCR2.



Page 186 2007-10-15

10.5 Analog Input Voltage and AD Conversion Result

The analog input voltage is corresponded to the 10-bit digital value converted by the AD as shown in Figure 10-4.


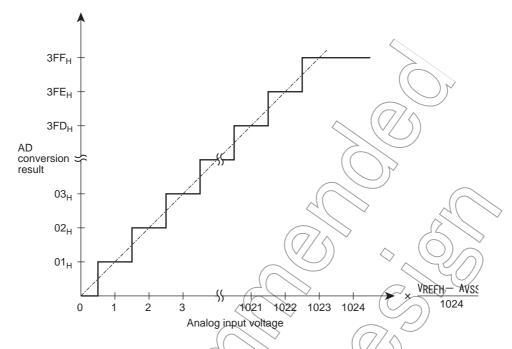


Figure 10-4 Analog Input Voltage and AD Conversion Result (Typ.)

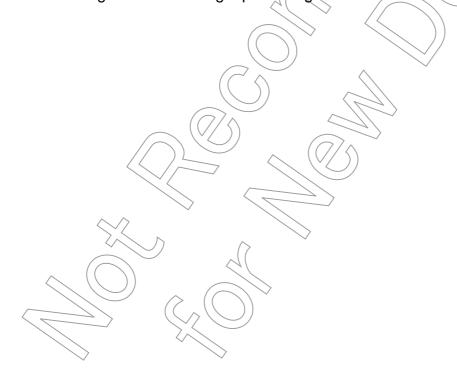

Page 187 2007-10-15

TMP91FW60

10.6 Precautions about AD Converter

10.6.1 Analog input pin voltage range

Make sure the analog input pins (AN0 to AN15) are used at voltages within V_{REFH} to A_{VSS} . If any voltage outside this range is applied to one of the analog input pins, the converted value on that pin becomes uncertain. The other analog input pins also are affected by that.

10.6.2 Analog input shared pins

The analog input pins (AN0 to AN15) are shared with input/output ports. When using any of the analog inputs to execute AD conversion, do not execute input/output instructions for all other ports. This is necessary to prevent the accuracy of AD conversion from degrading. Not only these analog input shared pins, some other pins may also be affected by noise arising from input/output to and from adjacent pins.

10.6.3 Noise Countermeasure

The internal equivalent circuit of the analog input pins is shown in Figure 10-5. The higher the output impedance of the analog input source, more easily they are susceptible to noise. Therefore, make sure the output impedance of the signal source in your design is $5k\Omega$ or less. Toshiba also recommends attaching a capacitor external to the chip.


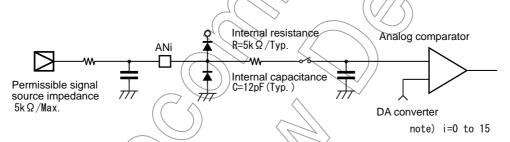


Figure 10-5 Analog Input Equivalent Circuit and Example of Input Pin Processing

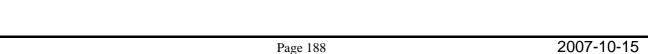

TOSHIBA TMP91FW60

11. Program Patch Logic

The TMP91FW60 has a program patch logic, which enables the user to fix the program code in the on-chip ROM without generating a new mask. Patch program must be read into on-chip RAM from external memory during the startup routine.

Up to six two-byte sequences, or banks (Twelve bytes in total) can be replaced with patch code. More significant code correction can be performed by replacing program code with single-byte instruction code which generates a software interrupt (SWI) to make a branch to a specified location in the on-chip RAM area.

The program patch logic only compares addresses in the on-chip ROM area; it cannot fix the program code in the on-chip peripheral, on-chip RAM and external ROM areas.

Each of six banks is independently programmable, and functionally equivalent. In the following sections, any references to bank0 also apply to other banks.

11.1 Block Diagram **CPU** ROM ROMRD **ROMRD** Address bus Data bus Match **Output** (Bank0) (Bank0) enable signal Address substitution Address compare registers registers (ROMSUBOL/H) (ROMCMP00 to ROMCMP02) (Bank1) (Bank 1) Address substitution Address compare registers \ddr/es/s (ROMCMP10 to ROMCMP12) registers (ROMSUB1L/H) 0utput (Bank2) Address compare registers Address substitution (ROMCMP20 to ROMCMP22) control registers(ROMSUB2L/H) compar e (Bank3) (Bank3) Address compare registers Address substitution (ROMCMP30 to ROMCMP32) registers (ROMSUB3L/H) Б (Bank4) (Bank4) 00 Address substitution Address compare registers (ROMCMP40\to ROMCMP42) registers(ROMSUB4L/H) (Bank5) Address compare registers Address substitution registers(ROMSUB5L/H) (ROMCMP50 to ROMCMP52)

Figure 11-1 Program Patch Logic Diagram

Page 189 2007-10-15

11.2 SFR Descriptions

The program patch logic consists of six banks (0 to 5). Each bank is provided with three bytes of address compare registers (ROMCMPx0 to ROMCMPx2) and two bytes of address substitution registers (ROMSUBxL and ROMSUBxH).

Bank0 Address Compare Register 0

ROMCMP00
(0400H)
RMW
instructions
are prohib-
ited.

	7	6	5	4	⟨3、	(//2)	1	0		
Bit symbol	ROMC07	ROMC06	ROMC05	ROMC04	ROMC03	ROMC02	ROMC01	=		
Read/Write				W) >		=		
After reset	0	0	0	0	0	0	0	=		
Function	Target ROM address (Lower ₹ bits)									

Bank0 Address Compare Register 1

ROMCMP01
(0401H)
RMW
instructions
are prohib-
ited.

		7	6	5	4	3	2	<u>\</u>	0		
1	Bit symbol	ROMC15	ROMC14	ROMC13 <	ROMC12	ROMC11	ROMC10	ROMC09	ROMC08		
	Read/Write				1	N (77/				
3	After reset	0	0	0	>> 0	0 \	<u></u>	0	0		
	Function			Target ROM address (Middle 8 bits)							

Bank0 Address Compare Register 2

ROMCMP02 (0402H) RMW instructions are prohibited.

	7	(6))) 5	4	3	2	1	0
Bit symbol	ROMC23	ROMC22	ROMC21	ROMC20	ROMC19	ROMC18	ROMC17	ROMC16
Read/Write		(// 5)	W					
After reset	0		~ o ((7/<9	0	0	0	0
Function			II /	arget ROM addr	ess (Upper 8 bi	ts)		

Bank0 Data Substitution Register L

		$\sqrt{1}$	6	5	4	3	2	1	0
ROMSUBOL	Bit symbol	ROMS07	ROMS06	ROMS05	ROMS04	ROMS03	ROMS02	ROMS01	ROMS00
(0404H) RMW	Read/Write			\rightarrow	1	N			
instructions are prohib-	After reset	0(0	0	0	0	0	0
ited.	Function	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\			Patch code ((Lower 8 bits)			

Bank0 Data Substitution Register H

ROMSUB0H (0405H) RMW instructions are prohibited.

	7	6	5	4	3	2	1	0		
Bit symbol	ROMS15	ROMS14	ROMS13	ROMS12	ROMS11	ROMS10	ROMS09	ROMS08		
Read/Write	ite W									
After reset	0	0	0	0	0	0	0	0		
Function		Patch code (Upper 8 bits)								

Note 1: The ROMCMP00/01/02, and ROMSUB0L/0H registers do not support read-modify-write operation.

Note 2: Bit0 of the Address Compare Register 0 is read as undefined.

Page 190 2007-10-15

Bank1 Address Compare Register 0

ROMCMP10 (0408H) RMW instructions are prohibited.

	7	6	5	4	3	2	1	0
Bit symbol	ROMC07	ROMC06	ROMC05	ROMC04	ROMC03	ROMC02	ROMC01	-
Read/Write				W				-
After reset	0	0	0	0	0	0	0	-
Function	Target ROM address (Lower 7 bits)							

Bank1 Address Compare Register 1

ROMCMP11
(0409H)
RMW
instructions
are prohib-
ited.

		7	6	5	4	3)) 2	1	0
1	Bit symbol	ROMC15	ROMC14	ROMC13	ROMC12	ROMC11	ROMC10	ROMC09	ROMC08
	Read/Write					W	(
	After reset	0	0	0	0 (/\\ 0	0	0	0
	Function			Ta	arget ROM addr	ess (Middle 8 b	ts)	(//)	

Bank1 Address Compare Register 2

ROMCMP12 (040AH) RMW instructions are prohibited.

		7	6	5	4	3 ((/	/ _2	1	0
2	Bit symbol	ROMC23	ROMC22	ROMC21	ROMC20	ROMC19	ROMC18	ROMC17	ROMC16
	Read/Write				$\langle \langle \rangle \rangle$	N)			
6	After reset	0	0 ((0	0	0	0	0	0
•	Function			Та	arget ROM addr	ess (Upper 8 bi	ts)		·

Bank1 Data Substitution Register (C)

ROMSUB1L (040CH) RMW instructions are prohibited.

	7	6	5 ((7/4	3	2	1	0
Bit symbol	ROMS07	RØMS06	ROMS05	ROMS04	ROMS03	ROMS02	ROMS01	ROMS00
Read/Write	W							
After reset	0	0	0	0	0	0	0	0
Function	Patch code (Lower 8 bits)							

Bank1 Data Substitution Register H

	$\overline{}$	/ >							
		7(6	5	4	3	2	1	0
ROMSUB1H	Bit symbol	ROMS15	ROMS14	ROMS13	ROMS12	ROMS11	ROMS10	ROMS09	ROMS08
(040DH) RMW	Read/Write		\searrow		1	N			
instructions are prohib-	After reset	0	0	0	0	0	0	0	0
ited.	Function				Patch code ((Upper 8 bits)			

Note 1: The ROMCMP10/11/12, and ROMSUB1L/1H registers do not support read-modify-write operation.

Note 2: Bit0 of the Address Compare Register 0 is read as undefined.

Page 191 2007-10-15

Bank2 Address Compare Register 0

ROMCMP20 (0410H) RMW instructions are prohibited.

	7	6	5	4	3	2	1	0
Bit symbol	ROMC07	ROMC06	ROMC05	ROMC04	ROMC03	ROMC02	ROMC01	=
Read/Write				W				-
After reset	0	0	0	0	0	0	0	-
Function	Target ROM address (Lower 7 bits)							

Bank2 Address Compare Register 1

ROMCMP21 (0411H) RMW instructions are prohibited.

	7	6	5	4	3)) 2	1	0		
Bit symbol	ROMC15	ROMC14	ROMC13	ROMC12	ROMC11	ROMC10	ROMC09	ROMC08		
Read/Write					W \	(
After reset	0	0	0	0 ($\sqrt{\bigcirc}$	0	0	0		
Function		Target ROM address (Middle 8 bits)								

Bank2 Address Compare Register 2

ROMCMP22 (0412H) RMW instructions are prohibited.

							\sim		
		7	6	5	4	3 ((/	/ _2	1	0
2	Bit symbol	ROMC23	ROMC22	ROMC21	ROMC20/	ROMC19	ROMC18	ROMC17	ROMC16
	Read/Write		/		. <<	w))			
;	After reset	0	0 (0	0	0	0	0	0
	Function			Ta	arget ROM add	ress (Upper 8 bi	ts)		

Bank2 Data Substitution Register L

ROMSUB2L (0414H) RMW instructions are prohibited.

	7	6	5 ((7/4	3	2	1	0	
Bit symbol	ROMS07	ROMS06	ROMS05	RØMS04	ROMS03	ROMS02	ROMS01	ROMS00	
Read/Write		w							
After reset	0	0		0	0	0	0	0	
Function	\ \ \	^		Patch code (Lower 8 bits)				

Bank2 Data Substitution Register H

		7(6	5	4	3	2	1	0			
H	Bit symbol	ROMS15	ROMS14	ROMS13	ROMS12	ROMS11	ROMS10	ROMS09	ROMS08			
	Read/Write		w									
s	After reset	0	0	0	0	0	0	0	0			
-	Function		Patch code (Upper 8 bits)									

Note 1: The ROMCMP20/21/22, and ROMSUB2L/2H registers do not support read-modify-write operation.

Note 2: Bit0 of the Address Compare Register 0 is read as undefined.

Page 192 2007-10-15

Bank3 Address Compare Register 0

ROMCMP30 (0418H) RMW instructions are prohibited.

	7	6	5	4	3	2	1	0
Bit symbol	ROMC07	ROMC06	ROMC05	ROMC04	ROMC03	ROMC02	ROMC01	-
Read/Write				W				-
After reset	0	0	0	0	0	0	0	-
Function			Target RC	OM address (Lo	wer 7 bits))	-

Bank3 Address Compare Register 1

ROMCMP31 (0419H) RMW instructions are prohibited.

		7	6	5	4	3)) 2	1	0
1	Bit symbol	ROMC15	ROMC14	ROMC13	ROMC12	ROMC11	ROMC10	ROMC09	ROMC08
	Read/Write				V	W	(
	After reset	0	0	0	0 ($\sqrt{\bigcirc}$	0 (0	0
	Function			Ta	rget ROM addr	ess (Middle 8 bi	ts)	(//)	

Bank3 Address Compare Register 2

ROMCMP32 (041AH) RMW instructions are prohibited.

		7	6	5	4	3 ((/	/ _2	1	0
2	Bit symbol	ROMC23	ROMC22	ROMC21	ROMC20	ROMC19	ROMC18	ROMC17	ROMC16
	Read/Write		/		\\ \{\lambda	N)			
6	After reset	0	0 ((0	0	0	0	0	0
•	Function			Та	arget ROM addr	ess (Upper 8 bi	ts)		

Bank3 Data Substitution Register L

ROMSUB3L (041CH) RMW instructions are prohibited.

	7	6	5 ((7/4	3	2	1	0		
Bit symbol	ROMS07	RØMS06	ROMS05	ROMS04	ROMS03	ROMS02	ROMS01	ROMS00		
Read/Write		W								
After reset	0	0	0	0	0	0	0	0		
Function		Patch code (Lower 8 bits)								

Bank3 Data Substitution Register H

<
ROMSUB3H
(041DH)
RMW
instructions
are prohib-
ited.

	\sim	/ 3									
		7(6	5	4	3	2	1	0		
H	Bit symbol	ROMS15	ROMS14	ROMS13	ROMS12	ROMS11	ROMS10	ROMS09	ROMS08		
	Read/Write										
s	After reset	0	0	0	0	0	0	0	0		
•	Function		Patch code (Upper 8 bits)								

Note 1: The ROMCMP30/31/32, and ROMSUB3L/3H registers do not support read-modify-write operation.

Note 2: Bit0 of the Address Compare Register 0 is read as undefined.

Page 193 2007-10-15

Bank4 Address Compare Register 0

ROMCMP40 (0420H) RMW instructions are prohibited.

	7	6	5	4	3	2	1	0	
Bit symbol	ROMC07	ROMC06	ROMC05	ROMC04	ROMC03	ROMC02	ROMC01	=	
Read/Write		w							
After reset	0	0	0	0	0	0	0	-	
Function		Target ROM address (Lower 7 bits)							

Bank4 Address Compare Register 1

ROMCMP41 (0421H) RMW instructions are prohibited.

		7	6	5	4	3)) 2	1	0
1	Bit symbol	ROMC15	ROMC14	ROMC13	ROMC12	ROMC11	ROMC10	ROMC09	ROMC08
	Read/Write					W	(
6	After reset	0	0	0	0 (/\\ 0	0		0
	Function			Ta	arget ROM addr	ess (Middle 8 bi	ts)	(//)	

Bank4 Address Compare Register 2

ROMCMP42 (0422H) RMW instructions are prohibited.

	7	6	5	4	3 ((/	/ _2	1	0		
Bit symbol	ROMC23	ROMC22	ROMC21	ROMC20	ROMC19	ROMC18	ROMC17	ROMC16		
Read/Write		w \								
After reset	0	0 ((0	0	0	0	0	0		
Function		Target ROM address (Upper 8 bits)								

Bank4 Data Substitution Register L

ROMSUB4L (0424H) RMW instructions are prohibited.

	7	6	5 ((7/4	3	2	1	0
Bit symbol	ROMS07	RØMS06	ROMS05	RØMS04	ROMS03	ROMS02	ROMS01	ROMS00
Read/Write				\ \	V			
After reset	0	0	0	0	0	0	0	0
Function		^		Patch code (Lower 8 bits)			·

Bank4 Data Substitution Register H

ROMSUB4H
(0425H)
RMW
instructions
are prohib-
ited.

		7(6	5	4	3	2	1	0
H	Bit symbol	ROMS15	ROMS14	ROMS13	ROMS12	ROMS11	ROMS10	ROMS09	ROMS08
	Read/Write				\	V			
s	After reset	0	0	0	0	0	0	0	0
-	Function				Patch code (Upper 8 bits)			

Note 1: The ROMCMP40/41/42, and ROMSUB4L/4H registers do not support read-modify-write operation.

Note 2: Bit0 of the Address Compare Register 0 is read as undefined.

Page 194 2007-10-15

Bank5 Address Compare Register 0

ROMCMP50 (0428H) RMW instructions are prohibited.

	7	6	5	4	3	2	1	0
Bit symbol	ROMC07	ROMC06	ROMC05	ROMC04	ROMC03	ROMC02	ROMC01	=
Read/Write				W				-
After reset	0	0	0	0	0	0	0	-
Function			Target RO	OM address (Lo	wer 7 bits)			-

Bank5 Address Compare Register 1

ROMCMP51 (0429H) RMW instructions are prohibited.

	7	6	5	4	3	<i>)</i> 2	1	0			
Bit symbol	ROMC15	ROMC14	ROMC13	ROMC12	ROMC11	ROMC10	ROMC09	ROMC08			
Read/Write					N	(
After reset	0	0	0	0 ($\sqrt{\bigcirc}$	0 (0(0			
Function		Target ROM address (Middle 8 bits)									

Bank5 Address Compare Register 2

ROMCMP52 (042AH) RMW instructions are prohibited.

		7	6	5	4	3 ((/	/ _2	1	0
2	Bit symbol	ROMC23	ROMC22	ROMC21	ROMC20	ROMC19	ROMC18	ROMC17	ROMC16
	Read/Write				\\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\	N)			
6	After reset	0	0 ((0	0	0	0	0	0
•	Function			Та	arget ROM addr	ess (Upper 8 bi	ts)		

Bank5 Data Substitution Register L

ROMSUB5L (042CH) RMW instructions are prohibited.

	7	6	5 ((7/4	3	2	1	0
Bit symbol	ROMS07	RØMS06	ROMS05	ROMS04	ROMS03	ROMS02	ROMS01	ROMS00
Read/Write				\	V			
After reset	0	0	0	0	0	0	0	0
Function		_		Patch code (Lower 8 bits)			

Bank5 Data Substitution Register H

		7(6	5	4	3	2	1	0				
ROMSUB5H	Bit symbol	ROMS15	ROMS14	ROMS13	ROMS12	ROMS11	ROMS10	ROMS09	ROMS08				
(042DH) RMW	Read/Write	W											
instructions are prohib-	After reset	0	0	0	0	0	0	0	0				
ited.	Function				Patch code (Upper 8 bits)							

Note 1: The ROMCMP50/51/52, and ROMSUB5L/5H registers do not support read-modify-write operation.

Note 2: Bit0 of the Address Compare Register 0 is read as undefined.

Page 195 2007-10-15

TMP91FW60

11.3 Operation

11.3.1 Replacing data

Two consecutive bytes of data can be replaced for each bank. A two-byte sequence to be replaced must start at an even address. If only a single byte at an even or odd address need be replaced, set the current masked ROM data in the other byte.

Correction procedure:

Load the address compare registers (ROMCMP00 to ROMCMP02) with the target address where ROM data need be replaced. Store 2-byte patch code in the ROMSUB0L and ROMSUB0H registers.

When the CPU address matches the value stored in the ROMCMP00 to ROMCMP02 registers, the program patch logic disables RD output to the masked ROM and drives out the code stored in the ROMSUB0L and ROMSUB0H to the internal bus. The CPU thus fetches the patch code.

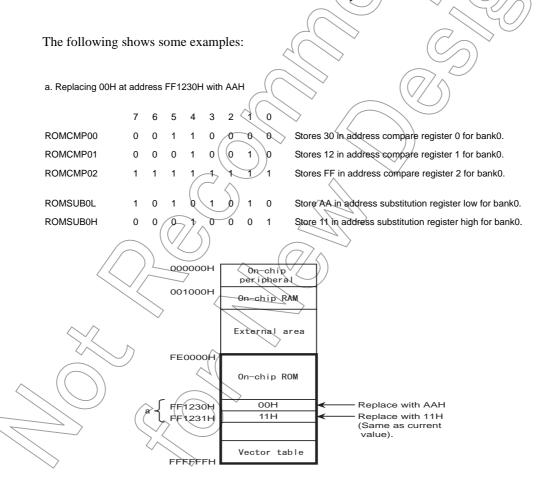


Figure 11-2 Example Patch Code Implementation

Page 196 2007-10-15

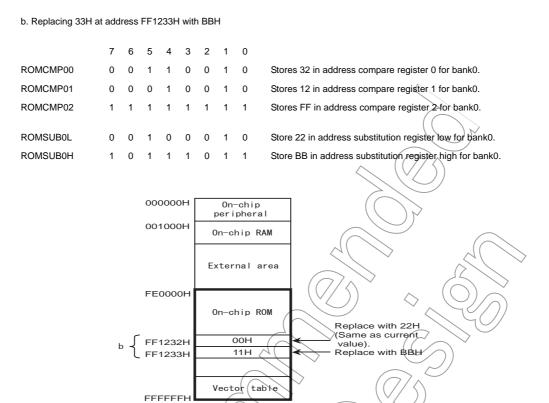


Figure 11-3 Example Patch Code Implementation

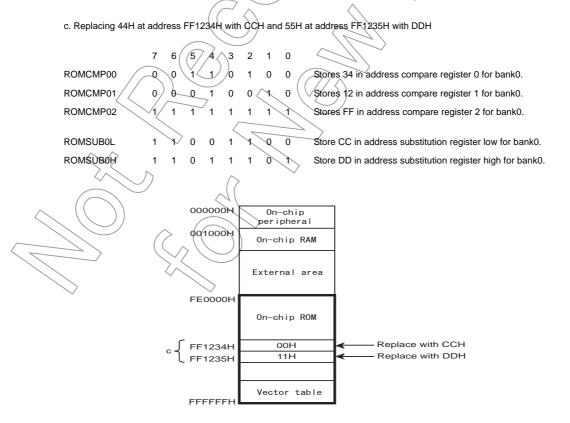


Figure 11-4 Example Patch Code Implementation

Page 197 2007-10-15

d. Replacing 77H a	t add	lress	FF1:	237F	l witl	n EE	H an	d 88H	at address FF1238H with FFH (Requiring two banks)
	_	•	_		•	•		•	, , ,
DOMONDOO	7	6	5	4	3	2	1	0	Otana 20 in address assesses assistant of tack and o
ROMCMP00	0	0	1	1	0	1	1	0	Stores 36 in address compare register 0 for bank0.
ROMCMP01	0	0	0	1	0	0	1	0	Stores 12 in address compare register 1 for bank0.
ROMCMP02	1	1	1	1	1	1	1	1	Stores FF in address compare register 2-for bank0.
ROMSUB0L	0	1	1	0	0	1	1	0	Store 66 in address substitution register low for bank0.
ROMSUB0H	1	1	1	0	1	1	1	0	Store EE in address substitution register high for bank0.
ROMCMP10	0	0	1	1	1	0	0	0	Stores 38 in address compare register 0 for bank1.
ROMCMP11	0	0	0	1	0	0	1	0	Stores 12 in address compare register 1 for bank1.
ROMCMP12	1	1	1	1	1	1	1	1	Stores FF in address compare register 2 for bank1.
ROMSUB1L	1	1	1	1	1	1	1	1	Store FF in address substitution register low for bank1.
ROMSUB1H	1	0	0	1	1	0	0	1	Store 99 in address substitution register high for bank1.
				000				-chi ipher	
			00	100	он			hip	
			FE	000	οн		0n-c	ship.	ROM Replace with 66H (Same as current
	d	{	FF FF	123 123 123 123	7H 8H)			66H 77H 88H 99H	 Valte). Replace with EEH Replace with FFH Replace with 99H (Same as current value).
//	Vector table								
<⟨F	igu	ire	11	- 5	E	ar	npl	e P	atch Code Implementation
	/				1	_			

Page 198 2007-10-15

TMP91FW60

11.3.2 Using an interrupt to cause a branch

A wider range of program code can also be fixed using a software interrupt (SWI). With a patch code loaded into on-chip RAM, the program patch logic can be used to replace program code at a specified address with a single-byte SWI instruction, which causes a branch to the patch program.

Note that this method can only be used if the original masked ROM has been developed with <u>on-chip RAM</u> addresses specified as SWI vector addresses.

Correction procedure:

Load the address compare registers (ROMCMP00 to ROMCMP02) with the start address of the program code that is to be fixed. If it is an even address, store an SWI instruction code (e.g., SWI:F9H) in the ROMSUBL. If the start address is an odd address, store an SWI instruction code in the ROMSUBH and the current ROM data at the preceding even address in the ROMSUBL.

When the CPU address matches the value stored in the ROMCMP00 to ROMCMP02 registers, the program patch logic disables RD output to the masked ROM and drives out the SWI instruction code to the internal bus. Upon fetching the SWI code, the CPU makes a branch to the internal RAM area to execute the preloaded code.

At the end of the patch program executed from the internal RAM, the CPU directly rewrites the saved PC value so that it points to the address following the patch code, and then executes a RETI.


The following shows an example:

Example: Fixing a program within the range from FF5000H to FF507FH

Before developing the original masked ROM, set the SWI1 vector reference address to 001500H (onchip RAM area).

Use the startup routine to load the patch code to on-chip RAM (001500H to 0015EFH). Store the start address (FF5000H) of the ROM area to be fixed in the ROMCMP00 to ROMCMP02. Store the SWII instruction code (F9H) in the ROMSUB0L and the current data at FF5001H (AAH) in the ROMSUB0H. When the CPU address matches the value stored in ROMCMP00 to ROMCMP02, the program patch logic replaces the ROM-based code at FF5000H with F9H. The CPU then executes the SWII instruction, which causes a branch to 001500H in the on-chip RAM area. After executing the patch program the CPU finally rewrites the saved PC value to FF5080H and executes a RETI.

Page 199 2007-10-15

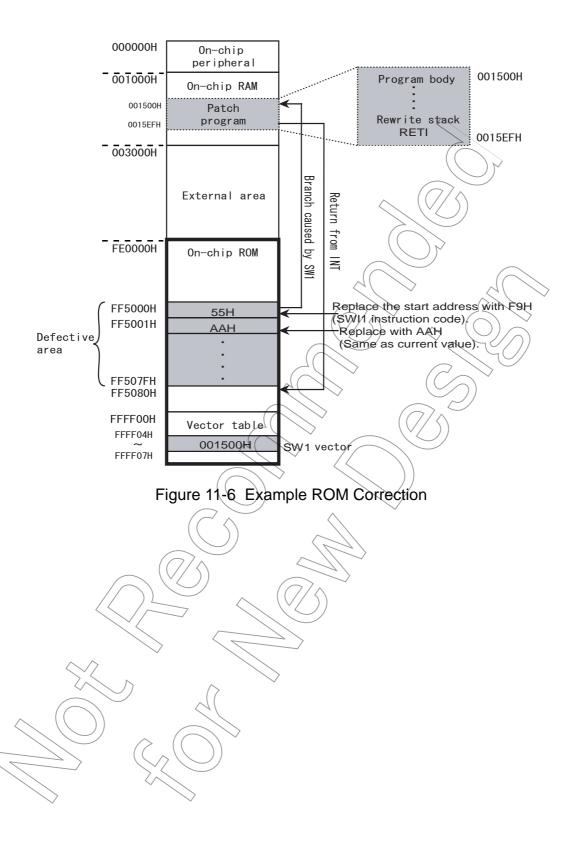

Page 200 2007-10-15

TOSHIBA TMP91FW60

12. Watchdog Timer (Runaway detection timer)

The TMP91FW60 features a watchdog timer for detecting runaway.

The watchdog timer (WDT) is used to return the CPU to normal state when it detects that the CPU has started to malfunction (Runaway) due to causes such as noise.

When the watchdog timer detects a malfunction, it generates a non-maskable interrupt NTWD to notify the CPU. Connecting the watchdog timer output to the reset pin internally forces a reset.(The level of external RESET pin is not changed)

12.1 Configuration

Figure 12-1 is a block diagram of he watchdog timer (WDT).

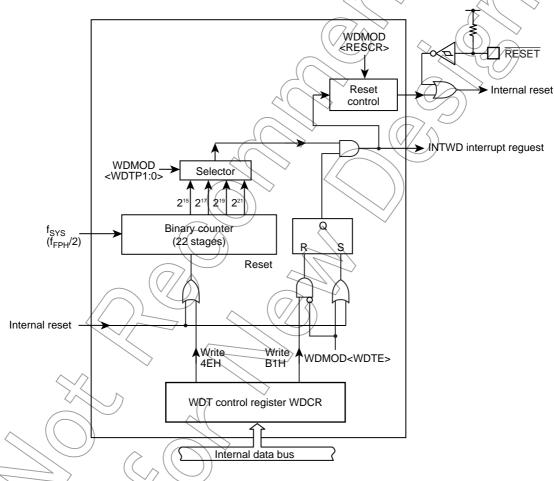


Figure 12-1 Block Diagram of Watchdog Timer

Note: It needs to care designing the total machine set, because watchdog timer can't operate completely by external

Page 201 2007-10-15

TMP91FW60

12.2 Operation

The watchdog timer generates an INTWD interrupt when the detection time set in the WDMOD<WDTP1:0> has elapsed. The watchdog timer must be cleared "0" by software before an INTWD interrupt will be generated. If the CPU malfunctions (e.g., if runaway occurs) due to causes such as noise, but does not execute the instruction used to clear the binary counter, the binary counter will overflow and an INTWD interrupt will be generated. The CPU will detect malfunction (Runaway) due to the INTWD interrupt and in this case it is possible to return to the CPU to normal operation by means of an anti-malfunction program.

The watchdog timer works immediately after reset.

The watchdog timer does not operate in IDLE1 or STOP mode. When the device is in IDLE2 mode, the operation of WDT depends on the WDMOD<I2WDT> setting. Ensure that WDMOD<I2WDT> is set before the device enters IDLE2 mode.

The watchdog timer consists of a 22-stage binary counter which uses the system clock (f_{SYS}) as the input clock. The binary counter can output $f_{SYS}/2^{15}$, $f_{SYS}/2^{17}$, $f_{SYS}/2^{19}$ and $f_{SYS}/2^{21}$.


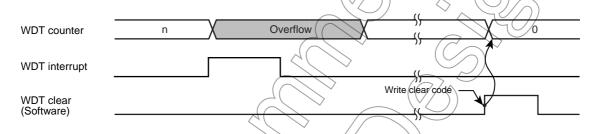


Figure 12-2 Normal Mode

The runaway is detected when an overflow occurs, and the watchdog timer can reset this device. In this case, the reset time will be between 22 and 29 states (51.2 μ s at $f_{OSCH} = 20$ MHz) as shown in Figure 12-3. After a reset, the f_{SYS} clock (1 cycle = 1 state) is $f_{FPH}/2$, where f_{FPH} is generated by dividing the high-speed oscillator clock (f_{OSCH}) by sixteen through the clock gear function.

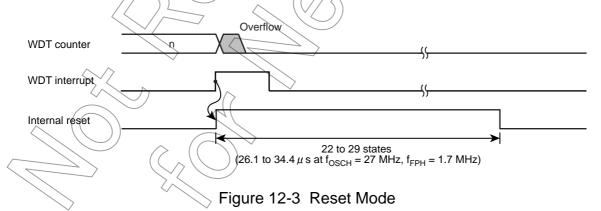

Page 202 2007-10-15

TMP91FW60

12.3 Control Registers

The watchdog timer WDT is controlled by two control registers WDMOD and WDCR.

12.3.1 Watchdog timer mode register (WDMOD)

a. Setting the detection time for the watchdog timer in <WDTP1:0>

This 2-bit register is used for setting the watchdog timer interrupt time used when detecting run-away. After reset, this register is initialized to WDMOD<WDTP1:9> \pm "00"(2¹⁵/ f_{SYS} [S]).

b. Watchdog timer enable/disable control register < WDTE

After reset, WDMOD<WDTE> is initialized to "1", enabling the watchdog timer.

To disable the watchdog timer, it is necessary to set this bit to "0" and to write the disable code (B1H) to the watchdog timer control register WDCR. This makes it difficult for the watchdog timer to be disabled by runaway.

However, it is possible to return the watchdog timer from the disabled state to the enabled state merely by setting <WDTE> to "1".

c. Watchdog timer out reset connection <RESCR>

This register is used to connect the output of the watchdog timer with the internal RESET. Since WDMOD<RESCR> is initialized to "0" on reset, a reset by the watchdog timer will not be performed.

12.3.2 Watchdog timer control register (WDCR)

This register is used to disable and clear the binary counter for the watchdog timer.

· Disable control

The watchdog timer can be disabled by clearing WDMOD<WDTE> to "0" and then writing the disable code (B1H) to the WDCR register.

WDMOD X X - 0 Clear WDMOD<WDTE> to "0".
WDCR WDTE> to "0".
Write the disable code (B1H).

Enable control

Set WDMOD<WDTE> to "1

Watchdog timer clear control

To clear the binary counter and cause counting to resume, write the clear code (4EH) to the WDCR register.

WDCR ← 0 1 0 0 1 1 1 0 Write the clear code (4EH).

Page 203 2007-10-15

Watchdog Timer Mode Register

WDMOD (0300H)

	7	6	5	4	3	2	1	0
Bit symbol	WDTE	WDTP1	WDTP0	-	-	I2WDT	RESCR	-
Read/Write	R/W	R	W	-	-	R	R/W	
After reset	1	0	0	-	-	0	0	0
Function	WDT control 1: Enable	Select detection on the select detection of the select detection on the selection of the se	ng time			IDLE2 control	Reset control	Always write "0".

Watchdog timer out control

RESCR	0	-
KLOOK	1	Connect WDT out to a internal reset

IDLE2 control

I2WDT	0	Stop	
120001	1	Operation	7(\)

Watchdog timer detection time

@fc = 20 MHz, fs = 32.768 kHz

SYSCR1 System Clock	SYSCR1 Gear Value			Detection Time WDTP1:0>	9
Selection <sysck></sysck>	<gear2:0></gear2:0>	> 00 //	01	10	11
1(fs)	XXX	2.0 s	8.0 s	32.0 s	128.0 s
	(000 (fc)	3.28 ms	13.11 ms	52.43 ms	209.72 ms
	001 (fc/2)	6.55 ms	26.21 ms	104.86 ms	419.43 ms
0(fc)	010(fc/4)	13.11 ms	52.43 ms	209.72 ms	838.86 ms
	011 (fc/8)	26.21 ms	104.86 ms	419.43 ms	1677.72 ms
(\bigcirc)	100 (fc/16)	52:43 ms	209.72 ms	838.86 ms	3355.44 ms

Watchdog timer enable/disable control

WATE	0	Disabled
WEIL	1	Enabled

Watchdog Timer Control Register

WDCR (0301H) RMW instructions are prohibited.

	7	6	5	4	3	2	1	0
Bit symbol			\rightarrow		-			
Read/Write	\Diamond			١	V			
After reset	\				-			
Function					disable code			
				4EH: WDT	clear code			

Disable/clear WDT

B1H	Disable code
4EH	Clear code
Others	Don't care

Page 204 2007-10-15

13. Special timer for CLOCK

The TMP91FW60 includes a timer that is used for a clock operation.

An interrupt (INTRTC) can be generated each 0.0625 [s] or 0.125 [s] or 0.25 [s] or 0.50 [s] by using a low frequency clock of 32.768 kHz. A clock function can be easily used.

In addition, INTRTC can return from each standby mode except STOP mode.

A special timer for CLOCK can operate in all modes in which a low-frequency oscillation is operated.

The special timer for CLOCK is controlled by the special timer for CLOCK control register (RTCCR) as shown in.

13.1 Configuration

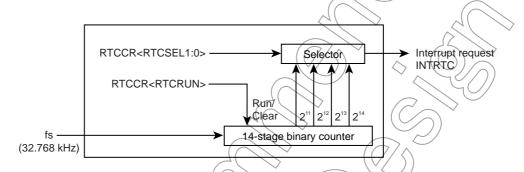


Figure 13-1 Block Diagram for Special Timer for CLOCK

Special Timer for CLOCK Control Register <

RTCCR (0310H)

			1 1					
	7	6	5	4	3	2	1	0
Bit symbol	_ ((//-	-	<u></u>	-	RTCSEL1	RTCSEL0	RTCRUN
Read/Write	R/W		((7/4	-	R	/W	R/W
After reset	0/-		(- ()	\bigcirc	-	0	0	0
Function	Always write "0".	-			I	00: 2 ¹⁴ /fs 01: 2 ¹³ /fs 10: 2 ¹² /fs 11: 2 ¹¹ /fs		0: Stop & clear 1: Count

Counting operation

<rtcrun></rtcrun>	0	Stop & clear
	1	Count

Interrupt generation cycle (fs = 32.768 kHz)

	00	0.50 s
<rtcsel1:0></rtcsel1:0>	11	0.25 s
CICTOOLL 1.02	10	0.125 s
	11	0.0625 s

Page 205 2007-10-15

TOSHIBA TMP91FW60

14. Flash Memory

The TMP91FW60 incorporates flash memory that can be electrically erased and programmed using a single 5V power supply.

The flash memory is programmed and erased using JEDEC-standard commands. After a program or erase command is input, the corresponding operation is automatically performed internally. Erase operations can be performed by the entire chip (chip erase) or on a sector basis (sector erase).

The configuration and operations of the flash memory are described below.

14.1 Features

Power supply voltage for program/erase operations

- Vcc = 4.75 to 5.25 V

 $(T_{OPR} = -10 \text{ to } 40 \text{ }^{\circ}\text{C}, \text{ fc} = 4 \text{ to } 20\text{MHz})$

Configuration

- $64K \times 16$ bits (128 k bytes)

Functions

- Single-word programming
- Chip erase
- Sector erase
- Data polling / Toggle bit

Sector size

8Kbytes × 16

Mode control

- JEDEC-standard commands

Programming method

- On-board programming
- Parallel programmer

Security

Write protection

Read protection

14.2 Block Diagram

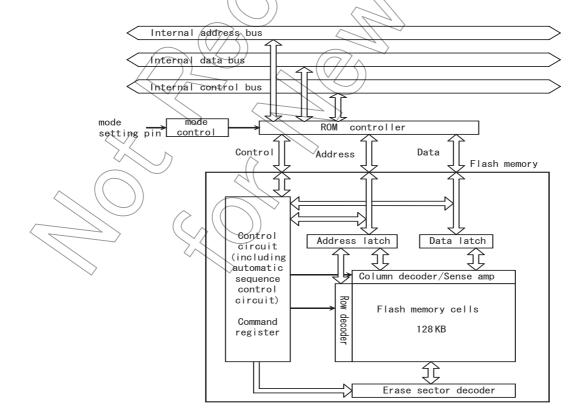


Figure 14-1 Block Diagram of Flash Memory Unit

Page 206 2007-10-15

TMP91FW60

14.3 Operation Modes

14.3.1 Overview

The following three types of operation modes are available to control program/erase operations on the flash memory.

Table 14-1 Description of Operation Modes

Оре	eration Mode Name	Description
Single Chip mode		After reset release, the device starts up from the internal flash memory. Single Chip mode is further divided into two modes: "Normal mode" is a mode in which user application programs are executed, and "User Boot mode" is used to program the flash memory on-board. The means of switching between these two modes can be set by the user as desired. For example, it can be set so that Port 00 = '1' selects Normal mode and Port 00 = '0' selects User Boot mode. The user must include a routine to handle mode switching in a user application program.
	Normal mode	In this mode, the device starts up from a user application program.
	User Boot mode	In this mode, the flash memory can be programmed by a user-specified method:
Single Boot mode		After reset release, the device starts up from the internal boot ROM (mask ROM). The boot ROM includes an algorithm which allows a program for programming/erasing the flash memory on-board via a serial port to be transferred to the device's internal RAM. The transferred program is then executed in the internal RAM so that the flash memory can be programmed/erased by receiving data from an external host and issuing program/erase commands.
Programmer mode		This mode enables the internal flash memory to be programmed/erased using a general-purpose programmer. For programmers that can be used, please contact your local Toshiba sales representative.

Of the modes listed in Table 14-1, the internal flash memory can be programmed in User Boot mode, Single Boot mode and Programmer mode.

The mode in which the flash memory can be programmed/erased while mounted on the user board is defined as the on-board programming mode. Of the modes listed above, Single Boot mode and User Boot mode are classified as on-board programming modes. Single Boot mode supports Toshiba's proprietary programming/erase method using serial I/O. User Boot mode (within Single Chip mode) allows the flash memory to be programmed/erased by a user-specified method.

Programmer mode is provided with a read protect function which prohibits reading of ROM data. By enabling the read protect function upon completion of programming, the user can protect ROM data from being read by third parties.

Page 207 2007-10-15

The operation mode Single Chip mode, Single Boot mode or Programmer mode is determined during reset by externally setting the input levels on the AM0, AM1 and \overline{BOOT} (EMU0) pins.

Except in Programmer mode which is entered with RESET held at "0", the CPU will start operating in the selected mode after the reset state is released. Once the operation mode has been set, make sure that the input levels on the mode setting pins are not changed during operation. Table 14-2 shows how to set each operation mode, and Figure 14-2 shows a mode transition diagram.


Table 14-2 Operation Mode Pin Settings

	Operation Mode		Inpu	t pins	
	Operation mode	RESET	BOOT(EMU0))) AM1	AM0
(1)	Single Chip mode (Normal or User Boot mode)		open	1 /	1
(2)	Single Boot mode	rising edge		1	$\langle \gamma \rangle$
(3)	Programmer mode	0 ((7/\	1	○ 0

Note: Although EMU0 is an output pin, it becomes an input pin with pull-up resistor only during a reset. After a reset, EMU0 operates as follows depending on the operation mode.

>Single chip mode : Output pin with pull-up resistor

>Single boot mode: Pull-up (Input gate is invalid, and output gate is in high impedance.)

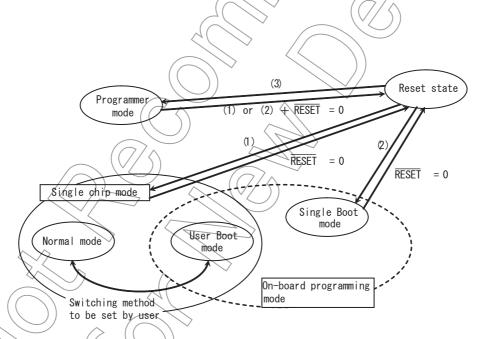

Note: Numbers in () correspond to the operation mode pin settings shown in Table 14-2.

Figure 14-2 Mode Transition Diagram

14.3.2 Reset Operation

To reset the device, hold the \overline{RESET} input at "0" for at least 10 system clocks while the power supply voltage is within the rated operating voltage range and the internal high-frequency oscillator is oscillating stably.

For details, refer to "Reset of CPU".

Page 208 2007-10-15

14.3.3 Memory Map for Each Operation Mode

In this product, the memory map varies with operation mode. The memory map and sector address ranges for each operation mode are shown below.

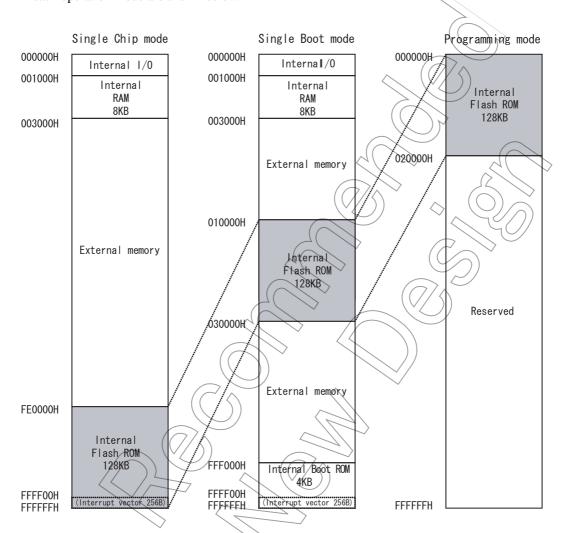


Figure 14-3 Memory Map for Each Operation Mode

Page 209 2007-10-15

Table 14-3 Sector Address Ranges for Each Operation Mode

	Single Chip Mode	Single Boot Mode	1
Sector-0	FE0000H to FE1FFFH	10000H to 11FFFH	
Sector-1	FE2000H to FE3FFFH	12000H to 13FFFH	
Sector-2	FE4000H to FE5FFFH	14000H to 15FFFH	
Sector-3	FE6000H to FE7FFFH	16000H to 17FFFH	7
Sector-4	FE8000H to FE9FFFH	18000H to 19FFFH	
Sector-5	FEA000H to FEBFFFH	1A000H to 1BFFFH	
Sector-6	FEC000H to FEDFFFH	1C000H to 1DFFFH	
Sector-7	FEE000H to FEFFFFH	1E000H to 1FFFFH	
Sector-8	FF0000H to FF1FFFH	20000H to 21FFFH	
Sector-9	FF2000H to FF3FFFH	22000H to 23FFFH	7/1
Sector-10	FF4000H to FF5FFFH	24000H to 25FFFH	5
Sector-11	FF6000H to FF7FFFH	26000H to 27FFFH	
Sector-12	FF8000H to FF9FFFH	28000H to 29FFFH	7
Sector-13	FFA000H to FFBFFFH	2A000H to 2BFFFH	\triangleright
Sector-14	FFC000H to FFDFEFH	2C000H to 2DEFFH	
Sector-15	FFE000H to FFFFFH	2E000H to 2FFFFH	
			_

Page 210 2007-10-15

TMP91FW60

14.4 Single Boot Mode

In Single Boot mode, the internal boot ROM (mask ROM) is activated to transfer a program/erase routine (user-created boot program) from an external source into the internal RAM. This program/erase routine is then used to program/erase the flash memory. In this mode, the internal boot ROM is mapped into an area containing the interrupt vector table, in which the boot ROM program is executed. The flash memory is mapped into an address space different from the one into which the boot ROM is mapped (See Figure 14-3).

The device's SIO (SIO1) and the controller are connected to transfer the program/erase routine from the controller to the device's internal RAM. This program/erase routine is then executed to program/erase the flash memory. The program/erase routine is executed by sending commands and write data from the controller. The communications protocol between the device and the controller is described later in this manual. Before the program/erase routine can be transferred to the RAM, user password verification is performed to ensure the security of user ROM data. If the password is not verified correctly, the RAM transfer operation cannot be performed. In Single Boot mode, disable interrupts and use the interrupt request flags to check for an interrupt request.




Page 211 2007-10-15


14.4.1 Using the program/erase algorithm in the internal boot ROM

(Step-1)Environment setup

Since the program/erase routine and write data are transferred via SIO (SIO1), connect the device's SIO (SIO1) and the controller on the board. The user must prepare the program/erase routine (a) on the controller.

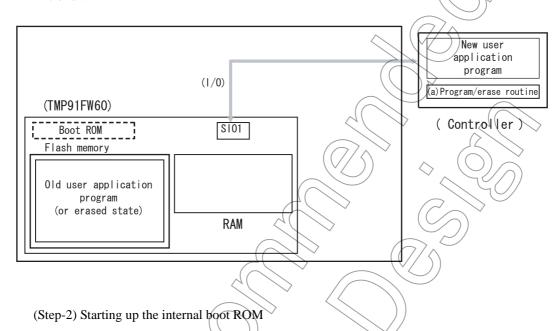


Release the reset with the relevant input pins set for entering Single Boot mode. When the internal boot ROM starts up, the program/erase routine (a) is transferred from the controller to the internal RAM via SIO according to the communications procedure for Single Boot mode. Before this can be carried out, the password entered by the user is verified against the password written in the user application program. (If the flash memory has been erased, 12 bytes of "0xFF" are used as the password.)

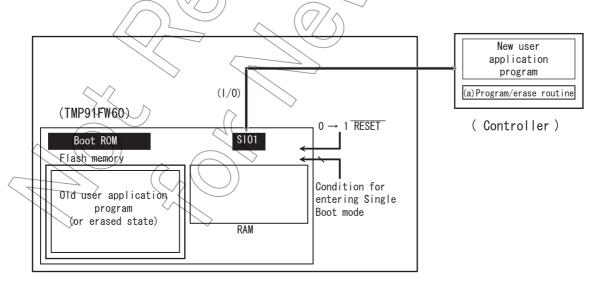

Page 212 2007-10-15

(Step-3) Copying the program/erase routine to the RAM


After password verification is completed, the boot ROM copies the program/erase routine (a) from the controller to the RAM using serial communications. The program/erase routine must be stored within the RAM address range of 001000H to 002DFFH.

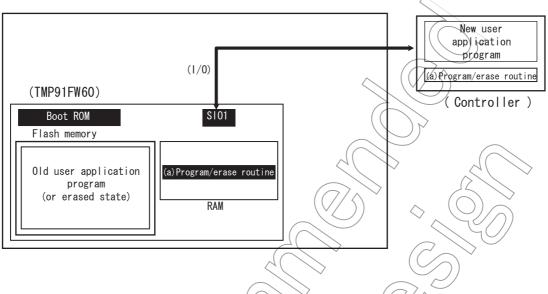


(Step-4) Executing the program/erase routine in the RAM

Control jumps to the program/erase routine (a) in the RAM. If necessary, the old user application program is erased (sector erase or chip erase).

Note 1: The boot ROM is provided with an erase command, which enables the entire chip to be erased from the controller without using the program/erase routine.

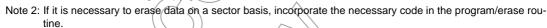

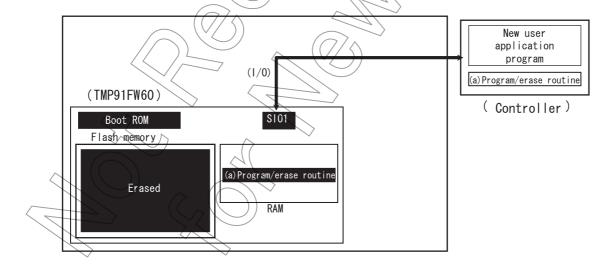


Page 213 2007-10-15

(Step-5) Copying the new user application program


The program/erase routine (a) loads the new user application program from the controller into the erased area of the flash memory.

In the example below, the new user application program is transferred under the same communications conditions as those used for transferring the program/erase routine. However, after the program/erase routine has been transferred, this routine can be used to change the transfer settings (data but and transfer source). Configure the board hardware and program/erase routine as desired.

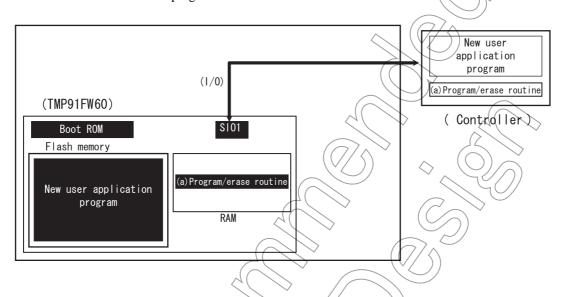

(Step-6) Executing the new user application program

After the programming operation has been completed, turn off the power to the board and remove the cable connecting the device and the controller. Then, turn on the power again and start up the device in Single Chip mode to execute the new user application program.

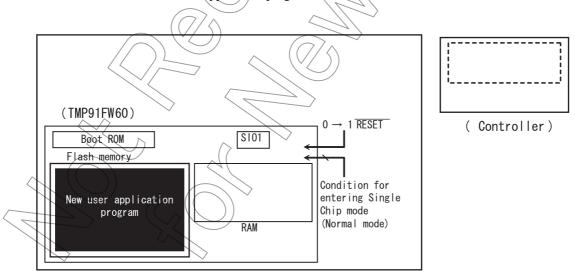

Page 214 2007-10-15

14.4.2 Connection Examples for Single Boot Mode

In Single Boot mode the flash memory is programmed by serial transfer. Therefore, on-board programming is performed by connecting the device's SIO (SIO1) and the controller (programming tool) and sending commands from the controller to the device. Figure 14-4 shows an example of connection between the target board and a programming controller. Figure 14-5 shows an example of connection between the target board and an RS232C board.

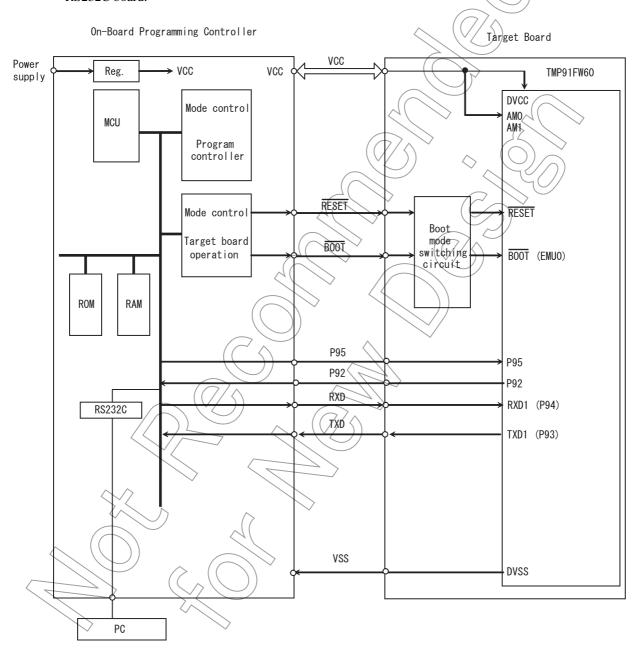


Figure 14-4 Example of Connection with an External Controller in Single Boot Mode

Page 215 2007-10-15

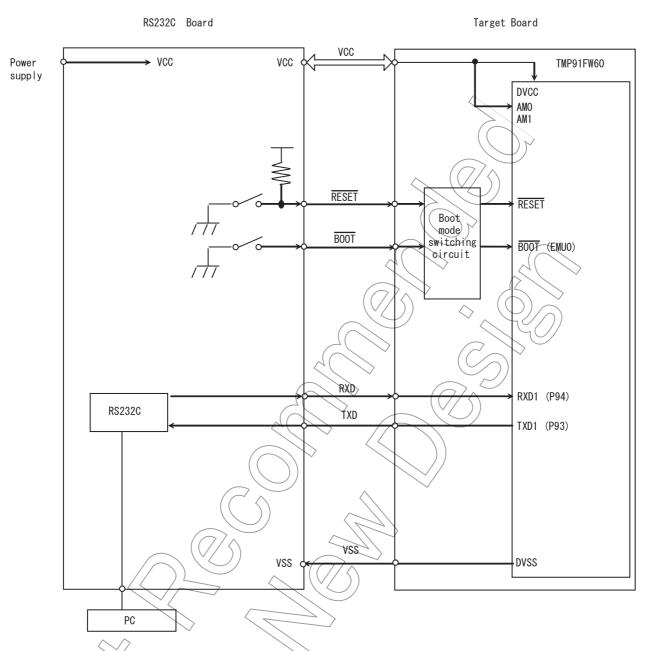


Figure 14-5 Example of Connection with an RS232C Board in Single Boot Mode

Page 216 2007-10-15

14.4.3 Mode Setting

To perform on-board programming, the device must be started up in Single Boot mode by setting the input pins as shown below.

AM0.AM1 = 1

 $\overline{BOOT} = 0$

 $\overline{\text{RESET}} = 0 \rightarrow 1$

Set the AM0, AM1, and BOOT pins as shown above with the RESET pin held at "0". Then, setting the RESET pin to "1" will start up the device in Single Boot mode.

14.4.4 Memory Maps

Figure 14-6 shows a comparison of the memory map for Normal mode (in Single Chip mode) and the memory map for Single Boot mode. In Single Boot mode, the flash memory is mapped to addresses 10000H to 2FFFFH (physical addresses) and the boot ROM (mask ROM) is mapped to addresses FFF000H to FFFFFFH.

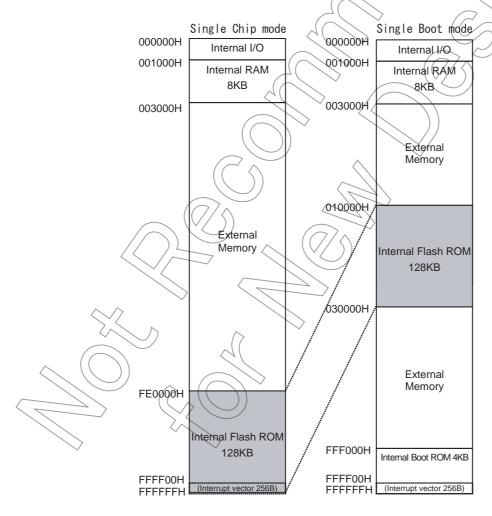


Figure 14-6 Comparison of Memory Maps

Page 217 2007-10-15

TMP91FW60

14.4.5 Interface Specifications

The SIO communications format in Single Boot mode is shown below. The device supports the UART (asynchronous communications) serial operation mode.

To perform on-board programming, the same communications format must also be set on the programming controller's side.

UART (asynchronous) communications

- Communications channel : SIO channel 1(For the pins be used, see Table 14-4)

- Serial transfer mode : UART (asynchronous communications) mode

Data length : 8 bitsParity bit : NoneSTOP bit : 1 bit

- Baud rate : See Table 14-5, Table 14-6

Table 14-4 Pin Connections

		V
Pi	ins	UART
Power sup-	BVCC	0
ply pins	DVSS	((o)
Mode set- ting pins	AM1,AM0 BOOT	0
Reset pin	RESET	0
Communi-	TXD1	0
cations pins	RXD1	

Note: Unused pins are in the initial state after reset release.

Table 14-5 Baud Rate Table

SIO	^	Tr	ansfer Rate (b	os)	
UART	115200	57600	38400	19200	9600

Page 218 2007-10-15

Table 14-6 Correspondence between Operating Frequency and Baud Rate in Single Boot Mode

Supported Baud Rate Error Baud F (%) (bps) (%) (bps) (%) (bps) (%) (bps) (%) (%) (bps) (%) (%) (pps) (%) (%) (pps) (%) (%) (pps) (%) (pps) (%) (pps) (%) (pps) (pp	9200 38400 57600 115200	ate Error Baud Rate Error Baud Rate Error Bud Rate Error (%) (bps) (%) (bps) (%) (bps) (%)	1 +1.73 39063 +1.73		38400 0	0 0 38400 0 57600 0 115200 0	1 +0.16	- 42600	
Supported Baud F Range (bps Range (bps (MHz) 7.87 to 8.74 9611 10.90 to 11.28 9600 14.53 to 15.04 9600 18.16 to 18.80 9600	19200								0 - V
Reference (MHZ) (MHZ) (MHZ) (MHZ) (MHZ) (MHZ) (11.288 14.7456 14.7456 18.4320	Reference Bâud Rate (bps)			10.90 to 11.28	12.17.do 12.53			18.16 to 18.80	

Reference frequency:

The frequency of the high-speed oscillation circuit that can be used in Single Boot mode.

To program the flash memory using Single Boot mode, one of the reference frequencies must be selected as a high-speed clock

Supported Range:

The range of clock frequencies that are detected as each reference frequency. It may not be possible to perform Single Boot operations at clock frequencies outside of the supported range.

Note: To automatically detect the reference frequency (microcontroller clock frequency), the transfer baud rate error of the flash memory programming controller and the oscillation frequency error must be within -1.5%, +2% in total.

Page 219 2007-10-15

14.4.6 Data Transfer Formats

Table 14-7 to Table 14-12 show the operation command data and the data transfer format for each operation mode.

Table 14-7 Operation Command Data

Operation Command Data	Operation Mode
10H	RAM Transfer
20H	Flash Memory SUM
30H	Product Information Read
40H	Flash Memory Chip Erase
60H	Flash Memory Protect Set

Page 220 2007-10-15

Table 14-8 Transfer Format of Single Boot Program [RAM Transfer]


	Transfer Byte Number	Transfer Data from Controller to Device	Baud Rate	Transfer Data from Device to Controller
BOOT ROM	1st byte	Baud rate setting UART 86H	Desired baud rate ^{#1}	<u> </u>
	2nd byte	-		ACK response to baud rate setting Normal (baud rate OK) >UART 86H (If the desired baud rate cannot be set, operation is terminated.)
	3rd byte	Operation command data (10H)	(-
	4th byte	-		ACK response to operation command ^{#2} Normal 10H Error x1H Protection applied ^{#3} x6H Communications error x8H
	5th byte to 16th byte	PASSWORD data (12 bytes) (02FEF4H to 02FEFFH)		
	17th byte	CHECKSUM value for 5th to 16th bytes		
	18th byte	-		ACK-response to CHECKSUM value#2 Normal 10H Error 11H Communications error 18H
	19th byte	RAM storage start address 31 to 24 #4		-
	20th byte	RAM storage start address 23 to 16#4		-
	21th byte	RAM storage start address 15 to 8#4		-
	22th byte	RAM storage start address 7 to 0 ^{#4}		-
	23th byte	RAM storage byte count 15 to 8#4		-
	24th byte	RAM storage byte count 7 to 0#4		-
	25th byte	CHECKSUM value for 19th to 24th bytes #4		-
	26th byte			ACK response to CHECKSUM value ^{#2} Normal 10H Error 11H Communications error 18H
	27th byte to (m)th byte	RAM storage data		-
	(m+1)th byte	CHECKSUM value for 27th to m'th bytes		-
	(m+2)th byte			ACK response to CHECKSUM value ^{#2} Normal 10H Error 11H Communications error 18H
RAM	(m+3)th byte	-		JUMP to RAM storage start address

2007-10-15 Page 221

For the desired baud rate setting, see Table 14-6.
After sending an error response, the device waits for operation command data (3rd byte).
When read protection or write protection is applied, the device aborts the received operation command and waits for the next operation command data (3rd byte).
The data to be transferred in the 19th to 25th bytes should be programmed within the RAM address range of 001000H to 002DFFH (7.5 Kbytes).

Table 14-9 Transfer Format of Single Boot Program [Flash Memory SUM]

	Transfer Byte Number	Transfer Data from Controller to Device	Baud Rate	Transfer Data from Device to Controller
BOOT ROM	1st byte	Baud rate setting UART 86H	Desired baud rate ^{#1}	-
	2nd byte	-		ACK response to baud rate setting Normal (baud rate OK) >UART 86H (If the desired baud rate cannot be set, operation is terminated.)
	3rd byte	Operation command data (20H		-
	4th byte	-		ACK response to CHECKSUM value ^{#2} Normal 20H Error x1H Communications error x8H
	5th byte	-		SUM (upper)
	6th byte	-		SUM (lower)
	7th byte			CHECKSUM value for 5th and 6th bytes
	8th byte	(Wait for the next operation command data)	\\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	(C) -

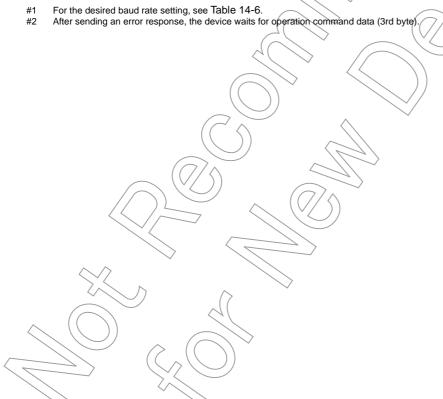

Page 222 2007-10-15

Table 14-10 Transfer Format of Single Boot Program [Product Information Read](1/2)

	Transfer Byte Number	Transfer Data from Controller to Device	Baud Rate	Transfer Data from Device to Controller
BOOT ROM	1st byte	Baud rate setting UART 86H	Desired baud rate ^{#1}	
	2nd byte	-	^	ACK response to baud rate setting Normal (baud rate OK) >UART 86H (If the desired baud rate cannot be set, operation is terminated.)
	3rd byte	Operation command data (30H)		-
	4th byte	-		ACK response to operation command ^{#2} Normal 30H Error x1H Communications x8H
	5th byte	-		Flash memory data (address 02FEF0H)
	6th byte	-		Flash memory data (address 02FEF1H)
	7th byte	-		Flash memory data (address 02FEF2H)
	8th byte	-		Flash memory data (address 02FEF3H)
	9th byte to 20th byte	-		Part number (ASCII code, 12 bytes) 'TMP91FW60 ' (from 9th byte)
	21th byte to			Password comparison start address (4 bytes)
	24th byte			F4H, FEH, 02H, 00H (from 21st byte)
	25th byte to 28th byte			RAM start address (4 bytes) 00H, 10H, 00H, 00H (from 25th byte)
	29th byte			
	to 32th byte			RAM (user area) end address (4 bytes) FFH, 2DH, 00H, 00H (from 29th byte)
	33th byte to 36th byte			RAM end address (4 bytes) FFH, 2FH, 00H, 00H (from 33rd byte)
	37th byte to 40th byte			Dummy data (4 bytes) 00H,00H,00H,00H (from 37th byte)
	41th byte to 44th byte			Dummy data (4 bytes) 00H, 00H, 00H, 00H (from 41st byte)
	45th byte to 46th byte			FUSE information (2 bytes from 45th byte) Read protection/Write protection 1) Applied/Applied : 00H, 00H 2) Not applied/Applied : 01H, 00H 3) Applied/Not applied : 02H, 00H 4) Not applied/Not applied : 03H, 00H
	47th byte to 50th byte	- -		Flash memory start address (4 bytes) 00H, 00H, 01H, 00H (from 47th byte)
	51th byte to 54th byte	-		Flash memory end address (4 bytes) FFH, FFH, 02H, 00H (from 51st byte)
	55th byte to 56th byte	-		Number of sectors in flash memory (2 bytes) 10H, 00H (from 55th byte)
	57th byte to 60th byte	-		Start address of flash memory sectors of the same size (4 bytes) 00H, 00H, 01H, 00H (from 57th byte)

Page 223 2007-10-15

Table 14-10 Transfer Format of Single Boot Program [Product Information Read](2/2)

Transfer Byte Number	Transfer Data from Controller to Device	Baud Rate	Transfer Data from Device to Controller
61th byte to 64th byte	-		Size (in half words) of flash memory sectors of the same size (4 bytes) 00H, 10H, 00H, 00H (from 61st byte)
65th byte	-		Number of flash memory sectors of the same size (1 byte)
66th byte	-	^	CHECKSUM value for 5th to 65th bytes
67th byte	(Wait for the next operation command data)		-

For the desired baud rate setting, see Table 14-6.

Table 14-11 Transfer Format of Single Boot Program [Flash-Memory Chip Erase]

	Transfer Byte Number	Transfer Data from Controller to Device	Baud Rate	Transfer Data from Device to Controller
BOOT ROM	1st byte	Baud rate setting UART 86H	Desired baud rate ^{#1}	(S) \(\).
	2nd byte	-		ACK response to baud rate setting Normal (baud rate OK) >DART 86H (If the desired baud rate cannot be set, operation is terminated.)
	3rd byte	Operation command data (40H)		-
	4th byte			ACK response to operation command ^{#2} Normal 40H Error x1H Communications x8H
	5th byte	Erase Enable command data (54H)	, 1)	-
	6th byte		Ó	ACK response to operation command ^{#2} Normal 54H Error x1H Communications x8H
	7th byte	-		ACK response to Erase command Normal 4FH Error 4CH
	8th byte			ACK response Normal 5DH Error 60H
	9th byte	(Wait for the next operation command data)		-

2007-10-15 Page 224

After sending an error response, the device waits for operation command data (3rd byte)


For the desired baud rate setting, see Table 14-6.
After sending an error response, the device waits for operation command data (3rd byte). #2

Table 14-12 Transfer Format of Single Boot Program [Flash Memory Protect Set]

	Transfer Byte Number	Transfer Data from Controller to Device	Baud Rate	Transfer Data from Device to Controller
BOOT ROM	1st byte	Baud rate setting UART 86H	Desired baud rate ^{#1}	· ·
	2nd byte	-		ACK response to baud rate setting Normal (baud rate OK) >UART 86H (If the desired baud rate cannot be set, operation is terminated.)
	3rd byte	Operation command data (60H)	(-
	4th byte	-		ACK response to operation command ^{#2} Normal 60H Error x1H Communications x8H
	5th byte to 16th byte	Password data (12 bytes) (02FEF4H to 02FEFFH)		
	17th byte	CHECKSUM value for 5th to 16th bytes		
	18th byte	-		ACK response to checksum value#2 Normal 60H Error 61H Communications 68H
	19th byte	-		ACK response to Protect Set command Normal 6FH Error 6CH
	20th byte			ACK response Normal 31H Error 34H
	21th byte	(Wait for the next operation command data)		-

For the desired baud rate setting, see Table 14-6.

After sending an error response, the device waits for operation command data (3rd byte).

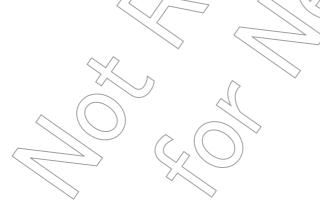

2007-10-15 Page 225

14.4.7 Boot Program

When the device starts up in Single Boot mode, the boot program is activated.

The following explains the commands that are used in the boot program to communicate with the controller when the device starts up in Single Boot mode. Use this information for creating a controller for using Single Boot mode or for building a user boot environment.

1. RAM Transfer command

In RAM transfer, data is transferred from the controller and stored in the device's internal RAM. When the transfer completes normally, the boot program will start running the transferred user program. Up to 7.5 Kbytes of data can be transferred as a user program. (This limit is implemented in the boot program to protect the stack pointer area.) The user program starts executing from the RAM storage start address.

This RAM transfer function enables a user-created program/erase routine to be executed, allowing the user to implement their own on-board programming method. To perform on-board programming with a user program, the flash memory command sequences (see section 14.6) must be used. After the RAM Transfer command has been completed, the entire internal RAM area can be used.

If read protection or write protection is applied on the device or a password error occurs, this command will not be executed.

2. Flash Memory SUM command

This command calculates the SUM of 128 Kbytes of data in the flash memory and returns the result. There is no operation command available to the boot program for reading data from the entire area of the flash memory. Instead, this Flash Memory SUM command can be used. Reading the SUM value enables revision management of the application program.

3. Product Information Read command

This command returns the information about the device including its part number and memory details stored in the flash memory at addresses 02FEF0H to 02FEF3H. This command can also be used for revision management of the application program.

4. Flash Memory Chip Erase command

This command erases all the sectors in the flash memory. If read protection or write protection is applied on the device, all the sectors in the flash memory are erased and the read protection or write protection is cleared.

Since this command is also used to restore the operation of the boot program when the password is forgotten, it does not include password verification.

5. Flash Memory Protect Set command

This command sets both read protection and write protection on the device. However, if a password error occurs, this command will not be executed.

When read protection is set, the flash memory cannot be read in Programmer mode. When write protection is set, the flash memory cannot be written in Programmer mode.

Page 226 2007-10-15

14.4.8 RAM Transfer Command

See Table 14-8.

1. From the controller to the device

The data in the 1st byte is used to determine the baud rate. The 1st byte is transferred with receive operation disabled (SC1MOD0<RXE>=0). (The baud rate is determined using an internal timer.)

To communicate in UART mode

Send the value 86H from the controller to the target board using UART settings at the desired baud rate. If the serial operation mode is determined as UART, the device checks to see whether or not the desired baud rate can be set. If the device determines that the desired baud rate cannot be set, operation is terminated and no communications can be established.

2. From the device to the controller

The data in the 2nd byte is the ACK response returned by the device for the serial operation mode setting data sent in the 1st byte. If the data in the 1st byte is found to signify UART and the desired baud rate can be set, the device returns 86H.

Baud rate determination

The device determines whether or not the desired band rate can be set. If it is found that the band rate can be set, the boot program rewrites the BRICR and BRIADD values and returns 86H. If it is found that the desired band rate cannot be set, operation is terminated and no data is returned. The controller sets a time-out time (5 seconds) after it has finished sending the 1st byte. If the controller does not receive the response (86H) normally within the time-out time, it should be considered that the device is unable to communicate. Receive operation is enabled (SCIMODO<RXE> = 1) before 86H is written to the transmission buffer.

3. From the controller to the device

The data in the 3rd byte is operation command data. In this case, the RAM Transfer command data (10H) is sent from the controller to the device.

4. From the device to the controller

The data in the 4th byte is the ACK response to the operation command data in the 3rd byte. First, the device checks to see if the received data in the 3rd byte contains any error. If a receive error is found, the device returns the ACK response data for communications error (bit 3) x8H and waits for the next operation command data (3rd byte). The upper four bits of the ACK response data are undefined (They are the upper four bits of the immediately preceding operation command data).

Next, if the data received in the 3rd byte corresponds to one of the operation commands given in Table 14-7, the device echoes back the received data (ACK response for normal reception). In the case of the RAM Transfer command, if read or write protection is not applied, 10H is echoed back and then execution branches to the RAM transfer processing routine. If protection is applied, the device returns the corresponding ACK response data (bit 2/1) x6H and waits for the next operation command data (3rd byte). The upper four bits of the ACK response data are undefined. (They are the upper four bits of the immediately preceding operation command data.)

After branching to the RAM transfer processing routine, the device checks the data in the password area. For details, see " 14.4.15 Password ".

If the data in the 3rd byte does not correspond to any operation command, the device returns the ACK response data for operation command error (bit0) x1H and waits for the next operation command data (3rd byte). The upper four bits of the ACK response data are undefined. (They are the upper four bits of the immediately preceding operation command data.)

Page 227 2007-10-15

5. From the controller to the device

The 5th to 16th bytes contain password data (12 bytes). The data in the 5th to 16th bytes is verified against the data at addresses 02FEF4H to 02FEFFH in the flash memory, respectively.

6. From the controller to the device

The 17th byte contains CHECKSUM data. The CHECKSUM data sent by the controller is the two's complement of the lower 8-bit value obtained by summing the data in the 5th to 16th bytes by unsigned 8-bit addition (ignoring any overflow). For details on CHECKSUM, see " 14.4.17 How to Calculate CHECKSUM ".

7. From the device to the controller

The data in the 18th byte is the ACK response data to the 5th to 17th bytes (ACK response to the CHECKSUM value). The device first checks to see whether the data received in the 5th to 17th bytes contains any error. If a receive error is found, the device returns the ACK response data for communications error (bit 3) 18H and waits for the next operation command data (3rd byte). The upper four bits of the ACK response data are the upper four bits of the immediately preceding operation command data, so the value of these bits is "1".

Next, the device checks the CHECKSUM data in the 17th byte. This check is made to see if the lower 8-bit value obtained by summing the data in the 5th to 17th bytes by unsigned 8-bit addition (ignoring any overflow) is 00H. If the value is not 00H, the device returns the ACK response data for CHECKSUM error (bit 0) 11H and waits for the next operation command data (3rd byte).

Finally, the device examines the result of password verification. If all the data in the 5th to 16th bytes is not verified correctly, the device returns the ACK response data for password error (bit 0) 11H and waits for the next operation command data (3rd byte).

If no error is found in all the above checks, the device returns the ACK response data for normal reception 10 H.

8. From the controller to the device

The data in the 19th to 22nd bytes indicates the RAM start address for storing block transfer data. The 19th byte corresponds to address bits 3) to 24, the 20th byte to address bits 23 to 16, the 21st byte to address bits 15 to 8, and the 22nd byte to address bits 7 to 0.

9. From the controller to the device

The data in the 23rd and 24th bytes indicates the number of bytes to be transferred. The 23rd byte corresponds to bits 15 to 8 of the transfer byte count and the 24th byte corresponds to bits 7 to 0.

10. From the controller to the device

The data in the 25th byte is CHECKSUM data. The CHECKSUM data sent by the controller is the two's complement of the lower 8-bit value obtained by summing the data in the 19th to 24th bytes by unsigned 8-bit addition (ignoring any overflow). For details on CHECKSUM, see " 14.4.17 How to Calculate CHECKSUM ".

Note: The data in the 19th to 25th bytes should be placed within addresses 001000H to 002DFFH (7.5Kbytes) in the internal RAM.

Page 228 2007-10-15

11. From the device to the controller

The data in the 26th byte is the ACK response data to the data in the 19th to 25th bytes (ACK response to the CHECKSUM value).

The device first checks to see whether the data received in the 19th to 25th bytes contains any error. If a receive error is found, the device returns the ACK response data for communications error (bit 3) 18H and waits for the next operation command (3rd byte). The upper four bits of the ACK response data are the upper four bits of the immediately preceding operation command data, so the value of these bits is "1".

Next, the device checks the CHECKSUM data in the 25th byte. This check is made to see if the lower 8-bit value obtained by summing the data in the 19th to 25th bytes by unsigned 8-bit addition (ignoring any overflow) is 00H. If the value is not 00H, the device returns the ACK response data for CHECKSUM error (bit 0) 11H and waits for the next operation command data (3rd byte).

12. From the controller to the device

The data in the 27th to m'th bytes is the data to be stored in the RAM. This data is written to the RAM starting at the address specified in the 19th to 22nd bytes. The number of bytes to be written is specified in the 23rd and 24th bytes.

13. From the controller to the device

The data in the (m+1)th byte is CHECKSUM data. The CHECKSUM data sent by the controller is the two's complement of the lower 8-bit value obtained by summing the data in the 27th to m'th bytes by unsigned 8-bit addition (ignoring any overflow). For details on CHECKSUM, see " 14.4.17 How to Calculate CHECKSUM ".

14. From the device to the controller

The data in the (m+2)th byte is the ACK response data to the 27th to (m+1)th bytes (ACK response to the CHECKSUM value).

The device first checks to see whether the data in the 27th to (m+1)th byte contains any error. If a receive error is found, the device returns the ACK response data for communications error (bit 3) 18H and waits for the next operation command (3rd byte). The upper four bits of the ACK response are the upper four bits of the immediately preceding operation command data, so the value of these bits is "1".

Next, the device checks the CHECKSUM data in the (m+1)th byte. This check is made to see if the lower 8-bit value obtained by summing the data in the 27th to (m+1)th bytes by unsigned 8-bit addition (ignoring any overflow) is 00H. If the value is not 00H, the device returns the ACK response data for CHECKSUM error (bit 0) 11H and waits for the next operation command data (3rd byte).

If no error is found in all the above checks, the device returns the ACK response data for normal reception 10H.

15. From the device to the controller

If the ACK response data in the (m+2)th byte is 10H (normal reception), the boot program then jumps to the RAM start address specified in the 19th to 22nd bytes.

Page 229 2007-10-15

TMP91FW60

14.4.9 Flash Memory SUM command

See Table 14-9.

1. The data in the 1st and 2nd bytes is the same as in the case of the RAM Transfer command.

2. From the controller to the device

The data in the 3rd byte is operation command data. The Flash Memory SUM command data (20H) is sent here.

3. From the device to the controller

The data in the 4th byte is the ACK response data to the operation command data in the 3rd byte.

The device first checks to see if the data in the 3rd byte contains any error. If a receive error is found, the device returns the ACK response data for communications error (bit 3) x8H and waits for the next operation command data (3rd byte). The upper four bits of the ACK response data are undefined. (They are the upper four bits of the immediately preceding operation command data.)

Then, if the data in the 3rd byte corresponds to one of the operation command values given in Table 14-7, the device echoes back the received data (ACK response for normal reception). In this case, 20H is echoed back and execution then branches to the flash memory SUM processing routine. If the data in the 3rd byte does not correspond to any operation command, the device returns the ACK response data for operation command error (bit 0) x1H and waits for the next operation command data (3rd byte). The upper four bits of the ACK response data are undefined. (They are the upper four bits of the immediately preceding operation command data.)

4. From the device to the controller

The data in the 5th and 6th bytes is the upper and lower data of the SUM value, respectively. For details on SUM, see " 14.4.16 How to Calculate SUM ".

5. From the device to the controller

The data in the 7th byte is CHECKSUM data. This is the two's complement of the lower 8-bit value obtained by summing the data in the 5th and 6th bytes by unsigned 8-bit addition (ignoring any overflow).

6. From the controller to the device

The data in the 8th byte is the next operation command data.

Page 230 2007-10-15

TOSHIBA TMP91FW60

14.4.10Product Information Read command

See Table 14-10.

1. The data in the 1st and 2nd bytes is the same as in the case of the RAM Transfer command.

2. From the controller to the device

The data in the 3rd byte is operation command data. The Product Information Read command data (30H) is sent here.

3. From the device to the controller

The data in the 4th byte is the ACK response data to the operation command data in the 3rd byte.

The device first checks to see if the data in the 3rd byte contains any error. If a receive error is found, the device returns the ACK response data for communications error (bit 3) x8H and waits for the next operation command data (3rd byte). The upper four bits of the ACK response data are undefined. (They are the upper four bits of the immediately preceding operation command data.)

Then, if the data in the 3rd byte corresponds to one of the operation command values given in Table 14-7, the device echoes back the received data (ACK response for normal reception). In this case, 30H is returned and execution then branches to the product information read processing routine. If the data in the 3rd byte does not correspond to any operation command, the device returns the ACK response data for operation command error (bit 0) x1H and waits for the next operation command data (3rd byte). The upper four bits of the ACK response data are undefined. (They are the upper four bits of the immediately preceding operation command data.)

4. From the device to the controller

The data in the 5th to 8th bytes is the data stored at addresses 02FEF0H to 02FEF3H in the flash memory. By writing the ID information of software at these addresses, the version of the software can be managed. (For example, 0002H can indicate that the software is now in version 2.)

5. From the device to the controller

The data in the 9th to 20th bytes denotes the part number of the device. 'TMP91FW60 _ _ _ ' is sent in ASCII code starting from the 9th byte.

Nøte: An underscore ('_') indicates a space.

6. From the device to the controller

The data in the 21st to 24th bytes is the password comparison start address. F4H, FEH, 02H and 00H are sent starting from the 21st byte.

7. From the device to the controller

The data in the 25th to 28th bytes is the RAM start address. 00H, 10H, 00H and 00H are sent starting from the 25th byte.

8. From the device to the controller

The data in the 29th to 32nd bytes is the RAM (user area) end address. FFH, 2DH, 00H and 00H are sent starting from the 29th byte.

9. From the device to the controller

The data in the 33rd to 36th bytes is the RAM end address. FFH, 2FH, 00H and 00H are sent starting from the 33rd byte.

10. From the device to the controller

The data in the 37th to 44th bytes is dummy data.

11. From the device to the controller

The data in the 45th and 46th bytes contains the protection status and sector division information of the flash memory.

>Bit 0 indicates the read protection status.

0: Read protection is applied.

Page 231 2007-10-15

- 1: Read protection is not applied.
- >Bit 1 indicates the write protection status.
- 0: Write protection is applied.
- 1: Write protection is not applied.
- >Bit 2 indicates whether or not the flash memory is divided into sectors.
- 0: The flash memory is divided into sectors.
- 1: The flash memory is not divided into sectors.
- >Bits 3 to 15 are sent as "0".

12. From the device to the controller

The data in the 47th to 50th bytes is the flash memory start-address. 00H, 00H, 01H and 00H are sent starting from the 47th byte.

13. From the device to the controller

The data in the 51st to 54th bytes is the flash memory end address. FFH, FFH, 02H and 00H are sent starting from the 51st byte.

14. From the device to the controller

The data in the 55th and 56th bytes indicates the number of sectors in the flash memory. 10H and 00H are sent starting from the 55th byte.

15. From the device to the controller

The data in the 57th to 65th bytes contains sector information of the flash memory. Sector information is comprised of the start address (starting from the flash memory start address), sector size and number of consecutive sectors of the same size. Note that the sector size is represented in word units.

The data in the 57th to 65th bytes indicates 8 Kbytes of sectors (sector 0 to sector 15).

For the data to be transferred, see Table 14-10.

16. From the device to the controller

The data in the 66th byte is CHECKSUM data. This is the two's complement of the lower 8-bit value obtained by summing the data in the 5th to 65th bytes by unsigned 8-bit addition (ignoring any overflow).

17. From the controller to the device

The data in the 67th byte is the next operation command data.

Page 232 2007-10-15

TMP91FW60

14.4.11 Flash Memory Chip Erase Command

See Table 14-11.

1. The data in the 1st and 2nd bytes is the same as in the case of the RAM Transfer command.

2. From the controller to the device

The data in the 3rd byte is operation command data. The Flash Memory Chip Erase command data (40H) is sent here.

3. From the device to the controller

The data in the 4th byte is the ACK response data to the operation command data in the 3rd byte.

The device first checks to see if the data in the 3rd byte contains any error. If a receive error is found, the device returns the ACK response data for communications error (bit 3) x8H and waits for the next operation command data (3rd byte). The upper four bits of the ACK response data are undefined. (They are the upper four bits of the immediately preceding operation command data.)

Then, if the data in the 3rd byte corresponds to one of the operation command values given in Table 14-7, the device echoes back the received data (ACK response for normal reception). In this case, 40H is echoed back. If the data in the 3rd byte does not correspond to any operation command, the device returns the ACK response data for operation command error (bit 0) x1H and waits for the next operation command data (3rd byte). The upper four bits of the ACK response data are undefined. (They are the upper four bits of the immediately preceding operation command data.)

4. From the controller to the device

The data in the 5th byte is Erase Enable command data (54H).

5. From the device to the controller

The data in the 6th byte is the ACK response data to the Erase Enable command data in the 5th byte.

The device first checks to see if the data in the 5th byte contains any error. If a receive error is found, the device returns the ACK response data for communications error (bit 3) x8H and waits for the next operation command data (3rd byte). The upper four bits of the ACK response data are undefined (They are the upper four bits of the immediately preceding operation command data.)

Then, if the data in the 5th byte corresponds to the Erase Enable command data, the device echoes back the received data (ACK response for normal reception). In this case, 54H is echoed back and execution jumps to the flash memory chip erase processing routine. If the data in the 5th byte does not correspond to the Erase Enable command data, the device returns the ACK response data for operation command error (bit 0) xH and waits for the next operation command (3rd byte). The upper four bits of the ACK response data are undefined. (They are the upper four bits of the immediately preceding operation command data.)

6. From the device to the controller

The data in the 7th byte indicates whether or not the erase operation has completed successfully. If the erase operation has completed successfully, the device returns the end code (4FH). If an erase error has occurred, the device returns the error code (4CH).

7. From the device to the controller

The data in the 8th byte is ACK response data. If the erase operation has completed successfully, the device returns the ACK response for erase completion (5DH). If an erase error has occurred, the device returns the ACK response for erase error (60H).

8. From the controller to the device

The data in the 9th byte is the next operation command data.

Page 233 2007-10-15

OSHIBA TMP91FW60

14.4.12Flash Memory Protect Set command

See Table 14-12.

1. The data in the 1st and 2nd bytes is the same as in the case of the RAM Transfer command.

2. From the controller to the device

The data in the 3rd byte is operation command data. The Flash Memory Protect Set command data (60H) is sent here.

3. From the device to the controller

The data in the 4th byte is the ACK response data to the operation command data in the 3rd byte.

The device first checks to see if the data in the 3rd byte contains any error. If a receive error is found, the device returns the ACK response data for communications error (bit 3) x8H and waits for the next operation command data. The upper four bits of the ACK response data are undefined. (They are the upper four bits of the immediately preceding operation command data.)

Then, if the data in the 3rd byte corresponds to one of the operation command data values given in Table 14-7, the device echoes back the received data (ACK response for normal reception). In this case, 60H is echoed back and execution branches to the flash memory protect set processing routine.

After branching to this routine, the data in the password area is checked. For details, see "14.4.15 Password". If the data in the 3rd byte does not correspond to any operation command, the device returns the ACK response data for operation command error (bit 0) x1H and waits for the next operation command data (3rd byte). The upper four bits of the ACK response data are undefined. (They are the upper four bits of the immediately preceding operation command data.)

4. From the controller to the device

The data in the 5th to 16th bytes is password data (12 bytes). The data in the 5th byte is verified against the data at address 02FEF4H in the flash memory and the data in the 6th byte against the data at address 02FEF5H. In this manner, the received data is verified consecutively against the data at the specified address in the flash memory. The data in the 16th byte is verified against the data at address 02FEFFH in the flash memory.

5. From the controller to the device

The data in the 17th byte is CHECKSUM data. The CHECKSUM data sent by the controller is the two's complement of the lower 8-bit value obtained by summing the data in 5th to 16th bytes by unsigned 8-bit addition (ignoring any overflow). For details on CHECKSUM, see " 14.4.17 How to Calculate CHECKSUM ".

6. From the device to the controller

The data in the 18th byte is the ACK response data to the data in the 5th to 17th bytes (ACK response to the CHECKSUM value).

The device first checks to see whether the data in the 5th to 17th bytes contains any error. If a receive error is found, the device returns the ACK response data for communications error (bit 3) 68H and waits for the next operation command data (3rd byte). The upper four bits of the ACK response data are the upper four bits of the immediately preceding operation command data, so the value of these bits is "6".

Then, the device checks the CHECKSUM data in the 17th byte. This check is made to see if the lower 8 bits of the value obtained by summing the data in the 5th to 17th bytes by unsigned 8-bit addition (ignoring any overflow) is 00H. If the value is not 00H, the device returns the ACK response data for CHECKSUM error (bit 0) 61H and waits for the next operation command data (3rd byte).

Finally, the device examines the result of password verification. If all the data in the 5th to 16th bytes is not verified correctly, the device returns the ACK response data for password error (bit 0) 61H and waits for the next operation command data (3rd byte).

If no error is found in the above checks, the device returns the ACK response data for normal reception 60H.

Page 234 2007-10-15

7. From the device to the controller

The data in the 19th byte indicates whether or not the protect set operation has completed successfully. If the operation has completed successfully, the device returns the end code (6FH). If an error has occurred, the device returns the error code (6CH).

8. From the device to the controller

The data in the 20th byte is ACK response data. If the protect set operation has completed successfully, the device returns the ACK response data for normal completion (31H). If an error has occurred, the device returns the ACK response data for error (34H).

9. From the device to the controller

The data in the 21st byte is the next operation command data

14.4.13ACK Response Data

The boot program notifies the controller of its processing status by sending various response data. Table 14-13 to Table 14-18 show the ACK response data returned for each type of received data. The upper four bits of ACK response data are a direct reflection of the upper four bits of the immediately preceding operation command data. Bit 3 indicates a receive error and bit 0 indicates an operation command error, CHECKSUM error or password error.

Table 14-13 ACK Response Data to Serial Operation Mode Setting Data

Transfer Data	Meaning (//
86H	The device can communicate in UART mode. (Note)

Note: If the desired baud rate cannot be set, the device returns no data and terminates operation.

Table 14-14 ACK Response Data to Operation Command Data

Transfer data	Meaning
x8H (Note)	A receive error occurred in the operation command data.
x6H (Note)	Terminated receive operation due to protection setting.
x1H (Note)	Undefined operation command data was received normally.
10H	Received the RAM Transfer command.
20H	Received the Flash Memory SUM command.
30H	Received the Product Information Read command.
40H	Received the Flash Memory Chip Erase command.
60H	Received the Flash Memory Protect Set command.

Note: The upper four bits are a direct reflection of the upper four bits of the immediately preceding operation command data.

Table 14-15 ACK Response data to CHECKSUM Data for RAM Transfer Command

Transfer data	Meaning						
18H	A receive error occurred.						
11H	A CHECKSUM error or password error occurred.						
10H	Received the correct CHECKSUM value.						

Page 235 2007-10-15

Table 14-16 ACK Response Data to Flash Memory Chip Erase Operation

Transfer data	Meaning					
54H	Received the Erase Enable command.					
4FH	Completed erase operation.					
4CH	An erase error occurred.					
5DH (Note)	Reconfirmation of erase operation					
60H (Note)	Reconfirmation of erase error					

Note: These codes are returned for reconfirmation of communications.

Table 14-17 ACK Response Data to CHECKSUM Data for Flash Memory Protect Set Command

Transfer data	Meaning	
68H	A receive error occurred.	
61H	A CHECKSUM or password error occurred.	4.9
60H	Received the correct CHECKSUM value.	40

Table 14-18 ACK Response Data to Flash Memory Protect Set Operation

Transfer data	Meaning
6FH	Completed the protect (read/write) set operation.
6CH	A protect (read/write) set error occurred.
31H (Note)	Reconfirmation of protect (read/write) set operation
34H (Note)	Reconfirmation of protect (read/write) set error

Note: These codes are returned for reconfirmation of communications.

14.4.14Determining Serial Operation Mode

To communicate in UART mode, the controller should transmit the data value 86H as the first byte at the desired baud rate. Figure 14-7 shows the waveform of this operation.

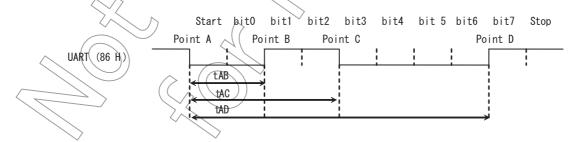


Figure 14-7 Data for Determining Serial Operation Mode

The boot program receives the first byte (86H) after reset release not as serial communications data. Instead, the boot program uses the first byte to determine the baud rate. The baud rate is determined by the output periods of tAB, tAC and tAD as shown in Figure 14-7 using the procedure shown in Figure 14-8.

The CPU monitors the level of the receive pin. Upon detecting a level change, the CPU captures the timer value to determine the baud rate.

Page 236 2007-10-15

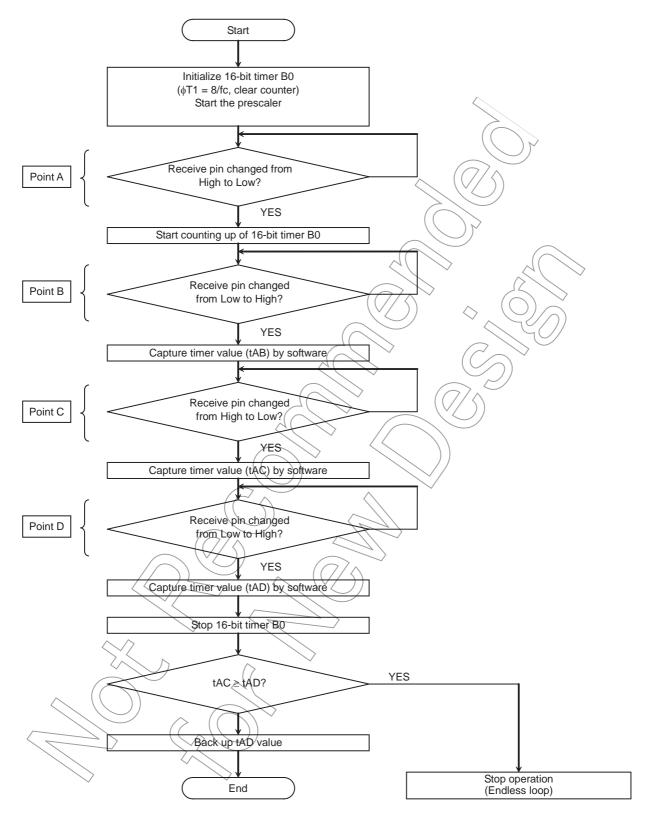


Figure 14-8 Flowchart for Serial Operation Mode Receive Operation

Page 237 2007-10-15

14.4.15Password

When the RAM Transfer command (10H) or the Flash Memory Protect Set command (60H) is received as operation command data, password verification is performed. First, the device echoes back the operation command data (10H to 60H) and checks the data (12 bytes) in the password area (addresses 02FEF4H to 02FEFFH).

Then, the device verifies the password data received in the 5th to 16th bytes against the data in the password area as shown in Table 14-19.

Unless all the 12 bytes are verified correctly, a password error will occur.

A password error will also occur if all the 12 bytes of password data contain the same value. Only exception is when all the 12 bytes are "FFH" and verified correctly and the reset vector area (addresses 02FF00H to 02FF02H) is all "FFH". In this case, a blank device will be assumed and no password error will occur.

If a password error has occurred, the device returns the ACK response data for password error in the 18th byte.

Table 14-19 Password Verification Table

Receive data	Data to be verified against
5th byte	Data at address 02FEF4H
6th byte	Data at address 02FEF5H
7th byte	Data at address 02FEF6H
8th byte	Data at address 02FEF7H
9th byte	Data at address 02FEF8H
10th byte	Data at address 02FEF9H
11th byte	Data at address 02FEFAH
12th byte	Data at address 02FEFBH
/13th byte	Data at address 02FEFCH
14th byte	Data at address 02FEFDH
15th byte	Data at address 02FEFEH
16th byte	Data at address 02FEFFH

Example of data that cannot be specified as a password

For blank products (Note)

Note:A blank product is a product in which all the bytes in the password area (addresses 02FEF4H to 02FEFFH) and the reset vector area (addresses 02FF00H to 02FF02H) are "FFH".

For programmed products

The same 12 consecutive bytes cannot be specified as a password.

The table below shows password error examples.


Programmed product	1	2	3	4	5	6	7	8	9	10	11	12	Note
Error example 1	FFH	ALL"FF"											
Error example 2	00H	ALL"00"											
Error example 3	5AH	ALL"5A"											

Page 238 2007-10-15

TMP91FW60

14.4.16How to Calculate SUM

SUM is calculated by summing the values of all data read from the flash memory by unsigned 8-bit addition and is returned as a word (16-bit) value. The resulting SUM value is sent to the controller in order of upper 8 bits and lower 8 bits. All the 128 Kbytes of data in the flash memory are included in the calculation of SUM. When the Flash Memory SUM command is executed, SUM is calculated in this way.

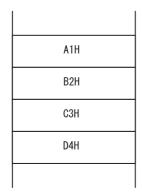

When SUM is calculated from the four data entries shown to the left, the result is as follows:

A1H+ B2H + C3H + D4H = 02EAH SUM upper 8 bits: 02H SUM lower 8 bits: EAH

Thus, the SUM value is sent to the controller in order of 02H and EAH.

14.4.17How to Calculate CHECKSUM

CHECKSUM is calculated by taking the two's complement of the lower 8-bit value obtained by summing the values of received data by unsigned 8-bit addition (ignoring any overflow). When the Flash Memory SUM command or the Product Information Read command is executed, CHECKSUM is calculated in this way. The controller should also use this CHECKSUM calculation method for sending CHECKSUM values.

Example: Calculating CHECKSUM for the Flash Memory SUM command

When the upper 8-bit data of SUM is E5H and the lower 8-bit data is F6H, CHECKSUM is calculated as shown below.

First, the upper 8 bits and lower 8 bits of the SUM value are added by unsigned operation.

E5H+F6H \(\sqrt{1DBH}

Then, the two's complement of the lower 8 bits of this result is obtained as shown below. The resulting CHECKSUM value (25H) is sent to the controller.

0-DBH = 25H

14.5 User Boot Mode (in Single Chip Mode)

User Boot mode, which is a sub mode of Single Chip mode, enables a user-created flash memory program/erase routine to be used. To do so, the operation mode of Single Chip mode must be changed from Normal mode for executing a user application program to User Boot mode for programming/erasing the flash memory.

For example, the reset processing routine of a user application program may include a routine for selecting Normal mode or User Boot mode upon entering Single Chip mode. Any mode-selecting condition may be set using the device's I/O to suit the user system.

To program/erase the flash memory in User Boot mode, a program/erase routine must be incorporated in the user application program in advance. Since the processor cannot read data from the internal flash memory while it is being programmed or erased, the program/erase routine must be executed from the outside of the flash memory. While the flash memory is being programmed/erased in User Boot mode, interrupts must be disabled.

The pages that follow explain the procedure for programming the flash memory using two example cases. In one case the program/erase routine is stored in the internal flash memory (1-A); in the other the program/erase routine is transferred from an external source (1-B).

Page 239 2007-10-15

14.5.1 (1-A) Program/Erase Procedure Example 1

When the program/erase routine is stored in the internal flash memory

(Step-1)Environment setup

First, the condition (e.g. pin status) for entering User Boot mode must be set and the I/O bus for transferring data must be determined. Then, the device's peripheral circuitry must be designed and a corresponding program must be written. Before mounting the device on the board, it is necessary to write the following four routines into one of the sectors in the flash memory.

(a) Mode select routine:

Selects Normal mode or User Boot mode.

(b)Program/erase routine:

Loads program/erase data from an external source and programs/erases the flash memory.


(c)Copy routine 1:

Copies routines (a) to (d) into the internal RAM or external memory.

(d)Copy routine 2:

Copies routines (a) to (d) from the internal RAM or external memory into the flash memory.


Note: The above (d) is a routine for reconstructing the program/erase routine on the flash memory. If the entire flash memory is always programmed and the program/erase routine is included in the new user application program, this copy routine is not needed.

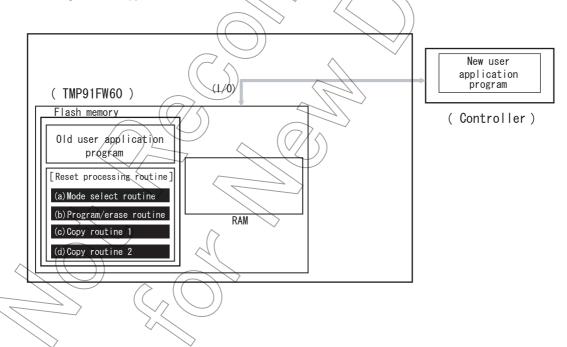

Page 240 2007-10-15


(Step-2) Entering User Boot mode (using the reset processing)

After reset release, the reset processing program determines whether or not the device should enter User Boot mode. If the condition for entering User Boot mode is true, User Boot mode is entered to program/ erase the flash memory.

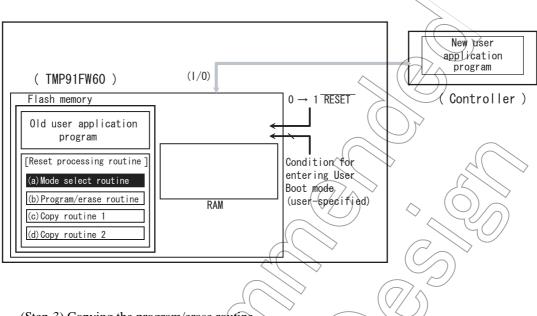

(Step-3) Copying the program/erase routine

After the device has entered User Boot mode, the copy routine 1 (c) copies the routines (a) to (d) into the internal RAM or external memory (The routines are copied into the internal RAM here.)

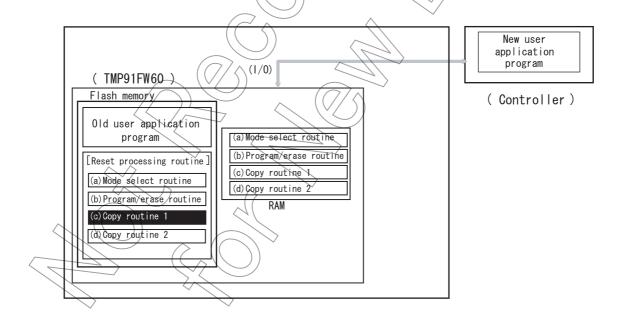


Page 241 2007-10-15

(Step-4) Erasing the flash memory by the program/erase routine

Control jumps to the program/erase routine in the RAM and the old user program area is erased (sector erase or chip erase). (In this case, the flash memory erase command is issued from the RAM.)


Note: If data is erased on a sector basis and the routines (a) to (d) are left in the flash memory, only the program/ erase routine (b) need be copied into the RAM.

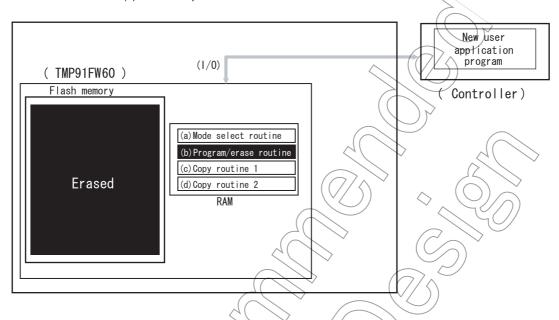

(Step-5) Restoring the user boot program in the flash memory

The copy routine 2 (d) in the RAM copies the routines (a) to (d) into the flash memory.


Note: If data is erased on a sector basis and the routines (a) to (d) are left in the flash memory, step 5 is not needed.

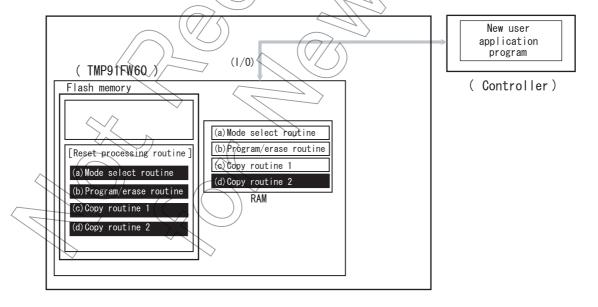

Page 242 2007-10-15


(Step-6) Writing the new user application program to the flash memory

The program/erase routine in the RAM is executed to load the new user application program from the controller into the erased area of the flash memory.

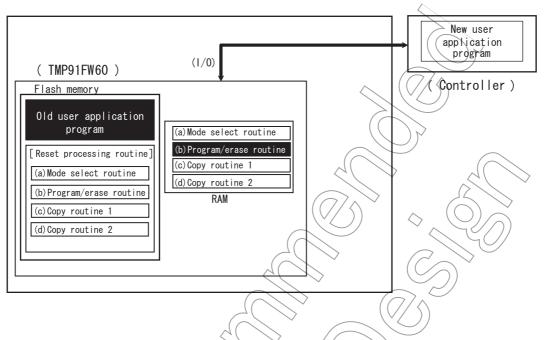

(Step-7) Executing the new user application program

The RESET input pin is driven Low ("0") to reset the device. The mode setting condition is set for Normal mode. After reset release, the device will start executing the new user application program.

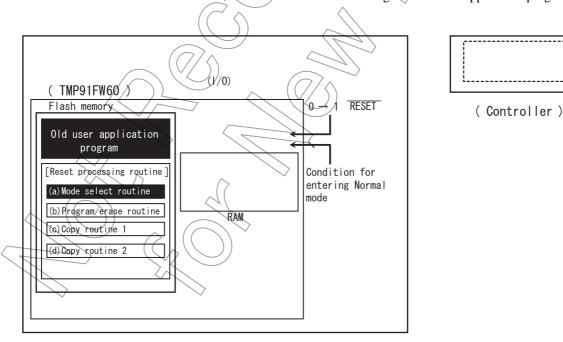

Page 243 2007-10-15

14.5.2 (1-B) Program/Erase Procedure Example 2

In this example, only the boot program (minimum requirement) is stored in the flash memory and other necessary routines are supplied from the controller.

(Step-1)Environment setup

First, the condition (e.g. pin status) for entering User Boot mode must be set and the I/O bus for transferring data must be determined. Then, the device's peripheral circuitry must be designed and a corresponding program must be written. Before mounting the device on the board, it is necessary to write the following two routines into one on the sectors in the flash memory.

(a) Mode select routine:

Selects Normal mode or User Boot mode.

(b)Transfer routine:

Loads the program/erase routine from an external source.

The following routines are prepared on the controller.

(c)Program/erase routine:


Programs/erases the flash memory.

(d)Copy routine 1:

Copies routines (a) and (b) into the internal RAM or external memory.

(e)Copy routine 2:


Copies routines (a) and (b) from the internal RAM or external memory into the flash memory.

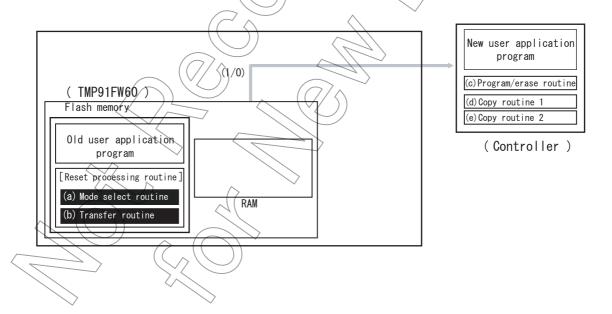

Page 244 2007-10-15


(Step-2) Entering User Boot mode (using the reset processing)

The following explanation assumes that these routines are incorporated in the reset processing program. After reset release, the reset processing program first determines whether or not the device should enter User Boot mode. If the condition for entering User Boot mode is true, User Boot mode is entered to program/erase the flash memory.

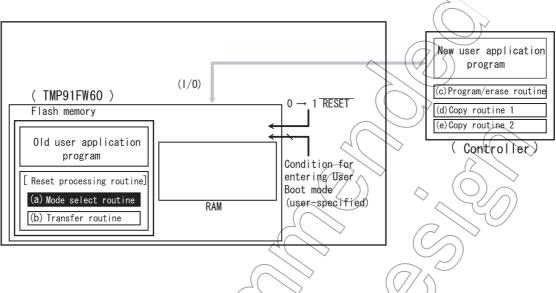

(Step-3) Copying the program/erase routine to the internal RAM


After the device has entered User Boot mode, the transfer routine (b) transfers the routines (c) to (e) from the controller to the internal RAM (or external memory). The routines are copied into the internal RAM here.)

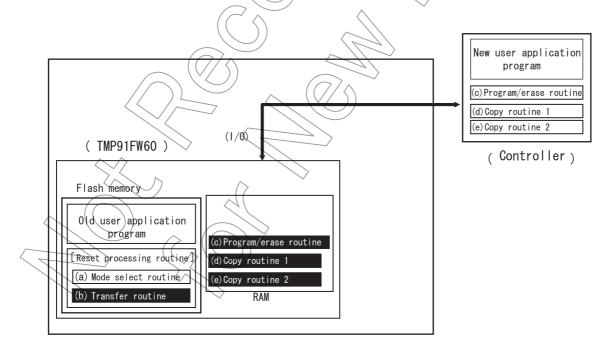

Page 245 2007-10-15

(Step-4) Executing the copy routine 1 in the internal RAM


Control jumps to the internal RAM and the copy routine 1 (d) copies the routines (a) and (b) into the internal RAM.

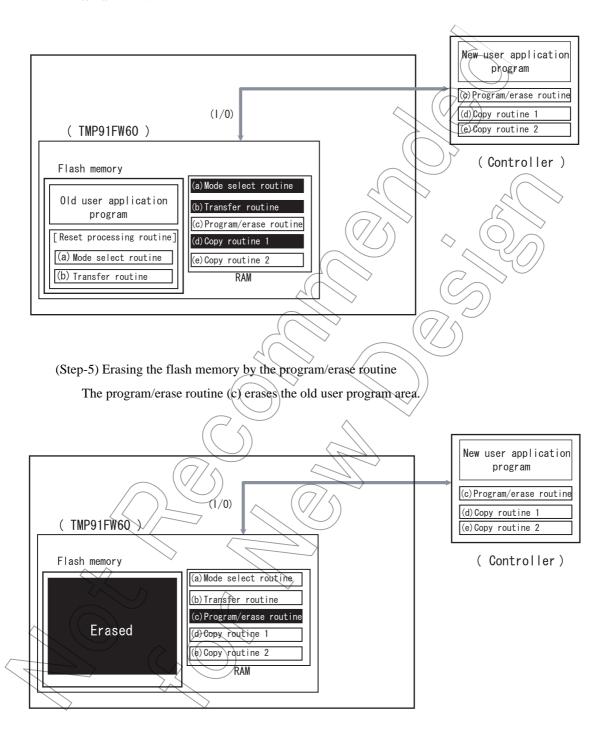

Page 246 2007-10-15


(Step-6) Restoring the user boot program in the flash memory

The copy routine (e) copies the routines (a) and (b) from the internal RAM into the flash memory.

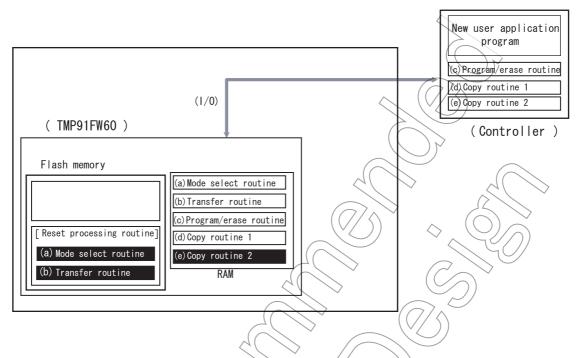

(Step-7) Writing the new user application program to the flash memory


The program/erase routine (c) in the RAM is executed to load the new user application program from the controller into the erased area of the flash memory.

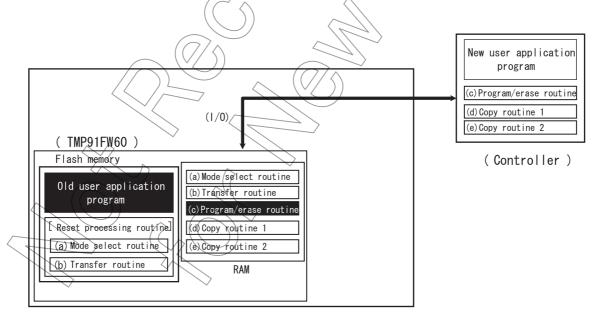

Page 247 2007-10-15

(Step-8) Executing the new user application program

The RESET input pin is driven Low ("0") to reset the device. The mode setting condition is set for Normal mode. After reset release, the device will start executing the new user application program.

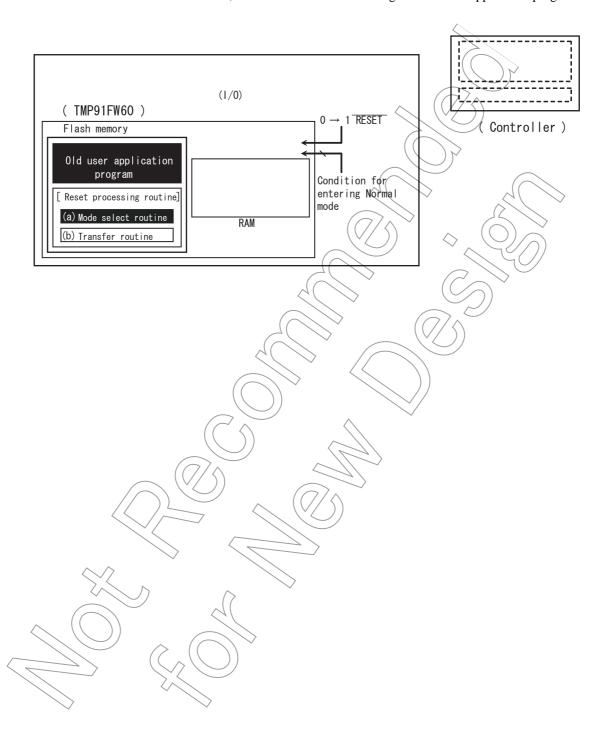

Page 248 2007-10-15

14.6 Flash Memory Command Sequences

The operation of the flash memory is comprised of six commands, as shown in Table 14-20. Addresses specified in each command sequence must be in an area where the flash memory is mapped. For details, see Table 14-3.

Table 14-20 Command Sequences

	Command		Bus Cycle		Bus Cycle		Bus Cycle		Bus Cycle	/ ()	Bus Cycle		Bus Cycle
	Sequence	Addr.	Data	Addr.	Data	Addr.	Data	Addr.	Data	Addr.	Data	Addr.	Data
1	Single Word Program	AAAH	ААН	554H	55H	AAAH	A0H	PA (Note1)	PD (Note1)				
2	Sector Erase (8KB Erase)	AAAH	ААН	554H	55H	AAAH	80H <	АААН	AAH	554H	55H	SA (Note2)	30H
3	Chip Erase (All Erase)	AAAH	ААН	554H	55H	AAAH	80H	AAAH	AAH	554H	55H	АААН	10H
4	Product ID Entry	AAAH	AAH	554H	55H	AAAH	90H				70//		
_	Product ID Exit	xxH	F0H										
5	Product ID Exit	AAAH	AAH	554H	55H	AAAH	F0H			(\mathcal{O})			
6	Read Protect Set	AAAH	ААН	554H	55H	AAAH	A5H	77EH (F0H (Note3))		_	_
6	Write Protect Set	AAAH	ААН	554H	55H	АААН	A5H	77EH	0FH (Note3)				

Note 1: PA = Program Word address, PD = Program Word data

Set the address and data to be programmed. Even-numbered addresses should be specified here.

Note 2: SA = Sector Erase address, Each sector erase range is selected by address A23 to A13.

Note 3: When apply read protect and write protect, be sure to program the data of 00H.

Table 14-21 Hardware Sequence Flags

	Status	D7	D6
	Single Word Program	D7	Toggle
During auto opera-	Sector Erase/Chip Erase	0	Toggle
tion	Read Protect Set/Write Protect Set	Cannot be used	Toggle

Note: D15 to D8 and D5 to D0 are "don't care".

Page 249 2007-10-15

TMP91FW60

14.6.1 Single Word Program

The Single Word Program command sequence programs the flash memory on a word basis. The address and data to be programmed are specified in the 4th bus write cycle. It takes a maximum of 60 us to program a single word. Another command sequence cannot be executed until the write operation has completed. This can be checked by reading the same address in the flash memory repeatedly until the same data is read consecutively. While a write operation is in progress, bit 6 of data is toggled each time it is read.

Note: To rewrite data to Flash memory addresses at which data (including FFFF(1) is already written, make sure to erase the existing data by "sector erase" or "chip erase" before rewriting data.

14.6.2 Sector Erase (8-Kbyte Erase)

The Sector Erase command sequence erases 8 Kbytes of data in the flash memory at a time. The flash memory address range to be erased is specified in the 6th bus write cycle. For the address range of each sector, see Table 14-3. This command sequence cannot be used in Programmer mode.

It takes a maximum of 75 ms to erase 8 Kbytes. Another command sequence cannot be executed until the erase operation has completed. This can be checked by reading the same address in the flash memory repeatedly until the same data is read consecutively. While a erase operation is in progress, bit 6 of data is toggled each time it is read.

14.6.3 Chip Erase (All Erase)

The Chip Erase command sequence erases the entire area of the flash memory.

It takes a maximum of 300 ms to erase the entire flash memory. Another command sequence cannot be executed until the erase operation has completed. This can be checked by reading the same address in the flash memory repeatedly until the same data is read consecutively. While a erase operation is in progress, bit 6 of data is toggled each time it is read.

Erase operations clear data to FFH.

14.6.4 Product ID Entry

When the Product ID Entry command is executed, Product ID mode is entered. In this mode, the vendor ID, flash macro ID, flash size ID, and read/write protect status can be read from the flash memory. In Product ID mode, the data in the flash memory cannot be read.

14.6.5 Product ID Exit

This command sequence is used to exit Product ID mode.

Page 250 2007-10-15

TMP91FW60

14.6.6 Read Protect Set

The Read Protect Set command sequence applies read protection on the flash memory. When read protection is applied, the flash memory cannot be read in Programmer mode and the RAM Transfer command cannot be executed in Single Boot mode.

To cancel read protection, it is necessary to execute the Chip Erase command sequence. To check whether or not read protection is applied, read xxx77EH in Product ID mode. It takes a maximum of 60 us to set read protection on the flash memory. Another command sequence cannot be executed until the read protection setting has completed. This can be checked by reading the same address in the flash memory repeatedly until the same data can be read consecutively. While a read protect operation is in progress, bit 6 of data is toggled each time it is read.

14.6.7 Write Protect Set

The Write Protect Set command sequence applies write protection on the flash memory. When write protection is applied, the flash memory cannot be written to in Programmer mode and the RAM Transfer command cannot be executed in Single Boot mode.

To cancel write protection, it is necessary to execute the Chip Erase command sequence. To check whether or not write protection is applied, read xxx77EH in Product ID mode. It takes a maximum of 60 us to set write protection. Another command sequence cannot be executed until the write protection setting has completed. This can be checked by reading the same address in the flash memory repeatedly until the same data can be read consecutively. While a write protect operation is in progress, bit 6 of data is toggled each time it is read.

14.6.8 Hardware Sequence Flags

The following hardware sequence flags are available to check the auto operation execution status of the flash memory.

1. Data polling (D7)

When data is written to the flash memory, D7 outputs the complement of its programmed data until the write operation has completed. After the write operation has completed, D7 outputs the proper cell data. By reading D7, therefore, the operation status can be checked. While the Sector Erase or Chip Erase command sequence is being executed, D7 outputs "0". After the command sequence is completed, D7 outputs "1" (cell data). Then, the data written to all the bits can be read after waiting for 1 us.

When read/write protection is applied, the data polling function cannot be used. Instead, use the toggle bit (D6) to check the operation status.

Toggle bit (D6)

When the Flash Memory Program, Sector Erase, Chip Erase, Write Protect Set, or Read Protect Set command sequence is executed, bit 6 (D6) of the data read by read operations outputs "0" and "1" alternately each time it is read until the processing of the executed command sequence has completed. The toggle bit (D6) thus provides a software means of checking whether or not the processing of each command sequence has completed. Normally, the same address in the flash memory is read repeatedly until the same data is read successively. The initial read of the toggle bit always returns "1".

Note: The flash memory incorporated in the TMP91FW60 does not have an exceed-time-limit bit (D5). It is therefore necessary to set the data polling time limit and toggle bit polling time limit so that polling can be stopped if the time limit is exceeded.

Page 251 2007-10-15

TOSHIBA TMP91FW60

14.6.9 Data Read

Data is read from the flash memory in byte units or word units. It is not necessary to execute a command sequence to read data from the flash memory.

14.6.10Programming the Flash Memory by the Internal CPU

The internal CPU programs the flash memory by using the command sequences and hardware sequence flags described above. However, since the flash memory cannot be read during auto operation mode, the program/erase routine must be executed outside of the flash memory.

The CPU can program the flash memory either by using Single Boot mode or by using a user-created protocol in Single Chip mode (User Boot).

1. Single Boot:

The microcontroller is started up in Single Boot mode to program the flash memory by the internal boot ROM program. In this mode, the internal boot ROM is mapped to an area including the interrupt vector table, in which the boot ROM program is executed. The flash memory is mapped to an address area different from the boot ROM area. The boot ROM program loads data into the flash memory by serial transfer. In Single Boot mode, interrupts must be disabled including non-maskable interrupts (NMI, etc.).

For details, see " 14.4 Single Boot Mode

2. User Boot:

In this method, the flash memory is programmed by executing a user-created routine in Single Chip mode (normal operation mode). In this mode, the user-created program/erase routine must also be executed outside of the flash memory. It is also necessary to disable interrupts including non-maskable interrupts.


The user should prepare a flash memory program/erase routine (including routines for loading write data and writing the loaded data into the flash memory). In the main program, normal operation is switched to flash memory programming operation to execute the flash memory program/erase routine outside of the flash memory area. For example, the flash memory program/erase routine may be transferred from the flash memory to the internal RAM and executed there or it may be prepared and executed in external memory.

For details, see "14.5 User Boot Mode (in Single Chip Mode) ".

Page 252 2007-10-15


Flowcharts: Flash memory access by the internal CPU

Single Word Program

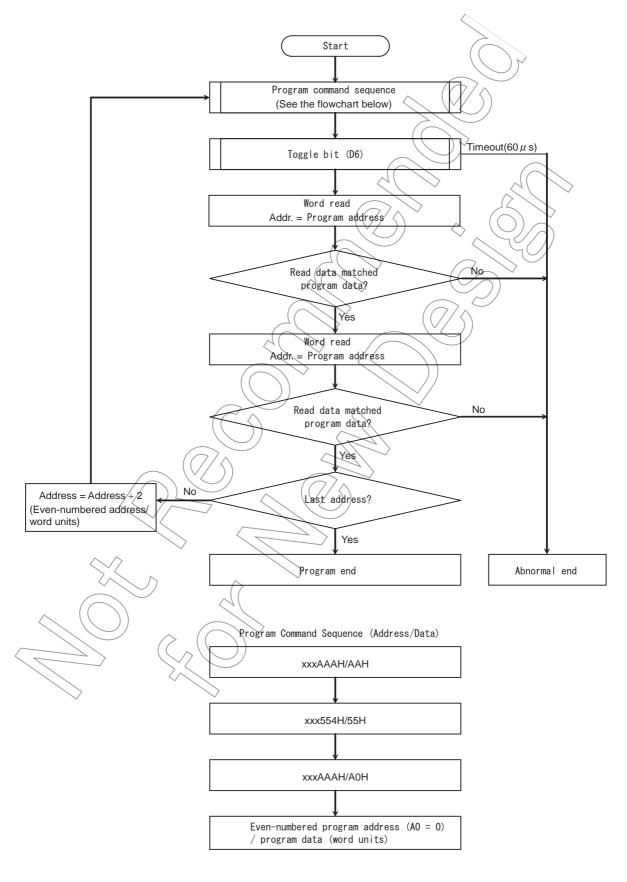


Page 253 2007-10-15

Chip Erase/Sector Erase

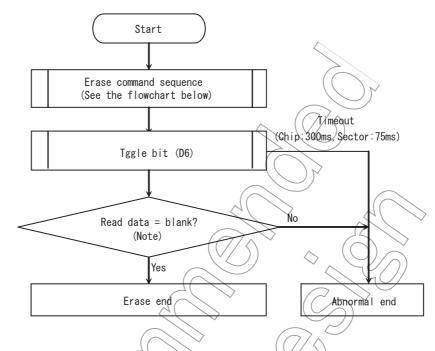


Note: In Chip Erase, whether or not the entire flash memory is blank is checked. In Sector Erase, whether or not the selected sector is blank is checked.

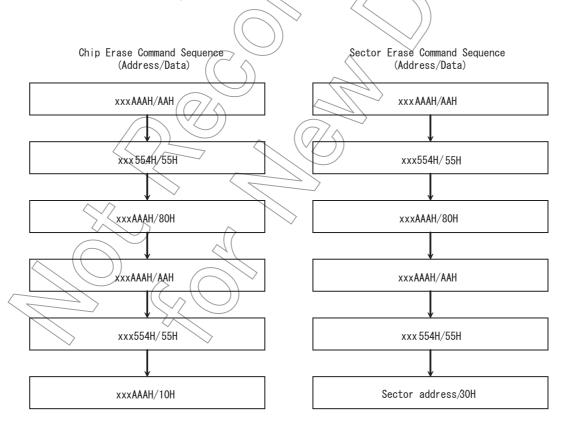


Page 254 2007-10-15

Read/Write Protect Set

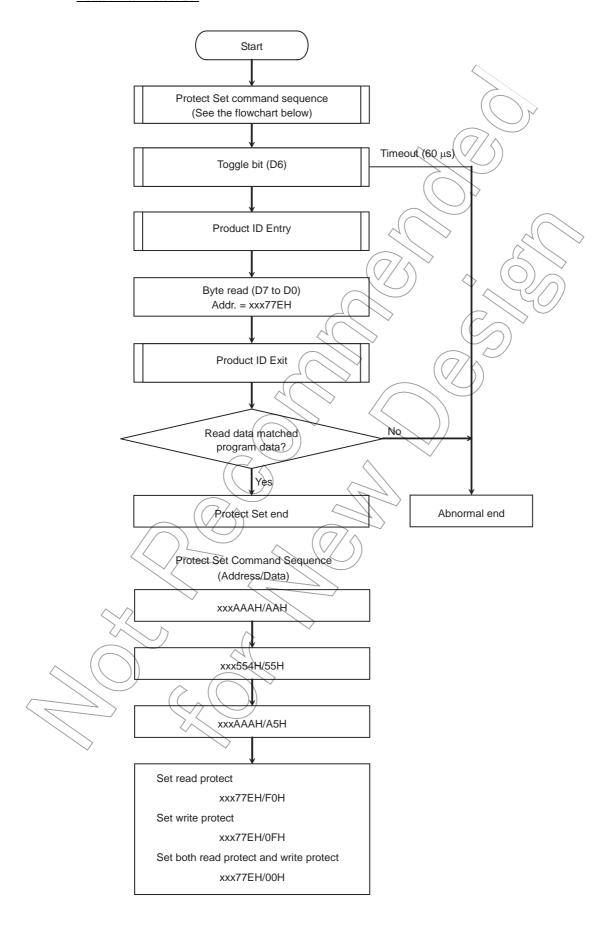

Page 255 2007-10-15

Data Polling (D7)

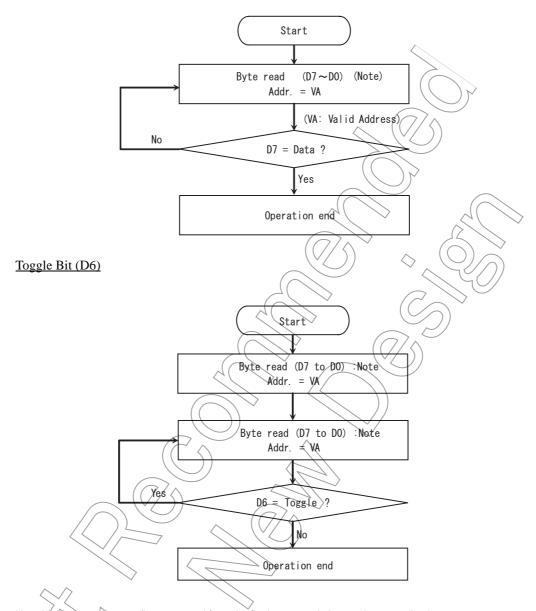

Note: Hardware sequence flags are read from the flash memory in byte units or word units.

VA:In Single Word Program, VA denotes the address to be programmed.

In Sector Erase, VA denotes any address in the selected sector.


In Chip Erase, VA denotes any address in the flash memory.

In Read Protect Set, VA denotes the protect set address (xx77EH).

In Write Protect Set, VA denotes the protect set address (xx77EH).

Page 256 2007-10-15

Product ID Entry

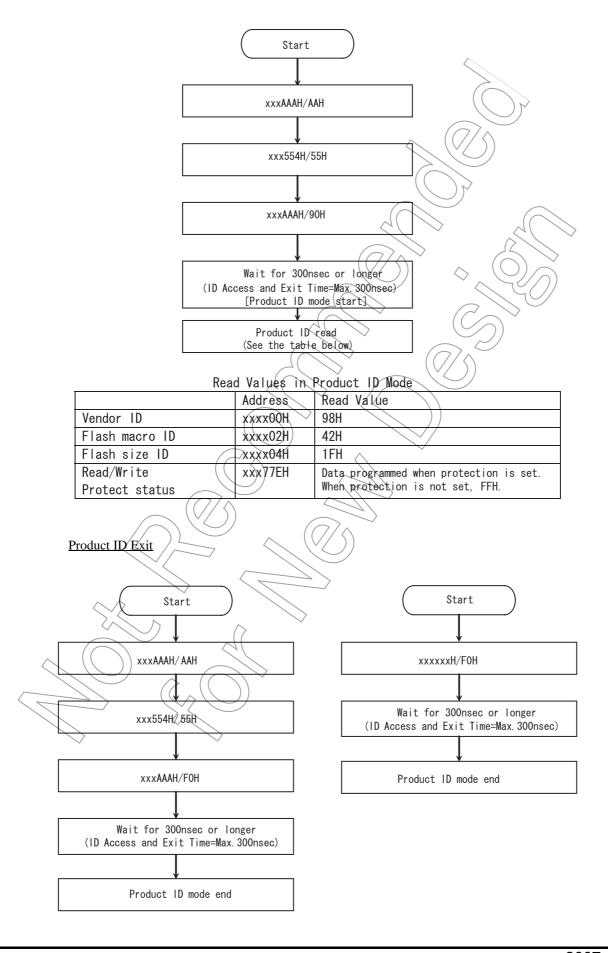

Page 257 2007-10-15

(Example: Program to be loaded and executed in RAM)

Erase the flash memory (chip erase) and then write 0706H to address FE0000H.

;#### Fla	sh memory chip erase processin	g ####
ld	XIX, 0xFE0000	; set start address
CHIPERA	ASE:	
ld	(0xFE0AAA), 0xAA	;1st Bus Write Cycle
ld	(0xFE0554), 0x55	;2nd Bus Write Cycle
ld	(0xFE0AAA), 0x80	;3rd Bus Write Cycle
ld	(0xFE0AAA), 0xAA	;4th Bus Write Cycle
ld	(0xFE0554), 0x55	;5th Bus Write Cycle
ld	(0xFE0AAA), 0x10	;6th Bus Write Cycle
cal	TOGGLECHK	; check toggle bit
CHIPERA	ASE _ LOOP:	
ld	WA, (XIX+)	; read data from flash memory
ср	WA, 0xFFFF	; blank data?
j	ne,CHIPERASE _ ERR	; if not blank data, jump to error processing
ср	XIX, 0xFFFFFF	; end address (0xFFFFFF)?
j	ULT,CHIPERASE _ LOOP	, check entire memory area and then end loop processing
;#### Fla:	sh memory program processing:	; set program address
ld	WA, 0x0706	; set program data
PROGRAM	N:	
ld	(0xFE0AAA), 0xAA	;1st Bus Write Cycle
ld	(0xFE0554), 0x55	;2nd Bus Write Cycle
ld	(0xFEØAAA), 0xA0	;3rd Bus Write Cycle
ld	(XIX), WA	;4th Bus Write Cycle
⟨cal/	TOGGLECHK	; check toggle bit
ld	BC, (XIX)	; read data from flash memory
cb	WA, BC	Your many and data are said a second assessing data and
7/7	ne, PROGRAM ERR	; if programmed data cannot be read, error is determined
Id	BC, (XIX)	; read data from flash memory
⇒ cp j	WA, BC	; if programmed data cannot be read, error is determined
PROGRA	M_END:	
j	PROGRAM_END	; program operation end

Page 258 2007-10-15

;#### Toggle bit (D6) check processing #### TOGGLECHK: ld L, (XIX) L, 0y01000000 and ; check toggle bit (D6) H, L ld ; save first toggle bit data TOGGLECHK1: ld L, (XIX) L, 0y01000000 ; check toggle bit (D6) and L, H ; toggle bit = toggled? z, TOGGLECHK2 ; if not toggled, end processing ; save current toggle bit state ld TOGGLECHK1 ; recheck toggle bit TOGGLECHK2: ret ;#### Error processing #### CHIPERASE _ ERR: CHIPERASE _ ERR ; chip erase error PROGRAM_ERR: ${\tt PROGRAM_ERR}$; program error


Page 259 2007-10-15

(Example: Program to be loaded and executed in RAM)

Erase data at addresses FF0000H to FF1FFFH (sector erase) and then write 0706H to address FF0000H.

;#### Flas	h memory sector erase processi	ng ####
ld	XIX, 0xFF0000	; set start address
SECTORE	RASE:	
ld	(0xFE0AAA), 0xAA	;1st Bus Write Cycle
ld	(0xFE0554), 0x55	;2nd Bus Write Cycle
ld	(0xFE0AAA), 0x80	;3rd Bus Write Cycle
ld	(0xFE0AAA), 0xAA	;4th Bus Write Cycle
ld	(0xFE0554), 0x55	;5th Bus Write Cycle
ld	(XIX), 0x30	;6th Bus Write Cycle
cal	TOGGLECHK	; check toggle bit
SECTORE	RASE _ LOOP:	
ld	WA, (XIX+)	; read data from flash memory
ср	WA, 0xFFFF	; blank data?
j	ne,SECTORERASE _ ERR	; if not blank data, jump to error processing
ср	XIX, 0xFF1FFF	; end address (0xFF1FFF)?
j	ULT,SECTORERASE_LOOP	, check erased sector area and then end loop processing
;#### Flas	h memory program processing #	
ld	XIX, 0xFF0000	; set program address
ld	WA, 0x0706	; set program data
PROGRAM:		
ld	(0xFE0AAA), 0xAA	;1st Bus Write Cycle
ld	(0xFE0554), 0x55	;2nd Bus Write Cycle
ld <	(0xFEØAAA), 0xA0	;3rd Bus Write Cycle
ld	(XIX), WA	;4th Bus Write Cycle
⟨cal/⟩	TOGGLECHK	; check toggle bit
	\searrow	~
ld	BC, (XIX)	; read data from flash memory
(cp)	WA, BC	
1	ne, PROGRAM ERR	; if programmed data cannot be read, error is determined
ld	BC, (XIX)	; read data from flash memory
ср	WA, BC	
√ j	ne, PROGRAM_ERR	; if programmed data cannot be read, error is determined
PROGRAM	Λ_END:	
j	PROGRAM_END	; program operation end

Page 260 2007-10-15

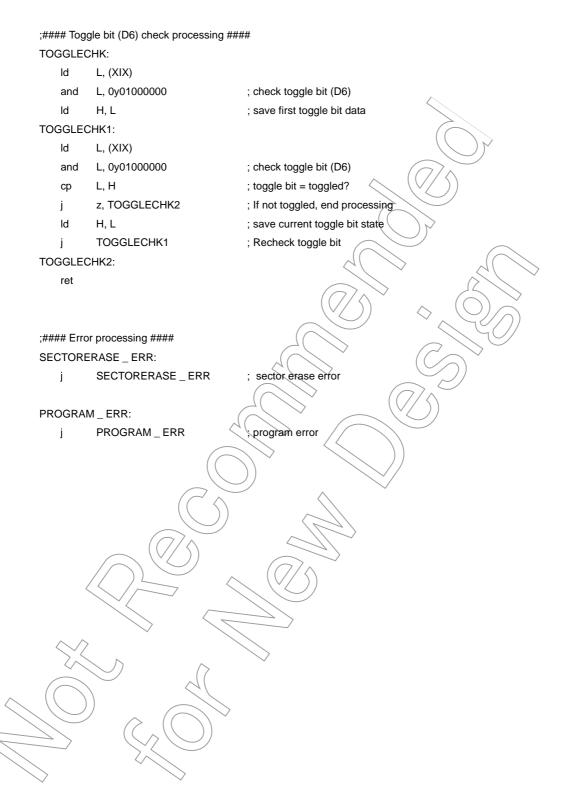

Page 261 2007-10-15

(Example: Program to be loaded and executed in RAM)

Set read protection and write protection on the flash memory.

```
;#### Flash Memory Protect Set processing ####
    ld
           XIX, 0xFE077E
                                          ; set protect address
PROTECT:
    ld
            (0xFE0AAA), 0xAA
                                          :1st Bus Write Cycle
                                          ;2nd Bus Write Cycle
    ld
            (0xFE0554), 0x55
    ld
            (0xFE0AAA), 0xA5
                                          ;3rd Bus Write Cycle
            (XIX), 0x00
                                          ;4th Bus Write Cycle
    ld
           TOGGLECHK
    cal
                                          ; check toggle bit
           PID _ ENTRY
    cal
           A, (XIX)
                                          ; read protected address
    ld
           PID_EXIT
    Ical
    ср
           A, 0x00
                                          ;(0xFE077E)=0x00?
            ne, PROTECT _ ERR
                                          ; protected?
PROTECT _ END:
           PROTECT_END
                                           protect set operation completed
PROTECT _ ERR:
           PROTECT_ERR
                                           protect set error
;#### Product ID Entry processing ####
PID _ ENTRY:
                                          ;1st Bus Write Cycle
            (0xFEQAAA), 0xAA
    ld
            (0xFE0554), 0x55
                                          ;2nd Bus Write Cycle
    ld
           (0xFE0AAA), 0x90
                                           3rd Bus Write Cycle
    ld
; --- wait for 300 nsec or longer (execute NOP instruction [200nsec/@f<sub>FPH</sub>=20MHz] two times) ---
    nop
                                            wait for 400 nsec
    qop
    rét
;#### Product ID Exit processing ####
PID_EXIT:
            (0xFE0000), 0xF0
    ld
                                          ;1st Bus Write Cycle
    wait for 300 nsec or longer (execute NOP instruction [200nsec/@f<sub>FPH</sub>=20MHz] two times) ---
    nop
                                          ; wait for 400 nsec
    nop
    ret
```

Page 262 2007-10-15

;#### Toggle bit (D6) check processing #### TOGGLECHK: ld L, (XIX) L, 0y01000000 and ; check toggle bit (D6) ld H, L ; save first toggle bit data TOGGLECHK1: ld L, (XIX) L, 0y01000000 ; check toggle bit (D6) and L, H ; toggle bit = toggled? z, TOGGLECHK2 ; if not toggled, end processing ; save current toggle bit state ld TOGGLECHK1 ; recheck toggle bit TOGGLECHK2: ret (Example: Program to be loaded and executed in RAM) Read data from address FE0000H. ;#### Flash memory read processing #### READ: read data from flash memory WA, (0xFE0000) ld

Page 263 2007-10-15

15. Electrical Characteristics


15.1 Absolute Maximum Ratings

Parameter	Symbol	Pin name	Rating	Unit
Supply voltage	V _{CC}		-0.5 to 6.0	V V
Input voltage	V _{IN}		-0.5 to V _{CO} + 0.5	V
Output current (Per pin)	I _{OL1}	P5, P6, P96, P97	(2)	mA
Output current (Per pin)	I _{OL2}	P0, P1, P2, P3, P4, P7, P8, P90-P95, PA, PB, PZ	5	mA
Output current (Per pin)	I _{OH1}	P5, P6, P96, P97		mA
Output current (Per pin)	I _{OH2}	P0, P1, P2, P3, P4, P7, P8, P90-P95, PA, PB, PZ	_5	mA
Output current (Total)	ΣI_{OL}		80	mA
Output current (Total)	Σ I _{OH}		⟨≥80	mA
Power dissipation (T _{OPR} = 85°C)	PD		600	mW
Soldering temperature (10 s)	T _{SOLDER}		260	> °C
Storage temperature	T _{STG}		-65 to 150	°C
Operating temperature	T _{OPR}		-40 to 85	°C

Note: Absolute maximum ratings are limiting values of operating and environmental conditions which should not be exceeded under the worst possible conditions. The equipment manufacturer should design so that no absolute maximum rating value is exceeded. Exposure to conditions beyond those listed above may cause permanent damage to the device or affect device reliability, which could increase potential risks of personal injury due to IC blowup and/or burning.

Solderability	$\cap f$	lead	free	products

Test Parameter	Test Condition	Note
Solderability	Use of Sn-37Pb sølder Bath Solder bath temperature 230 °C, Dipping time 5 [s] The number of times One, Use of R-type flux Use of Sn-3.0Ag-0.5 Cu solder Bath Solder bath temperature 245°C, Dipping time 5 [s] The number of times One, Use of R-type flux (use of lead free)	Pass: solderability rate until forming ≥ 95%

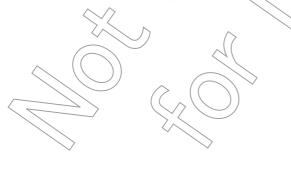

Page 264 2007-10-15

15.2 DC Electrical Characteristics

	Parameter	Symbol	Condition	Min	Тур.	Max	Unit
Power	$ (AV_{CC} = DV_{CC}) $ $ (AV_{SS} = DV_{SS} = 0V) $		fc = 4 to 20 MHz fs = 30 to 34 kHz	4.5		5.5	
supply voltage	for erase/program operations of flash memory $ (AV_{CC} = DV_{CC}) \\ (AV_{SS} = DV_{SS} = 0V) $	V _{CC}	fc = 4 to 20 MHz T _{OPR} = -10 to 40 °C	4.75		〉 5.25	V
	P00 to P17(AD0 to AD15)	V _{IL}	4		(5)	0.8	
Low-level	P20 to P27, PZ0 to PZ3	V _{IL1}				0.3 V _{CC}	
input volt-	RESET, NMI, P30 to PB3	V _{IL2}	V _{CC} = 4.5 to 5.5 V	(-0.3)	>	0.25 V _{CC}	V
age	AMO, AM1	V _{IL3}				0.3	
	X1	V_{IL4}	4			0.2 V _{CC}	
	P00 to P17(AD0 to AD15)	V _{IH}		2.2			
High-level	P20 to P27, PZ0 to PZ3	V _{IH1}	$(\langle // $	0.7 V _{CC} /			
input volt-	RESET, NMI, P30 to PB3	V _{IH2}	V _{CC} = 4.5 to 5.5 V	0.75 V _{CC}		V _{9C} + 0.3	V
age	AM0, AM1	V _{IH3}		V _{CC} - 0.3			
	X1	V _{IH4}	4()	0.8 V _{CO}	$\langle \hat{n} \rangle$		
Low-level o	utput voltage	V _{OL}	I _{OL} = 1.6 mA (V _{CC} = 4.5 to 5.5 V)			0.45	٧
High-level o	utput voltage	V _{OH}	$V_{OC} = 4.5 \text{ to } 5.5 \text{ V}$ $V_{CC} = 4.5 \text{ to } 5.5 \text{ V}$ $V_{OC} = 4.5 \text{ to } 5.5 \text{ V}$	2.4	/		V
Input leakaç	ge current	PLI A	0.0 ≤ V _{IN} ≤ V _{CC}	<u></u>	0.02	± 5	
Output leak	age current	$\left(I_{LO} \right)$	$0.2 \le V_{IN} \le V_{CC} - 0.2$		0.05	± 10	μА
Power down (while RAM	n voltage is being backed up in STOP mode	VSTOP	$V_{IL2} = 0.2 V_{CG}$ $V_{IH2} = 0.8 V_{CC}$	2.0		5.5	V
RESET pull	-up resistor	R _{RST}	V _{CC} = 4.5 to 5.5 V	50		230	kΩ
Pin capacita	ance	C _{IO}	fc = 1 MHz			10	pF
Schmitt wid		V _{TH}	V _{CC} = 4.5 to 5.5 V	0.4	1.0		٧
Programma	ble pull-up resistor	RKH	$V_{CC} = 4.5 \text{ to } 5.5 \text{ V}$	50		230	kΩ
NORMAL (N	Note 2)	\wedge	V AFto FFV		25	35	
IDLE2		A($V_{CC} = 4.5 \text{ to } 5.5 \text{ V}$ fc = 20 MHz		8	15	mA
IDLE1					3.5	8	
SLOW (Not	e 2)	Co	$V_{CC} = 4.5 \text{ to } 5.5 \text{ V}$ $fs = 32.768 \text{ kHz}$		80	100	μА
			T _{OPR} ≤ 50°C			10	
STOP	\rightarrow	>	$T_{OPR} \le 70^{\circ}C$ $V_{CC} = 4.5 \text{ to}$ 5.5 V		0.5	25	μΑ
			T _{OPR} ≤ 85°C			50	
Peak currer	at for Intermittent operation (Note 3,4)	I _{DDP-P}	V _{DD} = 5.5 V	-	20	_	mA


Note 1: Typical values show those at $T_{OPR} = 25^{\circ}C$ and VDD = 5~V.

Page 265 2007-10-15

Note 2: I_{CC} measurement conditions (NORMAL, SLOW): All functions are operational; output pins are open and input pins are level fixed. Data and address bus CL = 30 pF loaded.

Note 3: When a program is executing in the flash memory or when data is being read from the flash memory, the flash memory operates in an intermittent manner, causing peak currents in the operation current, as shown in Figure 15-1. In this case, the supply current I_{CC} (in NORMAL and SLOW modes) is defined as the sum of the average peak current and MCU current.

Note 4: When designing the power supply, make sure that peak currents can be supplied. In SLOW1 mode, the difference between the peak current and the average current becomes large.

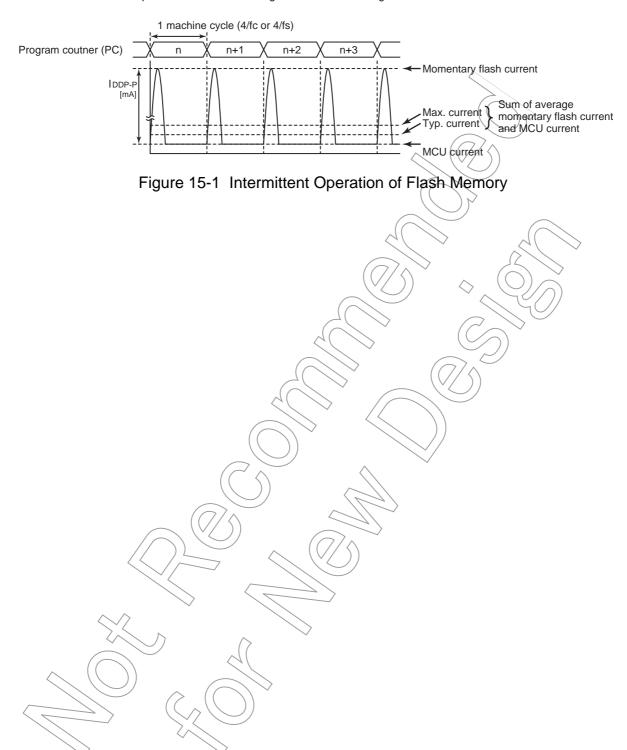

Page 266 2007-10-15

15.3 AC Characteristics

15.3.1 $V_{CC} = 5.0 \text{ V} \pm 10\%$

		1					
No.	Parameter	Symbol		able		20MHz	Unit
			Min	Max	(Min	Max	
1	f _{FPH} period (= x)	t _{FPH}	50.0	31250	50.0	/	ns
2	A0 to A15 valid → ALE falling	t _{AL}	0.5 x –15		/ 10		ns
3	ALE falling → A0 to A15 hold	t_{LA}	0.5 x –15		10		ns
4	ALE high pulse width	t _{LL}	x –20		30		ns
5	ALE falling $\rightarrow \overline{\text{RD/WR}}$ falling	t _{LC}	0.5 x -20		5		ns
6	\overline{RD} rising $ o$ ALE rising	t _{CLR}	0.5 x 15	\rightarrow	10	7(//	ns
7	$\overline{ m WR}$ rising $ ightarrow$ ALE rising	t _{CLW}	x-15	/>	35		ns
8	A0 to A15 valid \rightarrow $\overline{\text{RD/WR}}$ falling	t _{ACL}	x -25) <	> 25		ns
9	A0 to A21 valid \rightarrow $\overline{\text{RD}}/\overline{\text{WR}}$ falling	t _{ACH}	1.5 x -50		25		ns
10	$\overline{\text{RD}}$ rising \longrightarrow A0 to A21 hold	t¢AR	0.5 x –20		5	7	ns
11	$\overline{ m WR}$ rising $ ightarrow$ A0 to A21 hold	tCAW	x –20		30		ns
12	A0 to A15 valid → D0 to D15 input	(t _{ADL})	_	3.0 x -45	\bigcirc	105	ns
13	A0 to A21 valid → D0 to D15 input	tadh		3.5 x -35		140	ns
14	RD falling → D0 to D15 input	\rightarrow t_RD		2.0 x +40		60	ns
15	RD low pulse width	t _{RR}	2.0x -20	$\searrow/$	80		ns
16	\overline{RD} rising \rightarrow D0 to D15 hold	t _{HR}		>	0		ns
17	RD rising → A0 to A15 output	t _{RAE}	x-15		35		ns
18	WR low pulse width	tww	1.5x -20		55		ns
19	D0 to D15 valid → WR rising	t _{DW}	1.5x -50		25		ns
20	WR rising → D0 to Ø15 hold	twp	x -15		35		ns
21	A0 to A23 valid to WAIT input ((1+N) WAIT mode)	t _{AWH}		3.5x - 90		85	ns
22	A0 to A15 valid to WAIT input ((1+N) WAIT mode)	t _{AW}		3.0x - 80		70	ns
23	WAIT hold after RD/WR asserted((1+N) WAIT mode)	t _{CW}	2.0x + 0		100		ns
24	A0 to A21 valid Port/input	√ t _{APH}		3.5x -120		55	ns
25	A0 to A21 valid Port hold	t _{APH2}	3.5x		175		ns
26	A0 to A21 valid Port valid	t _{AP}		3.5x + 100		275	ns

AC measuring conditions


• Output level: High $0.7V_{CC}/Low 0.3V_{CC}$, CL = 50 pF

• Input level:High $0.9 V_{CC}/Low \ 0.1 V_{CC}$


Note: Symbol "x" in the above table means the period of clock "f_{FPH}", it's half period of the system clock "f_{SYS}" for CPU core. The period of f_{FPH} depends on the clock gear setting or the selection of high-/low-oscillator frequency.

Page 267 2007-10-15

15.3.2 Read cycle

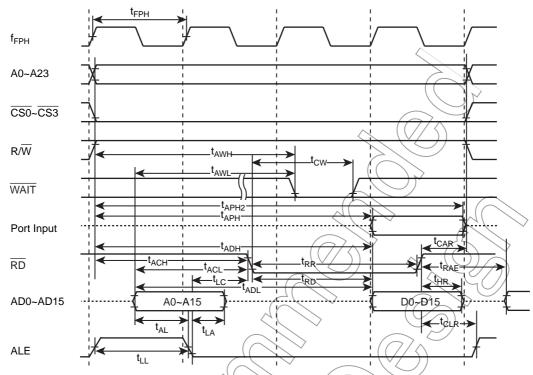


Note: Since the CPU accesses the internal area to read data from a port, the control signals of external pins such as RD and CS are not enabled. Therefore, the above waveform diagram should be regarded as depicting internal operation. Please also note that the timing and AC characteristics of port input/output shown above are typical representation. For details, contact your local Toshiba sales representative.

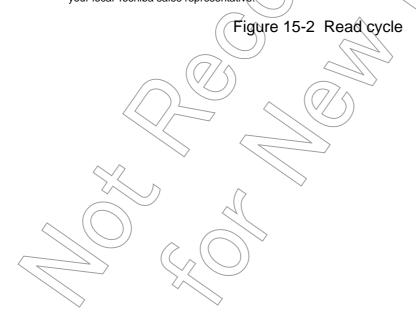


Page 268 2007-10-15

15.3.3 Write cycle

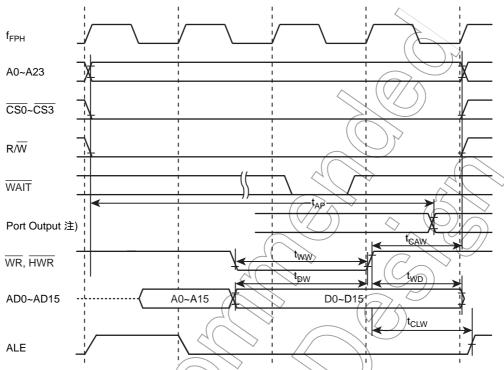

Note: Since the CPU accesses the internal area to write data to a port, the control signals of external pins such as WA and CS are not enabled. Therefore, the waveform diagram should be regarded as depicting internal operation. Please also note that the timing and AC characteristics of port input/output shown above are typical representation. For details, contact your local Toshiba sales representative.

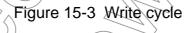



15.4 AD Conversion Characteristics

 $\mathsf{AV}_\mathsf{CC} = \mathsf{V}_\mathsf{CC}, \, \mathsf{AV}_\mathsf{SS} = \mathsf{V}_\mathsf{SS}$

Parameter	Symbol	Variable	Min	Тур.	Max	Unit
Analog reference voltage (+)	V_{REFH}		V _{CC} – 1.5 V	Vçc	V _{CC}	V
Analog reference voltage (-)	A _{VSS}		V _{SS}	Vss	V _{SS} + 0.2 V	V
Analog input voltage range	V _{AIN}		A _{VSS}		V _{REFH}	V
Analog current for analog reference voltage	I _{REF} (A _{VSS} = 0 V)	V _{CC} = 4.5 to 5.5 V		7.44	2.00	mA
<vrefon> = 0</vrefon>				0.02	5.0	μΑ
Error (Not including quantizing errors)	=			± 1.0	± 4.0	LSB

Note 1: $1LSB = (V_{REFH} - A_{VSS})/1024 [V]$

Note 2: The operation above is guaranteed for $f_{\mbox{\scriptsize FPH}} \geq 4$ MHz.

Note 3: The value for I_{CC} includes the current which flows through the A_{CC} pin.

Page 270 2007-10-15

15.5 Serial Channel Timing (I/O internal mode)

15.5.1 SCLK input mode

						1 N			
Parameter	Symbol	Variable	Variable			20 MHz 16 MHz			
raianietei	Symbol	Min	Max	Min (/Max	Min	Max	Unit	
SCLK period	t _{SCY}	16x		800		1000		ns	
Output data → SCLK rising/falling edge*	toss	$t_{SCY}/2 - 4x - 85$ ($V_{CC} = 5V \pm 10\%$)		115	\wedge	165		ns	
SCLK rising/falling edge* \rightarrow Output data hold	tons	$t_{SCY}/2 + 2x + 0$		500		625	//	ns	
SCLK rising/falling edge* → Input data hold	t _{HSR}	3x + 10		160		198		ns	
SCLK rising/falling edge* → Valid data input*	t _{SRD}		tscy-0	>	800	5	<u></u>	ns	
Valid data input → SCLK rising/falling edge*	t _{RDS}	0		0 <	> (ns	

Note: Symbol "x" in the above table means the period of clock "f_{FPH}", it's half period of the system clock "f_{SYS}" for CPU core. The period of f_{FPH} depends on the clock gear setting or the selection of high-/low-oscillator frequency.


15.5.2 SCLK output mode

Parameter	Symbol	Variable Variable			// 20 MHz		16 MHz	
Falametei	Symbol	Mín	Max	Min	Max	Min	Max	Unit
SCLK period	tscv) 16x	8192x	0.8	410	1.0	512	μS
Output data → SCLK rising/falling edge*	toss	t _{SCY} /2 – 40	164)	360		460		ns
SCLK rising/falling edge* → Output data hold	tons	t _{SCY} /2 - 40		360		460		ns
SCLK rising/falling edge* → Input data hold	tHSR	Q (V)		0		0		ns
SCLK rising/falling edge* → Valid data input	t _{SRD}		t _{SCY} – 1x – 90		660		847	ns
Valid data input → SCLK rising/falling edge*	t _{RDS}	1x +90		140		153		ns

Note 1: *: SCLK rising/falling edge: The rising edge is used in SCLK rising mode. The falling edge is used in SCLK falling mode.

Note 2: 20 MHz and 16 MHz values are calculated from t_{SCY} = 16x case.

Note 3: Symbol "x" in the above table means the period of clock "f_{FPH}", it's half period of the system clock "f_{SYS}" for CPU core. The period of f_{FPH} depends on the clock gear setting or the selection of high-/low-oscillator frequency.

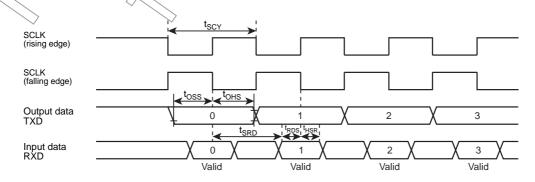

Page 271 2007-10-15

15.6 Event Counter

TA0IN, TA4IN, TB0IN0, TB0IN1, TB1IN0, TB1IN1, TB2IN0, TB2IN1, TB3IN0, TB3IN1, TB4IN0, TB4IN1

Parameter	Symbol	Vari	20	MHz /	16 MHz	Unit	
raiametei	Syllibol	Min	Max	Min	Max	Min Max	Offic
Clock period	t _{VCK}	8x + 100		500		600	ns
Clock low-level width	t _{VCKL}	4x + 40		240))290	ns
Clock high-level width	t _{VCKH}	4x + 40		240		290	ns

Note: Symbol "x" in the above table means the period of clock "f_{FPH}", it's half-period of the system clock "f_{SYS}" for CPU core. The period of f_{FPH} depends on the clock gear setting or the selection of high-/low-oscillator frequency.



Page 272 2007-10-15

15.7 Interrupt and Capture

15.7.1 NMI, INTO interrupts

Parameter	Symbol	Vari	20	MHz	16 MHz		Unit	
Farameter	Symbol	Min	Max	Min	Max (Min 1	Max	Offic
NMI, INT0 low-level width	t _{INTAL}	4x + 40		240		290		ns
NMI, INT0 high-level width	t _{INTAH}	4x + 40		240	(0)	290		ns

Note: Symbol "x" in the above table means the period of clock "f_{FPH}", it's half period of the system clock "f_{SYS}" for CPU core. The period of f_{FPH} depends on the clock gear setting or the selection of high-/low-oscillator frequency.

15.7.2 INT1 to INT10 interrupts, capture

INT1 to INT10 input pulse width depend on the system clock selection and clock selection for prescaler. Below table show pulse width of each operation clock.

				//	_ v	
System Clock Selection	Clock Selection for		TBL v level pulse width)		TBH h/tevel/pulse width)	
SYSCR1	Prescaler SYSCR0 <prck1></prck1>	Variable	f _{FPH} = 20MHz	Variable	f _{FPH} = 20 MHz	Unit
<sysck></sysck>		Min	Min	Min	Min	
0 (fc)	0 (f _{FPH})	8x + 100	500 🗸	8x + 100	500	ns
5 (16)	1 (fc/16)	128xc + 0.1	6.5	128xc + 0.1	6.5	us
1 (fc)	0 (f _{FPH})	8x + 0.1	244.3	8x + 0.1	244.3	us

Note 1: "xc" shows period of clock fc in high frequency oscillator.

Note 2: Symbol "x" in the above table means the period of clock "fpph", it's half period of the system clock "f_{SYS}" for CPU core. The period of f_{FPH} depends on the clock gear setting or the selection of high-/low-oscillator frequency.




15.8 SCOUT Pin AC Characteristics

Parameter	Symbol	Variable		20 MHz		16 MHz		Condition	Unit
Farameter	Symbol	Min	Max	Min	Max	Min	Max	Condition	Offic
Low-level width	t _{SCH}	0.5T – 15		10		16		V _{CC} ≥ 4.5V	ns
High-level width	t _{SCL}	0.5T – 15		10		16	(V _{CC} ≥ 4.5V	ns

Note: T = Period of SCOUT Measuring conditions

Output level: High = 0.7 V_{CC} , Low = 0.3 V_{CC} , CL = 10 pF

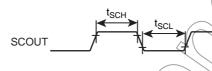

15.9 Flash Characteristics

15.9.1 Write/Retention Characteristics

 $(V_{SS} = 0 V)$


Parameter	Condition	Min	Тур.	Max.	Unit
Number of guaranteed writes to flash memory	$V_{SS} = 0 V$ fc = 4 to 20 MHz $T_{ORR} = -10 \text{ to } 40^{\circ}\text{C}$	_	Ι	100	Times



TMP91FW60

15.10 Recommended Oscillating Conditions

The TMP91FW60 has been evaluated by the oscillator vender below. Use this information when selecting external parts.

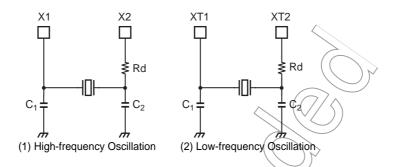

- Note 1: To ensure stable oscillation, the resonator position, load capacitance, etc. must be appropriate. Because these factors are greatly affected by board patterns, please be sure to evaluate operation on the board on which the device will actually be mounted.
- Note 2: When using the device (oscillator) in places exposed to high electric fields such as cathode-ray tubes, we recommend electrically shielding the package in order to maintain normal operating condition.
- Note 3: The product numbers and specifications of the resonators by Murata Manufacturing Co., Ltd. are subject to change. For up-to-date information, please refer to the following URL: http://www.murata.co.jp/search/index.html




Page 275 2007-10-15

TOSHIBA TMP91FW60

16. Table of SFR's

The special function registers (SFRs) include the I/O ports and peripheral control registers allocated to the 4-Kbyte address space from 000000H to 000FFFH.

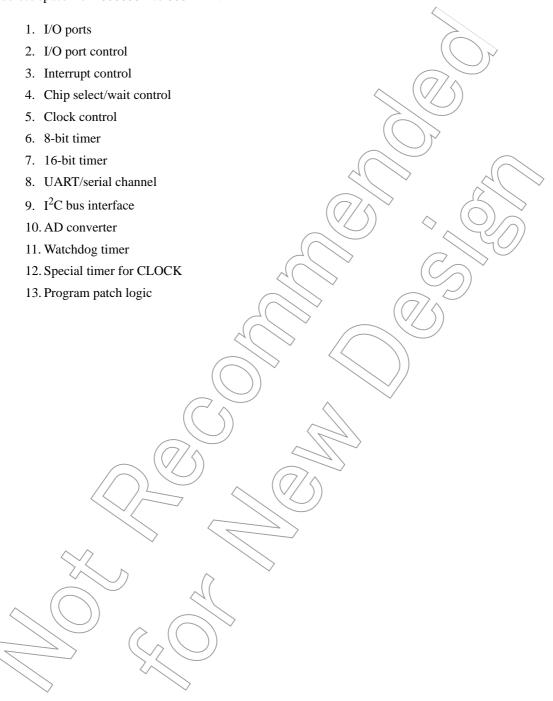

Page 276 2007-10-15

Table 16-1 SFR Address Map (PORT, INTC, CS/WAIT)

[1]PORT

[1]PORT							
Address	Name		Address	Name		Address	Name
0000H 1H 2H 3H 4H 5H 6H 7H 8H 9H AH BH CH DH EH FH	P0 P1 P0CR P1CR P1FC P2 P2CR P2FC P3 P3FC2 P3CR P3FC2		0010H 1H 2H 3H 4H 5H 6H 7H 8H 9H AH BH CH DH EH FH	P4 P4FC2 P4CR P4FC P5 P5CR P5FC P6 P6CR P6FC P7 P7CR P7FC		0020 0020 0020 0020 0020 0020 0020 002	PBFC2 PBCR
						[2]INTC	>
Address	Name	Ī	Address	Name		Address	Name
0030H 1H		•	0070H			0080H 1H	DMA0V DMA1V
2H			∠ (2H)			2H	DMA2V
3H 4H			3H. 4H			3H 4H	DMA3V
5H			(5H		\langle / \rangle	/ 4FI 5H	
6H			6H	^	\	6H	
7H		((7H			7H	INTOLD
8H 9H			9H			8H 9H	INTCLR DMAR
AH	((7/4)	AH			AH	DMAB
BH		\mathcal{L}	BH			BH	
CH DH	(() _	$\overline{}$	CH(PZ)		CH DH	IIMC
EH			EH	PZCR		EH	
FH	ODE		FH	PZFC		FH	
	\/\	· · ·					
	Z/\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\		\wedge	,		[3]CS/WAIT	
Address	Name	4	Address	Name		Address	Name
Q090H	INTEGAD		00A0H	INTETB4VRTC		00C0H	B0CS
4H	INTE12		1H	INTESO		1H	B1CS
2H 3H	INTE34 INTE56	> \	2H 3H	INTES1 INTES2		2H 3H	B2CS B3CS
4H	INTE78		4H	INTESBI01		4H	2000
5H	INTE910		5H	INTETC01		5H	
6H	INTETA01		6H	INTETC23		6H	DEVCS
7H 8H	INTETA23 INTETA45		7H 8H			7H 8H	
9H	INTETB0		9H			9H	
AH	INTETB1		AH			AH	
BH	INTETB2		BH CH			BH CH	MAMR1
CH DH	INTETB3 INTETB4		CH DH			DH	MSAR2 MAMR2
EH	INTETB01V		EH			EH	MSAR3
FH	INTETB23V		FH			FH	MAMR3
		_	·	<u> </u>		·	

Note: Do not access to the unnamed addresses (e.g., addresses to which no register has been allocated).

Page 277 2007-10-15

Table 16-2 SFR Address Map (CGEAR, TMRA, TMRB)

[4] CGEAR					[5] TMRA	
Address	Name	Address	Name		Address	Name
00E0H	SYSCR0	00F0H			< 0100H	TA01RUN
1H	SYSCR1	1H			1H	
2H	SYSCR2	2H			(<u>2</u> H	TA0REG
3H	EMCCR0	3H			3H	TA1REG
4H	EMCCR1	4H			41	TA01MOD
5H 6H		5H 6H			5H 6H	TA1FFCR
7H		7H			7H	
8H		8H			8H	TA23RUN
9H		9H			<i>)</i>	
AH		AH			AH	TA2REG
BH		BH	4		BH	TA3REG
CH		CH			CH	TA23MOD
DH		DH	(7/		ĐH	TA3FFCR
EH FH		EH FH			⟨EH⟩ ⟨FH⟩ ⟨FH⟩ ⟨FH⟩ ⟨FH⟩ ⟨FH⟩ ⟨FH⟩ ⟨FH⟩ ⟨F	
ГП						
		[6] TMRB	4()			
Address	Name	Address	Name		Address	Name
0110H	TA45RUN	0180H	TB0RUN		()) 0190H	TB1RUN
1H		⟨ 1Ĥ			1H	
2H	TA4REG	2H	TB0MOD /		2H	TB1MOD
3H	TA5REG	3H	TB0FFCR),	3H	TB1FFCR
4H 5H	TA45MOD TA5FFCR	4H 5H		$\backslash //$	4H 5H	
6H	1ASI I OK	6H	\wedge	\vee	6H	
7H		7H			7H	
8H		8H	TB0RG0L		8H	TB1RG0L
9H		9H	TB0RG0H		9H	TB1RG0H
AH		√/	TB0RG1L		AH	TB1RG1L
BH		BH	TBORG1H		BH	TB1RG1H
CH		CH	YB0CP0L		CH	TB1CP0L
DH EH	\	DH EH	TB0CP0H TB0CP1L		DH EH	TB1CP0H TB1CP1L
FH		FH	TB0CP1H		FH	TB1CP1L
	` ^		15001 111			TBTOI III
	>	,	>			
	*		1	1 1		
Address	Name	Address	Name		Address	Name
01A0H	TB2RUN	01B0H	TB3RUN		01C0H	TB4RUN
1)H	((^	1H			1H	
2出	TB2MOD	2H	TB3MOD		2H	TB4MOD
3H	TB2FFCR <	3H	TB3FFCR		3H	TB4FFCR
4H 5H		4H 5H			4H 5H	
5П 6Н		5H			эп 6H	
7H		7H			7H	
8H	TB2RG0L	8H	TB3RG0L		8H	TB4RG0L
9H	TB2RG0H	9H	TB3RG0H		9H	TB4RG0H
AH	TB2RG1L	AH	TB3RG1L		AH	TB4RG1L
ВН	TB2RG1H	ВН	TB3RG1H		BH	TB4RG1H
CH	TB2CP0L	CH	TB3CP0L		CH	TB4CP0L
DH	TB2CP0H	DH	TB3CP0H		DH	TB4CP0H
EH FH	TB2CP1L TB2CP1H	EH FH	TB3CP1L TB3CP1H		EH FH	TB4CP1L TB4CP1H
FH	IDZUPIN	l FH	IDSUPIR		FH	1040710

Note: Do not access to the unnamed addresses (e.g., addresses to which no register has been allocated).

Page 278 2007-10-15

Table 16-3 SFR Address Map (UART/SIO, I²C, ADC, WDT, RTC, ROMC)

[7] UART/SIO					[8] I ² C	
Address	Name	Address	Name		Address	Name
0200H	SC0BUF	0210H	SC2BUF		Q240H	SBI0CR1
1H	SC0CR	1H	SC2CR		<u>></u> 1H	SBI0DBR
2H	SC0MOD0	2H	SC2MOD0		(2H	J2C0AR
3H	BR0CR	3H	BR2CR		3H	SBI0CR2/SBI0SR
4H	BR0ADD	4H	BR2ADD		4H	SBI0BR
5H	SC0MOD1	5H	SC2MOD1		(// Ś) 5H	
6H 7H		6H 7H			6H	CDIOCDO
7 H	SC1BUF	8H			7H 8H	SBI0CR0 SBI1CR1
9H	SC1CR	9H			→ 9H	SBI1DBR
AH	SC1MOD0	AH	6		AH	I2C1AR
BH	BR1CR	BH	$\mathcal{A}($		BH/	\$BI1CR2/SBI1SR
CH	BR1ADD	CH			CH)	SBI1BR
DH	SC1MOD1	DH	(\bigcirc)	\rightarrow	DH	
EH		EH)	⟨EH⟩	
FH		FH			FH	SBI1CR0
			7(\)			
[9]10bit ADC		[10] WDT			[1]RTC	
Address	Name	Address	Name		Address	Name
02B0H	ADCCR1	0300H	WDMOD		// 0310H	RTCCR
1H	ADCCR2	(14)	WDCR	\\	() 1H	
2H	ADCDRL	2H			2H	
3H	ADCDRH	3H	· · · · · · · · · · · · · · · · · · ·))	3H	
4H		(\ \\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\		\ //	4H	
5H		5H		\ \	5H	
6H		6H	\wedge		6H	
7H 8H		7H 8H			7H 8H	
9H		9H	(12)		9H	
AH		AH			AH	
BH		ВН			BH	
СН	//) _	ch			СН	
DH		DH			DH	
EH	\'\	EH			EH	
FH		FH			FH	
	$\sim \nearrow$			_		
[12] ROMC	7/		,	1 1		
Address	Name	Address	Name		Address	Name
0400H	ROMCMP00	0410H	ROMCMP20		0420H	ROMCMP40
1H	ROMCMP01	1H	ROMCMP21		1H	ROMCMP41
2H	ROMCMP02	(\)) 2H	ROMCMP22		2H	ROMCMP42
3H		3H			3H	
4H	ROMSUB0L <	4H	ROMSUB2L		4H	ROMSUB4L
5H	ROMSUB0H	5H	ROMSUB2H		5H	ROMSUB4H
6H		6H			6H	
7H	POMCMB40	7H	DOMCMD20		7H	POMOMBEO
8H 9H	ROMCMP10 ROMCMP11	8H 9H	ROMCMP30 ROMCMP31		8H 9H	ROMCMP50 ROMCMP51
9H AH	ROMCMP11	9H AH	ROMCMP31		9H AH	ROMCMP51
BH	NOIVIOIVIF 12	BH	NOWIOWIF 32		ВН	NOWIGINIF 32
CH	ROMSUB1L	CH	ROMSUB3L		CH	ROMSUB5L
DH	ROMSUB1H	DH	ROMSUB3H		DH	ROMSUB5H
EH		EH			EH	
FH		FH			FH	
				ı l		

Note: Do not access to the unnamed addresses (e.g., addresses to which no register has been allocated).

Page 279 2007-10-15

(1) I/O Ports

Symbol	Name	Address	7	6	5	4	3	2	1	0
			P07	P06	P05	P04	P03	P02	P01	P00
P0	Port 0	00H				R	z/W			
				С	ata from exte	rnal port (Outp	out latch regis	ter is undefine	d.)	
			P17	P16	P15	P14	P13	P12	P11	P10
P1	Port 1	01H		ı		R	z/W			
				Da	ta from extern	al port (Outpu	ıt latch registe	r is eleared to	"0".)	
			P27	P26	P25	P24	P23) P22	P21	P20
P2	Port 2	06H		I.		R	W			
				[Data from exte	rnal port (Out	put latch regis	ter is set to "1"	".)	
			_	_	_	-(P33	P32	P31	P30
P3	Dort 2	0CH	_	_	_	4		R	(W)	
P3	Port 3	UCH	-	-	-		> (c	Data from e	external port	"1")
			_		_	(P44)	P43	P42	P41	P40
				_		(1	145 🗸	RW	(/);"	1 40
_	_				7		Dat	a from externa	Lport	
P4	Port 4	10H	-	-	4-/	\supset	(Output la	atch register is	set to "1".)	
			-	- ((-)			register): Pull- register): Pull		
			P57	P56	P55	P54	P53	P52	P51	P50
P5	Port 5	14H				// R	/W.			
					Data from exte	rnal port (Out	put latch regis	ter is set to "1"	".)	
			P67	(P66)	P65	P64	//P63	P62	P61	P60
P6	Port 6	18H		, ,		R	W		L	
)) [Data from exte	rnal port (Out	put latch regis	ster is set to "1"	·.)	
				<u> </u>	P75	P74	P73	P72	P71	P70
P7	Port 7	1CH	(//-	-		1/		_		
				-		Data from exte	ernal port (Out	put latch regis	ter is set to "1	".)
			P87	P86	(P85)	P84	P83	P82	P81	P80
P8	Port 8	20H				R	z/W			
			}	/	ata from exte	rnal port (Ou	tput latch regis	ster is set to "1	".)	
			P97	P96	P95	P94	P93	P92	P91	P90
P9	Port 9	24H			7	R	2/W			
				[Data from exte	rnal port (Out	put latch regis	ter is set to "1"	·.)	
\wedge			-		_	-	PA3	PA2	PA1	PA0
PA	Port A	28H/>	(-	\ \ \ -	-	_		R	W	
(_	-	-	(C	Data from e	external port	"1".)
		√^	//-	_	_	_	PB3	PB2	PB1	PB0
55		2011	_	_	_	_		R	/W	
PB	Port B	2CH	_	_	_	_			external port	
								output latch reg		
			_	-	_	-	PZ3	PZ2	PZ1	PZ0
			_	-	-	-	D		W	
PZ	Port Z	7DH	_	_	-	-	(Output lat	external port ch register is o "1".)	1	1
		7Un					Pull-up re 1 (Output la	esistor OFF etch register): esistor ON	outpu	t mode

Page 280 2007-10-15

(2) I/O Port control

Port Port Control Port	Symbol	Name	Address	7	6	5	4	3	2	1	0
POCK				P07C	P06C	P05C	P04C	P03C	P02C	P01C	P00C
PICR control bloked.) PICR POLIT Control bloked.) POLIT CONTROL CONT		Port 0					,	W			
P1CR	P0CR		tions are pro-	0	0	0	0	0	0	0	0
P1CR Port 1 Control Real P1CR P1CR			hibited.)	0: Input	1: Output (Wi	nen access to	external, bec	ome AD7 to A	00 and this re	gister is clear	ed to "0".)
P1CR PORT 1 control sons are prohibited.) P1FC PORT 1 function see are prohibited.) P2FC PORT 2 control sons are prohibited.) P2FC PORT 2 control sons are prohibited.) P2FC PORT 2 control sons are prohibited.) P2FC PORT 3 control sons are prohibited.) P3FC PORT 3 sontrol			0.411	P17C	P16C	P15C	P14C	P13C	P120	P11C	P10C
P1FC Port 1 First P1FC	D. (O D	Port 1					,	W (7	ı	
P1FC P0f1 1 (RMW instructions are prohibited.) P2FC P26F P	P1CR	control	tions are pro-	0	0	0	0	0))0	0	0
P3FC Part 3 function 2 Part 2 function 2 Part 3 function 2 Part 2 function 2 Part 3 function 2 Part 2 function 2 Part 2 function 3 Part 2 function 4 Part 2 Part 3 function 4 Part 2 function 4 Part 2 Part 3 function 4 Part 2 function 4 Part 2 Part 4 Part			hibited.)			<	<refer col<="" td="" to=""><td>umn of P1FC></td><td>•></td><td>ı</td><td></td></refer>	umn of P1FC>	•>	ı	
P3FC Port 3 (RAW instructions are prohibited.) P2CR Port 2 (Control of P2FC) P2BC P2BC P2BC P2BC P2BC P2BC P2BC P2BC			OELL	P17F	P16F	P15F	P14F	P13F)	P12F	P11F	P10F
P2CR Port 2 (RMM instructions are prohibited.) P2FC Port 3 (RMM instructions are prohibited.) P3FC P3C P3C P3C P3C P3C P3C P3C P3C P3C P3	DAEO	Port 1						W			
P2CR Port 2 control P2CR P	PIFC	function		0	0	0	Sof (0	0 📈	0	0
P2CR Port 2 control (RMW instructions are prohibited.) P2FC Port 2 function P2FC Port 3 (RMW instructions are prohibited.) P3FC Port 3 (RMW instructions are prohibited.) P3FC2 Port 3 (RMW instructions are prohibited.) P3FC3 Port 3 (RMW instructions are prohibited.) P3FC4 Port 3 (RMW instructions are prohibited.) P3FC5 Port 3 (RMW instructions are prohibited.) P3FC6 Port 3 (RMW instructions are prohibited.) P3FC7 Port 3 (RMW instructions are prohibited.) P3FC8 Port 3 (RMW instructions are prohibited.) P3FC9 Port 3 (RMW instructions are prohibited.)			hibited.)		P1FC/	/P1CR = 00: Ir	put, 01: Outp	ut, 10: AD15 t	o AD8, 112A1	5 to A8	
P2CR			∩o⊔	P27C	P26C	P25C	P24C	P23C	P22C	P21C	P20C
P2FC Port 2 function	D2CD	Port 2						w	1	(/))	
P3FC Port 3 function P3FC2 Port 3 Port 3 function 2 Port 3 function	PZCK	control		0	0	0	0	0	07	/ 0	0
P3FC Port 3 function P3FC P3FC P3GC P3GC P3GC P3GC P3GC P3GC P3GC P3G			nibited.)				<refer col<="" td="" to=""><td>umn of P2FC></td><td>**</td><td></td><td></td></refer>	umn of P2FC>	**		
P3FC Port 3 function 1 P3FC Port 3 function 2 P3FC Port 3 function 2 P3FC2 P3C2 P3C2 P3C2 P3C2 P3C2 P3C2 P3C2 P3			09H	P27F	P26F	P25F	P24F	P23F	P22F	P21F	P20F
P3CR Port 3 control P3FC Port 3 function P3FC2 Port 3 function 2 P3FC2 P3FC P3FC P3FC P3FC P3FC P3FC P3FC P3FC	P2FC	Port 2			(($\sim \sim \sim \sim$,	w (<i>(</i>)/<	\		
P3FC P3T 3 control P3FC P3C P3TC P3C P3TC P3C P3TC P3C P3TC P3C P3TC P3T	1210	function		0	9	\ \\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	0) 0	0	0
P3CR Port 3 control (RMW instructions are prohibited.) P3FC Port 3 function 2 P3FC P3FC P3FC P3FC P3FC P3FC P3FC P3FC			Tilbited.)								
P3FC Port 3 (RMW instructions are prohibited.) P3FC Port 3 function 2 P3FC		Port 3	0511	_		> -	\	P33C	P32C	P31C	P30C
P3CR control tions are prohibited.) P3FC Port 3 function 2 P3FC2 P3FC P3FC P3FC P3FC P3FC P3FC P3FC P3FC				-	((-))	_	-//	//	\	N	
P3FC Port 3 function 2 function	P3CR		,	-		-	_	V 0	0	0	0
P3FC Port 3 function P3FC2 Port 3 function 2 P3FC2 P3F			hibited.)	+()) -	- /	\\-				
P3FC Port 3 function						7/2	\longrightarrow		1		1
P3FC Port 3 function P3FC P3FC P3C P				(//	_		<u> </u>	1 001			1 001
P3FC Port 3 function					Α-	(7/4)	_	0	1	ı	0
P3FC Port 3 function (RMW.instructions are prohibited.)			OFH			$\langle \langle \rangle \rangle$				· ·	
P3FC2 Port 3 function 2 function 2 Port 3 function 3 Port 4 function 4 Port 5 function 4 Port 5 function 5 Port 5 function 5 Port 5 function 5 Port 5 function 6 Port 5 functio	P3FC	Port 3	\ \ \ /								
P3FC2 Port 3 function 2 Port 3 function 2 Port 3 function 2 Port 3 function 2 Port 4 port 5 port 6 p	F31 C	function		·					•	5	
P3FC2 Port 3 function 2 (RMW instructions are prohibited.) P3FC2 Port 3 function 2 (RMW instructions are prohibited.) P3FC2 Port 3 function 2 (RMW instructions are prohibited.) P3FC3 Port 3 function 2 (RMW instructions are prohibited.) P3FC4 P30F2			nibited.)	-	-//	-	_				
P3FC2 Port 3 function 2 Port 4 function 2 Port 5		\\\\	\searrow	^		/		-			
P3FC2 Port 3 function 2 Port 5				\sim							
P3FC2 Port 3 function 2 function 3 function	\sim)	_		_	_	_		P31F2	P30F2
P3FC2 Port 3 function 2 Port 4 Port 4 Port 5 P			\rightarrow								
P3FC2 Port 3 function 2 Port 4 P30F2/ P31F/ P30F2/ P31F/ P30F2/ P31F/ P30F2/ P31F/ P30F2/ P31F/ P30F2/ P30F2/ P31F/ P30F2/ P				$\rightarrow \bigcirc$)						
P3FC2 ODH (RMW instructions are prohibited.) P31F/ P30F/ P30C= 000:input port			\\\								
P3FC2 function 2 tions are prohibited.) 000:input port port port 001:output port port 010:TB3IN0			0DH								
hibited.) Tunction 2 tions are prohibited.) Tunction 3 tions are prohibited.) Tunction 4 tions are prohibited.)	P3FC2										
001:output port port 010:ТВЗІМ1 010:ТВЗІМ1 010:ТВЗІМ1		runction 2								•	
010:TB3IN1 010:TB3IN0			,	-	-	_	_	_	_		001:output
										I	
101: SCL0 101: SDA0											

Page 281 2007-10-15


Symbol	Name	Address	7	6	5	4	3	2	1	0
-,			_	_	_	P44C	P43C	P42C	P41C	P40C
	Port 4	12H (RMW instruc-	_	_	_			W		
P4CR	control	tions are pro-	_	_	_	0	0	0	0	0
		hibited.)	_	_	_			to column of I		
			_	_	_	P44F	P43F	P42F	P41F	P40F
		13H	_			1 441	1 401	1421)	1411	1 401
P4FC	Port 4 function	(RMW instruc- tions are pro-				0 /		0	0	0
	Turiotion	hibited.)				0 <	////		-	0
			_	_	_			to column of I	1	D.1050
			_	-	_	-	P43F2	_	P41F2	P40F2
			_	-	-		W	-		N
		11H	-	-	-	4	> 0	- \		0
D4F00	Port 4	(RMW instruc-				P44F,P44C=	P43F2,P43F P43C=	P42F,P42C=	P41F2,P41F , P41C =	P40F2,P40F
P4FC2	function 2	tions are pro-				00: input	000 :input	00: input	, P410 = 000: input	, P40C = 000: input
		hibited.)	_	_		01: output	port	01: output	port	port
i						prort	001:output	port	001: output port	001:output port
						11:ALE	011:CS3	/11:CS2	011:CS1	011: CS0 101: SCOUT
			D==0	D=00	4/	> =====	101:SCLK2		101:TXD2	
		16H	P57C	P56C	P55C	P54C	P53C	P52C	P51C	P50C
P5CR	Port 5 control	(RMW instruc-					w (<u>/ /)</u>)	<u> </u>	
	COILLOI	tions are pro- hibited.)	0	9(0	0		0	0	0
		,			,	(/ .	1: Output		T .	
		,	P57F	P56F	✓ P55F	P54F	P53F	P52F	P51F	P50F
							W/			
P5FC	Port 5 function		9/	0	0 <	0	0	0	0	0
	Turicuon	hibited.)	P57 input	P56 input	P55 input	P54 input	P53 input	P52 input	P51 input	P50 input
			0: disable 1: enable							
			/P67C	P66C	P65Ç	P64C	P63C	P62C	P61C	P60C
		/AH	1076	1 000	(7/4		W 1 03C	1 020	1010	1 000
P6CR	Port 6 control	(RMW instruc- tions are pro-		0				0	0	^
	COMMON	hibited.)	- 0			0	0	0	0	0
			\ 		<u> </u>		1: Output		1	
		•	P67F	P66F	P65F	P64F	P63F	P62F	P61F	P60F
	David O	1BH			>		W		1	
P6FC	Port 6 function	(RMW instruc- tions are pro-	0	0	0	0	0	0	0	0
^	10,000	hibited.)	P67 input	P66 input	P65 input	P64 input	P63 input	P62 input	P61 input	P60 input
			0: disable 1; enable	0: disable 1: enable						
			(-) –	P75C	P74C	P73C	P72C	P71C	P70C
1	D = 4 7	1EH		_				N 1720	0	
P7CR	Port 7 control	(RMW instruc- tions are pro-		_	0	0	0	0	0	0
	7	hibited.)	_		U	U		1: Output	U	U
					DZEC	P74F			D74F	
		1FH	-	_	P75F		-	P72F	P71F	_
P7FC	Port 7	(RMW instruc-	-	-		N	-		N	-
FIFU	function	tions are pro-	_	-	0	0	_	0	0	_
		hibited.)	_	-	0: Port 1: INT0	0: Port 1: TA5OUT	_	0: Port 1: TA3OUT	0: Port 1: TA1OUT	_
					1. 11110	1. 1/2001		1. 1/3001	1. 141001	

Page 282 2007-10-15

Symbol	Name	Address	7	6	5	4	3	2	1	0
-,			P87C	P86C	P85C	P84C	P83C	P82C	P81C	P80C
	Port 8	22H (RMW instruc-					N			
P8CR	control	tions are pro-	0	0	0	0	0	0	0	0
		hibited.)		-			1: Output		-	
			P87F	P86F	P85F	P84F	P83F	P82F	P81F	P80F
		23H					N (
D0E0	Port 8	23FI (RMW instruc-	0	0	0	0 <	60/	() o	0	0
P8FC	function	tions are pro-	· ·		0: port	0: port	7/1		0: port	0: port
		hibited.)	0: port 1: TB1OUT1	0: port 1: TB10UT0	1: TB1IN1,	1: TB1IN0,	0: port 1: TB00UT1	0: port 1: TB0OUT0	1: TB0IN1,	1: TB0IN0,
			1. 1510011	1. 1510010	INT8	INT7	(IBOOGIA)	1. 1500010	INT6	INT5
		26H	P97C	P96C	P95C	P94C	P93C	P92C	P91C	P90C
P9CR	Port 9	(RMW instruc-				1</td <td>N V</td> <td>~~</td> <td></td> <td></td>	N V	~~		
1 0011	control	tions are pro- hibited.)	1	1	0	0) 0	9(2)	0	0
		Tilbited.)				0: Input	1: Output	(\bigcirc)	Ŏ	
			P97F	P96F	P95F		P93F	P92F	Z)}-	P90F
		27H		W		\ <u>\</u>	4	₩, \	<u> </u>	W
P9FC	Port 9	(RMW instruc-	0	0	40	> -	0 ((O .	-	0
	function	tions are pro- hibited.)	Port	Port	_0: port	,	0: port	0: port		0: port
			0: disable 1: enable	0: disable 1: enable	1: SCLK1	_	1. TXD1 / output	1: SCLK0 output	-	1: TXD0 output
			1. Chable	1. criable	output		PA3C	PA2C	PA1C	PA0C
	2AH		_	-		/(- \	TA36		N FAIC	FAUC
PACR	Port A control	(_		-	//-)/0	0	0	0
		hibited.)		$\left\langle \begin{array}{c} - \\ - \\ \end{array} \right\rangle$		_		_	1: Output	U
				\ \ -	_ <	_	PA3F	PA2F	PA1F	PA0F
		0.011))			1 701		N TAIL	1 701
	Port A	2BH (RMW instruc-			2/5		0	0	0	0
PAFC	function	tions are pro-	$\langle // \rangle$	_			U	0	0: port	0: port
		hibited.)			$(0 \rightarrow \wedge$	_	0: port	0:port	1: TB2IN1,	1: TB2IN0,
					(1: TB2OUT1	1: TB2OUT0	INT2	INT1
		2EH	1	 -),	_	PB3C	PB2C	PB1C	PB0C
PBCR	Port B	(RMW instruc-	-		$\langle \cdot \rangle$	_		\	N	
1 DOIX	control	tions are pro- hibited.)	ı	Į	ı	_	0	0	0	0
	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	Tilbited.)	- <	_	/ –	-	<-	<refer colu<="" td="" to=""><td>mn of PBFC2</td><td>>></td></refer>	mn of PBFC2	>>
		2FH	- \(-	_	-	PB3F	PB2F	PB1F	PB0F
PBFC	Port B	(RMW instruc-	-	-	-	-		\	N	
PBFC	function	tions are pro-	(-	▽ -	-	-	0	0	0	0
	7/	hibited.)	\sim) –	-	_	<-	Refer to colu	mn of PBFC2	>>
		>		_	-	-	_	-	PB1F2	PB0F2
		~	1	-	-	-	-	_	\	V
	~		_	_	-	-	-	-	0	0
	D- 15	2DH							PB1F2,PB1	PB0F2,PB0
PBFC2	Port B function 2	(RMW instruc- tions are pro-					PB3F, PB3C =	PB2F, PB2C =	F, PB1C = 000: input	F, PB0C = 000: input
		hibited.)	_	_	_	_	00: input port	00: input port	port 001: output	port 001:output
			_	_	_		01: output	01: output	port	port
							port 11:TB4OUT1	port 11:TB4OUT0	010: TB4IN1 /INT10	010: TB4IN0 /INT9
	1				1				101: SCL1	

Page 283 2007-10-15

Symbol	Name	Address	7	6	5	4	3	2	1	0
PZCR	Port Z control	7EH (RMW instruc- tions are pro- hibited.)	_	-	_	-	PZ3C	PZ2C	_	-
			1	_	ı	-	W		_	-
			-	_	-	-	0	0	_	-
			ı	-	ı	ı	0:Input	1:Output	_	ı
PZFC	Port Z function	7FH (RMW instruc- tions are pro- hibited.)	ı	_	ı	-	PZ3F	PZ2F	PZ1F	PZ0F
			-	W						
			ı	-	ı	- <))0	0	0
			1	1	1	_	0: port 1:R/ W	–0: port 1: HWR	0: port 1: WR	0: port 1: RD
ODE	Open-drain control register	3FH	1	ODEB1	ODEB0	ODE93	ODE90	ODE41	ODE31	ODE30
			-	R/W						
			-	0	0	0/	0	0	\setminus 0 \rightarrow	0
			-	0:-GMOS output 1:Open drain output						

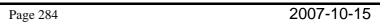

(3) Interrupt control

Symbol	Name	Address	7	6	5	4	3	2	1	0
				IN ⁻	TAD			IN	IT0	
	Interrupt		IADC	IADM2	IADM1	IADM0	IOC /	I0M2	IOM1	IOMO
INTE0AD	enable	90H	R		R/W	•	R		R/W	
	0 & AD		0	0	0	0	0	0	0	0
			1: INTAD		Interrput leve	İ	1: INT0		Interrput level	
				IN	IT2)\\	IT1	
	Interrupt		I2C	I2M2	I2M1	I2M0	110) J1M2	I1M1	I1M0
INTE12	enable	91H	R		R/W		R		R/W	
	2/1		0	0	0	0	(0)	0	0	0
			1: INT2		Interrput leve	i (1:-INT1		Interrput level	
				IN	IT4	M		, I	III.3	
	Interrupt		I4C	I4M2	I4M1	I4M0	I3C	13M2	I3M1	I3M0
INTE34	enable	92H	R		R/W	$((//\wedge$	R		R/W	
	4/3		0	0	0		0 🛇	~ 07	(<u>)</u>)	0
			1: INT4		Interrput leve		1: INT3	7/19	Interrput level	
				IN	IT6			/IN	IT5	
	Interrupt		I6C	I6M2	16M1	√ I6M0	I5C	J5M2	I5M1	I5M0
INTE56	enable	93H	R	(/	R/W	•	(R)		R/W	
	6/5		0	9	9	0) 0	0	0
			1: INT6	4	Interrput leve	1//	1: INT5		Interrput level	
				AF	ĬΤ8			IN	IT7	
	Interrupt		I8C	(I8M2)	I8M1	18M0	//17C	17M2	I7M1	I7M0
INTE78	enable	94H	R		R/W	^	√ R		R/W	
	8/7		6 (\	0	0	0	0	0	0
			1: INT8	<i>)</i>	Interrput leve		1: INT7		Interrput level	
			$(7/\wedge$	IN	T10	1		IN	IT9	
	Interrupt		(100)	I10M2	110M1	110M0	I9C	I9M2	I9M1	I9M0
INTE910	enable	// 95H)	R		(\bar{R/W})		R		R/W	
	10 / 9		0	0	0	0	0	0	0	0
			1: INT10 <		Interrput leve	l	1: INT9		Interrput level	
	^ ^	,		INTTA1	(TMRA1)			INTTA0	(TMRA0)	
	Interrupt		ITA1C	ITA1M2	TA1M1	ITA1M0	ITA0C	ITA0M2	ITA0M1	ITA0M0
INTETA01	enable timer A	96H	R ()		R/W		R		R/W	
^	1/0		0 < 1	0	0	0	0	0	0	0
			1:/INTTA1		Interrput leve	I	1: INTTA0		Interrput level	
			$\langle () \rangle$) INTTA3	(TMRA3)			INTTA2	(TMRA2)	
	Interrupt		ITA3C	ITA3M2	ITA3M1	ITA3M0	ITA2C	ITA2M2	ITA2M1	ITA2M0
INTETA23	enable timer A	97H	R		R/W		R		R/W	
	3/2		Ŏ	0	0	0	0	0	0	0
			1: INTTA3		Interrput leve	I	1: INTTA2		Interrput level	
				INTTA5	(TMRA5)			INTTA4	(TMRA4)	
	Interrupt		ITA5C	ITA5M2	ITA5M1	ITA5M0	ITA4C	ITA4M2	ITA4M1	ITA4M0
INTETA45	enable timer A	98H	R		R/W	-	R		R/W	
	5/4		0	0	0	0	0	0	0	0
			1: INTTA5		Interrput leve	l	1: INTTA4		Interrput level	

Page 285 2007-10-15

Symbol	Name	Address	7	6	5	4	3	2	1	0
5,		71441000	•		(TMRB0)	<u> </u>			(TMRB0)	
	lata musat		ITB01C	ITB01M2	ITB01M1	ITB01M0	ITB00C	ITB00M2	ITB00M1	ITB00M0
INTETB0	Interrupt enable	99H	R		R/W		R		R/W	
	TMRB 0		0	0	0	0	0	0	0	0
			1: INTTB01		Interrput leve	l I	1: INTTB00	7	Interrput leve	l
				INTTB11	(TMRB1)			INTTB10	(TMRB1)	
	Interrupt		ITB11C	ITB11M2	ITB11M1	ITB11M0	ITB100	ITB10M2	ITB10M1	ITB10M0
INTETB1	enable	9AH	R		R/W	•	R		R/W	
	TMRB 1		0	0	0	0	(0)	0	0	0
			1: INTTB11		Interrput leve	I (1:HNTTB10		Interrput leve	I
				INTTB21	(TMRB2)	\mathcal{A}		INTTB20	(TMRB2)	
	Interrupt		ITB21C	ITB21M2	ITB21M1	ITB21M0	ITB20C	ITB20M2	ITB20M1	ITB20M0
INTETB2	enable	9BH	R		R/W	$(7/\Delta)$	× R		R/W	
	TMRB 2		0	0	0	(0)	0 🔷		()	0
			1: INTTB21		Interrput leve		1: INTTB20	7//9	Interrput leve	l
				INTTB31	(TMRB3)			\langle	(TMRB3)	
	Interrupt		ITB31C	ITB31M2	TTB31M1	√ITB31M0	ITB30¢	ITB30M2	ITB30M1	ITB30M0
INTETB3	enable TMRB 3	9CH	R	((R/W >	1	(R)	\	R/W	
	TWIND 3		0	0	0>	0	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\) 0	0	0
			1: INTTB31		Interrput leve		1: INTTB30		Interrput leve	
			ITD 440	$\langle - \rangle$	(TMRB4)	, , , , , , , , , , , , , , , , , , ,	(77.100		(TMRB4)	ITD 40140
	Interrupt	0.001	ITB41C	(ITB41M2	ITB41M1	ITB41M0	ITB40C	ITB40M2	ITB40M1	ITB40M0
INTETB4	enable TMRB 4	9DH	R	^ 0	R/W 0	^ _	∨ R 0	0	R/W 0	0
			1: INTTB41	0	Interrput leve	0	1: INTTB40	0		0
				NTTBOF1(TM	. //	~		NITTROE1/TM	Interrput leve IRB0 over flow	
	Interrupt		(TF1¢)	ITF1M2	/ITF1M1	TF1M0	ITF0C	ITF0M2	ITF0M1	ITF0M0
INTETB01V	enable	9EH)	R	^	(RW\)	111 11010	R	111 01012	R/W	111 01010
	TMRB 0/1 (Over flow)		\supset_0	0		0	0	0	0	0
	(Over now)	//	1: INTTBOF1/		Interrput leve		1:INTTBOF0		Interrput leve	
			ı	NTTBOF3(TM			ı	NTTBOF2(TM	IRB2 over flow	
	Interrupt		ITF3C	ITF3M2	> ITF3M1	ITF3M0	ITF2C	ITF2M2	ITF2M1	ITF2M0
INTETB23V	enable TMRB 2/3	9FH	R ()	`	R/W	<u>I</u>	R		R/W	
	(Over flow)	\	0<1	0	0	0	0	0	0	0
)	1: INTTBOF3	\searrow	Interrput leve	l	1:INTTBOF2		Interrput leve	l
				INT	RTC		I	NTTBOF4(TM	IRB4 over flow	v)
	Interrupt enable		IRTCC	IRTCM2	IRTCM1	IRTCM0	ITF4C	ITF4M2	ITF4M1	ITF4M0
INTETB4VRTC	TMRB4	A0H <	R		R/W	•	R		R/W	
	(Over flow)/ INTRTC		0	0	0	0	0	0	0	0
	MINIO		1: INTRTC		Interrput leve	I	1:INTTBOF4		Interrput leve	I

Page 286 2007-10-15

Symbol	Name	Address	7	6	5	4	3	2	1	0
				INT	TX0			INT	RX0	
	Interrupt		ITX0C	ITX0M2	ITX0M1	ITX0M0	IRX0C	IRX0M2	IRX0M1	IRX0M0
INTES0	enable	A1H	R		R/W		R		R/W	
	serial 0		0	0	0	0	0	0	0	0
			1: INTTX0		Interrput leve		1: INTRX0		Interrput leve	
				INT	TX1			INT	RX1	
	Interrupt		ITX1C	ITX1M2	ITX1M1	ITX1M0 <	IRX10	IRX1M2	IRX1M1	IRX1M0
INTES1	enable	A2H	R		R/W		R		R/W	
	serial 1		0	0	0	0		0	0	0
			1: INTTX1		Interrput leve		1: INTRX1		Interrput leve	
				INT	TX2	M		INT	RX2	
	Interrupt		ITX2C	ITX2M2	ITX2M1	ITX2M0	IRX0C	IRX2M2	IRX2M1	IRX2M0
INTES2	enable	АЗН	R		R/W	$(7/\wedge$	R		R/W	
	serial 2		0	0	0		0 🔷		(<u>)</u> 0	0
			1: INTTX2		Interrput level		1: INTRX2	7//9	Interrput leve	I
				INT	SBI1			INT	SBI0	
	Interrupt		ISBI1C	ISBI1M2	ISBI1M1	VISBI1M0	ISBI0C	ISBI0M2	ISBI0M1	ISBI0M0
INTESBI01	enable	A4H	R		R/W\		(R)		R/W	
	SBI 0/1		0	0	0>	0	(%)) 0	0	0
			1: INTSBI1	4	Interrput leve		1: INTSBIO		Interrput leve	
				JNÍ	TC1			INT	TC0	
	Interrupt		ITC1C	(ITC1M2	ITC1M1	ITC1M0	/ITC0C	ITC0M2	ITC0M1	ITC0M0
INTETC01	enable	A5H	R		R/W	^	√ R		R/W	
	TC 0/1		6		0	0	0	0	0	0
			1: INTC1	<i>)</i>	Interrput leve		1: INTTC0		Interrput leve	I
			$\langle \gamma \rangle \wedge$	INT	TC3			INT	TC2	
	Interrupt		(TC3c)	ITC3M2	ITC3M1	тсзмо	ITC2C	ITC2M2	ITC2M1	ITC2M0
INTETC23	enable	// A6H))R /		(\k/W)		R		R/W	
	TC 2/3			0	0	0	0	0	0	0
	ĺ		1: INTTC3 <		Interrput level		1: INTTC2		Interrput leve	

Page 287 2007-10-15

Symbol	Name	Address	7	6	5	4	3	2	1	0
			_	_	DMA0V5	DMA0V4	DMA0V3	DMA0V2	DMA0V1	DMA0V0
DMA0V	DMA0 Start	80H	_	_			Ŗ.	w		
DIVIAUV	Vector	δυΠ	_	_	0	0	0	> 0	0	0
			-	_			DMA0 st	art vector	>	
			_	_	DMA1V5	DMA1V4	DMA1V3	DMA1V2	DMA1V1	DMA1V0
DMA1V	DMA1 Start	81H	_	_		^	(P	W\		
DIVIATV	Vector	оіп	_	_	0	0	0	<i>)</i>) o	0	0
			_	_			DMA1 st	art vector	•	
			1	_	DMA2V5	DMA2V4	DMA2V3	DMA2V2	DMA2V1	DMA2V
DMA2V	DMA2 Start	82H	_	_			R.	w		
DIVIAZV	Vector	02П	_	_	0	8	0	0		0
			-	_			DMA2 st	art vector		
			1	_	DMA3V5	ØMA3V4	DMA3V3	DMA3V2	DMA3V1	DMA3V(
DMA3V	DMA3 Start	83H	_	_			R	W		
DIVIASV	Vector	0311	-	_	0	0	0 (7 0	0	0
			_	_	4	\rightarrow	DMA3 st	art vector	•	•
		88H	1	- (CLRV5	CLRV4	CLRV3	eLRV2	CLRV1	CLRV0
INTCLR	Interrupt Clear	(RMW instruc-	_	-				ý		
IIVIOLIX	Control	tions are pro- hibited.)	_	9	>0	/0	0	0	0	0
		monod.)	1		\rightarrow		Interrup	ot vector		
	DMA	89H	_	((-))	_	_/	DMAR3	DMAR2	DMAR1	DMAR0
DMAR	Software	(RMW instruc-	-		- /	_ `	<u> </u>	R	/W	
DWITH	Request Register	tions are pro- hibited.)	+(5)-	- <	\\ -	0	0	0	0
	register	Hibited.)		<u> </u>	- /7	1)		1: DMA soft	ware request	
			$(//- \land)$	_	<u> </u>	- /4	DMAB3	DMAB2	DMAB1	DMAB0
DMAB	DMA Burst	8AH)		_	()	_		R	/W	
DIVIA	Register	(),-		-	(E)	_	0	0	0	0
		\\\	_)।	_		1: DMA bu	ırst request	
			-	1		-	-	I0EDGE	IOLE	NMIREE
		,				\	N			
	Interrupt	8CH	0	0	0	0	0	0	0	0
IIMC	input mode control	(RMW instructions are prohibited.)	Always write "0".	<u>\</u>	-	_	-	INT0 EDGE 0: Rising 1: Falling	INT0 mode 0: Edge 1: Level	1:Oper- ates ever on rising/ falling edge of NMI

Page 288 2007-10-15

(4) Chip select / wait control

Symbol	Name	Address	7	6	5	4	3	2	1	0
			B0E	_	B0OM1	В0ОМ0	B0BUS	B0W2	B0W1	B0W0
			W	-			Z	V		
	Block 0	C0H	0	1	0	0	0	0/	0	0
BOCS	CS/WAIT control register	(RMW instructions are prohibited.)	0: Disable 1: Enable	1	Chip select of form selection on: For ROM on: Don't can to: Don't can th: Don't can the can th	//SRAM re re <	Data bus width 0: 16 bits 1: 8 bits	000: 2 WAIT 001: 1 WAIT 010: 1 WAIT 010: 0 WAIT	7 100: T 101: T+N 110:	Reserved 3 WAIT 4 WAIT 8 WAIT
			B1E	ı	B1OM1	B1OM0	B1BUS	B1W2	B1W1	B1W0
			W	_			V	V		
	Block 1	C1H	0	_	0	Q (0	0 (0	0
B1CS	CS/WAIT control register	(RMW instructions are prohibited.)	0: Disable 1: Enable	_	Chip select form selectic 00: For ROM 01: Don't ca 10: Don't ca 11: Don't ca	I/SRAM re re	Data bus width 0: 16 bits 1: 8 bits	Number of v 000: 2 WAIT 001: 1 WAIT 010: 1 WAIT 011: 0 WAIT	100: 101: 110:	Reserved 3 WAIT 4 WAIT 8 WAIT
			B2E	B2M	B2OM1	B2OM0	B2BUS	B2W2	B2W1	B2W0
							W			
	Block 2	C2H	1	0 (0,	0	(())	0	0	0
B2CS	CS/WAIT control register	(RMW instruc- tions are pro- hibited.)	0: Disable 1: Enable	CS2 area selection 0:16Mbyte area 1: CS area	form selection selection form selection selection for the selection selection selection for the selection	re re	Data bus width 0: 16 bits 1: 8 bits	O00: 2 WAIT 000: 2 WAIT 001: 1 WAIT 010: 1 WAIT 011: 0 WAIT	T 100: T 101: T+N 110:	Reserved 3 WAIT 4 WAIT 8 WAIT
			ВЗЕ	\(-	B3OM1	ВЗОМ0	B3BUS	B3W2	B3W1	B3W0
			W	IJ -	1	7/	V	V		
	Block 3	СЗН		_	0	0	0	0	0	0
B3CS	CS/WAIT control register	(RMW instruc- tions are pro- hibited.)	0: Disable 1: Enable		Chip selection on For ROM 01: Don't ca 10: Don't ca	//SRAM re re	Data bus width 0: 16 bits 1: 8 bits	Number of v 000: 2 WAIT 001: 1 WAIT 010: 1 WAIT 011: 0 WAIT	T 100: T 101: T+N 110:	Reserved 3 WAIT 4 WAIT 8 WAIT
			_	-/	> -	_	BEXBUS	BEXW2	BEXW1	BEXW0
		\searrow	- (-		-		\	N	
^	External	С7Н	-41		_	_	0	0	0	0
BEXCS	CS/WAIT control register	(RMW instructions are pro- hibited.)) _	-	-	Data bus width 0: 16 bits 1: 8 bits	Number of v 000: 2 WAIT 001: 1 WAIT 010: 1 WAIT 011: 0 WAIT	T 100: T 101: T+N 110:	Reserved 3 WAIT 4 WAIT 8 WAIT

Page 289 2007-10-15

Symbol	Name	Address	7	6	5	4	3	2	1	0
			S23	S22	S21	S20	S19	S18	S17	S16
MSAR0	Memory	C8H		•	•	R	w.w			
WISARU	address register 0	Соп	1	1	1	1	1	1	1	1
					Dete	rmine A23 to	A16 of start ac	deress		
	Memory		V20	V19	V18	V17	V16	V15	V14~V9	V8
MAMR0	address	C9H				R	xw (
WAWING	mask	0911	1	1	1	1 <	1///))1	1	1
	register 0				Set size of C	S0 area 0	: Used for add	lress compare	!	
			S23	S22	S21	S20	(S19)	S18	S17	S16
MSAR1	Memory address	CAH				R	ww			
WO ATT	register 1	07.11	1	1	1	\d\(\)	1	1		1
				_	Dete	rmine A23 to	A16 of start ac	ddress		
	Memory		V21	V20	V19	(V1/8\)	V17	V16	V15~V9	V8
MAMR1	address	СВН				\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	w 🛇	7	$\langle \cap \rangle$	
	mask register 1	02	1	1	1(1	1	147	<u>//</u> 1	1
	register i				Set size of C	S1 area 0	: Used for add	lress compare	!	
	١		S23	S22	\$21	✓ S20	S19	\$18	S17	S16
MSAR2	Memory address	ССН		. ($\langle \rangle \rangle$		W(7)			
	register 2		1	1	17	1	(1)) 1	1	1
				4	Dete	rmine A23 to	A16 of start ac	ddress	T	
	Memory		V22	V21	V20	V19) V18	V17	V16	V15
MAMR2	address	CDH		(())	ī		w//	ī	1	
	mask register 2		1	, \	1	1	1	1	1	1
	- 3		((Set size of C	. \ \	: Used for add			
	Mamani		S23	//S22	S21	\$20	S19	S18	S17	S16
MSAR3	Memory address	CEH	Q/Δ	1		4/	2/W	1	1	
	register 3		(1)	1		√ 1	1	1	1	1
		(() -			//		A16 of start ac	1	1	
	Memory		√22	V21	V20	V19	V18	V17	V16	V15
MAMR3	address	CFH			~ >	_	2/W	1	<u> </u>	
	mask register 3	·	1	1	1	1	1	1	1	1
					Set size of C	S3 area 0	: Used for add	lress compare	!	

Page 290 2007-10-15

(5) Clock control

Symbol	Name	Address	7	6	5	4	3	2	1	0
			XEN	XTEN	RXEN	RXTEN	RSYSCK	WUEF	PRCK1	-
				I	ı	R/W				-
			1	0	1	0	0	0	0	-
SYSCR0	System clock control register 0	EOH	High- frequency oscillator 0:Stop 1:Oscilla- tion	Low- frequency oscillator 0:Stop 1:Oscilla- tion	High- frequency oscillator (fc) after release of STOP mode 0:Stop 1:Oscilla- tion	Low- frequency oscillator (fs) after release of STOP mode 0:Stop 1:Oscilla- tion	Selects clock after release of STOP mode 0:fc 1:fs	Warm-up timer con- trol 0 Write: Don't care 1 Write: Start warm-up 0 Read: End warm- up 1 Read: Do not end warm-up	Select prescaler clock 0:f _{FPH} 1:fc/16	-
			_	-	-		SYSCK	GEAR2	GEAR2	GEAR2
			_	_	=	\ <u>\</u> -		/	W/	1
			_	_	4(-/	_	0 ((0	0	0
SYSCR1	System clock control register 1	E1H	-		\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	(-	Select system clock 0: fc 1: fs	000:fc 001:fc/2 010:fc/4 011:fc/8 100:fc/16 101:reserve 110:reserve	d	requerity (to)
			f(SCOSEL	WUPTM1	WUPTM0	HALTM1	HALTM0	_	DRVE
				<i>))</i>	1	R/W	•		_	R/W
			\bigcirc	0	1	7	1	1	_	0
SYSCR2	System clock control register 1	E2H	- 4	Select SCOUT 0:fs 1:f _S ys	Select warm oscillator 00:2 ¹⁸ /input quency 01:2 ⁸ /inputt 10:2 ¹⁴ /input quency 11:2 ¹⁶ /input quency	ted fre- ed frequency ted fre-	HALT mode 00:reserved 01:STOP m 10:IDLE1 m 11:IDLE2 m	ode ode	-	Pin state control in STOP mode 0: I/O off 1:Remains the state before HALT
^			PROTECT	-	-	-	-	-	-	-
			R	\triangleright			R/W			
FMCCBo	EMC	F21/	\sim (0)) 0	1	0	0	0	1	1
EMCCR0	control register 0	E3Ĥ	Protect flag 0:OFF 1:ON	Write "0".	Write "1".	Write "0".	Write "0".	Write "0".	Write "1".	Write "1".
EMCCR1	EMC control register 1	E4H					y writing "1FH iting except "1			

Page 291 2007-10-15

(6) 8-bit timer

Symbol	Name	Address	7	6	5	4	3	2	1	0
			TA0RDE	-	-	-	I2TA01	TA01PRUN	TA1RUN	TA0RUN
			R/W	-	-	-	_	R	/W	
	8-bit		0	-	-	-	0	0	0	0
TA01RUN	timer RUN	100H	Double buffer 0: Disable	_	-	_	IDLE2 0: Stop	TMRA01 prescaler 0: Stop-and	Up counter (UC1)	Up counte (UC0)
			1: Enable			^	1: Operate	1: Run (cou		
	8-bit	102H (RMW instruc-					-///			
TA0REG	timer register 0	tions are pro-								
	8-bit	103H								
TA1REG	timer	(RMW instruc- tions are pro-				4/	W	2		
	register 1	hibited.)					Q>	8		
			TA01M1	TA01M0	PWM01	(PWM00)	TA1CLK1	TATCLKO	TA0CLK1	TA0CLK0
						R	/W	17		
	8-bit timer		0	0	9	√ 0	0) ₀	0
TA01MOD	source CLK & mode	104H	Operation m 00: 8-bit time 01: 16-bit time 10: 8-bit PP 11: 8-bit PW	er mode ner mode G mode	PWM cycle 00: Reserve 01: 2 ⁶ 10: 2 ⁷ 11: 2 ⁸		Input clock f 00: TAOTRO 01: \$\overline{\tau}1 10: \$\overline{\tau}16 11: \$\overline{\tau}256		Input clock f 00: TA0IN pi 01: φT1 10: φT4 11: φT16	
			1		<u> </u>	<<-	TA1FFC1	TA1FFC0	TA1FFIE	TA1FFIS
			Ī		-	1		R	W	
	8-bit timer		- (-	-	1	1	0	0
TA1FFCR	frip-flop control	105H		<u>)</u> -	- (00: Invert TA 01: Set TA1 10: Clear TA 11: Don't ca	FF \1FF	TA1FF control for inversion 0: Disable 1: Enable	TA1FF inversion select 0: TMRA0 1: TMRA1

Page 292 2007-10-15

Symbol	Name	Address	7	6	5	4	3	2	1	0
			TA2RDE	_	_	_	I2TA23	TA23PRUN	TA3RUN	TA2RUN
			R/W	_	_	_		R	/W	
	8-bit		0	_	_	_	0	0	0	0
TA23RUN	timer RUN	108H	Double buffer 0: Disable 1: Enable	-	-	-	IDLE2 0: Stop 1: Operate	TMRA23 prescaler 0: Stop and 1/ Run (cou		Up counte (UC2)
	8-bit	10AH					7/4			
TA2REG	timer register 0	(RMW instruc- tions are pro- hibited.)								
TA3REG	8-bit timer	10BH (RMW instruc-					N	A		
	register 1	tions are pro- hibited.)					o>	1		
			TA23M1	TA23M0	PWM21	PWM20	TA3CLK1	TASCLKO	TA2CLK1	TA2CLK
						R	W	17	(
	8-bit timer		0	0	0	>0	0	7 0	0	0
TA23MOD	source CLK & mode	10CH	Operation m 00: 8-bit time 01: 16-bit tine 10: 8-bit PP 11: 8-bit PW	er mode ner mode G mode	PWM cycle 00: Reserve 01: 2 ⁶ 10: 2 ⁷ 11: 2 ⁸		Input clock 1 00: TA2TRC 01: \$T1 10: \$T16 11: \$T256		Input clock f 00: Reserve 01: \phiT1 10: \phiT4 11: \phiT16	
-			_			<<-	TA3FFC1	TA3FFC0	TA3FFIE	TA3FFIS
			-	(-)	_	7	//	R	/W	
	8-bit		-		-	-	1	1	0	0
TA3FFCR	timer frip-flop control	10DH		<u>)</u> -	- 4		00: Invert TA 01: Set TA3 10: Clear TA 11: Don't ca	FF \3FF	TA3FF control for inversion 0: Disable 1: Enable	TA3FF inversion select 0: TMRA2 1: TMRA3

Page 293 2007-10-15

Symbol	Name	Address	7	6	5	4	3	2	1	0
			TA4RDE	-	-	_	I2TA45	TA45PRUN	TA5RUN	TA4RUN
			R/W	_	-	_		R	/W	
	8-bit		0	_	-	_	0	0	0	0
TA45RUN	timer RUN	110H	Double buffer 0: Disable 1: Enable	-	-	-	IDLE2 0: Stop 1: Operate	TMRA45 prescaler 0: Stop and 1/ Run (cou		Up counte (UC4)
	8-bit	112H		<u> </u>	<u> </u>		-//	\rightarrow		
TA4REG	timer register 0	(RMW instruc- tions are pro- hibited.)					W	-/		
	8-bit	113H					-			
TA5REG	timer	(RMW instruc- tions are pro-					W	7		
	register 1	hibited.)					0>	25		
			TA45M1	TA45M0	PWM41	PWM40	TA5CLK1	TA5CLK0	TA4CLK1	TA4CLK0
	8-bit			T			/W	17		
	timer		0	0	0,	>0	0	7 0	0	0
TA45MOD	source CLK & mode	114H	Operation m 00: 8-bit time 01: 16-bit tin 10: 8-bit PPO 11: 8-bit PW	er mode mer mode G mode	PWM cycle 00: Reserve 01: 2 ⁶ 10: 2 ⁷ 11: 2 ⁸	\ /	Input clock 1 00: TA4TRG 01: \(\pi \)T1 10: \(\pi \)T16 11: \(\pi \)T256		Input clock f 00: TA4IN p 01: φT1 10: φT4 11: φT16	
			-		_	<<-	TA5FFC1	TA5FFC0	TA5FFIE	TA5FFIS
			-		_	-		r	/W	
	8-bit timer		-		-	-	1	1	0	0
TA5FFCR	frip-flop control	115H		<u></u>	- 4		00: Invert TA 01: Set TA5 10: Clear TA 11: Don't ca	FF \5FF	TA5FF control for inversion 0: Disable 1: Enable	TA5FF inversion select 0: TMRA4 1: TMRA5
))							

Page 294 2007-10-15

(7) 16-bit timer

TBORUN 16-bit 150H 150	Symbol	Name	Address	7	6	5	4	3	2	1	0
TBORNO TBORNO TBOPFICE TB				TB0RDE	-	_	-	I2TB0	TB0PRUN	-	TB0RUN
TBORUN Infer control 180H Double Buffer Double State Double Sta				R	/W	_	-	R	w	_	R/W
TBOMOD 15-bit Timer steen Timer stee				0	0	_	_	0	0	_	0
TBOMOD 16-bit timer 182H	TB0RUN		180H	Buffer 0: Disable		-	-	0: Stop	prescaler 0: Stop and		
TBOMDD 16-bit timer register 0H 16-bit register 0H 1					TB0ET1	TROCPOL	TROCPM1	TROCPMO)) '		TBOCI KO
TBOMOD 16-bit timer ti							TBOOT WIT	TBOOT WIO		IBOOLKI	TBOCERO
18-0H 18-0							0	(0)		0	0
TBOFFCR 16-bit timer Fright-lop control 183H 1	TB0MOD	timer source CLK &	(RMW instruc- tions are pro-	0: Trigger di 1: Trigger er Invert when UC0 is loaded into	Invert when UC0 matches with	capture control 0: Software capture 1: Unde-	00: Disable INT5 occur 01: TB0IN01 INT5 occur 07 TB0IN01 INT5 occur 11: TA10UT1	s at rising edge TB0IN1↑ s at rising edge TB0IN0↓ s at falling edge TA1OUT↓	control 0: Clear disable 1: Clear	select 00: ΤΒΟΙΝΟ 01: φΤ1 10: φΤ4	
TB0FFCR TB0FFCR TB0FF1				TB0FF1C1	TB0FF1C0	TB0C1T1	TB0C0T1	TB0E171	TB0E0T1	TB0FF0C1	TB0FF0C0
TBOFFC TBOF				V	V*		R	W	(2)	٧	V*
TB0FFCR		16-hit	183⊟	1	1 (9	0	(9)	0	1	1
TBORGOL TBORGOL TBORGOH TBO	TB0FFCR	timer frip-flop	(RMW instruc- tions are pro-	00: Invert 01: Set 10: Clear 11: Don't ca	te	0: Disable 1: Enable Invert when UC0 is loaded into	Invert when UC0 is loaded into	UC0 matches	UC0 matches	00: Invert 01: Set 10: Clear 11: Don't ca	re
TBORGOL TBORGOH TBO		16-bit			$\langle \rangle$			_			
TBORGOH TBORGO	TB0RG0L		,			//	$\overline{}$				
TBORGOH TBORGOH The project of timer register OH TBORGIL TBORGIL TBORGIL TBORGIH TBOCPOL TREGISTER OH TBOCPOL TBOCPOL TREGISTER OH TBOCPOL		register of					Und	efined			
TB0RG1L TB0RG1H TB0RG1H TB0RG1H TB0CP0L TB0C	TB0RG0H	timer	(RMW instruc- tions are pro-				,	W			
TBORG1L timer register 1L tions are prohibited.) TBORG1H TBOCPOL		16-bit		·		<u> </u>		_			
TBORG1H TBORG1H TBOCP0L TBOCP0L TBOCP1L TBOCP1H TBOC	TB0RG1L						,	W			
TBORG1H timer register 1H TBOCPOL TBOC		register 1L		^		7	Und	efined			
TBOCP1L TBOC		16-bjt									
TBOCPOL Capture register OL 18CH R	TB0RG1H	\ \	tions are pro-		<u> </u>						
TBOCPOL TBOC		19.50	hibited.)) ~						
TBOCP0H TBOCP0H TBOCP1L TBOCP1H TBOC	TDOODGI	Capture	40011		/						
TB0CP0H Capture register 0H 18DH —	TBOCPOL	register 0L	18CH //								
TB0CP0H Capture register 0H 18DH R TB0CP1L Capture register 1L 18EH — TB0CP1H Capture register 1L R Undefined TB0CP1H Capture register 1H 18FH R		\searrow		$\overline{}$							
TB0CP1L Capture register 1L 18EH — — TB0CP1H Capture register 1H 18FH R —	TROCPOH	•	18DH								
TB0CP1L Capture register 1L 18EH R TB0CP1H Capture register 1H - TB0CP1H Capture register 1H 18FH	15001 011	register 0H	10011								
TB0CP1L register 1L 18EH R Undefined Undefined Capture register 1H 18FH R											
TB0CP1H	TB0CP1L	•	18EH					R			
TB0CP1H Capture register 1H 18FH R		register TL					Unde	efined			
TBUCP1H register 1H 18FH R								_			
	TB0CP1H		18FH					R			
<u> </u>							Unde	efined			

Page 295 2007-10-15

Symbol	Name	Address	7	6	5	4	3	2	1	0
-			TB1RDE	_	_	_	I2TB1	TB1PRUN	_	TB1RUN
			R	/W	_	_	Ŗ	/W	_	R/W
	16-bit		0	0	-	_	0	0	_	0
TB1RUN	timer control	190H	Double Buffer 0: Disable 1: Enable	Always write 0.	-	-	IDLE2 0: Stop 1: Operate	TMRB1 prescaler 0: Stop and 1/ Run (cour		Up counter (UC1)
			TB1CT1	TB1ET1	TB1CP0I	TB1CPM1	TB1CPM0	TB1CLE	TB1CLK1	TB1CLK0
				/W	W*	15101 1111	15,6. 6.0	R/W	TBTOLKT	TETOLINO
	40.1%		0	0	1	0	(0)	0	0	0
TB1MOD	16-bit timer source CLK & mode	192H (RMW instruc- tions are pro- hibited.)	TB1FF1 involution or Trigger di 1: Trigger er Invert when UC1 is loaded into TB1CP1H/L		Software capture control 0: Software capture 1: Undefined	01: TB1IN01 INT7 occur 10: TB1IN01 INT7 occurs 11: TA10UT1	rs at rising edge TB1IN1↑ s at rising edge TB1IN0↓ s at falling edge	Up counter control 0: Clear disable 1: Clear enable	TMRB1.inpu select 00: TB1IN0 01: \$T1 10: \$T4 11/ \$T16	
			TB1FF1C1	TB1FF1C0	ТВ1С1Т1	TB1C0T1	TB1E171	7B1E0T1	TB1FF0C1	TB1FF0C0
			V	V*		R	w	\mathcal{D}	V	V*
	16-bit	193H	1	1 ((0)	0	(0)	0	1	1
TB1FFCR	timer frip-flop control	(RMW instructions are prohibited.)	TB1FF1 cor 00: Invert 01: Set 10: Clear 11: Don't ca Note: Alway	A C	TB1FF0 inv. 0: Disable 1: Enable Invert when UC1 is loaded into TB1CP1H/L.	Invert when UC1 is loaded into TB1CP0H/L.	Invert when UC1 matches TB1RG1H/L.	Invert when UC1 matches TB1RG0H/L.	TB1FF0 cor 00: Invert 01: Set 10: Clear 11: Don't ca Note: Alway	
	16-bit	198H					-			
TB1RG0L	timer register 0L	(RMW instruc- tions are pro- hibited.)				$\overline{}$	W efined			
TB1RG0H	16-bit timer register 0H	1.99H (RMW instruc- tions are pro- hibited.)	<u>\(\) \</u>				- W efined			
	16-bit	19AH	,				_			
TB1RG1L	timer /	(RMW instruc- tions are pro-				,	W			
	register 1L	hibited.)	_	_	7	Unde	efined			
	16-bit	19BH (RMW instruc-	4				_			
TB1RG1H	timer register 1H	tions are pro-		\			W			
	183.51	hibited.)) ~			efined			
TB1CP0L	Capture	19CH		/			– R			
TBIOI OF	register 0L	19011					efined			
							_			
TB1CP0H	Capture	19DH					R			
	register 0H					Und	efined			
							_			
TB1CP1L	Capture register 1L	19EH					R			
	70g.000 TE					Unde	efined			
	Captura						_			
TB1CP1H	Capture register 1H	19FH					R			
						Unde	efined			

Page 296 2007-10-15

Symbol	Name	Address	7	6	5	4	3	2	1	0
			TB2RDE	_	-	-	I2TB2	TB2PRUN	_	TB2RUN
			R	/W	-	_	R	/W	-	R/W
	16-bit		0	0	-	_	0	0	-	0
TB2RUN	timer control	1A0H	Double Buffer 0: Disable 1: Enable	Always write 0.	-	-	IDLE2 0: Stop 1: Operate	TMRB2 prescaler 0: Stop and 1/ Run (cour		Up counter (UC2)
			TB2CT1	TB2ET1	TB2CP0I	TB2CPM1	TB2CPM0	TB2CLE	TB2CLK1	TB2CLK0
				/W	W*	TBZOT WIT	TB2CI WIO	R/W	IBZCERT	IBZCLIN
	16-bit		0	0	1	0	(0)	0	0	0
TB2MOD	timer source CLK & mode	1A2H (RMW instruc- tions are pro- hibited.)	TB2FF1 invo 0: Trigger di 1: Trigger er Invert when UC2 is loaded into TB2CP1H/L		Software capture control 0: Software capture 1: Undefined	01: TB2IN01 INT1 occur 10: TB2IN01 INT1 occurs 11: TA10UT1	s at rising edge TB2IN1↑ s at rising edge TB2IN0↓ s at falling edge	Up counter control 0: Clear disable 1: Clear enable	TMRB2.inpu select 00: TB2IN0 01: \$T1 10: \$T4 11/ \$T16	
			TB2FF1C1	TB2FF1C0	TB2C1T1	TB2C0T1	TB2E171	TB2E0T1	TB2FF0C1	TB2FF0C0
			V	V*		R	w	$\langle \gamma \rangle$	V	V*
	16-bit	1A3H	1	1 (0	0	(9)	0	1	1
TB2FFCR	timer frip-flop control	(RMW instructions are prohibited.)	TB2FF1 cor 00: Invert 01: Set 10: Clear 11: Don't ca Note: Alway	A C	TB2FF0 involution invertible TB2FF0 involution TB2CP1H/L.	Invert when UC2 is loaded into TB2CP0H/L.	Invert when UC2 matches TB2RG1H/L.	Invert when UC2 matches TB2RG0H/L.	TB2FF0 cor 00: Invert 01: Set 10: Clear 11: Don't ca Note: Alway	
	16-bit	1A8H (RMW instruc-					_			
TB2RG0L	timer register 0L	tions are pro- hibited.)				\rightarrow	W efined			
TB2RG0H	16-bit timer register 0H	1A9H (RMW instruc- tions are pro- hibited.)					- W efined			
	16-bit	1AAH	,		7	,	_			
TB2RG1L	timer	(RMW instruc- tions are pro-				1	W			
	register 1L	hibited.)	^		>	Unde	efined			
	16-bjt	1ABH (RMW instruc-	7				_			
TB2RG1H	timer register 1H	tions are pro-		\rightarrow			W			
~	regioter MI	hibited.)					efined			
TB2CP0L	Capture	1ACH		/			– R			
IBZCFOL	register 0L	IACH (efined			
TB2CP0H	Capture	1ADH					R			
	register 0H					Unde	efined			
	_						_			
TB2CP1L	Capture register 1L	1AEH					R			
	- 9					Unde	efined			
	Capture						_			
TB2CP1H	register 1H	1AFH					R			
						Unde	efined			

Page 297 2007-10-15

Symbol	Name	Address	7	6	5	4	3	2	1	0
			TB3RDE	_	-	-	I2TB3	TB3PRUN	_	TB3RUN
			R	/W	-	-	R	w	_	R/W
	16-bit		0	0	-	-	0	0	-	0
TB3RUN	timer control	1B0H	Double Buffer 0: Disable 1: Enable	Always write 0.	_	-	IDLE2 0: Stop 1: Operate	TMRB3 prescaler 0: Stop and		Up counter (UC3)
				TD05T4	TDOODOL	TDOODIA	2000	12 Run (cou	T	
			TB3CT1	TB3ET1 /W	TB3CP0I W*	TB3CPM1	TB3CPM6	TB3CLE R/W	TB3CLK1	TB3CLK0
			0	0	1	0	(0)	0	0	0
	16-bit	1B2H		ersion trigger	'			U	0	U
TB3MOD	timer source CLK & mode	(RMW instructions are prohibited.)	0: Trigger di 1: Trigger er Invert when UC3 is loaded into TB3CP1H/L	sable	Software capture control 0: Software capture 1: Undefined	01: TB3IN01 INT3 occur 10: TB3IN01 INT3 occurs 11: TA3OUT1	s at rising edge TB3IN1↑ s at rising edge TB3IN0↓ s at falling edge	Up counter control 0: Clear disable 1: Clear enable	TMRB3-inpu select 90: TB3IN0 01: \$T1 10: \$T4 11: \$T16	
			TB3FF1C1	TB3FF1C0	TB3C1T1	TB3C0T1	TB3E1T1	TB3E0T1	TB3FF0C1	TB3FF0C0
			V	V*		R	W		V	V*
	16-bit	1B3H	1	1 (Q	0	(9/<	0	1	1
TB3FFCR	timer frip-flop control	(RMW instruc- tions are pro- hibited.)	TB3FF1 cor 00: Invert 01: Set 10: Clear 11: Don't ca Note: Alway		TB3FF0 involutions of the control of	Invert.when UC3 is loaded into TB3CP0H/L.	Invert when UC3 matches TB3RG1H/L.	Invert when UC3 matches TB3RG0H/L.	TB3FF0 cor 00: Invert 01: Set 10: Clear 11: Don't ca Note: Alway	
	16-bit	1B8H)			_		1	
TB3RG0L	timer	(RMW instruc- tions are pro-			7/		W			
	register 0L	hibited.)				Unde	efined			
TB3RG0H	16-bit timer register 0H	1B9H (RMW instruc- tions are pro- hibited.)				١	- W efined			
	16-bit	1BAH	,				_			
TB3RG1L	timer (\)	(RMW instruc- tions are pro-			_	,	W			
	register 1L	hibited.)	\wedge	>	7	Unde	efined			
	16-bit	1BBH	4				_			
TB3RG1/A	timer	(RMW instruc-				١	W			
	register 1H	hibited.)				Unde	efined			
1			$\langle \rangle \rangle$				-			
TB3CP0L	Capture register 0L	1BCH 🗸 🔿					R			
			\rightarrow			Unde	efined			
	Capture						_			
TB3CP0H	register 0H	1BDH					R			
							efined			
TD	Capture									
TB3CP1L	register 1L	1BEH					R			
							efined			
TDOCDALL	Capture	40511					<u> </u>			
TB3CP1H	register 1H	1BFH					R			
						Unde	efined			

Page 298 2007-10-15

Symbol	Name	Address	7	6	5	4	3	2	1	0
-			TB4RDE	-	-	-	I2TB4	TB4PRUN	-	TB4RUN
			R	/W	_	_	Ŗ	/W	_	R/W
	16-bit		0	0	-	-	0	0	-	0
_	timer control	1C0H	Double Buffer 0: Disable 1: Enable	Always write 0.	-	-	IDLE2 0: Stop 1: Operate	TMRB4 prescaler 0: Stop and		Up counter (UC4)
-			TB4CT1	TB4ET1	TB4CP0I	TB4CPM1	TB4CPM0	1. Run (cour	TB4CLK1	TB4CLK0
				/W	W*	TD4OT WIT	10401 (010	R/W	1 D4OLK1	1B4CERO
	40.1%		0	0	1	0	(0)	0	0	0
TB4MOD	16-bit timer source CLK & mode	1C2H (RMW instruc- tions are pro- hibited.)	TB4FF1 inve 0: Trigger di 1: Trigger er Invert when UC4 is loaded into TB4CP1H/L	sable	Software capture control 0: Software capture 1: Undefined	01: TB4IN01 INT9 occur 10: TB4IN01 - INT9 occurs 11: TA5OUT1	s at rising edge TB4IN1↑ s at rising edge TB4IN0↓ s at falling edge	Up counter control 0: Clear disable 1: Clear enable	TMRB4 inpuselect 00: ΤΒ4ΙΝ0 01: φΤ1 10: φΤ4 11/ φΤ16	
			TB4FF1C1	TB4FF1C0	TB4C1T1	TB4C0T1	TB4E171	TB4E0T1	TB4FF0C1	TB4FF0C0
			V	V*		R	w	$\langle \gamma \rangle$	V	V*
	16-bit	1C3H	1	1 (/	0	0	(9)	0	1	1
TB4FFCR	timer frip-flop control	(RMW instructions are prohibited.)	TB4FF1 con 00: Invert 01: Set 10: Clear 11: Don't ca Note: Alway	te	TB4FF0 invo 0: Disable 1: Enable Invert when UC4 is loaded into TB4CP1H/L.	Invert when UC4 is loaded into TB4CP0H/L.	Invert when UC4 matches TB4RG1H/L.	Invert when UC4 matches TB4RG0H/L.	TB4FF0 cor 00: Invert 01: Set 10: Clear 11: Don't ca Note: Alway	
	16-bit	1C8H					_			
	timer register 0L	(RMW instruc- tions are pro- hibited.)	7/1			\rightarrow	N efined			
TB4RG0H	16-bit timer register 0H	1C9H (RMW instruc- tions are pro- hibited.)					- W efined			
	16-bit	1CAH	,		2		_			
TB4RG1L	timer _	(RMW instruc- tions are pro-				1	N			
	register 1L	hibited.)	^		>	Unde	efined			
	16-bjt	1¢BH	7				_			
()	timer register 1H	(RMW instruc-		<u> </u>			N			
	register HT	hibited.)		\ \			efined			
TD4CD01	Capture	10011	2	/						
TB4CP0L	register 0L	1CCH >					R efined			
	\vee						- -			
I BACPOH	Capture	1CDH					R			
	register 0H						efined			
							_			
I IBACEPTI I	Capture register 1L	1CEH				I	R			
	. Jgioloi IL					Unde	efined			
	Captura						_			
I BACPIH	Capture register 1H	1CFH					R			

Page 299 2007-10-15

(8) UART / Serial channel

Symbol	Name	Address	7	6	5	4	3	2	1	0
	Serial	200H	RB7 / TB7	RB6 / TB6	RB5 / TB5	RB4 / TB4	RB3 / TB3	RB2 / TB2	RB1 / TB1	RB0 / TB0
SC0BUF	channel 0	(RMW instruc- tions are pro-			R	(Receiving) / \	N (Transmissi	ion)		
	buffer	hibited.)				Unde	efined			
			RB8	EVEN	PE	OERR	PERR	FERR	SCLKS	IOC
			R	R	/W	R (Clea	ared to "0" who	en read)	R	W
			Undefined	0	0	0	9) o	0	0
SCOCR	Serial channel 0 control	201H (RMW instruc- tions are pro- hibited.)	Received data bit8	Parity 0: Odd 1: Even	Parity addition 0: Disable 1: Enable	Overrun error flag 0: Unde- tect error 1: Detect error	Parity error flag 0: Unde- tect error 1: Detect error	Framing error flag 0: Undetect error 1: Detect error	Edge selection for SCLK pin (I/O mode) 0: SCLK1 1: SCLK1	I/O inter- face input clock selection 0: Baud rate gener- ator 1: SCLK pin input
			TB8	CTSE	RXE	(wu)	SM1	SMO	SC1	SC0
						R	W	119		
			0	0	0	√ 0	0 (0	0	0
SC0MOD0	Serial channel 0 mode 0	202H	Transmis- sion data bit8	Hand- shake function 0: Disable 1: Enable	Receive function 0: Disable 1: Enable	Wakeup function 0: Disable 1. Enable	Serial transi mode 00: I/O inter 01: 7-bit U/A 10: 8-bit U/A 11: 9-bit U/A	face mode RT mode RT mode	(UART) 00: Timer TA	te generator clock f _{SYS} clock
			-	BR0ADDE	BR0CK1	BR0CK0	BR0S3	BR0S2	BR0S1	BR0S0
					,	R	W			
			6 (5) 0	0 ~	0	0	0	0	0
BR0CR	Baud ratel control	203H	Always write 0.	+ (16 - K)/ 16 division 0: Disable 1: Enable	Input clock; baud rate ge 00: \$T0 01: \$T2 10: \$T8 11: \$T32		Set	ting of the divi	ided frequenc	/ "N"
			- <		1	_	BR0K3	BR0K2	BR0K1	BR0K0
	Serial channel 0	\sim	_		\	-		R	/W	
BR0ADD	K setting	204H	-	-//	> -	_	0	0	0	0
	register		- (_	-	-			ncy divisor "K" I + (16 - K)/16)
\wedge			I2S0	FDPX0	-	-	-	_	_	-
	Serial	$\langle \rangle$	R	W	-	-	ı	_	_	1
SC0MOD1	channel 0	205H	γ	<i>)</i> 0	-	_	_	_	_	ı
	mode 1	\ <u>\</u>	1DLE2 0: Stop 1: Run	Duplex 0: Half 1: Full	_	_	_	-	_	-

Page 300 2007-10-15

Symbol	Name	Address	7	6	5	4	3	2	1	0
	Serial	208H	RB7 / TB7	RB6 / TB6	RB5 / TB5	RB4 / TB4	RB3 / TB3	RB2 / TB2	RB1 / TB1	RB0 / TB0
SC1BUF	channel 1	(RMW instruc-			R	(Receiving) / \	N (Transmissi	ion)	1	
	buffer	tions are pro- hibited.)				Unde	efined			
			RB8	EVEN	PE	OERR	PERR	FERR	SCLKS	IOC
			R	R	/W	R (Clea	ared to "0" who	en read)	R	W
			Undefined	0	0	0	9	0	0	0
SC1CR	Serial channel 1 control	209H (RMW instruc- tions are pro- hibited.)	Received data bit8	Parity 0: Odd 1: Even	Parity addition 0: Disable 1: Enable	Overrun error flag 0: Unde- tect error 1: Detect error	Parity error flag 0: Unde- tect error 1: Detect error	Framing error flag 0: Undetect error 1: Detect error	Edge selection for SCLK pin (I/O mode) 0: SCLK1 1: SCLK1	I/O inter- face input clock selection 0: Baud rate gener- ator 1: SCLK pin input
			TB8	CTSE	RXE	(\wu))	SM1	SMO	SC1	SC0
						R	/W	1/9		
			0	0	0	>>0	0	7 0>	0	0
SC1MOD0	Serial channel 1 mode 0	20AH	Transmission data	Hand- shake function 0: Djsable 1: Enable	Receive function 0: Disable 1: Enable	Wakeup function 0: Disable 1: Enable	Serial transi mode 00: I/O inter 01: 7-bit U/A 10: 8-bit U/A 11: 9-bit U/A	face mode RT mode RT mode	Serial transr (UART) 00: Timer T/ 01: Baud ra 10: Internal 11: External (SCLK in	te generator clock f _{SYS} clock
			_	BR1ADDE	BR1CK1	BR1CK0	BR1S3	BR1S2	BR1S1	BR1S0
						R	W			
			φ (0	0 ~	0	0	0	0	0
BR1CR	Baud ratel control	20BH	Always write "0".	+ (16 - K)/ 16 division 0: Disable 1: Enable	Input clock: baud rate ge 00: \$T0 01: \$T2 10: \$T8 11: \$T32	>	Set	ting of the divi	ded frequenc	/ "N"
			- (<u> </u>	_	BR1K3	BR1K2	BR1K1	BR1K0
	Serial			1		_		R	/W	
BR1ADD	channel 1 K setting	20CH	-	-//	> -	_	0	0	0	0
	register	\searrow	- (_	-	-			ncy divisor "K" I + (16 - K)/16)
\wedge			I2S1	FDPX1	-	-	-	-		-
	Serial	\rightarrow	R	W	_	-	-	-	-	-
SC1MOD1	channel 1	20DH	γ) 0	-	-	-	_	-	-
	mode 1	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	IDLE2 0: Stop 1: Run	Duplex 0: Half 1: Full	_	_	_	_	-	-

Page 301 2007-10-15

Symbol	Name	Address	7	6	5	4	3	2	1	0
	O- vi-l	210H	RB7 / TB7	RB6 / TB6	RB5 / TB5	RB4 / TB4	RB3 / TB3	RB2 / TB2	RB1 / TB1	RB0 / TB0
SC2BUF	Serial channel 2	(RMW instruc-			R	(Receiving) / \	N (Transmissi	on)		
	buffer	tions are pro- hibited.)				Unde	efined			
			RB8	EVEN	PE	OERR	PERR	FERR	SCLKS	IOC
			R	R	/W	R (Clea	ared to "0" who	en read)	R	W
			Undefined	0	0	0	0/	> 0	0	0
SC2CR	Serial channel 2 control	211H (RMW instruc- tions are pro- hibited.)	Received data bit8	Parity 0: Odd 1: Even	Parity addition 0: Disable 1: Enable	Overrun error flag 0: Unde- tect error 1: Detect error	Parity error flag 0: Undetect error 1: Detect error	Framing error flag 0: Undetect error 1: Detect error	Edge selection for SCLK pin (I/O mode) 0: SCLK1	I/O inter- face input clock selection 0: Baud rate gener- ator 1: SCLK pin input
			TB8	CTSE	RXE	(Wu)	SM1	SMO)	SC1	SC0
						R	W	1		
			0	0	0	> 0	0	2 0	0	0
SC2MOD0	Serial channel 2 mode 0	212H	Transmis- sion data bit8	Hand- shake function 0: Djsable 1: Enable	Receive function 0: Disable 1: Enable	Wakeup function 0: Disable 1: Enable	Serial transi mode 00: I/O inter 01: 7-bit U/A 10: 8-bit U/A 11: 9-bit U/A	ace mode RT mode RT mode	Serial transr (UART) 00: Timer TA 01: Baud rat 10: Internal 11: External (SCLK in	te generator clock f _{SYS} clock
			-	BR2ADDE	BR2CK1	BR2CK0	BR2S3	BR2S2	BR2S1	BR2S0
						R	W			
			6 (0	0	0	0	0	0	0
BR2CR	Baud ratel control	213H	Always write "0"	+ (16 - K)/ 16 division 0: Disable 1: Enable	Input clock: baud rate ge 00: \$\phi T0\$ 01: \$\phi T2\$ 10: \$\phi T8\$ 11: \$\phi T32	\ \ \	Set	ting of the divi	ded frequency	/ "N"
			- /			_	BR2K3	BR2K2	BR2K1	BR2K0
	Serial		_	1		_		R	/W	
BR2ADD	channel 2 K setting	214H	-	-//	, -	_	0	0	0	0
	register	\sum	- (_	_	-			ncy divisor "K" I + (16 - K)/16)
\wedge			I2S2	FDPX2	-	-	-	-	_	-
			R	W	-	-	-	-	-	-
SC2MOD1	Serial channel 2	215H	20) o	-	-	-	-	-	-
	mode 1	\hat{\}	IDLE2 0: Stop 1: Run	Duplex 0: Half 1: Full	I	-	-	I	-	-

Page 302 2007-10-15

(9) I²C bus interface

Symbol	Name	Address	7	6	5	4	3	2	1	0
			BC2	BC1	BC0	ACK	-	SCK2	SCK1	SWRMON /SCK0
				W	1	R/W	-	,	W	R/W
	Serial bus	240H	0	0	0	0	_	0	0	0/1
SBIOCR1	interface control register 1	(RMW instructions are prohibited.)	000: 8 001	ransferred bits : 1 010: 2 0 : 5 110: 6 1	11: 3	Acknowl- edge clock 0: Disable 1: Enable		ware reset r 000: 4 001 100: 8 101 <swrmon< td=""><td>al clock select monitor : 5 010: 6 0 : 9 110: 10</td><td>11: 7</td></swrmon<>	al clock select monitor : 5 010: 6 0 : 9 110: 10	11: 7
	SBI	241H	DB7	DB6	DB5	DB4	DB3	DB2	DB1	DB0
SBI0DBR	buffer	(RMW instruc- tions are pro-			R	(Receiving) / \	W (Transmissi	on)		
	register	hibited.)				Unde	efined	2		
			SA6	SA5	SA4	SA3	SA2	SA1	SA0	ALS
							N 💛	7	//))	ı.
	I ² C bus	242H (RMW instruc-	0	0	0	0	0	- 0	⊘ ′₀	0
I2C0AR	address register	tions are pro- hibited.)		Slave addres	s selection for	when device	is operating a	s slave device	9	Address recognition 0: Enable 1: Disable
			MST	TRX	ВВ	PIN	SBIM1	AAS/ SBIM0	AD0/ SWRST1	LRB/ SWRST0
	Serial bus				\supset		/w))	1	T	
When read	interface		0	(0)	0	1	// 0	0	0	0
SBIOSR	status register	243H (RMW instructions are pro- biblited.)			Bus status monitor 0: Free 1: Busyl	INTSBI request monitor 0: Request 1: Cancel	Arbitration lost detection monitor 1: Detect	Slave address match detection monitor 1:Detect	GENERAL CALL detection 1: Detect	Last receive bit monitor 0: "0" 1: "1"
When write SBI0CR2	Serial bus interface control register 2		0: Slave 1: Master	0:Receiver 1:Transmit	Start/stop condition 0: Start condition 1: Stop condition	Cancel INTSBI interrupt request 0: – 1: Cancel	Serial bus ir operating m tion 00: Port mod 01: Reserve 10: I ² C bus 11: Reserve	ode selec- de d mode	Write "10" a	set generate nd "01", then eset signal is
			- ((12SBI0	_	_	_	_	-	-
\wedge	Corist)	W	R/W	-	_	_	-	_	R/W
	Serial bus interface	244H (RMW instruc-	0	> 0	_	_	_	-	-	0
SBIOBR	baud_rate register	tions are pro- hibited.)	Always write "0"	Operation in IDLE2 mode 0: Stop 1: Operate	-	-	-	-	-	Always write "0"
			SBI0EN	İ	-	_	_	ı	_	-
	Serial bus	24711	R/W				R			
CDIOCDO	interface	247H (RMW instruc-	0	0	0	0	0	0	0	0
SBI0CR0	control register 0	tions are pro- hibited.)	SBI operation 0: disable 1: enable			A	Always read "C) ¹¹ -		

Page 303 2007-10-15

Symbol	Name	Address	7	6	5	4	3	2	1	0
-			BC2	BC1	BC0	ACK	-	SCK2	SCK1	SCK0/ SWRMON
				W	<u>I</u>	R/W	_ <		W	R/W
	Serial bus	248H	0	0	0	0	-	0	0	0/1
SBI1CR1	interface control register 1	(RMW instruc- tions are pro- hibited.)	000: 8 001	ransferred bits : 1 010: 2 0 : 5 110: 6 1	11: 3	Acknowl- edge clock 0: Disable 1: Enable		ware reset r 000: 4 001 100: 8 101 <swrmon< td=""><td>al clock select monitor : 5 010: 6 0 : 9 110: 10 1</td><td>11: 7</td></swrmon<>	al clock select monitor : 5 010: 6 0 : 9 110: 10 1	11: 7
	SBI	249H	DB7	DB6	DB5	DB4	DB3	DB2	DB1	DB0
SBI1DBR	buffer	(RMW instruc- tions are pro-			R	(Receiving) / \	N (Transmissi	on)		
	register	hibited.)				Ì	Æ	\Diamond		
			SA6	SA5	SA4	SA3	SA2	SA1	SA0	ALS
							N 🔷	7	$\overline{(}$	
	I ² C bus	24AH (RMW instruc-	0	0	0(0	0	109	<u> </u>	0
I2C1AR	address register	tions are pro- hibited.)		Slave addres	s selection for	when device	is operating a	s slave device	9	Address recognition 0: Enable 1: Disable
			MST	TRX	BB	PIN	AL/ SBIM1	AAS/ SBIM0	AD0/ SWRST1	LRB/ SWRST0
	0 : 11				\rightarrow	R	w)	1	ı	1
When read	Serial bus interface		0	(0)	0	1/	//0	0	0	0
SBI1SR	status register	24BH (RMW instruc- tions are pro- hibited.)			Bus status (monitor 0: Free 1: Busy[INTSBI request monitor 0: Request 1: Cancel	Arbitration lost detection monitor 1: Detect	Slave address match detection monitor 1:Detect	GENERAL CALL detection 1: Detect	Last receive bit monitor 0: "0" 1: "1"
When write SBI1CR2	Serial bus interface control register 2		Ö: Ślave	0:Receiver 1:Transmit	Start/stop condition 0: Start condition 1: Stop condition	Cancel INTSBI interrupt request 0: – 1: Cancel	Serial bus ir operating m tion 00: Port modul: Reserve 10: I ² C bus 11: Reserve	ode selec- de d mode	Write "10" a	set generate nd "01", then eset signal is
			- ()	l2SBI1	-	-	-	-	_	-
^	0.00		w<1	R/W	-	-	-	-	-	R/W
	Serial bus interface	24CH (RMW instruc-	0	0	-	-	-	-	-	0
SBI1BR	baud rate register	tions are pro- hibited:)	Always write "0"	Operation in IDLE2 mode 0: Stop 1: Operate	-	-	-	-	-	Always write "0"
			SBI1EN		_	_	_	_	_	_
			R/W		<u>I</u>	<u>I</u>	R		<u> </u>	
	Serial bus interface	24FH (RMW instrue	0	0	0	0	0	0	0	0
SBI1CR0	control register 0	(RMW instruc- tions are pro- hibited.)	SBI operation 0: disable 1: enable	-			Always read "C			-

Page 304 2007-10-15

(10) AD converter

Symbol	Name	Address	7	6	5	4	3	2	1	0
			ADRS	IA.	MD	AINEN		Si	AIN	
						R	W			
			0	0	0	0	0	0	0	0
ADCCR1	AD control register 1	2B0H	AD conversion start 0: - 1: AD conversion start	AD operatin 00: AD ope disable 01: single n 10: Reserve 11: Repeat	ration node ed	Analog input control 0: disable 1: enable	0000: AN0 0001: AN1	/ /	1000: AN8	
			EOCF	ADBF	RSEL	I2AD	$\backslash \backslash \backslash \backslash \backslash $	A	CK	
			!	R			R	W		
			0	0	0	Ø//	\searrow	1 📈	(0)	0
ADCCR2	AD control register 2	2B1H	AD conversion end flag 0:Before or during conversion 1: Conversion completed	AD conversion BUSY flag 0: During stop of AD conversion 1: During AD conversion	Storing of an AD conver- sion result 0: 10bit mode 1: 8bit mode	IDLE2 control 0:Stop 1:Opera- tion		1010: 1011: 1 1100: 3	on time select 78 / fc [s] 156 / fc [s] 12 / fc [s] 124 / fc [s] 1248 / fc [s]	
	AD		AD07	AD06	AD05	AD04	ADØ3) AD02	AD01	AD00
ADCDRL	result	2B2H		4			R			
	register L		0	0	0	Q	\ \0	0	0	0
ADCDRH			-	(-))	_	7//	//-	-	AD09	AD08
When 10-bit storing				,		,	R./			
mode	AD		6 (0	0	0	0	0	0
ADCDRH	result register H	2B3H	AD09	AD08	AD07	AD06	AD05	AD04	AD03	AD02
When 8-bit	3		$(7/\wedge)$				R	ı	<u>. </u>	
storing mode				0	0	0	0	0	0	0
	<u> </u>	//)}			((//))			<u> </u>	<u> </u>	
			· · · · · · · · · · · · · · · · · · ·		>					

Page 305 2007-10-15

(11) Watchdog timer

Symbol	Name	Address	7	6	5	4	3	2	1	0
			WDTE	WDTP1	WDTP0	_	_	I2WDT	RESCR	_
				R/W		_	- <		R/W	
			0	0	0	-	-	0	0	0
WDMOD	WDT mode register	300H	WDT control 1: Enable	Select detect 00: 2 ¹⁵ /f _{SYS} 01: 2 ¹⁷ /f _{SYS} 10: 2 ¹⁹ /f _{SYS} 11: 2 ²¹ /f _{SYS}		- <		IDLE2 0; Stop 1) Operate	1: Inter- mally con- nects WDT out to the reset pin	Always write "0".
WDCR	WDT control	301H (RMW instruc- tions are pro- hibited.)			B1H: WD1	4	4EH: WDT	clear code		

(12) Special timer for CLOCK

					/ ~ \	~		· ~ ~		
Symbol	Name	Address	7	6	(5	\ 4	3 (/)2	1	0
			-	- /		-		RTCSEL1	RTCSEL0	RTCRUN
			R/W	(1	-	((// {		R/W	
	RTC		0	$A \cap$	-	<u>-</u>	(-)	0	0	0
RTCCR	control register	310H	Always write "0".		> <u>-</u>			00: 2 ¹⁴ /fs 01: 2 ¹³ /fs 10: 2 ¹² /fs 11: 2 ¹¹ /fs		0: Stop & clear 1: Count



(13) Program patch logic

Symbol	Name	Address	7	6	5	4	3	2	1	0
5,			ROMC07	ROMC06	ROMC05	ROMC04	ROMC03	ROMC02	ROMC01	_
	Address	400H (RMW instruc-				W		<u> </u>		_
ROMCMP00	compare register 00	tions are pro-	0	0	0	0	0	0	0	-
	rogioto. co	hibited.)			Target RO	M address (Lo	ower 7 bits)		1	-
		40411	ROMC15	ROMC14	ROMC13	ROMC12	ROMC11	ROMC10	ROMC09	ROMC08
ROMCMP01	Address	401H (RMW instruc-					N O	7		
KOWICIVIPOT	compare register 01	tions are pro-	0	0	0	0 <	0))0	0	0
		hibited.)			Tarç	get ROM addr	ess (Middle 8	bits)		
		402H	ROMC23	ROMC22	ROMC21	ROMC20	ROMC19	ROMC18	ROMC17	ROMC16
ROMCMP02	Address compare	(RMW instruc-					N			
KOWOWI 02	register 02	tions are pro- hibited.)	0	0	0	0	%	0 <	0	0
		Tilbited.)			Tar	get ROM addr	ess (Upper 8	bits)		
		404H	ROMS07	ROMS06	ROMS05	ROMS04	ROMS03	ROMS02	ROMS01	ROMS00
ROMSUB0L	Address substitution	(RMW instruc-				V	N 🔷	7	$\langle \gamma \rangle$	
	register 0L	tions are pro- hibited.)	0	0	0(0	0	0	<u> </u>	0
		· · · · · · · · · · · · · · · · · · ·					(Lower 8 bits)			
		405H	ROMS15	ROMS14	ROMS13	√ROMS12	ROMS	ROMS10	ROMS09	ROMS08
ROMSUB0H	Address substitution	(RMW instruc-		(($\langle \rangle \rangle$	\	$N \left(\bigcirc \right) \left\langle \right\rangle$			
	register 0H	tions are pro- hibited.)	0	0	0>	0	(\doldo\)) 0	0	0
		,		4	\rightarrow	//	(Upper 8 bits)	1	1	
	Address	408H	ROMC07	ROMC06	ROMC05	ROMC04	ROMC03	ROMC02	ROMC01	-
ROMCMP10	compare	(RMW instruc-		(())		W	//	1		_
	register 10	tions are pro- hibited.)	0	0	0	0	0	0	0	-
			((50,1011		M address (Lo	_		D011000	-
	Address	409H	ROMC15	RÓMC14	ROMC13	ROMC12	ROMC11	ROMC10	ROMC09	ROMC08
ROMCMP11	compare	(RMW instruc- tions are pro-		0		4 /	N o	0	0	0
	register 11	hibited:)	(0)	0	0	0	0	0	0	0
			DOMOGO	ROMC22	//	get ROM addr ROMC20			ROMC17	DOMOAS
	Address	40AH	ROMC23	ROIVICZZ	ROMC21		ROMC19 N	ROMC18	ROIVICT	ROMC16
ROMCMP12	compare	(RMW instruc- tions are pro-	0	8	0	0	0	0	0	0
	register 12	hibited.)	U	10/		get ROM addr			U	U
			ROMS07	ROMS06	ROMS05	ROMS04	ROMS03	ROMS02	ROMS01	ROMS00
	Address	40CH	KOWSO	KOWOOO	ROMOOS		N N	ROWISOZ	KOWOOT	KOWOOO
ROMSUB11L	substitution	(RMW instruc-	0	0	0	0	0	0	0	0
	register 1L	hibited		\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \			(Lower 8 bits)	L	ı	
			ROMS15	ROMS14	ROMS13	ROMS12	ROMS11	ROMS10	ROMS09	ROMS08
	Address	40DH (RMW instruc-					N	1	1	
ROMSUB1H	substitution	tions are pro-	0	0	0	0	0	0	0	0
	register 1H	hibited.)	-				(Upper 8 bits)	<u> </u>		

Page 307 2007-10-15

Symbol	Name	Address	7	6	5	4	3	2	1	0
<u> </u>			ROMC07	ROMC06	ROMC05	ROMC04	ROMC03	ROMC02	ROMC01	_
ROMCMP20	Address compare register 20	410H (RMW instruc- tions are pro- hibited.)	W						_	
			0	0	0	0	0	0	0	_
					Target RO	M address (Lo	ower 7 bits)		ı	_
ROMCMP21	Address compare register 21	411H (RMW instruc- tions are pro- hibited.)	ROMC15	ROMC14	ROMC13	ROMC12	ROMC11	ROMC10	ROMC09	ROMC08
			W							
			0 0 0 0 0 0 0						0	
			Target ROM address (Middle 8-bits)							
ROMCMP22	Address compare register 22	412H (RMW instruc- tions are pro- hibited.)	ROMC23	ROMC22	ROMC21	ROMC20	ROMC19	ROMC18	ROMC17	ROMC16
							W V			
			0	0	0	0	>	0 <	0	0
					Tar	get ROM addr	ess (Upper 8	bits)		
ROMSUB2L	Address substitution register 2L	414H (RMW instructions are prohibited.)	ROMS07	ROMS06	ROMS05	ROMS04	ROMS03	ROMS02	ROMS01	ROMS00
						\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	N 💙	7	$\langle \gamma \rangle$	
			0	0	0(0	0	Q 7	<u></u> 0	0
							(Lower 8 bits)		1	
	Address substitution register 2H	415H (RMW instruc- tions are pro- hibited.)	ROMS15	ROMS14	ROMS13	√ROMS12	ROMS11	ROMS10	ROMS09	ROMS08
ROMSUB2H			W							
			0 0 0 0 0 0							0
				(1)	\searrow	//	(Upper 8 bits)		I I	
ROMCMP30	Address compare register 30	418H (RMW instruc- tions are pro- hibited.)	ROMC07	ROMC06	ROMC05	ROMC04	ROMC03	ROMC02	ROMC01	_
						W	//	0	_	
			0	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	0	0 M address (Lo	0	0	0	
			ROMC15	ROMC14	ROMC13	ROMC12	ROMC11	ROMC10	ROMC09	ROMC08
ROMCMP31	Address compare register 31	419H (RMW instructions are pro- hibited.)	KOWE 13	NOWIC 14	KOWOJS		N KOMOTI	KOWOTO	IXOIVIC09	ROWCOO
			(/ ₀)	0	6	0	0	0	0	0
				^	$/\Omega/\Lambda$	get ROM addr			ŭ	
			ROMC23	ROMC22	ROMC21	ROMC20	ROMC19	ROMC18	ROMC17	ROMC16
ROMCMP32	Address compare register 32	41AH (RMW instruc- tions are pro- hibited.)			7/		N			
			0	0	0	0	0	0	0	0
			Target ROM address (Upper 8 bits)							
ROMSUB3L	Address substitution register 3L	41CH (RMW instructions are prohibited.)	ROMS07	ROMS06	ROMS05	ROMS04	ROMS03	ROMS02	ROMS01	ROMS00
			W							
			0	0	0	0	0	0	0	0
						Patch code	(Lower 8 bits)			
	Address substitution register 3H	41DH (RMW instructions are prohibited.)	ROMS15	ROMS14	ROMS13	ROMS12	ROMS11	ROMS10	ROMS09	ROMS08
ROMSUB3H						١	N			
			0	0	0	0	0	0	0	0
						Patch code	(Upper 8 bits)			

Page 308 2007-10-15

Symbol	Name	Address	7	6	5	4	3	2	1	0
<u> </u>			ROMC07	ROMC06	ROMC05	ROMC04	ROMC03	ROMC02	ROMC01	_
ROMCMP40	Address compare register 40	420H (RMW instructions are prohibited.)	W							_
			0	0	0	0	0	0	0	_
					Target RO	M address (Lo	ower 7 bits)		ı	_
			ROMC15	ROMC14	ROMC13	ROMC12	ROMC11	ROMC10	ROMC09	ROMC08
ROMCMP41	Address compare register 41	421H (RMW instructions are prohibited.)	W							
			0 0 0 0 0 0 0 0							0
			Target ROM address (Middle 8-bits)							
ROMCMP42	Address compare register 22	422H (RMW instruc- tions are pro- hibited.)	ROMC23	ROMC22	ROMC21	ROMC20	ROMC19	ROMC18	ROMC17	ROMC16
							W W			
			0	0	0	0	> 0	0 📈	0	0
					Tar	get ROM addr	ess (Upper 8	bits)		
ROMSUB4L	Address substitution register 4L	424H (RMW instruc- tions are pro- hibited.)	ROMS07	ROMS06	ROMS05	ROMS04	ROMS03	ROMS02	ROMS01	ROMS00
						(V)	N 🔷	7	$\langle \cap \rangle$	
			0	0	0)0	0	5	<u></u> 0	0
						Patch code	(Lower 8 bits)			
ROMSUB4H	Address substitution register 4H	425H (RMW instruc- tions are pro- hibited.)	ROMS15	ROMS14	ROMS13	ROMS12	ROMS	ROMS10	ROMS09	ROMS08
			w (7)							
			0 0 0 0 0 0							0
			Patch code (Upper 8 bits)							
ROMCMP50	Address compare register 50	428H (RMW instruc- tions are pro- hibited.)	ROMC07	ROMC06	ROMC05	ROMC04	ROMC03	ROMC02	ROMC01	_
						W	$\sqrt{/}$			-
			0	0	0	0	√ 0	0	0	_
			Target ROM address (Lower 7 bits)							_
ROMCMP51	Address compare register 51	429H (RMW instructions are pro- hibited.)	ROMC15	RÓMC14	ROMC13	ROMC12	ROMC11	ROMC10	ROMC09	ROMC08
			$\langle \gamma \rangle \Delta$			4 /	N	ī	1	
			(0)	0	0	√ 0	0	0	0	0
					\ \ \ / //	get ROM addr	ī	ı	1	
ROMCMP52	Address compare register 52	42AH (RMW instruc- tions are pro- hibited.)	ROMC23	ROMC22	ROMC21	ROMC20	ROMC19	ROMC18	ROMC17	ROMC16
			<		_ >		N	1	1	
			0	0	0	0	0	0	0	0
			Target ROM address (Upper 8 bits)							
ROMSUB5L	Address substitution register 5L	42CH (RMW instructions are prohibited.)	ROMS07	ROMS06	ROMS05	ROMS04	ROMS03	ROMS02	ROMS01	ROMS00
							N		1	
			0	0	0	0	0	0	0	0
			70010)	DOM:		(Lower 8 bits)	DOMOSS	DOMOST	D01105-
	Address substitution register 5H	42DH (RMW instruc- tions are pro- hibited.)	ROMS15	ROMS14	ROMS13	ROMS12	ROMS11	ROMS10	ROMS09	ROMS08
ROMSUB5H							N	_		
			ŏ	0	0	0	0	0	0	0
						Patch code ((Upper 8 bits)			

Page 309 2007-10-15

TMP91FW60


17. I/O Port Equivalent-circuit Diagrams

• How to read circuit diagrams

The circuit diagrams in this chapter are drawn using the same gate symbols as for the 74HCxx series standard CMOS logic ICs.


The signal named STOP has a unique function. This signal goes active-high if the CPU sets the HALT bit when the HALTM[1:0] field in the SYSCR2 register is programmed to 01 (e.g., STOP mode) and the drive enable (DRVE) bit in the same register is cleared. If the DRVE bit is set, the STOP signal remains inactive (at logic 0).

• The input protection circuit has a resistor in the range of several tens to several hundreds of ohms.

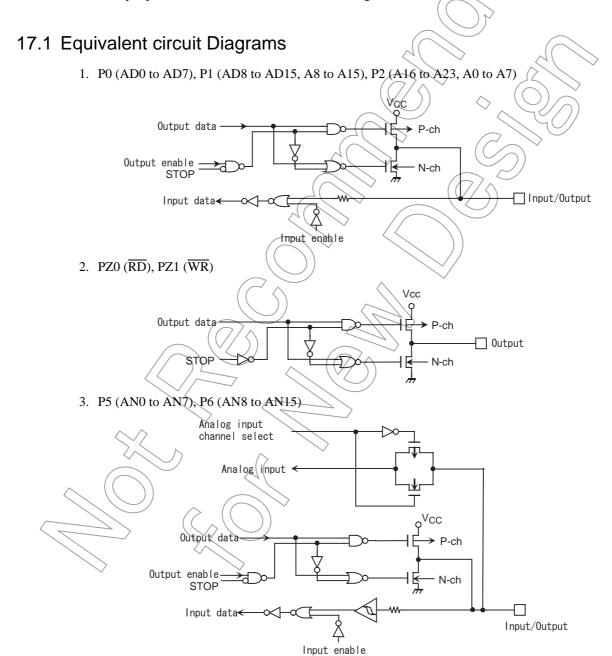


Page 310 2007-10-15


4. $PZ2 (\overline{HWR}), PZ3 (R/\overline{W}), P44(ALE)$

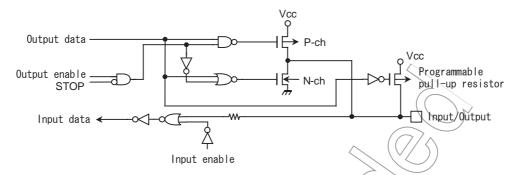


5. P40(\overline{\cdotS0}/SCOUT), P41(\overline{\cdotS1}/TXD2), P42(\overline{\cdotS2}/RXD2), P43(\overline{\cdotS3}/SCLK2/\overline{\cdotCTS2})

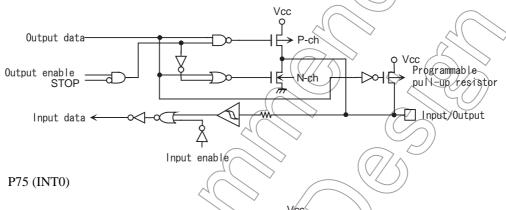

6. P75 (INT0)

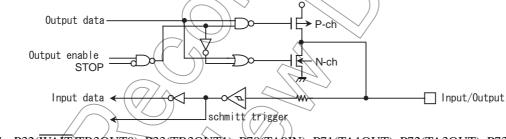


7. P32(WAÍT/TB3OUT0), P33(TB3OUT1), P70(TA0IN), P71(TA1OUT), P72(TA3OUT), P73(TA4IN), P74(TA5OUT), P80 to P87,P91(RXD0), P92(SCLK0/CTS0), P94(RXD1), P95(SCLK1/CTS1), PA0 to PA3,PB2(TB4OUT0), PB3(TB4OUT1)

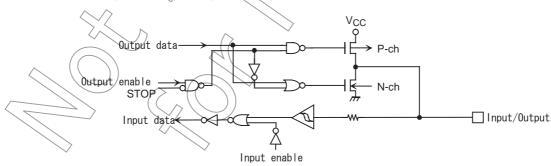


2007-10-15 Page 311

8. P30(TB3IN0/INT3/SDA0), P31(TB3IN1/INT4/SCL0), P90(TXD0), P93(TXD1), PB0(TB4IN0/INT9/SDA1), PB1(TB4IN1/INT10/SCL1)

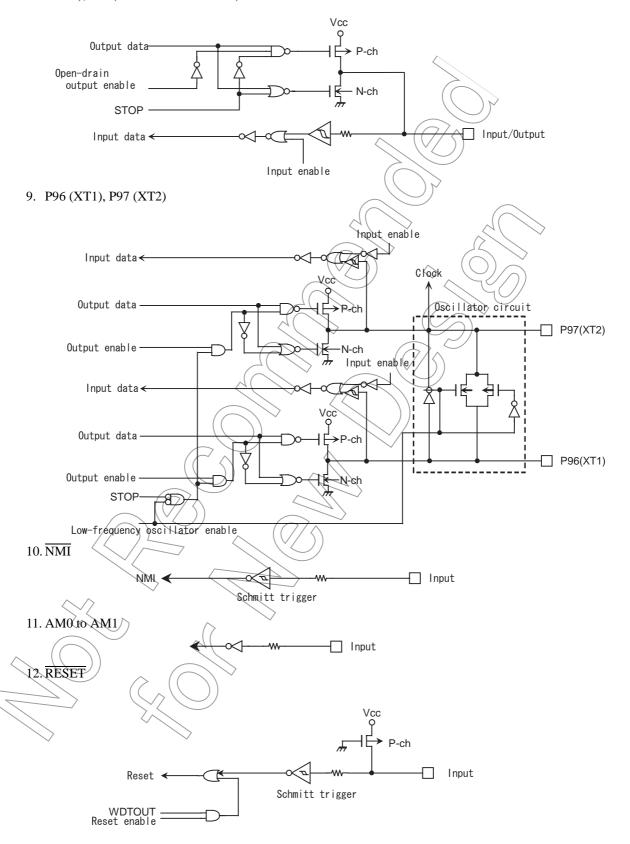

Page 312 2007-10-15

13. X1, X2

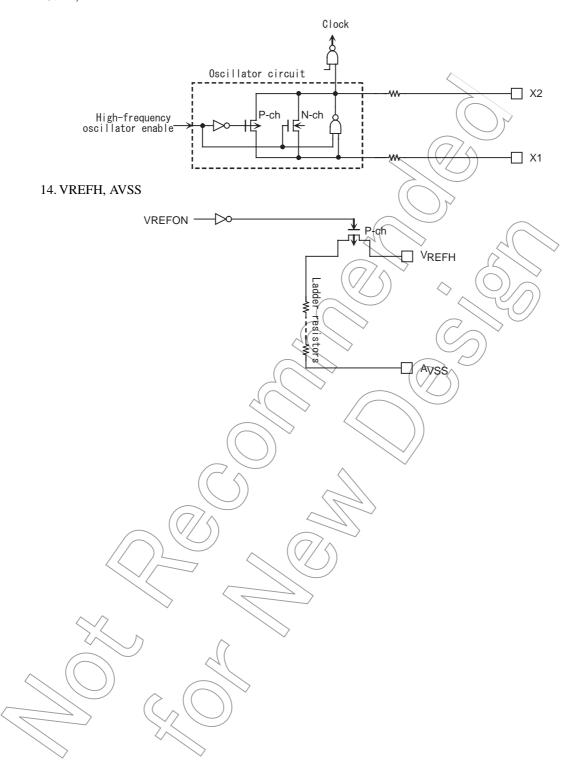

Page 313 2007-10-15

TOSHIBA TMP91FW60

18. Points to Note and Restrictions

18.1 Notation

- a. The notation for built-in I/O registers is as follows register symbol <Bit sýmbol>
 - e.g.) TA01RUN<TA0RUN> denotes bit TA0RUN of register TA01RUN.
- b. Read-modify-write instructions

An instruction in which the CPU reads data from memory and writes the data to the same memory location in one instruction.

Example 1: SET 3, (TA01RUN) ... Set bit3 of TA01RUN.

Example 2: INC 1, (100H) ... Increment the data at 100H.

• Examples of read-modify-write instructions on the TLCS-900

Exchange instruction

EX (mem), R

Arithmetic operations

ADD (mem), R/# ADC (mem), R/#

SUB (mem), R/# SBC (mem), R/#

INC #3, (mem) DEC #3, (mem)

Logic operations

TSET

AND (mem), R/# OR (mem), R/#

XOR (mem), R/#

Bit manipulation operations

STCF #3/A, (mem) RES #3, (mem)

SET #3, (mem) CHG /#3, (mem)

Rotate and shift operations

#3, (mem)

RLC (mem) RRC (mem)

(mem) (mem) (mem)

SLA (mem) SRA (mem)

SLL (mem) SRL (mem)

RLD (mem) RRD (mem)

c. f_{OSCH} , fc, fs, f_{FPH} , f_{SYS} and one state

The clock frequency input on pins X1 and 2 is called f_{OSCH} or fc.

The clock selected by SYSCR1<SYSCK> is called f_{FPH} . The clock frequency give by f_{FPH} divided by 2 is called f_{SYS} .

One cycle of f_{SYS} is referred to as one state.

Page 314 2007-10-15

18.2 Points of note

a. AM0 and AM1 pins

This pin is connected to the DVcc pin. Do not alter the level when the pin is active.

b. EMU0 and EMU1 pins

Open pins.

c. HALT mode (IDLE1)

When IDLE1 mode (in which oscillator operation only occurs) is used, set RTCCR<RTCRUN> to 0 stop the Special timer for CLOCK before the HALT instructions is executed.

d. Warm-up counter

The warm-up counter operates when STOP mode is released, even if the system is using an external oscillator. As a result a time equivalent to the warm-up time elapses between input of the release request and output of the system clock.

e. Programmable pull-up/pull-down resistances

The programmable pull-up/pull-down resistor can be turned ON/OFF by a program when the ports are set for use as input ports. When the ports are set for use as output ports, they cannot be turned ON/OFF by a program.

The data registers (e.g., P4) are used to turn the pull-up/pull-down resistors ON/OFF. Consequently read-modify-write instructions are prohibited.

f. Watchdog timer

The watchdog timer starts operation immediately after a reset is released. When the watchdog timer is not to be used, disable it.

When the bus is released, neither internal memory nor internal I/O can be accessed. However, the internal I/O continues to operate. Hence the watchdog timer continues to run. Therefore be careful about the bus releasing time and set the detection timer of watchdog timer.

g. CPU (Micro DMA)

Only the LDC cr, r and LDC r, cr instructions can be used to access the control registers in the CPU (e.g., the transfer source address register (DMASn)).

h. Undefined SFR

The value of an undefined bit in an SFR is undefined when read.

i. POP SR/instruction


Please execute the POP SR instruction during DI condition.

j. Clocks for serial channels (SÎO)

As for the serial channels SIO0, SIO1 and SIO2, a baud rate generator is unavailable as an input clock of an I/O interface and a clock for a serial transfer if a prescaler clock is set to fc/16 when SYSCR0<PRCK1> is "1".

Page 315 2007-10-15


19. Package Dimension

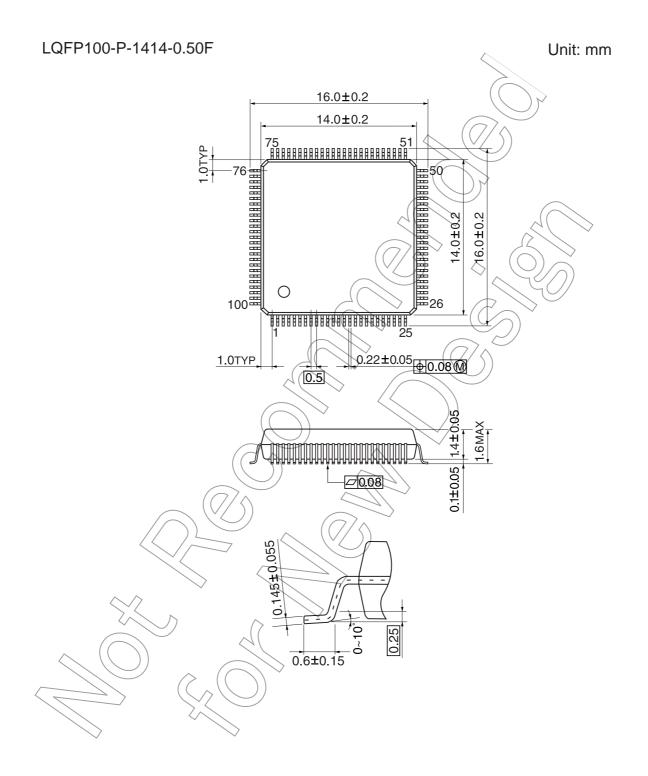

Page 316 2007-10-15

QFP100-P-1420-0.65A

Unit: mm

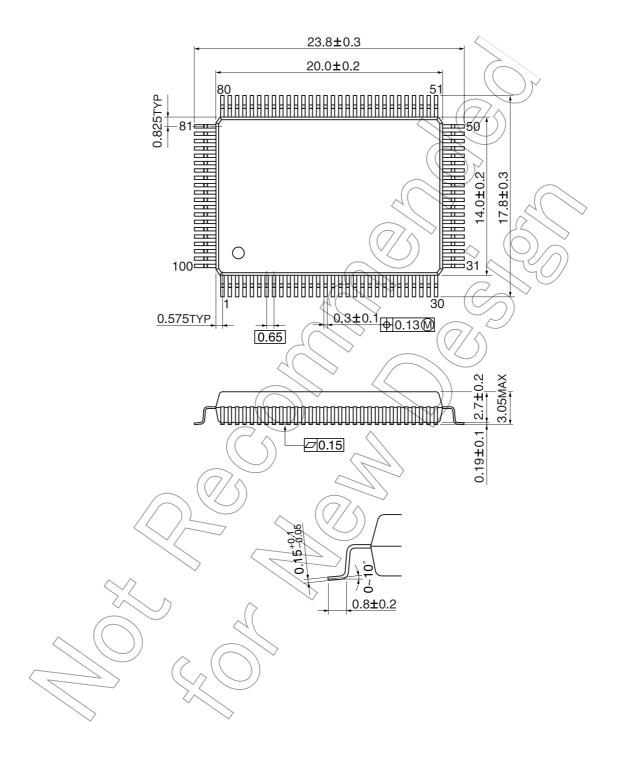

Page 317 2007-10-15

Postscript

This is a technical document that describes the operating functions and electrical specifications of the 16-bit microcontroller series TLCS-900/L1 (LSI).


Toshiba provides a variety of development tools and basic software to enable efficient software development.

These development tools have specifications that support advances in microcomputer hardware (LSI) and can be used extensively. Both the hardware and software are supported continuously with version updates.

The recent advances in CMOS LSI production technology have been phenomenal and microcomputer systems for LSI design are constantly being improved. The products described in this document may also be revised in the future. Be sure to check the latest specifications before using.

Toshiba is developing highly integrated, high-performance microcomputers using advanced MOS production technology and especially well proven CMOS technology.

We are prepared to meet the requests for custom packaging for a variety of application areas. We are confident that our products can satisfy your application needs now and in the future.

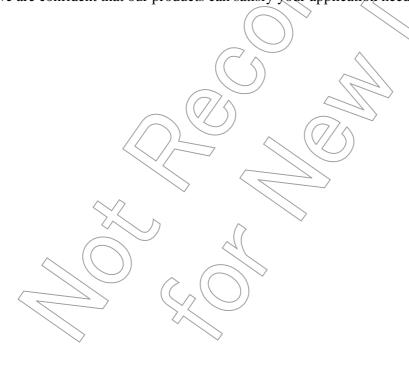

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Toshiba:

TMP91FW60FG(JZ)