

EP5223LVM1-1

Power Application Controllers

EP5223LVM1-1 User's Guide



www.active-semi.com

CONTENTS

| | |
|--------------------------------------------------|----|
| Contents | 2 |
| Overview | 3 |
| EP5223LVM1-1 Resources..... | 5 |
| Pinout and Signal Connectivity..... | 5 |
| Power Input | 6 |
| LED's | 6 |
| SWD Debugging | 7 |
| Serial Communications..... | 7 |
| Hall Sensor / PWM DAC Interface | 7 |
| Hall Sensor / PWM DAC Interface (Continued)..... | 8 |
| EP5223LVM1-1 Setup | 9 |
| About Active-Semi..... | 10 |

OVERVIEW

Active-Semi's EP5223LVM1-1 development platform is a complete hardware solution enabling users not only to evaluate the PAC5223 device, but also develop power applications revolving around this powerful and versatile Cortex M0 based microcontroller. The module contains a PAC5223 Power Application Controller (MCU) and all the necessary circuitry to properly energize the MCU and its internal peripherals once power is applied.

To aid in the application development the EP5223LVM1-1 offers access to each and every one of the PAC5223 device's signals by means of a series of female header connectors.

The EP5223LVM1-1 also contains access to an external USB to UART module enabling users to connect the evaluation module to a PC computer through a conventional Virtual Comm Port which can then be used in the communication efforts by taking advantage of the PAC5223's UART interface. Graphical User Interface (GUI) software suites can be employed to externally control particular application's features.

Finally, the EP5223LVM1-1 module gives access to the PAC5223's SWD port allowing users to both program their application into the device's FLASH memory, as well as debugging the application in real time. The 4 pin connector based SWD port is compatible with a fair number of debugger/programmer modules widely available.

Active-Semi's EP5223LVM1-1 evaluation kit consists of the following:

- EP5223LVM1-1 Body module
- EP5223LVM1-1 User's Guide
- Schematics, BOM and Layout Drawings

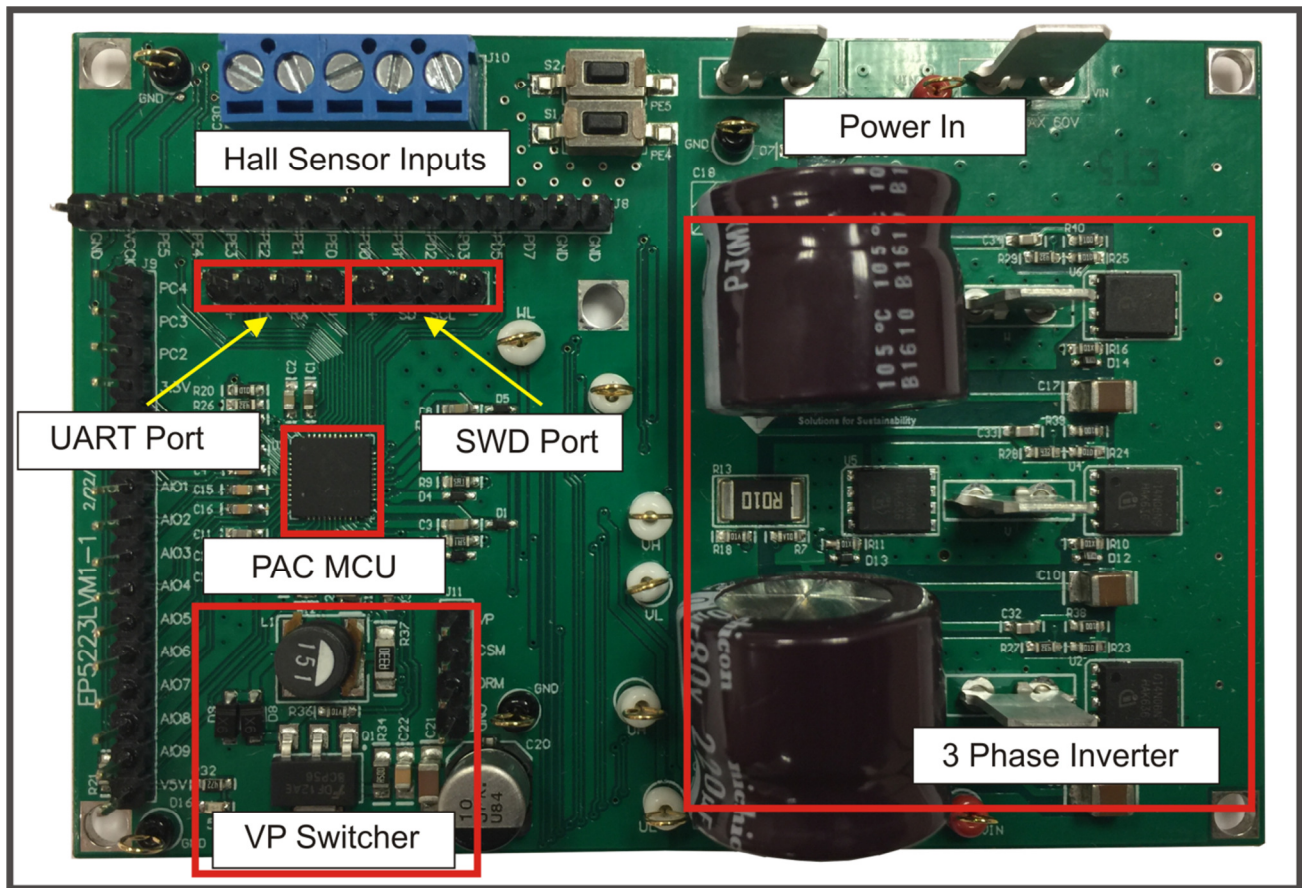


Figure 1: EP5223LVM1-1 Block Diagram

Solution Benefits:

- Ideal for high voltage (up to 60V Abs Max) general purpose power applications and controllers
- Single-IC PAC5223 with 10 PWM outputs, 10 ADC inputs, I2C, UART, SPI and GPIO.
- Gate driving for up to three half H Bridge (tri phase) inverter.
- Schematics, BOM, Layout drawings available

The following sections provide information about the hardware features of Active-Semi's EP5223LVM1-1 turnkey solution.

EP5223LVM1-1 RESOURCES

Pinout and Signal Connectivity

The following diagram shows the male header pinout for the EP5223LVM1-1 evaluation module, as seen from above:

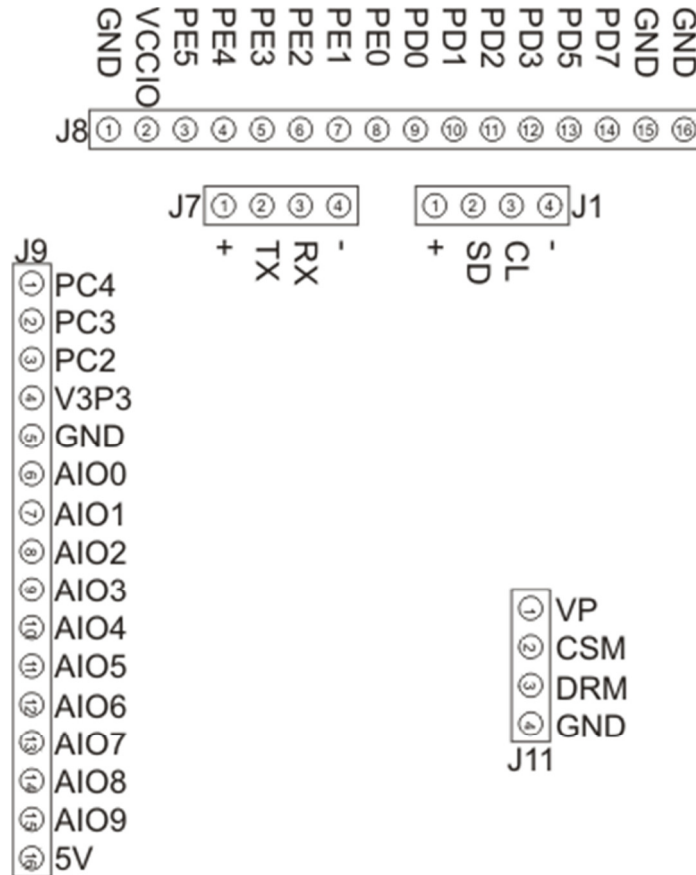


Figure 2 EP5223LVM1-1 Headers and Test Stakes Pinout

Power Input

Power to the EP5223LVM1-1 evaluation module can be applied to the VIN and GND spade connectors. Power to the EP5223LVM1-1 evaluation module should not exceed 60V (Abs Max).

The EP5223LVM1-1 is optimized to operate with voltages ranging from 14V to 36V Nominal (60V Abs Max). When the VIN input voltage goes above 8V, the system exits UVLO protection and all subsystems, including voltage regulators, analog front end and microcontroller, are enabled.

LED's

When an operational voltage is applied, LED D16 will light up. This is the LED which notifies VSYS (5V) rail is up and running. VP (12V gate drive), 3.3V (for analog circuitry) and 1.8V (for CPU core) regulators will also be operating at this point in time. Module is ready for use.

The following table shows the available LEDs and their associated diagnostic function.

| LED | Description |
|-----|--------------------------------------------------------------------------------|
| D16 | VSYS (5V). Light up when the PAC5223 device is successfully powered up by VIN. |
| D7 | VIN. Lights up as VIN voltage is applied. |

SWD Debugging

Connector J1 offers access to the PAC5223 SWD port lines.

| J1 Pin | Terminal | Description |
|--------|----------|-----------------------|
| 1 | + | VCCIO (default is 5V) |
| 2 | SD | SWD Serial Data |
| 3 | CL | SWD Serial Clock |
| 4 | - | GND (System Ground) |

Serial Communications

Connector J7 offers access to the PAC5223 UART port lines.

| J7 Pin | Terminal | Description |
|--------|----------|-----------------------|
| 1 | + | VCCIO (default is 5V) |
| 2 | TX | MCU Transmit Line |
| 3 | RX | MCU Receive Line |
| 4 | - | GND (System Ground) |

Hall Sensor / PWM DAC Interface

Connector J10 offers access to the PAC5223 resources on PORTD utilized for hall sensor based commutation. These resources can be alternatively utilized as PWM DAC outputs for in real time debugging.

| J10 Pin | Terminal | Description |
|---------|---------------|-------------------------|
| 1 | + | VCCIO (default is 5V) |
| 2 | Hall Sensor U | PORTD2 (PWMB0 function) |
| 3 | Hall Sensor V | PORTD3 (PWMB1 function) |
| 4 | Hall Sensor W | PORTD7 (PWMD0 function) |
| 5 | GND | GND (System Ground) |

Hall Sensor / PWM DAC Interface (Continued)

The EP5223LVM1-1 module is built with the six capacitors populated (C25, C26, C27, C28, C29, C31). Depending on the interface to be utilized, the user should remove a set of three capacitors as shown below:

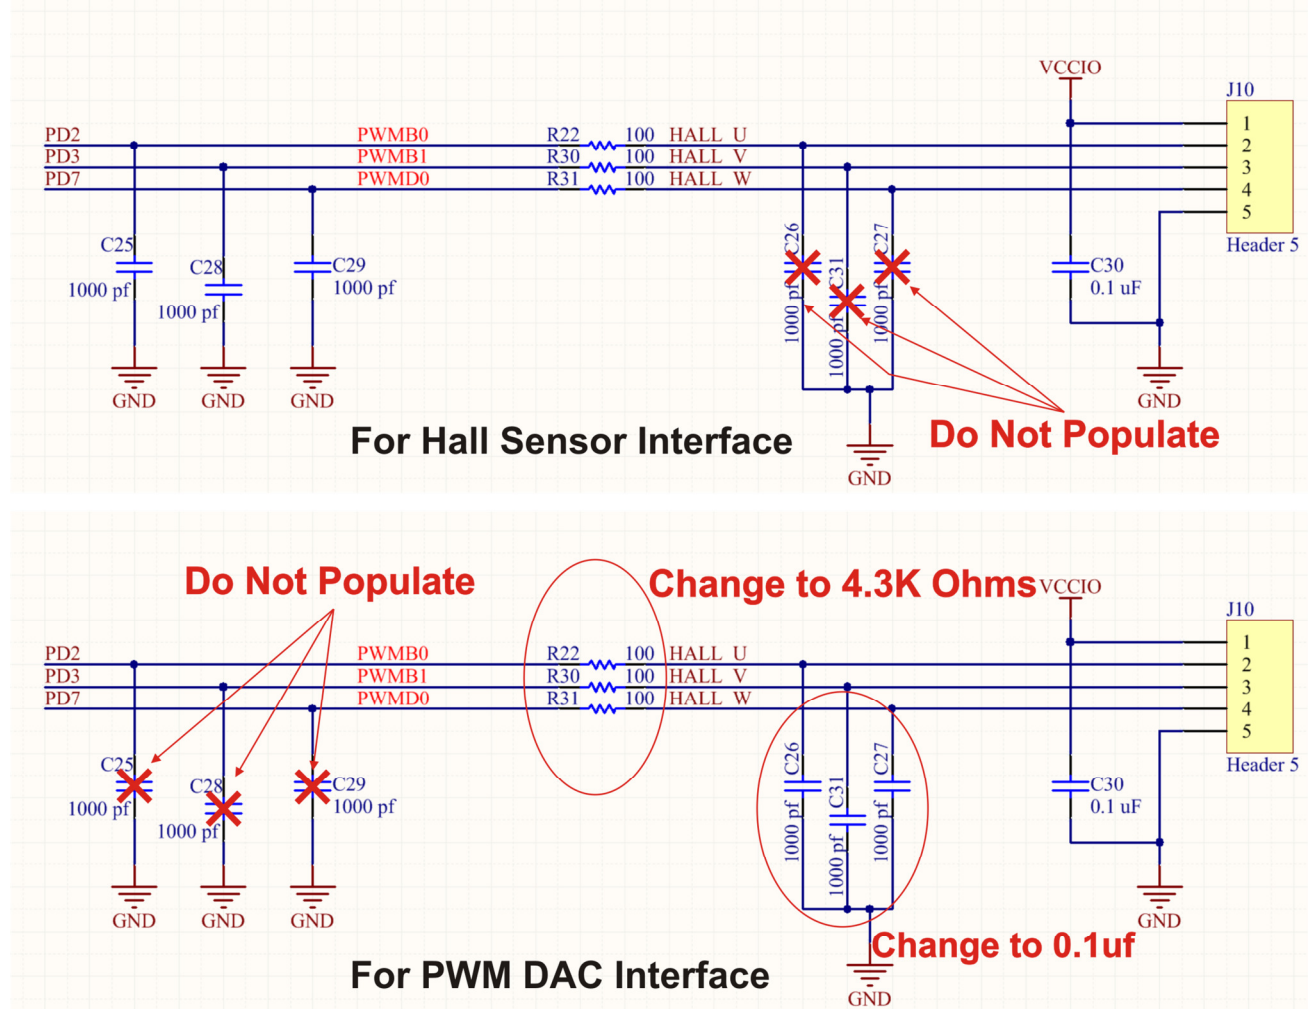


Figure 7: Hall Sensor / DAC Interface Component Selection

NOTE: User may also prefer to change the three resistors (R22, R30, R31) and three capacitors (C26, C27, C31) values depending on the employed PWM frequency. For provided FW default frequencies, 4.3K resistors and 0.1 uF ceramic capacitors have been tested to provide desirable results.

EP5223LVM1-1 SETUP

The setup for the EP5223LVM1-1 evaluation module requires up to four simple connections.

1. Connect the VIN power source via spade tab connectors VIN and GND. As VIN power is applied, the LED D7 will light up. Once VIN voltage goes above 8V, the PAC5223's Multi Mode Power Manager will be engaged and the VSYS (5V) regulator will be enabled. This event will result in LED D16 lighting up.
2. Connect the 3 Phase BLDC/PMSM motor via space tab connectors PHASE U, PHASE V and PHASE W.
3. If Serial Communications are desired, connect the USB to UART module 4 pin connection to J7.
4. For debugging/programming, connect a suitable USB SWD module to J1 by using a standard 4 wire cable.

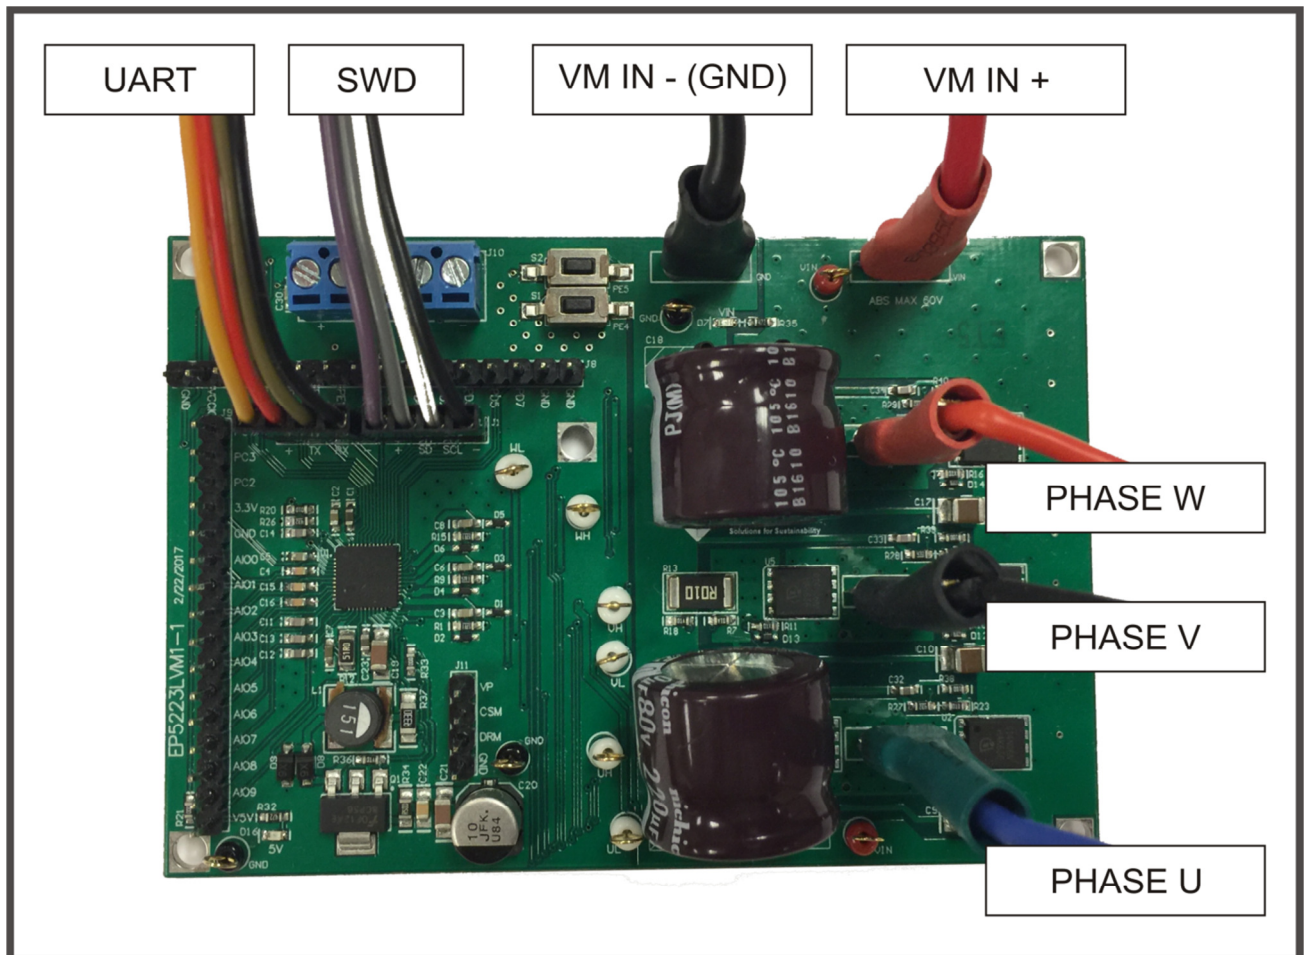


Figure 7: EP5223LVM1-1 Evaluation Module Connections

ABOUT ACTIVE-SEMI

Founded in 2004 in Silicon Valley and headquartered in Allen, Texas, Active-Semi is a rapidly emerging leader in the multi-billion dollar power management IC and intelligent digital motor drive IC markets. The company's portfolio of analog and mixed signal SoCs (systems-on-chips) are scalable core platforms used in charging, powering and embedded digital control systems for end applications such as industrial, commercial and consumer equipment. The company offers power application microcontrollers, DC/DC, AC/DC, PMU and LED drivers that significantly reduce solution size and cost while improving system-level reliability. Active-Semi's turnkey solutions deliver energy-saving power conversion architectures that minimize energy usage and compress system development cycle-time by greater than 50 percent. Active-Semi ships 50 million power ICs per quarter and reached the "one billion units shipped" milestone in May 2012. The multi-national company focuses on commercializing industry leading power management IC solution platforms and has developed broad intellectual property with over 150 patents granted and pending. For more information visit: <http://active-semi.com/>

LEGAL INFORMATION & DISCLAIMER

Copyright © 2012-2017 Active-Semi, Inc. All rights reserved. All information provided in this document is subject to legal disclaimers.

Active-Semi reserves the right to modify its products, circuitry or product specifications without notice. Active-Semi products are not intended, designed, warranted or authorized for use as critical components in life-support, life-critical or safety-critical devices, systems, or equipment, nor in applications where failure or malfunction of any Active-Semi product can reasonably be expected to result in personal injury, death or severe property or environmental damage. Active-Semi accepts no liability for inclusion and/or use of its products in such equipment or applications. Active-Semi does not assume any liability arising out of the use of any product, circuit, or any information described in this document. No license, express, implied or otherwise, is granted under any patents, copyrights or other intellectual property rights of Active-Semi or others. Active-Semi assumes no liability for any infringement of the intellectual property rights or other rights of third parties which would result from the use of information contained herein. Customers should evaluate each product to make sure that it is suitable for their applications. Customers are responsible for the design, testing, and operation of their applications and products using Active-Semi products. Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products. All products are sold subject to Active-Semi's terms and conditions of sale supplied at the time of order acknowledgment. Exportation of any Active-Semi product may be subject to export control laws.

Active-Semi™, Active-Semi logo, Solutions for Sustainability™, Power Application Controller™, Micro Application Controller™, Multi-Mode Power Manager™, Configurable Analog Front End™, and Application Specific Power Drivers™ are trademarks of Active-Semi, I. ARM® is a registered trademark and Cortex™ is a trademark of ARM Limited. All referenced brands and trademarks are the property of their respective owners.

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Qorvo:](#)

[EP5223LVM1-1](#)