### Smart Slave IC with Integrated Current and Temperature Sensors

#### **General Description**

The MAX20766 is a feature-rich smart slave IC designed to work with Maxim's seventh-generation controller to implement a high-density multiphase voltage regulator. Up to six smart slave ICs, plus a controller IC, provide a compact synchronous buck converter that includes accurate individual phase-current and temperature reporting through SMBus/PMBus<sup>™</sup>. This smart slave device includes protection circuits for overtemperature, VX short, and all power-supply UVLO faults. If a fault is detected, the slave IC immediately shuts down and sends a fault signal to the controller IC.

Monolithic integration and advanced packaging technologies allow practical per-phase, high-switching frequencies with significantly lower losses than alternative implementations. Smart slave ICs are designed to support phase shedding and DCM modes for efficiency optimization over a wide range of load currents. High per-phase current-capability designs with low  $C_{OUT}$  enable a design with fewer phases and a smaller footprint.

The MAX20766 is available in a 16-pin FCQFN package with exposed top-side thermal pads. Top-side cooling improves heat transfer to ambient and reduces PCB and component temperatures.

#### **Applications**

- Communication and Networking Equipment
- Servers and Storage Equipment
- High-Current Voltage Regulators
  - Networking ASICs
  - FPGAs
  - Microprocessor Chipsets
  - Memory

DEVICE TYPE	OPERATING CURRENT (A)	INPUT VOLTAGE (V)
Electrical	55 per phase	
85°C, No Airflow	24 per phase, two-phase application	6.5 to 16.0

**Note:** For specific operating conditions, see the SOA curves in the <u>Typical Operating Characteristics</u> section. Thermal rating based on 2-phase data.


#### **Benefits and Features**

- Increased Power Density with Fewer External Components
  - Monolithic Integration for Reduced Parasitics
  - Scalable Architecture Compatible with Coupled Inductors
  - 94% Peak Efficiency
  - Top-Side Cooling for Improved Heat Transfer to Ambient
- Accurate Real-Time Telemetry of Critical Parameters
  - PMBus-Compliant Interface through the Controller IC for Telemetry and Power Management
  - · Junction Temperature Monitoring and Reporting
  - Per-Phase Current Reporting
- Advanced Self-Protection Features for the System
  and IC
  - Overcurrent Protection
  - Overtemperature Protection
  - Boost Voltage UVLO
  - VX Short Protection

Ordering Information appears at end of data sheet.

PMBus is a trademark of SMIF, Inc.

### **Typical Application Circuit**

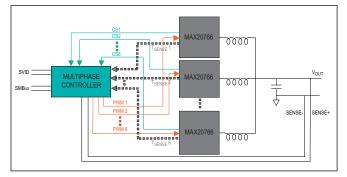



### Smart Slave IC with Integrated Current and Temperature Sensors

#### **Absolute Maximum Ratings**

Supply Voltage V <sub>DDH</sub>	0.3V to +18V
Supply and Input Pin Voltages V <sub>CC</sub> , V <sub>DD</sub>	0.3V to +2.5V
Switching-Node Voltage (VX) DC	
Switching-Node Voltage (VX) 25ns (Note 1)	10V to +23V
V <sub>DDH</sub> Pin to VX Pin Differential 25ns (Note 2).	10V to +23V
BST Pin (BST) DC	0.3V to +20.5V
BST Pin (BST) 25ns	6.0V to +27V
BST Pin to VX Pin Differential	+2.5V

Operating Temperature Range	40°C to +125°C
Junction Temperature	+150°C
Storage Temperature Range	65°C to +150°C
Peak Reflow Temperature	+260°C
CS	-0.3V to +2.5V
TS_FAULT	0.3V to V <sub>DD</sub> + 0.3V
PWM	0.3V to +2.5V

Stresses beyond those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. These are stress ratings only, and functional operation of the device at these or any other conditions beyond those indicated in the operational sections of the specifications is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

#### **Operating Ratings**

V <sub>DD</sub> , V <sub>CC</sub>	+1.71V to +1.98V
12V Supply (V <sub>DDH</sub> )	+6.5V to +16.0V
Frequency (f <sub>SW</sub> )	

Note 1: The 25ns rating is the allowable voltage that the VX node may exceed the -0.3V to +18V ratings in either positive or negative direction for up to 25ns per cycle.

Note 2: A high-frequency input bypass capacitor must be located less than 60mils (1.524mm) from the V<sub>DDH</sub> and V<sub>SS</sub> pins.

#### **Package Information**

PACKAGE TYPE: 16 FCQFN				
Package Code	P163A6F+2			
Outline Number	21-0986			
Land Pattern Number	90-0490			
THERMAL RESISTANCE, FOUR-LAYER BOARD				
Junction to Case $(\theta_{JC})$	+0.42°C/W			

For the latest package outline information and land patterns (footprints), go to <u>www.maximintegrated.com/packages</u>. Note that a "+", "#", or "-" in the package code indicates RoHS status only. Package drawings may show a different suffix character, but the drawing pertains to the package regardless of RoHS status.

Package thermal resistances were obtained using the method described in JEDEC specification JESD51-7, using a four-layer board. For detailed information on package thermal considerations, refer to <u>www.maximintegrated.com/thermal-tutorial</u>.

### Smart Slave IC with Integrated Current and Temperature Sensors

### **Electrical Characteristics**

 $(V_{DD} = V_{CC} = +1.8V, V_{DDH} = +12V$ , unless otherwise noted. Specifications are 100% production tested at T<sub>A</sub> = +32°C unless otherwise noted.)

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
SUPPLY VOLTAGES, SUPPLY CUP	RRENT					
Bias Supply Voltage	V <sub>DD</sub> , V <sub>CC</sub>		1.71		1.98	V
Powertrain Input Voltage	V <sub>DDH</sub>		6.5	12.0	16.0	V
		Shutdown (Note 3)		0.5	2	μA
		Inactive, no switching (Note 4)		3.2	5.0	mA
1.8V Bias Supply Current	IVCC + IVDD	Load = 0A, V <sub>OUT</sub> = 1.8V, f <sub>SW</sub> = 1.3MHz (Note 5)		43	61	mA
		Load = 0A, V <sub>OUT</sub> = 1.8V, f <sub>SW</sub> = 300kHz (Note 5)		14	20	mA
		Load = 0A, V <sub>OUT</sub> = 1.8V, f <sub>SW</sub> = 600kHz (Note 5)		29	41	mA
12) / Diag Supply Current	IVDDH	Shutdown (Note 3)		1.3	10	μA
12V Bias Supply Current	'VDDH	Inactive, no switching (Note 4)		6.5	20	μA
IRECON SPECIFICATION						
Current Gain (I <sub>L</sub> to CS)	AI	-35A < I <sub>L</sub> < +50A (Note 5)	95,000	100,000	105,000	A/A
TEMPERATURE SENSOR SPECIFI	CATIONS					
Temperature Sensor Gain	A <sub>TEMP</sub>			3.01		mV/°C
Temperature Sensor Voltage	—	$T_J = 0^{\circ}C$		832		mV
PROTECTION FEATURES						
V <sub>DD</sub> UVLO Threshold (Rising)			1.47	1.57	1.64	V
V <sub>DD</sub> UVLO Threshold (Falling)	VDD_UVLO		1.41	1.5	1.58	V
V <sub>DDH</sub> UVLO Threshold (Rising)	N		4.05	4.27	4.44	V
V <sub>DDH</sub> UVLO Threshold (Falling)	VDDH_UVLO		3.90	4.09	4.30	V
BST UVLO Threshold (Rising)		(Nata C)	1.39	1.52	1.66	V
BST UVLO Threshold (Falling)	V <sub>BST_UVLO</sub>	(Note 6)	1.29	1.45	1.58	V
Peak Positive-OCP Clamp Level	IOCP_CLAMP		64	72	80	Α
Peak Positive-OCP Clamp Delay (Note 7)	IOCP_CLAMP_ DELAY			13		ns
Peak Positive-OCP Falling Level	IOCP_FALL	(Note 5, 8)	45.7	54.9	64.2	А
Peak Negative-OCP Clamp Level	INOCP_CLAMP		-79.1	-71.9	-64.7	А
Peak Negative-OCP Delay (Note 9)	INOCP_ CLAMP_DELAY			68.5		ns
Overtemperature Shutdown	OTP	Rising threshold	148	160	172	°C

# Smart Slave IC with Integrated Current and Temperature Sensors

### **Electrical Characteristics (continued)**

 $(V_{DD} = V_{CC} = +1.8V, V_{DDH} = +12V$ , unless otherwise noted. Specifications are 100% production tested at T<sub>A</sub> = +32°C unless otherwise noted.)

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
PWM INPUT						
Input Voltage, High State	VIH		V <sub>DD</sub> - 0.2	:0		V
Input Voltage, Low State	VIL				0.20	V
Tristate Control Threshold (PWM Input Rising)	_			0.63		V
TS_FAULT INPUT	· · ·		·			
TS_FAULT Digital Threshold VIH	VIH		0.41			V
TS_FAULT Digital Threshold VIL	VIL				0.17	V

Note 3: T<sub>SENSE</sub>, PWM, and CS pins of the slave are pulled low by the controller. The slave is in this state before the controller is enabled.

**Note 4:** Inactive, no switching: PWM signal is three stated by the controller. The slave is in this mode when the controller sheds a phase (temporarily disabling this slave) to save power at lighter loads.

Note 5: Design guaranteed by bench characterization. Limits are not production tested.

Note 6: BST UVLO is measured with respect to VX and not from ground.

Note 7: Delay is defined as the time input threshold is crossed to the time FET turns off.  $V_{DD} = V_{CC} = 1.8V$ ,  $V_{DDH} = 12V$ , inductor = 50nH


Note 8: Limits are  $\pm 4\sigma$  about the mean.

**Note 9:** Delay is defined as the time input threshold is crossed to the time comparator output toggles.  $V_{DD} = V_{CC} = 1.8V$ ,  $V_{DDH} = 12V$ , inductor = 50nH


### Smart Slave IC with Integrated Current and Temperature Sensors

### **Typical Operating Characteristics**

(Controller: T<sub>A</sub> = +25°C; f<sub>SW</sub> = 500kHz, unless otherwise noted.)

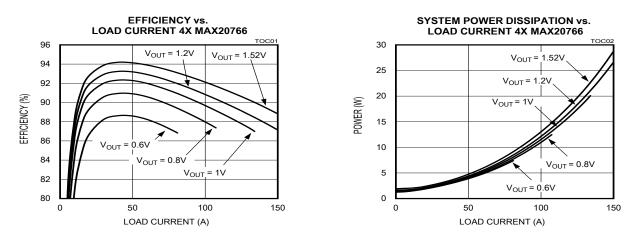

(Thermal parameters are taken from an evaluation board with 4xMAX20766 and MAX20751 controller at  $V_{IN}$  = 12V,  $f_{SW}$  = 500kHz, unless otherwise noted.)

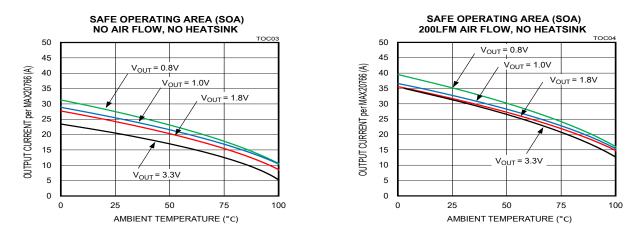

#### SAFE OPERATING AREA (SOA) 400LFM AIR FLOW, NO HEATSINK TOCO 50 V<sub>OUT</sub> = 0.8V 45 V<sub>OUT</sub> = 1.0V OUTPUT CURRENT per MAX20766 (A) 40 V<sub>OUT</sub> = 1.8V 35 30 25 20 15 V<sub>OUT</sub> = 3.3V 10 5 0 0 25 50 75 100 AMBIENT TEMPERATURE (°C)

### Smart Slave IC with Integrated Current and Temperature Sensors

#### TS\_FAULT TOP VIEW GND PWM VDD V<sub>CC</sub> SS ¦ 16 ¦ ¦ 15¦ 12 ¦ 11 ¦ 14 13¦ $V_{\text{DDH}}$ (10 BST VX 9 $V_{SS}$ VX 8 $V_{SS}$ 7 VX $V_{SS}$ VX 6 V<sub>SS</sub> 5 MAX20766 16-PIN FCQFN


### **Pin Configuration**

### **Pin Description**

PIN	NAME	FUNCTION
1	V <sub>DDH</sub>	12V Input Supply Voltage Node. This node connects to the 12V input power source. High-frequency decoupling capacitors must be placed in close proximity to the slave IC on the same side as the MAX20766 (see Table 2).
2–5	V <sub>SS</sub>	Power-Switch Ground Node. These nodes normally connect directly to the ground plane.
6–9	VX	Switching Node. These nodes connect the switching node of the power devices to the output inductor.
10	BST	Bootstrap Supply for High-Side Drivers. Decouple this pin with 0.22µF capacitor (see Table 2).
11	V <sub>CC</sub>	1.8V Supply for Low-Side Drivers. Decouple this pin with a 1µF capacitor (see Table 2).
12	V <sub>DD</sub>	1.8V Supply for Control Circuits. Decouple this pin with a 0.1µF capacitor (see Table 2).
13	PWM	PWM Input Node. Connect this node to the PWM output pin from the master.
14	GND	Ground for Control Circuits
15	ISENSE	Current-Sense Output Node. Connect this node to the current-sense input of the master through a simple passive filter (3.01k $\Omega$ , add 22pF capacitor if excessive board noise is present).
16	TS_FAULT	Temperature-Sense and Fault Output Node. Connect this node to the temperature-sense pin of the master through a simple passive filter (4.7 $\Omega$ + 100pF).

### Smart Slave IC with Integrated Current and Temperature Sensors

### Block Diagram

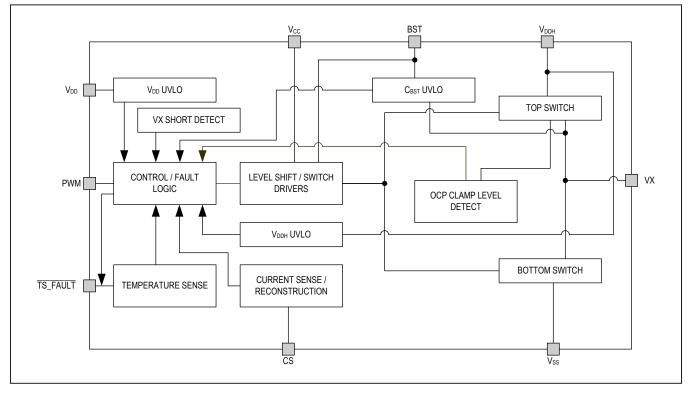

### **Detailed Description**

#### **Voltage Regulation**

Maxim smart slave ICs provide the control logic, drivers, monitoring circuits, and power semiconductors for a synchronous buck converter. Precision measurement circuitry enables fault protection, status monitoring, and accurate lossless current sensing. Phases are controlled by the controller IC independently by separate pulsewidth modulation (PWM) control signals.

#### **Power-Switch Control and Drivers**

The smart slave ICs operate in conjunction with a Maxim controller IC. The controller configures the voltage regulator through pin strapping and the number of populated phases. The smart slave IC's switching is controlled by the proprietary command signals on the PWM signals. The PWM control signal has three defined states: high, low, and three state. The three-state signal is used for phase shedding and DCM modes.

An external boost capacitor (0.22 $\mu$ F) is required to supply the voltage for the high-side switch driver. V<sub>DD</sub> and V<sub>CC</sub> are brought out separately to allow separate decoupling to improve noise immunity on the V<sub>DD</sub> rail. The V<sub>DD</sub>

pin requires a  $0.1\mu F$  decoupling capacitor. The  $V_{CC}$  pin requires  $1\mu F$  decoupling capacitor. A  $10\Omega$  filter resistor is required between the  $V_{DD}$  and  $V_{CC}$  pins of each smart slave IC.

#### **Current-Sense Output**

The integrated lossless current sense (or "current reconstruction") produces a precise ratiometric current-sense signal (CS) for both positive and negative currents. CS connects to the controller as an analog current signal. This current-sense technology provides accurate current information over load and temperature not affected by tolerances of passive elements such as the output inductor, resistors, and capacitors.

#### **Phase Configuration**

The ability for the controller to dynamically disable and re-enable a phase is an integral part of the Maxim controller/slave architecture. The controller sets the phase control signal to three state to disable a phase; the same state is used to control DCM operation. When using a coupled-inductor mode, a proprietary mode can be set by the controller, communicated to the smart slave through PWM to minimize losses due to coupled currents in inactive phases.

### Smart Slave IC with Integrated Current and Temperature Sensors

#### **Protection Circuits**

#### **Overcurrent Protection**

The smart slave ICs incorporate instantaneous overcurrent-fault protection using the lossless current sense. This overcurrent protection is separate from the system overcurrent protection, and is intended to operate only in extreme fault conditions to protect the IC and other components.

The system overcurrent protection set by the controller should be set with sufficient margin below the individual slave's threshold to ensure correct system operation. For current-sourcing operation, if the instantaneous current in the top switch exceeds the overcurrent-protection threshold listed in the Electrical Characteristics table, the slave truncates the top-side switch to keep its peak current at a safe level. The overcurrent-protection mechanism is shown in Figure 1. The protection threshold is set to ensure that the IC's maximum allowable peak current is not exceeded when using the recommended inductors. Limiting the current sourcing is not considered a hard fault condition for the slave; therefore, TS FAULT is not asserted. Since clamping is based on instantaneous reconstructed current, the ripple current must be considered when calculating the maximum average current per slave. The maximum average current before clamping can be calculated using Equation 1. Limits shown in the *Electrical* Characteristics table reflect expected variations in application conditions and external component characteristics. Also note that the controller (i.e., the system) overcurrent protection should be set lower than the corresponding slave's maximum operating current, as stated above.

Equation 1:

$$|SDCA| = |OCP_CLAMP| - \frac{|RIPPLE|}{2}$$

where:

I<sub>SDCA</sub> = Maximum average DC slave current (A)

IOCP CLAMP = Peak OCP clamp level (A)

I<sub>RIPPLE</sub> = Peak-to-peak inductor ripple current (A)

The MAX20766 also includes a negative current limit. If the negative protection limit is reached, the slave limits the FET off-time and  $TS_FAULT$  is not asserted.

#### V<sub>DD</sub> and BST Undervoltage Lockout (UVLO)

The smart slave ICs include UVLO circuits on the V<sub>DD</sub> and BST inputs. For power-sequencing guidelines and operation with separate bias rails for controller and slaves, refer to the data sheet of the controller used to drive the MAX20766. BST UVLO is active at all times after the initial system startup. It is not active during the initial system power-on state (before regulation is enabled), and is activated approximately 20µs after initial startup. If either of these UVLO circuits is tripped during operation, the smart slave stops switching and  $\overline{TS}_FAULT$  is pulled low.

#### VIN (VDDH) Undervoltage Lockout

The smart slave ICs include a protection circuit that shuts down the slave and asserts  $\overline{\text{TS}_F\text{AULT}}$  if  $\text{V}_{\text{DDH}}$  is below  $\text{V}_{\text{DDH}_{\text{UVLO}}}$ . If this circuit is tripped during operation, the slave stops switching, and  $\overline{\text{TS}_F\text{AULT}}$  is pulled low.

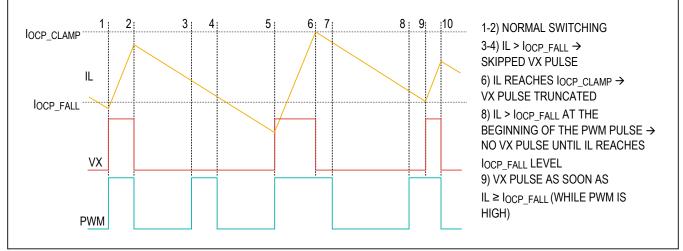


Figure 1. Overcurrent Protection Behavior

#### Temperature Sensing and Overtemperature Protection

Each smart slave IC incorporates an accurate die temperature sensor. The temperature-sense signal is sent to the controller as an analog signal through the temperature-sense pin. The actual temperature of each smart slave IC is then made available through the SMBus of the controller. The smart slave IC also includes overtemperature protection. If the trip point is reached, the IC immediately shuts down and the fault is reported to the controller through the TS\_FAULT pin.

#### **VX Short Protection**

The smart slave ICs include a VX short detection during switching to detect a local short circuit from the VX node to either  $V_{DDH}$  or ground. If such a fault is detected, the slave shuts down and communicates a fault to the controller through the  $\overline{TS}_{FAULT}$  pin.

#### **TS\_FAULT** Signal

If a fault is detected, the smart slave IC sends a signal to the controller by pulling the  $\overline{\text{TS}_\text{FAULT}}$  pin low. Under normal conditions, this pin is used to send an accurate analog voltage representation of the slave's temperature. If a fault is detected, this pin is asserted low. <u>Table 1</u> summarizes the faults and the slave's exact response. For a latching fault, the fault must be cleared by power cycling V<sub>DD</sub>.

### **Design Considerations**

# Phase-Current Sharing and Steering Control

Maxim controller/slave chipsets offer options for thermal balancing in applications where one or more phases have different thermal characteristics. The current-sense and chipset regulation system offer the potential for current steering, where a percentage of current can be steered away from any phase, allowing that phase to operate at a different current than the other phases. This allows a precise scaling of current in any slave or slaves to achieve proper thermal balance. For more information about how to program this feature, refer to the data sheet of the controller used to drive the MAX20766.

#### **Thermal Path and PCB Design**

The smart slave IC has a package that exposes the top side of the die. The top side of the die is electrically connected to GND/V<sub>SS</sub>, but is not intended for use as an electrical connection. Since there is normally sufficient airflow above the regulator, conducting heat from the top of the package results in a low junction-to-ambient thermal impedance, and hence lower junction temperature. This method provides an additional thermal path to the heat flow from the die-to-PCB-to-ambient temperature, and also reduces the temperature of the PCB. Use a pad and an insulator that electrically insulates the top side of the die from the heatsink if a heatsink is used. Thermal performance is presented for various thermal conditions and airflow rates in the safe operating area (SOA) plots in the *Typical Operating Characteristics* section.

FAULT	DESCRIPTION	ТҮРЕ	FAULT FLAG (TS_FAULT)
BST UVLO	Undervoltage Lockout on Boost Supply	Shutdown (Note 1)	Asserted
V <sub>DDH UVLO</sub>	Undervoltage Lockout on V <sub>DDH</sub>	Shutdown (Note 1)	Asserted
V <sub>DD UVLO</sub>	Undervoltage Lockout Signal on V <sub>DD</sub>	Shutdown (Note 1)	Asserted
VX Short	VX Short-to-Ground or V <sub>DDH</sub>	Shutdown (Note 2)	Asserted
POCP (Sourcing)	Positive (Sourcing) Overcurrent Protection	Cycle-by-Cycle Current Limit	Not Asserted
NOCP (Sinking)	Negative (Sinking) Overcurrent Protection	Cycle-by-Cycle Current Limit	Not Asserted
OTP	Overtemperature Protection	Shutdown (Note 2)	Asserted

#### **Table 1. Fault-Detection and Protection Circuits**

**Note 1:**  $V_{DDH}$  UVLO, BST UVLO, and  $V_{DD}$  UVLO are nonlatching faults. If the slave detects a nonlatching fault, it asserts the  $\overline{TS}_{FAULT}$  signal low and stops switching. The slave resumes switching and deasserts  $\overline{TS}_{FAULT}$  approximately 37µs from when the fault condition is removed. For the controller response to  $\overline{TS}_{FAULT}$  being asserted low by the slave device, refer to the data sheet of the controller used to drive the MAX20766.

Note 2: VX Short and OTP are latching faults and must be reset by power cycling V<sub>DD</sub>.

### Smart Slave IC with Integrated Current and Temperature Sensors

#### **PCB Layout Guidelines**

The PCB layout can significantly affect the performance of the regulator. Careful attention should be paid to the location of the input capacitors and the output inductor, which should be placed close to the IC. The VX traces include large voltage swings (greater than 12V) with dv/dt greater than 10V/ns. It is recommended that these traces not only be kept short, but also be shielded with a ground plane immediately beneath. Gerber files with layout information and complete reference designs can be obtained by contacting a Maxim account representative. Contact Maxim to obtain QFN layout guidelines for optimal design.

#### Table 2. Typical Boost, Filtering, and Decoupling Capacitor Requirements

DESCRIPTION	VALUE	TYPE	PACKAGE	QTY
V <sub>DD</sub> Capacitor	0.1µF/6.3V	X7R	0603	1
V <sub>CC</sub> Capacitor	1µF/6.3V	X7R	0603	1
BST Capacitor	0.22µF/6.3V	X7R	0402	1
V <sub>DD</sub> R <sub>FILTER</sub>	10Ω	1/16W 1%	0402	1
V <sub>DDH</sub> HF Capacitor (Note 1)	1µF/25V	X7R	0603	2
V <sub>DDH</sub> HF Capacitor (Note 2)	4.7µF/25V	X7R	0402	2
V <sub>DDH</sub> Bulk Capacitor (Note 3)	10µF/25V	X5R	0805/1206	2

**Note 1:** All V<sub>DDH</sub> high-frequency capacitors must be placed in close proximity to the slave IC and on the same side of the PCB as the slave IC. Refer to the <u>PCB Layout Guidelines</u> section for component placement requirements and recommendations.

Note 2: For operation below 10.8V, two 22µF bulk capacitors are recommended instead of two 10µF capacitors.

*Note 3:* V<sub>CC</sub> should be directly connected to the bias supply.

#### **Ordering Information**

PART	TEMP RANGE	PIN-PACKAGE	
MAX20766EPE+T	-40°C to +85°C	16 FCQFN	

+Denotes a lead(Pb)-free/RoHS-compliant package. T = Tape and reel.

### Smart Slave IC with Integrated Current and Temperature Sensors

### **Revision History**

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	12/16	Initial release	—
1	12/17	Updated table on first page	1

For information on other Maxim Integrated products, visit Maxim Integrated's website at www.maximintegrated.com.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time. The parametric values (min and max limits) shown in the Electrical Characteristics table are guaranteed. Other parametric values quoted in this data sheet are provided for guidance.

## **Mouser Electronics**

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Analog Devices Inc.:

MAX20766EPE+ MAX20766EPE+T