

# RAA210833

Pin-Configurable 33A DC/DC Power Module with PMBus Interface

FN9348  
Rev.0.00  
Aug 31, 2018

The [RAA210833](#) is a pin-strap-configurable 33A step-down PMBus-compliant DC/DC power supply module that integrates a digital PWM controller, synchronous MOSFETs, power inductor, and passive components. Only input and output capacitors are needed to finish the design. Because of its thermally enhanced HDA packaging technology, the module can deliver up to 33A of continuous output current without the need for airflow or additional heat sinking. The RAA210833 simplifies configuration and control of Renesas [digital power technology](#) while offering an upgrade path to full PMBus configuration through the pin-compatible ISL8278M.


The RAA210833 uses ChargeMode™ control architecture, which responds to a transient load within a single switching cycle. The RAA210833 comes with a preprogrammed configuration for operating in a pin-strap mode. Output voltage, switching frequency, input UVLO, soft-start/stop delay and ramp times, and the device SMBus address can be programmed with external pin-strap resistors. A standard PMBus interface addresses fault management, as well as real-time full telemetry and point-of-load monitoring.

The RAA210833 is available in a 41 Ld compact 17mmx19mm HDA module with a very low profile height of 3.6mm, suitable for automated assembly by standard surface mount equipment. The RAA210833 is RoHS compliant by exemption.

## Related Literature

For a full list of related documents, visit our website

- [RAA210833](#) product page

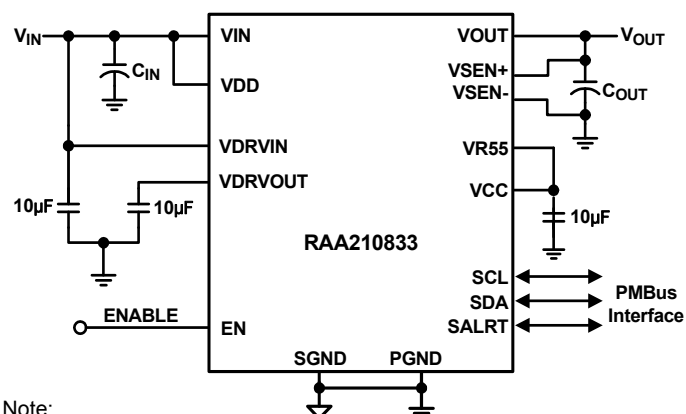

Note:

1. Only bulk input and output capacitors are required to finish the design.

Figure 1. A Complete Digital Switch-Mode Power Supply

## Features

- 33A single channel output current
- Wide  $V_{IN}$  range: 4.5V to 14V
- Programmable output voltage
  - 0.6V to 5V output voltage settings
  - $\pm 1.2\%$  accuracy over line/load/temperature
- PMBus Interface and/or Pin-strap mode
  - Pin-strap mode for standard settings
  - $V_{OUT}$ , switching frequency, input UVLO, soft-start/stop, and external sync
  - Real time telemetry for  $V_{IN}$ ,  $V_{OUT}$ ,  $I_{OUT}$ , temperature, duty cycle, and switching frequency.
- ChargeMode control loop architecture
  - 296kHz to 1.06MHz fixed switching frequency operations
  - No compensation required
  - Fast single clock cycle transient response
- Complete input and output over/undervoltage, output current, and temperature protections with fault logging
- [PowerNavigator](#) supported
- Thermally enhanced HDA package

## Applications

- Server, telecom, storage, and datacom
- Industrial/ATE and networking equipment
- General purpose power for ASIC, FPGA, DSP, and memory

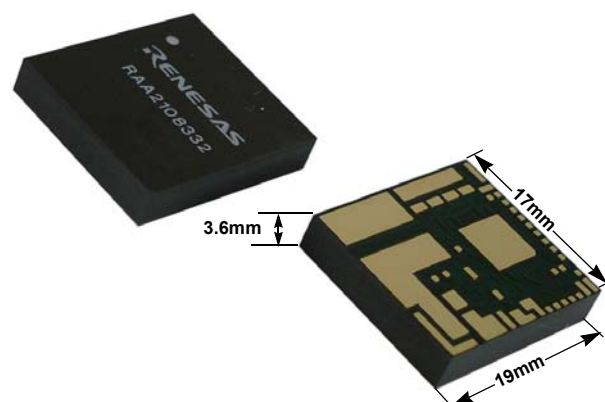


Figure 2. A Small Package for High Power Density

# Contents


<b>1. Overview</b>	<b>4</b>
1.1 Typical Application Circuit	4
1.2 RAA210833 Internal Block Diagram	7
1.3 Ordering Information	8
1.4 Pin Configuration	9
1.5 Pin Descriptions	9
<b>2. Specifications</b>	<b>11</b>
2.1 Absolute Maximum Ratings	11
2.2 Thermal Information	11
2.3 Recommended Operating Conditions	12
2.4 Electrical Specifications	12
<b>3. Typical Performance Curves</b>	<b>15</b>
3.1 Efficiency Performance	15
3.2 Transient Response Performance	16
3.3 Derating Curves	17
<b>4. Functional Description</b>	<b>19</b>
4.1 SMBus Communications	19
4.2 Output Voltage Selection	19
4.3 Soft-Start Delay and Ramp Times	21
4.4 Power-Good	22
4.5 Switching Frequency and PLL	22
4.6 Loop Compensation	23
4.7 Input Undervoltage Lockout (UVLO)	24
4.8 SMBus Module Address Selection	25
4.9 Output Overvoltage Protection	26
4.10 Output Prebias Protection	26
4.11 Output Overcurrent Protection	27
4.12 Thermal Overload Protection	28
4.13 Phase Spreading	28
4.14 Monitoring Through SMBus	28
4.15 Snapshot Parameter Capture	29
<b>5. PCB Layout Guidelines</b>	<b>30</b>
5.1 Thermal Considerations	31
5.2 Package Description	31
5.3 PCB Layout Pattern Design	31
5.4 Thermal Vias	31
5.5 Stencil Pattern Design	31
5.6 Reflow Parameters	32

---

<b>6.</b>	<b>PMBus Command Summary</b>	<b>33</b>
6.1	PMBus Data Formats	35
6.2	PMBus Use Guidelines	35
<b>7.</b>	<b>PMBus Commands Description</b>	<b>36</b>
<b>8.</b>	<b>Revision History</b>	<b>49</b>
8.1	Firmware	49
8.2	Datasheet	49
<b>9.</b>	<b>Package Outline Drawing</b>	<b>50</b>

## 1. Overview

### 1.1 Typical Application Circuit

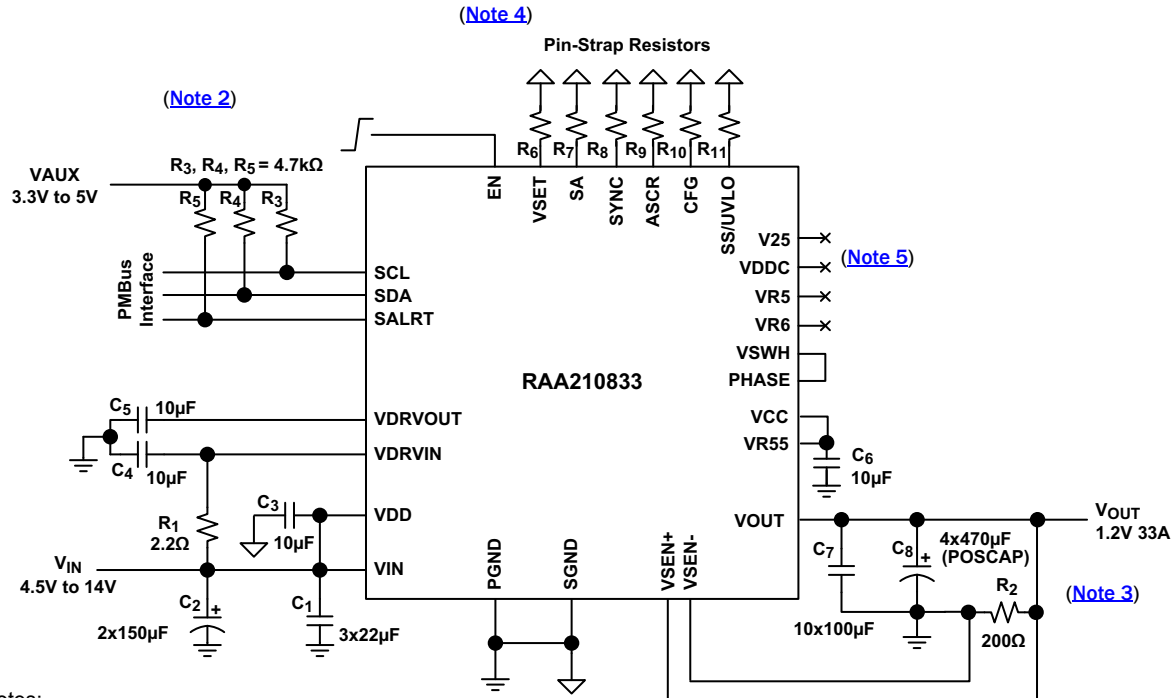

Notes:

- R<sub>3</sub> and R<sub>4</sub> are not required if the PMBus host already has I<sup>2</sup>C pull-up resistors.
- R<sub>2</sub> is optional but recommended to sink possible ~100iA back-flow current from the VSEN+ pin. Back-flow current is present only when the module is in a disabled state with power still available at the VDD pin.
- R<sub>6</sub> through R<sub>11</sub> can be selected according to the tables for the pin-strap resistor setting in this document.
- Internal reference supply pins (V25, VDDC, VR5, VR6) do not need external capacitors and can be no connect. Refer to "[PCB Layout Guidelines](#)" on page 30 for more information.

Figure 3. Typical Single-Phase Application Circuit for 1.2V/33A Output

Table 1. RAA210833 Design Guide Matrix and Output Voltage Response

V <sub>IN</sub> (V)	V <sub>OUT</sub> (V)	Input Capacitors	Output Capacitors	ASCR Gain (Note 7)	ASCR Residual (Note 7)	Frequency (kHz) (Note 9)	V <sub>OUT</sub> Dev Peak-to-Peak (mV) (Note 8)
5	0.7	3x22μF Ceramic + 2x150μF POS	12x100μF Ceramic + 6x470μF POS	350	100	296	75
5	0.7	3x22μF Ceramic + 2x150μF POS	4x100μF Ceramic + 6x470μF POS	400	90	615	73
12	0.7	3x22μF Ceramic + 2x150μF POS	12x100μF Ceramic + 6x470μF POS	350	100	296	78
12	0.7	3x22μF Ceramic + 2x150μF POS	4x100μF Ceramic + 6x470μF POS	500	90	615	72
5	0.8	3x22μF Ceramic + 2x150μF POS	12x100μF Ceramic + 6x470μF POS	350	100	296	74
5	0.8	3x22μF Ceramic + 2x150μF POS	4x100μF Ceramic + 6x470μF POS	400	80	615	73
12	0.8	3x22μF Ceramic + 2x150μF POS	12x100μF Ceramic + 6x470μF POS	350	100	296	75

Table 1. RAA210833 Design Guide Matrix and Output Voltage Response (Continued)

$V_{IN}$ (V)	$V_{OUT}$ (V)	Input Capacitors	Output Capacitors	ASCR Gain (Note 7)	ASCR Residual (Note 7)	Frequency (kHz) (Note 9)	$V_{OUT}$ Dev Peak-to-Peak (mV) (Note 8)
12	0.8	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	4x100 $\mu$ F Ceramic + 6x470 $\mu$ F POS	400	80	615	73
5	0.9	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	12x100 $\mu$ F Ceramic + 5x470 $\mu$ F POS	350	90	364	75
5	0.9	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	4x100 $\mu$ F Ceramic + 5x470 $\mu$ F POS	300	70	615	84
12	0.9	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	12x100 $\mu$ F Ceramic + 5x470 $\mu$ F POS	350	80	364	85
12	0.9	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	4x100 $\mu$ F Ceramic + 5x470 $\mu$ F POS	400	80	615	84
5	1	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	12x100 $\mu$ F Ceramic + 4x470 $\mu$ F POS	350	90	364	81
5	1	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	4x100 $\mu$ F Ceramic + 4x470 $\mu$ F POS	350	80	615	89
12	1	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	12x100 $\mu$ F Ceramic + 4x470 $\mu$ F POS	350	90	364	85
12	1	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	4x100 $\mu$ F Ceramic + 4x470 $\mu$ F POS	350	80	615	90
5	1.2	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	10x100 $\mu$ F Ceramic + 4x470 $\mu$ F POS	250	90	364	100
5	1.2	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	4x100 $\mu$ F Ceramic + 3x470 $\mu$ F POS	300	80	727	103
12	1.2	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	10x100 $\mu$ F Ceramic + 4x470 $\mu$ F POS	250	90	364	110
12	1.2	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	4x100 $\mu$ F Ceramic + 3x470 $\mu$ F POS	300	80	727	110
5	1.5	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	7x100 $\mu$ F Ceramic + 2x470 $\mu$ F POS	250	90	471	130
5	1.5	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	4x100 $\mu$ F Ceramic + 2x470 $\mu$ F POS	350	90	727	125
12	1.5	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	7x100 $\mu$ F Ceramic + 2x470 $\mu$ F POS	250	90	471	147
12	1.5	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	4x100 $\mu$ F Ceramic + 2x470 $\mu$ F POS	350	90	727	130
5	1.8	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	6x100 $\mu$ F Ceramic + 2x470 $\mu$ F POS	200	90	471	155
5	1.8	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	4x100 $\mu$ F Ceramic + 2x470 $\mu$ F POS	210	80	727	155
12	1.8	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	6x100 $\mu$ F Ceramic + 2x470 $\mu$ F POS	200	90	471	160
12	1.8	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	4x100 $\mu$ F Ceramic + 2x470 $\mu$ F POS	210	80	727	160
5	2.5	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	4x100 $\mu$ F Ceramic + 1x470 $\mu$ F POS	190	100	615	215
12	2.5	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	4x100 $\mu$ F Ceramic + 1x470 $\mu$ F POS	190	100	615	226

**Table 1. RAA210833 Design Guide Matrix and Output Voltage Response (Continued)**

$V_{IN}$ (V)	$V_{OUT}$ (V)	Input Capacitors	Output Capacitors	ASCR Gain ( <a href="#">Note 7</a> )	ASCR Residual ( <a href="#">Note 7</a> )	Frequency (kHz) ( <a href="#">Note 9</a> )	$V_{OUT}$ Dev Peak-to-Peak (mV) ( <a href="#">Note 8</a> )
12	3.3	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	4x100 $\mu$ F Ceramic + 1x470 $\mu$ F POS	190	100	615	236
12	5	3x22 $\mu$ F Ceramic + 2x150 $\mu$ F POS	4x100 $\mu$ F Ceramic + 1x470 $\mu$ F POS	160	100	727	278


Notes:

6.  $C_{IN}$  bulk capacitor is optional only for energy buffer from the long input power supply cable.
7. ASCR gain and residual are selected to ensure that the phase margin is higher than 60° at ambient room temperature (+25°C).
8. Peak-to-peak voltage deviation is measured under 0% - 50% load transient and slew rate = 15A/ $\mu$ s.
9. Frequency is selected to achieve best efficiency at full load. Higher frequency can be selected because less output capacitance is required to meet the transient response specification.

**Table 2. Recommended I/O Capacitor in [Table 1](#)**

Vendors	Value	Part Number
Murata, Input Ceramic	22 $\mu$ F, 25V, 1210	GRM32ER71E226KE15L
Taiyo Yuden, Input Ceramic	22 $\mu$ F, 25V, 1210	TMK325BJ226MM-T
Murata, Output Ceramic	100 $\mu$ F, 6.3V, 1210	GRM32EC80J107ME20L
TDK, Output Ceramic	100 $\mu$ F, 6.3V, 1210	C3225X5R0J107M
Sanyo POSCAP, Input Bulk	150 $\mu$ F, 16V	16TQC150MYF
Sanyo POSCAP, Output Bulk	470 $\mu$ F, 6.3V	6TPE470MI

## 1.2 RAA210833 Internal Block Diagram

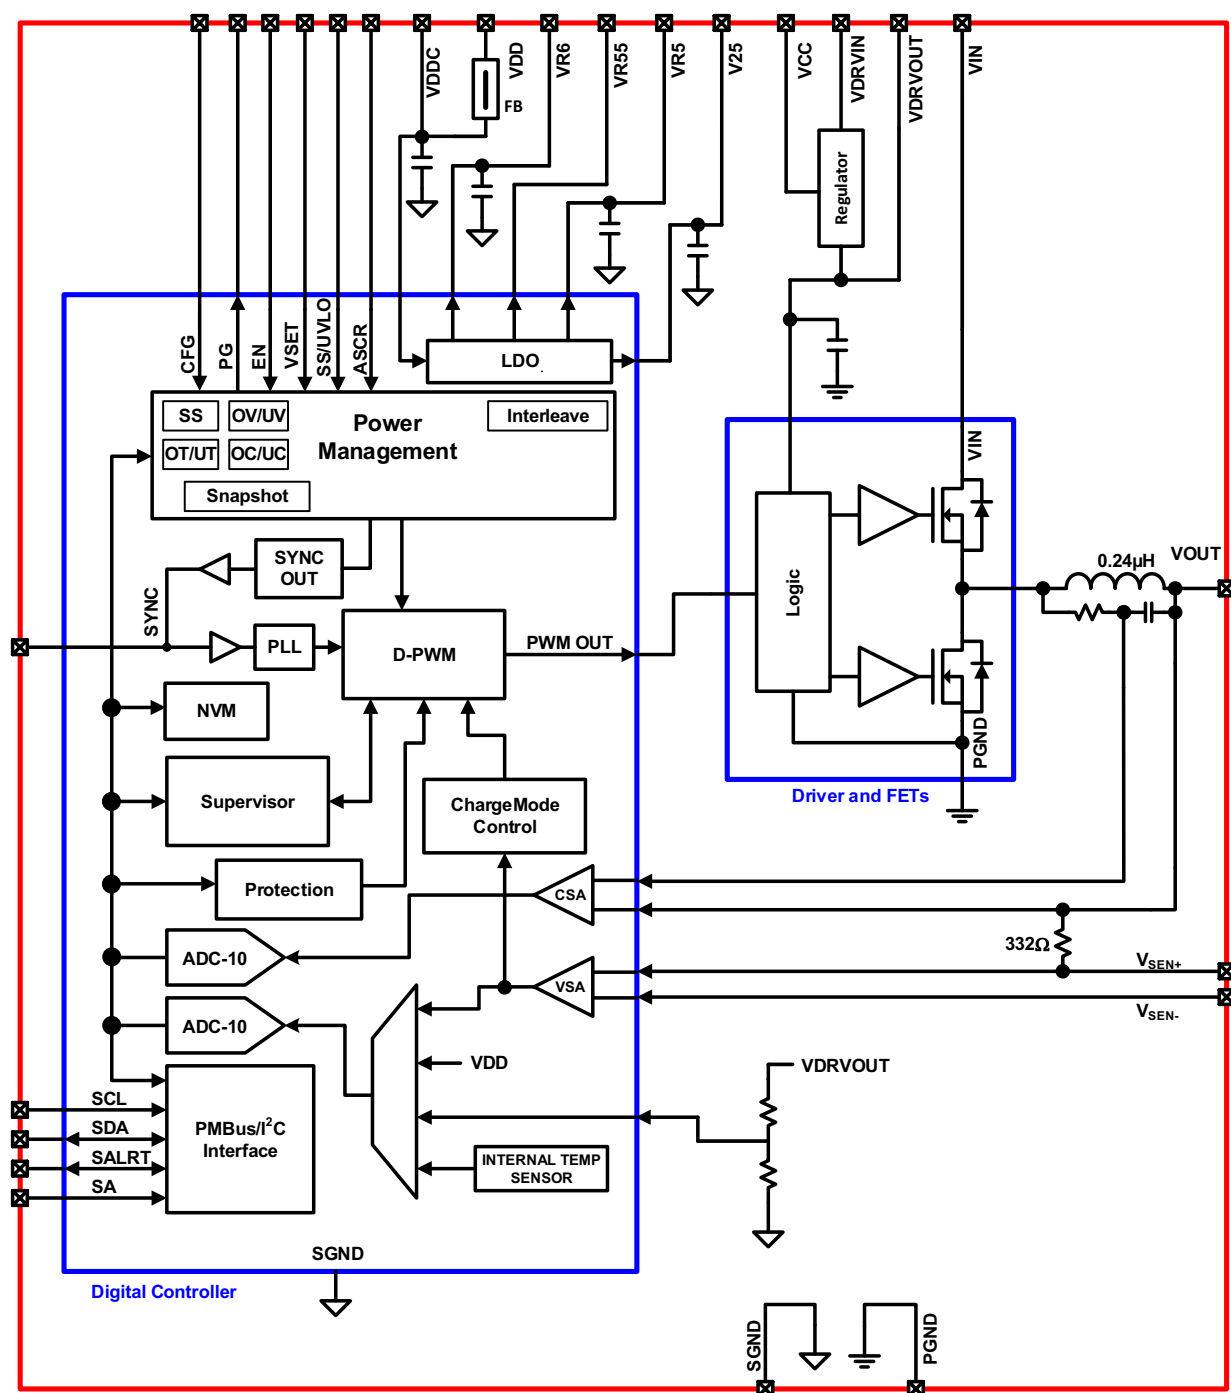

### Figure 4. Internal Block Diagram

### 1.3 Ordering Information

Part Number (Notes 10, 11, 12)	Part Marking	Temp Range (°C)	Tape and Reel (Units) (Note 1)	Package (RoHS Compliant)	Pkg. Dwg. #
RAA2108332GLG#AG0	RAA2108332	-40 to +85	-	41 Ld 17x19 HDA	Y41.17x19
RAA2108332GLG#HG0	RAA2108332	-40 to +85	500	41 Ld 17x19 HDA	Y41.17x19
RAA2108332GLG#MG0	RAA2108332	-40 to +85	100	41 Ld 17x19 HDA	Y41.17x19
RTKA2108332H00000BU	Evaluation Board				

Notes:

10. Refer to [TB347](#) for details about reel specifications.
11. These Pb-free plastic packaged products are RoHS compliant by EU exemption 7C-I and 7A. They employ special Pb-free material sets; molding compounds/die attach materials and NiPdAu plate-e4 termination finish, which is compatible with both SnPb and Pb-free soldering operations. Pb-free products are MSL classified at Pb-free peak reflow temperatures that meet or exceed the Pb-free requirements of IPC/JEDEC J STD-020.
12. For Moisture Sensitivity Level (MSL), see the [RAA210833](#) product information page. For more information about MSL, see [TB363](#).

**Table 3. Key Differences between Family of Parts**

Part Number	Description	V <sub>IN</sub> Range (V)	V <sub>OUT</sub> Range (V)	I <sub>OUT</sub> (A)
RAA210833	33A DC/DC single channel Power Module	4.5 - 14	0.6 - 5	33
RAA210825	25A DC/DC single channel Power Module	4.5 - 14	0.6 - 5	25
RAA210850	50A DC/DC single channel Power Module	4.5 - 14	0.6 - 5	50
RAA210870	70A DC/DC single channel Power Module	4.5 - 14	0.6 - 2.5	70
RAA210925	25A/25A DC/DC dual channel Power Module	4.5 - 14	0.6 - 5	25/25


**Table 4. Comparison of Simple Digital and Full Digital Parts**

	ISL8278M	RAA210833
V <sub>IN</sub> (V)	4.5 - 14	4.5 - 14
V <sub>OUT</sub> (V)	0.6 - 5	0.6 - 5
I <sub>OUT</sub> (Max) (A)	33	33
f <sub>sw</sub> (kHz)	296 - 1067	296 - 1067
Digital PMBus Programmability for Configuration of Modules	All PMBus commands, NVM access to store module configuration	Configuration of modules supported by pin-strap resistors. Digital programmability supports configuration changes during run-time operation with a subset of PMBus commands. No NVM access to store module configuration
Power Navigator Support	Yes	Yes
SYNC Capability	Yes	Yes
Current Sharing Multi-Modules	No	No
DDC Pin (Inter-Device Communication)	Yes	No

Note: For a full comparison of all the RAA210XXX and ISL827XM product offerings, please visit the [simple-digital module family](#) page.



## 1.4 Pin Configuration

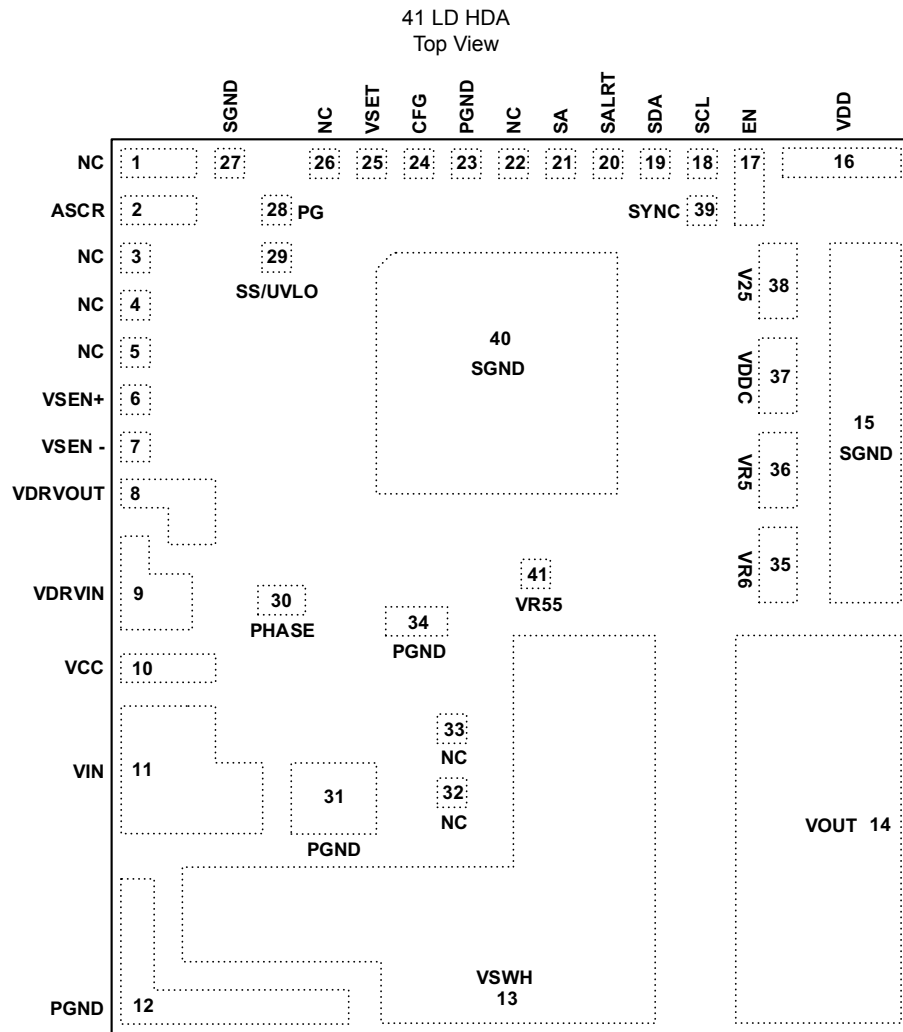

## 1.5 Pin Descriptions

Pin Number	Label	Type	Description
2	ASCR	I	ChargeMode control ASCR parameters selection pin. Used to set ASCR gain and residual values.
6	VSEN+	I	Differential output voltage sense feedback. Connect to the positive output regulation point.
7	VSEN-	I	Differential output voltage sense feedback. Connect to the negative output regulation point.
8	VDRVOUT	PWR	Output of internal regulator for powering internal MOSFET driver. Connect a 10μF bypass capacitor to this pin. The regulator output is dedicated to powering internal MOSFET drivers. Do not use this regulator for any other purpose. For applications with $V_{IN}$ less than 5.2V, use an external 5V supply or connect this pad to VIN.
9	VDRVIN	PWR	Input supply to internal regulator for powering internal MOSFET drivers. Connect this pad to VIN.
10	VCC	PWR	Bias pin for internal regulator. Connect VCC pad to VR55 pin directly with a short loop trace. Not recommended to power external circuit.
11	VIN	PWR	Main input supply. Refer to <a href="#">"PCB Layout Guidelines" on page 30</a> for the decoupling capacitors placement from VIN to PGND.

Pin Number	Label	Type	Description
12, 23, 31, 34	PGND	PWR	Power ground. Refer to <a href="#">"PCB Layout Guidelines" on page 30</a> for the PGND pad connections and decoupling capacitors placement.
13	VSWH	PWR	Switch node. Refer to <a href="#">"PCB Layout Guidelines" on page 30</a> for connecting VSWH pads to electrically isolate the PCB copper island to dissipate internal heat.
14	VOOUT	PWR	Power supply output. Range: 0.6V to 5V. Refer to <a href="#">"Derating Curves" on page 17</a> for maximum recommended output current at various output voltages.
15, 27, 40	SGND	PWR	Controller signal ground. Refer to <a href="#">"PCB Layout Guidelines" on page 30</a> for the SGND pad connections.
16	VDD	PWR	Input supply to digital controller. Connect VDD pad to VIN supply.
17	EN	I	External enable input. Logic high enables the module.
18	SCL	I/O	Serial clock input. A pull-up resistor is required for this application.
19	SDA	I/O	Serial data. A pull-up resistor is required for this application.
20	SALRT	O	Serial alert. A pull-up resistor is required for this application.
21	SA	I	Serial bus address select pin. Refer to <a href="#">Table 11 on page 25</a> for list of resistor values to set various serial bus address.
24	CFG	I	Clock source configuration. If the clock source is internal, set the internal FREQUENCY_SWITCH according to SYNC pin resistor setting. If the clock source is external, the internal FREQUENCY_SWITCH is set according to CFG pin resistor. Refer to <a href="#">Table 8 on page 23</a> for more details.
25	VSET	I	Output voltage selection pin. Refer to <a href="#">Table 5 on page 19</a> for list of resistor values to set various output voltages.
28	PG	O	Power-good output. Power-good output can be an open drain that requires pull-up resistor or push-pull output that can drive a logic input.
29	SS/UVLO	I	Soft-start/stop and undervoltage lockout selection pin. Used to set turn on/off delay and ramp time as well as input UVLO threshold levels. Refer to <a href="#">Table 6 on page 21</a> and <a href="#">Table 10 on page 24</a> for list of resistors.
30	PHASE	PWR	Switch node pad for DCR sensing. Electrically shorted inside to VSWH, but for higher current sensing accuracy connect PHASE pad to VSWH pad externally. Refer to <a href="#">"PCB Layout Guidelines" on page 30</a> .
35	VR6	PWR	6V internal reference supply voltage.
36	VR5	PWR	5V internal reference supply voltage.
37	VDDC	PWR	VDD clean. Noise at the VDD pin is filtered by an internal ferrite bead and capacitor. For VDD > 6V, leave this pin as no connect. For $5.5 \leq VDD \leq 6V$ , connect the VDDC pin to VR6 pin. For $4.5 \leq VDD < 5.5V$ , connect the VDDC pin to VR6 and the VR5 pin.
38	V25	PWR	2.5V internal reference supply voltage.
39	SYNC	I/O	Clock synchronization input. Sets the frequency of the internal switch clock, or synchronizes to an external clock. If using external synchronization, the external clock must be active before enable. Refer to <a href="#">Table 7 on page 22</a> for a list of resistor values to program various switching frequencies.
41	VR55	PWR	Internal 5.5V bias for internal regulator use only. Connect VR55 pin directly to VCC pin. Not recommended to power external circuit.
1, 3, 4, 5, 22, 26, 32, 33	NC		These are test pins and are not electrically isolated. Leave these pins as no connect.

## 2. Specifications

### 2.1 Absolute Maximum Ratings

Parameter	Minimum	Maximum	Unit
Input Supply Voltage, VIN Pin	-0.3	17	V
Input Supply Voltage for Controller, VDD, VDDC Pin	-0.3	17	V
Input Gate Driver Supply Voltage, VDRVIN Pin	-0.3	17	V
Output Gate Driver Supply Voltage, VDRVOUT Pin	-0.3	6	V
Output Voltage, VOUT Pin	-0.3	6	V
Switch Node Referenced to PGND Pin, VSWH Pin	-0.3	25	V
Switch Node for DCR Sensing Referenced to SGND Pin, PHASE Pin	-0.3	25	V
Input Bias Voltage for Internal Regulator, VCC Pin	-0.3	6.5	V
6V Internal Reference Supply Voltage, VR6 Pin	-0.3	6.6	V
Internal Reference Supply Voltage, VR5, VR55 Pin	-0.3	6.5	V
2.5V Internal Reference Supply Voltage, V25 Pin	-0.3	3	V
Logic I/O Voltage for DDC, EN, CFG, PG, ASCR, SA, SCL, SDA, SALRT, SYNC, SS/UVLO, VSET	-0.3	6	V
Analog Input Voltages for			
V <sub>SEN+</sub> , X <sub>TEMP+</sub>	-0.3	6	V
V <sub>SEN-</sub> , X <sub>TEMP-</sub>	-0.3	0.3	V
ESD Rating	Value		Unit
Human Body Model (Tested per JS-001-2017)	2		kV
Machine Model (Tested per JESD22-A115C)	200		V
Charged Device Model (Tested per JS-002-2014)	750		V
Latch-Up (Tested per JESD78E; Class 2, Level A)	100		mA

### 2.2 Thermal Information

Thermal Resistance (Typical)	$\theta_{JA}$ (°C/W)	$\theta_{JC}$ (°C/W)
41 Ld HDA Package ( <a href="#">Notes 13, 14</a> )	7.5	2.2

Notes:

13.  $\theta_{JA}$  is measured in free air with the module mounted on an 8-layer evaluation board 4.7x4.8inch in size with 2oz Cu on all layers and multiple via interconnects as specified in the [RTKA2108332H00000BU evaluation board user guide](#).
14. For  $\theta_{JC}$ , the "case temp" location is the center of the package underside.

Parameter	Minimum	Maximum	Unit
Maximum Junction Temperature (Plastic Package)		+125	°C
Storage Temperature Range	-55	+150	°C
Pb-Free Reflow Profile	Refer to <a href="#">Figure 29 on page 32</a>		

## 2.3 Recommended Operating Conditions

Parameter	Minimum	Maximum	Unit
Input Supply Voltage Range, $V_{IN}$	4.5	14	V
Input Supply Voltage Range for Controller, $V_{DD}$	4.5	14	V
Output Voltage Range, $V_{OUT}$	0.6	5	V
Output Current Range, $I_{OUT(DC)}$ (Note 17)	0	33	A
Operating Junction Temperature Range, $T_J$	-40	+125	°C

## 2.4 Electrical Specifications

$V_{IN} = V_{DD} = 12V$ ,  $f_{SW} = 533kHz$ ,  $C_{OUT} = 1340\mu F$ ,  $T_A = -40^{\circ}C$  to  $+85^{\circ}C$ , unless otherwise noted. Typical values are at  $T_A = +25^{\circ}C$ .

**Boldface limits apply across the operating temperature range,  $-40^{\circ}C$  to  $+85^{\circ}C$ .**

Parameter	Symbol	Test Conditions	Min (Note 15)	Typ	Max (Note 15)	Unit
<b>Input and Supply Characteristics</b>						
Input Supply Current for Controller	$I_{DD}$	$V_{IN} = V_{DD} = 12V$ , $V_{OUT} = 0V$ , module not enabled		40	<b>50</b>	mA
6V Internal Reference Supply Voltage	$V_{R6}$		<b>5.5</b>	6.1	<b>6.6</b>	V
Internal Regulator Output Voltage	$V_{DRVOUT}$	$V_{CC}$ connected to $V_{R55}$		5.2		V
5V Internal Reference Supply Voltage	$V_{R5}$	$I_{VR5} < 5mA$	<b>4.5</b>	5.2	<b>5.5</b>	V
2.5V Internal Reference Supply Voltage	$V_{25}$		<b>2.25</b>	2.50	<b>2.75</b>	V
5.5V Internal Reference Supply Voltage	$V_{R55}$	$V_{DD} > 6V$ ; 0A to 80mA		5.7		V
Input Supply Voltage for Controller Read Back Resolution	$V_{DD\_READ\_RES}$			$\pm 20$		mV
Input Supply Voltage for Controller Read Back Total Error (Note 18)	$V_{DD\_READ\_ERR}$	PMBus read		$\pm 2$		%FS
<b>Output Characteristics</b>						
Output Voltage Adjustment Range	$V_{OUT\_RANGE}$	$V_{IN} > V_{OUT} + 1.8V$	<b>0.54</b>		<b>5.5</b>	V
Output Voltage Set-Point Range	$V_{OUT\_RES}$	Configured using PMBus		$\pm 0.025$		%
Output Voltage Set-Point Accuracy (Notes 16, 18)	$V_{OUT\_ACCY}$	Includes line, load, and temperature ( $-20^{\circ}C \leq T_A \leq +85^{\circ}C$ )	<b>-1.2</b>		<b>+1.2</b>	%FS
Output Voltage Readback Resolution	$V_{OUT\_READ\_RES}$			$\pm 20$		mV
Output Voltage Readback Total Error (Note 18)	$V_{OUT\_READ\_ERR}$	PMBus read	<b>-2</b>		<b>+2</b>	%FS
Output Current Readback Resolution	$I_{OUT\_READ\_RES}$			10		Bits
Output Current Range (Note 17)	$I_{OUT\_RANGE}$				<b>33</b>	A
Output Current Readback Total Error	$I_{OUT\_READ\_ERR}$	PMBus read at max load at ambient room temperature		$\pm 3$		A
<b>Soft-Start and Sequencing</b>						
Delay Time From Enable to $V_{OUT}$ Rise	$t_{ON\_DELAY}$	Configured using pin-strap resistor or PMBus	<b>2</b>		<b>300</b>	ms

$V_{IN} = V_{DD} = 12V$ ,  $f_{SW} = 533kHz$ ,  $C_{OUT} = 1340\mu F$ ,  $T_A = -40^\circ C$  to  $+85^\circ C$ , unless otherwise noted. Typical values are at  $T_A = +25^\circ C$ .

**Boldface limits apply across the operating temperature range,  $-40^\circ C$  to  $+85^\circ C$ . (Continued)**

Parameter	Symbol	Test Conditions	Min ( <a href="#">Note 15</a> )	Typ	Max ( <a href="#">Note 15</a> )	Unit
$t_{ON\_DELAY}$ Accuracy	$t_{ON\_DELAY\_ACCY}$			$\pm 2$		ms
Output Voltage Ramp-Up Time	$t_{ON\_RISE}$	Configured using pin-strap resistor or PMBus	<b>0.5</b>		<b>120</b>	ms
Output Voltage Ramp-Up Time Accuracy	$t_{ON\_RISE\_ACCY}$			$\pm 250$		$\mu s$
Delay Time From Disable to $V_{OUT}$ Fall	$t_{OFF\_DELAY}$	Configured using pin-strap resistor or PMBus	<b>2</b>		<b>300</b>	ms
$t_{OFF\_DELAY}$ Accuracy	$t_{OFF\_DELAY\_ACCY}$			$\pm 2$		ms
Output Voltage Fall Time	$t_{OFF\_FALL}$	Configured using pin-strap resistor or PMBus	<b>0.5</b>		<b>120</b>	ms
Output Voltage Fall Time Accuracy	$t_{ON\_FALL\_ACCY}$			$\pm 250$		$\mu s$
<b>Power-Good</b>						
Power-Good Delay	$V_{PG\_DELAY}$			4		ms
<b>Temperature Sense</b>						
Temperature Sense Range	$T_{SENSE\_RANGE}$	Configured using PMBus	<b>-50</b>		<b>150</b>	$^\circ C$
Internal Temperature Sensor Accuracy	$INT\_TEMP\_ACCY$	Tested at $+100^\circ C$	<b>-5</b>		<b>+5</b>	$^\circ C$
<b>Fault Protection</b>						
$V_{DD}$ Undervoltage Threshold Range	$V_{DD\_UVLO\_RANGE}$	Measured internally	<b>4.18</b>		<b>16</b>	V
$V_{DD}$ Undervoltage Threshold Accuracy ( <a href="#">Note 18</a> )	$V_{DD\_UVLO\_ACCY}$			$\pm 2$		%FS
$V_{DD}$ Undervoltage Response Time	$V_{DD\_UVLO\_DELAY}$			10		$\mu s$
$V_{OUT}$ Overvoltage Threshold Range	$V_{OUT\_OV\_RANGE}$	Factory default		$1.15 \times V_{OUT}$		%
		Configured using pin-strap resistor or PMBus	<b><math>1.05V_{OUT}</math></b>		<b><math>V_{OUT\_MAX}</math></b>	%
$V_{OUT}$ Undervoltage Threshold Range	$V_{OUT\_UV\_RANGE}$	Factory default		$0.85 \times V_{OUT}$		%
		Configured using pin-strap resistor or PMBus	<b>0</b>		<b><math>0.95V_{OUT}</math></b>	%
$V_{OUT}$ OV/UV Threshold Accuracy ( <a href="#">Note 16</a> )	$V_{OUT\_OV/UV\_ACCY}$		<b>-2</b>		<b>+2</b>	%
$V_{OUT}$ OV/UV Response Time	$V_{OUT\_OV/UV\_DELAY}$			10		$\mu s$
Output Current Limit Set-Point Accuracy ( <a href="#">Note 18</a> )	$I_{LIMIT\_ACCY}$	Tested at $I_{OUT\_OC\_FAULT\_LIMIT} = 40A$		$\pm 10$		%FS
Output Current Fault Response Time ( <a href="#">Note 19</a> )	$I_{LIMIT\_DELAY}$	Factory default		3		$t_{SW}$
Over-Temperature Protection Threshold (Controller Junction Temperature)	$T_{JUNCTION}$	Factory default		115		$^\circ C$
		Configured using PMBus	<b>-40</b>		<b>125</b>	$^\circ C$
Thermal Protection Hysteresis	$T_{JUNCTION\_HYS}$			15		$^\circ C$
<b>Oscillator and Switching Characteristics</b>						
Switching Frequency Range	$f_{SW\_RANGE}$	Configured using pin-strap resistor or PMBus	<b>296</b>		<b>1067</b>	kHz
Switching Frequency Set-Point Accuracy	$f_{SW\_ACCY}$		<b>-5</b>		<b>+5</b>	%

$V_{IN} = V_{DD} = 12V$ ,  $f_{SW} = 533kHz$ ,  $C_{OUT} = 1340\mu F$ ,  $T_A = -40^{\circ}C$  to  $+85^{\circ}C$ , unless otherwise noted. Typical values are at  $T_A = +25^{\circ}C$ .

**Boldface limits apply across the operating temperature range,  $-40^{\circ}C$  to  $+85^{\circ}C$ . (Continued)**

Parameter	Symbol	Test Conditions	Min ( <a href="#">Note 15</a> )	Typ	Max ( <a href="#">Note 15</a> )	Unit
Minimum Pulse Width Required from External SYNC Clock	EXT_SYNC <sub>PW</sub>	Measured at 50% amplitude	<b>150</b>			ns
Drift Tolerance for External SYNC Clock	EXT_SYNC <sub>DRIFT</sub>	External SYNC clock equal to 500kHz is not supported	<b>-10</b>		<b>+10</b>	%
<b>Logic Input/Output Characteristics</b>						
Bias Current at the Logic Input Pins	I <sub>LOGIC_BIAS</sub>	EN, CFG, PG, SA, SCL, SDA, SALRT, SYNC, UVLO, V <sub>SET</sub>	<b>-100</b>		<b>+100</b>	nA
Logic Input Low Threshold Voltage	V <sub>LOGIC_IN_LOW</sub>				<b>0.8</b>	V
Logic Input High Threshold Voltage	V <sub>LOGIC_IN_HIGH</sub>		<b>2.0</b>			V
Logic Output Low Threshold Voltage	V <sub>LOGIC_OUT_LOW</sub>	2mA sinking			<b>0.5</b>	V
Logic Output High Threshold Voltage	V <sub>LOGIC_OUT_HIGH</sub>	2mA sourcing	<b>2.25</b>			V
<b>PMBus Interface Timing Characteristic</b>						
PMBus Operating Frequency	f <sub>SMB</sub>		<b>100</b>		<b>400</b>	kHz

Notes:

15. Compliance to datasheet limits is assured by one or more methods: Production test, characterization, and/or design.
16. V<sub>OUT</sub> measured at the termination of the V<sub>SEN+</sub> and V<sub>SEN-</sub> sense points.
17. The MAX load current is determined by the thermal ["Derating Curves" on page 17](#).
18. "FS" stand for Full Scale of recommended maximum operation range.
19. "t<sub>SW</sub>" stands for time period of operation switching frequency.

### 3. Typical Performance Curves

#### 3.1 Efficiency Performance

Operating condition:  $T_A = +25^\circ\text{C}$ , No air flow.  $C_{OUT} = 1340\mu\text{F}$ . Typical values are used unless otherwise noted.

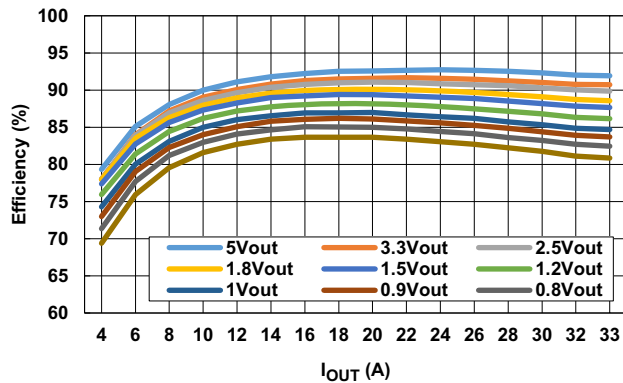


Figure 5. Efficiency vs Output Current at  $V_{IN} = 12\text{V}$  and  $f_{SW} = 364\text{kHz}$  for Various Output Voltages

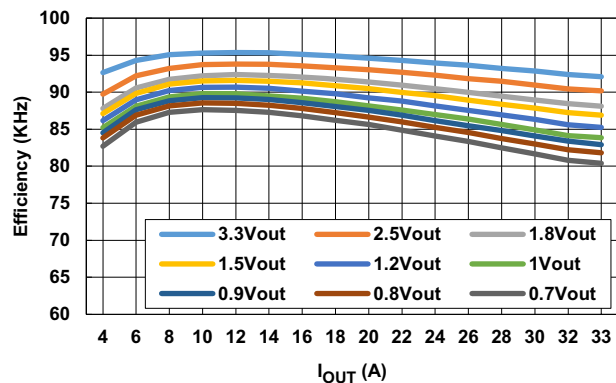


Figure 6. Efficiency vs Output Current at  $V_{IN} = 5\text{V}$  and  $f_{SW} = 364\text{kHz}$  for Various Output Voltages

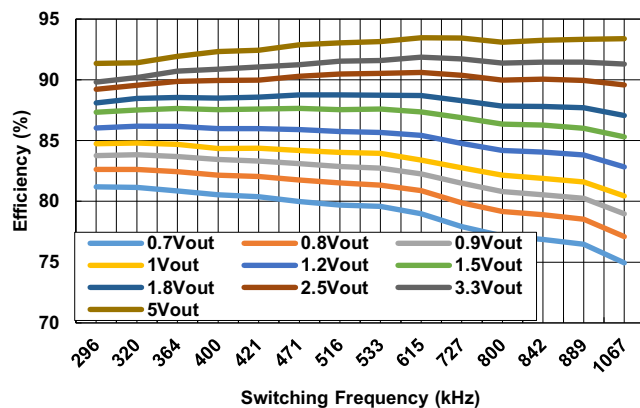


Figure 7. Efficiency vs Switching Frequency at  $V_{IN} = 12\text{V}$  and  $I_{OUT} = 33\text{A}$  for Various Output Voltages

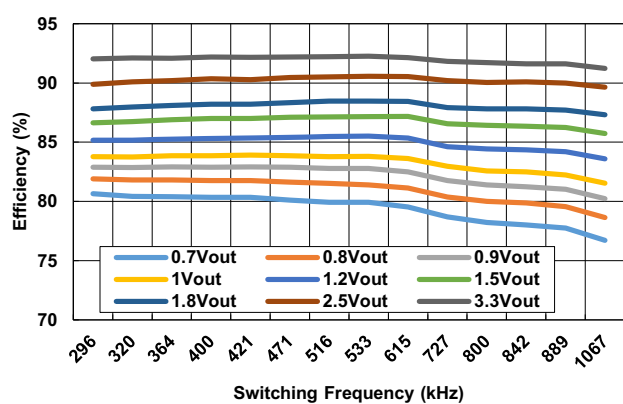


Figure 8. Efficiency vs Switching Frequency at  $V_{IN} = 5\text{V}$  and  $I_{OUT} = 33\text{A}$  for Various Output Voltages

### 3.2 Transient Response Performance

Operating conditions: Step Load 0 to 16.5A,  $I_{OUT}$  slew rate = 15A/ $\mu$ s,  $T_A$  = +25°C, OLFM airflow. Typical values are used unless otherwise noted.

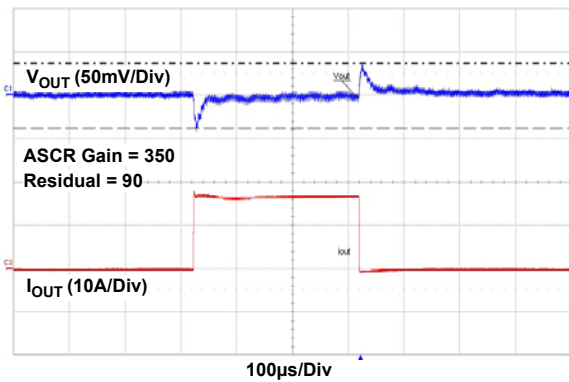


Figure 9. 5V<sub>IN</sub> to 0.9V<sub>OUT</sub>,  $f_{SW}$  = 364kHz,  $C_{OUT}$  = 12x100 $\mu$ F Ceramic + 5x470 $\mu$ F POSCAP

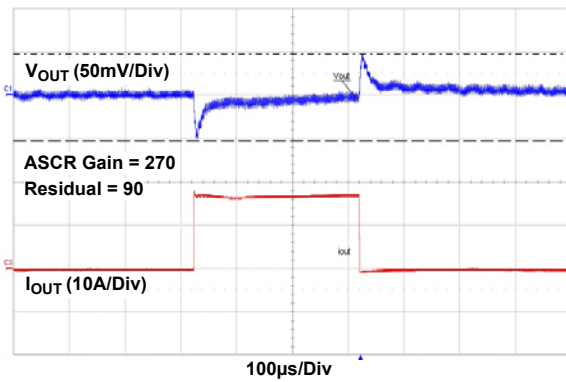


Figure 10. 5V<sub>IN</sub> to 1.2V<sub>OUT</sub>,  $f_{SW}$  = 364kHz,  $C_{OUT}$  = 10x100 $\mu$ F Ceramic + 4x470 $\mu$ F POSCAP

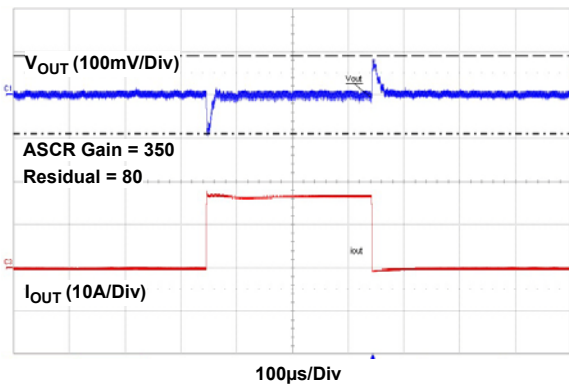


Figure 11. 12V<sub>IN</sub> to 1V<sub>OUT</sub>,  $f_{SW}$  = 615kHz,  $C_{OUT}$  = 4x100 $\mu$ F Ceramic + 4x470 $\mu$ F POSCAP

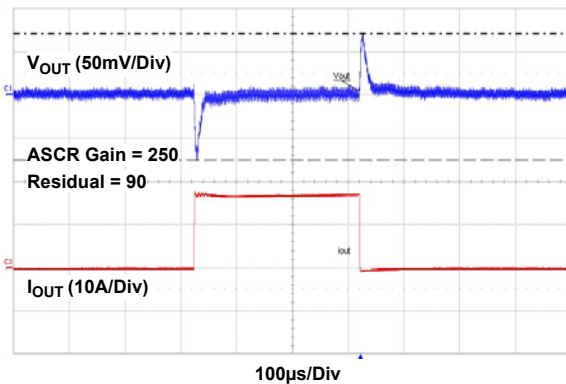


Figure 12. 12V<sub>IN</sub> to 1.5V<sub>OUT</sub>,  $f_{SW}$  = 471kHz,  $C_{OUT}$  = 7x100 $\mu$ F Ceramic + 2x470 $\mu$ F POSCAP

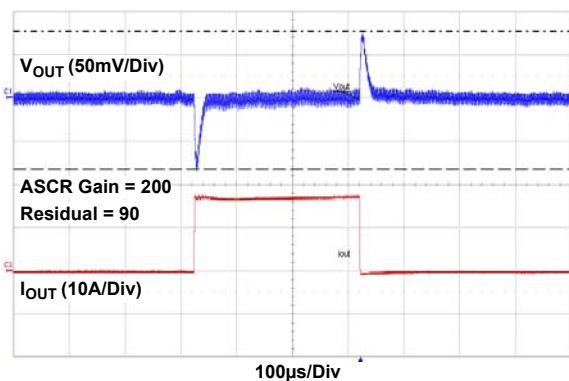


Figure 13. 12V<sub>IN</sub> to 1.8V<sub>OUT</sub>,  $f_{SW}$  = 471kHz,  $C_{OUT}$  = 6x100 $\mu$ F Ceramic + 2x470 $\mu$ F POSCAP

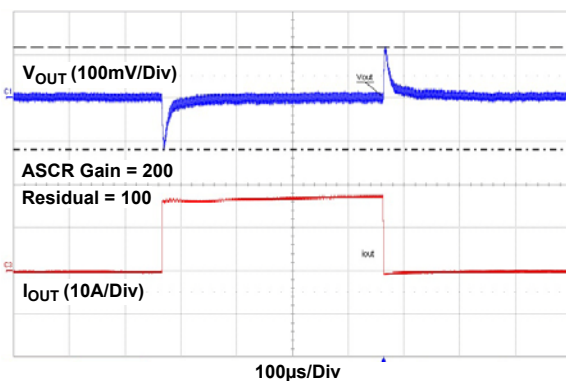


Figure 14. 12V<sub>IN</sub> to 3.3V<sub>OUT</sub>,  $f_{SW}$  = 615kHz,  $C_{OUT}$  = 4x100 $\mu$ F Ceramic + 1x470 $\mu$ F POSCAP



### 3.3 Derating Curves

All of the following curves were plotted at  $T_J = +120^\circ\text{C}$

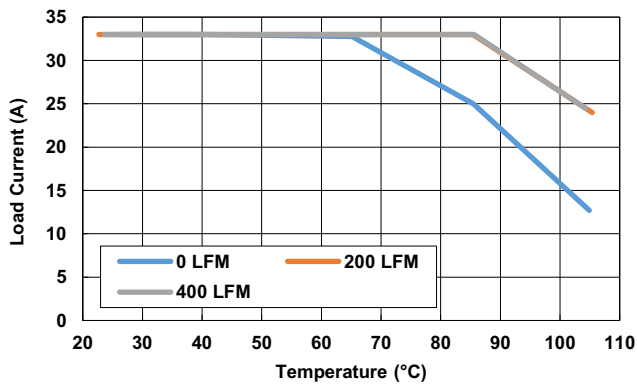


Figure 15. 5V<sub>IN</sub> to 1V<sub>OUT</sub>, 364kHz

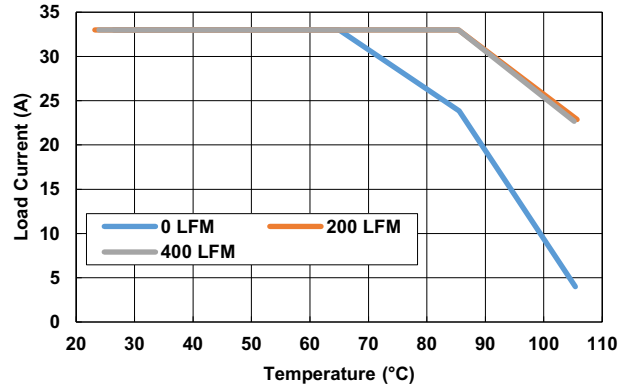


Figure 16. 12V<sub>IN</sub> to 1V<sub>OUT</sub>, 364kHz

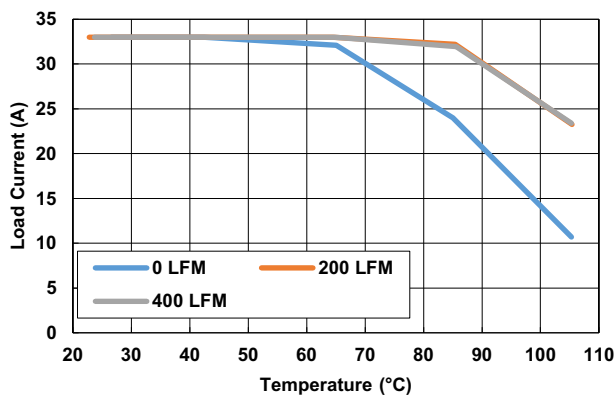


Figure 17. 5V<sub>IN</sub> to 1.2V<sub>OUT</sub>, 364kHz

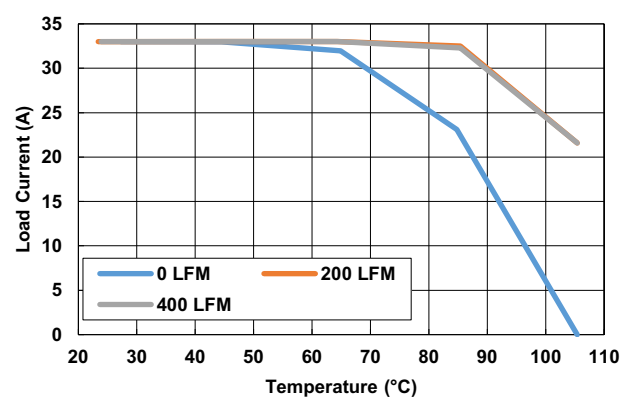


Figure 18. 12V<sub>IN</sub> to 1.2V<sub>OUT</sub>, 364kHz

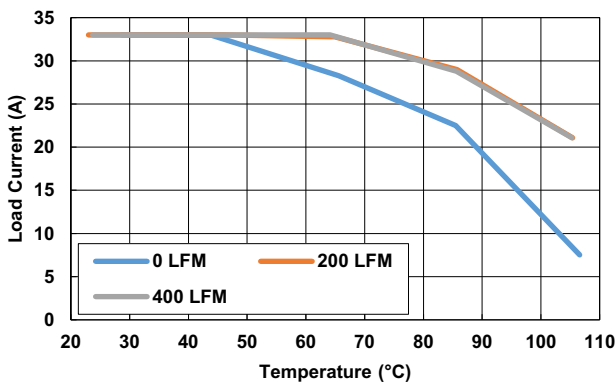


Figure 19. 5V<sub>IN</sub> to 1.8V<sub>OUT</sub>, 471kHz

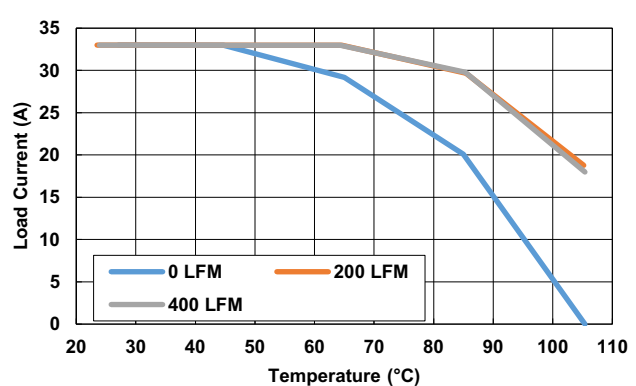


Figure 20. 12V<sub>IN</sub> to 1.8V<sub>OUT</sub>, 471kHz

All of the following curves were plotted at  $T_J = +120^\circ\text{C}$  (Continued)

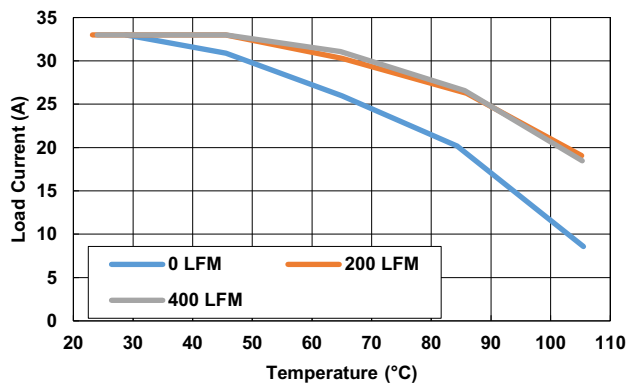


Figure 21.  $5V_{IN}$  to  $2.5V_{OUT}$ , 615kHz

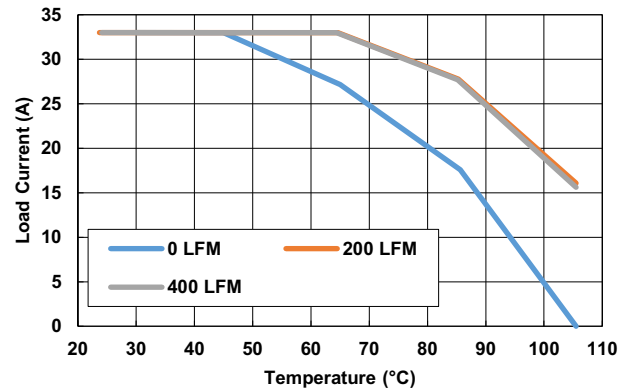


Figure 22.  $12V_{IN}$  to  $2.5V_{OUT}$ , 615kHz

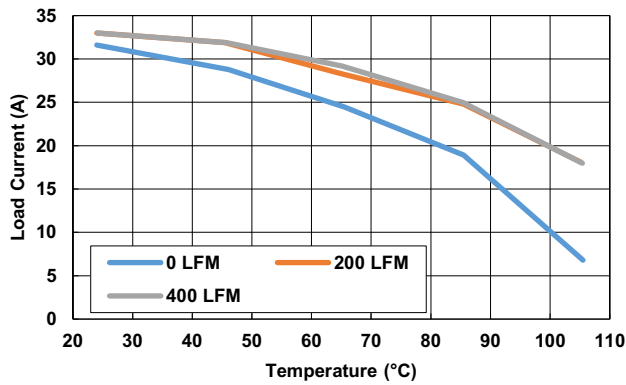


Figure 23.  $5V_{IN}$  to  $3.3V_{OUT}$ , 615kHz

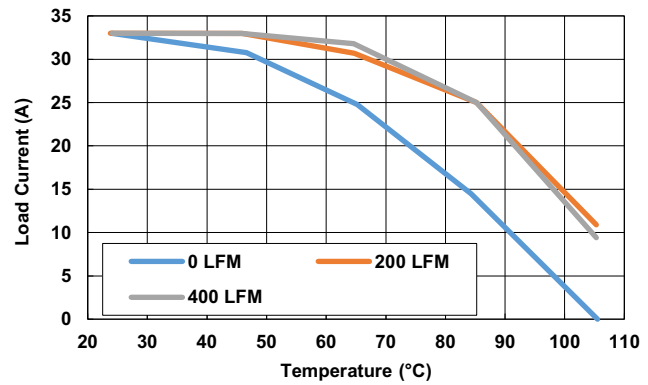


Figure 24.  $12V_{IN}$  to  $3.3V_{OUT}$ , 615kHz

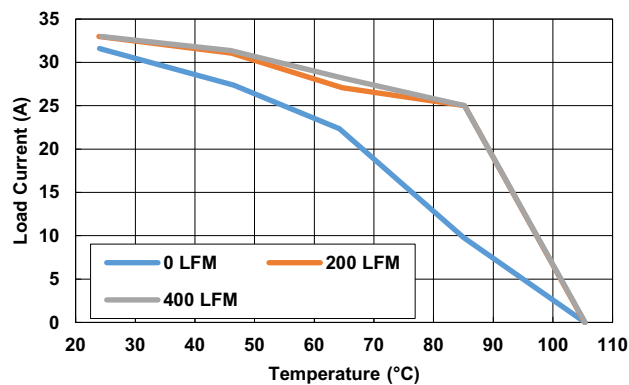


Figure 25.  $12V_{IN}$  to  $5V_{OUT}$ , 727kHz

## 4. Functional Description

### 4.1 SMBus Communications

The RAA210833 provides an SMBus digital interface that enables the user to configure the module operation and monitor the input and output parameters. The RAA210833 can be used with any SMBus host device. In addition, the module is compatible with PMBus Power System Management Protocol Specification Parts I and II version 1.2. The RAA210833 accepts most standard PMBus commands. When controlling the device with PMBus commands, it is recommended that the enable pin be tied to SGND.

The SMBus device address is the only parameter that must be set by external pins.

### 4.2 Output Voltage Selection

The output voltage can be set to a voltage between 0.6V and 5V if the input voltage is higher than the desired output voltage by an amount sufficient to maintain regulation.

The VSET pin is used to set the output voltage to any values between 0.6V and 5V as shown in [Table 5](#). The  $R_{SET}$  resistor is placed between the VSET pin and SGND. A standard 1% resistor is recommend.

**Table 5. Output Voltage Resistor Settings**

$V_{OUT}(V)$	VSET_GROUP (Set by SA Pin)	$R_{SET} (k\Omega)$
0.600	Group 0	10
0.650	Group 0	11
0.675	Group 0	12.1
0.690	Group 0	13.3
0.700	Group 0	14.7
0.710	Group 0	16.2
0.720	Group 0	17.8
0.730	Group 0	19.6
0.740	Group 0	21.5
0.750	Group 0	23.7
0.760	Group 0	26.1
0.770	Group 0	28.7
0.780	Group 0	31.6
0.790	Group 0	34.8
0.800	Group 0	38.3
0.810	Group 0	42.2
0.820	Group 0	46.4
0.830	Group 0	51.1
0.840	Group 0	56.2
0.850	Group 0	61.9
0.860	Group 0	68.1
0.870	Group 0	75
0.880	Group 0	82.5
0.890	Group 0	90.9
0.900	Group 0	100
0.910	Group 0	110

**Table 5. Output Voltage Resistor Settings (Continued)**

V <sub>OUT</sub> (V)	VSET_GROUP (Set by SA Pin)	R <sub>SET</sub> (kΩ)
0.920	Group 0	121
0.930	Group 0	133
0.940	Group 0	147
0.950	Group 0	162
0.960	Group 0	178
0.970	Group 0	Connect to SGND
0.980	Group 0	OPEN
0.990	Group 0	Connect to V25
1.000	Group 1	Connect to SGND
1.030	Group 1	10
1.050	Group 1	11
1.100	Group 1	12.1
1.120	Group 1	13.3
1.150	Group 1	14.7
1.200	Group 1	OPEN
1.250	Group 1	16.2
1.300	Group 1	17.8
1.350	Group 1	19.6
1.400	Group 1	21.5
1.500	Group 1	23.7
1.600	Group 1	26.1
1.650	Group 1	28.7
1.700	Group 1	31.6
1.800	Group 1	34.8
1.850	Group 1	38.3
1.900	Group 1	42.2
2.000	Group 1	46.4
2.100	Group 1	51.1
2.200	Group 1	56.2
2.300	Group 1	61.9
2.400	Group 1	68.1
2.500	Group 1	Connect to V25
2.600	Group 1	75
2.700	Group 1	82.5
2.800	Group 1	90.9
2.900	Group 1	100
3.000	Group 1	110
3.200	Group 1	121
3.300	Group 1	133
3.400	Group 1	147
3.600	Group 1	162

**Table 5. Output Voltage Resistor Settings (Continued)**

V <sub>OUT</sub> (V)	VSET_GROUP (Set by SA Pin)	R <sub>SET</sub> (kΩ)
5.000	Group 1	178

By default, V<sub>OUT\_MAX</sub> is set 110% higher than V<sub>OUT</sub> by the pin-strap resistor, which can be changed to any value up to 5.5V with PMBus Command VOUT\_MAX.

### 4.3 Soft-Start Delay and Ramp Times

The RAA210833 follows an internal start-up procedure after power is applied to the VDD pin. The module requires approximately 60ms to 70ms to check for specific values stored in its internal memory and programmed by pin-strap resistors. After this process is complete, the device is ready to accept commands through the PMBus interface and the module is ready to be enabled. If the module is to be synchronized to an external clock source, the clock frequency must be stable before asserting the EN pin.

It may be necessary to set a delay from when an enable signal is received until the output voltage starts to ramp to its target value. In addition, the designer may want to precisely set the time required for V<sub>OUT</sub> to ramp to its target value after the delay period has expired. These features can be used as part of an overall inrush current management strategy or to precisely control how fast a load IC is turned on. The RAA210833 gives the system designer several options for precisely and independently controlling both the delay and ramp time periods. The soft-start delay period begins when the EN pin is asserted and ends when the delay time expires.

The soft-start delay (TON\_DELAY) and ramp-up time (TON\_RISE) can be set to custom values with pin-strap resistors or PMBUS. When the delay time is set to 0ms, the device begins its ramp-up after the internal circuitry has initialized (approximately 2ms). When the soft-start ramp period is set to 0ms, the output ramps up as quickly as the output load capacitance and loop settings allow. It is generally recommended to set the soft-start ramp to a value greater than 500μs to prevent inadvertent fault conditions due to excessive inrush current.

Similar to the soft-start delay and ramp-up time, the delay (TOFF\_DELAY) and ramp-down time (TOFF\_FALL) for soft-stop/off can be set to custom values with pin-strap resistors or PMBUS. In addition, the module can be configured as “immediate off” with the command ON\_OFF\_CONFIG, so that the internal MOSFETs are turned off immediately after the delay time expires.

Use the SS/UVLO pin to set the soft-start/stop delay time and ramp time to some typical values as shown in [Table 6](#). A standard 1% resistor is required.

**Table 6. Soft-Start/Stop and Input UVLO Resistor Settings**

Resistor (kΩ)	UVLO (V)	Delay Time (ms)	Ramp Time (ms)
Open	4.2	5	5
Connect to V25	4.5	10	10
Connect to SGND	4.5	5	2
12.1	4.5	5	2
13.3	4.5	5	5
14.7	4.5	5	10
16.2	4.5	10	2
17.8	4.5	10	5
19.6	4.5	10	10
21.5	4.5	20	5
23.7	4.5	20	10
26.1	4.2	5	2
28.7	4.59	5	5
31.6	5.06	5	10

**Table 6. Soft-Start/Stop and Input UVLO Resistor Settings (Continued)**

Resistor (kΩ)	UVLO (V)	Delay Time (ms)	Ramp Time (ms)
34.8	5.57	10	2
38.3	6.13	10	5
42.2	6.75	10	10
46.4	7.42	20	5
51.1	8.18	20	10
56.2	10.8	5	2
61.9	10.8	5	5
68.1	10.8	5	10
75	10.8	10	2
82.5	10.8	10	5
90.9	10.8	10	10
100	10.8	20	5
110	10.8	20	10

#### 4.4 Power-Good

The RAA210833 provides a Power-Good (PG) signal that indicates the output voltage is within a specified tolerance of its target level and no fault condition exists. By default, the PG pin asserts if the output is within 10% of the target voltage. These limits and the polarity of the pin can be changed with PMBus command `POWER_GOOD_ON`.

A PG delay period is defined as the time from when all conditions within the RAA210833 for asserting PG are met to when the PG pin is actually asserted. This feature is commonly used instead of using an external reset controller to control external digital logic. A fixed PG delay of 4ms is programmed for the RAA210833.

#### 4.5 Switching Frequency and PLL

The device's switching frequency is set from 296kHz to 1067kHz using the pin-strap method as shown in [Table 7](#), or by using the PMBus command `FREQUENCY_SWITCH`.

**Table 7. Switching Frequency Resistor Settings**

$f_{SW}$ (kHz)	$R_{SET}$ (kΩ)
296	14.7, or connect to SGND
320	16.2
348	17.8
364	19.6
400	21.5
421	23.7
471	26.1
516	28.7
533	31.6, or OPEN
615	34.8
640	38.3
696	42.2
727	46.4
800	51.1

**Table 7. Switching Frequency Resistor Settings (Continued)**

$f_{sw}(kHz)$	$R_{SET} (k\Omega)$
842	56.2
889	61.9
1067	68.1, or connect to V25

The RAA210833 incorporates an internal Phase-Locked Loop (PLL) to clock the internal circuitry. The PLL can also be driven by an external clock source connected to the SYNC pin. Connect a resistor to the CFG pin to set this configuration. If the clock source is set to internal, the internal frequency is set according to the SYNC pin resistor settings. If the clock source is set to external, the internal frequency is set according to the resistor connected to the CFG pin as shown in [Table 8](#). The external clock frequency should be within  $\pm 10\%$  of the listed options.

**Table 8. External Frequency SYNC Settings**

Clock Source	Internal Frequency Switch (kHz)	$R_{SET} (k\Omega)$
Internal	Determined by SYNC resistor	10, or OPEN
External	296	11
External	340	12.1
External	390	13.3
External	444	14.7
External	516	16.2, or connect to SGND
External	593	17.8
External	696	19.6
External	800	21.5
External	941	23.7
External	1067	26.1, or Connect to V25

The external clock signal must not vary more than 10% from its initial value, should be stable and should have a minimum pulse width of 150ns. Note: if the pin-strap method is used, a standard 1% resistor is required.

## 4.6 Loop Compensation

The module loop response is programmable using the pin-strap method or the PMBus command ASCR\_CONFIG according to [Table 9](#). A standard 1% resistor is required. The RAA210833 uses the ChargeMode control algorithm that responds to output current changes within a single PWM switching cycle, achieving a smaller total output voltage variation with less output capacitance than traditional PWM controllers.

**Table 9. ASCR Resistor Settings**

ASCR Gain	ASCR Residual	$R_{SET} (k\Omega)$
190	60	10
200	60	11
90	65	12.1
80	70	13.3
120	70	Connect to SGND
160	70	14.7
200	70	OPEN
250	70	16.2
300	70	17.8

**Table 9. ASCR Resistor Settings (Continued)**

ASCR Gain	ASCR Residual	R <sub>SET</sub> (kΩ)
120	80	19.6
190	80	21.5
210	80	23.7
250	80	26.1
300	80	28.7
350	80	31.6
400	80	34.8
110	90	38.3
160	90	42.2
200	90	46.4
250	90	51.1
350	90	56.2
400	90	61.9
500	90	68.1
600	90	75
300	95	82.5
120	100	90.9
160	100	100
190	100	110
220	100	121
250	100	Connect to V25
350	100	133
400	100	147
500	100	162
600	100	178

#### 4.7 Input Undervoltage Lockout (UVLO)

The Input Undervoltage Lockout (UVLO) prevents the RAA210833 from operating when the input falls below a preset threshold, indicating the input supply is out of its specified range. The UVLO threshold ( $V_{UVLO}$ ) can be set between 4.18V and 16V or by using the pin-strap method as shown in [Table 10](#), or by using the PMBus command VIN\_UV\_FAULT\_LIMIT. A standard 1% resistor is required.

The module shuts down immediately when the UVLO threshold is reached. The fault needs to be cleared for the module to restart.

**Table 10. UVLO Resistor Settings**

UVLO (V)	Resistor (kΩ)
4.2	Open
4.5	Connect to V25
4.5	Connect to SGND
4.5	12.1
4.5	13.3
4.5	14.7



**Table 10. UVLO Resistor Settings (Continued)**

UVLO (V)	Resistor (kΩ)
4.5	16.2
4.5	17.8
4.5	19.6
4.5	21.5
4.5	23.7
4.2	26.1
4.59	28.7
5.06	31.6
5.57	34.8
6.13	38.3
6.75	42.2
7.42	46.4
8.18	51.1
10.8	56.2
10.8	61.9
10.8	68.1
10.8	75
10.8	82.5
10.8	90.9
10.8	100
10.8	110

## 4.8 SMBus Module Address Selection

Each module must have its own unique serial address to distinguish between other devices on the bus. The module address is set by connecting a resistor between the SA pin and SGND. This pin can also be used to make VSET\_Group selection as shown in [Table 11](#). A standard 1% resistor is required.

**Table 11. SMBus Address Resistor Selection**

R <sub>SET</sub> (kΩ)	SMBus Address	VSET_GROUP
10	19h	Group 0
11	1Ah	Group 0
12.1	1Bh	Group 0
13.3	1Ch	Group 0
14.7	1Dh	Group 0
16.2	1Eh	Group 0
17.8	1Fh	Group 0
19.6	20h	Group 0
21.5	21h	Group 0
23.7	22h	Group 0
26.1	23h	Group 0
28.7	24h	Group 0
31.6	25h	Group 0

Table 11. SMBus Address Resistor Selection (Continued)

R <sub>SET</sub> (kΩ)	SMBus Address	VSET_GROUP
34.8	26h	Group 0
38.3	27h	Group 0
42.2	28h	Group 0
46.4	29h	Group 0
51.1	19h	Group 1
56.2	1Ah	Group 1
61.9	1Bh	Group 1
68.1	1Ch	Group 1
75	1Dh	Group 1
82.5	1Eh	Group 1
90.9	1Fh	Group 1
100	20h	Group 1
110	21h	Group 1
121	22h	Group 1
133	23h	Group 1
147	24h	Group 1
162	25h	Group 1
Connect to SGND	26h	Group 1
178	27h	Group 1
OPEN	28h	Group 1

## 4.9 Output Overvoltage Protection

The RAA210833 offers an internal output overvoltage protection circuit that can be used to protect sensitive load circuitry from being subjected to a voltage higher than its prescribed limits. A hardware comparator is used to compare the actual output voltage (seen at the VSEN+ and VSEN- pins) to a threshold set to 15% higher than the target output voltage (the default setting). Fault threshold can be programmed to a desired level with PMBus command VOUT\_OV\_FAULT\_LIMIT. If the V<sub>SEN+</sub> voltage exceeds this threshold, the module initiates an immediate shutdown without retry.

Internal to the module, a 332Ω resistor is populated from VOUT to VSEN+ to protect from overvoltage conditions in case of open at VSENSE pin and differential remote sense traces due to assembly error. As long as the differential remote sense traces have low resistance, V<sub>OUT</sub> regulation accuracy is not sacrificed.

## 4.10 Output Prebias Protection

An output prebias condition exists when an externally applied voltage is present on a power supply's output before the power supply's control IC is enabled. Certain applications require that the converter not be allowed to sink current during start-up if a prebias condition exists at the output. The RAA210833 provides prebias protection by sampling the output voltage before initiating an output ramp.

If a prebias voltage lower than the target voltage exists after the preconfigured delay period has expired, the target voltage is set to match the existing prebias voltage, and both drivers are enabled. The output voltage is then ramped to the final regulation value at the preconfigured ramp rate.

The actual time the output takes to ramp from the prebias voltage to the target voltage varies, depending on the prebias voltage. However, the total time elapsed from when the delay period expires and when the output reaches its target value matches the preconfigured ramp time (see [Figure 26](#)).

If a prebias voltage is higher than the target voltage after the preconfigured delay period has expired, the target voltage is set to match the existing prebias voltage, and both drivers are enabled with a PWM duty cycle that would ideally create the prebias voltage.

After the preconfigured soft-start ramp period has expired, the PG pin is asserted (assuming the prebias voltage is not higher than the overvoltage limit). The PWM then adjusts its duty cycle to match the original target voltage, and the output ramps down to the preconfigured output voltage.

If a prebias voltage is higher than the overvoltage limit, the device does not initiate a turn-on sequence and declares an overvoltage fault condition.

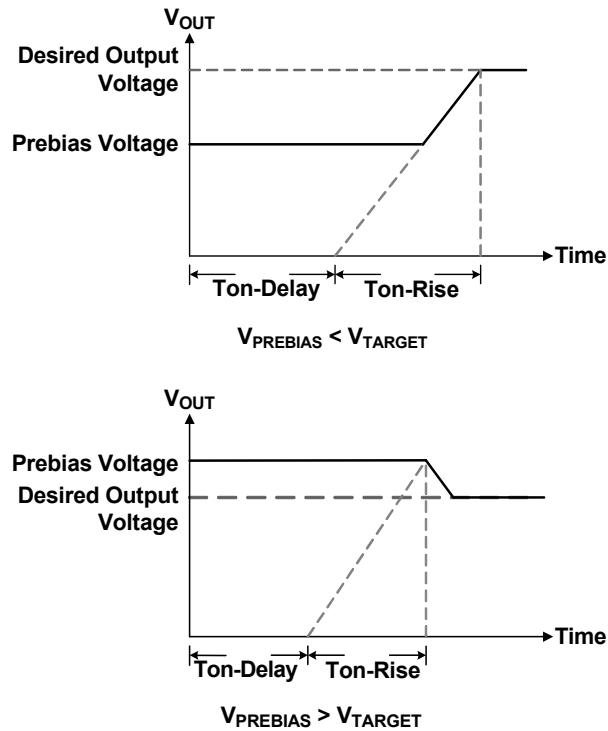


Figure 26. Output Responses to Prebias Voltages

## 4.11 Output Overcurrent Protection

The RAA210833 can protect the power supply from damage if the output is shorted to ground or if an overload condition is imposed on the output. The average output overcurrent fault threshold can be programmed with PMBus command `IOUT_OC_FAULT_LIMIT`. The module automatically programs the peak inductor current fault threshold by reading the real-time input voltage, switching frequency, and `VOUT_COMMAND` to calculate inductor ripple current.

The default response from an overcurrent fault is an immediate shutdown with a continuous retry of 70ms delay.

## 4.12 Thermal Overload Protection

The RAA210833 includes a thermal sensor that continuously measures the internal temperature of the module and shuts down the controller when the temperature exceeds the preset limit. The default temperature limit is set to +115°C in the factory, but can be changed with PMBus command OT\_FAULT\_LIMIT.

The response from an over-temperature fault is an immediate shutdown without retry.

## 4.13 Phase Spreading

When multiple point-of-load converters share a common DC input supply, it is desirable to adjust the clock phase offset of each device, such that not all devices start to switch simultaneously. Setting each converter to start its switching cycle at a different point in time can dramatically reduce input capacitance requirements and efficiency losses. Because the peak current drawn from the input supply is effectively spread out over a period of time, the peak current drawn at any given moment is reduced, and the power losses proportional to the  $I_{RMS}^2$  are reduced dramatically.

To enable phase spreading, all converters must be synchronized to the same switching clock. The phase offset between devices is determined from the lower 4 bits of the SMBus address of each interleaved device. The phase offset of each device can be set to any value between 0° and 360° in 22.5° increments by setting the device address appropriately as shown in [Table 12](#). This functionality can also be accessed using the PMBus command INTERLEAVE.

**Table 12. INTERLEAVE Settings from SA**

INTERLEAVE vs SA				
SA	SA in Binary	Low 4-Bits	INTERLEAVE	Phase Shift (°)
19h	00011001	1001	9	202.5
1Ah	00011010	1010	10	225
1Bh	00011011	1011	11	247.5
1Ch	00011100	1100	12	270
1Dh	00011101	1101	13	292.5
1Eh	00011110	1110	14	315
1Fh	00011111	1111	15	337.5
20h	00100000	0000	0	0
21h	00100001	0001	1	22.5
22h	00100010	0010	2	45
23h	00100011	0011	3	67.5
24h	00100100	0100	4	90
25h	00100101	0101	5	112.5
26h	00100110	0110	6	135
27h	00100111	0111	7	157.5
28h	00101000	1000	8	180
29h	00101001	1001	9	202.5

## 4.14 Monitoring Through SMBus

A system controller can monitor a wide variety of different RAA210833 system parameters with PMBus commands:

- READ\_VIN
- READ\_VOUT

- READ\_IOUT
- READ\_INTERNAL\_TEMP
- READ\_DUTY\_CYCLE
- READ\_FREQUENCY
- MFR\_READ\_VMON

#### **4.15 Snapshot Parameter Capture**

The RAA210833 offers a special feature to capture parametric data and some fault status following a fault. A detailed description is provided in [“PMBus Commands Description” on page 36](#) under PMBus command SNAPSHOT and SNAPSHOT\_CONTROL.

## 5. PCB Layout Guidelines

To achieve stable operation, low losses, and good thermal performance, some layout considerations are necessary.

- For  $V_{DD} > 6V$ , the recommended PCB layout is shown in [Figure 27](#). Leave V25, VDDC, VR5, and VR6 as “No Connect”.
- For  $5.5V \leq V_{DD} \leq 6V$ , connect VDDC pin to VR6 pin. For  $4.5 \leq V_{DD} < 5.5V$ , connect VDDC pin to VR6 and VR5 pin. An RC filter is required at the input of  $V_{DRVIN}$  pin if input supply is shared with VIN pin.
- Establish a separate SGND plane and PGND plane, then connect SGND to the PGND plane as shown in [Figure 28](#) in the middle layer. For making connections between SGND/PGND on the top layer and other layers, use multiple vias for each pin to connect to the inner SGND/PGND layer. Do not connect SGND directly to PGND on a top layer. Connecting SGND directly to PGND without establishing an SGND plane bypasses the decoupling capacitor at internal reference supplies, making the controller susceptible to noise.
- Place enough ceramic capacitors between VIN and PGND, VOUT and PGND and bypass capacitors between VDD and the ground plane, as close to the module as possible to minimize high frequency noise.
- Use large copper areas for power path (VIN, PGND, VOUT) to minimize conduction loss and thermal stress. Also, use multiple vias to connect the power planes in different layers. Extra ceramic capacitors at VIN and VOUT can be placed on the bottom layer under VIN and VOUT pads when multiple vias are used for connecting copper pads on top and bottom layers.
- Connect differential remote-sensing traces to the regulation point to achieve a tight output voltage regulation. Route a trace from  $V_{SEN-}$  and  $V_{SEN+}$  to the point-of-load where the tight output voltage is desired. Avoid routing any sensitive signal traces, such as the VSENSE signal near VSWH pads.
- For noise sensitive applications, it is recommended that the user connect the VSWH pads only on the top layer only (however, thermal performance gets sacrificed). External airflow might be required to keep module heat at desired level. For applications where switching noise is less critical, an excellent thermal performance can be achieved in the RAA210833 module by increasing copper mass attached to VSWH pad. To increase copper mass on the VSWH node, create copper islands in the middle and bottom layers under VSWH the pad, and connect them to the top layer with multiple vias. Make sure to shield those copper islands with a PGND layer to avoid any interference to noise sensitive signals.

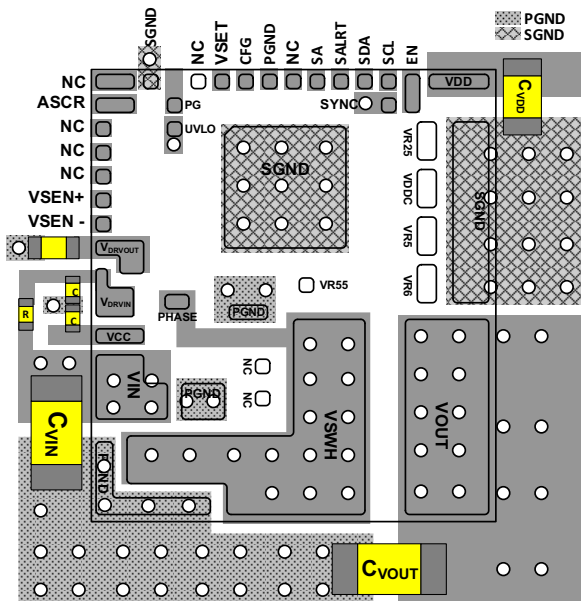


Figure 27. Recommended Layout - Top PCB Layer

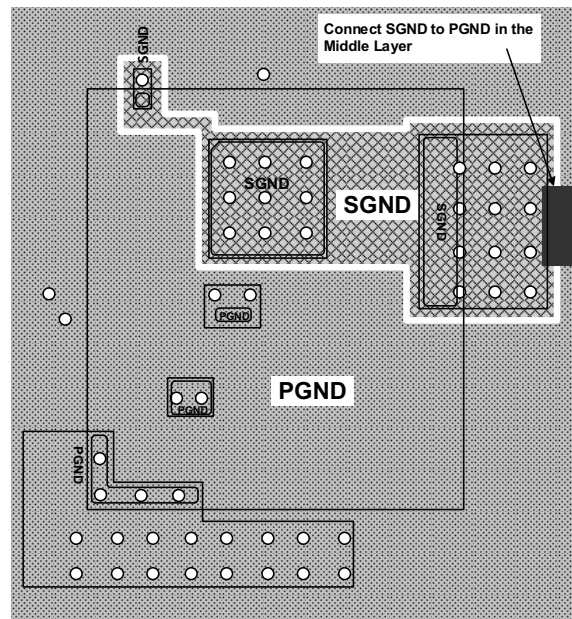


Figure 28. Recommended Layout - Connect SGND to PGND in the Middle PCB Layer after Establishing Separate SGND and PGND

## 5.1 Thermal Considerations

Experimental power loss curves, along with  $\theta_{JA}$  from thermal modeling analysis, can be used to evaluate the thermal consideration for the module. The derating curves are derived from the maximum power allowed while maintaining the temperature below the maximum junction temperature of +125°C. In actual application, other heat sources and design margins should be considered.

## 5.2 Package Description

The structure of the RAA210833 belongs to the High Density Array (HDA) no-lead package. This kind of package has advantages, such as good thermal and electrical conductivity, low weight, and small size. The HDA package is applicable for surface mounting technology and is being more readily used in the industry. The RAA210833 contains several types of devices, including resistors, capacitors, inductors, and control ICs. The RAA210833 is a copper leadframe based package with exposed copper thermal pads, which have good electrical and thermal conductivity. The copper leadframe and multi-component assembly is overmolded with polymer mold compound to protect these devices.

The package outline, a typical PCB land pattern design, and a typical stencil opening edge position are shown in the Package Outline Drawing section starting on [page 50](#). The module has a small size of 17mm x 19mm x 3.6mm. [Figure 29](#) shows typical reflow profile parameters. These guidelines are general design rules. Users can modify parameters according to their application.

## 5.3 PCB Layout Pattern Design

The bottom of the RAA210833 is a lead-frame footprint, which is attached to the PCB by surface mounting process. The PCB land pattern is shown in the [“Package Outline Drawing”](#) section starting on [page 50](#).

The PCB layout pattern is an array of solder mask defined PCB lands which align with the perimeters of the HDA exposed pads and I/O termination dimensions. The thermal lands on the PCB layout also feature an array of solder mask defined lands and should match 1:1 with the package exposed die pad perimeters. The exposed solder mask defined PCB land area should be 50-80% of the available module I/O area.

## 5.4 Thermal Vias

A grid of 1.0mm to 1.2mm pitch thermal vias, which drops down and connects to buried copper plane(s), should be placed under the thermal land. The vias should be about 0.3mm to 0.33mm in diameter with the barrel plated to about 1.0 ounce copper. Although adding more vias (by decreasing via pitch) improves the thermal performance, diminishing returns are seen as more and more vias are added. Simply use as many vias as practical for the thermal land size and that your board design rules allow.

## 5.5 Stencil Pattern Design

Reflowed solder joints on the perimeter I/O lands should have about a 50µm to 75µm (2mil to 3mil) standoff height. The solder paste stencil design is the first step in developing optimized, reliable solder joints.

The stencil aperture size to solder mask defined PCB land size ratio should typically be 1:1. The aperture width can be reduced slightly to help prevent solder bridging between adjacent I/O lands. A typical solder stencil pattern is shown in the [“Package Outline Drawing”](#) section starting on [page 50](#).

The user should consider the symmetry of the whole stencil pattern when designing its pads. A laser cut, stainless steel stencil with electropolished trapezoidal walls is recommended. Electropolishing “smooths” the aperture walls resulting in reduced surface friction and better paste release, which reduces voids. Using a Trapezoidal Section Aperture (TSA) also promotes paste release and forms a “brick like” paste deposit that assists in firm component placement. A 0.1mm to 0.15mm stencil thickness is recommended for this large pitch (1.3mm) HDA.

5.6 Reflow Parameters

Due to the low mount height of the HDA, a “No Clean” Type 3 solder paste per ANSI/J-STD-005 is recommended. Nitrogen purge is also recommended during reflow. A system board reflow profile depends on the thermal mass of the entire populated board, thus it is not practical to define a specific soldering profile just for the HDA. The profile given in [Figure 29](#) is provided as a guideline, to be customized for varying manufacturing practices and applications.

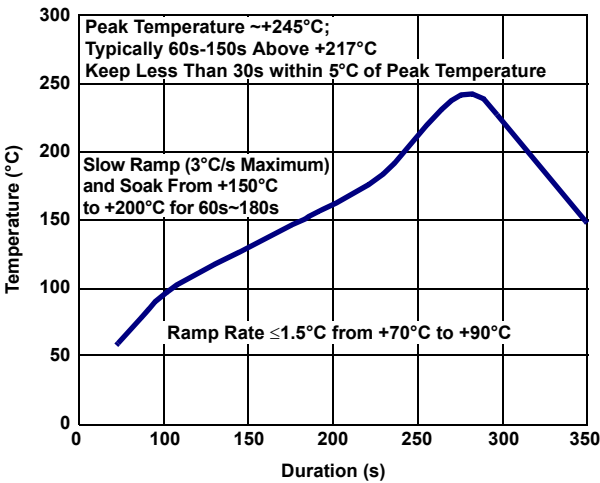


Figure 29. Typical Reflow Profile




## 6. PMBus Command Summary

Command Code	Command Name	Description	Type	Data Format	Default Value	Default Setting	Page
01h	OPERATION	Sets Enable and Disable modes.	R/W Byte	BIT			<a href="#">36</a>
02h	ON_OFF_CONFIG	Configures the EN pin and PMBus commands to turn the unit ON/OFF.	R/W Byte	BIT	16h	Hardware Enable, soft-off	<a href="#">36</a>
03h	CLEAR_FAULTS	Clears fault indications.	SEND Byte				<a href="#">36</a>
21h	VOUT_COMMAND	Sets the nominal value of the output voltage.	R/W Word	L16u		Pin-strap	<a href="#">37</a>
24h	VOUT_MAX	Sets the maximum possible value of $V_{OUT}$ . 110% of pin-strap $V_{OUT}$ .	R/W Word	L16u		1.1 x $V_{OUT}$ Pin-strap	<a href="#">37</a>
33h	FREQUENCY_SWITCH	Sets the switching frequency.	R/W Word	L11		Pin-strap	<a href="#">37</a>
37h	INTERLEAVE	Configures a phase offset between devices sharing a SYNC clock.	R/W Word	BIT		Set based on PMBus Address	<a href="#">38</a>
40h	VOUT_OV_FAULT_LIMIT	Sets the $V_{OUT}$ overvoltage fault threshold.	R/W Word	L16u		1.15 x $V_{OUT}$ Pin-strap	<a href="#">38</a>
44h	VOUT_UV_FAULT_LIMIT	Sets the $V_{OUT}$ undervoltage fault threshold.	R/W Word	L16u		0.85 x $V_{OUT}$ Pin-strap	<a href="#">38</a>
46h	IOUT_OC_FAULT_LIMIT	Sets the $I_{OUT}$ average overcurrent fault threshold.	R/W Word	L11	E280h	40A	<a href="#">38</a>
4Bh	IOUT_UC_FAULT_LIMIT	Sets the $I_{OUT}$ average undercurrent fault threshold.	R/W Word	L11	E57Fh	-40A	<a href="#">39</a>
4Fh	OT_FAULT_LIMIT	Sets the over-temperature fault threshold.	R/W Word	L11	EB98h	+115°C	<a href="#">39</a>
53h	UT_FAULT_LIMIT	Sets the under-temperature fault threshold.	R/W Word	L11	E530h	-45°C	<a href="#">39</a>
55h	VIN_OV_FAULT_LIMIT	Sets the $V_{IN}$ overvoltage fault threshold.	R/W Word	L11	D3A0h	14.5V	<a href="#">39</a>
59h	VIN_UV_FAULT_LIMIT	Sets the $V_{IN}$ undervoltage fault threshold.	R/W Word	L11		Pin-strap	<a href="#">40</a>
5Eh	POWER_GOOD_ON	Sets the voltage threshold for Power-Good indication.	R/W Word	L16u		0.9 x $V_{OUT}$ Pin-strap	<a href="#">40</a>
60h	TON_DELAY	Sets the delay time from ENABLE to start of $V_{OUT}$ rise.	R/W Word	L11		Pin-strap	<a href="#">40</a>
61h	TON_RISE	Sets the rise time of $V_{OUT}$ after ENABLE and TON_DELAY.	R/W Word	L11		Pin-strap	<a href="#">40</a>
64h	TOFF_DELAY	Sets the delay time from DISABLE to start of $V_{OUT}$ fall.	R/W Word	L11		Pin-strap	<a href="#">41</a>
65h	TOFF_FALL	Sets the fall time for $V_{OUT}$ after DISABLE and TOFF_DELAY.	R/W Word	L11		Pin-strap	<a href="#">41</a>
78h	STATUS_BYTE	Returns an abbreviated status for fast reads.	Read Byte	BIT	00h	No Faults	<a href="#">41</a>
79h	STATUS_WORD	Returns information with a summary of the unit's fault condition.	Read Word	BIT	0000h	No Faults	<a href="#">42</a>

Command Code	Command Name	Description	Type	Data Format	Default Value	Default Setting	Page
7Ah	STATUS_VOUT	Returns the V <sub>OUT</sub> specific status.	Read Byte	BIT	00h	No Faults	<a href="#">42</a>
7Bh	STATUS_IOUT	Returns the I <sub>OUT</sub> specific status.	Read Byte	BIT	00h	No Faults	<a href="#">43</a>
7Ch	STATUS_INPUT	Returns specific status specific to the input.	Read Byte	BIT	00h	No Faults	<a href="#">43</a>
7Dh	STATUS_TEMPERATURE	Returns the temperature specific status.	Read Byte	BIT	00h	No Faults	<a href="#">43</a>
7Eh	STATUS_CML	Returns the Communication, Logic, and Memory specific status.	Read Byte	BIT	00h	No Faults	<a href="#">44</a>
80h	STATUS_MFR_SPECIFIC	Returns the VMON and External Sync clock specific status.	Read Byte	BIT	00h	No Faults	<a href="#">44</a>
88h	READ_VIN	Returns the input voltage reading.	Read Word	L11			<a href="#">44</a>
8Bh	READ_VOUT	Returns the output voltage reading.	Read Word	L16u			<a href="#">45</a>
8Ch	READ_IOUT	Returns the output current reading.	Read Word	L11			<a href="#">45</a>
8Dh	READ_INTERNAL_TEMP	Returns the temperature reading internal to the device.	Read Word	L11			<a href="#">45</a>
94h	READ_DUTY_CYCLE	Returns the duty cycle reading during the ENABLE state.	Read Word	L11			<a href="#">45</a>
95h	READ_FREQUENCY	Returns the measured operating switch frequency.	Read Word	L11			<a href="#">45</a>
DFh	ASCR_CONFIG	Configures ASCR control loop.	R/W Block	CUS		Pin-strap	<a href="#">46</a>
E4h	DEVICE_ID	Returns the 16-byte (character) device identifier string.	Read Block	ASCII		Reads Device Version	<a href="#">46</a>
E5h	MFR_IOUT_OC_FAULT_RESPONSE	Configures the I <sub>OUT</sub> overcurrent fault response.	R/W Byte	BIT	B9h	Disable and Retry with 70ms delay	<a href="#">46</a>
E6h	MFR_IOUT_UC_FAULT_RESPONSE	Configures the I <sub>OUT</sub> undercurrent fault response.	R/W Byte	BIT	B9h	Disable and Retry with 70ms delay	<a href="#">47</a>
EAh	SNAPSHOT	Returns 32-byte read-back of parametric and status values.	Read Block	BIT			<a href="#">47</a>
F3h	SNAPSHOT_CONTROL	Snapshot feature control command.	R/W Byte	BIT			<a href="#">48</a>
F5h	MFR_VMON_OV_FAULT_LIMIT	Returns the VMON overvoltage threshold.	Read Word	L11	CB00h	6V	<a href="#">48</a>
F6h	MFR_VMON_UV_FAULT_LIMIT	Returns the VMON undervoltage threshold.	Read Word	L11	CA00h	4V	<a href="#">48</a>
F7h	MFR_READ_VMON	Returns the VMON voltage reading. VMON is used to monitor VDRVOUT (Pin 8) voltage through an internal 16:1 resistor divider.	Read Word	L11			<a href="#">48</a>

## 6.1 PMBus Data Formats

- **Linear-11 (L11)** - The L11 data format uses 5-bit two's complement exponent (N) and 11-bit two's complement mantissa (Y) to represent a real world decimal value (X). The relation between real world decimal value (X), N, and Y is:  $X = Y \cdot 2^N$

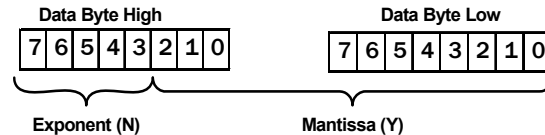

- **Linear-16 Unsigned (L16u)** - The L16u data format uses a fixed exponent (hard-coded to  $N = -13$ ) and a 16-bit unsigned integer mantissa (Y) to represent real world decimal value (X). Relation between real world decimal value (X), N and Y is:  $X = Y \cdot 2^{-13}$
- **Linear-16 Signed (L16s)** - The L16s data format uses a fixed exponent (hardcoded to  $N = -13$ ) and a 16-bit two's complement mantissa (Y) to represent real world decimal value (X). The relation between real world decimal value (X), N, and Y is:  $X = Y \cdot 2^{-13}$
- **Bit Field (BIT)** - An explanation of the Bit Field format is provided in PMBus on [“PMBus Commands Description” on page 36](#).
- **Custom (CUS)** - An explanation of the custom data format is provided in PMBus [“PMBus Commands Description” on page 36](#). A combination of Bit Field and integer are common type of Custom data format.
- **ASCII (ASC)** - A variable length string of text characters that uses the ASCII data format.

## 6.2 PMBus Use Guidelines

The PMBus is a powerful tool that allows the user to optimize circuit performance by configuring devices for their application. When configuring a device in a circuit, the device should be disabled whenever most settings are changed with PMBus commands. Some exceptions to this recommendation are OPERATION, ON\_OFF\_CONFIG, CLEAR\_FAULTS, VOUT\_COMMAND, and ASCR\_CONFIG. While the device is enabled any command can be read. Many commands do not take effect until after the device has been re-enabled, hence the recommendation that commands that change device settings are written while the device is disabled.

In addition, there should be a 2ms delay between repeated READ commands sent to the same device. When sending any other command, a 5ms delay is recommended between repeated commands sent to the same device.

Commands not listed in the PMBus command summary are not allowed for customer use, and are reserved for factory use only. Issuing reserved commands may result in unexpected operation.

## 7. PMBus Commands Description

### OPERATION (01h)

**Definition:** Sets Enable and Disable settings.

**Data Length in Bytes:** 1

**Data Format:** BIT

**Type:** R/W

**Default Value:** 40h

**Units:** N/A

Settings	Actions
00h	Immediate off
40h	Soft off
80h	On - Nominal.

### ON\_OFF\_CONFIG (02h)

**Definition:** Configures the interpretation and coordination of the OPERATION command and the ENABLE pin (EN).

**Data Length in Bytes:** 1

**Data Format:** BIT

**Type:** R/W

**Default Value:** 16h (Device starts from ENABLE pin with soft off)

**Units:** N/A

Settings	Actions
16h	Device starts from ENABLE pin with soft off
17h	Device starts from ENABLE pin with immediate off
1Ah	Device starts from OPERATION command with soft off
1Bh	Device starts from OPERATION command with immediate off

### CLEAR\_FAULTS (03h)

**Definition:** Clears all fault bits in all registers and releases the SALRT pin (if asserted) simultaneously. If a fault condition still exists, the bit reasserts immediately. This command will not restart a device if it has shut down, it only clears the faults.

**Data Length in Bytes:** 0 Byte

**Data Format:** N/A

**Type:** Send only

**Default Value:** N/A

**Units:** N/A

**Reference:** N/A

**VOUT\_COMMAND (21h)**

**Definition:** Sets or reports the target output voltage. This command cannot set a value higher than either VOUT\_MAX or 110% of the pin-strap V<sub>OUT</sub> setting.

**Data Length in Bytes:** 2

**Data Format:** L16u

**Type:** R/W

**Default Value:** Pin-strap setting

**Units:** Volts

**Range:** 0V to VOUT\_MAX

**VOUT\_MAX (24h)**

**Definition:** Sets an upper limit on the output voltage the unit can command regardless of any other commands or combinations. The intent of this command is to provide a safeguard against a user accidentally setting the output voltage to a possibly destructive level rather than to be the primary output overprotection. Default value can be changed through PMBus.

**Data Length in Bytes:** 2

**Data Format:** L16u

**Type:** R/W

**Default Value:** 1.10 x V<sub>OUT</sub> pin-strap setting

**Units:** Volts

**Range:** 0V to 5.5V

**FREQUENCY\_SWITCH (33h)**

**Definition:** Sets the switching frequency of the device. The initial default value is defined by a pin-strap and this value can be overridden by writing this command through PMBus. If an external SYNC is used, this value should be set as close as possible to the external clock value. The output must be disabled when writing this command.

**Data Length in Bytes:** 2

**Data Format:** L11

**Type:** R/W

**Default Value:** Pin-strap setting

**Units:** kHz

**Range:** 296kHz to 1067kHz

### INTERLEAVE (37h)

**Definition:** Configures the phase offset of a device that is sharing a common SYNC clock with other devices. The phase offset of each device can be set to any value between 0° and 360° in 22.5° increments.

**Data Length in Bytes:** 2

**Data Format:** BIT

**Type:** R/W

**Default Value:** Pin-strap setting of SA

**Units:** kHz

Bits	Purpose	Value	Description
15:8	Reserved	0	Reserved
7:4	Group Number	0 to 15	Sets the number of rails in the group. A value of 0 is interpreted as 16.
3:0	Position in Group	0 to 15	Sets position of the device's rail within the group.

### VOUT\_OV\_FAULT\_LIMIT (40h)

**Definition:** Sets the V<sub>OUT</sub> overvoltage fault threshold.

**Data Length in Bytes:** 2

**Data Format:** L16u

**Type:** R/W

**Default Value:** 1.15 x V<sub>OUT</sub> pin-strap setting

**Units:** V

**Range:** 0V to V<sub>OUT\_MAX</sub>

### VOUT\_UV\_FAULT\_LIMIT (44h)

**Definition:** Sets the V<sub>OUT</sub> undervoltage fault threshold. This fault is masked during ramp or when disabled.

**Data Length in Bytes:** 2

**Data Format:** L16u

**Type:** R/W

**Default Value:** 0.85 x V<sub>OUT</sub> pin-strap setting

**Units:** V

**Range:** 0V to V<sub>OUT\_MAX</sub>

### IOUT\_OC\_FAULT\_LIMIT (46h)

**Definition:** Sets the I<sub>OUT</sub> average overcurrent fault threshold. The device automatically calculates the peak inductor overcurrent fault limit.

**Data Length in Bytes:** 2

**Data Format:** L11

**Type:** R/W

**Default Value:** E280h (40A)

**Units:** A

**Range:** -100A to 100A

**IOUT\_UC\_FAULT\_LIMIT (4Bh)**

**Definition:** Sets the  $I_{OUT}$  average undercurrent fault threshold. The device automatically calculates the valley inductor undercurrent fault limit.

**Data Length in Bytes:** 2

**Data Format:** L11

**Type:** R/W

**Default Value:** E57Fh (-40A)

**Units:** A

**Range:** -100A to 100A

**OT\_FAULT\_LIMIT (4Fh)**

**Definition:** Sets the temperature at which the device should indicate an over-temperature fault. Note that the temperature must drop below OT\_FAULT\_LIMIT to clear this fault.

**Data Length in Bytes:** 2

**Data Format:** L11

**Type:** R/W

**Default Value:** EB98h (+115°C)

**Units:** Celsius

**Range:** 0°C to +150°C

**UT\_FAULT\_LIMIT (53h)**

**Definition:** Sets the temperature, in degrees Celsius, of the unit where it should indicate an under-temperature fault. Note that the temperature must rise above UT\_FAULT\_LIMIT to clear this fault.

**Data Length in Bytes:** 2

**Data Format:** L11

**Type:** R/W

**Default Value:** E530h (-45°C)

**Units:** Celsius

**Range:** -55°C to +25°C

**VIN\_OV\_FAULT\_LIMIT (55h)**

**Definition:** Sets the  $V_{IN}$  overvoltage fault threshold.

**Data Length in Bytes:** 2

**Data Format:** L11

**Type:** R/W

**Default Value:** D3A0h (14.5V)

**Units:** V

**Range:** 0V to 16V

**VIN\_UV\_FAULT\_LIMIT (59h)**

**Definition:** Sets the  $V_{IN}$  undervoltage fault threshold.

**Data Length in Bytes:** 2

**Data Format:** L11

**Type:** R/W

**Default Value:** Pin-strap setting

**Units:** V

**Range:** 0V to 12V

**POWER\_GOOD\_ON (5Eh)**

**Definition:** Sets the voltage threshold for Power-good indication. Power-good asserts after the output voltage exceeds POWER\_GOOD\_ON and deasserts when the output voltage is less than the VOUT\_UV\_FAULT\_LIMIT. It is recommended to set POWER\_GOOD\_ON higher than the VOUT\_UV\_FAULT\_LIMIT.

**Data Length in Bytes:** 2

**Data Format:** L16u

**Type:** R/W

**Default Value:** 0.9 x VOUT pin-strap setting

**Units:** V

**TON\_DELAY (60h)**

**Definition:** Sets the delay time from when the device is enabled to the start of  $V_{OUT}$  rise.

**Data Length in Bytes:** 2

**Data Format:** L11

**Type:** R/W

**Default Value:** Pin-strap setting

**Units:** ms

**Range:** 2ms to 300ms

**TON\_RISE (61h)**

**Definition:** Sets the rise time of  $V_{OUT}$  after ENABLE and TON\_DELAY.

**Data Length in Bytes:** 2

**Data Format:** L11

**Type:** R/W

**Default Value:** Pin-strap setting

**Units:** ms

**Range:** 1ms to 120ms



### TOFF\_DELAY (64h)

**Definition:** Sets the delay time from DISABLE to start of  $V_{OUT}$  fall.

**Data Length in Bytes:** 2

**Data Format:** L11

**Type:** R/W

**Default Value:** Pin-strap setting

**Units:** ms

**Range:** 2ms to 300ms

### TOFF\_FALL (65h)

**Definition:** Sets the fall time for  $V_{OUT}$  after DISABLE and TOFF\_DELAY.

**Data Length in Bytes:** 2

**Data Format:** L11

**Type:** R/W

**Default Value:** Pin-strap setting

**Units:** ms

**Range:** 0ms to 120ms

### STATUS\_BYTE (78h)

**Definition:** Returns one byte of information with a summary of the most critical faults.

**Data Length in Bytes:** 1

**Data Format:** BIT

**Type:** Read only

**Default Value:** 00h

**Units:** N/A

Bit Number	Status Bit Name	Meaning
7	BUSY	A fault was declared because the device was busy and unable to respond.
6	OFF	This bit is asserted if the unit is not providing power to the output, regardless of the reason, including simply not being enabled.
5	VOUT_OV_FAULT	An output overvoltage fault has occurred.
4	IOUT_OC_FAULT	An output overcurrent fault has occurred.
3	VIN_UV_FAULT	An input undervoltage fault has occurred.
2	TEMPERATURE	A temperature fault has occurred.
1	CML	A communications, memory, or logic fault has occurred.
0	NONE OF THE ABOVE	A fault not listed in Bits 7:1 has occurred.

**STATUS\_WORD (79h)**

**Definition:** Returns two bytes of information with a summary of the unit's fault condition. Based on the information in these bytes, the host can get more information by reading the appropriate status registers. The low byte of the STATUS\_WORD is the same register as the STATUS\_BYTE (78h) command.

**Data Length in Bytes:** 2

**Data Format:** BIT

**Type:** Read only

**Default Value:** 0000h

**Units:** N/A

Bit Number	Status Bit Name	Meaning
15	VOUT	An output voltage fault has occurred.
14	IOUT/POUT	An output current or output power fault has occurred.
13	INPUT	An input voltage, input current, or input power fault has occurred.
12	MFG_SPECIFIC	A manufacturer specific fault has occurred.
11	POWER_GOOD#	The POWER_GOOD signal, if present, is negated.
10	Reserved	Reserved
9	OTHER	A bit in STATUS_OTHER is set.
8	UNKNOWN	A fault type not given in Bits 15:1 of the STATUS_WORD has been detected.
7	BUSY	A fault was declared because the device was busy and unable to respond.
6	OFF	This bit is asserted if the unit is not providing power to the output, regardless of the reason, including simply not being enabled.
5	VOUT_OV_FAULT	An output overvoltage fault has occurred.
4	IOUT_OC_FAULT	An output overcurrent fault has occurred.
3	VIN_UV_FAULT	An input undervoltage fault has occurred.
2	TEMPERATURE	A temperature fault has occurred.
1	CML	A communications, memory, or logic fault has occurred.
0	NONE OF THE ABOVE	A fault not listed in Bits 7:1 has occurred.

**STATUS\_VOUT (7Ah)**

**Definition:** Returns one data byte with the status of the output voltage.

**Data Length in Bytes:** 1

**Data Format:** BIT

**Type:** Read only

**Default Value:** 00h

**Units:** N/A

BIT NUMBER	STATUS BIT NAME	MEANING
7	VOUT_OV_FAULT	Indicates an output overvoltage fault.
6:5	Reserved	Reserved
4	VOUT_UV_FAULT	Indicates an output undervoltage fault.
3:0	N/A	These bits are not used.

**STATUS\_IOUT (7Bh)****Definition:** Returns one data byte with the status of the output current.**Data Length in Bytes:** 1**Data Format:** BIT**Type:** Read only**Default Value:** 00h**Units:** N/A

Bit Number	Status Bit Name	Meaning
7	IOUT_OC_FAULT	An output overcurrent fault has occurred.
6:5	Reserved	Reserved
4	IOUT_UC_FAULT	An output undercurrent fault has occurred.
3:0	N/A	These bits are not used.

**STATUS\_INPUT (7Ch)****Definition:** Returns input voltage and input current status information.**Data Length in Bytes:** 1**Data Format:** BIT**Type:** Read only**Default Value:** 00h**Units:** N/A

Bit Number	Status Bit Name	Meaning
7	VIN_OV_FAULT	An input overvoltage fault has occurred.
6:5	Reserved	Reserved
4	VIN_UV_FAULT	An input undervoltage fault has occurred.
3:0	N/A	These bits are not used.

**STATUS\_TEMPERATURE (7Dh)****Definition:** Returns one byte of information with a summary of any temperature related faults.**Data Length in Bytes:** 1**Data Format:** BIT**Type:** Read only**Default Value:** 00h**Units:** N/A

Bit Number	Status Bit Name	Meaning
7	OT_FAULT	An over-temperature fault has occurred.
6:5	Reserved	Reserved
4	UT_FAULT	An under-temperature fault has occurred.
3:0	N/A	These bits are not used.

**STATUS\_CML (7Eh)**

**Definition:** Returns one byte of information with a summary of any Communications, Logic, and/or Memory errors.

**Data Length in Bytes:** 1

**Data Format:** BIT

**Type:** Read only

**Default Value:** 00h

**Units:** N/A

Bit Number	Meaning
7	Invalid or unsupported PMBus command was received.
6	The PMBus command was sent with invalid or unsupported data.
5	Packet error was detected in the PMBus command.
4	Memory/logic fault has occurred.
3:2	Reserved
1	A PMBus command tried to write to a read only or protected command, or a communication fault other than the ones listed in this table has occurred.
0	Not used

**STATUS\_MFR\_SPECIFIC (80h)**

**Definition:** Returns one byte of information providing the status of the device's voltage monitoring and clock synchronization faults.

**Data Length in Bytes:** 1

**Data Format:** BIT

**Type:** Read only

**Default Value:** 00h

**Units:** N/A

Bit Number	Field Name	Meaning
7:4	Reserved	Reserved
3	External Switching Period Fault	Loss of external clock synchronization has occurred.
2	Reserved	Reserved
1	VMON UV Fault	The voltage on the VMON pin has dropped below the level set by VMON_UV_FAULT.
0	VMON OV Fault	The voltage on the VMON pin has risen above the level set by VMON_OV_FAULT.

**READ\_VIN (88h)**

**Definition:** Returns the input voltage reading.

**Data Length in Bytes:** 2

**Data Format:** L11

**Type:** Read only

**Units:** V

**READ\_VOUT (8Bh)**

**Definition:** Returns the output voltage reading.

**Data Length in Bytes:** 2

**Data Format:** L16u

**Type:** Read only

**Units:** V

**READ\_IOUT (8Ch)**

**Definition:** Returns the output current reading.

**Data Length in Bytes:** 2

**Data Format:** L11

**Type:** Read only

**Default Value:** N/A

**Units:** A

**READ\_INTERNAL\_TEMP (8Dh)**

**Definition:** Returns the controller junction temperature reading from internal temperature sensor.

**Data Length in Bytes:** 2

**Data Format:** L11

**Type:** Read only

**Units:** °C

**READ\_DUTY\_CYCLE (94h)**

**Definition:** Reports the actual duty cycle of the converter during the enable state.

**Data Length in Bytes:** 2

**Data Format:** L11

**Type:** Read only

**Units:** %

**READ\_FREQUENCY (95h)**

**Definition:** Reports the actual switching frequency of the converter during the enable state.

**Data Length in Bytes:** 2

**Data Format:** L11

**Type:** Read only

**Units:** kHz

**ASCR\_CONFIG (DFh)**

**Definition:** Allows user configuration of the ASCR settings. ASCR gain is analogous to bandwidth and ASCR residual is analogous to damping. To improve load transient response performance, increase ASCR gain. To lower transient response overshoot, increase ASCR residual. Increasing ASCR gain can result in increased PWM jitter and should be evaluated in the application circuit. Excessive ASCR gain can lead to excessive output voltage ripple. Increasing ASCR residual to improve transient response damping can result in slower recovery times, but will not affect the peak output voltage deviation.

**Data Length in Bytes:** 4

**Data Format:** CUS

**Type:** R/W

**Default Value:** Pin-strap setting

Bit	Purpose	Data Format	Value	Description
31:25	Not Used		0000000h	Not used
24	Reserved			Reserved
23:16	ASCR Residual Setting	Integer		
15:0	ASCR Gain Setting	Integer		

**DEVICE\_ID (E4h)**

**Definition:** Returns the 16-byte (character) device identifier string.

**Data Length in Bytes:** 16

**Data Format:** ASCII

**Type:** Block Read

**Default Value:** Part number/Die revision/Firmware revision

**MFR\_IOUT\_OC\_FAULT\_RESPONSE (E5h)**

**Definition:** Configures the  $I_{OUT}$  overcurrent fault response as defined by the following table. The command format is the same as the PMBus standard fault responses except that it sets the overcurrent status bit in STATUS\_IOUT.

**Data Length in Bytes:** 1

**Data Format:** BIT

**Type:** R/W

**Default Value:** B9h (Disable and continuous retry with 70ms delay)

**Units:** N/A

Settings	Actions
80h	Disable with no retry.
B9h	Disable and continuous retry with 70ms delay.

**MFR\_IOUT\_UC\_FAULT\_RESPONSE (E6h)**

**Definition:** Configures the I<sub>OUT</sub> undercurrent fault response as defined by the following table. The command format is the same as the PMBus standard fault responses except that it sets the undercurrent status bit in STATUS\_IOUT.

**Data Length in Bytes:** 1

**Data Format:** BIT

**Type:** R/W

**Default Value:** B9h (Disable and continuous retry with 70ms delay)

**Units:** N/A

Settings	Actions
80h	Disable with no retry.
B9h	Disable and continuous retry with 70ms delay.

**SNAPSHOT (EAh)**

**Definition:** A 32-byte readback of parametric and status values. It allows monitoring and status data to be stored to flash following a fault condition. In case of a fault, the most recently updated values are stored to the flash memory. When SNAPSHOT STATUS byte 22 is set stored, the device will no longer automatically capture parametric and status values following a fault until stored data are erased. Use the SNAPSHOT\_CONTROL command to erase stored data and clear the status bit before the next ramp up. Data erased is not allowed when the module is enabled.

**Data Length in Bytes:** 32

**Data Format:** Bit field

**Type:** Block Read

Byte Number	Value	Pmbus Command	Format
31:23	Reserved	Reserved	00h
22	Flash Memory Status Byte FF - Not Stored 00 - Stored	NVM Status Byte	Bit
21	Manufacturer Specific Status Byte	STATUS_MFR_SPECIFIC (80h)	Byte
20	CML Status Byte	STATUS_CML (7Eh)	Byte
19	Temperature Status Byte	STATUS_TEMPERATURE (7Dh)	Byte
18	Input Status Byte	STATUS_INPUT (7Ch)	Byte
17	I <sub>OUT</sub> Status Byte	STATUS_IOUT (7Bh)	Byte
16	V <sub>OUT</sub> Status Byte	STATUS_VOUT (7Ah)	Byte
15:14	Switching Frequency	READ_FREQUENCY (95h)	L11
13:12	Reserved	Reserved	
11:10	Internal Temperature	READ_INTERNAL_TEMP (8Dh)	L11
9:8	Duty Cycle	READ_DUTY_CYCLE (94h)	L11
7:6	Reserved	Reserved	L11
5:4	Output Current	READ_IOUT (8Ch)	L11
3:2	Output Voltage	READ_VOUT (8Bh)	L16u
1:0	Input Voltage	READ_VIN (88h)	L11

**SNAPSHOT\_CONTROL (F3h)**

**Definition:** Writing a 01h causes the device to copy the current Snapshot values from NVRAM to the 32-byte Snapshot command parameter. Writing a 02h causes the device to write the current Snapshot values to NVRAM. Writing a 03h erases all Snapshot values from NVRAM. Write (02h) and Erase (03h) may only be used when the device is disabled. All other values will be ignored.

**Data Length in Bytes:** 1

**Data Format:** Bit field

**Type:** R/W byte

Value	Description
01h	Read Snapshot values from NVRAM.
02h	Write Snapshot values to NVRAM.
03h	Erase Snapshot values stored in NVRAM.

**MFR\_VMON\_OV\_FAULT\_LIMIT (F5h)**

**Definition:** Reads the VMON OV fault threshold.

**Data Length in Bytes:** 2

**Data Format:** L11

**Type:** Read only

**Default Value:** CB00h (6V)

**Units:** V

**Range:** 4V to 6V

**MFR\_VMON\_UV\_FAULT\_LIMIT (F6h)**

**Definition:** Reads the VMON UV fault threshold.

**Data Length in Bytes:** 2

**Data Format:** L11

**Type:** Read only

**Default Value:** CA00h (4V)

**Units:** V

**Range:** 4V to 6V

**MFR\_READ\_VMON (F7h)**

**Definition:** Reads the VMON voltage.

**Data Length in Bytes:** 2

**Data Format:** L11

**Type:** Read only

**Default Value:** N/A

**Units:** V

**Range:** 4V to 6V



## 8. Revision History

### 8.1 Firmware

Firmware Revision Code	Change Description	Note
RAA210833--G0100	Initial release	

### 8.2 Datasheet

Rev.	Date	Description
0.00	Aug 31, 2018	Initial release





## 9. Package Outline Drawing

For the most recent package outline drawing, see [Y41.17x19](#).

Y41.17x19


41 I/O 17.0mm x 19.0mmx3.6mm HDA Module

Rev 1, 5/16

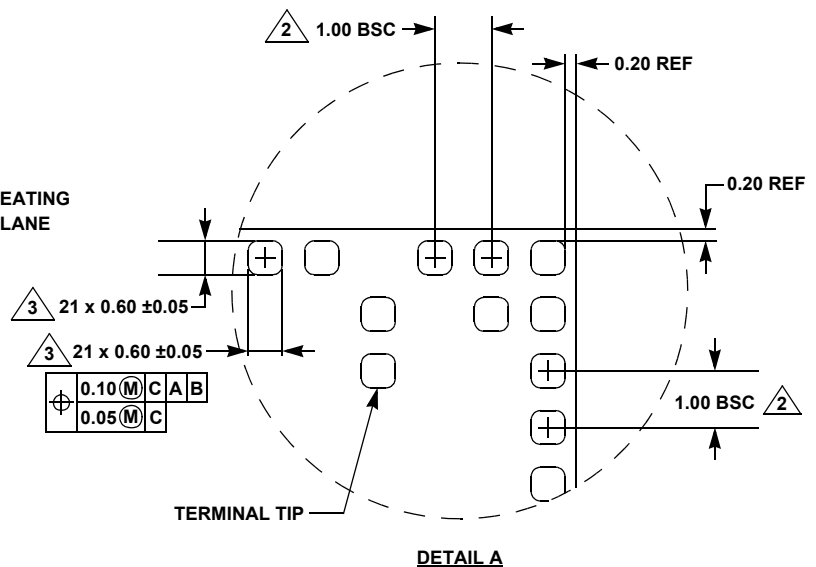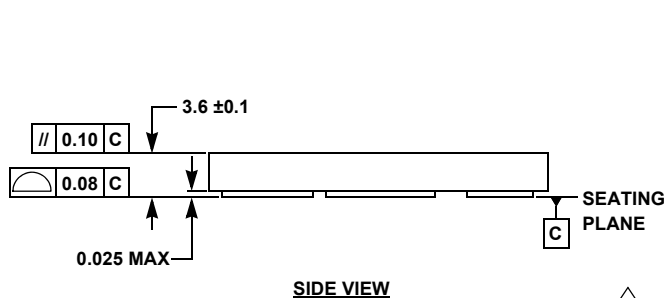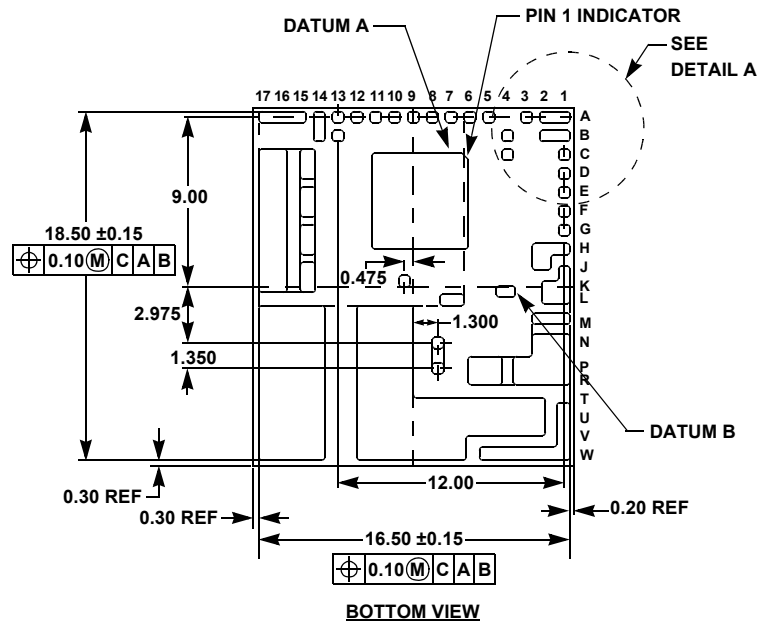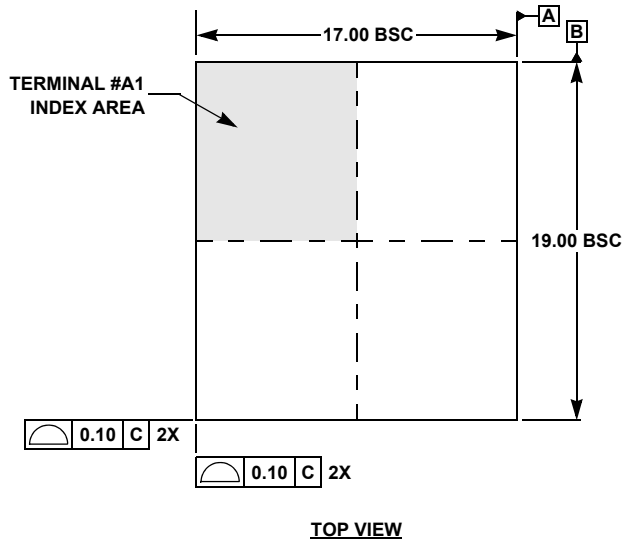


### NOTES:


1. All dimensions are in millimeters.
2. Represents the basic land grid pitch.
3. The total number of I/O (excluding dummy pads).
4. Unless otherwise specified, tolerance: decimal ±0.10.
5. Dimensioning and tolerancing per ASME Y14.M-2009.
6. The configuration of the pin #1 identifier is optional, but must be located within the zone indicated.  
The pin #1 identifier may be either a mold or mark feature.

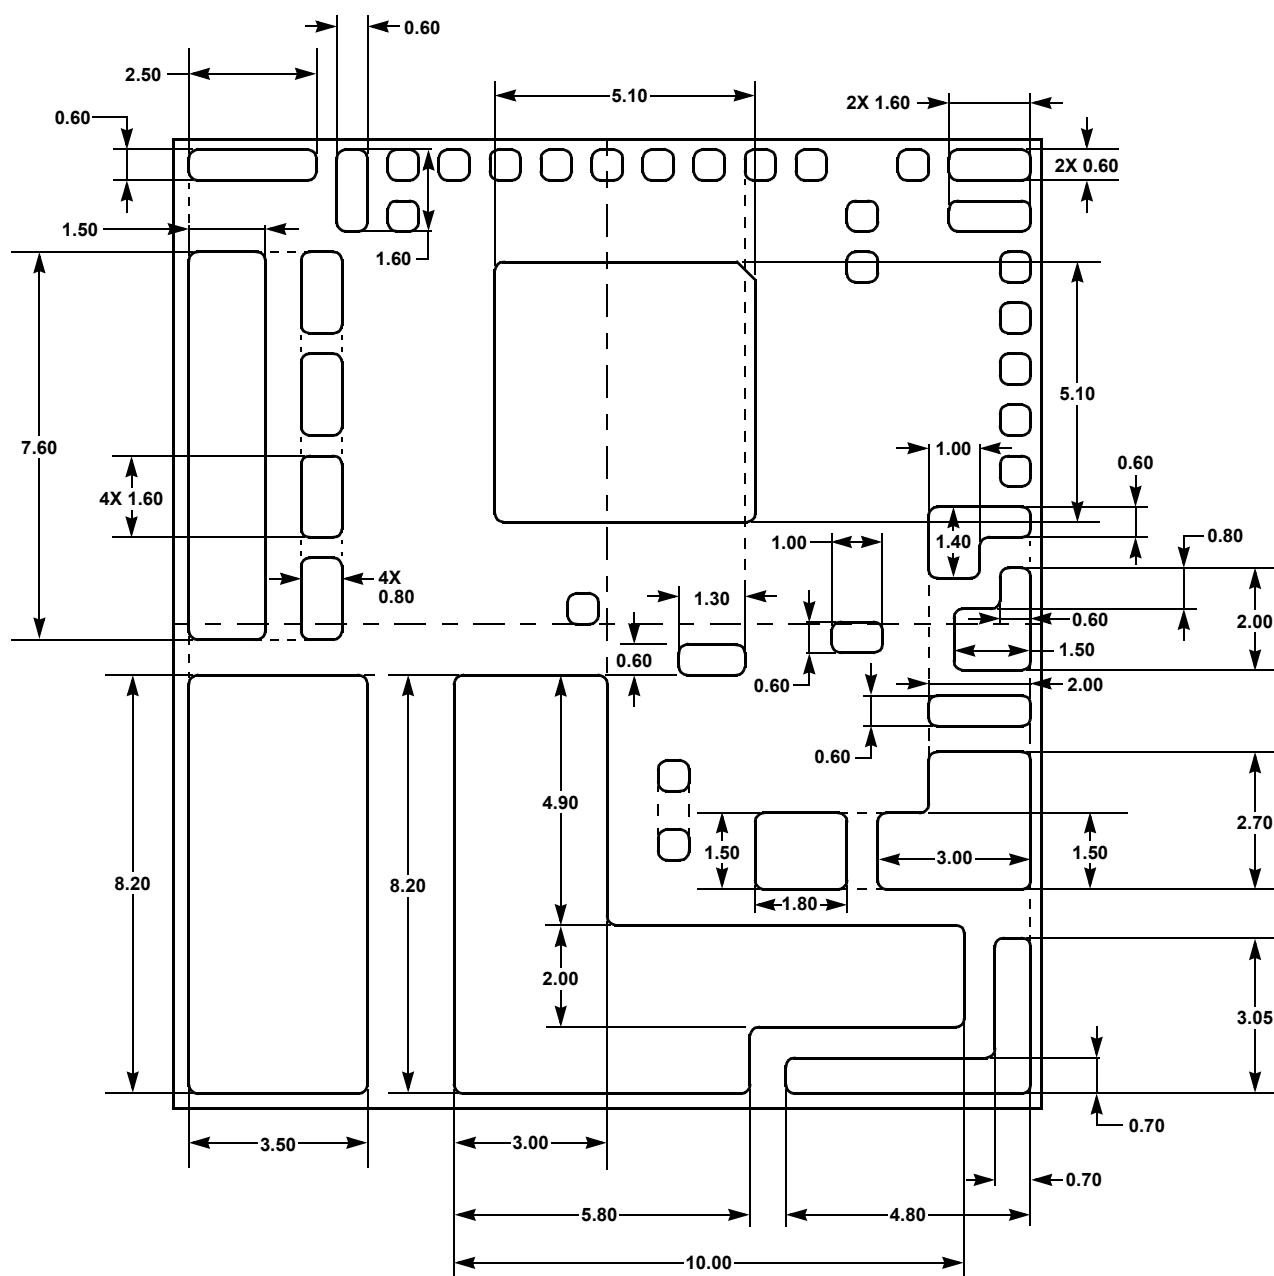


**SIZE DETAILS FOR THE 16 EXPOSED DAPS**  
**BOTTOM VIEW**

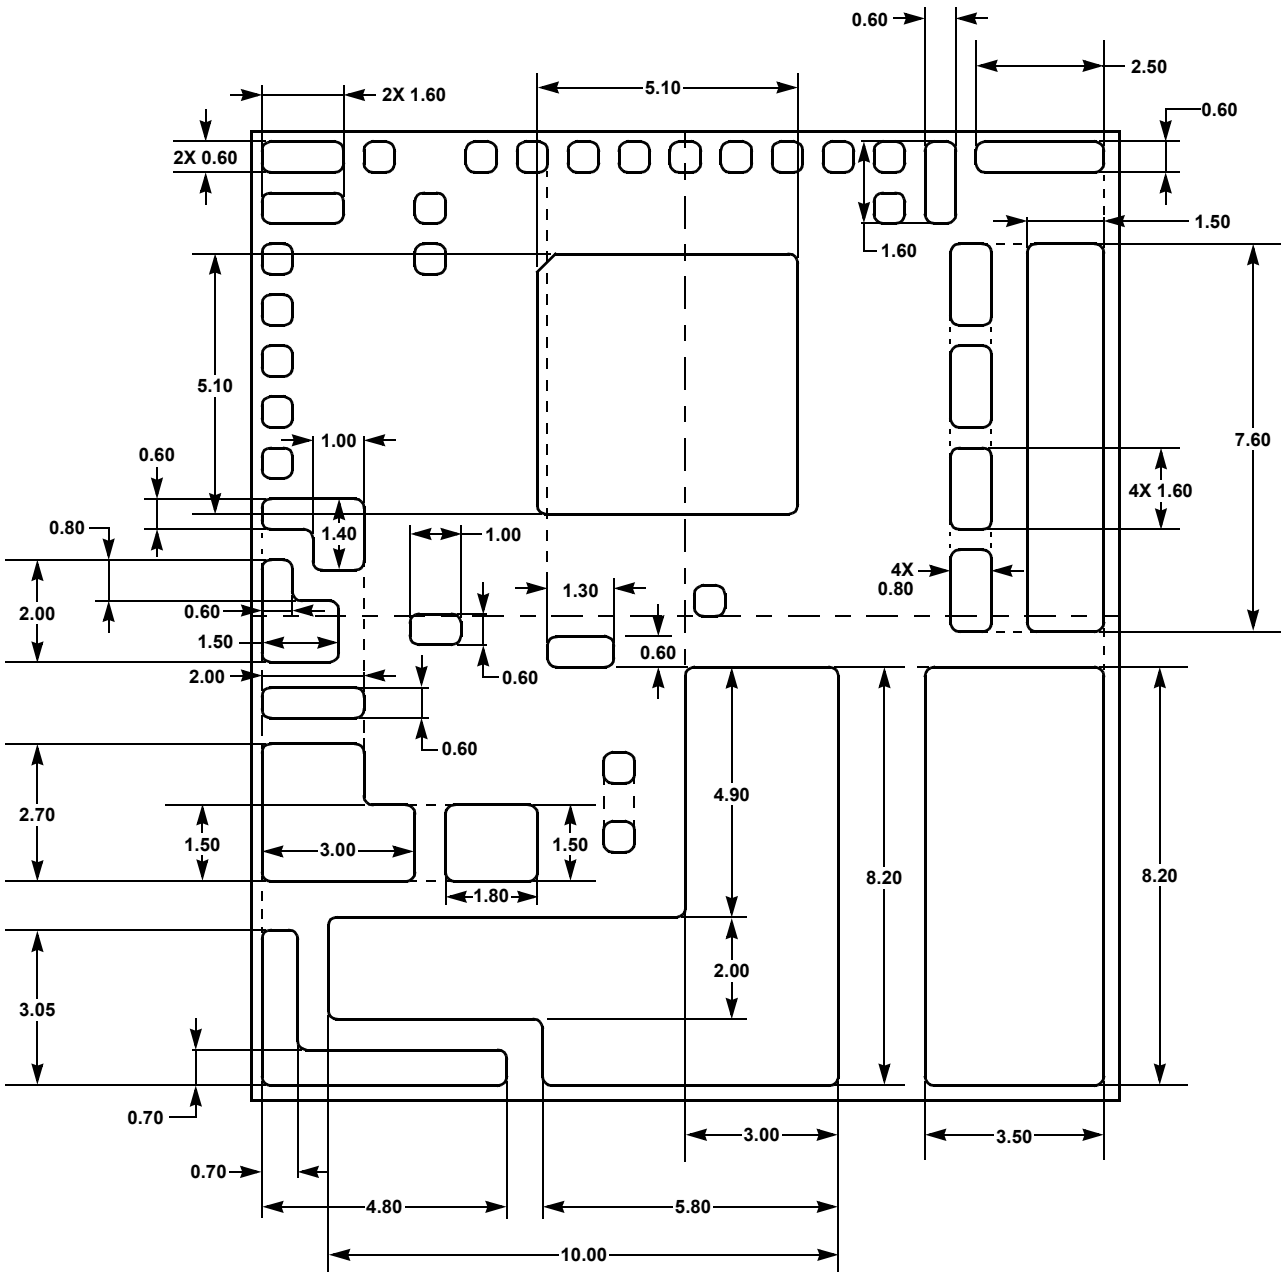


SIZE DETAILS FOR THE 16 EXPOSED DAPS  
TOP VIEW

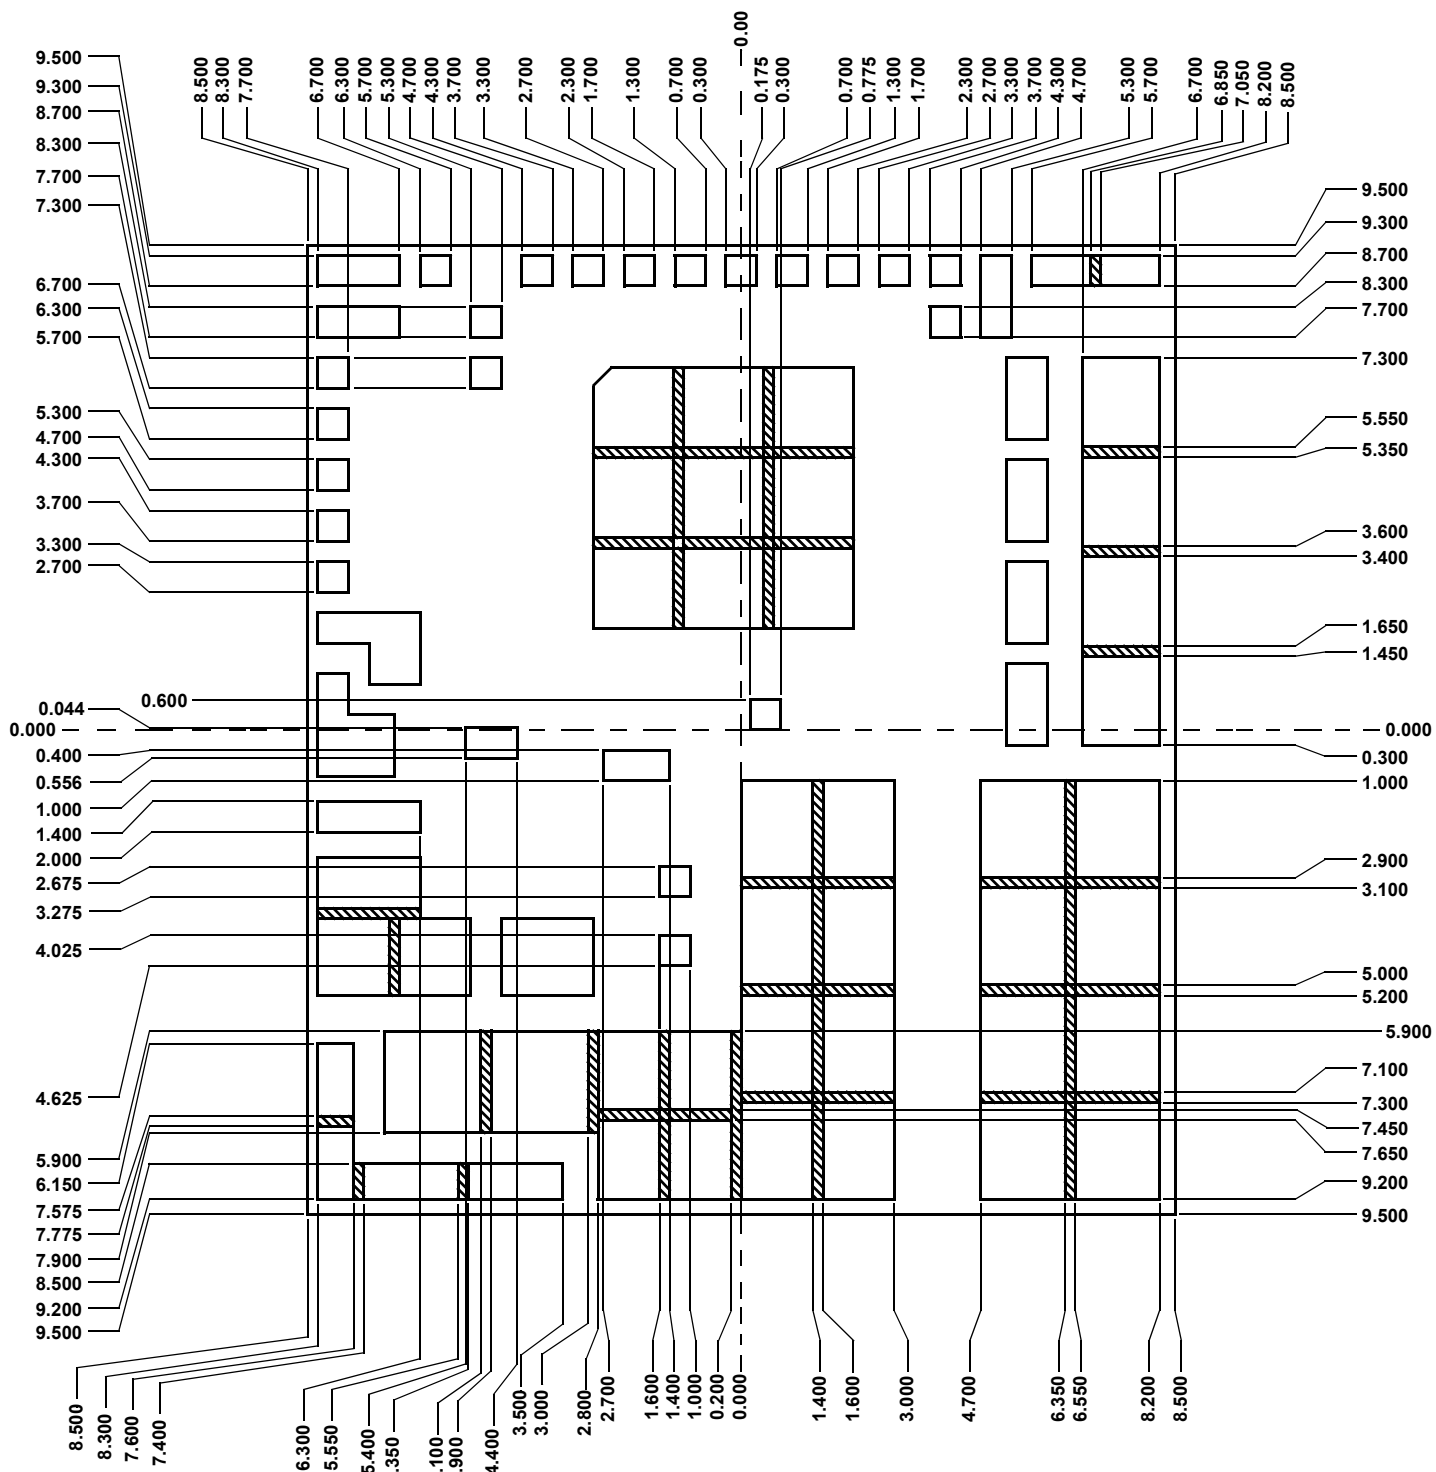


RECOMMENDED SOLDER MASK DEFINED PCB LAND PATTERN (1)  
TOP VIEW

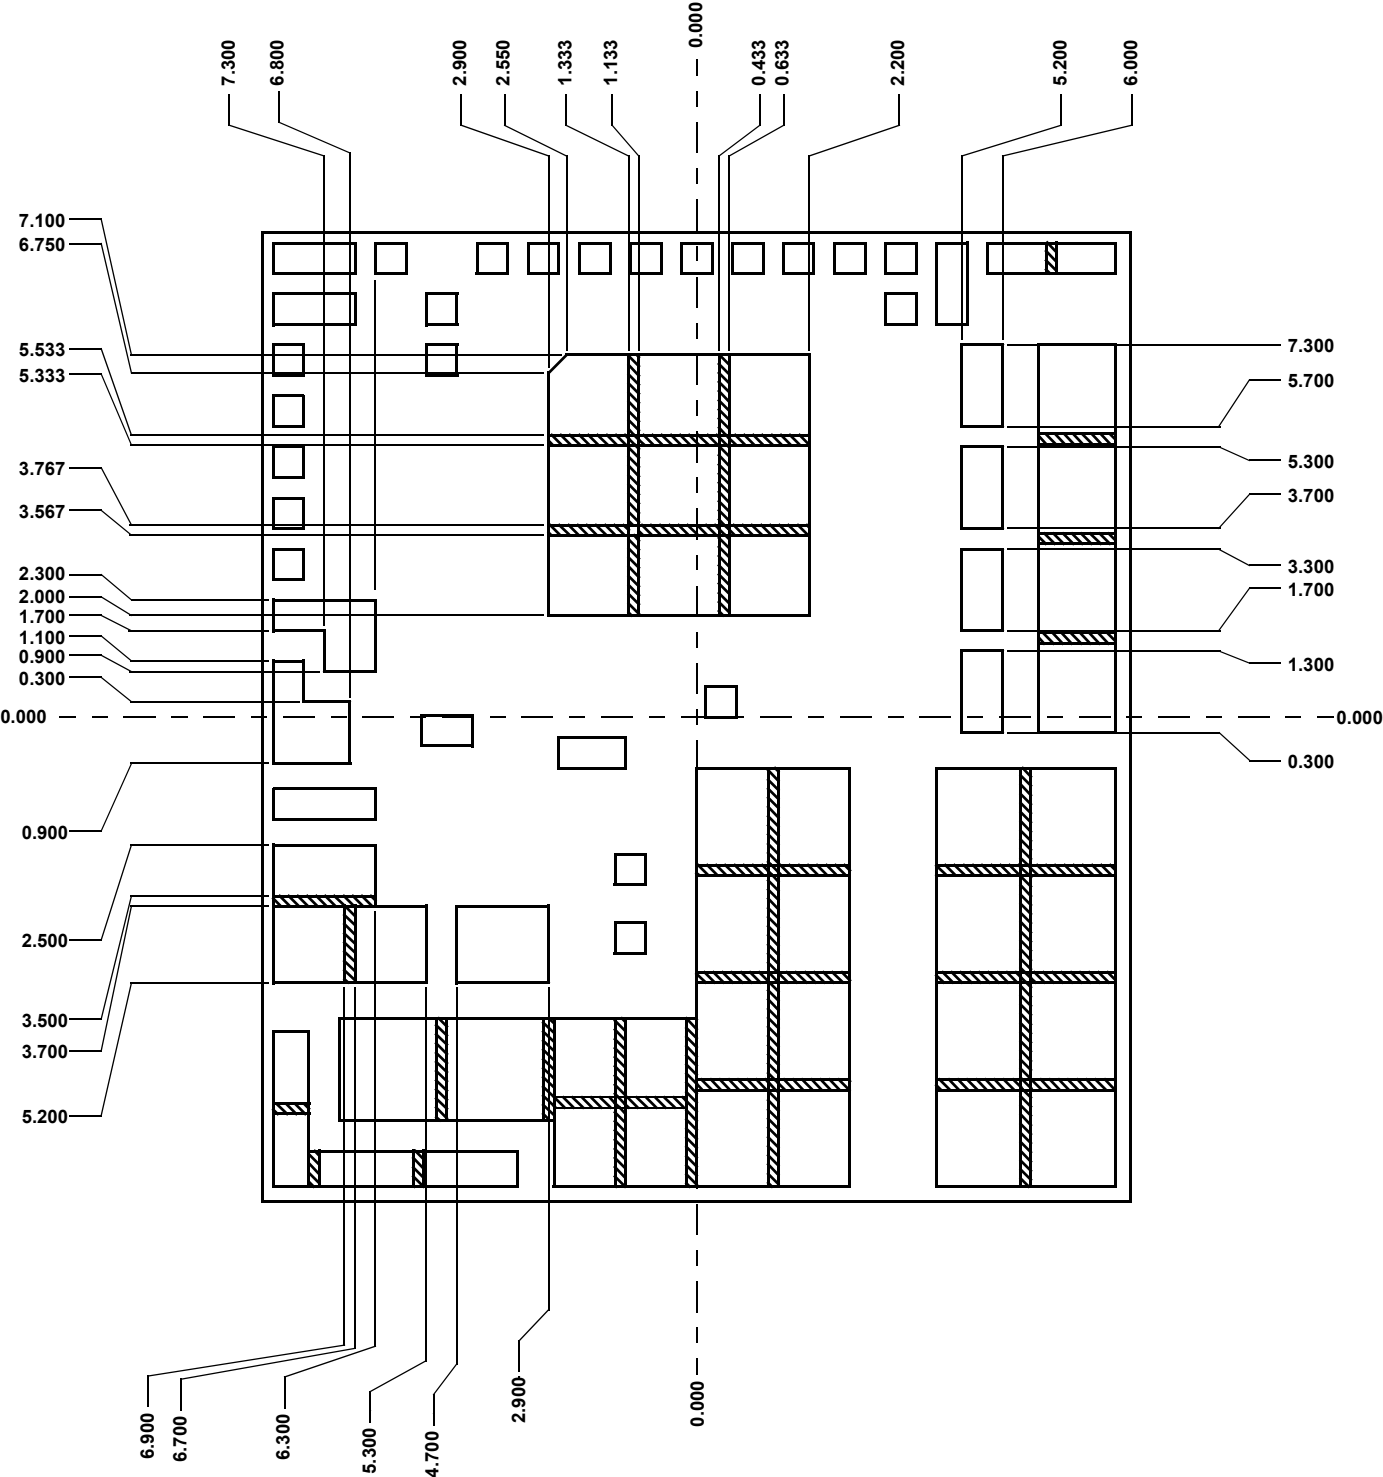

RECOMMENDED SOLDER MASK DEFINED PCB LAND PATTERN (2)  
TOP VIEW

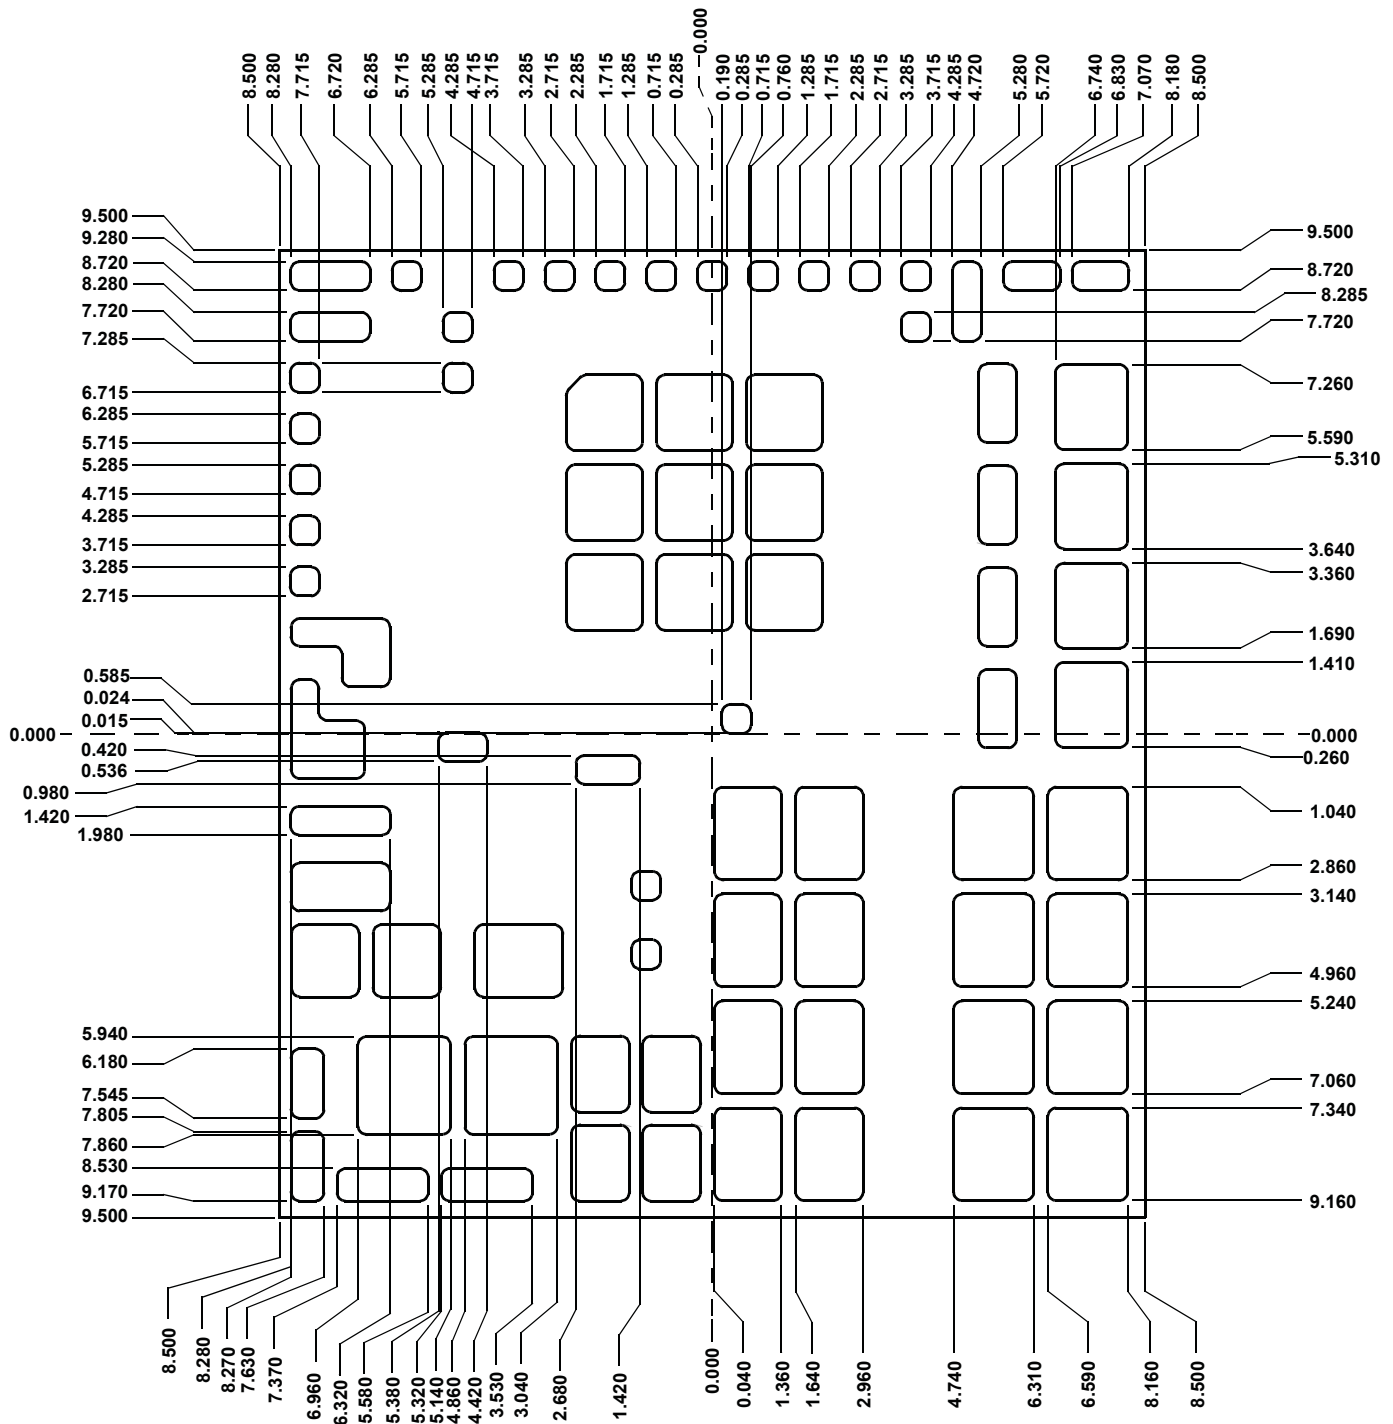

RECOMMENDED STENCIL PATTERN (90% PASTE TO PAD) (1)  
TOP VIEW

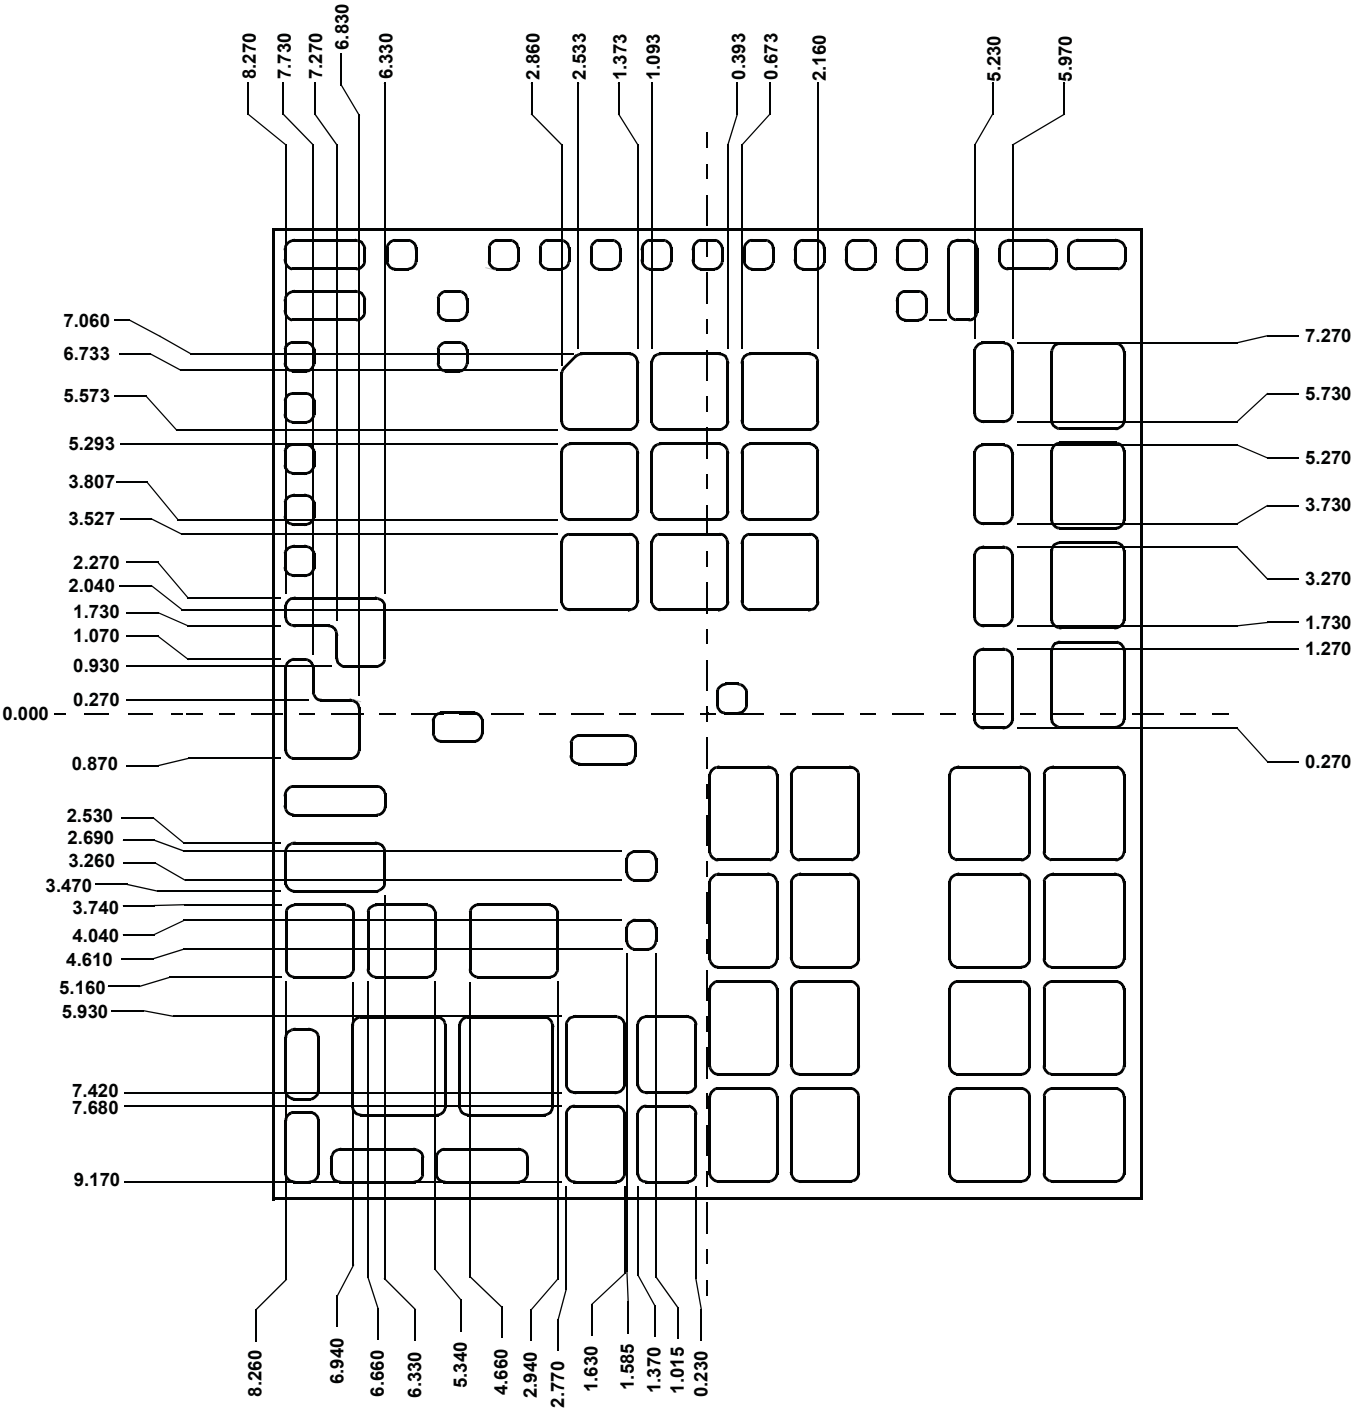

**RECOMMENDED STENCIL PATTERN (90% PASTE TO PAD) (2)**  
**TOP VIEW**



## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
  2. Renesas Electronics hereby expressly disclaims any warranties against liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
  3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
  4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
  5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.
  6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
  7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
  8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
  9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
  10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
  11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
  12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.
- (Note 1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.
- (Note 2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.4.0-1 November 2017)



### SALES OFFICES

### Renesas Electronics Corporation

<http://www.renesas.com>

Refer to "<http://www.renesas.com/>" for the latest and detailed information.

#### California Eastern Laboratories, Inc.

4590 Patrick Henry Drive, Santa Clara, California 95054-1817, U.S.A.  
Tel: +1-408-919-2500, Fax: +1-408-988-0279

#### Renesas Electronics Canada Limited

9251 Yonge Street, Suite 8309 Richmond Hill, Ontario Canada L4C 9T3  
Tel: +1-905-237-2004

#### Renesas Electronics Europe Limited

Dukes Meadow, Millboard Road, Bourne End, Buckinghamshire, SL8 5FH, U.K.  
Tel: +44-1628-651-700

#### Renesas Electronics Europe GmbH

Arcadiastrasse 10, 40472 Düsseldorf, Germany  
Tel: +49-211-6503-0, Fax: +49-211-6503-1327

#### Renesas Electronics (China) Co., Ltd.

Room 1709 Quantum Plaza, No.27 ZhichunLu, Haidian District, Beijing, 100191 P. R. China  
Tel: +86-10-8235-1155, Fax: +86-10-8235-7679

#### Renesas Electronics (Shanghai) Co., Ltd.

Unit 301, Tower A, Central Towers, 555 Langao Road, Putuo District, Shanghai, 200333 P. R. China  
Tel: +86-21-2226-0888, Fax: +86-21-2226-0999

#### Renesas Electronics Hong Kong Limited

Unit 1601-1611, 16/F., Tower 2, Grand Century Place, 193 Prince Edward Road West, Mongkok, Kowloon, Hong Kong  
Tel: +852-2265-6688, Fax: +852 2886-9022

#### Renesas Electronics Taiwan Co., Ltd.

13F, No. 363, Fu Shing North Road, Taipei 10543, Taiwan  
Tel: +886-2-8175-9600, Fax: +886 2-8175-9670

#### Renesas Electronics Singapore Pte. Ltd.

80 Bendemeer Road, Unit #06-02 Hyflux Innovation Centre, Singapore 339949  
Tel: +65-6213-0200, Fax: +65-6213-0300

#### Renesas Electronics Malaysia Sdn.Bhd.

Unit 1207, Block B, Menara Amcorp, Amcorp Trade Centre, No. 18, Jln Persiaran Barat, 46050 Petaling Jaya, Selangor Darul Ehsan, Malaysia  
Tel: +60-3-7955-9390, Fax: +60-3-7955-9510

#### Renesas Electronics India Pvt. Ltd.

No.777C, 100 Feet Road, HAL 2nd Stage, Indiranagar, Bangalore 560 038, India  
Tel: +91-80-67208700, Fax: +91-80-67208777

#### Renesas Electronics Korea Co., Ltd.

17F, KAMCO Yangjae Tower, 262, Gangnam-daero, Gangnam-gu, Seoul, 06265 Korea  
Tel: +82-2-558-3737, Fax: +82-2-558-5338

# Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Renesas Electronics:](#)

[RAA2108332GLGHG0](#) [RAA2108332GLGMG0](#)