



ESP32-C3-Lyra V2.0

[\[中文\]](#)


This user guide will help you get started with ESP32-C3-Lyra V2.0 and will also provide more in-depth information.

The document consists of the following sections:

- [Board Overview](#): Overview of the board hardware/software.
- [Start Application Development](#): How to set up hardware/software to develop applications.
- [Hardware Reference](#): More detailed information about the board's hardware.
- [Hardware Revision Details](#): Hardware revision history, known issues, and links to user guides for previous versions (if any) of the board.
- [Ordering](#): How to buy the board.
- [Related Documents](#): Links to related documentation.

Board Overview

ESP32-C3-Lyra is an ESP32-C3-based audio development board produced by Espressif for controlling light with audio. The board has control over the microphone, speaker, and LED strip, perfectly matching customers' product development needs for ultra-low-cost and high-performance audio broadcasters and rhythm light strips.

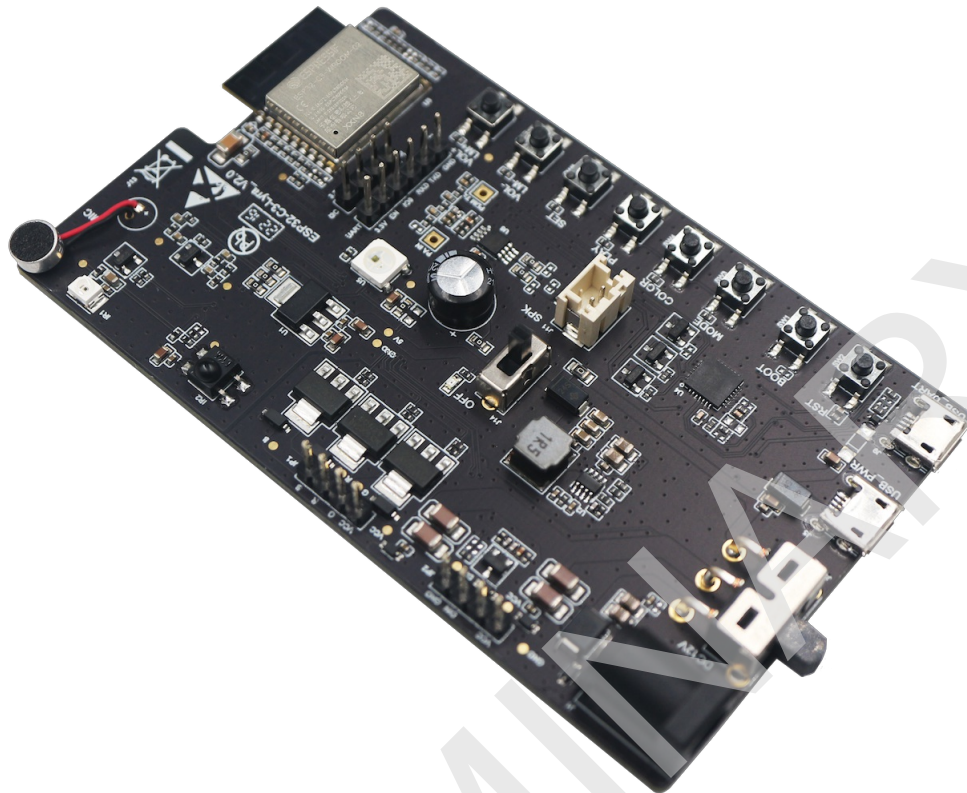

ESP32-C3-Lyra with ESP32-C3-WROOM-02 module

Feature List

The main features of the board are listed below:

- **Module Embedded:** ESP32-C3-WROOM-02 module with a 4 MB external SPI flash
- **Audio:** built-in ECM microphone, speaker power amplifier, speaker connector
- **LED Strip Connector:** support for two types of connections, i.e., connections to addressable LED strips and RGB LED strips
- **Infrared Control:** support for infrared (IR) transmitting and receiving
- **Keys:** boot key, reset key, and six function keys (MODE, COLOR, PLAY/PAUSE, SET, VOL+/LM+, VOL-/LM-)
- **USB:** 1 x USB Power Port, 1 x USB-to-UART Port
- **Power Supply:** 5 V power supply over USB or 12 V DC power supply

Block Diagram

The block diagram below shows the components of ESP32-C3-Lyra and their interconnections.



The key components of the board are described in a clockwise direction.

Key Component	Description
ESP32-C3-WROOM-02 Module	It is a general-purpose Wi-Fi and Bluetooth LE module developed based on ESP32-C3, a 32-bit RISC-V single-core processor that operates at up to 160 MHz. The module has a rich set of peripherals and a high performance, making it an ideal choice for smart homes, industrial automation, health care, consumer electronics, etc. It integrates a 4 MB external SPI flash and an on-board PCB antenna. The ESP32-C3-WROOM-02U module is also compatible with this board, but it needs to connect to an external antenna.
Speaker PA Chip	NS4150 is an EMI, 3 W mono Class D audio power amplifier, amplifying audio signals from ESP32-C3 PDM_TX to drive speakers.
Speaker Output Port	Output socket to connect a speaker. The 4-ohm and 3-watt speaker is recommended. The pins have a 2.00 mm/0.08" pitch.
Function Press Keys	Six function press keys, including MODE, COLOR, PLAY/PAUSE, SET, VOL+/LM+, VOL-/LM-. They are routed to the ESP32-C3-WROOM-02 Module and intended for the development and testing of a UI for audio applications or LED strips using dedicated APIs.
Boot/Reset Press Keys	Boot: holding down the Boot key and momentarily pressing the Reset button initiates the firmware upload mode. Then you can upload firmware through the serial port. Reset: pressing this key alone resets the system.
USB-to-UART Port	Functions as the communication interface between the PC and the ESP32-C3-WROOM-02 module.
USB-to-UART Bridge Chip	The single-chip USB-UART bridge CP2102N provides up to 3 Mbps transfer rates for software download and debugging.
USB Power Port	Provides power to the board. It is recommended to use at least 5 V/2 A power adapters to ensure a stable power supply.
System Power Switch	System Power on/off knob. Toggling it to ON turns the 5 V system power on; toggling it to OFF turns the 5 V system power off.
LED Strip Power Selection Switch	Toggle this switch to select between a 5 V power supply over USB and a 12 V DC power supply for your LED strip according to the working voltage of the LED strip and the type of the power adapter you actually use.
12 V DC Power Port	Supports 12 V DC power adapters with a maximum current of 2 A. The DC power Jack contact have an outer diameter of 5.5 mm and an inner contact diameter of 2.5 mm.
12 V to 5 V Buck Chip	The 12 V to 5 V buck chip MP2313 is a high-efficiency synchronous step-down converter that operates at 1 A, 24 V, and 2 MHz.
Addressable LED Strip Port	It is a male pin header connector with 4 x 1 pins and a 2.54 mm pitch. It can connect to the addressable LED strip that is controlled with a single wire. It supports 5 V and 12 V LED strips, such as WS2811 and WS2812 LED. ESP32-C3 can send commands to control the LED strips over RMT or SPI.
RGB LED Strip Port	It is a male pin header connector with 4 x 1 pins and a 2.54 mm pitch. It can connect to regular RGB LED strips that operate at 5 V or 12 V. ESP32-C3 can output PWM waveform via this port to control the LED strips.
System Power LED	It turns red when System Power Switch is toggled to ON.
IR Receiver	IRM-H638T/TR2 is a miniature SMD type infrared remote control system receiver. The demodulated output signal can directly be decoded by ESP32-C3.
IR Transmitter	IR67-21C/TR8 is an infrared emitting diode. It is spectrally matched with silicon photodiode and phototransistor.
Microphone	On-board ECM microphone. Signals picked up by it are amplified via transistors and sent to the analog-to-digital converter (ADC) of ESP32-C3-WROOM-02.
System LED	It is controlled via GPIO by ESP32-C3-WROOM-02 to indicate certain operation states of the audio application using dedicated APIs.

Default Firmware and Function Test

Each ESP32-C3-Lyra comes with a pre-built default firmware that allows you to test its functions including LED control (LEDC), remote control transceiver (RMT), IR, ADC, and pulse-density modulation (PDM_TX). This section describes how to test peripheral's function with the pre-built firmware.

Preparing Hardware

See Section [Required Hardware](#) and [Optional Hardware](#) for more information.

- 1 x ESP32-C3-Lyra
- 2 x USB 2.0 cable (Standard-A to Micro-B)
- 1 x Computer running Windows, Linux, or macOS
- 1 x 5 V RGB LED strip WS2812 (optional)
- 1 x Mobile phone or music player
- 1 x Speaker (optional)

Connecting Hardware

- Before powering up your board, please make sure that it is in good condition with no obvious signs of damage.
- Connect the board to the 5 V power supply through the **USB Power Port** using a USB cable. After the board is powered up, you will notice that the **System Power LED** turns on, which means the board is powered up. If the LED is not on, please toggle the **System Power Switch**.
- Toggle the **LED Strip Power Selection Switch** to the USB power side.
- Connect the board to the computer through the **USB-to-UART Port** using a USB cable.

Testing Default Firmware

1. Press the **Reset Press Key** on the board.
2. The board automatically starts the flash test. The log shown on a PC connected to **USB-to-UART Port** is as follows:

```
Step1 Flash Test Start
Step1 Flash Test OK
```

3. The board tests the **Function Press Keys**. Please press the key as the log prompts. For example, press **VOL+** when you see the following log:

```
Step2 Keys Test Start
Please press The Key: VOL+
```

4. The board tests the **System LED**. You will see the LED keep switching between red, blue, and green. Then, press the key **VOL+/LM+** to proceed to the next step.
5. The board tests LEDC (PWM). If you connect an RGB LED strip to the **RGB LED Strip Port**, you will see the LEDs breathing. Then, press the key **VOL+/LM+** to proceed to the next step.
6. The board tests ADC. If you play the 1 kHz sine audio signal close to the **Microphone** with the mobile phone or music player, the following log will be seen when the board detects the audio signal:

```
Step5 Adc Test Start
Please play 1khz audio
Step5 Adc Test OK
```

7. The board tests the PDM_TX function. Connect the speaker to the **Speaker Output Port** and you will hear the music played from flash.

Software Support

ESP-ADF is the development framework for ESP32-C3-Lyra. To see which version of ESP-ADF is supported for this board, please go to the section [Hardware](#).

Below are other software repositories developed by Espressif that may help you experiment with the functions of ESP32-C3-Lyra.

- **ESP-IDF**: development framework for Espressif SoCs based on FreeRTOS with a rich set of components, including LED control (LEDC), ADC, RMT, SPI etc.

Application examples for this board can be found at [application example](#).

Start Application Development

This section provides instructions on how to do hardware and software setup and flash firmware onto the board to develop your own application.

Required Hardware

Hardware	Qty	Note
ESP32-C3-Lyra	1	-
USB 2.0 cables (Standard-A to Micro-B)	2	One for USB power supply, the other for flashing firmware onto the board. Be sure to use an appropriate USB cable. Some cables are for charging only and do not provide the needed data lines nor work for programming the boards.
Computer running Windows, Linux, or macOS	1	-
Speaker	1	The 4-ohm 3-watt speaker is recommended. It should be fitted with JST PH 2.0 2-Pin plugs. In case you do not have this type of plug it is also fine to use Dupont female jumper wires during development.

Optional Hardware

Hardware	Qty	Note
12 V DC adapter	1	The maximum operating current of the adapter is 2 A. It provides power supply for 12 V LED strips.
5 V or 12 V addressable LED strip	1	It should have a female connector with 4 x 1 pins and a 2.54 mm pitch. WS2812 or WS2811 LED strip is recommended. This LED strip should be connected to Addressable LED Strip Port (JP2).

Hardware	Qty	Note
5 V or 12 V RGB LED strip	1	It should have a female connector with 4 x 1 pins and a 2.54 mm pitch. This LED strip should be connected to RGB LED Strip Port (JP1) .

Power Supply Options

There are two ways to provide power to the board:

- **USB Power Port (5 V)**
- **12 V DC Power Port**

Hardware Setup

Prepare the board for loading of the first sample application:

1. Connect the speaker to the **Speaker Output Port**.
2. (Optional) Connect the LED strip to the development board through the **Addressable LED Strip Port** or the **RGB LED Port** depending on the type of your LED strip.
3. Connect the power supply to the development board through the **USB Power Port (5 V)** or the **12 V DC Power Port** depending on the working voltage and current of your LED strip.
4. (Optional) Toggle the **LED Strip Power Selection Switch** accordingly to supply power for your LED strip.

Note

If you toggle the switch to the wrong side, the light strip will work abnormally. **Do not** power the 5 V LED strip with the 12 V DC adaptor. Otherwise, the light strip will be damaged.

5. Toggle the **System Power Switch** to **ON**. The red **System Power LED** should turn on.
6. Connect the board to the computer through the **USB-to-UART Port** using a USB cable.

Now the board is ready for software setup.

Software Setup

After hardware setup, you can proceed to [Get Started](#) to prepare development tools.

For more software information on developing applications, please go to [Software Support](#).

Hardware Reference

This section provides more detailed information about the board's hardware.

GPIO Allocation


The [table](#) provides the allocation of GPIOs exposed on terminals of the ESP32-C3-WROOM-02 module to control specific components or functions of the board.

Power Distribution


Power Supply over USB or from 12 V/2 A DC Input

There are two ways to power the development board: 5 V USB Power Port or 12 V/2 A DC input.

USB-PWR

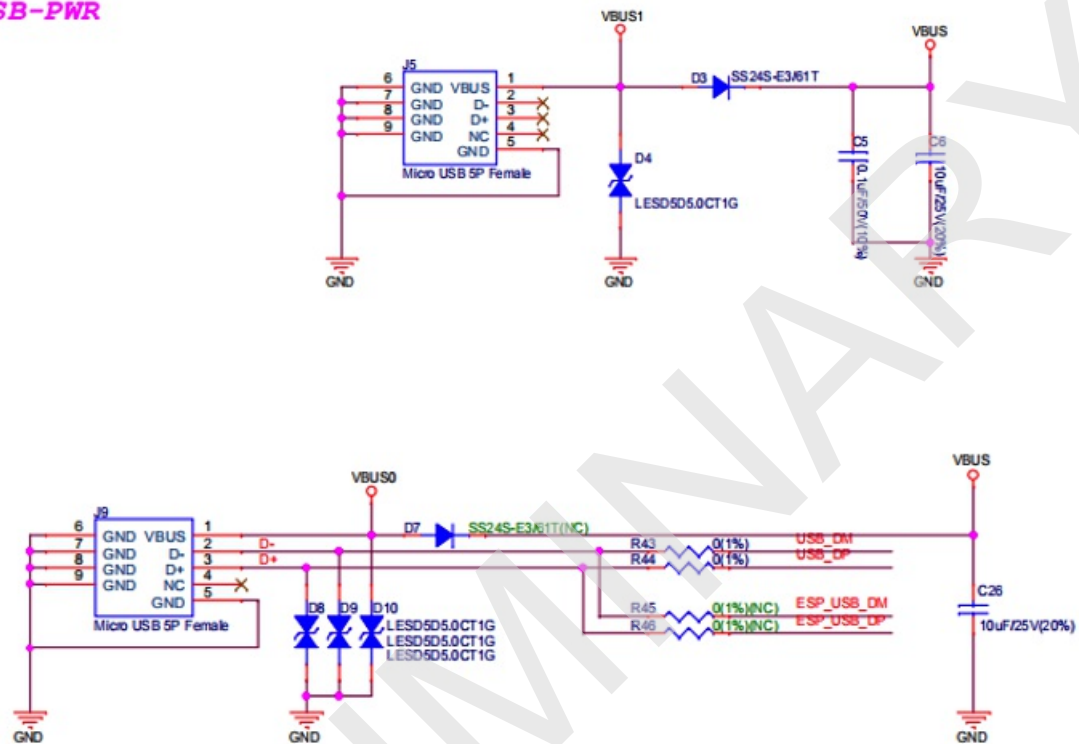


ESP32-C3-Lyra - Dedicated USB Power Supply Socket

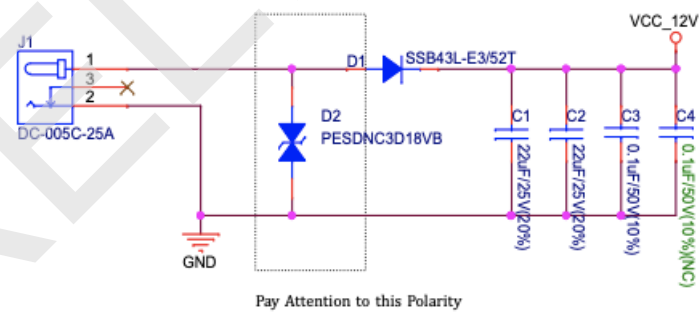

ESP32-C3-Lyra - Power Supply from 12V DC Input


LED Strip Power Selection Switch

According to the working voltage and current of your LED strip, select a proper power adapter and the port, and toggle the **LED Strip Power Selection Switch** to the corresponding side to power up the LED strip.

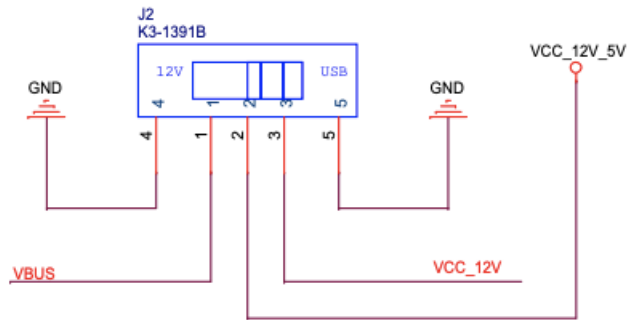

LED Strip Power Selection Switch

12 V to 5 V Buck Power

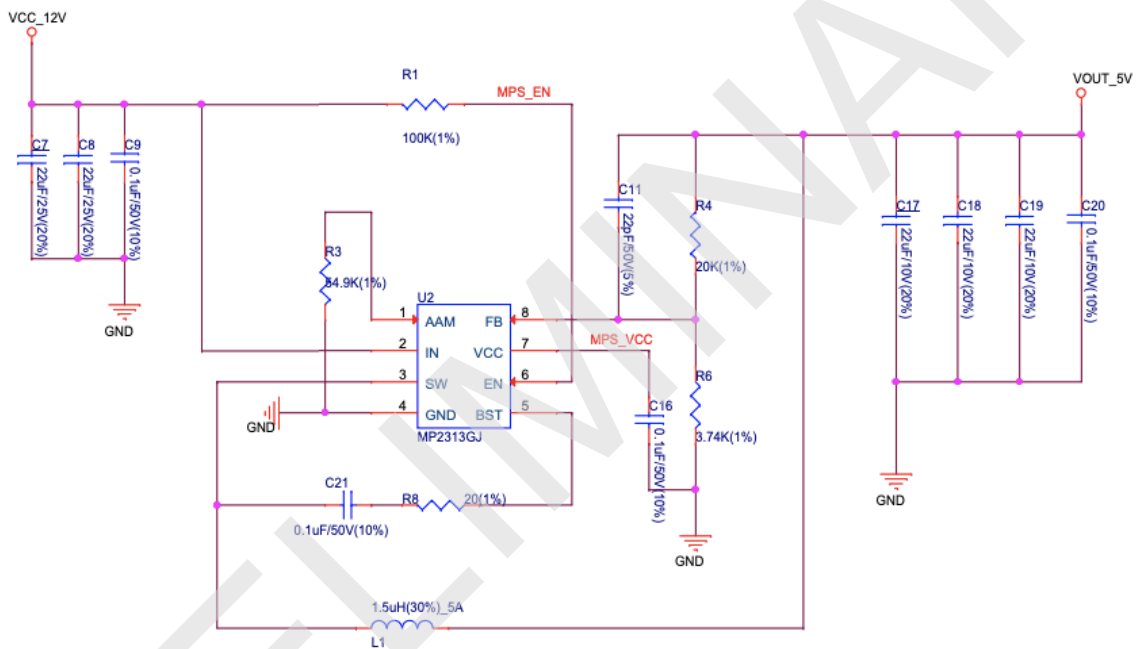

12 V to 5 V Buck Power Circuit

System 3.3 V Power



RGB LED Strip Connector (JP1)

Addressable LED Strip Connector (JP2)

Pinout of Extension Headers

There are several pin headers available to connect external components, check the state of particular signal bus, or debug operation of ESP32-C3. Note that some signals are shared. See Section [GPIO Allocation](#) for details.

UART Headers/JP12

No.	Signal Name	ESP32-C3 Pin
1	VCC_3V3	–
2	ESP_EN	EN
3	ESP_BOOT	GPIO9
4	ESP_UART_RXD	U0RXD
5	ESP_UART_TXD	U0TXD
6	GND	–

I2C Headers/JP8

No.	Signal Name	ESP32-C3 Pin
1	VCC_3V3	–
2	I2C_CLK	GPIO8
3	I2C_DATA	GPIO9
4	GND	–

Hardware Revision Details

No previous revisions.

Ordering

If you order a few samples, each board comes in an individual package.

For retail orders, please go to <https://www.espressif.com/en/company/contact/buy-a-sample>.

For wholesale orders, please go to <https://www.espressif.com/en/contact-us/sales-questions>.

Related Documents

- Datasheet
 - [ESP32-C3 Series Datasheet \(PDF\)](#)
 - [ESP32-C3-WROOM-02 & ESP32-C3-WROOM-02U Datasheet \(PDF\)](#)
- Schematic
 - [ESP32-C3-Lyra Schematic \(PDF\)](#)
- PCB Layout
 - [ESP32-C3-Lyra PCB Layout \(PDF\)](#)

For further design documentation for the board, please contact us at sales@espressif.com.

[Provide feedback about this document](#)

© Copyright 2016 - 2019, Espressif Systems (Shanghai) CO., LTD.

Built with [Sphinx](#) using a [theme](#) provided by [Read the Docs](#).

PRELIMINARY

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

[Espressif:](#)

[ESP32-C3-Lyra](#)