NTA5332

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Rev. 3.4 — 31 October 2025


Product data sheet



1 General description

NTAG 5 boost uses active load modulation (ALM) to deliver robust and reliable communication with NFC phones, bringing a new level of convenience to tiny devices.

NXP's NTAG 5 boost shrinks the NFC footprint while adding AES security, so designers can deliver ultracompact devices for use in IoT, consumer, and industrial applications. It offers an NFC Forum-compliant (customer development board is NFC Forum certified - Certification ID: 58625) contactless interface that delivers exceptional read range, giving tiny devices the ability to interact with the cloud and other NFC-enabled devices, including smartphones.

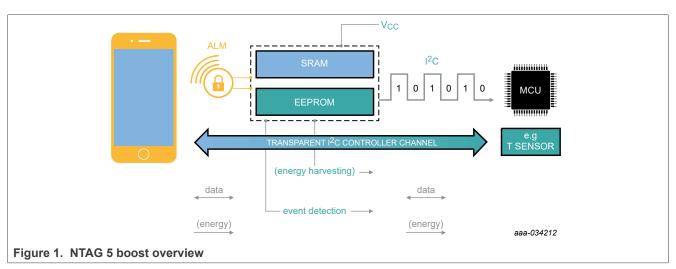

ALM allows construction of a compact yet highly reliable antenna, creating a significantly smaller footprint without compromising the read range. When operating in ALM mode, the read range is significantly longer than when operating in passive mode.

An energy-efficient design, equipped with a hard power-down mode and a standby current of typically less than 10 µA, ensures long battery life.

2048 bytes (16384 bits) of user memory can be divided into three areas, and each area can use a different protection level, varying from no protection to 32-/64-bit password protection or up to 128-bit AES-protected read/write access with mutual authentication. Different parties in the value chain can have their own dedicated memory areas for storing access data.

The NTAG 5 boost comes with pre-programmed proof-of-origin functionality to verify authenticity. The elliptic curve cryptography (ECC) based originality signature can be locked or reprogrammed by the customer.



NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

With NTAG 5 boost, the device can connect to the cloud with a single tap. The connection uses an NFC Forum-compliant data exchange mechanism involving 256 bytes (2048 bits) SRAM to ensure highly interoperable data transfers.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

2 Features and benefits

- Antenna size reduction by a factor of 40, same read range as in passive load modulation
- · Long battery life due to low standby current and hard power-down
- · Adjustable security levels up to mutual AES authentication
- Flexible split between three open and/or protected memory areas
- · Ensured authenticity of product through value chain
- Interoperable data exchange according to NFC Forum standards
- · Interoperable and high performance NFC interface
 - ISO/IEC 15693 [5] and NFC Forum Type 5 Tag [2] compliant
 - 64-bit Unique IDentifier
- · Reliable and robust memory
 - 2048 bytes (16384 bits) user EEPROM on top of configuration memory
 - 256 bytes (2048 bits) SRAM for frequently changing data and pass-through mode
 - 40 years data retention
 - Write endurance of 1 000 000 cycles
- · Configurable contact interface
 - I²C target [15] standard (100 kHz) and fast (400 kHz) mode
 - Transparent I²C controller channel (for example, read sensors without an MCU)
 - One configurable event detection pin
 - Two GPIOs as multiplexed I²C lines
 - Two Pulse Width Modulation (PWM) channels as multiplexed GPIOs and/or ED pin
 - 1.62 V to 5.5 V supply voltage
- · Scalable security for access and data protection
 - Disable NFC interface temporarily
 - Disable I²C interface temporarily
 - NFC PRIVACY mode
 - Read-only protection as defined in NFC Forum Type 5 Tag Specification
 - Full, read-only, or no memory access based on 32-bit password from both interfaces
 - Optional 64-bit password protection from NFC perspective
 - 128-bit AES authentication as defined in ISO/IEC 15693 [5]
 - ECC-based reprogrammable originality signature
- · Multiple fast data transfer mode
 - Pass-through mode with 256 byte SRAM buffer
 - Standardized data transfer mode (PHDC, TNEP)
- · Low-power budget application support
 - Energy harvesting with configurable output voltage up to 30 mW
 - Low-power standby current typically <10 μA
 - Hard power down current typically <0.25 μA
- · Very robust architecture
 - -40 °C to 105 °C for EEPROM read, SRAM and register access
 - -40 °C to 85 °C for EEPROM write access
- · Extensive product support package
 - Feature specific application notes
 - Development board including software and source code
 - Hands-on training

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

3 Applications

- Use cases
 - Simple dynamic secure pairing
 - Commissioning
 - Parameterization
 - Diagnosis
 - Firmware download
 - Low BoM and low-power data acquisition for sensors
 - Calibration
 - Trimming
 - Authenticity check and data protection
 - Late "in the box" configuration
 - LED driver configuration
 - NFC charging
- Applications
 - Lighting
 - Smart home
 - Hearable and Wearable
 - Consumer
 - Industrial
 - Gaming
 - Smart sensor
 - Smart metering

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

4 Ordering information

Table 1. Ordering information

Orderable part	Package					
number	Name Description		Version			
NTA53321G0FHKZ	XQFN16	NTAG 5 boost with I ² C controller/target interface, AES authentication, ALM and 2048 bytes user EEPROM plastic, extremely thin quad flat package; no leads; 16 terminals	SOT1161-2			
NTA53321G0FTTZ	TSSOP16	NTAG 5 boost with I ² C controller/target interface, AES authentication, ALM and 2048 bytes user EEPROM plastic, thin shrink small outline package; 16 leads; 0.65 mm pitch; 5 mm x 4.4 mm x 1.1 mm body	SOT403-1			

REMARK: Wafer specification addendum is available after exchange of a non-disclosure agreement (NDA)

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

5 Marking

Table 2. Marking codes

Type number	Marking code			
	Line A	Line B	Line C	Line D
NTA53321G0FHK	A21	DBSN ASID	DYWW	-
NTA53321G0FTT	NA53321	DBID ASID	ZnDYY	ww

Used abbreviations:

ASID: Assembly Sequence ID

D: RHF-2006 indicator
DBID: Diffusion Batch ID

DBSN: Diffusion Batch Sequence Number


n: Assembly Centre Code

WW: week
Y or YY: year

Z: Diffusion Centre Code

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

6 Block diagram

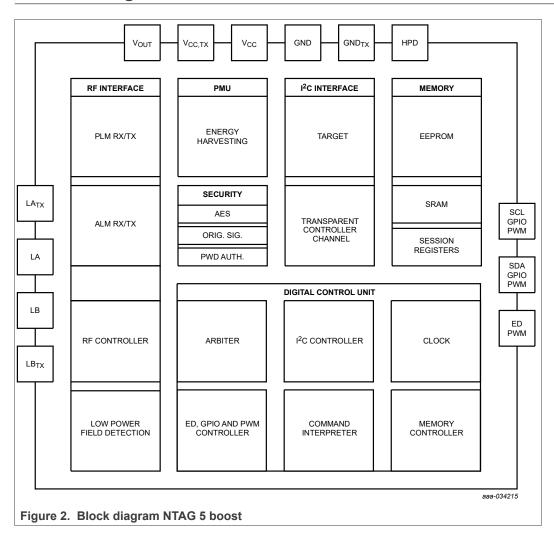

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

7 Pinning information

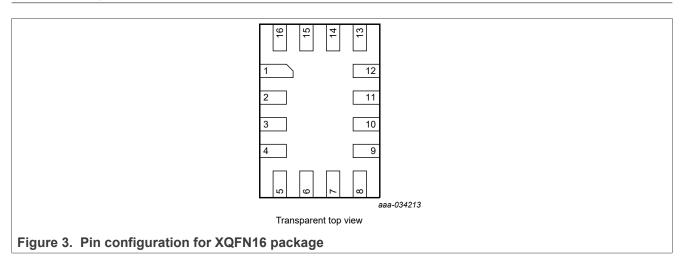


Table 3. Pin description for XQFN16

Pin	Symbol	Description	When unused
1	GND	Ground	connect to GND
2	GND _{TX}	Ground for ALM	connect to GND
3	V _{CC,TX}	External power supply for ALM	keep floating
4	N.C.	not connected	keep floating
5	N.C.	not connected	keep floating
6	SDA/GPIO1/PWM1	Multiplexed serial data I ² C, GPIO1 and PWM1	keep floating
7	SCL/GPIO0/PWM0	Multiplexed serial clock I ² C, GPIO0 and PWM0	keep floating
8	ED/PWM0	Multiplexed event detection and PWM0	keep floating
9	V _{CC}	External power supply	keep floating
10	HPD	Hard power down	keep floating
11	GND	Ground	connect to GND
12	V _{OUT}	Energy harvesting voltage output	keep floating
13	LB _{TX}	Antenna connection TX	keep floating
14	LB	Antenna connection	keep floating
15	LA	Antenna connection	keep floating
16	LA _{TX}	Antenna connection TX	keep floating

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

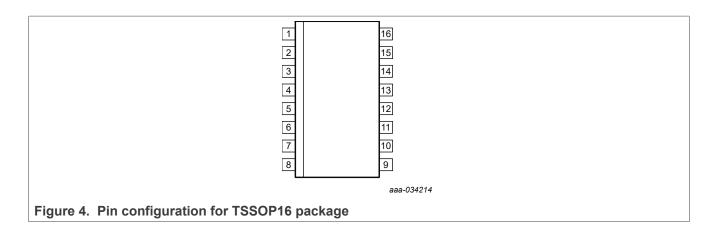


Table 4. Pin description for TSSOP16

Pin	Symbol	Description	When unused
1	LA	Antenna connection	keep floating
2	LA _{TX}	Antenna connection TX	keep floating
3	GND	Ground	connect to GND
4	GND_TX	Ground for ALM Ground	connect to GND
5	V _{CC,TX}	External power supply for ALM	keep floating
6	N.C.	not connected	keep floating
7	N.C.	not connected	keep floating
8	SDA/GPIO1/PWM1	Multiplexed serial data I ² C, GPIO1 and PWM1	keep floating
9	SCL/GPIO0/PWM0	Multiplexed serial clock I ² C, GPIO0 and PWM0	keep floating
10	ED/PWM0	Multiplexed event detection and PWM0	keep floating
11	V _{CC}	External power supply	keep floating
12	HPD	Hard power down	keep floating
13	GND	Ground	connect to GND
14	V _{OUT}	Energy harvesting voltage output	keep floating
15	LB _{TX}	Antenna connection TX	keep floating
16	LB	Antenna connection	keep floating

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

8 Functional description

8.1 Memory organization

8.1.1 General

The entire memory is divided into three different parts:

- · User memory
 - This part of the memory is intended to be used to store user data. It is organized in blocks of 4 bytes each (see Section 8.1.2).
 - According to NFC Forum Type 5 Tag Specification, EEPROM block 0 contains the Capability Container
 directly followed by the NDEF Message TLV. If NTAG 5 boost is used in a proprietary way, any user data
 may be stored in the user memory. Direct read/write access with the standard READ BLOCK and WRITE
 BLOCK commands (see Section 8.2.4.5) to this part of the memory is possible depending on the related
 security and write protection conditions.
 - 16-bit counter
 The last block of the EEPROM memory from NFC perspective contains the 16-bit counter and the counter protection flag (see <u>Section 8.1.2.1</u>). This counter is not accessible from I²C perspective.
- · Configuration area
 - Within this part of the memory all configuration options are stored (see <u>Section 8.1.3</u>). This memory area can only be accessed with the READ CONFIG (see <u>Section 8.2.4.2.1</u>) or WRITE CONFIG (see <u>Section 8.2.4.2.2</u>) commands from NFC perspective. From I²C perspective, normal READ and WRITE commands are used.
 - The configuration area contains required security-related information, such as access keys with related privileges, headers, customer ID (CID), originality signature and many more which will be loaded at poweron reset.
 - Access to configuration blocks may be blocked at all or password protected with related configuration bits.
 - All session registers are accessible in the configuration area as long as not locked by LOCK_SESSION_REG. These configuration items can be changed on the fly and have immediate effect, but get lost after power-on reset.
- SRAM
 - SRAM is accessible when NTAG 5 boost is V_{CC} supplied and SRAM_ENABLE is set to 1b.
 - Volatile SRAM can be used for fast and frequent data transfer (see <u>Section 8.1.5</u>). With WRITE SRAM (see <u>Section 8.2.4.6.2</u>) and READ SRAM (see <u>Section 8.2.4.6.1</u>), the content is written or read.
 - When the SRAM gets mapped to user memory (the start address is always block 0 from both interfaces), then standard READ BLOCK and WRITE BLOCK commands can be used. This mechanism is used, e.g., for PHDC or dynamic pairing.
 - From I²C perspective, SRAM is always located from address 2000h to 203Fh.

WARNING: The content of bytes and bits defined as RFU SHALL NOT be changed.

8.1.2 User memory

According to NFC Forum Type 5 Tag Specification, the user accessible EEPROM memory is divided into blocks. A block is the smallest access unit. For NTAG 5 boost, each block consists of 4 bytes (1 block = 32 bits). Bit 0 in each byte represents the least significant bit (lsb) and bit 7 the most significant bit (msb), respectively.

User EEPROM map looks totally the same from NFC and I²C perspective.

The last block contains the 16-bit counter (see Section 8.1.2.1). It is only accessible from NFC perspective.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

NTAG 5 boost offers 2048 bytes (16384 bits) of user memory.

Table 5. User memory organization

Block A	Address	Byte 0 (LSB)	LSB) Byte 1 I	Byte 2	Byte 3 (MSB)	Description
NFC	I ² C	byte v (LSb)		byte 2	byte 3 (WISB)	
00h	0000h		Capability	or user memory		
01h	0001h					
:	:		User M			
1FEh	01FEh					
1FFh	-	C0	C1	00h	PROT	Counter

User data at delivery contains an NFC Forum-compliant capability container and an NDEF message containing the URL www.nxp.com/nfc. First 6 blocks are initialized as illustrated in below table. The counter block is initialized with all 00h. Content of the rest of the user memory is undefined and contains random (rnd) data at delivery.

Table 6. Memory content at delivery

Block A	Address	Duto 0	Doda 4	D. d. O	Duto 2	
NFC	I ² C	Byte 0	Byte 1	Byte 2	Byte 3	
00h	0000h	E1h	40h	80h	09h	
01h	0001h	03h	10h	D1h	01h	
02h	0002h	0Ch	55h	01h	6Eh	
03h	0003h	78h	70h	2Eh	63h	
04h	0004h	6Fh	6Dh	2Fh	6Eh	
05h	0005h	66h	63h	FEh	00h	
06h	0006h	rnd	rnd	rnd	rnd	
		rnd	rnd	rnd	rnd	
1FFh	-	00h	00h	00h	00h	

8.1.2.1 16-bit counter

Last Block of the user memory contains the 16-bit counter. The block can be accessed with the standard read and write commands but special data format is required.

The standard protection conditions for the user memory are not valid for the counter block.

Counter block can only be accessed from NFC perspective.

The 16-bit counter can be

- preset to initial start value protected with the write password or by mutual authentication with a key with the Write privilege
- read
- increased by one, optionally protected with the read password or by mutual authentication with a key with the Read privilege

The counter can be read with an (EXTENDED) READ SINGLE BLOCK to the last block or (EXTENDED) READ MULTIPLE BLOCK command including the last block. The 4 byte data of the counter block provide the following information in Table 7.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 7. COUNTER BLOCK data structure

Byte	Name	Value	Description			
0	C0 (LSB)	00h - FFh	Counter value			
1	C1 (MSB)	00h - FFh	Courtier value			
2	-	00h	RFU			
		00h	Incrementing of the counter value is not protected			
3 PROT		01h	Incrementing of the counter value is protected with the read password or by mutual authentication depending on the used security level			

The counter can be preset to a start value with an (EXTENDED) WRITE SINGLE BLOCK command to counter block. The counter can only be preset to a start value after a SET PASSWORD command with the write password or a valid mutual authentication with a key with the Write privilege, depending on the used security level.

The PROT byte (data byte 3) value defines if the protection to increment the counter is enabled or disabled. If the protection is enabled, the read password or a valid mutual authentication with a key with the Read privilege is required to increment the counter value, again depending on the used security level.

The data for the (EXTENDED) WRITE SINGLE BLOCK command to preset the counter is defined in Table 8.

Remark: A Preset counter value of 0x0001 is not possible, a (EXTENDED) WRITE SINGLE BLOCK command with that value will only increment the counter.

Table 8. Preset counter data structure

Byte	Name	Value	Description			
0	C0	00h, 02h - FFh (LSB)	Counter value			
1	C1	00h - FFh (MSB)	Counter value			
2	-	00h	RFU			
3	PROT	00h	Disable the protection to increment the counter			
		01h	Enable the protection to increment the counter with read password or mutual authentication			

To increment the counter by one with a (EXTENDED) WRITE SINGLE BLOCK command to counter block. If the protection to increment the counter is enabled, a SET PASSWORD command with the read password or a valid mutual authentication with a key with the Read privilege is required before.

The data for the (EXTENDED) WRITE SINGLE BLOCK command to increment the counter is defined in Table 9.

Remark: The counter can only be incremented with the C0 and C1 values defined in <u>Table 9</u>. Other values than that preset the counter if a SET PASSWORD command with the write password or a valid mutual authentication with a key with the Write privilege has been executed before or leads to an error message.

Table 9. Increment counter data structure

Byte	Name	Value	Description
0	C0	01h (LSB)	Value to increment the counter
1	C1	00h (MSB)	value to increment the counter
2	-	00h	RFU

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 9. Increment counter data structure...continued

Byte	Name	Value	Description
3	-	00h	RFU

8.1.3 Configuration memory

The configuration memory contains the security and configuration information. Access to this memory area is only possible with WRITE CONFIG (see <u>Section 8.2.4.2.2</u>) and READ CONFIG (see <u>Section 8.2.4.2.1</u>) commands depending on the initialization status.

Writing to blocks with only RFU bytes is not possible and results in error code 0Fh from NFC perspective and NAK from I²C perspective. Reading complete RFU blocks results in receiving all bytes 00h.

Changing RFU bytes and bits is not allowed and may result in unintended behavior.

From I²C perspective, the configuration can be accessed using READ MEMORY and WRITE MEMORY command. Block address of configuration area from I²C perspective starts from 1000h.

In <u>Table 10</u> all NFC_KHs, NFC_KPs and AES_KEYs (all marked with an asterisk) are only available in AES mode. NFC_KHs and NFC_KPs are not available at all and set to RFU in plain password mode. In the area of KEY_0 and KEY_1, the plain passwords are stored (see <u>Section 8.1.3.9</u>). The rest of the KEY area is RFU in plain password mode.

Different features can be configured with CONFIG bits. Similar to all other configuration options, the effect does not take place in the current session. The effect takes place after POR. If immediate change is expected, related session register bytes or bits need to be used (see <u>Section 8.1.4</u>).

To which section each block belongs is defined in first column (Sec.). Sections might be locked by setting related bit to 1b (see Section 8.1.3.33).

Table 10. Configuration Memory organization

Sec.	Block A	Address	Pyrto 0	Duto 4 Duto 2 Duto 2			Description	
Sec.	NFC	I ² C	Byte 0	Byte 1	Byte 2	Byte 3	Description	
0	00h	1000h						
0				ORIGINALITY_SIGNATURE				
0	07h	1007h						
0	08h	1008h	СН	CH RFU			Configuration Header (see Section 8.1.3.2)	
0	09h	1009h	CID RFU			⁼U	Customer ID (see Section 8.1.3.3)	
N/A	0Ah	100Ah		RFU				
N/A	0Bh	100Bh		RFU				
0	0Ch	100Ch	RFU	RFU NFC_GCH RFU		-U	NFC Global Crypto Header (see Section 8.1.3.4)	
0	0Dh	100Dh	RFU	NFC_CCH	RF	-U	NFC Crypto Configuration Header (see Section 8.1.3.5)	

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 10. Configuration Memory organization...continued

	1	Address	mory organization		Durto 0	Durán 0	Description
Sec.	NFC	I ² C	Byte 0	Byte 1	Byte 2	Byte 3	Description
0	0Eh	100Eh	NFC_AUT	NFC_AUTH_LIMIT RFU			NFC Authentication Limit Counter (see Section 8.1.3.6)
N/A	0Fh	100Fh		RF	J		
0	10h	1010h	RFU	NFC_KH0*	RF	Ū	NFC Key Header 0 (see Section 8.1.3.7)
0	11h	1011h	NFC_KP0*		RFU		NFC Key Privileges 0 (see Section 8.1.3.8)
0	12h	1012h	RFU	NFC_KH1*	RF	⁼U	NFC Key Header 1 (see Section 8.1.3.7)
0	13h	1013h	NFC_KP1*		RFU		NFC Key Privileges 1 (see Section 8.1.3.8)
0	14h	1014h	RFU	NFC_KH2*	NFC_KH2* RFU		NFC Key Header 2 (see Section 8.1.3.7)
0	15h	1015h	NFC_KP2*	RFU			NFC Key Privileges 2 (see Section 8.1.3.8)
0	16h	1016h	RFU	NFC_KH3* RFU		NFC Key Header 3 (see Section 8.1.3.7)	
0	17h	1017h	NFC_KP3*	RFU			NFC Key Privileges 3 (see Section 8.1.3.8)
N/A	18h	1018h					
N/A				RF	J		
N/A	1Fh	101Fh					
0	20h	1020h					1501 0
0	21h	1021h		14574	0.4		AES key 0 or NFC PWD 0 to
0	22h	1022h		KEY_	_0^		NFC_PWD_3 (see
0	23h	1023h					<u>Section 8.1.3.9</u>)
0	24h	1024h					
0	25h	1025h			4.4		AES key 1 or NFC_PWD_4 to
0	26h	1026h		KEY_1*			
0	27h	1027h					<u>Section 8.1.3.9</u>)
0	28h	1028h					
0	29h	1029h	AFS kev			AES key 2 or RFU	
0	2Ah	102Ah		KEY_	_2*		(see <u>Section 8.1.3.9</u>)
0	2Bh	102Bh					

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 10. Configuration Memory organization...continued

Table 1		Address	mory organizationcontinued				
Sec.	NFC	I ² C	Byte 0	Byte 1	Byte 2	Byte 3	Description
0	2Ch	102Ch					
0	2Dh	102Dh	KEY 3*				AES key 3 or RFU
0	2Eh	102Eh	KEY_3*				(see <u>Section 8.1.3.9</u>)
0	2Fh	102Fh					
1	30h	1030h	I2C_KH		RFU		I ² C Key Header (see Section 8.1.3.10)
1	31h	1031h	I2C_PP	I2C_PPC	RF	-U	I ² C Protection Pointer and Config (see Section 8.1.3.11)
1	32h	1032h	I2C_AUTH	H_LIMIT	RF	-U	Authentication Limit Counter (see Section 8.1.3.12)
1	33h	1033h		I2C_PV	VD_0		I ² C read password (see <u>Section 8.1.3.9</u>)
1	34h	1034h		I2C_PV	VD_1		I ² C write password (see <u>Section 8.1.3.9</u>)
1	35h	1035h	I2C_PWD_2			Restricted AREA_1 I ² C read password (see <u>Section 8.1.3.9</u>)	
1	36h	1036h	I2C_PWD_3			Restricted AREA_1 I ² C write password (see <u>Section 8.1.3.9</u>)	
2	37h	1037h		CON	FIG		Feature Configuration (see Section 8.1.3.13)
3	38h	1038h	SYNC_DATA	A_BLOCK	RF	FU	Block may be used for data transfer synchronization (see Section 8.1.3.14)
3	39h	1039h	PWM_GPIO_CONFIG RFU		PWM and GPIO Configuration (see Section 8.1.3.15)		
3	3Ah	103Ah	PWM0_ON_OFF			PWM1 Configuration (see Section 8.1.3.16)	
3	3Bh	103Bh	PWM1_ON_OFF			PWM1 Configuration (see Section 8.1.3.16)	
3	3Ch	103Ch	V	/DT_CONFIG		SRAM_ COPY_ BYTES	Watch Dog Timer Configuration (see Section 8.1.3.17) and SRAM Copy Bytes (see Section 8.1.5)

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 10. Configuration Memory organization...continued

_		Address	illory organization			_		
Sec.	NFC	I ² C	Byte 0	Byte 1	Byte 2	Byte 3	Description	
3	3Dh	103Dh	EH_CONF	RFU	ED_CONF	RFU	Energy Harvesting (see Section 8.1.3.18) and Event Detection Pin (see Section 8.1.3.19) Configuration	
3	3Eh	103Eh	I2C_TARGET	Γ_CONFIG	I2C_CONT CON		I ² C Configuration (see Section 8.1.3.20 and Section 8.1.3.21)	
3	3Fh	103Fh	SEC_CONF	SRAM_CONF_ PROT	· PP_AF	REA_1	Device Security Configuration (see Section 8.1.3.22) SRAM and Configuration Protection (see Section 8.1.3.23) AREA_1 Protection Pointer (see Section 8.1.3.24)	
3	40h	1040h		ALM_CONF				
3	41h	1041h						
3				ALM_LOOK	JP_TABLE		ALM lookup table (see Section 8.1.3.25)	
3	44h	1044h					<u>GGGHGH G. 1.0.20</u>)	
7	45h	1045						
7				SRAM_DE	EFAULT		Default SRAM content (see Section 8.1.5)	
7	54h	1054					(300 <u>3001011 3.1.0</u>)	
4	55h	1055h	AFI		RFU		Application Family Identifier (see Section 8.2.4.9.1)	
4	56h	1056h	DSFID	RFU			DSFID (see Section 8.1.3.27)	
4	57h	1057h	EAS_	EAS_ID RFU			EAS ID (see Section 8.1.3.28)	
4	58h	1058h	NFC_PP_ AREA_0H	NFC_PPC RFU		NFC Protection Pointer (see Section 8.1.3.29) and NFC Protection Pointer Conditions (see Section 8.1.3.30)		
N/A	59h	1059h		RF	J			

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 10. Configuration Memory organization...continued

	Sec. Block Address		mory organization		Duto 0	Dista 2	Description
Sec.	NFC	I ² C	Byte 0	Byte 1	Byte 1 Byte 2 Byte 3		Description
N/A							
N/A	69h	1069h					
5	6Ah	106Ah					NFC Lock block
5			NFC_LOCK	_BLOCK	RI	=U	configuration (see
5	89h	1089h					<u>Section 8.6.1</u>)
6	8Ah	108Ah					I ² C Lock block
6			I2C_LOCK	_BLOCK	RI	=U	configuration (see Section 8.1.3.32)
6	91h	1091h					<u>Section 6.1.3.32)</u>
8	92h	1092h	NFC_		DELL		NFC section lock
8	93h	1093h	SECTION_ LOCK	RFU			bytes (see <u>Table 87</u>)
8	94h	1094h	I2C_		DELL		I ² C section lock bytes
8	95h	1095h	LOCK	SECTION_ RFU LOCK			(see <u>Table 89</u>)
N/A	96h	1096h		RFU from NFC I2C_PWD_			I ² C read password authenticate(see Section 8.1.3.9)
N/A	97h	1097h		RFU from NFC			I ² C write password authenticate (see Section 8.1.3.9)
N/A	98h	1098h		RFU from NFC perspective I2C_PWD_2_AUTH			Restricted AREA_1 I ² C read password authenticate (see Section 8.1.3.9)
N/A	99h	1099h	RFU from NFC perspective I2C_PWD_3_AUTH			Restricted AREA_1 I ² C write password authenticate (see Section 8.1.3.9)	
N/A	9Ah	109Ah					
N/A				RF	U		
N/A	9Fh	109Fh					

8.1.3.1 Originality Signature

The Originality signature (see <u>Section 8.8</u>) is stored in first 8 blocks (block 00h to block 07h) of configuration memory and may be verified by the NFC device using the corresponding ECC public key. As the NXP originality signature is on default not locked, it may be re-programmed by the customer. If the originality check is not needed, it may even be used as additional 32 byte user EEPROM.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 11. 32 Byte Originality Signature

Block Address		Purto 0	Duto 4	Durán 2	Durán 2
NFC	I ² C	Byte 0	Byte 1	Byte 2	Byte 3
00h	1000h	SIG0 (LSB)	SIG1	SIG2	SIG3
01h	1001h	SIG4	SIG5	SIG6	SIG7
02h	1002h	SIG8	SIG9	SIG10	SIG11
03h	1003h	SIG12	SIG13	SIG14	SIG15
04h	1004h	SIG16	SIG17	SIG18	SIG19
05h	1005h	SIG20	SIG21	SIG22	SIG23
06h	1006h	SIG24	SIG25	SIG26	SIG27
07h	1007h	SIG28	SIG29	SIG30	SIG31 (MSB)

8.1.3.2 Configuration Header

The Configuration Header (CH) byte defines the access conditions of both, Customer ID and Originality Signature.

Table 12. Configuration Header (CH) location

Block Address		Byto 0	Byte 1	Byte 2	Byte 3
NFC	I ² C	Byte 0	Dyte i	Dyte 2	Dyte 3
08h	1008h	СН	RFU		

Configuration Header byte can be read with READ CONFIG command (see <u>Section 8.2.4.2.1</u>) and written with WRITE CONFIG command (see <u>Section 8.2.4.2.2</u>). Once locked (set to E7h), CH byte cannot be updated anymore and Originality Signature and Customer ID gets locked permanently from NFC perspective.

From I²C perspective this block can be read and written if not locked by the I²C section lock. Once locked, CH byte cannot be updated anymore and Originality Signature and CID gets locked permanently from I²C perspective.

Table 13. Configuration Header Codes

Value	Mode	Write Access
81h	Writeable (default)	Yes
E7h	Locked	No
All others	Invalid	No

8.1.3.3 Customer ID (CID)

The Customer ID at delivery is C000h and can be reprogrammed and locked. It might be used to identify the product.

The two most significant bits (b7 and b6 of CID (MSB)) are always equal to 11b. Only CID[13-0] may be written by customer. Note, that other values of the two most significant bits are RFU.

When the CID is written with WRITE CONFIG command, the 2 most significant bits are always set to 11b. The input CID in WRITE CONFIG command (see Section 8.2.4.2.2) is bit wise ORed with C000h.

As long as not locked by the I²C section lock, CID maybe updated from I²C perspective with the same logic as from NFC perspective.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Example: When setting CID to 10AAh, resulting customer-specific CID is D0AAh.

Table 14. Customer ID (CID) location

Block Address		Byte 0	Byte 1	Byte 2	Byte 3
NFC	I ² C	byte 0	byte i	Byte 2	Byte 3
09h	1009h	CID (LSB)	CID (MSB)	RFU	

The CID can be permanently locked by setting the Configuration Header to Locked state (see <u>Table 13</u>) using WRITE CONFIG command. Note, that Originality Signature gets locked, too.

8.1.3.4 NFC Global Crypto Header

The NFC Global Crypto Header (NFC_GCH) defines the status and access of the

- NFC passwords in plain password mode and all other NFC features listed below
- NFC Keys
- NFC Protection Pointer
- NFC Protection Pointer Conditions
- NFC Key Headers
- NFC Key Privileges
- NFC Crypto Configuration Header
- · EAS and AFI protection

As long as not locked by the RF section lock, the NFC Global Crypto Header can be written with WRITE CONFIG command (see <u>Section 8.2.4.2.2</u>). The programming of NFC Global Crypto Header can be done in only one direction from lower state to higher independently from the interface and it is irreversible.

Same rules apply from I²C perspective, as long as not locked by the I²C section lock.

Once locked (as per table below), GCH cannot be updated anymore.

Table 15. NFC Global Crypto Header (GCH) location

Block Address		Byte 0	Byte 1	Byte 2	Puto 3
NFC	I ² C	Byte 0	byte i	Byte 2	Byte 3
0Ch	100Ch	RFU	NFC_GCH	RFU	

Table 16. Global Crypto Header Configuration in plain password mode

Value	Status	Description
81h	Writable (default)	The NFC passwords can be read and written with the READ CONFIG and WRITE CONFIG commands.
E7h	Locked	The NFC passwords cannot be read and written with the READ CONFIG and WRITE CONFIG commands.
all others	Invalid	

Note: LOCK PASSWORD command is needed to lock NFC passwords permanently (see Section 8.2.4.3.4).

Table 17. Global Crypto Header Configuration Value in AES mode

Value	Status	Description
81h	Deactivated (default)	The settings of the NFC Protection Pointer and the NFC Protection Pointer Condition are not activated. Read and write access to the

NTA5332

All information provided in this document is subject to legal disclaimers.

© 2025 NXP B.V. All rights reserved.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 17. Global Crypto Header Configuration Value in AES mode...continued

Value	Status	Description
		user memory is possible independent of the settings without a previous mutual authentication.
		The Protection Pointer Address and the NFC Protection Pointer Condition byte can be modified with a PROTECT PAGE command without a previous mutual authentication except of the LOCK PAGE PROTECTION CONDITION command has been successfully executed before.
		The Keys and Key Privileges can be read and written with the READ CONFIG and WRITE CONFIG commands according to the status of the related Key Header.
		The settings for the EAS/AFI protection are not activated. Access with the related commands to EAS and AFI is possible without a previous mutual authentication.
87h	Deactivated & privileges locked	The status is the same as for 81h with the exception that the Key Privileges are locked and cannot longer be modified.
		The settings for the EAS/AFI protection are not activated. Access with the related commands to EAS and AFI is possible without a previous mutual authentication.
C1h	Access right activated	The settings of the Protection Pointer address and the Protection Pointer Condition are enabled. Read and write access protection is enabled according to the initialized values.
		The Keys and Key Privileges can be read and written with the READ CONFIG and WRITE CONFIG commands according to the status of the related Key Header.
		The settings for the EAS/AFI protection are enabled. Access with the related commands to EAS and AFI is only possible according to the EAS/AFI protection conditions.
C7h	Access right activated &privileges locked	The status is the same as for C1h with the exception that the Key Privileges are locked and cannot longer be modified.
		The settings for the EAS/AFI protection are enabled. Access with the related commands to EAS and AFI is only possible according to the EAS/AFI protection conditions.
E7h	Activated	The settings of the NFC Protection Pointer and the NFC Protection Pointer Condition are enabled. Read and write access protection is enabled according to the initialized values.
		All Key Header Privileges and Keys are locked cannot be modified The settings for the EAS/AFI protection are enabled. Access with the related commands to EAS and AFI is only possible according to the
		EAS/AFI protection conditions.
all others	Invalid	

8.1.3.5 NFC Crypto Configuration Header

The value of the NFC Crypto Configuration Header (NFC_CCH) locks the NFC Authentication Limit to the defined value and can only be changed after authentication. NFC_CCH can be written by using the WRITE CONFIGURATION command (see <u>Section 8.2.4.2.2</u>).

From I²C perspective, NFC_CCH can be accessed with READ and WRITE command, as long as not locked by the I²C section lock.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 18. Crypto Configuration Header (CCH) location

Block A	Address	Puto 0	Byte 1	Puto 2	Byte 3
NFC	I ² C	Byte 0		Byte 2	
0Dh	100Dh	RFU	NFC_CCH	RFU	

Table 19. Crypto Configuration Header Values

and 101 01, pto 00111.9anation 110ano						
Value	Mode	Write Access				
81h	Unlocked (default)	Authentication limit can be modified.				
E7h	Locked	Authentication limit is locked and can only be modified after mutual authentication with a key with activated crypto configuration privilege or authenticating with the write password. In 64-bit password mode both, the read and write password are required, depending on the used security level.				
All others	Invalid					

8.1.3.6 NFC Authentication Limit Counter

The NFC Authentication Limit Counter is a feature to limit the number of authentications. When enabled, the counter is incremented for every CHALLENGE (see <u>Section 8.2.4.4.5</u>) or AUTHENTICATION (see <u>Section 8.6.4</u>) command. Both, positive and negative attempts get counted. On default. the counter is not enabled (NFC AUTH LIMIT = 0000h).

In plain password mode, NTAG 5 boost implements the NFC Authentication Limit in counting negative Password Authentication attempts with the SET PASSWORD command, except for the Privacy password. The counter will be reset automatically to zero after a successful authentication.

Table 20. NFC Authentication Limit Counter (NFC_AUTH_LIMIT) location

Block Address		Byte 0	Byte 1	Byte 2	Byte 3
NFC	I ² C	byte 0	byte i	Byte 2	Byte 3
0Eh	100Eh	NFC_AUTH_ LIMIT (LSB)	NFC_AUTH_ LIMIT (MSB)	RFU	

Byte 0 of Block 0Eh is LSB and Byte 1 is MSB of the NFC Authentication Limit counter value.

The Authentication limit is enabled with the most significant bit of Byte 1 is set to 1b. The remaining 15 bits of NFC AUTH LIMIT are defining the preset value.

The start value for the Authentication Limit can be preset with a WRITE CONFIG command (see Section 8.2.4.2.2) if

- the Crypto Config Header is not set to "Locked" and the NFC Global Crypto Header is not set to "Activated" or
- a valid mutual authentication with a key with the Crypto Config privilege set has been executed before.

In plain password mode, the Counter can be written with a WRITE CONFIG command (see Section 8.2.4.2.2) if

- the Crypto Config Header is not set to "Locked" and NFC Global Crypto Header is not set to "Locked", or
- a valid SET_PASSWORD command with the write password has been executed before. In 64-bit password mode, both read and write passwords are required.

Examples:

• 8000h enables and presets the authentication limit to 0, which means the maximum number of authentications (32767) before a preset is required again

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

• F000h enables and presets the authentication limit to 28672

If the NFC Authentication Limit is enabled, the authentication limit value is increased by one at each CHALLENGE or AUTHENTICATE command (first step only). As soon as the value of the Authentication limit reaches

- FF00h: only mutual authentication will be accepted to reset the authentication limit
- FFFFh: no further authentication is possible any longer. This status is irreversible.

Remark: The absolute maximum authentication limit value is FFFEh before a preset is required, otherwise the authentication is irreversibly locked (no longer available).

From I²C perspective, this block can be read and written if not locked by the I²C section lock.

8.1.3.7 NFC Key Header

The NFC Key Header bytes (NFC_KH0, NFC_KH1, NFC_KH2, NFC_KH3) define the status for the related NFC key.

The programming of NFC Key Header can be done in only one direction from lower state to higher and it is irreversible from NFC perspective.

Same rules apply from I²C perspective, as long as not locked by the I²C section lock. Once locked (as per table below) cannot be updated anymore from I2C interface.

Table below shows the location of the NFC Key Headers in the configuration memory. When using password authentication, these bytes and blocks are all RFU.

Table 21. NFC Key Header (KHx) location

Block Address		Byte 0	Byte 1	Byte 2	Byte 3	
NFC	I ² C	byte 0	byte i	Dyte 2	Byte 3	
10h	1010h	RFU	NFC_KH0*	RFU		
12h	1012h	RFU	NFC_KH1*	RFU		
14h	1014h	RFU	NFC_KH2*	RFU		
16h	1016h	RFU	NFC_KH3*	RFU		

If the Global Crypto Header is in the "Activate and locked" state, all crypto settings (Key Headers, Keys and Privileges) are locked and cannot longer be modified.

Table 22. NFC Key Header Values

Value	Status	Description
81h	Not active (default)	The related Key and the Key Privileges can be read and written with the READ CONFIG and WRITE CONFIG commands. The related key is not active and cannot be used. The Key Privileges of the related Key are not valid.
E7h	Active and locked	The related Key and its privileges are active and locked and cannot be modified any longer. The related Key cannot be read or written with the READ CONFIG and WRITE CONFIG commands. The related Key Header and Key Privileges can only be read with the READ CONFIG command.
FFh	Disabled	Related Key is disabled and cannot be used

Remark: It is recommended to set the key header for not required keys to disabled (FFh).

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

8.1.3.8 NFC Key Privileges

The NFC Key Privileges bytes define the privileges for the related key. Writing with WRITE CONFIG command to the related block depends on the status of the related NFC Key Header (see <u>Table 22</u>)

From I²C perspective, this block can be read and written if not locked by the I²C section lock.

Table shows the location of the Key Privileges in the configuration memory.

Table 23. NFC Key Privileges (KPx) location

Block Address		Byte 0	Byte 1	Byte 2	Byte 3
NFC	I ² C	Byte 0 Byte 1 By		Byte 2	Byte 3
11h	1011h	NFC_KP0	RFU		
13h	1013h	NFC_KP1	RFU		
15h	1015h	NFC_KP2	RFU		
17h	1017h	NFC_KP3	RFU		

<u>Table 24</u> shows the definition of the Key Privileges bytes KPx. The bits define the privileges for the related key used with mutual authentication. If the related bit is set to 1b, the access for the dependent area/feature is granted after mutual authentication with the related key.

Table 24. Definition of NFC Key Privileges bytes KPx

Bit	Privilege	Description			
7	Restricted AREA_1 Write	Write access to restricted user memory AREA_1			
6	Restricted AREA_1 Read	Read access to restricted user memory AREA_1			
5	Crypto Config	Preset of Authentication Limit			
4	EAS/AFI	Access for write alike command for EAS and AFI as following: PROTECT EAS/AFI SET EAS RESET EAS LOCK EAS WRITE EAS ID WRITE AFI LOCK AFI			
3	Destroy	Access to the DESTROY functionality			
2	Privacy	Enable/disable of the PRIVACY mode			
1	Write	Write access to protected user memory area			
0	Read	Read access to protected user memory area			

8.1.3.9 Keys and Passwords

The keys or passwords are stored in the configuration memory. The usage of the individual keys depends on the related Key Privileges.

The state of the keys (including read and write access with the READ CONFIG and WRITE CONFIG commands) depends on the status of the related Key Header and the status of the Global Crypto Header.

From I²C perspective, these blocks can be written if not locked by the I²C section lock.

Table below shows the location of the 128-bit AES Table 25 keys in the configuration memory.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 25. Key location

Block Address		Purto 0	Puto 4	Puto 2	Duto 2
NFC	I ² C	Byte 0	Byte 1	Byte 2	Byte 3
20h	1020h	KEY0_0 (LSB)	KEY0_1	KEY0_2	KEY0_3
21h	1021h	KEY0_4	KEY0_5	KEY0_6	KEY0_7
22h	1022h	KEY0_8	KEY0_9	KEY0_10	KEY0_11
23h	1023h	KEY0_12	KEY0_13	KEY0_14	KEY0_15 (MSB)
24h	1024h	KEY1_0 (LSB)	KEY1_1	KEY1_2	KEY1_3
25h	1025h	KEY1_4	KEY1_5	KEY1_6	KEY1_7
26h	1026h	KEY1_8	KEY1_9	KEY1_10	KEY1_11
27h	1027h	KEY1_12	KEY1_13	KEY1_14	KEY1_15 (MSB)
28h	1028h	KEY2_0 (LSB)	KEY2_1	KEY2_2	KEY2_3
29h	1029h	KEY2_4	KEY2_5	KEY2_6	KEY2_7
2Ah	102Ah	KEY2_8	KEY2_9	KEY2_10	KEY2_11
2Bh	102Bh	KEY2_12	KEY2_13	KEY2_14	KEY2_15 (MSB)
2Ch	102Ch	KEY3_0 (LSB)	KEY3_1	KEY3_2	KEY3_3
2Dh	102Dh	KEY3_4	KEY3_5	KEY3_6	KEY3_7
2Eh	102Eh	KEY3_8	KEY3_9	KEY3_10	KEY3_11
2Fh	102Fh	KEY3_12	KEY3_13	KEY3_14	KEY3_15 (MSB)

If using NFC plain password mode, block addresses 20h to 26h (from NFC perspective) and 1020h to 1026h (from I²C perspective) are used to store seven 32-bit passwords as shown in <u>Table 26</u>. Blocks from 27h up to and including 2Fh are not used in plain password mode and are set to RFU.

Default password bytes of Privacy and Destroy password are all 0Fh, Read, Write and EAS/AFI password bytes have a default value of all 00h.

The usage of passwords, read and write access to passwords depends upon NFC Global Crypto Header settings.

Table 26. Plain Password location

Block A	Address	Byto 0	Byto 1	Byto 2	Byto 3	Description
NFC	I ² C	Byte 0	Byte 1	Byte 2	Byte 3	Description
20h	1020h	NFC_PWD0_ 0 (LSB)	NFC_PWD0_1	NFC_PWD0_2	NFC_PWD0_ 3 (MSB)	Read Password
21h	1021h	NFC_PWD1_ 0 (LSB)	NFC_PWD1_1	NFC_PWD1_2	NFC_PWD1_ 3 (MSB)	Write Password
22h	1022h	NFC_PWD2_ 0 (LSB)	NFC_PWD2_1	NFC_PWD2_2	NFC_PWD2_ 3 (MSB)	Privacy Password
23h	1023h	NFC_PWD3_ 0 (LSB)	NFC_PWD3_1	NFC_PWD3_2	NFC_PWD3_ 3 (MSB)	Destroy Password
24h	1024h	NFC_PWD4_ 0 (LSB)	NFC_PWD4_1	NFC_PWD4_2	NFC_PWD4_ 3 (MSB)	EAS/AFI Password
25h	1025h	NFC_PWD5_ 0 (LSB)	NFC_PWD5_1	NFC_PWD5_2	NFC_PWD5_ 3 (MSB)	AREA_1 Read Password

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 26. Plain Password location...continued

Block Address		Buto 0	Buto 4	Buto 2	Buto 2	Description	
NFC	I ² C	Byte 0	Byte 1 Byte 2		Byte 3	Description	
26h	1026h	NFC_PWD6_ 0 (LSB)	NFC_PWD6_1	NFC_PWD6_2	NFC_PWD6_ 3 (MSB)	AREA_1 Write Password	

For I²C password authentication, there are four 32-bit I²C passwords (default value of all password bytes is 00h) which can be read or written by the host depending on the I²C Key Header configuration.

Table 27. I²C Password location

Block A	lock Address		Purto 4	Butto 2	Purto 2	Description
NFC	I ² C	Byte 0	Byte 0 Byte 1 Byte 2		Byte 3	
33h	1033h	12C_PWD0_ 0 (LSB)	I2C_PWD0_1	I2C_PWD0_2	12C_PWD0_ 3 (MSB)	Read Password
34h	1034h	12C_PWD1_ 0 (LSB)	I2C_PWD1_1	I2C_PWD1_2	I2C_PWD1_ 3 (MSB)	Write Password
35h	1035h	I2C_ PWD2_ 0 (LSB)	I2C_PWD2_1	I2C_PWD2_2	I2C_PWD2_ 3 (MSB)	AREA_1 Read Password
36h	1036h	I2C_PWD3_ 0 (LSB)	I2C_PWD3_1	I2C_PWD3_2	I2C_PWD3_ 3 (MSB)	AREA_1 Write Password

Password authentication from I^2C perspective is done by using I^2C write command with the password to the I^2C Key authenticate location. This will make the I^2C logic to enter the Authenticated state if the key matches with the respective key.

Table 28. I²C Key Authenticate Password location

Block Address	Byte 0	Byte 1	Byte 2	Byte 3	
1096h	I2C_PWD0_ 0_AUTH (LSB)	I2C_PWD0_ 1_AUTH	I2C_PWD0_ 2_AUTH	I2C_PWD0_3_ AUTH (MSB)	Read Authenticate
1097h	I2C_PWD1_ 0_AUTH (LSB)	I2C_PWD1_ 1_AUTH	I2C_PWD1_ 2_AUTH	I2C_PWD1_3_ AUTH (MSB)	Write Authenticate
1098h	I2C_PWD2_ 0_AUTH (LSB)	I2C_PWD2_ 1_AUTH	I2C_PWD2_ 2_AUTH	I2C_PWD2_3_ AUTH (MSB)	AREA_1 Read Authenticate
1099h	I2C_PWD3_ 0_AUTH (LSB)	I2C_PWD3_ 1_AUTH	I2C_PWD3_ 2_AUTH	I2C_PWD3_3_ AUTH (MSB)	AREA_1Write Authenticate

8.1.3.10 I²C Key Header

The Host interface can access the user memory with I²C READ and I²C WRITE commands. The memory access may be protected by plain password depending on the access conditions.

The programming of I²C Key Header can be done in only one direction from lower state to higher state and it is irreversible.

The NFC interface can access this block with READ CONFIG and WRITE CONFIG commands if not locked by NFC section lock. Once locked as per table below, I2C KH cannot be updated from the NFC interface anymore.

Table below shows the location of the I²C Key Header Configuration in the configuration memory:

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 29. I²C Key Header (I2C_KH) location

Block Address		Byte 0	Byte 1	Byto 2	Byte 3
NFC	I ² C	Byte 0	Byte 1 Byte 2		
30h	1030h	I2C_KH	RFU		

Table 30. I²C Key Header Values

Value	Status	Description
81h	Not active (default)	The related I ² C passwords, I ² C Protection Pointer and I ² C Protection Pointer Condition can be read and written with the I ² C READ and I ² C WRITE commands. The related password is not active and cannot be used.
C3h	Active	The I ² C passwords are active. After authentication with write key the I2C_PP, I2C_PPC and Key header can be written and I2C Keys can be read or written.
E7h	Active and locked	The I ² C key is active and locked and cannot be modified any longer. The related key cannot be read or written with the I ² C READ or I ² C WRITE command. The I2C_PP and I2C_PPC can be read with the READ command, but writing with the WRITE command is not possible any longer.
all other	Disabled	Key is disabled and cannot be used

8.1.3.11 I²C Protection Pointer and Condition

The I²C Protection pointer (I2C_PP) defines the address of the user memory where the user memory below PP_AREA_1 is divided into AREA_0-L and AREA_0-H, two arbitrarily sized sections with independent access conditions, which are defined by condition byte (I2C_PPC).

The NFC interface can access this configuration block with READ CONFIG and WRITE CONFIG commands if not locked by NFC section lock.

Table 31. I²C Protection Pointer and Configuration location

Block A	ddress	Byte 0	Byte 1	Byte 2	Byte 3	
NFC	I ² C	Byte 0	byte i	byte 2	Byte 3	
31h	1031h	I2C_PP	I2C_PPC	RFU	RFU	

The protection pointer address (I2C_PP) defines the base address where the user memory below PP_ARA_1 is divided into higher and lower sections.

- The memory address below protection pointer address is called I²C AREA_0-L.
- The memory address above and including protection pointer address is called I²C AREA_0-H
- I²C AREA_0-H ends, where AREA_1 starts. Note it is the same position (PP_AREA_1) as from NFC perspective (see <u>Section 8.1.3.24</u>).

Below is an example where the memory is divided into to areas with I2C_PP address set to 0050h. In this example PP_AREA_1 is pointing outside the user EEPROM, which means I²C AREA_0-H ends at the end of the user memory.

Default value of I2C PP is FFh.

Table 32. I²C Memory organization example

Block	Byte 0	Byte 1	Byte 2	Byte 3	Description
0000h					AREA 0-L
0001h					ANEA_0-L

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 32. I²C Memory organization example...continued

Block	Byte 0	Byte 1	Byte 2	Byte 3	Description
0002h					
004Eh					
004Fh					
0050h					
0051h					ADEA O LI
:	:	:	:	:	AREA_0-H
01FEh					
01FFh		RFU			Note: Counter page from NFC perspective

If the protection pointer address is set to block 0, then the entire user memory is defined as AREA_0-H.

The protection pointer address and protection pointer configuration can be only changed under following conditions:

- I²C Key Header Configuration status is "Not Active"
- I²C Key Header Configuration status is "Active and read/write after authentication" with read and write privilege key I²C authentication has been executed before successfully.

The protection pointer address and protection pointer configuration cannot be changed when I²C configuration status is "Active and Locked". This status is irreversible.

Configuration area and SRAM access can be protected by I²C authentication when related bits in SRAM_CONF_PROT are set to 1b.

The default value of I2C_PPC is 00h. Which means full access to AREA_0-L and AREA_0-H.

Table 33. I²C Protection Pointer Configuration (I2C_PPC)

Bit	Name	Value	Description
7	RFU	0b	
6	RFU	0b	
5	WRITE_AREA_H	0b	AREA_0-H is not write protected
3	WRITE_AREA_II	1b	AREA_0-H is write protected
4	DEAD ADEA II	0b	AREA_0-H is not read protected
4	READ_AREA_H	1b	AREA_0-H is read protected
3	RFU	0b	
2	RFU	0b	
1	WRITE AREA_L	0b	AREA_0-L is not write protected
'	WRITE_AREA_L	1b	AREA_0-L is write protected
0	READ AREA L	0b	AREA_0-L is not read protected
0	NEAD_ANEA_E	1b	AREA_0-L is read protected

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

8.1.3.12 I²C Authentication Limit Counter

The I²C Authentication Limit Counter is a feature to limit the maximum number of failed authentications from I²C perspective. The counter is incremented for failed password write to block 1096h to 1099h. The counter resets on positive authentication.

The NFC interface can access this block with READ CONFIG and WRITE CONFIG commands if not locked by NFC section lock.

Table 34. I²C Authentication Limit Counter (I2C_AUTH_LIMIT) location

Block Address		Byte 0	Byte 1	Byte 2	Byte 3
NFC	I ² C	Byte 0	byte i	byte 2	Byte 3
32h	1032h	I2C_AUTH_ LIMIT (LSB)	I2C_AUTH_ LIMT (MSB)	RF	FU

Byte 0 of Block 32h is LSB and Byte 1 is MSB of the I²C Authentication Limit counter value. Default value of I2C_AUTH_LIMIT is 00h.

The start value for the Authentication Limit can be preset with an I²C WRITE command if

- · I2C Key header is not locked or Not active
- I2C Key header is Active then after valid authentication with a write key.

The Authentication limit is enabled with the most significant bit of Byte 1 is set to 1b. The remaining 15 bit of I2C AUTH LIMIT are defining the preset value.

Example:

• 8000h enables and presets the authentication limit to 0, which means the maximum number of failed authentications before a successful is required again is 32767.

Remark: The absolute maximum authentication limit value is FFFEh before a positive authentication is required, otherwise the authentication is irreversibly locked (no longer available).

As soon as the value of the Authentication limit reaches

• FFFFh: no further authentication possible any longer. This status is irreversible.

8.1.3.13 Configuration

Different features can be configured with CONFIG bits. The effect does not take place in the current session. The effect takes place after POR. All config bits can be read and written from both interfaces.

Table 35. Configuration Bytes Location (CONFIG)

Block A	ddress	Byte 0	Byte 1	Byte 2	Byte 3	
NFC	I ² C	Byte 0	byte i	Byte 2	Byte 3	
37h	1037h	CONFIG_0	CONFIG_1	CONFIG_2	RFU	

On POR, all CONFIG bits are copied to CONFIG_REG (see Section 8.1.4.2).

Table 36. Configuration Definition (CONFIG 0)

Bit	Name	Value	Description
7	SRAM COPY EN	0b	SRAM copy on POR disabled (default)
/ SRAWI_COPT_EIN	SIVAIN_COFT_EN	1b	SRAM copy on POR enabled
6 to 4	RFU	0b	

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 36. Configuration Definition (CONFIG_0)...continued

Bit	Name	Value	Description
3		00b	RFU
3		01b	
2	EH_MODE	10b	Energy harvesting optimized for low field strength (default)
		11b	Energy harvesting optimized for high field strength
1	LOCK SESSION REG	0b	NFC Write access to all session register (default)
'	LOCK_SESSION_REG	1b	No NFC write access to session registers A3h to A7h
		0b	Normal Operation Mode (Default)
0	AUTO_STANDBY_MODE_EN	1b	IC enters standby mode after boot if there is no RF field present automatically. It shall be enabled to detect NFC field.

Table 37. Configuration Definition (CONFIG_1)

Bit	Name	Value	Description
7	EH_ARBITER_MODE_EN	0b	In energy harvesting use case, ARBITER_MODE needs to be set with session registers after startup (default)
		1b	ARBITER_MODE is set automatically in any case after startup
6	ALM_PLM	0b	PLM
0	ALIW_FLIW	1b	ALM mode when supplied by VCC else PLM (default)
E		00b	I ² C target (default)
5	USE_CASE_CONF	01b	I ² C controller
		10b	GPIO/PWM
4		11b	All host interface functionality disabled and pads are in 3-state mode
3		00b	Normal Mode (default)
3	ADDITED MODE	01b	SRAM mirror mode
0	ARBITER_MODE	10b	SRAM passes through mode
2		11b	SRAM PHDC mode
4	CDAM ENADLE	0b	SRAM is not accessible (default)
1	SRAM_ENABLE	1b	SRAM is available (when VCC supplied)
0	DT TRANSFER DIR	0b	Data transfer direction is I ² C to NFC (default)
0	PT_TRANSFER_DIR	1b	Data transfer direction is NFC to I ² C

Table 38. Configuration Definition (CONFIG 2)

Bit	Name	Value	Description
7	GPIO1_IN	00b	Receiver disabled

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 38. Configuration Definition (CONFIG_2)...continued

Bit	Name	Value	Description
		01b	Plain input with weak pull-up
6		10b	Plain input
O		11b	Plain input with weak pull-down (Default)
5		00b	Receiver disabled (Default)
5	CDIO0 IN	01b	Plain input with weak pull-up
4	- GPIO0_IN	10b	Plain input
4		11b	Plain input with weak pull-down (Default)
3	EXTENDED_COMMANDS_	0b	Extended commands are disabled
3	SUPPORTED	1b	Extended commands are supported (Default)
2	LOCK_BLOCK_	0b	Lock block commands are disabled
2	COMMAND_SUPPORTED	1b	Lock block commands are supported (Default)
4	CDIO4 CLEW DATE	0b	Low Speed GPIO
1	GPIO1_SLEW_RATE	1b	High Speed GPIO (Default)
0	CDIOO CLEW DATE	0b	Low Speed GPIO
0	GPIO0_SLEW_RATE	1b	High Speed GPIO (Default)

8.1.3.14 Synchronization Block

These bytes define the block address of the user memory being a terminator block. Whenever there is read or written to the block address as specified in SYNCH_DATA_BLOCK from the NFC interface the respective status bit is set. And also ED pin is set accordingly if configured to detect SYNCH_DATA_BLOCK access.

Table 39. Synchronization Block Bytes Location (SYNCH_DATA_BLOCK)

Block Address		Byte 0	Byte 1	Byte 2	Byte 3
NFC	I ² C	byte 0	Dyte i	Dyte 2	Буте 3
38h	1038h	SYNCH_DATA_ BLOCK (LSB)	SYNCH_DATA_ BLOCK (MSB)	RFU	

Table 40. Synchronization Block Register Bytes Location (SYNCH_DATA_BLOCK_REG)

Block Address		Byte 0	Byte 1	Byte 2	Byte 3
NFC	I ² C	byte 0	byte i	byte 2	Byte 3
A2h	10A2h	SYNCH_DATA_ BLOCK_REG (LSB)	SYNCH_DATA_ BLOCK_REG (MSB)	RFU	

8.1.3.15 Pulse Width Modulation and GPIO Configuration

These configuration bytes define the various configuration bits for GPIO/PWM use case (see <u>Section 8.1.3.13</u>). All features can be configured from NFC and I²C perspective as long NTAG 5 boost is configured for target mode. For details refer to <u>Section 8.3.3</u> and <u>Section 8.3.4</u>.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 41. PWM and GPIO Configuration Location (PWM_GPIO_CONFIG)

Block Address		Byte 0	Byte 1	Byte 2	Byto 2
NFC	I ² C	byte 0	byte i	Byte 2	Byte 3
39h	1039h	PWM_GPIO_ CONFIG_0	PWM_GPIO_ CONFIG_1	RI	=U

Table 42. PWM and GPIO Configuration Definition (PWM GPIO CONFIG 0)

Bit	Name	Value	Description
7	SDA GPIO1 OUT STATUS	0b	Output status on pad is LOW (default)
,	SDA_GFIO1_O01_STATOS	1b	Output status on pad is HIGH
6	SCL_GPIO0_OUT_STATUS	0b	Output status on pad is LOW (default)
	3CL_GF100_001_31A103	1b	Output status on pad is HIGH
5 to 4	RFU	00b	
3	SDA GPIO1	0b	Output (Default)
3	3DA_GPIO1	1b	Input
2	SCL GPIO0	0b	Output (Default)
2	30L_GF100	1b	Input
1	SDA CDIO1 DWM1	0b	GPIO (Default)
	SDA_GPIO1_PWM1	1b	PWM
0	OOL ODIOS DIAMS	0b	GPIO (Default)
0	SCL_GPIO0_PWM0	1b	PWM

Table 43. PWM and GPIO Configuration Definition (PWM_GPIO_CONFIG_1 and PWM GPIO CONFIG 1 REG)

Bit	Name	Value	Description
7	PWM1 PRESCALE	00b	Pre-scalar configuration for PWM1 channel
6	T WWI _ I RESCALE	OOD	(default 00b)
5	PWM0 PRESCALE	00b	Pre-scalar configuration for PWM0 channel
4	T WWO_I RESONEE	005	(default 00b)
3		00b	6-bit resolution (default)
5	PWM1_RESOLUTION_CONF	01b	8-bit resolution
2		10b	10-bit resolution
		11b	12-bit resolution
1		00b	6-bit resolution (default)
	PWM0_RESOLUTION_CONF	01b	8-bit resolution
0		10b	10-bit resolution
		11b	12-bit resolution

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

8.1.3.16 Pulse Width Modulation Duty Cycle settings

Details can be found in PWM Mode section (see Section 8.3.4).

Table 44. Pulse Width Modulation Duty Cycle Configuration Location (PWMx_ON and PWMx_OFF)

Block Address		Byte 0	Byte 1	Byte 2	Byte 3	
NFC	I ² C	Dyte 0	Dyte i	Dyte 2	Byte 3	
3Ah	103Ah	PWM0_ON (LSB)	PWM0_ON (MSB)	PWM0_OFF (LSB)	PWM0_OFF (MSB)	
3Bh	103Bh	PWM1_ON (LSB)	PWM1_ON (MSB)	PWM1_OFF (LSB)	PWM1_OFF (MSB)	

Table 45. Pulse Width Modulation Duty Cycle Session Register Location (PWMx_ON and PWMx_OFF)

Block Address		Pyrto 0	Pyrto 1	Puto 2	Durán 2
NFC	I ² C	Byte 0	Byte 1	Byte 2	Byte 3
A4h	10A4h	PWM0_ON_ REG (LSB)	PWM0_ON_ REG (MSB)	PWM0_OFF_REG (LSB)	PWM0_OFF_ REG (MSB)
A5h	10A5h	PWM1_ON_ REG (LSB)	PWM1_ON_ REG (MSB)	PWM1_OFF_REG (LSB)	PWM1_OFF_ REG (MSB)

Table 46. Pulse Width Modulatin ON time Configuration Definition (PWMx_ON and PWMx_ON_REG)

			<u> </u>
Bit	Name	Default Value	Description
7 to 4	RFU	all 0b	
3 to 0	PWMx_ON (MSB)	all 0b	coded time PWM channel x output will be asserted HIGH
7 to 0	PWMx_ON (LSB)	all 0b	

Table 47. Pulse Width Modulation OFF time Configuration Definition (PWMx_OFF and PWMx_OFF REG)

Bit	Name	Default Value	Description
7 to 4	RFU	all 0b	
3 to 0	PWMx_OFF (MSB)	all 0b	coded time PWM channel x output will be asserted LOW
7 to 0	PWMx_OFF (LSB)	all 0b	Coded time F will channel X output will be asserted LOW

PWM on and off times are coded by using maximum 12 bits. To code for example, PWM0_ON as 0123h, PWM0_ON (LSB) is set to 23h, and PWM0_ON (MSB) is set to 01h.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

8.1.3.17 Watch Dog Timer settings

I²C Watch Dog Timer settings can be adjusted and enabled via configuration bytes from both interfaces. Related session registers are read only. Watch Dog Timer 16-bit default value is 0848h. Details can be found in WDT section (see Section 8.3.1.3).

Table 48. Watch Dog Timer Configuration Location (WDT_CONFIG)

Block A	Address	Byte 0	Byte 1	Byte 2	Byte 3	
NFC	I ² C	Byte 0	byte i	byte 2	Byte 3	
3Ch	103Ch	WDT_CONFIG (LSB)	WDT_CONFIG (MSB)	WDT_ENABLE	SRAM_COPY_BYTES	

Table 49. Watch Dog Timer Configuration Register Location (WDT CONFIG REG)

			3		/	
Block Address		Address	Byte 0 Byte 1		Byte 2	Byte 3
	NFC	I ² C	byte 0	byte i	byte 2	Byte 3
	A6h	10A6h	WDT_CONFIG_ REG (LSB)	WDT_CONFIG_ REG (MSB)	WDT_EN_REG	RFU

Table 50. Watch Dog Timer Enable Definition (WDT_ENABLE and WDT_EN_REG)

Bit	Name	Default Value	Description
7 to 5	RFU	all 0b	
4	RFU	1b	
3 to 1	RFU	all 0b	
0	WDT_ENABLE	0b	Watch Dog Timer disabled
		1b	Watch Dog Timer enabled (default)

8.1.3.18 Energy harvesting settings

Energy harvesting configuration controls the behavior of the energy harvesting output pin. If DISABLE_POWER_CHECK is 0b and energy harvesting is enabled with EH_ENABLE is 1b, only when the applied field strength is sufficient to generate configured minimum output load current (EH_IOUT_SEL) and voltage (EH_VOUT_SEL), the energy harvesting output is enabled.

If energy harvesting will be enabled during the session with register bits, EH_IOUT_SEL and EH_VOUT_SEL define the needed output power. However, DISABLE_POWER_CHECK and EH_ENABLE bits need to be set to 0b in this case.

Details can be found in energy harvesting section (see Section 8.5).

Table 51. Energy harvesting Configuration Location (EH_CONFIG)

Block Address		Byte 0	Byte 1	Byto 2	Byte 3
NFC	I ² C	Byte 0	byte i	Byte 2	Буле 3
3Dh	103Dh	EH_CONFIG	RFU	ED_CONFIG	RFU

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 52. Energy harvesting Configuration Value Definition (EH_CONFIG)

Bit	Name	Value	Description
7	RFU		
6		000b	>0.4 mA (Default)
		001b	>0.6 mA
		010b	>1.4 mA
5	FIL VOUT I CEI	011b	>2.7 mA
	EH_VOUT_I_SEL	100b	>4.0 mA
		101b	>6.5 mA
4		110b	>9.0 mA
		111b	>12.5 mA
3	DISABLE DOWED CHECK	0b	Only if sufficient power can be harvested, VOUT will be enabled (default)
3	DISABLE_POWER_CHECK	1b	Power level will not be checked, VOUT will be enabled immediately after startup
2		00b	1.8 V (Default)
	FIL VOUT V CEL	01b	2.4 V
1	- EH_VOUT_V_SEL	10b	3 V
		11b	RFU
0	ELI ENIADI E	0b	Energy harvesting disabled (default)
	EH_ENABLE	1b	Energy harvesting enabled

8.1.3.19 Event detection pin configuration settings

Event detection and field detection functionality define the behavior of the active low ED pin depending on various events. As this pin is an open-drain active low implementation, ED pin state ON means that signal is LOW and OFF means that signal is HIGH. More details can be found in ED section (see <u>Section 8.3.2</u>).

Table 53. Event Detection Configuration Location (ED_CONFIG)

Block A	ddress	Byte 0	Byte 1	Byte 2	Byte 3
NFC	I ² C	byte 0	byte i	Byte 2	Byte 3
3Dh	103Dh	EH_CONFIG	RFU	ED_CONFIG	RFU

Table 54. Event Detection Configuration Register Location (ED_CONFIG_REG)

Block Address		Byte 0	Byte 1	Byte 2	Byte 3
NFC	I ² C	byte 0	byte i	byte 2	Byte 3
A8h	10A8h	ED_CONFIG_REG	RFU		

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 55. Event Detection Definition (ED_CONFIG and ED_CONFIG_REG)

Bit	Name	Value	ED pin state	Description
7 to 4	RFU	0000b	N/A	
3 to 0	Disable ED	0000b	OFF	Event detection pin disabled (default)
	NFC Field detect	0001b	ON	NFC field present, when AUTO_STANDBY_MODE_EN is enabled.
			OFF	NFC field absent
	PWM	0010b	ON	Pulse width modulation signal during OFF period
	FVVIVI	00100	OFF	Pulse width modulation signal during On period
			ON	Last byte of SRAM data has been read via NFC; host can access SRAM again
	I ² C to NFC pass-through	0011b	OFF	 Last byte written by I²C, or NFC off, or V_{CC} is off
			ON	Last byte written by NFC; host can read data from SRAM
	NFC to I ² C pass-through	0100b	OFF	 Last byte has been read from I²C, or NFC off, or V_{CC} off
		0101b	ON	Arbiter locked access to NFC interface
	Arbiter lock		OFF	Lock to NFC interface released
	NDEF Message TLV	0110b	ON	Length byte(block 1, byte 1) is not ZERO
	Length		OFF	Length byte (block 1, byte1) is ZERO
			ON	IC is NOT in standby mode
	Stand-by mode	0111b	OFF	IC is in standby mode
	WRITE command	1000b	ON	Start of programming cycle during WRITE command
	indication		OFF	Start of response to WRITE command or NFC off
	READ command		ON	Start of read cycle during READ command
	indication	1001b	OFF	End of read access, or NFC off
	Start of command		ON	Start of (any) command
	indication	1010b	OFF	End of response to command, or NFC off
	DEAD from SVNOL		ON	Data read from SYNCH_BLOCK
	READ from SYNCH_ BLOCK	1011b	OFF	Event needs to be cleared by setting b0 of ED_ RESET_REG to 1b or NFC off
	MDITE to SYNOU		ON	Data written to SYNCH_BLOCK
	WRITE to SYNCH_ BLOCK	1100b	OFF	Event needs to be cleared by setting b0 of ED_ RESET_REG to 1b or NFC off
	Software Interrupt	1101b	ON	1101b written to ED_CONFIG

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

 Table 55. Event Detection Definition (ED_CONFIG and ED_CONFIG_REG)...continued

Bit	Name	Value	ED pin state	Description
			OFF	Event needs to be cleared by setting b0 of ED_ RESET_REG to 1b
	RFU	1110b	N/A	
	RFU	1111b	N/A	

Table 56. Event Detection Clear Register Location (ED_INTR_CLEAR_REG)

Block Address		Purto 0	Puto 4	Puto 2	Puto 2
NFC	I ² C	Byte 0	Byte 1	Byte 2	Byte 3
ABh	10ABh	ED_INTR_ CLEAR_REG	RFU		

Table 57. Event Detection Clear Register (ED INTR CLEAR REG)

Bit	Name	Value	Description
7 to 1	RFU	all 0b	
0	ED_INTR_CLEAR	1b	write 1b to release ED pin

ED pin is cleared i.e. released when writing 01h to the ED_INTR_CLEAR register. The bit gets automatically cleared after clearing the ED pin. 1

8.1.3.20 I²C target configuration settings

I²C target functionality can be configured with the following configuration registers from both interfaces.

Table 58. I²C Target Configuration Location

Block Address		Byte 0	Byte 1	Byte 2	Puto 2	
NFC	I ² C	Byte 0	byte i	Byte 2	Byte 3	
3Eh	103Eh	I2C_TARGET_ADDR	I2C_TARGET_ CONFIG	I2C_CONTROLLER_ SCL_LOW	I2C_CONTROLLER_ SCL_HIGH	

Table 59. I²C Target Configuration Definition (I2C_TARGET_ADDR)

Bit	Name	Value	Description
7	RFU	0b	
6 to 0	I2C_TARGET_ADDR	54h	I ² C target address used in target configuration

¹ This works only with "Software Interrupt" ED configuration.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 60. I²C Target Configuration Definition (I2C_TARGET_CONFIG)

Bit	Name	Value	Description
7 to 3	RFU	00000b	
2	I2C S REPEATED START	0b	Target does not reset if repeated start is received (Default)
2	IZC_3_REFEATED_START	1b	I ² C target resets internal state machine on repeated start
1	RFU	0b	
0	RFU	0b	

8.1.3.21 I²C controller clock configuration settings

I²C Controller baud rate and SCL high and low can be configured by the related configuration values. Details about the formula can be found in I²C controller section.

Table 61. I²C Controller Clock Settings Configuration Location (I2C_CONTROLLER_CONFIG)

Block Address		Byte 0	Byte 1	Byte 2	Byte 3	
NFC	I ² C	byte 0	byte i	Byte 2	byte 3	
3Eh	103Eh	I2C_TARGET_ADDR	I2C_TARGET_ CONFIG	I2C_CONTROLLER_ SCL_LOW	I2C_CONTROLLER_ SCL_HIGH	

Table 62. I²C Controller Clock Configuration Definition (I2C_CONTROLLER_SCL_LOW)

Bit	Name	Default Value	Description
7	RFU		
6 to 0	I2C_CONTROLLER_SCL_ LOW		I ² C controller configuration SCL low period. Default: 400 kHz, 41%duty cycle.

Table 63. I²C Controller Clock Configuration Definition (I2C_CONTROLLER_SCL_HIGH)

Bit	Name	Default Value	Description
7	RFU		
6 to 0	I2C_CONTROLLER_SCL_ HIGH		I ² C controller configuration SCL HIGH period. Default: 400 kHz, 41%duty cycle.

8.1.3.22 Device security configuration bytes

NTAG 5 boost features scale-able security. The level of security can be selected with DEV_SEC_CONFIG byte. SRAM CONF PROT is described in Section 8.1.3.23.

PP_AREA_1 is described in Section 8.1.3.24.

Table 64. Device Security Configuration Byte location

Block Address		Byte 0	Byte 1	Byte 2	Byte 3
NFC	I ² C	byte 0	byte i	Byte 2	
3Fh	103Fh	DEV_SEC_CONFIG	SRAM_CONF_PROT	PP_AREA_1 (LSB)	PP_AREA_1 (MSB)

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

The IC security features can be enabled or disabled or can choose different security options available from NFC perspective:

- · AES authentication scheme
- · Plain password feature

Table 65. Device Security Byte Definition (DEV SEC CONFIG)

Bit	Name	Value	Description
-		010b	block 3Fh with device security configuration bytes is locked. Remark: The lock is irreversible.
7 to 5	Security Lock	101b	block 3Fh is writeable (default)
		other	RFU
4	RFU	00b	
3	THE O	OOD	
2		other	RFU
1	NFC Security	010b	AES
0		101b	plain password (default)

8.1.3.23 SRAM and Configuration protection

Access to complete SRAM and blocks 37h to 54h of configuration area can be restricted with SRAM_CONFIG_PROT byte.

Table 66. SRAM and Configuration Byte location

Block Address		Byte 0	Byte 1	Byte 2	Byte 3
NFC	I ² C	Byte 0	byte i	byte 2	
3Fh	103Fh	DEV_SEC_CONFIG	SRAM_CONF_PROT	PP_AREA_1 (LSB)	PP_AREA_1 (MSB)

Table 67. SRAM and Configuration Protection (SRAM_CONF_PROT)

Bit	Name	Value	Description
7 to 6	RFU	00b	
5	I2C_CONFIG_W	0b	Configuration area is not write protected from I ² C perspective (default)
		1b	Configuration area is write protected from I ² C perspective
4	I2C_CONFIG_R	0b	Configuration area is not read protected from I ² C perspective (Default)
		1b	Configuration area is read protected from I ² C perspective
3	NFC SRAM W	0b	SRAM is not write protected from NFC perspective (Default)
3	INFC_SKAIVI_VV	1b	SRAM is write protected from NFC perspective
2	NEC CRAM D	0b	SRAM is not read protected from NFC perspective (Default)
2	NFC_SRAM_R	1b	SRAM is read protected from NFC perspective
1	1 NFC_CONFIG_W		Configuration area is not write protected from NFC perspective (Default)

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 67. SRAM and Configuration Protection (SRAM_CONF_PROT)...continued

Bit	Name	Value	Description
		1b	Configuration area is write protected from NFC perspective
0	NFC CONFIG R	0b	Configuration area is not read protected from NFC perspective (Default)
		1b	Configuration area is read protected from NFC perspective

8.1.3.24 Restricted AREA_1 pointer

The AREA_1 Pointer (PP_AREA_1) can be configured by directly writing PP_AREA_1 byte to configuration memory using WRITE CONFIG command (see <u>Section 8.2.4.2.2</u>). This 16-bit block address is the same for NFC and I²C perspective. The default value is FFFFh.

Table 68. Restricted AREA_1 Pointer location

Block Address		Byte 0	Byte 1	Byte 2	Byte 3
NFC	I ² C	byte 0	Dyte i	Dyte 2	
3Fh	103Fh	DEV_SEC_CONFIG	SRAM_CONF_PROT	PP_AREA_1 (LSB)	PP_AREA_1 (MSB)

In below example, NFC protection pointer (NFC_PP_AREA_0H) is set to 50h and PP_AREA_1 is set to 0060h, e.g. PP_AREA_1 (LSB) is 60h and PP_AREA_1 (MSB) is 00h. This example illustrates the view from NFC perspective.

From I²C perspective Area 1 will be the same, however Area 0-L and Area 0-H may look different depending on I²C protection pointer.

Table 69. Memory organization example from NFC perspective

Block	Byte 0	Byte 1	Byte 2	Byte 3	Description
0000h					
0001h					
0002h					AREA_0-L
004Fh					
0050h					
0051h					AREA_0-H
					AREA_U-H
005Fh					
0060h					
0061h					ADEA 1
					- AREA_1
01FEh					
01FFh	C0	C1	00h	PROT	Counter

8.1.3.25 Active NFC configuration

For active communication, dependent on the antenna size, a proper matching circuit is needed and the IC needs to be configured to keep load modulation amplitude values within ISO/IEC 15693 and NFC Forum Type 5

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Tag specification. The voltage on LA and LB shall not exceed 1.8 V in ALM mode. How to configure ALM in your application is described in the Antenna Design Guide application note AN12339 [12].

Table 70. Active NFC Configuration location

Block A	Address	Purto 0	Puto 4	Puto 2	Byte 3
NFC	I ² C	Byte 0	Byte 1	Byte 2	
40h	1040h	ALM_CONF_00	ALM_CONF_01	ALM_CONF_02	ALM_CONF_03
41h	1041h	ALM_LUT_00	ALM_LUT_01	ALM_LUT_02	ALM_LUT_03
42h	1042h	ALM_LUT_04	ALM_LUT_05	ALM_LUT_06	ALM_LUT_07
43h	1043h	ALM_LUT_08	ALM_LUT_09	ALM_LUT_10	ALM_LUT_11
44h	1044h	ALM_LUT_12	ALM_LUT_13	ALM_LUT_14	ALM_LUT_15

Table 71. ALM Configuration 0 (ALM_CONF_00)

Bit	Name	Value	Description
7 to 6	RFU	10b	
		000b	35 mV (default)
		001b	44 mV
	typical field detect threshold rms value @ 13.56 MHz	010b	53 mV
5 to 3		011b	62 mV
5 10 5		100b	71 mV
		101b	80 mV
		110b	89 mV
		111b	98 mV
2 to 0	RFU	001b	

Table 72. ALM Configuration 1 (ALM_CONF_01)

Bit	Name	Value	Description
7	RFU	1b	
6 to 2	Static phase offset	xxxxxb	Static phase offset (default = 11111b)
1 to 0	RFU	00b	

Table 73. ALM Configuration 2 (ALM_CONF_02)

Bit	Name	Value	Description
7 to 0	RFU	5Eh	

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 74. ALM Configuration 3 (ALM_CONF_03)

Bit	Name	Value	Description
7 to 6	RFU	11b	
5 to 3	PLL track delay	I X X X I)	Extra delay in 6.78 MHz clock cyles (default = 001b)
2 to 0	RFU	111b	

Table 75. ALM Look-up-table (ALM_LUT_dd)

Bit	Name	Value	Description
7 to 5	Dynamic phase adjust	xxxb	adjust phase in 11.25° steps
4	Enable BPSK	0b	ASK
4	Eliable BPSN	1b	BPSK
		0000b	1574 Ω
		0001b	716 Ω
		0010b	414 Ω
		0011b	248 Ω
	RON	0100b	123 Ω
		0101b	82 Ω
		0110b	62 Ω
3 to 0		0111b	49 Ω
3 10 0		1000b	41 Ω
		1001b	35 Ω
		1010b	31 Ω
		1011b	27 Ω
		1100b	25 Ω
		1101b	22 Ω
		1110b	21 Ω
		1111b	17 Ω

Table 76. Active NFC Configuration Default Content

Block A	Address	Purto 0	Doda 4	Darta 0	Byte 3
NFC	I ² C	Byte 0	Byte 1	Byte 2	
40h	1040h	81h	FCh	5Eh	CFh
41h	1041h	1Fh	1Fh	17h	14h
42h	1042h	13h	13h	12h	12h
43h	1043h	10h	10h	F0h	F0h
44h	1044h	F0h	F0h	F0h	F0h

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

8.1.3.26 Application Family Identifier

The Application Family Identifier (AFI) represents the type of application targeted by the device and is used to extract from all the ICs present only the ICs meeting the required application criteria.

AFI can be configured using WRITE AFI command (see <u>Section 8.2.4.9.1</u>) or directly writing AFI byte to configuration memory using WRITE CONFIG command (see <u>Section 8.2.4.2.2</u>).

Default value of AFI is 00h.

From I²C perspective, this byte can be accessed with normal READ and WRITE commands as long as not locked by I²C section locks.

Table 77. Application Family Identifier (AFI) location

Block Address		Byto 0	Byte 1	Byte 2	Byte 3
NFC	I ² C	Byte 0	Dyte i	Dyte 2	Byte 3
55h	1055h	AFI	RFU		

8.1.3.27 Data Storage Format Identifier

The Data Storage Format Identifier may indicate how the data is structured in the VICC memory. If not used, this byte shall be set to 00h, which is the default value.

The Data Storage Format Identifier (DSFID) can be configured using WRITE DSFID command (see <u>Section 8.2.4.9.3</u>) or directly writing DSFID byte to configuration memory using WRITE CONFIG command (see <u>Section 8.2.4.2.2</u>).

From I²C perspective, this byte can be accessed with normal READ and WRITE commands as long as not locked by I²C section locks.

Table 78. Data Storage Format Identifier (DSFID) location

Block Address		Byto 0	Byte 1	Byte 2	Byte 3	
NFC	I ² C	Byte 0	byte i	byte 2	Byte 3	
56h	1056h	DSFID	RFU			

8.1.3.28 Electronic Article Surveillance ID

The Electronic Article Surveillance ID (EAS ID) can be configured using WRITE EAS ID (see <u>Section 8.2.4.9.10</u>) command or directly writing EAS_ID byte to configuration memory using WRITE CONFIG command (see <u>Section 8.2.4.2.2</u>).

Default value of EAS ID is 0000h.

From I²C perspective, this byte can be accessed with normal READ and WRITE commands as long as not locked by I²C section locks.

Table 79. Electronic Article Surveillance ID (EASID) location

Block Address		Byte 0	Byte 1	Byte 2	Byte 3
NFC	I ² C	byte 0	byte i	byte 2	Byte 3
57h	1057h	EAS_ID (LSB)	EAS_ID (MSB)	RFU	

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

8.1.3.29 NFC protection pointer

The NFC protection pointer (NFC_PP_AREA_0H) can be configured using PROTECT PAGE command (see <u>Section 8.2.4.3.6</u>) or directly writing NFC_PP_AREA_0H byte to configuration memory using WRITE CONFIG command (see <u>Section 8.2.4.2.2</u>).

Default value is FFh.

Table 80. NFC Protection Pointer (NFC PP) location

Block Address		Byte 0	Byte 1	Byte 2	Byte 3	
NFC	I ² C	- Byte 0	Dyte i	Dyte 2	Dyte 3	
58h	1058h	NFC_PP_AREA_0H	NFC_PPC	RFU	RFU	

In below example, NFC protection pointer is set to 50h. PP_AREA_1 is out side of the EEPROM area in this example. This example illustrates the view from NFC perspective.

Table 81. Memory organization example

Block	Byte 0	Byte 1	Byte 2	Byte 3	Description
0000h					
0001h					
0002h					AREA_0-L
				•••	
004Fh					
0050h					
0051h					AREA_0-H
01FEh					
01FFh	C0	C1	00h	PROT	Counter

8.1.3.30 NFC Protection Pointer Conditions

The NFC Protection Pointer Conditions (NFC PPC) can be configured using PROTECT PAGE command (see <u>Section 8.2.4.3.6</u>) or directly writing NFC_PPC byte to configuration memory using WRITE CONFIG command (see <u>Section 8.2.4.2.2</u>) as defined in table below.

Table 82. NFC Protection Pointer Conditions (NFC_PPC) location

Block Address		Byte 0	Byte 1	Byte 2	Byte 3
NFC	I ² C	Dyte 0	Dyte i	byte 2	byte 3
58h	1058h	NFC_PP_AREA_0H	NFC_PPC	RFU	RFU

Table 83. NFC Protection Pointer Configuration (NFC PPC)

Bit	Name	Value	Description
7	RFU	0b	
6	RFU	0b	
5	WRITE_AREA_0_H	0b	AREA_0-H is not write protected (Default)

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 83. NFC Protection Pointer Configuration (NFC_PPC)...continued

Bit	Name	Value	Description
		1b	AREA_0-H is write protected
4	READ_AREA_0_H	0b	AREA_0-H is not read protected (Default)
7		1b	AREA_0-H is read protected
3	RFU	0b	
2	RFU	0b	
1	WRITE_AREA_0_L	0b	AREA_0-L is not write protected (Default)
1		1b	AREA_0-L is write protected
0	READ_AREA_0_L	0b	AREA_0-L is not read protected (Default)
0			AREA_0-L is read protected

8.1.3.31 NFC lock bytes

User blocks can be blocked from writing by the NFC interface. These bits are one time programmable. Once written to 1b, they cannot be changed back to 0b. Each bit locks one block of user memory area (e.g., bit 0 of byte 0 locks block 0). These bytes can be written by NFC and I²C. The access to these bytes for the particular interface can be restricted by configuring the device SECTION_LOCK (see <u>Table 86</u>).

Table 84. NFC Lock Block Configuration location

Block Address						
NFC	I ² C	Byte 0	Byte 1	Byte 2	Byte 3	
6Ah	106Ah	NFC_LOCK_BL00	NFC_LOCK_BL01	RFU	RFU	
				RFU	RFU	
89h	1089h	NFC_LOCK_BL62	NFC_LOCK_BL63	RFU	RFU	

8.1.3.32 I²C lock bytes

User blocks can be blocked from writing by the I^2C interface. These bits are one time programmable. Once written 1b, they cannot be changed back to 0b. Each bit locks 4 blocks of user memory area (e.g., bit 0 of byte 0 locks blocks 0, 1, 2 and 3). These bytes can be written by NFC and I^2C . The access to these bytes for the particular interface can be restricted by configuring the device configuration section locks bytes (see <u>Table 86</u>). I^2C _LOCK_BL00 – bit 0 – will lock user blocks 0,1,2,3 from I^2C perspective.

Table 85. I²C Lock Block Configuration location

Block Address		Byte 0	Byte 1	Byte 2	Byte 3	
NFC	I ² C	byte 0	byte i	Byte 2	Byte 3	
8Ah	108Ah	I2C_LOCK_BL00	I2C_LOCK_BL01	RFU	RFU	
				RFU	RFU	
91h	1091h	I2C_LOCK_BL14	I2C_LOCK_BL15	RFU	RFU	

8.1.3.33 Device configuration section lock bytes

Lock bits are provided to lock different sections of the configuration area. 16 bits for each interface are provided to define access conditions for different sections of the configuration area.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

First column in the configuration memory table (see Table 10) defines the affiliated blocks of each section.

Table 86. Device configuration section lock bytes location

Block Address		Byte 0	Byte 1	Byte 3	
NFC	I ² C	Byte 0	byte i	Byte 3	
92h	1092h	NFC_SECTION_ LOCK_0			
93h	1093h	NFC_SECTION_ LOCK_1	RFU		
94h	1094h	I2C_SECTION_ LOCK_0	RFU		
95h	1095h	I2C_SECTION_ LOCK_1	RFU		

These section lock configurations are provided to allow customer to initialize NTAG 5 boost during customer configuration from either I²C or NFC interface. After the configuration is done, it is recommended to write the appropriate lock conditions and lock the device configuration bytes.

These lock bytes take the highest priority above all locks. Different section access conditions have to be chosen appropriately, so that the other interface does not change and corrupt the other interface security configuration.

If I2C_LOCK_0 and NFC_LOCK_0 bits are set to 1b, then the lock bytes cannot be updated and gets locked permanently. If any interface is not locked i.e. any one of the I2C_LOCK_0 and NFC_LOCK_0 bits are 0b, then the particular interface can unlock the other.

Table 87. NFC configuration section lock byte 0 definition (NFC_SECTION_LOCK_0)

Bit	Name	Value	Description
7	Section 7	0b	Section 7 is writable by NFC
,	Section /	1b	Section 7 is not writable by NFC
6	Section 6	0b	Section 6 is writable by NFC
0	Section 6	1b	Section 6 is not writable by NFC
5	Section 5	0b	Section 5 is writable by NFC
3	Section 5	1b	Section 5 is not writable by NFC
4	Section 4	0b	Section 4 is writable by NFC
4		1b	Section 4 is not writable by NFC
3	Section 3	0b	Section 3 is writable by NFC
3		1b	Section 3 is not writable by NFC
2	Section 2	0b	Section 2 is writable by NFC
2	Section 2	1b	Section 2 is not writable by NFC
4	Section 1	0b	Section 1 is writable by NFC
	Section 1	1b	Section 1 is not writable by NFC
0	Section 0	0b	Section 0 is writable by NFC
	Section 0	1b	Section 0 is not writable by NFC

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 88. NFC configuration section lock Byte 1 definition (NFC_SECTION_LOCK_1)

Bit	Bit Name		Description
7	Section 8	0b	Section 8 is writable by NFC
,	Section o	1b	Section 8 is not writeable by NFC
6	Section 6	0b	Section 6 is readable by NFC
0	Section 0	1b	Section 6 is not readable by NFC
5	Section 5	0b	Section 5 is readable by NFC
5	Section 5	1b	Section 5 is not readable by NFC
4	Section 4	0b	Section 4 is readable by NFC
4		1b	Section 4 is not readable by NFC
3	Section 3	0b	Section 3 is readable by NFC
3		1b	Section 3 is not readable by NFC
2	Section 2	0b	Section 2 is readable by NFC
2		1b	Section 2 is not readable by NFC
1	Section 1	0b	Section 1 is readable by NFC
	Section 1	1b	Section 1 is not readable by NFC
0	Section 0	0b	Section 0 is readable by NFC
0	Section 0	1b	Section 0 is not readable by NFC

Table 89. I²C configuration section lock byte 0 definition (I2C_SECTION_LOCK_0)

Bit	Name	Value	Description
7	Section 7	0b	Section 7 is writable by I ² C
/	Section /	1b	Section 7 is not writable by I ² C
6	Section 6	0b	Section 6 is writable by I ² C
0	Section 0	1b	Section 6 is not writable by I ² C
5	Section 5	0b	Section 5is writable by I ² C
5	Section 5	1b	Section 5 is not writable by I ² C
4	Section 4	0b	Section 4 is writable by I ² C
4		1b	Section 4 is not writable by I ² C
3	Section 3	0b	Section 3 is writable by I ² C
3		1b	Section 3 is not writable by I ² C
2	Section 2	0b	Section 2 is writable by I ² C
2	Section 2	1b	Section 2 is not writable by I ² C
1	Section 1	0b	Section 1 is writable by I ² C
ļ ļ	Section 1	1b	Section 1 is not writable by I ² C
0	Section 0	0b	Section 0 is writable by I ² C
U	Section 0	1b	Section 0 is not writable by I ² C

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 90. I²C configuration section lock byte 1 definition (I2C_SECTION_LOCK_1)

Bit	Name	Value	Description
7	Section 8	0b	Section 8 writable by I ² C
,	Section 6	1b	Section 8 is not writeable by I ² C
6	Section 6	0b	Section 6 is readable by I ² C
O	Section 6	1b	Section 6 is not readable by I ² C
5	Section 5	0b	Section 5is readable by I ² C
5	Section 5	1b	Section 5 is not readable by I ² C
4	Section 4	0b	Section 4 is readable by I ² C
4		1b	Section 4 is not readable by I ² C
3	Section 3	0b	Section 3 is readable by I ² C
3	Section 3	1b	Section 3 is not readable by I ² C
2	Section 2	0b	Section 2 is readable by I ² C
2	Section 2	1b	Section 2 is not readable by I ² C
1	Section 1	0b	Section 1 is readable by I ² C
ı	Section 1	1b	Section 1 is not readable by I ² C
0	Section 0	0b	Section 0 is readable by I ² C
0	Section 0	1b	Section 0 is not readable by I ² C

Note: Section 7 (default SRAM content) and Section 8 (Device configuration lock bytes) are always readable.

In case of not readable and/or not writeable, IC responds with an NACK from I²C perspective and with an error from NFC perspective, when trying to access locked sections.

8.1.4 Session registers

After POR, the content of the configuration settings (see <u>Section 8.1.3</u>) is loaded into the session register. The values of session registers can be changed during a session. Change to session registers take effect immediately, but only for the current communication session. After POR, the session registers values will again contain the configuration register values as before.

To change the default behavior, changes to the related configuration bytes are needed, but the related effect will only be visible after the next POR.

Session registers starting from block A3h until the end may be write protected with LOCK REGISTER bit.

Reading and writing the session registers via I²C can only be done with READ REGISTER and WRITE REGISTER commands.

Most of the parameters are defined in the configuration memory section.

Table 91. Session Register Location

Block Address		- Byte 0 Byte 1		Byte 2	Byte 3	Remark
NFC	I ² C	Dyte 0	Byte 1 Byte 2		Dyte 3	
A0h	10A0h	STATUS_REG		RF	FU	Status Register (see Section 8.1.4.1)

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 91. Session Register Location...continued

Block Address		Purto 0	Puto 4	Puto 2	Puto 2	Remark
NFC	I ² C	Byte 0	Byte 1	Byte 2	Byte 3	
A1h	10A1h		CONFIG	G_REG		Configuration (see Section 8.1.4.2)
A2h	10A2h	SYNC_DATA_	BLOCK_REG	RF	FU	Block Address (see Section 8.1.4.3)
A3h	10A3h	PWM_GPIO_0	CONFIG_REG	RF	FU	PWM and GPIO Configuration(see Section 8.1.4.4)
A4h	10A4h		PWM0_ON	_OFF_REG		PWM1 Configuration (see Section 8.1.4.5)
A5h	10A5h		PWM1_ON	_OFF_REG		PWM1 Configuration (see Section 8.1.4.5)
A6h	10A6h	,	WDT_CONFIG_REG	i	RFU	Watch Dog Timer Configuration (see Section 8.1.4.6)
A7h	10A7h	EH_CONFIG_REG		RFU		Energy Harvesting Configuration (see Section 8.1.4.7)
A8h	10A8h	ED_CONFIG_REG		RFU		Event detection functionality (see Section 8.1.4.8)
A9h	10A9h	I2C_TARGET_	CONFIG_REG	RF	FU	I ² C Target Configuration (see Section 8.1.4.9)
AAh	10AAh	RESET_ GEN_REG		RFU		Reset Register (see Section 8.1.4.10)
ABh	10ABh	ED_INTR_ CLEAR_REG		RFU		Clear Event Detection (see Section 8.1.4.11)
ACh	10ACh	I2C_M_S_ ADD_REG	I2C_M_LEN_REG ALM_ STATUS_REG RFU		RFU	I ² C Controller Configuration (see Section 8.1.4.12)
ADh	10ADh	I2C_M_ STATUS_REG	RFU			I ² C Controller Configuration (see Section 8.1.4.12)
AEh	10AEh		RFU			
AFh	10AFh		RF			

8.1.4.1 Status register

Different status of NTAG 5 boost can be known by reading status register. The status register can be read by READ_CONFG.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Some of the registers may be cleared. Setting status bits to 1b is not possible at all.

Table 92. Status Register Location

Block Address		Byte 0	Byte 1	Byte 2	Byte 3	
NFC	I ² C	byte 0	byte i	Byte 2	Byte 3	
A0h	10A0h	STATUS0_REG	STATUS1_REG	RFU		

Table 93. Status 0 Register

Bit	Name	Acc	ess	Value	Description
DIL	Name	NFC	I ² C	value	Description
				0b	EEPROM is not busy
7	EEPROM_WR_BUSY	R	R	1b	EEPROM is busy (programming cycle ongoing)
				0b	all data written successfully
6	EEPROM_WR_ERROR	R/W	R/W	1b	EEPROM write error happened. This bit needs to be cleared.
5	SRAM_DATA_READY	R	R R 0b 1b	0b	data not yet ready used in pass-through mode
				1b	data ready, used in pass-through mode
4	SYNCH_BLOCK_WRITE	R	R/W	0b	data has NOT been written to SYNCH_ BLOCK
				1b	data had been written to SYNCH_BLOCK
3	SYNCH_BLOCK_READ	R	R/W	0b	data has NOT been read from SYNCH_ BLOCK
				1b	data had been read from SYNCH_BLOCK
2	PT TRANSFER DIR	R	R	0b	I ² C to NFC pass-through direction
	T I_TIVANOI EIV_DIIV			1b	NFC to I ² C pass-through direction
1	VCC SUPPLY OK	R	R	0b	VCC supply not present
	VOO_SUPPLI_UK			1b	VCC supply available
0	NFC_FIELD_OK	R	R	0b	No NFC field present
	INFC_FIELD_OK	K		1b	NFC field present

Table 94. Status 1 Register

	otatao i itogiotoi				
Bit	Name	Access		Value	Description
ы	Name	NFC	I ² C	value	Description
7	VCC BOOT OK	R R		0b	VCC boot not done
/	VCC_BOOT_OK	K	K	1b	VCC boot done
6	NFC BOOT OK	R	R	0b	NFC boot not done
0	NFC_BOOT_OK	ĸ		1b	NFC boot done
5	ACTIVE_NFC_OK	R	R	0b	ALM RF not OK
5				1b	ALM RF OK

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 94. Status 1 Register...continued

Bit	Name	Acc	ess	Value	Description	
ы	Name	NFC	I ² C	value	Description	
4	GPIO1 IN STATUS	R	R	0b	GPIO_1 input is LOW	
4	GI IOI_IN_OIATOS			1b	GPIO_1 input is HIGH	
3	GPIO0 IN STATUS	R R		0b	GPIO_0 input is LOW	
3	GFIOO_IN_STATOS			1b	GPIO_0 input is HIGH	
2	ALM_PLM	ALM PLM R R	R	0b	Only Passive Load Modulation supported	
2	ALW_I LW		ı K	1b	Active Load Modulation supported	
1	I2C IF LOCKED	R	R/W	0b	I ² C Interface not locked by arbiter	
'	IZO_IF_LOCKED		TX/VV	1b	Arbiter locked to I ² C	
0	NEC IE LOCKED	R	R	0b	NFC interface not locked by arbiter	
U	NFC_IF_LOCKED	ĸ		1b	Arbiter locked to NFC	

8.1.4.2 Configuration register

On POR all CONFIG bits (see <u>Section 8.1.3.13</u>) are copied to CONFIG_REG. Some of these features may be changed with CONFIG_REG bits during a session. These features are valid at once. Most of them are just read only from NFC and/or I²C perspective.

Table 95. Configuration Register Location (CONFIG_REG)

Block A	Address	Byte 0	Byte 1	Byte 2	Byte 3	
NFC	I ² C	Dyte 0	Dyte i	Dyte 2	Dyte 3	
A1h	10A1h	CONFIG_0_REG	CONFIG_1_REG	CONFIG_2_REG	RFU	

Table 96. Configuration Definition (CONFIG 0 REG)

Bit	Name	Acc	ess	Value	Description
ы	Name	NFC	I ² C	value	Description
7	SRAM COPY EN	EN R R		0b	SRAM copy on POR disabled
,	SRAW_COFT_EN	K		1b	SRAM copy on POR enabled
6	RFU	R	R	0b	
				0b	NFC interface enabled
5	DISABLE_NFC	R	R/W	1b	NFC interface disabled, no response to NFC commands
4	RFU	R	R	0b	
3	RFU	R	R	0b	
2	RFU	R	R	0b	
1	RFU	R	R R	0b	(default)
				0b	Normal Operation Mode
0	AUTO_STANDBY_MODE_EN	R	R	1b	IC enters standby mode after boot if there is no RF field present automatically.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 97. Configuration Definition (CONFIG_1_REG)

Bit	Name	Acc	ess	Value	Description
DIL	Name	NFC acc.	I ² C acc.	Value	Description
7	RFU	R	R	0b	
6	ALM_PLM	R	R	0b	PLM mode only
Ü	ALIVI_FLIVI	K	K	1b	ALM mode in case of V _{CC} supply
5				00b	I ² C target
3				01b	I ² C controller
	USE_CASE_CONF	R	R	10b	GPIO/PWM
4				11b	All host interface functionality disabled and pads are in 3-state mode
3		R	R/W	00b	Normal Mode
3	ADDITED MODE			01b	SRAM mirror mode
2	ARBITER_MODE	K		10b	SRAM pass through mode
2				11b	SRAM PHDC mode
1	CDAM ENADLED	R	В	0b	SRAM is not accessible
ı	SRAM_ENABLED	K	R	1b	SRAM is accessible
0	DT TDANSEED DID	В	R/W	0b	Data transfer direction is I ² C to NFC
U	PT_TRANSFER_DIR	R		1b	Data transfer direction is NFC to I ² C

Table 98. Configuration Definition (CONFIG_2_REG)

Bit	Name	Access		Value	Description
		NFC acc. I ² C acc			
7				00b	Receiver disabled
,	GPIO1_IN	R	R	01b	Plain input with weak pull-up
6	GI IO1_IIV			10b	Plain input
0				11b	Plain input with weak pull-down
5				00b	Receiver disabled
3	GPIO0_IN	R	R	01b	Plain input with weak pull-up
4				10b	Plain input
7				11b	Plain input with weak pull-down
3	EXTENDED_COMMANDS_	R	R	0b	Extended commands are disabled
3	SUPPORTED			1b	Extended commands are supported
2	LOCK_BLOCK_COMMAND_	R	R	0b	Lock block commands are disabled
2	SUPPORTED			1b	Lock block commands are supported
1	GPIO1 SLEW RATE	R	R	0b	Low-Speed GPIO
'	GPIO1_SLEW_KATE			1b	High-Speed GPIO
0	GPIO0_SLEW_RATE	R	R	0b	Low-Speed GPIO

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 98. Configuration Definition (CONFIG_2_REG)...continued

Bit	Name	Access		Value	Description
		NFC acc.	I ² C acc.		
				1b	High-Speed GPIO

8.1.4.3 Synchronization block register

The terminator block maybe changed during one session from both interfaces (see <u>Section 8.1.3.14</u>). Both interfaces do have read and write access.

8.1.4.4 Pulse Width Modulation and GPIO configuration register

These session register bytes define the various configurations for GPIO/PWM use case (see <u>Section 8.1.3.13</u>). From NFC perspective IN_STATUS bits are read only, all others maybe changed during a session. From I²C perspective, all bits are read only. For details refer to <u>Section 8.3.3</u> and <u>Section 8.3.4</u>.

Table 99. PWM and GPIO Configuration Register Location (PWM_GPIO_CONFIG_REG)

	Block Address NFC I ² C		Byte 0	Byte 1	Byte 2	Byte 3
			Byte 0 Byte 1		Dyte 2	byte 3
	A3h	10A3h	PWM_GPIO_ CONFIG_0_REG	PWM_CONFIG_ 1_REG	RF	₹U

Table 100. PWM and GPIO Configuration Register Definition (PWM_GPIO_CONFIG_0_REG)

Bit	Name	Acc	Access		Description
		NFC acc.	I ² C acc.		
7	ODA ODIOA OLIT OTATUO	R/W	R	0b	Output status on pad is LOW
,	SDA_GPIO1_OUT_STATUS	IX/VV		1b	Output status on pad is HIGH
6	SCL_GPIO0_OUT_STATUS	R/W	R	0b	Output status on pad is LOW
	002_01100_001_01A100	1000	1	1b	Output status on pad is HIGH
5	SDA_GPIO1_SDA_IN_STATUS	R	R	0b	Input status
	SDA_GFIOT_SDA_IN_STATOS	K		1b	input status
4	SCL_GPIO0_IN_STATUS	R	R	0b	Input status
·	002_01100_111_0171100			1b	input status
3	SDA_GPIO1	R/W	R	0b	Output
		1,411		1b	Input
2	SCL_GPIO0	R/W	R	0b	Output
	002_01 100	1000		1b	Input
1	SDA_GPIO1_PWM1	R/W	R	0b	GPIO
	05/(_01 10 1_1 WWII	17/77		1b	PWM
0	SCL_GPIO0_PWM0	R/W	R	0b	GPIO
	SOL_GPIOU_PVVIVIU			1b	PWM

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 101. PWM and GPIO Configuration Register Definition (PWM_GPIO_CONFIG_1_REG)

Bit	Name	Acc	ess	Value	Description	
		NFC Acc.	I ² C Acc.			
7	PWM1_PRESCALE	R/W	R	00b	Pre-scalar configuration for PWM1 channel	
6	- FWWII_FRESCALE	FX/VV	K	dob	Pre-scalar configuration for Pyvivi i channel	
5	DIAMAG PRECOALE	DAM	Б	001-	Description for DWM or bound	
4	PWM0_PRESCALE	R/W	R	00b	Pre-scalar configuration for PWM0 channel	
2	-PWM1_RESOLUTION_CONF	R/W	R	00b	6-bit resolution	
3				01b	8-bit resolution	
2				10b	10-bit resolution	
2				11b	12-bit resolution	
4				00b	6-bit resolution	
1	DWMO DECOLUTION COME	DAM	R	01b	8-bit resolution	
0	PWM0_RESOLUTION_CONF	R/W		10b	10-bit resolution	
0				11b	12-bit resolution	

8.1.4.5 Pulse Width Modulation duty cycle register

The PWM duty cycle maybe changed during one session from NFC perspective (see Section 8.1.3.16). As long as the I^2C target use case is enabled, these settings can also be done from I^2C perspective.

8.1.4.6 Watch Dog Timer register

Watch Dog Timer register settings are read only (see Section 8.1.3.17).

8.1.4.7 Energy harvesting register

Energy harvesting registers may be used to enable energy harvesting during one NFC session. In this case, EH_ENABLE bit of EH_CONFIG byte in block 3Dh is set to 0b. Required EH_VOUT_I_SEL and EH_VOUT_V_SEL need to be set in that EH_CONFIG byte. Desired energy harvesting mode (EH_MODE) needs to be configured in CONFIG_0 byte of block 37h. In case of energy harvesting is enabled already during boot (EH_ENABLE bit of EH_CONFIG is 1b), or energy harvesting is not used at all, this register byte gives no information.

Setting EH_TRIGGER to 1b is needed to trigger power detection.

Polling for bit EH_LOAD_OK should be used to check, if sufficient energy is available. Only if EH_LOAD_OK = 1b, energy harvesting may be enabled via session registers by writing 09h to this byte.

There is only read only access from I²C perspective.

Details can be found in energy harvesting section (see <u>Section 8.5</u>).

Table 102. Energy Harvesting Configuration Register Location (EH_CONFIG_REG)

Block A	ddress	Byte 0	Byte 1	Byte 2	Byte 3	
NFC	I ² C	Dyte 0	Dyte i	Dyte 2	Dyte 3	
A7h	10A7h	EH_CONFIG_REG		RFU		

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 103. Energy Harvesting Register Value Definition EH_CONFIG_REG)

		Acc	Access			
Bit	Bit Name		I ² C Acc.	Value	Description	
				0b	Field is not sufficient to provied configured power on V _{OUT} . Do not enable energy harvesting.	
7	EH_LOAD_OK	R	R	1b	Minimum desired energy available. V _{OUT} may be enabled. As soon as EH_ ENABLE is set to 1b, this bit gets cleared automatically.	
6 to 4	RFU	R	R			
3	EH_TRIGGER	R/W	R	0b	When reading, this byte this bit is RFU and the value is undefined and may be 0b or 1b.	
				1b	When writing to this byte, this bit needs to be set to 1b always	
2 to 1	RFU	R	R			
0	EH ENABLE	R/W	R	0b	Energy Harvesting disabled (default)	
		14,44		1b	Energy Harvesting enabled	

8.1.4.8 Event detection register

Event detection and field detection functionality define the behavior of the ED pin depending on various events. Indicated event may be changed during one session from both interfaces. More details can be found in ED section (see <u>Section 8.3.2</u>).

8.1.4.9 I²C target register settings

I²C target settings can be read out from both interfaces.

I²C interface can be disabled via NFC interface only. Repeated start functionality can be enabled via I²C interface only.

Table 104. I²C Target Configuration Register Location

Blo	ock Address		Byte 0	Byte 1	Byte 2	Byto 2	
NFC	C I ²	² C	Byte 0	byte i	byte 2	Byte 3	
A9h	10	A9h	I2C_TARGET_ ADDR_REG	I2C_TARGET_ CONFIG_REG	RF	=U	

Table 105. I²C Target Configuration Definition (I2C TARGET ADDR REG)

Bit	Name	Access		Value	Description	
ы	Name	NFC	I ² C	value	Description	
7	RFU	R	R	0b		
6 to 0	I ² 2_TARGET_ADDR	R	R	54h	I ² C target address used in target configuration	

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 106. I²C Target Configuration Definition (I2C_TARGET_CONFIG_REG)

Bit	Name	Acc	ess	Value	Description
		NFC	I ² C		
7 to 5	RFU	R	R	000b	
4	I2C_WDT_EXPIRED	R	R	0b	WDTdid not expire in previous transaction
				1b	Previous transaction was not successful. WDT expired. This bit gets cleared automatically, when new transaction is triggered.
3	I2C_SOFT_RESET	R/W	R/W	0b	Setting this bit to 1b, resets the I ² C state machine and relases th SCL/SDA lines. This bit gets cleared automatically.
2	I2C_S_REPEATED_	R	R/W	0b	Target does not reset if repeated start is received (Default)
2	2 START			1b	I ² C target resets internal state machine on repeated start
1	RFU	R	R	0b	
0	DISABLE_I ² C (see	R/W	R	0b	I ² C interface enabled (default)
	Section 8.3.1.1.6)			1b	I ² C interface disabled

8.1.4.10 System reset generation

System reset can be generated by both the interfaces by writing to RESET_GEN_REG register using WRITE CONFIG command (see <u>Section 8.2.4.2.2</u>). Writing E7h will trigger the system reset. This byte gets automatically reset after the system reset.

Table 107. RESET_GEN_REG location

	Block A	ddress	Byte 0	Byte 1	Byte 2	Byte 3	
Ì	NFC	I ² C	byte 0	byte i	Byte 2		
	AAh	10AAh	RESET_GEN_REG		RFU		

8.1.4.11 Clear event detection register

Event detection pin is cleared i.e. released when writing 01h to the Clear Event Detection Register from NFC or I²C interface. The bit gets cleared after releasing the ED pin automatically. Other values are RFU.

Table 108. ED_INTR_CLEAR_REG location

Bloc	k Address	Puto 0	Puto 4	Byte 2	Byte 3
NFC	I ² C	Byte 0	Byte 1	Byte 2	Byte 3
ABh	10ABh	ED_INTR_ CLEAR_REG		RFU	

8.1.4.12 I²C controller status registers

 I^2C controller status can be checked by reading I^2C controller session register bits from NFC perspective. There is no write access to these registers. Details can be found in I^2C controller section.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Note: In I²C controller mode there is no access to the registers from I²C perspective. As ALM_STATUS register is only accessible from I²C perspective, lookup table for ALM needs to be filled before switching to controller mode.

Table 109. I²C Controller Configuration Register Location

Block A	Address	Byte 0	Byte 1	Byte 2	Byte 3	
NFC	I ² C	Byte 0	Dyte i	Dyte 2		
ACh	10ACh	I2C_M_S_ADD_REG	I2C_M_LEN_REG	ALM_STATUS_REG	RFU	
ADh	10ADh	I2C_M_STATUS_REG	RFU			

Table 110. I²C Target Address used in I²C controller transaction (I2C_M_S_ADD_REG)

Bit	Name	Acc	Access		Description
		NFC	I ² C		
7	I2C_M_RS_EN	R	R	0b	STOP condition generated at the end of transaction
				1b	no STOP condition generated
6 to 0	I2C_M_S_ADD	R	R	00h	I ² C target of last addressed target

Table 111. I²C Controller Data Length Definition (I2C M LEN REG)

Bit	Name	Value	Description
7 to 0	I2C_M_LEN_REG		Codes the data length written to or read from I ² C target during last I ² C transaction. Data length in bytes is I2C_M_LEN_REG plus 1.

Table 112. I²C Controller Status Definition (I2C M STATUS REG)

		Acc	ess		
Bit	Name	NFC	I ² C	Value	Description
7 to 4	RFU	R	R	0000b	
3		R	R	0b	WDT did not expire in last transaction
	I2C_M_WDT_EXPIRED			1b	WDT expired in last transaction. This bit resets automatically, when new transaction is triggered.
2 to 1		R	R	00b	Reset value, automatically when new transaction starts
	I2C_M_TRANS_STATUS			01b	Address NAK
				10b	Data NAK
				11b	Transaction successful
0	I2C M BUSY	R	R	0b	I ² C Controller interface ready. No transaction ongoing
	IZC_IVI_DUST			1b	I ² C Controller interface busy. Transaction ongoing

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

8.1.4.13 ALM status registers

ALM status register maybe used to read back field digitization value from I²C perspective. There is no write access to this register.

Note: From NFC perspective ALM STATUS REG is RFU.

Table 113. ALM Status Register Location (ALM_STATUS_REG)

		-				
Block Address		Byte 0	Byte 1	Byte 2	Byte 3	
NFC	I ² C	Dyte 0	Dyte i	Dyte 2	Буте 3	
ACh	10ACh	I2C_M_S_ADD_REG	I2C_M_LEN_REG	ALM_STATUS_REG RFU from NFC perspective	RFU	

Table 114. ALM Status Register (ALM STATUS REG)

Bit	Name	Value	Description
7 to 4	RFU	0000b	
3 to 0	FIELD_DIGIT	0000b	ALM field digitization input

8.1.5 **SRAM**

For frequently changing data, a volatile memory of 256 bytes with unlimited write endurance is built in. The 256 bytes are mapped in a similar way as done in the EEPROM, i.e., 256 bytes are seen as 64 pages of 4 bytes.

SRAM is only available when supplied by V_{CC} and SRAM_ENABLE bit is set to 1b.

The SRAM can be mirrored in the User Memory from block 00h to 3Fh for access from both interfaces as illustrated in the table below. This allows using NFC Forum read and write commands to access the SRAM.

The lock block condition (e.g. user EEPROM blocks are set to read-only) is not valid for the mirrored SRAM.

The access conditions (e.g. first blocks of user EEPROM are password protected) are valid for the mirrored SRAM, too, for both interfaces.

The access conditions for READ SRAM and WRITE SRAM commands can be restricted with SRAM_CONF_PROT security bits.

From I²C perspective, SRAM is located in blocks 2000h to 203Fh and can be accessed at any time without any protection.

Note: SRAM values are not initialized during boot and may have arbitrary data.

Table 115. SRAM mirroring

Block A	Block Address		Byte 1	Byte 2	Byte 3	Description
NFC	I ² C					
00h	0000h	SRAM				
01h	0001h	:	:	:	:	When SRAM is mirrored to
02h	0002h					user memory, READ and
03h	0003h					WRITE commands address SRAM
:	:					OT O TWI
3Fh	003Fh		SRAM			

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 115. SRAM mirroring...continued

Block Address		Byte 0	Byte 1	Byte 2	Byte 3	Description
NFC	I ² C					
40h	0040h	EEPROM				From block 40h onwards,
:	:	:	:	:	:	READ and WRITE commands always address EEPROM
1FEh	01FEh	EEPROM				
1FFh	N/A	C0	C1	00h	PROT	Counter

In the pass-through mode, READ and WRITE SRAM commands should be used to transfer data between the two interfaces.

After POR the SRAM can be pre-loaded with default data (e.g. NDEF message) depending on SRAM_COPY_ENABLE bit in CONFIG register. If SRAM_COPY_ENABLE bit and SRAM_ENABLE both are set to 1b, then the copy feature will be triggered after POR. The startup time depends upon the number of bytes (maximum 64) to be copied.

In the table below, an example is illustrated where 48 bytes are copied to the SRAM on POR.

Table 116. SRAM mirroring with default content

Block	Byte 0	Byte 1	Byte 2	Byte 3	Description		
0	SRAM_DEF00	SRAM_DEF01	SRAM_DEF02	SRAM_DEF03	When SRAM is mirrored and		
:		SRAM	1_DEF		SRAM_COPY_BYTES is equal to 30h, 48 bytes will be copied to		
11	SRAM_DEF44	SRAM_DEF45	SRAM_DEF46	SRAM_DEF47	SRAM after POR automatically		
12		SR	AM		Rest of mirrored SRAM will be		
:	:	:	:	:	random data		
63		SR	AM				
64		EEPI	ROM		From block 64 onwards again		
:	:	:	:	:	EEPROM will be addressed		
510	EEPROM						
511	C0	C1	00h	PROT	Counter		

Table 117. SRAM COPY BYTES (SRAM_COPY_BYTES)

Block Address		Byte 0	Byte 1	Byte 2	Byte 3	
NFC	I ² C	byte 0	byte i	Byte 2	Byte 3	
3Ch	103Ch	WDT_CONFIG		WDT_ENABLE	SRAM_COPY_BYTES	

Table 118. SRAM COPY BYTES Definition

Bit	Name	Description
7 to 6	RFU	RFU
5 to 0		6-bit length field. Defines the number of bytes (SRAM_COPY_BYTES + 1) to be copied from CONFIG memory to SRAM at startup. Maximum is 3Fh. Higher values are RFU. Default all bits are 0b.

NTA5332

All information provided in this document is subject to legal disclaimers.

© 2025 NXP B.V. All rights reserved.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 119. SRAM Default Content location

Block Address		Byte 0	Byte 1	Byte 2	Byte 3	
NFC	I ² C					
45h	1045h	SRAM_DEF00	SRAM_DEF01	SRAM_DEF02	SRAM_DEF03	
		SRAM_DEF				
54h	1054h	SRAM_DEF60	SRAM_DEF61	SRAM_DEF62	SRAM_DEF63	

8.2 NFC interface

The definition of the NFC interface is according to the ISO/IEC 15693 [5] and NFC Forum Type 5 Tag [2]. The details of passive and active communication mode are described in <u>Section 8.2.1</u> and <u>Section 8.2.2</u>.

Supported bitrates for different modes and communication directions are listed in tables below.

Table 120. Bit rates from reader to tag

Mode	Condition	1.66 kbps	26 kbps
passive	NFC only	yes	yes
passive	V _{CC} supplied	yes	yes
active	V _{CC} supplied	no	yes

Table 121. Bit rates from tag to reader

Mode	Condition	6 kbps	26 kbps	53 kbps
passive	single subcarrier	yes	yes	yes
passive	dual subcarrier	yes	yes	no
active	single subcarrier	no	yes	yes
active	dual subcarrier	no	no	no

8.2.1 Passive communication mode

Main uses cases for passive communication mode are Smart Metering, Home automation and in the box configuration. With antenna sizes of Class 4 or bigger, energy harvesting on the one side and long-distance read/write access to the EEPROM is possible in a very efficient way.


8.2.2 Active communication mode

When the application has only limited space for the antenna and/or metal environment is close by, only with active communication mode a reasonable reading/writing distance can be achieved. In this mode, the IC needs to be V_{CC} and V_{CC_TX} supplied. However, the NTAG 5 boost is designed very energy efficiently. Average standby current for NFC sensing is typically less than 10 μ A. In hard power down the IC consumes typically less than 0.25 μ A.

The output driver as illustrated below is a simple push-pull implementation directly connected to V_{CC_TX} . When in receive mode, it is configured to high Z.

Design guidelines and recommendations how to find proper matching circuit can be found in the Antenna Design Guide application note AN12339 [12].


NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

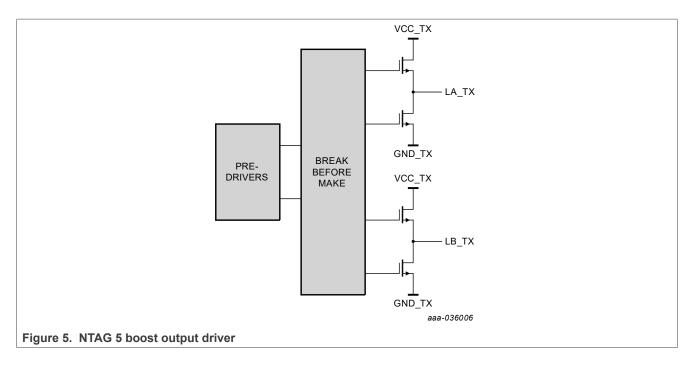

8.2.3 State diagram and state transitions

The state diagram illustrates the different states and state transitions of NTAG 5 boost.

The SELECTED SECURE state is only available, when AES security is enabled.

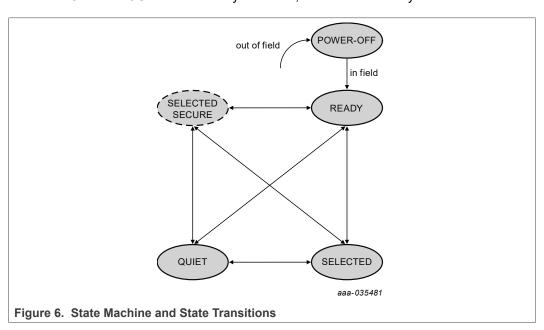

8.2.3.1 POWER-OFF state

8.2.3.1.1 State transitions from and to POWER-OFF state

If NFC field is switched off or below, $H_{\mbox{\scriptsize MIN}}$ NTAG 5 boost goes to POWER-OFF state.

NTA5332

All information provided in this document is subject to legal disclaimers.

© 2025 NXP B.V. All rights reserved.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

POWER-OFF state will be left to READY state no later than 1 ms after NTAG 5 boost is powered by an NFC field greater than H_{MIN} .

Note: When loading default data to mirrored SRAM, start-up time, dependent on the pre-loaded bytes, might be greater than 1 ms.

8.2.3.2 READY state

8.2.3.2.1 Transitions between READY and SELECTED state

Transition from READY to SELECTED state is done when

receiving a SELECT command with a matching UID

8.2.3.2.2 Transitions between READY and QUIET state

Transition from READY to QUIET state is done when

- · receiving a STAY QUIET command with a matching UID
- receiving a (FAST) INVENTORY READ command (extended mode) with Quiet Flag set

8.2.3.2.3 Transitions between READY and SELECTED SECURE state

Transition from READY to SELECTED SECURE state is done when

mutual authentication with AUTHENTICATE command with a matching UID was successful

8.2.3.2.4 Commands which stay in READY state

NTAG 5 boost stays in READY state when

· receiving any other command where Select Flag is not set

8.2.3.3 SELECTED state

8.2.3.3.1 Transitions between SELECTED and READY state

Transition from SELECTED to READY state is done by

- receiving a RESET TO READY command where Select Flag is set
- · receiving a SELECT command with a different UID

8.2.3.3.2 Transitions between SELECTED and QUIET state

Transition from SELECTED to QUIET state is done when

· receiving a STAY QUIET command with a matching UID

8.2.3.3.3 Transitions between SELECTED and SELECTED SECURE state

Transition from SELECTED to SELECTED SECURE state is done by

mutual authentication with AUTHENTICATE command with Select Flag set was successful

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

8.2.3.3.4 Commands which stay in SELECTED state

NTAG 5 boost stays in SELECTED state when

· receiving any other command where Select Flag is set

8.2.3.4 SELECTED SECURE state

8.2.3.4.1 Transitions between SELECTED SECURE and READY state

Transition from SELECTED SECURE to READY state is done by

- receiving a RESET_TO_READY command where Select_Flag is set
- · receiving a SELECT command with a different UID
- · receiving a CHALLENGE command
- · receiving a new AUTHENTICATE command

8.2.3.4.2 Transitions between SELECTED SECURE and QUIET state

Transition from SELECTED to QUIET state is done when

receiving a STAY QUIET command with a matching UID

8.2.3.4.3 Transitions between SELECTED SECURE and SELECTED state

Transition from SELECTED to SELECTED SECURE state is done by

· receiving a SELECT command with a matching UID

8.2.3.4.4 Commands which stay in SELECTED SECURE state

NTAG 5 boost stays in SELECTED SECURE state when

- · receiving READBUFFER command
- · receiving any other command where Select_Flag is set

8.2.3.5 QUIET state

8.2.3.5.1 Transitions between QUIET and READY state

Transition from QUIET to READY state is done by

· receiving a RESET TO READY command

8.2.3.5.2 Transitions between QUIET and SELECTED state

Transition from QUIET to SELECTED state is done by

· receiving a SELECT command with a matching UID

8.2.3.5.3 Transitions between QUIET and SELECTED SECURE state

Transition from QUIET to SELECTED SECURE state is done when

• mutual authentication with AUTHENTICATE command with a matching UID was successful

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

8.2.3.5.4 Commands which stay in QUIET state

NTAG 5 boost stays in QUIET state when

· receiving any other command where Addressed Flag is set AND Inventory Flag is not set

8.2.4 Command set

ISO/IEC 15693 mandatory commands are

- INVENTORY
- STAY QUIET

NFC Forum Type 5 Tag mandatory commands are

- READ SINGLE BLOCK
- WRITE SINGLE BLOCK
- LOCK SINGLE BLOCK

On top of those, all optional commands of ISO/IEC 15693 are implemented. Several customer-specific commands are implemented to, e.g., improve overall transaction time. These custom commands all use NXP manufacturer code 04h.

A complete list of all supported commands is given in below table.

Table 122. NFC command set supported by NTAG 5 boost

Code	ISO/IEC 15693	NFC Forum T5T	Command name
01h	Mandatory	Mandatory	INVENTORY (see ISO/IEC 15693 [5] and Digital Protocol [1])
02h	Mandatory	Mandatory	STAY QUIET (see ISO/IEC 15693 [5]) and Type 5 Tag [2] - SLPV_REQ)
20h	Optional	Mandatory	READ SINGLE BLOCK (see ISO/IEC 15693 [5] and Type 5 Tag [2] - READ_SINGLE_BLOCK_REQ)
21h	Optional	Mandatory in READ/WRITE state	WRITE SINGLE BLOCK (see ISO/IEC 15693 [5] and Type 5 Tag [2] - WRITE_SINGLE_BLOCK_REQ)
22h	Optional	Optional	LOCK BLOCK (see ISO/IEC 15693 [5] and Type 5 Tag [2] - LOCK_SINGLE_BLOCK_REQ)
23h	Optional	Optional	READ MULTIPLE BLOCKS (ISO/IEC 15693 [5] and Type 5 Tag [2] - READ_MULTIPLE_BLOCK_REQ)
25h	Optional	Optional	SELECT (see ISO/IEC 15693 [5] and Type 5 Tag [2] - SELECT_REQ)
26h	Optional	Not defined	RESET TO READY (see ISO/IEC 15693 [5])
27h	Optional	Not defined	WRITE AFI (see ISO/IEC 15693 [5])
28h	Optional	Not defined	LOCK AFI (see ISO/IEC 15693 [5])
29h	Optional	Not defined	WRITE DSFID (see ISO/IEC 15693 [5])
2Ah	Optional	Not defined	LOCK DSFID (see ISO/IEC 15693 [5])
2Bh	Optional	Not defined	GET SYSTEM INFORMATION (see ISO/IEC 15693 [5])
2Ch	Optional	Not defined	GET MULTIPLE BLOCK SECURITY STATUS (see ISO/IEC 15693 [5])
2Dh	Optional	Not defined	FAST READ MULTIPLE BLOCKS (see ISO/IEC 15693 [5])

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 122. NFC command set supported by NTAG 5 boost...continued

Code	ISO/IEC 15693	NFC Forum T5T	Command name		
30h	Optional	Mandatory when supporting 2 byte addressing	EXTENDED READ SINGLE BLOCK (see ISO/IEC 15693 [5] and Type 5 Tag [2] - EXTENDED_READ_SINGLE_BLOCK_REQ)		
31h	Optional	Mandatory when supporting 2 byte addressing in READ/WRITE state	EXTENDED WRITE SINGLE BLOCK (see ISO/IEC 15693 [5 and Type 5 Tag [2] - EXTENDED_WRITE_SINGLE_BLOCK_REQ)		
32h	Optional	Optional	EXTENDED LOCK BLOCK (see ISO/IEC 15693 [5] and Type 5 Tag [2] - EXTENDED_LOCK_SINGLE_BLOCK_REQ)		
33h	Optional	Optional	EXTENDED READ MULTIPLE BLOCK (ISO/IEC 15693 [5] and Type 5 Tag [2] - EXTENDED_READ_MULTIPLE_BLOCK_REQ)		
35h	Optional	Not defined	AUTHENTICATE (see ISO/IEC 15693 [5]) is only available in AES mode		
39h	Optional	Not defined	CHALLENGE (see ISO/IEC 15693 [5]) is only available in AES mode		
3Ah	Optional	Not defined	READBUFFER (see ISO/IEC 15693 [5]) is only available in AES mode		
3Bh	Optional	Not defined	EXTENDED GET SYSTEM INFORMATION (see ISO/IEC 15693 [5])		
3Ch	Optional	Not defined	EXTENDED GET MULTIPLE BLOCK SECURITY STATUS (see ISO/IEC 15693 [5])		
3Dh	Optional	Not defined	FAST EXTENDED READ MULTIPLE BLOCKS (see ISO/IEC 15693 [5])		
A0h	Custom	Not defined	INVENTORY READ (see Section 8.2.4.5.1)		
A1h	Custom	Not defined	FAST INVENTORY READ (see Section 8.2.4.5.2)		
A2h	Custom	Not defined	SET EAS (see Section 8.2.4.9.5)		
A3h	Custom	Not defined	RESET EAS (see Section 8.2.4.9.6)		
A4h	Custom	Not defined	LOCK EAS (see Section 8.2.4.9.7)		
A5h	Custom	Not defined	EAS ALARM (see Section 8.2.4.9.8)		
A6h	Custom	Not defined	PROTECT EAS/AFI (see Section 8.2.4.9.9)		
A7h	Custom	Not defined	WRITE EAS ID (see Section 8.2.4.9.10)		
ABh	Custom	Not defined	GET NXP SYSTEM INFORMATION (see Section 8.2.4.9.14)		
B2h	Custom	Not defined	GET RANDOM NUMBER (see Section 8.2.4.3.1)		
B3h	Custom	Not defined	SET PASSWORD (see Section 8.2.4.3.2)		
B4h	Custom	Not defined	WRITE PASSWORD (see Section 8.2.4.3.3)		
B5h	Custom	Not defined	LOCK PASSWORD (see Section 8.2.4.3.4)		
B6h	Custom	Not defined	PROTECT PAGE (see Section 8.2.4.3.6)		
B7h	Custom	Not defined	LOCK PAGE PROTECTION CONDITION (see Section 8.2.4.3.7)		
B9h	Custom	Not defined	DESTROY (see Section 8.2.4.3.8)		
BAh	Custom	Not defined	ENABLE NFC PRIVACY (see Section 8.2.4.3.9)		
BBh	Custom	Not defined	64 BIT PASSWORD PROTECTION (see Section 8.2.4.3.5)		
BDh	Custom	Not defined	READ SIGNATURE (see Section 8.2.4.7.1)		
		1	1		

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 122. NFC command set supported by NTAG 5 boost...continued

Code	ISO/IEC 15693	NFC Forum T5T	Command name
C0h	Custom	Not defined	READ CONFIGURATION (see Section 8.2.4.2.1)
C1h	Custom	Not defined	WRITE CONFIGURATION (see Section 8.2.4.2.2)
C2h	Custom	Not defined	PICK RANDOM UID (see Section 8.2.4.9.15)
D2h	Custom	Not defined	READ SRAM (see Section 8.2.4.6.1)
D3h	Custom	Not defined	WRITE SRAM (see Section 8.2.4.6.2)
D4h	Custom	Not defined	WRITE I2C (see Section 8.2.4.8.1)
D5h	Custom	Not defined	READ I2C (see Section 8.2.4.8.2)

All command/responses are sent/received in the request/response format as defined in ISO/IEC 15693 [5] and NFC Forum Type 5 Tag specification [2].

8.2.4.1 Commands for state transitions

Following commands are implemented for all possible state transitions according to ISO/IEC 15693.

- INVENTORY
- STAY QUIET
- SELECT
- RESET TO READY

On top of these commands, NTAG 5 boost offers

- INVENTORY READ in extended mode (see Section 8.2.4.5.1)
- FAST INVENTORY READ in extended mode (see Section 8.2.4.5.2)
- AUTHENTICATE to move to SELECTED SECURE state (see Section 8.2.4.4.4)

8.2.4.2 Configuration operations

8.2.4.2.1 READ CONFIGURATION

Command code = C0h

The READ CONFIG command returns configuration memory content starting with the first block defined by the Block Address and reads Number of Blocks + 1 configuration blocks.

Access to the configuration blocks depends on the status and definition of the related block within the configuration memory (see <u>Section 8.1.3</u>).

If one of the requested configuration blocks is not accessible due to the actual status, NTAG 5 boost will respond with Error_flag set.

A READ CONFIG command can read one or multiple blocks of the following areas of the configuration memory within one command execution:

- Block 00h to block 17h
- Keys can only be read separately if "NOT active" or after a mutual authentication with a key with the Crypto Config privilege set in "active" state

Key0: block 20h-23h Key1: block 24h-27h Key2: block 28h-2Bh

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Key3: block 2Ch-2Fh

· rest of configuration memory

Only Option flag = 0b is supported.

Table 123. READ CONFIG request format

Flags	READ CONFIG	Manuf. code	UID	Block Address	Number of Blocks	CRC16
8 bits	8 bits	8 bits	64 bits (optional)	8 bits	8 bits	16 bits

Table 124. READ CONFIG response format when Error_flag is NOT set

Flags	Data	CRC16
8 bits	(Number of blocks + 1) times 32 bits	16 bits

Table 125. READ CONFIGURATION response format when Error_flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

8.2.4.2.2 WRITE CONFIGURATION

Command code = C1h

The WRITE CONFIG command writes the 4 byte data to the requested block address of the configuration memory.

Access to the configuration blocks depends on the status and definition of the related block within the configuration memory (see Section 8.1.3).

If the requested configuration block is not write accessible due to the actual status, NTAG 5 boost will respond with Error_flag set.

The timing of the command is write alike.

Option_flag = 0b and Option_flag = 1b is supported and is in accordance with ISO/IEC 15693 write-alike commands.

Table 126. WRITE CONFIG request format

Flags	WRITE CONFIG	Manuf. code	UID	Block Address	Data	CRC16
8 bits	8 bits	8 bits	64 (optional)	8 bits	32 bits	16 bits

Table 127. WRITE CONFIG response format when Error_flag is NOT set

Flags	CRC16
8 bits	16 bits

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 128. WRITE CONFIG response format when Error_flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

8.2.4.3 PWD Authentication

NTAG 5 boost can be configured to be used for plain password authentication.

8.2.4.3.1 GET RANDOM NUMBER

Command code = B2h

The GET RANDOM NUMBER command is required to receive a 16-bit random number. The passwords that will be transmitted with the SET PASSWORD, ENABLE/DISABLE NFC PRIVACY and DESTROY commands have to be calculated with the password and the random number (see Section 8.2.4.3.2).

Table 129. GET RANDOM NUMBER request format

Flags	GET RANDOM NUMBER	Manuf. code	UID	CRC16
8 bits	8 bits	8 bits	64 bits (optional)	16 bits

Table 130. GET RANDOM NUMBER response format when Error flag is NOT set

Flags	Random_Number	CRC16
8 bits	16 bits	16 bits

Table 131. GET RANDOM NUMBER response format when Error_flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

8.2.4.3.2 SET PASSWORD

Command code = B3h

The SET PASSWORD command enables the different passwords to be transmitted to the IC to access the different protected functionalities of the following commands. The SET PASSWORD command has to be executed just once for the related password if the IC is powered.

Remark: The SET PASSWORD command can only be executed in addressed or selected mode and the timing of the SET PASSWORD command is write alike.

The XOR password has to be calculated with the password and two times the received random number from the last GET RANDOM NUMBER command:

XOR_Password[31:0] = Password[31:0] XOR {Random_Number[15:0], Random_Number[15:0]}.

The different passwords are addressed with the password identifier.

Only Option_flag = 0b is supported.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 132. SET PASSWORD request format

Flags	SET PAS SWORD	Manuf. code	UID	Password identifier	XOR password	CRC16
8 bits	8 bits	8 bits	64 bits (optional)	8 bits	32 bits	16 bits

Table 133. Password Identifier

Password Identifier	Password	
01h	Read	
02h	Write	
04h	DISABLE NFC PRIVACY, see Section 8.2.4.3.9	
08h	Destroy	
10h	EAS/AFI	
40h	Read from AREA_1	
80h	Write to AREA_1	

Table 134. SET PASSWORD response format when Error_flag is NOT set

Flags	CRC16
8 bits	16 bits

Table 135. SET PASSWORD response format when Error_flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

Remark: If the IC receives an invalid password, it will not execute any following command until a Power-On Reset (POR) (NFC reset) is executed.

8.2.4.3.3 WRITE PASSWORD

Command code = B4h

The WRITE PASSWORD command enables a new password to be written into the related memory if the related old password has already been transmitted with a SET PASSWORD command and the addressed password is not locked (see <u>Section 8.2.4.3.4</u>).

Remark: The WRITE PASSWORD command can only be executed in addressed or SELECTED mode. The new password takes effect immediately which means that the new password has to be transmitted with the SET PASSWORD command to access protected blocks/pages.

The different passwords are addressed with the password identifier as defined in Table 133.

The timing of the command is write-alike.

Option_flag = 0b and Option_flag = 1b is supported and is in accordance with ISO/IEC 15693 write-alike commands.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 136. WRITE PASSWORD request format

Flags	WRITE PAS SWORD	Manuf. code	_	Password identifier	Password	CRC16
8 bits	8 bits	8 bits	64 bits (optional)	8 bits	32 bits	16 bits

Table 137. WRITE PASSWORD response format when Error_flag is NOT set

Flags	CRC16
8 bits	16 bits

Table 138. WRITE PASSWORD response format when Error flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

8.2.4.3.4 LOCK PASSWORD

Command code = B5h

The LOCK PASSWORD command enables the addressed password to be locked if the related password has already been transmitted with a SET PASSWORD command. A locked password cannot be changed.

The different passwords are addressed with the password identifier (see Table 133).

The timing of the command is write alike.

Option_flag = 0b and Option_flag = 1b is supported and is in accordance with ISO/IEC 15693 write-alike commands.

Table 139. LOCK PASSWORD request format

Flags	LOCK PAS SWORD	Manuf. code		Password identifier	CRC16
8 bits	8 bits	8 bits	64 bits (optional)	8 bits	16 bits

Table 140. LOCK PASSWORD response format when Error_flag is NOT set

Flags	CRC16
8 bits	16 bits

Table 141. LOCK PASSWORD response format when Error_flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

8.2.4.3.5 64 BIT PASSWORD PROTECTION

Command code = BBh

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

The 64-bit PASSWORD PROTECTION command enables NTAG 5 boost to be instructed that both, Read and Write passwords are required to get access to password protected blocks. This mode can be enabled if the Read and Write passwords have been transmitted first with a SET PASSWORD command.

If the 64-bit password protection is enabled, both passwords are required for read & write access to protected blocks.

Once the 64-bit password protection is enabled, a change back to 32-bit password protection (read and write password) is not possible.

Remark: A retransmission of the passwords is not required after the execution of the 64-bit PASSWORD PROTECTION command.

Remark: The 64-bit PASSWORD PROTECTION does not include the 16-bit counter block.

The timing of the command is write alike.

Option_flag = 0b and Option_flag = 1b is supported and is in accordance with ISO/IEC 15693 write-alike commands.

Table 142. 64 BIT PASSWORD PROTECTION request format

. 3	64 BIT PASSWORD PROTECTION	Manuf. code	UID	CRC16
8 bits	8 bits	8 bits	64 bits (optional)	16 bits

Table 143. 64 BIT PASSWORD PROTECTION response format when Error_flag is NOT set

Flags	CRC16
8 bits	16 bits

Table 144. 64 BIT PASSWORD PROTECTION response format when Error_flag is NOT set

Flags	Error Code	CRC16				
8 bits	8 bits	16 bits				

8.2.4.3.6 PROTECT PAGE

Command code = B6h

The PROTECT PAGE command defines the protection pointer address of the user memory to divide the user memory into two arbitrarily sized pages and defines the access conditions for the two pages.

The protection pointer address defines the base address of the higher user memory segment Page 0-H. All block addresses smaller than the protection pointer address are in the user memory segment Page 0-L.

Table below shows an example of the user memory segmentation with the protection pointer address NFC_PP_AREA_0H 14h.

Remark: In the example below PP_AREA_1 is pointing outside the user memory.

Table 145. Memory organization

Block	Byte 0	Byte 1	Byte 2	Byte 3	Description
00h					Page 0-L
01h					rage 0-L

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 145. Memory organization...continued

Block	Byte 0	Byte 1	Byte 2	Byte 3	Description
02h					
:	:	:	:	:	
12h					
13h					
14h					
15h					Page 0-H
:	:	:	:	:	
1FFh	C0	C1	00	Protection	Counter

Remark: If the protection pointer address is set to block 0, the entire user memory is defined as Page 0-H.

The access conditions and the protection pointer address can be changed under the following circumstances for plain password mode:

- The related passwords (Read and Write password) have been transmitted first with the SET PASSWORD command.
- The page protection condition is not locked (see <a>Section 8.2.4.3.7)

The access conditions and the protection pointer address can be changed under the following circumstances for AES mode:

- The Global Crypto Header is set to "Deactivated" or
- if the Global Crypto Header is not set to "Deactivated" and a valid mutual authentication with a key with read and write privileges has been executed before and the page protection condition is not locked (see Section 8.2.4.3.7).

The timing of the command is write alike.

Option_flag = 0b and Option_flag = 1b is supported and is in accordance with ISO/IEC 15693 write-alike commands.

Table 146. PROTECT PAGE request format

Flags	PROTECT PAGE	Manuf. code	UID	Protection pointer address	Extended protection status	CRC16
8 bits	8 bits	8 bits	64 bits (optional)	8 bits	8 bits	16 bits

Remark: The IC only accepts protection pointer address values from 00h to FFh. The block containing the 16-bit counter is excluded from the standard user memory protection scheme.

Table 147. Extended Protection status byte

Table 141. Extended 1 retodien etatae byte			
Bit	Name	Value	Description
7	RFU	0b	
6	RFU	0b	
5	WH	0b	Page 0-H is not write protected
		1b	Page 0-H is write protected
4	RH	0b	Page 0-H is not read protected

NTA5332

All information provided in this document is subject to legal disclaimers.

© 2025 NXP B.V. All rights reserved.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 147. Extended Protection status byte...continued

Bit	Name	Value	Description
		1b	Page 0-H is read protected
3	RFU	0b	
2	RFU	0b	
1	WL	0b	Page 0-L is not write protected
		1b	Page 0-L is write protected
0	RL	0b	Page 0-L is not read protected
		1b	Page 0-L is read protected

Table 148. Protection status bits definition in plain password mode

WH/WL	RH/RL	32-bit Protection	64-bit Protection
0b	0b	Public	Public
0b	1b	Read and Write protected by the Read password	Read and Write protected by the Read plus Write password
1b	0b	Write protected by the Write password	Write protected by the Read plus Write password
1b	1b	Read protected by the Read password and Write protected by the Read and Write password	Read and Write protected by the Read plus Write password

Table 149. Protection status bits definition in AES mode

WH/WL	RH/RL	Protection
0b	0b	Public
0b	1b	Read and Write protected: Mutual authentication with a key with read privilege is required
1b	0b	Write protected: Mutual authentication with a key with write privilege is required
1b	1b	Read and Write protected: Mutual authentication with a key with read and write privileges is required

Table 150. PROTECT PAGE response format when Error_flag is NOT set

Flags	CRC16
8 bits	16 bits

Table 151. PROTECT PAGE response format when Error_flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

The information about the stored settings of the protection pointer address and access conditions can be read with the GET NXP SYSTEM INFORMATION command (see <u>Section 8.2.4.9.14</u>).

NTA5332

All information provided in this document is subject to legal disclaimers.

© 2025 NXP B.V. All rights reserved.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

8.2.4.3.7 LOCK PAGE PROTECTION CONDITION

Command code = B7h

The LOCK PAGE PROTECTION CONDITON command locks the protection pointer address and the status of the page protection conditions.

The LOCK PAGE PROTECTION CONDITON command can be successfully executed under the following circumstances:

- The Global Crypto Header is set to "Deactivated".
- If the Global Crypto Header is not set to "Deactivated" and a valid mutual authentication with a key with read and write privileges has been executed before.

The timing of the command is write alike.

Option_flag = 0b and Option_flag = 1b is supported and is in accordance with ISO/IEC 15693 write-alike commands.

Table 152. LOCK PAGE PROTECTION CONDITION request format

Flags	LOCK PAGE PRO TECTION CON DITION	Manuf. code		Protection pointer address	CRC16
8 bits	8 bits	8 bits	64 bits (optional)	8 bits	16 bits

Table 153. LOCK PAGE PROTECTION CONDITION response format when Error_flag is NOT set

Flags	CRC16
8 bits	16 bits

Table 154. LOCK PAGE PROTECTION CONDITION response format when Error_flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

Remark: If the transmitted protection pointer address does not match with the stored address the IC will respond according to the error handling.

8.2.4.3.8 **DESTROY**

Command code = B9h

In plain password mode the DESTROY command disables NTAG 5 boost if the destroy password is correct. This command is irreversible and NTAG 5 boost will never respond to any command neither NFC nor I²C again.

The DESTROY command can only be executed in addressed or SELECTED mode.

The XOR password has to be calculated with the password and two times the received random number from the last GET RANDOM NUMBER command:

XOR Password[31:0] = Password[31:0] XOR {Random Number[15:0], Random Number[15:0]}.

The timing of the command is write alike.

Option_flag = 0b and Option_flag = 1b is supported and is in accordance with ISO/IEC 15693 write-alike commands.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Note: In AES mode, Mutual Authentication with Purpose_MAM2 = 1011b needs to be executed to destroy NTAG 5 boost.

Table 155. DESTROY request format

Flags	DESTROY	Manuf. code	UID	XOR password	CRC16
8 bits	8 bits	8 bits	64 bits (optional)	16 bits	16 bits

Table 156. DESTROY response format when Error_flag is NOT set

Flags	CRC16
8 bits	16 bits

Table 157. DESTROY response format when Error_flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

8.2.4.3.9 ENABLE NFC PRIVACY

Command code = BAh

The ENABLE NFC PRIVACY command in plain password mode enables NFC PRIVACY mode (see Section 8.7) for NTAG 5 boost if the Privacy password is correct.

The XOR password has to be calculated with the password and two times the received random number from the last GET RANDOM NUMBER command:

XOR Password[31:0] = Password[31:0] XOR {Random Number[15:0], Random Number[15:0]}.

To get out of the NFC PRIVACY mode, the valid Privacy password has to be transmitted to the IC with the SET PASSWORD command.

The timing of the command is write alike.

Option_flag = 0b and Option_flag = 1b is supported and is in accordance with ISO/IEC 15693 write-alike commands.

Note: In AES mode, Mutual Authentication with Purpose_MAM2 = 1001b needs to be executed to enable the NFC PRIVACY mode for NTAG 5 boost.

Table 158. ENABLE NFC PRIVACY request format

Flags	SET PASSWORD	IC Mfg code	UID	XOR password	CRC16
8 bits	8 bits	8 bits	64 bits optional	32 bits	16 bits

Table 159. ENABLE NFC PRIVACY response format when Error flag is NOT set

	Flags	CRC16
ĺ	8 bits	16 bits

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 160. ENABLE NFC PRIVACY response format when Error_flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

8.2.4.4 AES Authentication

8.2.4.4.1 Introduction

NXP implements a scalable security approach. This means, during lifetime the security level may be changed. In production, NXP configures the IC, that plain password mode is enabled. With the DEV_SEC_CONFIG byte (see <u>Table 65</u>) AES mutual authentication may be activated. Only in case NFC Security is set to AES mode following commands and AES mutual authentication is enabled. To lock the security level, the Security Lock bits need to be set to 010b (see <u>Table 65</u>).

8.2.4.4.2 PROTECT PAGE

See Section 8.2.4.3.6.

8.2.4.4.3 LOCK PAGE PROTECTION CONDITION

See <u>Section 8.2.4.3.7</u>

8.2.4.4.4 AUTHENTICATE

As defined in ISO/IEC 15693 [5] and ISO/IEC 29167-10 [6].

Command code = 35h

CSI code= 00h (AES Crypto Suite)

The AUTHENTICATE command allows the interrogator to perform the following authentication procedures as defined in ISO/IEC 15693 [5]:

- Tag Authentication (TAM1)
- Mutual Authentication (MAM1, MAM2)

After receiving a valid AUTHENTICATE command, NTAG 5 boost calculates the response and as soon as the calculation is finalized, the response with the result of the crypto calculation (b3 flag is set) is sent. Only for tag authentication the calculation result is additionally stored in the response buffer (b2 flag is set).

NTAG 5 boost supports the Crypto Suite AES128 as defined in ISO/IEC 29167-10.

Option_flag = 0b and Option_flag = 1b is supported and is in accordance with ISO/IEC 15693 write-alike commands.

Table 161. AUTHENTICATE request format

Flags	AUTHENTICATE	UID	CSI	Message	CRC16
8 bits	8 bits	64 bits (optional)	8 bits	Depending on TAM1 (96 bit), MAM1 (96 bit) or MAM2 (136 bit)	16 bits

Table 162 defines the response of NTAG 5 boost to an AUTHENTICATE command.

For more detailed information, refer to ISO/IEC 29167-10.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 162. AUTHENTICATE response format when Error_flag is NOT set(in process reply)

Flags	Barker Code	TResponse	CRC16
8 bits (b2 and b3 is set)		Depending on TAM1 (128 bit), MAM1(176 bit) or MAM2 (0 bit)	16 bits

Table 163. AUTHENTICATE response format when Error_flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

Tag Authentication (TAM1)

Table 164 defines the message within the AUTHENTICATE command for tag authentication (TAM1).

For more detailed information, refer to ISO/IEC 29167-10.

Table 164. Message format for TAM1

	AuthMethode	CustomData	TAM1_RFU	KeyID	IChallenge_TAM1
# of bits	2	1	5	8	80
Description	00b	0b	00000b	[7:0]	random interrogator challenge

Table 165 defines the response of NTAG 5 boost to an AUTHENTICATE command.

For more detailed information, refer to ISO/IEC 29167-10.

Table 165. TResponse for TAM1

TResponse TAM1 (128 bit)
AES-ECB-ENC(Key[KeyID].ENC_key,C_TAM1[15:0] TRnd_TAM1[31:0] IChallenge_TAM1[79:0])

Mutual Authentication (MAM1, MAM2)

The mutual authentication is a two-pass authentication procedure. The first AUTHENTICATE command (MAM1) is executing the tag authentication and gets the challenge from NTAG 5 boost. The second AUTHENTICATE command (MAM2) is executing the interrogator authentication.

Table 166 defines the message within the AUTHENTICATE command for mutual authentication (MAM1).

For more detailed information, refer to ISO/IEC 29167-10.

Table 166. Message format for MAM1

	AuthMethode	Step	MAM1_RFU	KeyID	IChallenge_MAM1
# of bits	2	2	4	8	80
Description	10b	00b	0000b	[7:0]	random interrogator challenge

Table 167 defines the response of NTAG 5 boost to an AUTHENTICATE command for MAM1.

For more detailed information, refer to ISO/IEC 29167-10.

Table 167. TReseponse for MAM1

Table 101. The seponse for main
TResponse MAM1 (176 bit)
AES-ECB-ENC(Key[KeyID].ENC_key,C_TAM1[15:0] TChallenge_MAM1[31:0] IChallenge_TAM1[79:0]) TChallenge_MAM1[79:32]

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 168 defines the message within the AUTHENTICATE command for mutual authentication (MAM2).

For more detailed information, refer to ISO/IEC 29167-10.

Table 168. Message format for MAM2

	AuthMethode	Step	MAM2_RFU	IResponse
# of bits	2	2	4	128
Description	10b	01b		AES-DEC(, Key[KeyID].ENC_key,C_ MAM2[11:0] Purpose_MAM2[3:0] IChallenge_MAM1[31:0] TChallenge_ MAM1[79:0])

Table 169 defines valid values for Purpose MAM2 for NTAG 5 boost.

Table 169. Definition of Purpose_MAM2

	Purpose_MAM2	Description
Standard	0000b	Mutual Authentication
	all other 0xxxb	RFU
NXP specific	1000b	Disable NFC Privacy Mode until NFC field reset
	1001b	Enable NFC Privacy Mode
	1010b	Disable NFC Privacy Mode
	1011b	Destroy NTAG 5 boost
	all other 1xxxb	RFU

Table 170 defines the response of NTAG 5 boost to an AUTHENTICATE command for MAM2.

For more detailed information, refer to ISO/IEC 29167-10.

Table 170. TReseponse for MAM2

TResponse MAM2 (0 bit)	
Empty message (no data)	

8.2.4.4.5 CHALLENGE

As defined in ISO/IEC 15693 [5] and ISO/IEC 29167-10 [6].

Command code = 39h

CSI code= 00h (AES Crypto Suite)

The CHALLENGE command transmits the message (challenge) to NTAG 5 boost to authenticate as defined in ISO/IEC 15693 [5].

The CHALLENGE command can only be executed in the READY state and in not addressed mode.

After receiving a valid CHALLENGE command, NTAG 5 boost starts with the crypto calculation.

If the calculation is finalized, NTAG 5 boost will respond to a valid READBUFFER command with the result of the crypto calculation based on the previous CHALLENGE command message.

NTAG 5 boost supports the Crypto Suite AES128 as defined in ISO/IEC 29167-10.

Only Option_flag = 0b is supported.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 171. CHALLENGE request format

Flags	CHALLENGE	UID	CSI	Message	CRC16
8 bits	8 bits	64 bits (optional)	8 bits	96 bits	16 bits

<u>Table 172</u> defines the message within the CHALLENGE command.

For more detailed information, refer to ISO/IEC 29167-10.

Table 172. Message format

	AuthMethode	CustomData	TAM1_RFU	KeyID	IChallenge_TAM1
# of bits	2	1	5	8	80
Description	00b	0b	00000b	[7:0]	random interrogator challenge

No response is sent on a CHALLENGE command.

For more detailed information, refer to ISO/IEC 29167-10.

8.2.4.4.6 READBUFFER

As defined in ISO/IEC 15693 [5] and ISO/IEC 29167-10.

Command code = 3Ah

The READBUFFER command allows the interrogator to request the crypto calculation result based on a valid previous CHALLENGE command from NTAG 5 boost.

NTAG 5 boost supports the Crypto Suite AES128 as defined in ISO/IEC 29167-10.

Only Option_flag = 0b is supported.

Table 173. READBUFFER request format

Flags	READBUFFER	UID	CRC16
8 bits	8 bits	64 bits (optional)	16 bits

For more detailed information, refer to ISO/IEC 29167-10.

Table 174 and Table 175 defines the response of NTAG 5 boost to a READBUFFER command.

For more detailed information, refer to ISO/IEC 29167-10.

Table 174. READBUFFER response format when Error_flag is NOT set

Flags	TResponse	CRC16
8 bits	128 bits (see Table 122)	16 bits

Table 175. TResponse

TResponse
AES-ECB-ENC(Key[KeyID].ENC_key,C_TAM1[15:0] TRnd_TAM1[31:0] IChallenge_TAM1[79:0])

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 176. READBUFFER response format when Error_flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

8.2.4.5 Memory operations

Following commands are implemented for accessing user memory according to ISO/IEC 15693.

- READ SINGLE BLOCK
- WRITE SINGLE BLOCK
- LOCK BLOCK
- READ MULTIPLE BLOCKS up to 3Fh blocks
- EXTENDED READ SINGLE BLOCK
- EXTENDED WRITE SINGLE BLOCK
- EXTENDED LOCK BLOCK
- EXTENDED READ MULTIPEL BLOCKS up to 3Fh blocks

On top of these commands, NTAG 5 boost offers INVENTORY READ and FAST INVENTORY READ

8.2.4.5.1 INVENTORY READ

Command code = A0h

When receiving the INVENTORY READ request, NTAG 5 boost performs the same as the anti-collision sequence, with the difference that instead of the UID and the DSFID, the requested response is defined by additional options.

The INVENTORY READ command provides two modes which are defined by the most significant bit of the mask length byte as follows:

- Standard mode (most significant bit of mask length byte equal 0b) (see Section 8.2.4.5.1.1)
- Extended mode (most significant bit of mask length byte equal 1b)

 The extended mode offers additional features to optimize the inventory procedure for different requirements (see Section 8.2.4.5.1.2)

The INVENTORY READ command may also be transmitted in addressed or SELECTED mode. Then the command behaves similar to a READ or READ MULTIPLE BLOCK (see <u>Section 8.2.4.5.1.3</u>).

8.2.4.5.1.1 Standard mode

If most significant bit of mask length byte is equal 0b the INVENTORY READ command is used in the standard mode.

If the Inventory flag is set to 1b and an error is detected, NTAG 5 boost remains silent.

If the Option flag is set to 0b, n blocks of data are transmitted. If the Option flag is set to 1b, n blocks of data and the part of the UID which is not part of the mask are transmitted.

The request contains:

- Flags
- INVENTORY READ command code
- · IC manufacturer code
- AFI (if AFI_flag is set to 1b)
- Mask length (most significant bit equal 0b)

NTA5332

All information provided in this document is subject to legal disclaimers.

© 2025 NXP B.V. All rights reserved.

Document feedback

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

- Mask value (if mask length > 00h)
- · First block number to be read
- · Number of blocks to be read
- CRC 16

Table 177. INVENTORY READ request format

Flags	INV ENTORY READ	Manuf. code	AFI	Mask length	Mask value	First block number	Number of blocks	CRC16		
8 bits	8 bits	8 bits	8 bits (optional)	8 bits	0 to 8 bytes	8 bits	8 bits	16 bits		

If the Inventory_flag is set to 1b, only NTAG 5 boost in the READY or SELECTED (SECURE) state will respond (same behavior as in the INVENTORY command). The meaning of Flags bits 7 to 4 is as defined in ISO/IEC 15693 [5].

The INVENTORY READ command can also be transmitted in the addressed or SELECTED mode (see Section 8.2.4.5.1.3).

The number of blocks in the request is one less than the number of blocks that NTAG 5 boost returns in its response.

If the Option_flag in the request is set to logic 0b the response contains:

Table 178. INVENTORY READ response format: Option flag logic 0b

Flags	Data	CRC16
8 bits	Number of blocks times 32 bits	16 bits

NTAG 5 boost reads the requested block(s) and sends back their value in the response. The mechanism and timing of the INVENTORY READ command performs the same as the INVENTORY command which is defined in ISO/IEC 15693 [5].

If the Option_flag in the request is set to logic 1b, the response contains:

Table 179. INVENTORY READ response format: Option flag logic 1b

	Rest of UID which is not part of the mask and slot number	Data	CRC16
18 hits	0 to 64 bit, always a multiple of 8 bits	Number of blocks times 32 bits	16 bits

NTAG 5 boost reads the requested block(s) and sends back their value in the response. Additionally the bytes of the UID, which are not parts of the mask and the slot number in case of 16 slots, are returned. Instead of padding with zeros up to the next byte boundary, the corresponding bits of the UID are returned. The mechanism and timing of the INVENTORY READ command perform the same as the INVENTORY command which is defined in ISO/IEC 15693 [5].

Remark: The number of bits of the retransmitted UID can be calculated as follows:

- 16 slots: 60 bits (bit 64 to bit 4) mask length rounded up to the next byte boundary
- 1 slot: 64 bits mask length rounded up to the next byte boundary

Remark: If the sum of first block number and number of blocks exceeds the total available number of user blocks, the number of transmitted blocks is less than the requested number of blocks. This means that the last returned block is the highest available user block, followed by the 16-bit CRC and the EOF.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Example: mask length = 30 bits

Returned: bit 64 to bit 4 (30 bits) = 30 gives 4 bytes

Table 180. Example: mask length = 30

Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	UID
mask va	alue includino	g padding wit	th zeros			transmitted by interrogator		
					returne	d value		transmitted by NTAG 5 boost

8.2.4.5.1.2 Extended Mode

If the most significant bit of the Mask Length byte is equal 1b the response format is defined by the extended option byte.

The request contains:

- Flags
- · Inventory Read command code
- · IC Manufacturer code
- AFI (if the AFI flag is set to 1b)
- Mask length (most significant bit equal 1b)
- Extended Options
- Mask value (if mask length > 0)
- · First Block Number to be read, if specified in extended options byte
- · Number of Blocks to be read, if specified in extended options byte
- CRC 16

Table 181. Inventory Read (extended mode) request format

Flags	INV ENTORY READ	Manuf. code		Mask Length	ext. Options	Mask Value		Number of blocks	CRC 16
8 bits	8 bits	8 bits	8 bits (optional)	8 bits	8 bits	0 to 64 bits	8 bits (optional)	8 bits (optional)	16 bits

If the Inventory_flag is set to 1b, only NTAG 5 boost in the READY or SELECTED (SECURE) state will respond (same behavior as in the INVENTORY command). The meaning of flags 5 to 8 is in accordance with table 5 in ISO/IEC 15693 [5].

The INVENTORY READ command can also be transmitted in the addressed or SELECTED mode (see Section 8.2.4.5.1.3).

Table 182. Extended options

Bit	Name	Value	Feature
7	RFU	0	
6	RFU	0	
5	QUIET	0	remain in current state
5	QUIET	1	go to QUIET state after response

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 182. Extended options...continued

Bit	Name	Value	Feature
4	SKIP_DATA	0	NTAG 5 boost will add the user memory blocks in the response as requested with first block number byte and number of blocks byte in the command
		1	No user memory data is requested, first block number byte and number of blocks byte shall not be transmitted in the command
3	CID RESPONSE	0	Custom ID (CID) will be NOT transmitted in the response
	CID_RESPONSE	1	Custom ID (CID) will be transmitted in the response
2	2		No CID is transmitted in the command
	CID_COMPARE	1	16-bit CID will be transmitted in the command and only NTAG 5 boost with the same CID will respond
1	UID_MODE	0	UID will be transmitted as in regular mode (truncated reply depending on least significant 7 bits value of mask length and the mask value)
		1	Complete UID will be transmitted (independent from mask length)
0	EAS MODE	0	NTAG 5 boost responds independent from the EAS status
	EAS_MODE		Respond only, when EAS is enabled

If the Option_flag in the request is set to 1b the response contains the truncated or complete UID depending on the extended option UID_MODE bit.

If the Option_flag in the request is set to 0b the UID is not part of the response.

Table 183. Inventory Read (extended mode) response format: Option flag 1b

	, <u> </u>		
o o	Optional truncated UID OR complete UID	Optional data	CRC16
8 bits	0 to 64 bits	Block length	16 bits
	Multiple of 8 bits	Repeated as needed	

The mechanism and timing of the INVENTORY READ command performs the same as at the INVENTORY command which is defined in ISO/IEC 15693 [5].

If the UID is requested in the truncated format the retransmitted UID can be calculated as follows:

16 slots: 64 - 4 - mask length rounded up to the next byte boundary

1 slot: 64 - mask length rounded up to the next byte boundary

Example: mask length = 30 Returned: 64 - 4 - 30 = 30 gives 4 bytes

Table 184. Example

Byte 0	Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	UID
mask value incl. padding with zeros								transmitted by Interrogator
				returned va	lue			transmitted by NTAG 5 boost

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

8.2.4.5.1.3 Addressed and SELECTED mode

The INVENTORY READ command can also be transmitted in the addressed or SELECTED mode. In this case, the Inventory_flag is set to 0 and the meaning of flags 7 to 4 is in accordance with ISO/IEC 15693.

In the addressed or selected mode, the INVENTORY READ command behaves similar to a READ or READ MULTIPLE BLOCK command.

In the addressed mode, it is recommended to address the IC with a mask length of 64 and to transmit the complete UID in the mask value field.

In the selected mode (IC has been selected with a valid SELECT command before), it is recommended to address the IC with a mask length of 0 (and do not transmit the mask value field).

Remark: If the INVENTORY READ command is used in the addressed or selected mode, the AFI shall not be transmitted and the IC will only respond in the first-time slot.

8.2.4.5.2 FAST INVENTORY READ

Command code = A1h

When receiving the FAST INVENTORY READ command, NTAG 5 boost behaves the same as the INVENTORY READ command with the following exceptions:

The data rate in the direction NTAG 5 boost to the reader is twice as defined in ISO/IEC 15693 [5] depending on the Datarate flag 53 kbit (high data rate) or 13 kbit (low data rate).

The data rate from the reader to NTAG 5 boost and the time between the rising edge of the EOF from the reader to NTAG 5 boost remains unchanged (stays the same as defined in ISO/IEC 15693 [5]).

Only the single subcarrier mode is supported for the response to the FAST INVENTORY READ command.

8.2.4.6 SRAM operations

When SRAM is mirrored to user EEPROM address space, standard READ BLOCK and WRITE BLOCK commands can be used. To have a more efficient way to access the 256 bytes SRAM, READ SRAM and WRITE SRAM are implemented

8.2.4.6.1 READ SRAM

Command code = D2h

This command can only be used, when NTAG 5 boost is powered via V_{CC} end SRAM_ENABLE bit (see Table 37) is set to 1b.

When receiving READ SRAM desired SRAM blocks will be returned.

NTAG 5 boost returns only the requested blocks. The blocks are numbered from 00h to 3Fh. The number of blocks in the request is one less than the number of blocks that NTAG 5 boost returns in its response. EXAMPLE: A value of 06h in the "Number of Blocks" field requests to read 7 blocks. A value of 00h requests to read a single block from SRAM.

If SRAM is read or write protected a valid authentication needs to be proceeded.

It is recommended to use this command in pass-through mode.

Only Option_flag = 0b is supported.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 185. READ SRAM request format

Flags	READ SRAM	Manuf. code	UID	Block Address	Number of Blocks	CRC16		
8 bits	8 bits	8 bits	64 bits (optional)	8 bits	8 bits	16 bits		

Table 186. READ SRAM response format when Error_flag is NOT set

Flags	Block Security Status (optional) + Data	CRC16
8 bits	(Number of Blocks+1) x 32 bits Data	16 bits

Block Security Status and Data bytes repeat as a duple.

Table 187. READ SRAM response format when Error flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

8.2.4.6.2 Write SRAM

Command code = D3h

This command can only be used, when NTAG 5 boost is powered via V_{CC} end SRAM_ENABLE bit (see Table 37) is set to 1b.

When receiving WRITE SRAM desired SRAM blocks will be written to the SRAM. It is recommended to use this command in pass-through mode because of performance reasons.

If SRAM is write protected a valid authentication needs to be preceded.

The blocks are numbered from 00h to 3Fh. The number of blocks in the request is one less than the number of blocks that the VICC shall write. E.g., to write one block to SRAM Number of Blocks is coded as 00h.

Option_flag = 0b and Option_flag = 1b is supported and is in accordance with ISO/IEC 15693 write-alike commands.

Table 188. WRITE SRAM request format

I	3		IC Mfg code	UID		Number of blocks	Data	CRC16
8	8 bits	8 bits	8 bits	64 bits (optional)	8 bits	8 bits	(Number of blocks + 1) times 32 bits	16 bits

Table 189. WRITE SRAM response format when Error_flag is NOT set

Flags	CRC16
8 bits	16 bits

Table 190. WRITE SRAM response format when Error flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

NTA5332 All information provided in this document is subject to legal disclaimers.

© 2025 NXP B.V. All rights reserved.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

8.2.4.7 Originality Signature

8.2.4.7.1 READ SIGNATURE

Command code = BDh

The READ SIGNATURE command returns an IC-specific, 32 byte ECC signature. How to change and / or lock the originality signature is described in <u>Section 8.8</u>.

Only Option flag = 0b is supported.

Table 191. READ SIGNATURE request format

Flags	READ SIGNATURE	Manuf. code	UID	CRC16
8 bits	8 bits	8 bits	64 bits (optional)	16 bits

Table 192. READ SIGNATURE response format when Error flag is NOT set

Flags	Originality Signature	CRC16	
8 bits	256 bits	16 bits	

Table 193. READ SIGNATURE response format when Error_flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

Details on how to validate the signature is provided in AN11350 [14].

8.2.4.8 I²C Transparent Channel

NTAG 5 boost offers an NFC to I²C bridge. With this mode, different I²C targets (e.g., sensors) can be connected without a microcontroller. There shall be no other active I²C controller on the same bus. The needed power for the sensors may be provided with NTAG 5 boost energy harvesting capability.

I²C controller communication can do maximum 256 bytes to read from, and write to the connected target.


I²C controller clock speed needs to be configured with I2C_CONTROLLER_SCL_LOW and I2C_CONTROLLER_SCL_HIGH (see <u>Table 61</u>). I²C target address will be selected directly within WRITE I²C and READ I²C command.

SRAM needs to be enabled by setting SRAM ENABLE bit (see Table 37) to 1b.

Basic principle for triggering an I^2C write to the connected target is illustrated in the figure below. NFC reader will get the response immediately, and then polls for the status of the I^2C transaction (see <u>Table 112</u>).


Details of the NFC command WRITE I²C can be found in Section 8.2.4.8.1.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

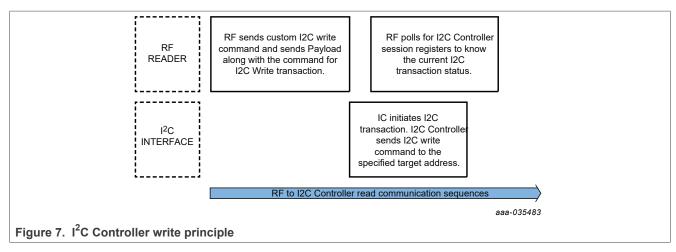

Basic principle for triggering an I²C read and getting the response of the connected target is illustrated in the figure below. Again the NFC reader will get a response immediately, and then polls for the status of the I²C transaction (see <u>Table 112</u>). Finally the result can be read from SRAM.

Details of the NFC command READ I²C can be found in Section 8.2.4.8.2

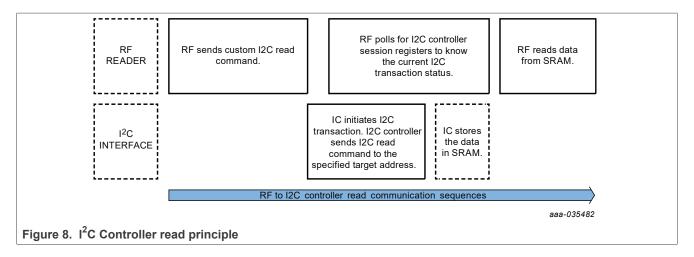

8.2.4.8.1 WRITE I²C

Command code = D4h

WRITE I²C command is used to trigger an I²C controller write command (R/W bit is 0b) on the I²C bus.

Command parameters:

- I²C param contains I²C target address and STOP condition option.
- Data length N byte codes the length of bytes to be sent to the target. N+1 bytes need to be put in the Data field and will be sent to the target. E.g., to send one byte, 00h needs to be coded.
- Data field contains the data to be sent to the I²C target. Minimum number of bytes is 1 byte, maximum is 256 bytes.

If SRAM is read or write protected a valid authentication needs to be preceded.

Response to this command will follow immediately.

To check the status and result of the WRITE I^2C command, I^2C Controller Status Registers ADh should be checked (see <u>Table 112</u>).

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Only Option_flag = 0b is supported.

Table 194. WRITE I²C request format

	The state of the s							
Flags	WRITE I ² C	Manuf. code	UID	I ² C param	Data length N	Data	CRC16	
8 bits	8 bits	8 bits	64 bits (optional)	8 bits	8 bits	(N+1) x 8 bits	16 bits	

Table 195. I²C param byte

I ² C param bit	Status	Value Description		
7	Disable STOP condition	0b	STOP condition will be generated at the end of transaction	
/		1b	STOP condition will be omitted at the end of transaction	
6 to 0	I ² C Address	xxh	7-bit I ² C target address of connected target	

Table 196. WRITE I²C response format when Error_flag is NOT set

Flags	CRC16
8 bits	16 bits

Table 197. WRITE I²C response format when Error flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

8.2.4.8.2 READ I²C

Command code = D5h

READ I²C command is used to trigger an I²C controller read command (R/W bit is 1b) on the I²C bus.

Command parameters:

- I²C param contains I²C address and STOP condition option
- Data length N byte codes the length of bytes to be read from the target. N+1 bytes will be read from the target. E.g., to read one byte 00h needs to be coded. Maximum is FFh, which means 256 bytes will be read.

Response to this command will follow immediately.

The status register <u>Table 112</u> indicates when the I²C read command is completed.

To get the response of the addressed I²C target device, the READ SRAM (see <u>Section 8.2.4.6.1</u>) command is used.

Only Option_flag = 0b is supported.

Table 198. READ I²C request format

Flags	READ I ² C	IC Mfg code	UID	I ² C param	Data length	CRC16
8 bits	8 bits	8 bits	64 bits optional	8 bits	8 bits	16 bits

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 199. I²C param byte

Bit	Status	Value	Description
7	Disable STOP condition	0b	STOP condition will be generated at the end of transaction
,	1 Disable STOP Collution		STOP condition will be omitted at the end of transaction
6 to 0	I ² C Address	xxh	7-bit I ² C target address of connected target

Table 200. READ I²C response format when Error_flag is NOT set

Flags	CRC16
8 bits	16 bits

Table 201. READ I²C response format when Error flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

8.2.4.9 Other

8.2.4.9.1 WRITE AFI

As defined in ISO/IEC 15693 [5].

8.2.4.9.2 LOCK AFI

As defined in ISO/IEC 15693 [5].

8.2.4.9.3 WRITE DSFID

As defined in ISO/IEC 15693 [5].

8.2.4.9.4 LOCK DSFID

As defined in ISO/IEC 15693 [5].

8.2.4.9.5 SET EAS

Command code = A2h

The SET EAS command enables the EAS mode if the EAS mode is not locked.

If the EAS mode is password protected the EAS password has to be first transmitted with the SET PASSWORD command.

If AES authentication scheme is enabled and EAS mode is protected, a valid mutual authentication with a key with the EAS/AFI privilege set has to executed before.

The timing of the command is write alike.

Option_flag = 0b and Option_flag = 1b is supported and is in accordance with ISO/IEC 15693 write-alike commands.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 202. SET EAS request format

Flags	SET EAS	Manuf. code	UID	CRC16
8 bits	8 bits	8 bits	64 bits (optional)	16 bits

Table 203. SET EAS response format when Error flag is NOT set

Flags	CRC16
8 bits	16 bits

Table 204. SET EAS response format when Error_flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

8.2.4.9.6 RESET EAS

Command code = A3h

The RESET EAS command disables the EAS mode if the EAS mode is not locked.

If the EAS mode is password protected the EAS password has to be first transmitted with the SET PASSWORD command.

If AES authentication scheme is enabled and EAS mode is protected a valid mutual authentication with a key with the EAS/AFI privilege set has to executed before.

The timing of the command is write alike.

Option_flag = 0b and Option_flag = 1b is supported and is in accordance with ISO/IEC 15693 write-alike commands.

Table 205. RESET EAS request format

Flags	RESET EAS	Manuf. code	UID	CRC16
8 bits	8 bits	8 bits	64 bits optional	16 bits

Table 206. RESET EAS response format when Error_flag is NOT set

Flags	CRC16
8 bits	16 bits

Table 207. RESET EAS response format when Error_flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

8.2.4.9.7 LOCK EAS

Command code = A4h

The LOCK EAS command locks the current state of the EAS mode and the EAS ID.

NTA5332

All information provided in this document is subject to legal disclaimers.

© 2025 NXP B.V. All rights reserved.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

If the EAS mode is password protected the EAS password has to be first transmitted with the SET PASSWORD command.

If AES authentication scheme is enabled and EAS mode is protected a valid mutual authentication with a key with the EAS/AFI privilege set has to executed before.

The timing of the command is write alike.

Option_flag = 0b and Option_flag = 1b is supported and is in accordance with ISO/IEC 15693 write-alike commands.

Table 208. LOCK EAS request format

Flags	LOCK EAS	Manuf. code	UID	CRC16
8 bits	8 bits	8 bits	64 bits (optional)	16 bits

Table 209. LOCK EAS response format when Error_flag is NOT set

Flags	CRC16
8 bits	16 bits

Table 210. LOCK EAS response format when Error_flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

8.2.4.9.8 EAS ALARM

Command code = A5h

The EAS ALARM command can be used in the following configurations:

- Option_flag is set to 0b:
 - EAS ID mask length and EAS ID value shall not be transmitted.
 - If the EAS mode is enabled, the EAS response is returned from the IC.
- Option_flag is set to 1b:

Within the command, the EAS ID mask length has to be transmitted to identify how many bits of the following EAS ID value are valid (multiple of 8-bits). Only those ICs will respond with the EAS sequence which have stored the corresponding data in the EAS ID configuration (selective EAS) and if the EAS Mode is set. If the EAS ID mask length is set to 00h, the IC will answer with its EAS ID.

Table 211. EAS ALARM Request format

Fla	gs	EAS ALARM	Manuf. code	_	EAS ID mask length	EAS ID value	CRC16
8 bi	its	8 bits	8 bits	64 bits (optional)	8 bits (optional)	0, 8 or 16 bits (optional)	16 bits

If an error is detected the IC remains silent.

Option_flag is set to 0b or Option_flag is set to logic 1b and the EAS ID mask length is not equal to 00h:

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 212. EAS ALARM Response format (Option flag logic 0)

Flags	EAS sequence	CRC16
8 bits	256 bits	16 bits

EAS sequence (starting with the least significant bit, which is transmitted first; read from left to right):

Option flag is set to 1b and the EAS ID mask length is equal to 00h:

Table 213. EAS ALARM Response format(Option flag logic 1)

Flags	EAS ID value	CRC16
8 bits	16 bits	16 bits

Table 214. EAS ALAMR response format when Error flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

If the EAS mode is disabled, the IC remains silent.

Remark: NTAG 5 boost in the QUIET state will not respond to an EAS ALARM command except the addressed flag is set.

8.2.4.9.9 PROTECT EAS/AFI

Command code = A6h

In plain password mode the PROTECT EAS/AFI command enables the password protection for EAS and/or AFI if the EAS/AFI password is first transmitted with the SET PASSWORD command.

In AES mode, the PROTECT EAS/AFI command enables the protection for EAS and/or AFI if a valid mutual authentication with the EAS/AFI privilege has been executed before.

Option flag set to 0b: EAS will be protected.

Option flag set to 1b: AFI will be protected.

Both protections (AFI and EAS) can be enabled separately.

Once the EAS/AFI protection is enabled, it is not possible to change back to unprotected EAS and/or AFI.

The timing of the command is write-alike as of write commands with Option_flag set to 0b.

Note: Option_flag is only related to the parameter to be locked, and NOT to the response behavior.

Table 215. PROTECT EAS/AFI request format

Flags	PROTECT EAS/AFI	Manuf. code	UID	CRC16
8 bits	8 bits	8 bits	64 bits (optional)	16 bits

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 216. PROTECT EAS/AFI response format when Error_flag is NOT set

Flags	CRC16
8 bits	16 bits

Table 217. PROTECT EAS/AFI response format when Error_flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

8.2.4.9.10 WRITE EAS ID

Command code = A7h

The command WRITE EAS ID enables a new EAS Identifier to be stored in the corresponding configuration memory.

If EAS is password protected (for Set and Reset EAS) the EAS password has to be first transmitted with the SET PASSWORD command.

If AES mode is enabled and the EAS is protected a valid mutual authentication with a key with the EAS/AFI privilege set has to executed before.

The timing of the command is write alike.

Option_flag = 0b and Option_flag = 1b is supported and is in accordance with ISO/IEC 15693 write-alike commands.

Table 218. WRITE EAS ID request format

Flags	WRITE EAS ID	Manuf. code	UID	EAS ID value	CRC16
8 bits	8 bits	8 bits	64 bits (optional)	16 bits	16 bits

Table 219. WRITE EAS ID response format when Error flag is NOT set

Flags	CRC16
8 bits	16 bits

Table 220. WRITE EAS ID response format when Error_flag is set

Flags	Error Code	CRC16
8 bits	8 bits	16 bits

8.2.4.9.11 GET MULTIPLE BLOCK SECURITY STATUS

As defined in ISO/IEC 15693 [5].

8.2.4.9.12 GET SYSTEM INFORMATION

As defined in ISO/IEC 15693 [5].

The TAG type of NTAG 5 boost is "01h".

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

8.2.4.9.13 EXTENDED GET SYSTEM INFORMATION

As defined in ISO/IEC 15693 [5] and ISO/IEC 29167-10.

Command code = 3Bh

8.2.4.9.14 GET NXP SYSTEM INFORMATION

Command code = ABh

The GET NXP SYSTEM INFORMATION command provides information about the IC access conditions and supported features.

Table 221. GET NXP SYSTEM INFORMATION request format

Flags	Get NXP System Info	Manuf. code	UID	CRC16
8 bits	8 bits	8 bits	64 bits (optional)	16 bits

Table 222. GET NXP SYSTEM INFORMATION response format when Error_flag is NOT set

Flags	PP pointer	PP condition	Lock bits	Feature flag	CRC16
8 bits	8 bits	8 bits	8 bits	32 bits	16 bits

On a valid received command the IC responds with detailed information:

PP pointer byte contains the block address of the protection pointer.

PP condition byte contains information about the access condition to Page H and Page L.

Table 223. Protection Pointer condition byte

Bit	Name	Value	Description
7	RFU	0b	
6	RFU	0b	
5	WH	0b	Page 0-H is not write protected
3	VVII	1b	Page 0-H is write protected
1	4 RH	0b	Page 0-H is not read protected
4		1b	Page 0-H is read protected
3	RFU	0b	
2	RFU	0b	
1	WL	0b	Page 0-L is not write protected
I	VVL	1b	Page 0-L is write protected
0	RL	0b	Page 0-L is not read protected
	1	1b	Page 0-L is read protected

Lock bits byte contains information about permanently locked features.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 224. Lock bits byte

Bit	Name	Value Description	
7 to 4	7 to 4 RFU		
3	NFC_PP_AREA_0H and	0b	NFC_PP_AREA_0H and NFC_PPC is NOT locked
3	NFC_PPC	1b	NFC_PP_AREA_0H and NFC_PPC is locked
2	DSFID	0b	DSFID is NOT locked
2		1b	DSFID is locked
1	EAS	0b	EAS is NOT locked
		1b	EAS is locked
0	AFI	0b	AFI is NOT locked
	J AFI	1b	AFI is locked

Feature flag byte contains information about supported features (related bit is 1b) of NTAG 5 boost. With this response, it is possible to distinguish the different NTAG 5 family members.

Table 225. Feature flags byte 0

Bit	Name	Description	NTAG 5
7	CID	Customer ID supported (see Section 8.1.3.3)	1b
6	EAS IR	EAS selection supported by extended mode in INVENTORY READ command (see Section 8.2.4.5.1)	1b
5	INVENTORY READ EXT	Extended mode supported by INVENTORY READ command (see Section 8.2.4.5.1)	1b
4	AFI PROT	AFI protection supported (see Section 8.2.4.9.9)	1b
3	EAS PROT	EAS protection supported (see Section 8.2.4.9.9)	1b
2	EAS ID	EAS ID supported by EAS ALARM command (see Section 8.2.4.9.10)	1b
1	COUNTER	NFC Counter supported (see Section 8.1.2.1)	1b
0	UM PROT	User memory protection supported (see Section 8.2.4.3.6)	1b

Table 226. Feature flags byte 1

			NTAG 5		
Bit	Name	Description	NTP5210	NTP5312 NTP5332 NTA5332	
7	HIGH BITRATES	high bitrates supported (see <u>Section 8.2</u>)	0b	1b	
6	WRITE CID	Write and Lock CID enabled (see Section 8.1.3.3)	1b		
5	DESTROY	DESTROY feature supported (see Section 8.2.4.3.8)	1b		
4	NFC PRIVACY	NFC Privacy mode supported (see Section 8.2.4.3.9)	1b		
3	RFU		0b		
2	PERS QUIET	PERSISTENT QUIET feature supported	0b		
1	RFU		0b		

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 226. Feature flags byte 1...continued

			NTAG 5	
Bit	Bit Name Description		NTP5210	NTP5312 NTP5332 NTA5332
0	ORIG SIG	Originality signature supported (see Section 8.1.3.1)	ure supported (see <u>Section 8.1.3.1</u>) 1b	

Table 227. Feature flags byte 2

	Name		NTAG 5		
Bit		Description	NTP5210 NTP5312	NTP5332 NTA5332	
7 to 3	RFU		all 0b		
2	KEY PRIV	Key privileges supported (see Section 8.1.3.8)	0b	1b	
1	MUTUAL AUTH	Mutual Authentication feature supported (see Section 8.6.4)	0b	1b	
0	TAG AUTH	Tag Authentication feature supported (see Section 8.6.4)	0b	1b	

Table 228. Feature flags byte 3

			NTAG 5			
Bit	Name	Description	NTP5210	NTP5312	NPT5332 NTA5332	
7	EXT FLAG	Additional 32 bits feature flags are transmitted	0b			
	Interface	00b only NFC interface available				
6-5		01b GPIO/ED host interface	01b 11b		h	
0-5		10b RFU			D.	
		11b GPIO and I ² C host interface				
4	RFU			0b		
3 to 0	NUM KEYS	Number of Keys	0h 4h		4h	

Table 229. GET NXP SYSTEM INFORMATION response format when Error flag is set

		3
Flags	Error Code	CRC16
8 bits	8 bits	16 bits

8.2.4.9.15 PICK RANDOM ID

Command code = C2h

In AES mode the PICK RANDOM ID commandinstructs NTAG 5 boost in NFC PRIVACY Mode to generate a random ID. After a valid PICK RANDOM ID command, the IC will respond with that random ID on following

NTA5332

All information provided in this document is subject to legal disclaimers.

© 2025 NXP B.V. All rights reserved.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

INVENTORY commands or GET SYSTEM INFORMATION command until an RF reset to allow an anti-collision procedure. The random ID will include the CID to identify the group-password or group-key to disable the privacy mode.

Only Option flag = 0b is supported.

Table 230. PICK RANDOM ID request format

Flags	Pick Random ID	Manuf. code	UID	CRC16
8 bits	8 bits	8 bits	64 bits (optional)	16 bits

Table 231. PICK RANDOM ID response format when Error flag is NOT set

Flags	CRC16
8 bits	16 bits

Table 232. PICK RANDOM ID response format when Error_flag is set

Flags	Error Code	CRC16	
8 bits	8 bits	16 bits	

After a successful PICK_RANDOM_ID the NTAG 5 boost will respond on an INVENTORY command with a random ID as defined in the table below.

Table 233. Random ID

MSB						LSB
63:56	55:48	47:40	39:32	31:24	23:16	15:0
E0h	04h	00h	00h	CID_1	CID_0	16-bit random ID

8.2.5 Data integrity

Following mechanisms are implemented in the contactless communication link between reader and NTAG 5 boost to ensure very reliable data transmission:

- 16-bit CRC per block
- · Bit count checking
- Bit coding to distinguish between logic 1, logic 0, and no information
- Channel monitoring (protocol sequence and bit stream analysis)

8.2.6 Error Handling

8.2.6.1 Transmission Errors

According to ISO/IEC 15693 NTAG 5 boost will not respond if a transmission error (CRC, bit coding, bit count, wrong framing) is detected and will silently wait for the next correct received command.

8.2.6.2 Not supported commands or options

If the received command or option is not supported, the behavior depends on the addressing mechanism.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

- Non-Addressed Mode
 NTAG 5 boost remains silent
- Addressed or selected Mode

NTAG 5 boost responds with error code 0Fh (no information given, or error code not supported). If the Inventory flag or the Protocol Extension flag is set, the IC will not respond if the command or option is not supported.

- Parameter out of range
 - Read alike commands

If the sum of the first block number and the number of blocks exceeds the total available number of user blocks, the number of transmitted blocks is less than the requested number of blocks. This means that the last returned block is the highest available user block, followed by the 16-bit CRC and the EOF.

- Write alike commands

If the address of a block to be written does not exist or a block to be written is locked, the behavior of the IC depends on the addressing mechanism.

- Non-Addressed Mode
 NTAG 5 boost remains silent.
- Addressed or SELECTED Mode
 NTAG 5 boost responds with error code 0Fh (no information given, or error code not supported).

8.3 Wired Interface

NTAG 5 boost has not only an NFC interface, but also a wired interface. Details are described in following clauses.

8.3.1 I²C interface


The definition of the I²C interface is according to the UM10204 [15]. The details of target and controller mode are described in Section 8.3.1.1 and Section 8.3.1.2.

8.3.1.1 Target mode

For details about I²C interface, refer to UM10204 [15].

The I²C target interface supports both standard (up to 100 kHz) and fast mode (up to 400 kHz) communication speeds for both read and write. Implementation will be a so-called asynchronous interface which uses the SCL clock for the I²C protocol handling after which the data is synchronized to the system clock for memory access. NTAG 5 boost can be used in multi-controller/multi-target applications.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

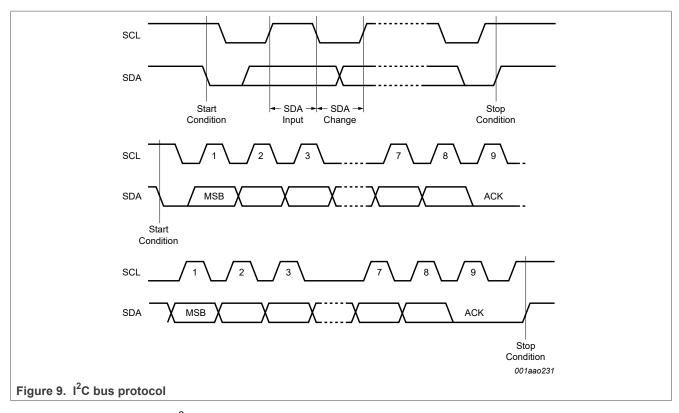

NTAG 5 boost supports the I²C protocol defined in UM10204 [15]. Any device that sends data onto the bus is defined as a transmitter, and any device that reads the data from the bus is defined as a receiver. The device that controls the data transfer is known as the "bus controller", and the other as the "target" device. A data transfer can only be initiated by the bus controller, which will also provide the serial clock for synchronization.

8.3.1.1.1 Start condition

Start is identified by a falling edge of Serial Data (SDA), while Serial Clock (SCL) is stable in the high state. A Start condition must precede any data transfer command. NTAG 5 boost continuously monitors SDA (except during a Write cycle) and SCL for a Start condition, and will not respond unless one is given.

8.3.1.1.2 Stop condition

Stop is identified by a rising edge of SDA while SCL is stable and driven high. A Stop condition terminates communication between NTAG 5 boost and the bus controller. A Stop condition at the end of a Write command triggers the internal write cycle.

8.3.1.1.3 Acknowledge bit (ACK)

The acknowledge bit is used to indicate a successful byte transfer. The bus transmitter, whether it is the bus controller or target device, releases Serial Data (SDA) after sending 8 bits of data. During the ninth clock pulse period, the receiver pulls Serial Data (SDA) low to acknowledge the receipt of the 9th data bits.

8.3.1.1.4 Data input

During data input, the IC samples SDA on the rising edge of SCL. For correct device operation, SDA must be stable during the rising edge of SCL, and the SDA signal must change only when SCL is driven low.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

8.3.1.1.5 Addressing

To start communication between a bus controller and NTAG 5 boost, the bus controller must initiate a Start condition. Following this initiation, the bus controller sends the device address. The IC address from I²C consists of a 7-bit device identifier (see <u>Table 234</u> for default value).

As long as I^2C address is 7 bit long, the 8th bit (least significant bit) is used as the Read/Write bit (R/W). This bit is set to 1b for Read and 0b for Write operations.

If a match occurs on the device address, the IC gives an acknowledgment on SDA during the 9th bit time. If the IC does not match the device select code, it deselects itself from the bus and clears the register I2C IF LOCKED (see <u>Table 94</u>).

Table 234. Default NTAG 5 I²C address from I²C

	Device address						
	b6	b5	b4	b3	b2	b1	b0
Value	1 ^[1]	0 [1]	1 ^[1]	0 [1]	1 ^[1]	0 [1]	0 [1]

^[1] Initial values - can be changed.

The I²C address of NTAG 5 boost (Configuration Byte) can be modified by the NFC and I²C interface.

8.3.1.1.6 Disable I²C Interface

NTAG 5 boost offers the option to disable the I²C interface temporarily using the session register bit DISABLE_I²C (see <u>Table 106</u>). With this feature, the NFC Device can easily get exclusive access to EEPROM.

This feature can be enabled via the NFC interface during the session by setting related session bit.

8.3.1.2 Controller mode

NTAG 5 boost can be configured in I^2C controller mode. Using I^2C Controller interface, I^2C target device like sensors or memories can be connected to NTAG 5 boost without an external microcontroller. Using energy harvesting capability, I^2C device can be powered by NTAG 5 boost .

When using I²C controller mode, it must be ensured, that there is no other active I²C controller on the same bus. The USE_CASE_CONF needs to be set to I²C controller (01b) and SRAM needs to be enabled in CONFIG 1 byte (see <u>Table 37</u>).

The used clock speed can be configured by setting I2C_CONTROLLER_SCL_LOW and I2C_CONTROLLER_SCL_HIGH (see Section 8.1.3.21).

To communicate with the connected I²C target device two custom commands are implemented.

- WRITE I2C (see Section 8.2.4.8.1)
- READ I2C (see Section 8.2.4.8.2)

The response from the READ I²C command will be stored in the SRAM and can be read (see <u>Section 8.2.4.6.1</u>) afterwards from NFC perspective. Due to the 256 byte SRAM, only 256 bytes can be written / read at once to / from the I²C interface.

Of course, all other NFC commands are working in controller mode and the user memory as well as configuration memory is accessible from NFC perspective.

WARNING: When enabling I²C controller mode and disabling NFC interface in parallel, NTAG 5 boost gets disabled for current session.

Implementation details can be found in AN12368 [11].

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

8.3.1.3 Watch Dog Timer

A programmable watchdog timer is implemented to unlock the I²C host from NTAG 5 boost latest after a defined maximum time period. The host itself will not be notified of this event directly but the NFC status register is updated accordingly.

On default Watch Dog Timer is enabled with a value of 0848h (\sim 20 ms) but the watchdog timer can be freely set with WDT_CONFIG from 0000h (9.434 μ s) up to (FFFFh+1) * 9.434 μ s (\sim 618 ms). It is recommended to keep this time as short as possible, by setting the value above, but close to the maximum needed I²C transaction time.

The timer is only active, when WDT_ENABLE is set to 1b and the IC is V_{CC} powered. The timer starts ticking when the I²C communication starts. The Watch Dog Timer ensures, that I²C interface gets released after the configured time period in any case.

In the case where the I²C communication has completed before the end of the timer and the status register I2C IF LOCKED was not cleared by the host, it will be cleared when defined watchdog time elapses.

Note: If WDT_CONFIG configured time elapses before ongoing I^2C communication is finished, WDT will release SDA line in between of ongoing I^2C communication.

The timer is reset automatically, when I2C_IF_LOCKED gets cleared, or the IC is not V_{CC} powered.

In I²C controller use case, watchdog timer is always enabled independently of WDT_ENABLE. It is important to set WDT_CONFIG in accordance with maximum execution time.

8.3.1.4 Command Set

NTAG 5 boost offers an easy to use I²C command set.

- WRITE MEMORY and READ MEMORY to access user and configuration memory
- WRITE MEMORY to present the related password, when password authentication from I²C perspective is enabled
- · WRITE REGISTER and READ REGISTER to access session registers

In <u>Figure 10</u> the access to EEPROM with READ MEMORY and WRITE MEMORY is illustrated and following symbols are used:

- START: I²C Start condition as defined in Section 8.3.1.1.1.
- SL AD: 7-bit target address (msb aligned) plus (lsb) R/W bit as defined in Section 8.3.1.1.5
- BL AD1 (MSB) / BL AD0 (LSB): 16-bit block address
- A/N: Acknowledge / NAK as defined in Section 8.3.1.1.3
- $\bullet\,$ DATA 0, DATA 1, ... , DATA N: Data bytes to be read or written.


N shall be 3 for writing to EEPROM

N shall be multiple of 4 reduced by 1; maximum 255 for writing to SRAM

N is any number for reading data. NTAG 5 boost will respond until host's NACK.


Stop: Stop condition as defined in <u>Section 8.3.1.1.2</u>

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

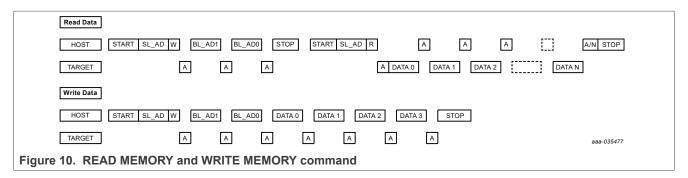

In <u>Figure 11</u> the access to Registers with READ REGISTER and WRITE REGISTER is illustrated and following symbols are used:

- START: I²C Start conditions as defined in <u>Section 8.3.1.1.1</u>.
- SL_AD: 7-bit target address (msb aligned) plus (lsb) R/W bit as defined in Section 8.3.1.1.5
- BL_AD1 (MSB) | BL_AD0 (LSB): 16-bit register block address
- · REGA: 8-bit register address
- MASK: 8-bit control register bit mask. Only if corresponding control bit is set to 1b, the register bit will be overwritten.
- A/N: Acknowledge / Not Acknowledge as defined in Section 8.3.1.1.3
- · REGDAT: 8-bit register data to read/write
- STOP: Stop condition as defined in Section 8.3.1.1.2

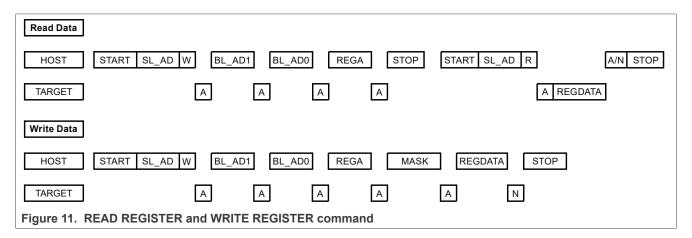

8.3.1.5 Error Handling

In case of any detected error, NTAG 5 boost in target mode responds with a NACK:

- · Memory Write
 - EEPROM
 - generated on the fourth data byte if the block is not writable
 - SRAM
 - generated on the first byte if the block is not writable
 - Arbiter locked to NFC interface, or
 - EEP cycle ongoing, or
 - I²C interface disabled

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

generate on block address BL_AD0

- · Memory Read
 - EEPROM/SRAM

returned data will be FFh if the access is to restricted region

- Arbiter locked to NFC interface, or
- EEP cycle ongoing, or
- I²C interface disabled generate on block address BL_AD0
- Register Access

Registers are always accessible. NACK will only be generated:

- DATA NACK due to register write command to trigger system reset
- NACK for register read/write command on BL AD0 if I²C interface is disabled

8.3.2 Event detection

The event detection feature provides the capability to trigger an external device (e.g., µController) or switch on the connected circuitry by an external power management unit depending on activities on the NFC interface. On top this active low pin can be used as one of the two possible PWM channels to offer I²C and PWM functionality.

As the event detection pin functionality is operated via NFC field power, V_{CC} supply for the IC itself is only required when ED pin is used as PWM channel.

Note: In some cases V_{OUT} pin might be used as field detection trigger.

The configurable events indicated at event detection pin are:

- The presence/absence of the NFC field
- · Data read/written in pass-through mode
- · Arbiter locked/unlocked EEPROM to NFC interface
- NDEF Message TLV length field is ZERO/non-ZERO
- · IC is/is not in standby mode
- Dedicated config bit is ZERO
- · Write/Read command ongoing

Event detection pin is an active LOW signal. Due to open-drain implementation an external pull-up resistor shall be used on this pin.

How to use the event detection pin in applications is described in AN11203 [7]

8.3.3 GPIO

I²C pins (SCL/SDA) are multiplexed and can be used as general-purpose input/output pins linked to configuration/session bits. When configured as GPIO pins, I²C communication is not possible anymore.

At POR, the GPIO are set to high-impedance state. When configuration is read, the pins are controlled to behave as per the configuration.

GPIOs can be configured to be either input or output (see <u>Section 8.1.3.15</u>). In input mode, the status of the pad will be available in one of the session register bits. In output mode status depends on the session register/config bits content.

How to use the GPIO pins in applications is described in AN11203 [7].

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

8.3.4 PWM

I²C pins (SDA/SCL) and ED pin are multiplexed and can be used as a pulse width modulation output. I²C pins have push-pull architecture, ED pin is an open-drain implementation, which means the PWM signal gets inverted.

PWM resolution, pre-scalar factor (see <u>Section 8.1.3.15</u>) as well as duty cycle can be configured using configuration bytes (see <u>Section 8.1.3.16</u>).

The pulse width modulation resolution (PWMx_RESOLUTION_CONF) defines the maximum number of pulses that are available in the given PWM period. PWM resolution can be set independently for both outputs to either 6, 8, 10 or 12 bits.

The 2-bit PWMx_PRESCALE value divides the PWM input frequency (1695 kHz) by a factor of 1, 2, 4 or 8.

Table 235. Pulse Width Modulation Frequency


Resolution	Pre-scalar					
Resolution	00b	01b	10b	11b		
12 bit	413 Hz	206 Hz	103 Hz	52 Hz		
10 bit	1.7 kHz	825.0 Hz	412.6 Hz	206.2 Hz		
8 bit	6.6 kHz	3.3 kHz	1.7 kHz	825.0 Hz		
6 bit	26.4 kHz	13.2 kHz	6.6 kHz	3.3 kHz		

PWMx ON and PWMx OFF defines the starting point and end point of the PWMx output is asserted to HIGH.

To calculate proper PWMx_ON (start of HIGH level) and PWMx_OFF (end of HIGH level) values, PWMx_RESOLUTION_CONF value and PWM_PRESCALE values need to be set to achieve desired PWM frequency. As an example 12-bit resolution is chosen. Duty cycle shall be set to 20 % and start time shall be 10 % offset.

Start Time 10 %: 2¹² * 10/100= 4096 * 10/100 = ~410 -> PWMx_ON = 19Ah

PWM Duty Cycle 20 %: 2¹² * 20/100= 4096 * 20/100 = ~819 -> PWMx OFF = 410 + 819 = 1229 = 4CDh

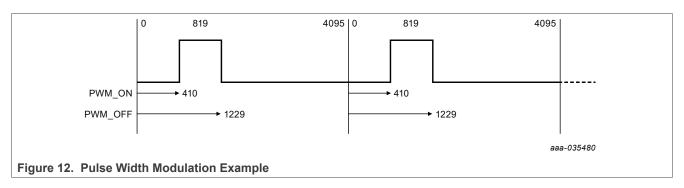

How to use PWM in applications is described in AN11203 [7].

8.3.5 Standby mode

To minimize overall current consumption, when the IC is supplied via V_{CC} NTAG 5 boost can be set to standby mode by writing related session bit form NFC or I²C perspective. The IC will leave standby mode according to configuration when NFC field is detected, automatically, or HPD pin gets pulled to HIGH for at least 20 μ s and released again. In standby mode the current is typically less than 10 μ A.

Worst case standby current consumption values can be found in <u>Section 10.1</u> table.

NTA5332

All information provided in this document is subject to legal disclaimers.

© 2025 NXP B.V. All rights reserved.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

In case SDA/SCLGPIO/PWM pins are not used the pins can be left floating. However, to ensure lowest standby current, following settings are needed:

CONFIG bytes USE_CASE_CONF shall be set in any case to GPIO/PWM, both pins SDA_GPIO1 and SCL GPIO0 shall be set as input using weak pull-up (GPIOx IN in).

Block 37h: CONFIG_1, USE_CASE_CONF shall be set to GPIO/PWM (10b) and CONFIG, GPIOx_IN, both shall be set to plain input with weak pullup (01b).

Block 39h: PWM_GPIO_CONFIG_0, SDA_GPIO1 and SCL_GPIO0 shall both be set to 1b to define them as general-purpose input.

8.3.6 Hard power-down mode

In hard power-down mode NTAG 5 boost is switched off using hard power down pin. When pulled to HIGH, the hard power down current is typically less than $0.25~\mu A$. This mode can only be left by connecting HPD pin to ground.

Worst case hard power down current consumption values can be found in <u>Section 10.1</u> table.

8.4 Arbitration between NFC and I²C interface

There are different modes implement to ensure access to the EEPROM and described in detail hereafter. Two status bits (I2C IF LOCKED and NFC IF LOCKED) are provided to show the status of arbiter.

Details about the different arbitrations modes can be found in AN12364 [8].

8.4.1 NFC Mode

If NTAG 5 boost is only powered by NFC, arbiter needs only to lock to the NFC interface if the IC receives a valid NFC command. After completion of the NFC command, NFC_IF_LOCKED will be cleared automatically.

8.4.2 I²C Mode

If NTAG 5 boost is only powered by V_{CC} , arbiter needs only to lock to the I^2C interface if the IC is correctly addressed for the memory access. The host needs to clear I2C_IF_LOCKED. Otherwise, the bit will be cleared automatically if the watchdog timer expires.

In I²C mode, availability of the SRAM as part of the memory depends on SRAM_ENABLE bit.

8.4.3 Normal Mode

If NTAG 5 boost is powered by NFC and VCC, arbiter locks interface on a first come first serve principle.

When receiving a valid NFC command and access is not locked to I²C, then the arbiter locks to the NFC interface. After completion of the NFC command, the lock will be released automatically. The host can access the registers at any time. Only access to EEPROM is locked.

When NTAG 5 boost is correctly addressed by its I²C address for the memory access and access is not locked to NFC, then the arbiter locks to the I²C interface. The host needs to clear the lock actively. If not, the lock will be released automatically as soon as the watchdog timer expires. NFC reader can access the registers at any time. Only access to EEPROM is locked.

In this mode, availability of the SRAM depends on SRAM ENABLE bit.

How to exchange data based on NDEF messages is defined in NFC Forum Tag NDEF Exchange Protocol (TNEP) Specification [3].

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

8.4.4 SRAM Mirror Mode

In this mode arbiter works like in normal mode with the exception, that SRAM is used instead of EEPROM.

8.4.5 SRAM Pass-Through Mode

In this mode, the NTAG 5 boost transfers data from NFC to I²C and vice versa using the SRAM. The arbiter switches automatically between the two interfaces when accessing the terminator block (last block of SRAM).

Details can be found in AN12364 [8].

8.4.6 SRAM PHDC Mode

This mode is similar to SRAM mirror mode. This mode needs to be enabled, when PHDC communication scheme as defined in NFC Forum PHDC specification [4] shall be used. NFC will always get a response when accessing SRAM.

8.5 Energy harvesting

Note: Energy harvesting is not available in parallel with ALM.

NTAG 5 boost in passive mode provides the capability to supply external low-power devices with energy harvested from the NFC field of an NFC device.

When DISABLE_POWER_CHECK bit is set to 0b, minimum provided output power can be configured by setting desired voltage and minimum required output current in the related configuration bytes (see <u>Section 8.1.3.18</u>).

WARNING: Sufficient RF field is required when DISABLE_POWER_CHECK is set to 0b to have access to EEPROM. As long as NTAG 5 boost detects too less energy to be harvested from the field only INVENTORY command and READ/WRITE CONFIGURATION to access session registers will be handled. This feature ensures a stable system, as the host will only be supplied if there is sufficient energy available. However, during design phase we recommend disabling this power check.

The provided output power in general of course depends on many parameters like the strength of the NFC field, the antenna size, or the distance from the NFC device. The design ensures with the right settings, that V_{OUT} is only enabled, when sufficient energy can be harvested from the NFC field.

1.8 V, 2.4 V or 3 V output voltage can be selected by coding EH_VOUT_V_SEL accordingly.

Minimum required load current can be coded in EH VOUT I SEL configuration field.

VOUT and VCC need to be connected as soon as energy harvesting is used. Otherwise there is no EEPROM access possible from NFC perspective and status registers may contain invalid information.

Appropriate capacitor dependent on load needs to be placed between V_{OUT} and ground to close energy gaps during miller pauses. An example circuit is illustrated in the figure below.


V_{OUT} pin shall be kept floating (not connected) in case energy harvesting feature is not used. If energy harvesting is disabled, pin will be connected to GND internally.

With EH_ENABLE configuration bit st to 1b, energy harvesting will be enabled after boot, automatically and all energy harvesting-related session register bits are meaningless.

When enabling energy harvesting via session registers, EH_MODE, EH_VOUT_SEL and EH_IOUT_SEL needs to be configured properly in the related configuration bytes. EH_ENABLE configuration bit need to be 0b in this case.

After boot, session registers can be used to first trigger current detection by setting EH_TRIGGER to 1b, then poll for EH_LOAD_OK that gets 1b and finally set EH_TRIGGER and EH_ENABLE to 1b, or directly enable energy harvesting by setting EH_TRIGGER and EH_ENABLE bit to 1b (see Table 103).

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

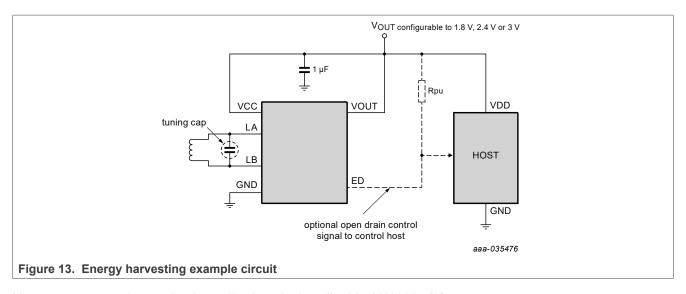

How to use energy harvesting in applications is described in AN12365 [9].

8.6 Security

NTAG 5 boost implements different levels to protect data. The easiest, but efficient method is to lock EEPROM to read only.

With the plain password authentication scheme, the memory can be split in three different parts with different access conditions.

With mutual AES authentication the memory is split in three different parts again, but with the advantage, that the password will never be transmitted in plain text.

Configuration area and SRAM can be protected from both interfaces as well.

Further implementation details can be found in AN12366 [10].

8.6.1 Locking EEPROM to read only

Independent on the split of the memory, the user memory may be locked to read-only. If the user EEPROM shall stay in read/write state, the LOCK BLOCK command can be disabled (see <u>Table 38</u>) and lock block sections can be locked (see <u>Table 86</u>). With these features, it can be ensured, NTAG 5 boost stays in read/write state.

Locking the complete EEPROM to read-only as defined in NFC Forum Type 5 Tag specification is quite time consuming. Every single block needs to be addressed by a LOCK BLOCK command (see Section 8.2.4.5). To accelerate this locking, NTAG 5 boost stores the information in the configuration area. With this feature, locking the EEPROM can be accelerated by a factor of 16. Note, that these bits are one time programmable (see Section 8.1.3.31) and blocks are indicated as locked in the Get Multiple Block Security Status response.

As long as I²C Lock Block Configuration bytes are not set to 1b, the user EEPROM may still be modified from I²C perspective.

Table 236. NFC Lock Block Configuration location

<u></u>					
Block Address NFC I ² C		Byte 0	Byte 1	Byte 2	Byte 3
		byte 0	byte i		
6Ah	106Ah	NFC_LOCK_BL0	NFC_LOCK_BL1	RFU	RFU
				100	RFO

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 236. NFC Lock Block Configuration location...continued

Block A	ddress Byte 0		Byte 1	Byte 2	Byte 3
NFC I ² C		byte 0	byte i		
89h	1089h	NFC_LOCK_BL62	NFC_LOCK_BL63		

Table 237. I²C Lock Block Configuration location

Block Address NFC I ² C		Byte 0	Byte 1	Byte 2	Byte 3
		byte 0	Byte 0		Byte 3
8Ah	108Ah	I2C_LOCK_BL0	I2C_LOCK_BL1		
				RFU	RFU
91h	1091h	I2C_LOCK_BL62	I2C_LOCK_BL63		

8.6.2 Memory Areas

The memory may be split into three different configurable areas with different access conditions.

Highest priority has the 16-bit Protection Pointer PP_AREA_1. It splits the memory into an AREA_0 and an AREA_1 at the address configured with the PP_AREA_1.

Restricted area AREA_1, starting from block address PP_AREA_1 is automatically protected by the AREA_1 read and AREA_1 write password in plain password mode.

In AES mode, a key with read and write privilege is needed to be able to access the restricted area.

To enable password protection to AREA_1 from I²C perspective, I²C passwords need to be enabled by setting I²C key header (I2C_KH) to active. In that case AREA_1 read and write passwords need to be presented to NTAG 5 boost.

The split configured with the 16-bit Protection Pointer is the same for both, NFC and I²C perspective.


The area below this address can be split into two more areas with the 8-bit NFC_PP_AREA_0-H (see Section 8.1.3.29) and the 8-bit I2C_PP_AREA_0-H (see Section 8.1.3.11), independently of the NFC and I²C perspective.

NFC AREA_0-L, usually used to store NDEF messages, starts from block 0. NFC AREA_0-H, usually used as password protected area to store private data, starts from block address configured by the 8-bit NFC_PP_AREA_0H and ends just before the block addressed with the PP_AREA_1 configuration byte. If PP_AREA_1 points outside the addressable memory space, only AREA_0-L and AREA_0-H are available.

I²C AREA_0-L starts from block 0. I²C AREA_0-H, starts from the block address configured by the 8-bit I2C_PP_AREA_0H.

The concept is illustrated in the Figure below and further details can be found in AN12366 [10].

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

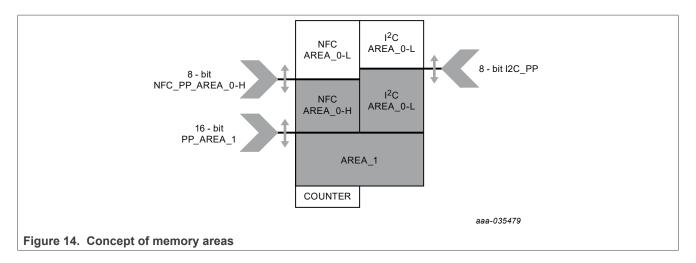

8.6.3 Plain password authentication

NTAG 5 boost implements plain password authentication scheme from NFC perspective.

In summary, seven 32-bit passwords are available from NFC perspective.

- Read
- Write
- · Restricted AREA 1 Read
- Restricted AREA 1 Write
- Destroy
- NFC Privacy password (is used to come out of NFC PRIVACY mode)
- EAS/AFI protection

64-bit password protection can be enabled for read and write operations.

A 32-bit password is used to authenticate, before doing memory operations. The mechanism is easy to use. After setting and locking the password, and setting right access conditions in initialization phase, the NFC Device needs to fetch a random number from the ICs. XORing the plain password and this random number results in used password to authenticate.

From I²C perspective, plain password authentication can be enabled with two 32-bit passwords for the restricted AREA 1 and two for the rest of user EEPROM.

To resist brute force attacks, a negative authentication counter can be enabled.

How to use plain password authentication in applications is described in AN12366 [10].

8.6.4 AES authentication

NTAG 5 boost implements AES authentication from NFC perspective.

Highest security level of NTAG 5 boost is AES mutual authentication based on the Crypto Suite AES128 as defined in ISO/IEC 29167-10 [6]. A 128-bit password is used to (mutual) authenticate, before doing memory operations.

From I²C perspective, only plain password authentication can be enabled.

How to use AES authentication in applications is described in AN12366 [10].

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

8.7 NFC privacy mode

In the privacy mode, the NTAG 5 boost is not traceable by its UID neither by data stored in the user memory. All NTAG 5 boost in the NFC PRIVACY mode will respond to an Inventory command with the UID E0 04 00 00 00 00 00 00, consequently also the user memory is NOT accessible.

Note: An anti-collision procedure is not possible in plain password mode.

In plain password mode ENABLE NFC PRIVACY Mode command (see <u>Section 8.2.4.3.9</u>) with a valid privacy password is used to set NTAG 5 boost to this mode.

In AES mode, a valid mutual authentication (see <u>Section 8.2.4.4.4</u>) with the vendor-specific Purpose_MAM2[3:0] (see <u>Table 169</u>) and a key with the privacy privilege set to 1b is needed to enable using Purpose_MAM2 = 1001b and disable the NFC PRIVACY mode using Purpose_MAM2 = 1000b until next NFC field reset or 1010b permanently.

NTAG 5 boost in NFC PRIVACY mode only support following commands:

- INVENTORY
- SELECT
- STAY QUIET
- RESET TO READY
- PICK RANDOM ID (in AES mode to allow an anti-collision procedure)
- GET RANDOM NUMBER
- · SET PASSWORD in plain password mode
- AUTHENTICATE

8.8 Programmable Originality signature

NTAG 5 boost original signature is based on standard Elliptic Curve Cryptography (curve name secp128r1), according to the ECDSA algorithm. The use of a standard algorithm and curve ensures easy software integration of the originality check procedure in NFC devices without specific hardware requirements.

The UID is signed with an NXP private key and the resulting 32 byte signature is stored in the configuration memory during IC production.

The originality signature is stored in the configuration memory block 00h to block 07h.

Table 238. 32 Byte Originality Signature

Block Address		Buto 0	Byte 0 Byte 1		Puto 2
NFC	I ² C	Byte 0 Byte 1		Byte 2	Byte 3
00h	1000h	SIG0 (LSB)	SIG1	SIG2	SIG3
01h	1001h	SIG4	SIG5	SIG6	SIG7
02h	1002h	SIG8	SIG9	SIG10	SIG11
03h	1003h	SIG12	SIG13	SIG14	SIG15
04h	1004h	SIG16	SIG17	SIG18	SIG19
05h	1005h	SIG20	SIG21	SIG22	SIG23
06h	1006h	SIG24	SIG25	SIG26	SIG27
07h	1007h	SIG28	SIG29	SIG30	SIG31 (MSB)

This signature can be retrieved using the READ_SIGNATURE command or with the READ CONFIG command and can be verified in the NFC device by using the corresponding ECC public key provided by NXP. In case the

Document feedback

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

NXP public key is stored in the reader device, the complete signature verification procedure can be performed offline.

To verify the signature (for example with the use of the public domain crypto library OpenSSL) the tool domain parameters shall be set to secp128r1, defined within the standards for elliptic curve cryptography SEC.

NTAG 5 boost provides the possibility to customize the originality signature to personalize the IC individually for specific application. At delivery, the NTAG 5 boost is pre-programmed with the NXP originality signature described above. This signature is unlocked in the dedicated memory. If needed, the signature can be reprogrammed with a custom-specific signature using the WRITE CONFIG command during the personalization process by the customer. The signature can be permanently locked afterwards by setting the Config Header to "locked" with the WRITE CONFIG command to avoid further modifications.

In any case, it is recommended to permanently lock the originality signature during the initialization process by setting the Config Header to lock with the WRITE CONFIG command.

How to use and verify Originality Signature in applications is described in AN11350 [14].

How to generate Originality Signature is described in AN11859 [13].

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Limiting values

Table 239. Limiting values In accordance with the Absolute Maximum Rating System (IEC 60134).

Symbol	Parameter	Conditions	Min	Max	Unit
T _{stg}	storage temperature	all packages	-65	+150	°C
Tj	junction temperature	EEPROM write operation	-	+95	°C
T _j	junction temperature	EEPROM read, SRAM and register operation	-	+115	°C
V _{ESD}	electrostatic discharge voltage	charged device model (CDM) ^[1]	-2	2	kV
LOD		human body model (HBM) ^[2]	-2	2	kV
V _{CC}	supply voltage	on pin V _{CC}	-0.5	7.15	V
V _{CC}	supply voltage	on pin V _{CC_TX}	-0.5	7.15	V
Vi	input voltage	on pin SDA, SCL,ED, HPD	-0.5	7.15	V
V _{I (RF)}	RF input voltage	on pin LA/LB	-0.5	5.2	Vp
Vi	input voltage	on pin LA; LB is 0 V; sine wave of 13.56 MHz	-0.5	5.2	Vp
		on pin LB; LA is 0 V; sine wave of 13.56 MHz	-0.5	5.2	Vp
Vi	input voltage	on pin LA_TX, LB_TX	-0.5	4.7	V
I _{i(max)}	maximum input current	La/Lb; peak	-168	168	mA

According to ANSI/ESDA/JEDEC JS-002. According to ANSI/ESDA/JEDEC JS-001.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

10 Characteristics

10.1 Static Characteristics

Table 240. Characteristics

Symbol	Parameter	Conditions	Min	Тур	Max	Unit
General						1
f _i	input frequency	ISO/IEC 15693	13.553	13.56	13.567	MHz
C _i	input capacitance	LA-LB, Pin capacitance, VLA-LB @ 1.8Vp, Network Analyzer (13.56 MHz) @Room temp	-	15	-	pF
R _i	Impedance from LA to LB	V _{LALB} =1.8Vpp; passive mode	30	-	-	kΩ
R _i	Impedance from LA to LB	V _{LALB} =1.8Vpp; active mode	246	-	-	Ω
Operating of	conditions		'			'
T _{amb}	ambient temperature	T _j <t<sub>j_max; for EEPROM write operation</t<sub>	-40	25	85	°C
T _{amb}	ambient temperature	T _j <t<sub>j_max; for EEPROM read, SRAM and register operation</t<sub>	-40	25	105	°C
R _{TH_JA}	thermal resistance	JEDEC 2s2p board and SO8 package	-	82	-	K/W
R _{TH_JA}	thermal resistance	JEDEC 2s2p board and TSSOP16 package	-	126	-	K/W
R _{TH_JA}	thermal resistance	JEDEC 2s2p board and XQFN16 package	-	75	-	K/W
V _{CC}	supply voltage	on pin V _{CC}	1.62	-	5.5	V
V _{CC_TX}	supply voltage	functional on pin V _{CC_TX}	1.62	-	5.5	V
l _i	input current	La/Lb; 12 A/m; RMS	-	-	43.75	mA
וי	input current	La/Lb; 12 A/m; peak	-	-	61.87	mA
V_{sens}	minimum receiver sensitivity	on LA/LB, V _{DD} = 3.3 V	-	40	60	mVp
Active trans	smitter parameters					'
R _{ON}	low side output resistance TX1/TX2		1.66	-	5	Ω
R _{ON}	high side output resistance TX1/TX2	configReg=0Fh, V _{TX} = V _{VCC_TX} - 300 mV	13	-	20	Ω
R _{ON}	high side output resistance TX1/TX2	configReg=00h, V _{TX} = V _{VCC_TX} - 300 mV	1170	-	1970	Ω
V _{OH}	High-level output voltage on TX1/TX2	V _{CC_TX} = 3.75 V	V _{CC_TX} - 0.20	V _{CC_TX} - 0.15	V _{CC_TX} - 0.10	V
V _{OHmax}	High-level output voltage on TX1/TX2	V _{CC_TX} = 3.75 V	-	-	3.65	V

Table 240. Characteristics...continued

Symbol	Parameter	Conditions	Min	Тур	Max	Unit
Current consu	ımption					
I _{VCC_TX}	V _{CC_TX} supply current	V _{CC_TX} = 3.3 V; active communication TX	-	-	60.0	mA
I _{VCC_TX}	V _{CC_TX} supply current	V _{CC_TX} = 5.5 V;battery assisted active communication TX	-	-	68.0	mA
I _{VCC_TX}	V _{CC_TX} supply current	V _{CC_TX} = 3.3 V; active communication RX	-	-	18.0	mA
I _{VCC_TX}	V _{CC_TX} supply current	V _{CC_TX} = 5.5 V; active communication	-	-	22.0	mA
I _{VCC} +I _{VCC_TX}	V _{CC_TX} supply current	V _{CC_TX} = 5.5 V;battery supplied no NFC communication ALM mode	-	450	750	μΑ
I _{VCC} +I _{VCC_TX}	V _{CC_TX} supply current	V _{CC_TX} = 5.5 V;battery supplied no NFC communication PLM mode	-	140	200	μΑ
I _{VCC}	V _{CC} supply current	V _{CC} = 5.5 V; NFC passive communication no host activity	-	120	150	μА
I _{VCC}	V _{CC} supply current	V _{CC} = 5.5 V, IDLE Mode. No NFC or Host activity	-	-	120	μΑ
I _{VCC}	V _{CC} supply current	V _{CC} = 5.5 V, PWM/GPIO use case	-	128	175	μΑ
I _{VCC}	V _{CC} supply current	V _{CC} = 1.8 V, 400 kHz, I ² C read/write operation	-	115	163	μΑ
I _{VCC}	V _{CC} supply current	V _{CC} = 3.3 V, 400 kHz, I ² C read/write operation	-	115	163	μΑ
I _{VCC}	V _{CC} supply current	V _{CC} = 5.5 V, 400 kHz, I ² C read/write operation.	-	138	168	μA
I _{standby} Vcc and Vcc_tx	standby current	V _{CC} = 1.8 V wake-up via Active NFC level detector and host interface	-	9.0	40	μА
I _{standby} Vcc and Vcc_tx	standby current	V _{CC} = 3.3 V wake-up via Active NFC level detector and host interface	-	9.5	40	μA
I _{standby} Vcc and Vcc_tx	standby current	V _{CC} = 5.5 V wake-up via Active NFC level detector and I ² C	-	10.0	40	μΑ
I _{standby} Vcc and Vcc_tx	standby current	V _{CC} = 1.8 V wake-up via I ² C	-	5.5	16	μΑ
I _{standby Vcc and}	standby current	V _{CC} = 3.3 V wake-up via I ² C	-	5.9	18	μΑ
I _{standby} Vcc and	standby current	V _{CC} = 5.5 V wake-up via	-	6.9	21	μA

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 240. Characteristics...continued

Symbol	Parameter	Conditions	Min	Тур	Max	Unit
I _{hrd_pwr_dwn} Vcc and Vcc_tx	hard power down current	V _{CC} = 1.8 V; XQFN16 package only	-	0.23	2.3	μA
I _{hrd_pwr_dwn} Vcc and Vcc_tx	hard power down current	V _{CC} = 3.3 V; XQFN16 package only	-	0.25	3.44	μA
I _{hrd_pwr_dwn} Vcc and Vcc_tx	hard power down current	V _{CC} = 5.5 V; XQFN16 package only	-	0.31	5.72	μA
Energy harve	esting VOUT pad		1	'		1
		configured to 1.8 V; load current <= configured output current	1.62	-	1.98	V
V_{out}	output voltage	configured to 2.4 V; load current <= configured output current	2.16	-	2.64	V
		configured to 3.0 V; load current <= configured output current	2.7	-	3.3	V
l _{out}	min. output current	at different regulated output voltages when current detection is enabled and dependent on selected output current value	0.4	-	12.5	mA
ED pin chara	cteristics		'	'		1
V _{OL}	LOW-level output voltage	IOL = 3 mA	-	-	0.4	V
I _{IED}	leakage current	V _{IN} = 0 V to 5.5 V	10	-	1000	nA
HPD pin cha	racteristics for XQFN16 packa	ge	1	'		'
V _{IL}	LOW-level input voltage		0	-	0.3*V _{CC}	V
V _{IH}	HIGH-level input voltage		0.7*V _{CC}	-	V _{CC}	V
I _{IL}	LOW-level input current	V _{IN} = 0 V	-1	-	-	μΑ
I _{IH}	HIGH-level input current	V _{IN} = 5.5 V	-	-	1	μA
C _i	input capacitance		-	-	1.2	pF
GPIO pad pir	characteristics in I ² C mode					•
V _{IH}	HIGH-level input voltage		0.7*V _{CC}	-	-	V
V _{IL}	LOW-level input voltage		-	-	0.3*V _{CC}	V
I _{IL}	LOW-level input current	V _{IN} = 0 V	-1	-	-	μA
I _{IH}	HIGH-level input current	V _{IN} = 5.5 V	-	-	1	μA
V _{OH}	HIGH-level output voltage	I _{OH} < 3 mA	0.7*V _{CC}	-	V _{CC}	V
V _{OL}	LOW-level output voltage	I _{OL} < 3 mA	0	-	0.4	V
C _i	input capacitance		-	-	3.5	pF
C _L	load capacitance		-	400	-	pF
GPIO pad pir	n characteristics in GPIO mod	e		•	<u> </u>	
V _{IH}	HIGH-level input voltage		0.7*V _{CC}	-	-	V

NTA5332

All information provided in this document is subject to legal disclaimers.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Table 240. Characteristics...continued

Symbol	Parameter	Conditions	Min	Тур	Max	Unit
V _{IL}	LOW-level input voltage		-	-	0.3*V _{CC}	V
I _{OL}	static output low current	at V _{OL} = 0.4 V	4	-	-	μA
I _{OH}	static output high current	at V _{OH} = V _{CC} - 0.4 V	4	-	1	μA
I _{IL}	LOW-level input current		-1	-	-	μA
I _{OH}	HIGH-level output current		-	-	1	μA
C _i	input capacitance		-	-	3.5	pF
C _L	load capacitance		-	400	-	pF

10.2 Dynamic characteristics

Table 241.


Symbol	Parameter	Conditions	Min	Тур	Max	Unit
I ² C controller	SCL/SDA pin characteristics	3			<u> </u>	
f _{SCL}	SCL clock frequency	fast mode; C _b < 400 pF	-	-	400	kHz
t _{SU;STA}	set-up time for a (repeated) START condition	fast mode; Cb < 400 pF	600	-	-	ns
t _{HD;STA}	hold time (repeated) STARTcondition	fast mode; Cb < 400 pF	600	-	-	ns
t _{LOW}	low period of the SCL clock	fast mode; Cb < 400 pF	1.3	-	-	us
t _{HIGH}	high period of the SCL clock	fast mode; Cb < 400 pF	600	-	-	ns
t _{SU;DAT}	data set-up time	fast mode; Cb < 400 pF	100	-	-	ns
t _{HD;DAT}	data hold time	fast mode; Cb < 400 pF	0	-	900	ns
tr _{SDA}	SDA rise time	CL = 100 pF, Rpull-up = 2 K, Standard and fast mode	30	-	250	ns
tf _{SDA}	SDA fall time	CL = 100 pF, Rpull-up = 2 K, Standard and fast mode	30	-	250	ns
Vhys	hysteresis of Schmitt trigger inputs	fast mode; Cb < 400 pF	0.05 *V _{CC}	-	-	V
I ² C target SD	DA/SCL pin characteristics		1	1		'
tr	rise time	CL = 100 pF, Rpull-up = 2 K,standard and fast mode	30	-	250	ns
tf	fall time	CL = 100 pF, Rpull-up = 2 K,standard and fast mode	30	-	250	ns
PWM AC tim	ings					
PWM _{freq}	PWM output frequency		414	-	26400	Hz
Pulse Width	PWM signal pulse width		0.6	-	-	μs
PWM _{freq_tol}	PWM output frequency tolerance		-	-	10	%

Table 241. ...continued

Symbol	Parameter	Conditions	Min	Тур	Max	Unit
PWM _{V_tol}	PWM output voltage tolerance	I _{OH} = 4 mA	V _{CC} - 0.4	-	V _{CC}	V
GPIO pin ch	naracteristics					<u>'</u>
tr	rise time	CL = 20 pF; V _{CC} = 1.8 V	-	-	20.9	ns
		CL = 20 pF; V _{CC} = 3.3 V	-	-	10.92	ns
		CL = 20 pF; V _{CC} = 5.5 V	-	-	8.22	ns
tf	fall time	CL = 20 pF; V _{CC} = 1.8 V	-	-	129	ns
		CL = 20 pF; V _{CC} = 3.3 V	-	-	77.9	ns
		CL = 20 pF; V _{CC} = 5.5 V	-	-	66.9	ns
Start Up tim	е					'
t _{Start_} VCC	V _{CC} startup time from power OFF state. After this time, the IC is able to receive the command from I ² C interface.		-	-	3	ms
t _{Start_RF}	Startup time from NFC from Power OFF state. After this time, the IC is able to receive the command from NFC interface.		-	-	1	ms
EEPROM c	haracteristics	1	1	1	'	
t _{ret}	retention time	Ta < 85 °C	40	-	-	year
N _{endu(W)}	write endurance	Ta <85 °C	1000000	-	-	cycle

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

11 Package outline

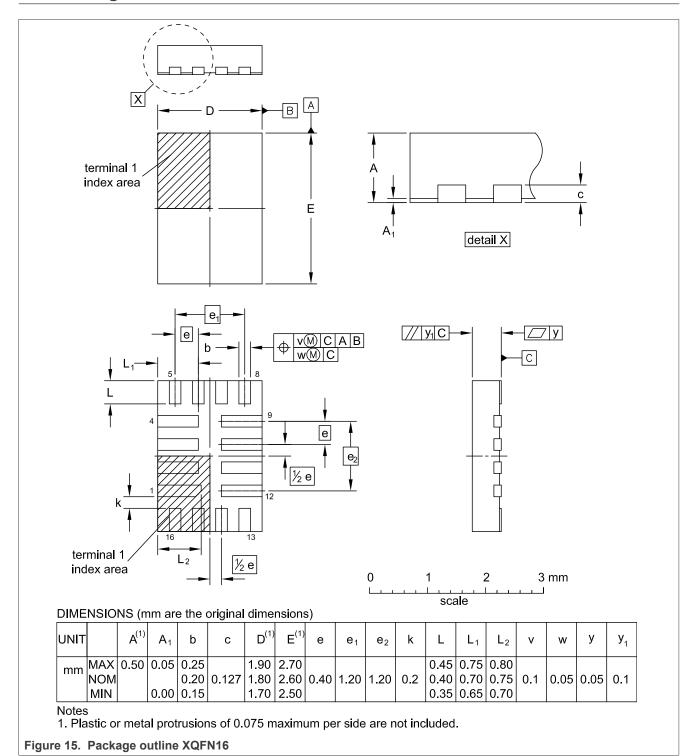

NTA5332

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

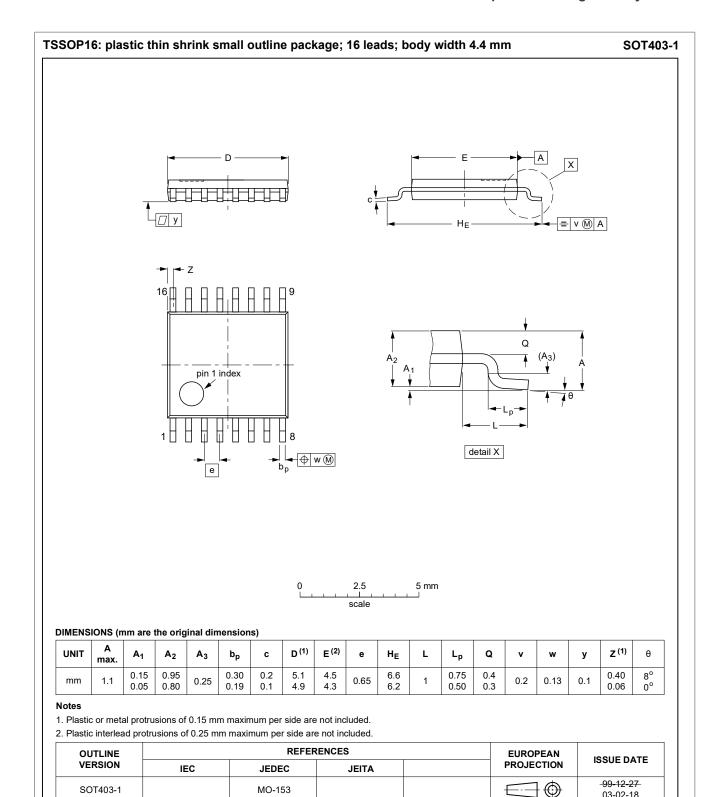


Figure 16. Package outline TSSOP16

03-02-18

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

12 Handling information

CAUTION



This device is sensitive to ElectroStatic Discharge (ESD). Observe precautions for handling electrostatic sensitive devices.

Such precautions are described in the ANSI/ESD S20.20, IEC/ST 61340-5, JESD625-A or equivalent standards.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

13 Abbreviations

Table 242. Abbreviations

Acronym	Description
ВоМ	Bill of Material
ССН	Crypto Configuration Header
СН	Configuration Header
CID	Customer ID
ECC	Elliptic Curve Cryptography
EEPROM	Electrically Erasable Programmable Read-only Memory
GPIO	General Purpose Input Output
IC	Integrated Circuit
Isb	least significant bit
LSB	Least Significant Byte
Manuf. Code	IC Manufacturing Code of NXP is 04h.
msb	most significant bit
MSB	Most Significant Byte
NDEF	NFC Data Exchange Format
NFC	Near Field Communication
POR	Power On Reset
PWM	Pulse Width Modulation
RFU	Reserved for Future Use
TNEP	Tag NDEF Exchange Protocol
SRAM	Static Random-Access Memory

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

14 References

- NFC Forum specification, Digital Protocol Technical Specification Version 2.1 2019-04-03 [T5T] NFC ForumTM
 - https://nfc-forum.org/product-category/specification/
- NFC Forum specification, Type 5 Tag Technical Specification Version 1.0 2018-04-27 [T5T] NFC ForumTM
 - https://nfc-forum.org/product-category/specification/
- [3] NFC Forum specification, Tag NDEF Exchange Protocol Technical Specification Version 1.0 2019-04-24 [TNEP] NFC Forum and provided the street of the str
 - https://nfc-forum.org/our-work/specifications-and-application-documents/specifications/nfc-forum-candidate-technical-specifications/
- [4] NFC Forum Personal Health Care Devices (PHDC) specification https://nfc-forum.org/product-category/specification/
- [5] ISO/IEC 15693 https://www.iso.org/ics/35.240.15/x/
- [6] ISO/IEC 29167-10 https://www.iso.org/ics/35.240.15/x/
- [7] AN11203 NTAG 5 Use of PWM, GPIO and Event detection, doc.no. 5302xx https://www.nxp.com/docs/en/application-note/AN11203.pdf
- [8] AN12364 NTAG 5 Bidirectional data exchange, doc.no. 5303xx https://www.nxp.com/docs/en/application-note/AN12364.pdf
- [9] AN11201 NTAG 5 How to use energy harvesting, doc.no. 5304xx https://www.nxp.com/docs/en/application-note/AN12365.pdf
- [10] AN12366 NTAG 5 Memory Configuration and Scalable Security, doc.no. 5305xx https://www.nxp.com/docs/en/application-note/AN12366.pdf
- [11] AN12368 NTAG 5 Link I²C Controller mode, doc.no. 5306xx https://www.nxp.com/docs/en/application-note/AN12368.pdf
- [12] AN12339 Antenna Design Guide for NTAG 5 https://www.nxp.com/docs/en/application-note/AN12339.pdf
- [13] AN11859 MIFARE Ultralight and NTAG Generating Originality Signature https://www.nxp.com/mynxp/secure-files
- [14] AN11350 NTAG Originality Signature Validation https://www.nxp.com/confidential/AN11350
- [15] UM10204 I2C-bus specification and user manual https://www.nxp.com/docs/en/user-guide/UM10204.pdf

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

15 Revision history

Table 243. Revision history

Document ID	Release date	Description
NTA5332 v.3.4	31 October 2025	 Editorial changes (layout, typos, etc.). The terms "master" and "slave" are replaced with "controller" and "target" throughout this document (terminology, register names, etc.). Section 4 "Ordering information": Removed wafer delivery. Section 8.1.3.13 "Configuration": Table 36: Clarified the condition to detect NFC Field for AUTO_STANDBY_MODE_EN. Section 8.1.3.19 "Event detection pin configuration settings": Table 55: Updated descritpion for NFC Field detect. Section 8.2.4 "Command set": Removed "DISABLE NFC PRIVACY". Section 8.2.4.3.2 "SET PASSWORD": "DISABLE NFC PRIVACY" description merged into SET PASSWORD command . Section "DISABLE NFC PRIVACY": Removed. Section 8.2.4.3.9 "ENABLE NFC PRIVACY": Updated information on disabling. Section 8.7 "NFC privacy mode": Updated information on disabling.
NTA5332 v.3.3	3 July 2020	 ALM_MOD removed from (Table 10) Clarified, that ALM_STATUS_REG is only accessible from I²C perspective Clarified, that I²C controller registers are only accessible from NFC perspective Clarified, that PICK RANDOM ID is only supported in AES mode Information about Privacy mode was missing (see Section 8.7) Clarified that SRAM_CONFIG_PROT restricts access to blocks 37h to 54h (see Section 8.1.3.23) Type number in Table 2 corrected Password identifier for access to restricted area added (see Table 133) Editorial updates
NTA5332 v.3.2	27 April 2020	Product data sheet
NTA5332 v.3.1	24 March 2020	Product data sheet
NTA5332 v.3.0	16 January 2020	Product data sheet
NTA5332 v.2.0	2 October 2019	Preliminary data sheet
NTA5332 v.1.0	28 May 2019	Objective data sheet

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Legal information

Data sheet status

Document status ^{[1][2]}	Product status ^[3]	Definition
Objective [short] data sheet	Development	This document contains data from the objective specification for product development.
Preliminary [short] data sheet	Qualification	This document contains data from the preliminary specification.
Product [short] data sheet	Production	This document contains the product specification.

- [1] Please consult the most recently issued document before initiating or completing a design.
- [2] The term 'short data sheet' is explained in section "Definitions".
- [3] The product status of device(s) described in this document may have changed since this document was published and may differ in case of multiple devices. The latest product status information is available on the Internet at URL https://www.nxp.com.

Definitions

Draft — A draft status on a document indicates that the content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included in a draft version of a document and shall have no liability for the consequences of use of such information.

Short data sheet — A short data sheet is an extract from a full data sheet with the same product type number(s) and title. A short data sheet is intended for quick reference only and should not be relied upon to contain detailed and full information. For detailed and full information see the relevant full data sheet, which is available on request via the local NXP Semiconductors sales office. In case of any inconsistency or conflict with the short data sheet, the full data sheet shall prevail.

Product specification — The information and data provided in a Product data sheet shall define the specification of the product as agreed between NXP Semiconductors and its customer, unless NXP Semiconductors and customer have explicitly agreed otherwise in writing. In no event however, shall an agreement be valid in which the NXP Semiconductors product is deemed to offer functions and qualities beyond those described in the Product data sheet.

Disclaimers

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. NXP Semiconductors takes no responsibility for the content in this document if provided by an information source outside of NXP Semiconductors.

In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms and conditions of commercial sale of NXP Semiconductors.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors and its suppliers accept no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk

Applications — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

Limiting values — Stress above one or more limiting values (as defined in the Absolute Maximum Ratings System of IEC 60134) will cause permanent damage to the device. Limiting values are stress ratings only and (proper) operation of the device at these or any other conditions above those given in the Recommended operating conditions section (if present) or the Characteristics sections of this document is not warranted. Constant or repeated exposure to limiting values will permanently and irreversibly affect the quality and reliability of the device.

Terms and conditions of commercial sale — NXP Semiconductors products are sold subject to the general terms and conditions of commercial sale, as published at https://www.nxp.com/profile/terms, unless otherwise agreed in a valid written individual agreement. In case an individual agreement is concluded only the terms and conditions of the respective agreement shall apply. NXP Semiconductors hereby expressly objects to applying the customer's general terms and conditions with regard to the purchase of NXP Semiconductors products by customer.

No offer to sell or license — Nothing in this document may be interpreted or construed as an offer to sell products that is open for acceptance or the grant, conveyance or implication of any license under any copyrights, patents or other industrial or intellectual property rights.

NTA5332

All information provided in this document is subject to legal disclaimers.

© 2025 NXP B.V. All rights reserved.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Quick reference data — The Quick reference data is an extract of the product data given in the Limiting values and Characteristics sections of this document, and as such is not complete, exhaustive or legally binding.

Export control — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

Suitability for use in non-automotive qualified products — Unless this document expressly states that this specific NXP Semiconductors product is automotive qualified, the product is not suitable for automotive use. It is neither qualified nor tested in accordance with automotive testing or application requirements. NXP Semiconductors accepts no liability for inclusion and/or use of non-automotive qualified products in automotive equipment or applications.

In the event that customer uses the product for design-in and use in automotive applications to automotive specifications and standards, customer (a) shall use the product without NXP Semiconductors' warranty of the product for such automotive applications, use and specifications, and (b) whenever customer uses the product for automotive applications beyond NXP Semiconductors' specifications such use shall be solely at customer's own risk, and (c) customer fully indemnifies NXP Semiconductors for any liability, damages or failed product claims resulting from customer design and use of the product for automotive applications beyond NXP Semiconductors' standard warranty and NXP Semiconductors' product specifications.

HTML publications — An HTML version, if available, of this document is provided as a courtesy. Definitive information is contained in the applicable document in PDF format. If there is a discrepancy between the HTML document and the PDF document, the PDF document has priority.

Translations — A non-English (translated) version of a document, including the legal information in that document, is for reference only. The English version shall prevail in case of any discrepancy between the translated and English versions.

Security — Customer understands that all NXP products may be subject to unidentified vulnerabilities or may support established security standards or specifications with known limitations. Customer is responsible for the design and operation of its applications and products throughout their lifecycles to reduce the effect of these vulnerabilities on customer's applications and products. Customer's responsibility also extends to other open and/or proprietary technologies supported by NXP products for use in customer's applications. NXP accepts no liability for any vulnerability. Customer should regularly check security updates from NXP and follow up appropriately. Customer shall select products with security features that best meet rules, regulations, and standards of the intended application and make the ultimate design decisions regarding its products and is solely responsible for compliance with all legal, regulatory, and security related requirements concerning its products, regardless of any information or support that may be provided by NXP.

NXP has a Product Security Incident Response Team (PSIRT) (reachable at PSIRT@nxp.com) that manages the investigation, reporting, and solution release to security vulnerabilities of NXP products.

NXP B.V. — NXP B.V. is not an operating company and it does not distribute or sell products.

Trademarks

Notice: All referenced brands, product names, service names, and trademarks are the property of their respective owners.

NXP — wordmark and logo are trademarks of NXP B.V.

I2C-bus - logo is a trademark of NXP B.V.

NTAG — is a trademark of NXP B.V.

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Tables

Tab. 1.	Ordering information	5	Tab. 44.	Pulse Width Modulation Duty Cycle	
Tab. 2.	Marking codes	6		Configuration Location (PWMx_ON and	
Tab. 3.	Pin description for XQFN16	8		PWMx_OFF)	32
Tab. 4.	Pin description for TSSOP16		Tab. 45.	Pulse Width Modulation Duty Cycle	
Tab. 5.	User memory organization			Session Register Location (PWMx_ON and	
Tab. 6.	Memory content at delivery				32
Tab. 7.	COUNTER BLOCK data structure		Tab. 46.	Pulse Width Modulatin ON time	
Tab. 8.	Preset counter data structure			Configuration Definition (PWMx_ON and	
Tab. 9.	Increment counter data structure			PWMx_ON_REG)	32
Tab. 10.	Configuration Memory organization		Tab. 47.	Pulse Width Modulation OFF time	
Tab. 11.	32 Byte Originality Signature			Configuration Definition (PWMx_OFF and	
Tab. 12.	Configuration Header (CH) location			PWMx_OFF_REG)	32
Tab. 13.	Configuration Header Codes		Tab. 48.	Watch Dog Timer Configuration Location	
Tab. 14.	Customer ID (CID) location		100. 10.	(WDT_CONFIG)	33
Tab. 15.	NFC Global Crypto Header (GCH) location		Tab. 49.	Watch Dog Timer Configuration Register	00
Tab. 16.	Global Crypto Header Configuration in	10	145. 45.	Location (WDT_CONFIG_REG)	33
100. 10.	plain password mode	10	Tab. 50.	Watch Dog Timer Enable Definition (WDT_	00
Tab. 17.	Global Crypto Header Configuration Value	13	1ab. 50.	ENABLE and WDT_EN_REG)	33
1ab. 17.	in AES mode	10	Tab. 51.	Energy harvesting Configuration Location	33
Tab. 18.	Crypto Configuration Header (CCH)	19	1ab. 51.	(EH_CONFIG)	33
1ab. 10.		21	Tob 52		33
Tob 10	location Crypto Configuration Header Values		Tab. 52.	Energy harvesting Configuration Value	24
Tab. 19.		∠ 1	Tob E2	Definition (EH_CONFIG)	34
Tab. 20.	NFC Authentication Limit Counter (NFC_	24	Tab. 53.	Event Detection Configuration Location	24
T-1- 04	AUTH_LIMIT) location		T-6 51	(ED_CONFIG)	34
Tab. 21.	NFC Key Header (KHx) location		Tab. 54.	Event Detection Configuration Register	0.4
Tab. 22.	NFC Key Header Values		T 1 55	Location (ED_CONFIG_REG)	34
Tab. 23.	NFC Key Privileges (KPx) location		Tab. 55.	Event Detection Definition (ED_CONFIG	٥-
Tab. 24.	Definition of NFC Key Privileges bytes KPx .			and ED_CONFIG_REG)	. 35
Tab. 25.	Key location		Tab. 56.	Event Detection Clear Register Location	
Tab. 26.	Plain Password location			(ED_INTR_CLEAR_REG)	36
Tab. 27.	I2C Password location		Tab. 57.	Event Detection Clear Register (ED_INTR_	
Tab. 28.	I2C Key Authenticate Password location			CLEAR_REG)	
Tab. 29.	I2C Key Header (I2C_KH) location		Tab. 58.	I2C Target Configuration Location	36
Tab. 30.	I2C Key Header Values	26	Tab. 59.	I2C Target Configuration Definition (I2C_	
Tab. 31.	I2C Protection Pointer and Configuration			TARGET_ADDR)	36
	location		Tab. 60.	I2C Target Configuration Definition (I2C_	
Tab. 32.	I2C Memory organization example	26		TARGET_CONFIG)	37
Tab. 33.	I2C Protection Pointer Configuration (I2C_		Tab. 61.	I2C Controller Clock Settings Configuration	
	PPC)	27		Location (I2C_CONTROLLER_CONFIG)	37
Tab. 34.	I2C Authentication Limit Counter (I2C_		Tab. 62.	I2C Controller Clock Configuration	
	AUTH_LIMIT) location			Definition (I2C_CONTROLLER_SCL_	
Tab. 35.	Configuration Bytes Location (CONFIG)	28		LOW)	37
Tab. 36.	Configuration Definition (CONFIG_0)		Tab. 63.	I2C Controller Clock Configuration	
Tab. 37.	Configuration Definition (CONFIG_1)	29		Definition (I2C_CONTROLLER_SCL_	
Tab. 38.	Configuration Definition (CONFIG_2)	29		HIGH)	37
Tab. 39.	Synchronization Block Bytes Location		Tab. 64.	Device Security Configuration Byte location	37
	(SYNCH_DATA_BLOCK)	30	Tab. 65.	Device Security Byte Definition (DEV_	
Tab. 40.	Synchronization Block Register Bytes			SEC_CONFIG)	38
	Location (SYNCH DATA BLOCK REG)	30	Tab. 66.	SRAM and Configuration Byte location	38
Tab. 41.	PWM and GPIO Configuration Location		Tab. 67.	SRAM and Configuration Protection	
	(PWM_GPIO_CONFIG)	31		(SRAM_CONF_PROT)	38
Tab. 42.	PWM and GPIO Configuration Definition		Tab. 68.	Restricted AREA_1 Pointer location	
	(PWM_GPIO_CONFIG_0)	31	Tab. 69.	Memory organization example from NFC	
Tab. 43.	PWM and GPIO Configuration Definition	-		perspective	39
	(PWM_GPIO_CONFIG_1 and PWM_		Tab. 70.	Active NFC Configuration location	
	GPIO_CONFIG_1_REG)	31	Tab. 71.	ALM Configuration 0 (ALM_CONF_00)	
	<u> </u>			5 - · · · · g · · · · · · · · · · · · · · · · · · ·	

Tab. 72.	ALM Configuration 1 (ALM_CONF_01)		Tab. 111.	I2C Controller Data Length Definition (I2C_	
Tab. 73.	ALM Configuration 2 (ALM_CONF_02)			M_LEN_REG)	56
Tab. 74.	ALM Configuration 3 (ALM_CONF_03)		Tab. 112.	I2C Controller Status Definition (I2C_M_	
Tab. 75.	ALM Look-up-table (ALM_LUT_dd)	41		STATUS_REG)	56
Tab. 76.	Active NFC Configuration Default Content	41	Tab. 113.	ALM Status Register Location (ALM_	
Tab. 77.	Application Family Identifier (AFI) location	42		STATUS_REG)	57
Tab. 78.	Data Storage Format Identifier (DSFID)		Tab. 114.	ALM Status Register (ALM_STATUS_REG)	
	location	42		SRAM mirroring	
Tab. 79.	Electronic Article Surveillance ID (EASID)			SRAM mirroring with default content	
	location	42		SRAM COPY BYTES (SRAM_COPY_	
Tab. 80.	NFC Protection Pointer (NFC PP) location			BYTES)	58
Tab. 81.	Memory organization example		Tab 118	SRAM_COPY_BYTES Definition	
Tab. 82.	NFC Protection Pointer Conditions (NFC_	0		SRAM Default Content location	
145. 02.	PPC) location	43		Bit rates from reader to tag	
Tab. 83.	NFC Protection Pointer Configuration	0		Bit rates from tag to reader	
1ab. 00.	(NFC_PPC)	13		NFC command set supported by NTAG 5	00
Tab. 84.	NFC Lock Block Configuration location		140. 122.	boost	63
			Tob 122	READ CONFIG request format	
Tab. 85.	I2C Lock Block Configuration location	44		READ CONFIG request format	00
Tab. 86.	Device configuration section lock bytes	15	1ab. 124.		66
T-6 07	location	45	T-h 105	Error_flag is NOT set	00
Tab. 87.	NFC configuration section lock byte 0	45	1ab. 125.	READ CONFIGURATION response format	00
T 1 00	definition (NFC_SECTION_LOCK_0)	45	T 100	when Error_flag is set	
Tab. 88.	NFC configuration section lock Byte 1	40	Tab. 126.	WRITE CONFIG request format	66
T	definition (NFC_SECTION_LOCK_1)	46	Tab. 127.	WRITE CONFIG response format when	
Tab. 89.	I2C configuration section lock byte 0			Error_flag is NOT set	66
	definition (I2C_SECTION_LOCK_0)	46	Tab. 128.	WRITE CONFIG response format when	
Tab. 90.	I2C configuration section lock byte 1			Error_flag is set	
	definition (I2C_SECTION_LOCK_1)			GET RANDOM NUMBER request format	67
Tab. 91.	Session Register Location		Tab. 130.	GET RANDOM NUMBER response format	
Tab. 92.	Status Register Location			when Error_flag is NOT set	67
Tab. 93.	Status 0 Register		Tab. 131.	GET RANDOM NUMBER response format	
Tab. 94.	Status 1 Register	49		when Error_flag is set	67
Tab. 95.	Configuration Register Location (CONFIG_		Tab. 132.	SET PASSWORD request format	68
	REG)	50	Tab. 133.	Password Identifier	68
Tab. 96.	Configuration Definition (CONFIG_0_REG)	50	Tab. 134.	SET PASSWORD response format when	
Tab. 97.	Configuration Definition (CONFIG_1_REG)	51		Error_flag is NOT set	68
Tab. 98.	Configuration Definition (CONFIG_2_REG)	51	Tab. 135.	SET PASSWORD response format when	
Tab. 99.	PWM and GPIO Configuration Register			Error_flag is set	68
	Location (PWM GPIO CONFIG REG)	52	Tab. 136.	WRITE PASSWORD request format	
Tab. 100.	PWM and GPIO Configuration Register			WRITE PASSWORD response format	
	Definition (PWM_GPIO_CONFIG_0_REG)	52		when Error_flag is NOT set	69
Tab. 101.	PWM and GPIO Configuration Register		Tab. 138.	WRITE PASSWORD response format	
	Definition (PWM_GPIO_CONFIG_1_REG)	53		when Error_flag is set	69
Tab. 102.	Energy Harvesting Configuration Register		Tab. 139.	LOCK PASSWORD request format	
	Location (EH_CONFIG_REG)	53		LOCK PASSWORD response format when	
Tab 103	Energy Harvesting Register Value		145. 110.	Error_flag is NOT set	69
145. 100.	Definition EH_CONFIG_REG)	54	Tah 141	LOCK PASSWORD response format when	00
Tah 10/	I2C Target Configuration Register Location		146. 111.	Error_flag is set	60
	I2C Target Configuration Definition (I2C_	0-	Tab 1/12	64 BIT PASSWORD PROTECTION	03
1ab. 105.	TARGET_ADDR_REG)	54	1ab. 142.	request format	70
Tab 106	I2C Target Configuration Definition (I2C_	54	Tab 1/12	64 BIT PASSWORD PROTECTION	10
1ab. 100.	TARGET CONFIG REG)	55	1ab. 145.	response format when Error flag is NOT	
Tab 107				• = •	70
	RESET_GEN_REG location		Tob 444	set	70
	ED_INTR_CLEAR_REG location	၁၁	1ab. 144.	64 BIT PASSWORD PROTECTION	
iap. 109.	I2C Controller Configuration Register	50		response format when Error_flag is NOT	٦.
T 1 446	Location	56	T 1 445	set	
ıab. 110.	I2C Target Address used in I2C controller	5 0		Memory organization	
	transaction (I2C_M_S_ADD_REG)	56		PROTECT PAGE request format	
			iab. 147.	Extended Protection status byte	71

Tab. 148.	Protection status bits definition in plain password mode	72	Tab. 186.	READ SRAM response format when Error_flag is NOT set	84
Tab. 149.	Protection status bits definition in AES		Tab. 187.	READ SRAM response format when Error_	
	mode	72		flag is set	
lab. 150.	PROTECT PAGE response format when			WRITE SRAM request format	84
	Error_flag is NOT set	72	Tab. 189.	WRITE SRAM response format when	
Tab. 151.	PROTECT PAGE response format when			Error_flag is NOT set	84
	Error_flag is set	72	Tab. 190.	WRITE SRAM response format when	
Tab. 152.	LOCK PAGE PROTECTION CONDITION			Error_flag is set	84
	request format	73	Tab. 191.	READ SIGNATURE request format	85
Tab. 153.	LOCK PAGE PROTECTION CONDITION			READ SIGNATURE response format when	
	response format when Error flag is NOT			Error_flag is NOT set	85
	set	73	Tab. 193.	READ SIGNATURE response format when	
Tab. 154.	LOCK PAGE PROTECTION CONDITION			Error_flag is set	85
	response format when Error_flag is set	73	Tab. 194.	WRITE IZC request format	
Tab 155	DESTROY request format			I2C param byte	
	DESTROY response format when Error_			WRITE I2C response format when Error_	•.
1ab. 100.	flag is NOT set	7/	100.	flag is NOT set	87
Tab 157	DESTROY response format when Error_	/ 4	Tab 107	WRITE I2C response format when Error_	01
1ab. 157.	_	71	1ab. 197.		07
Tob 150	flag is set		Tab 100	flag is set	
	ENABLE NFC PRIVACY request format	/4		READ I2C request format	
1ab. 159.	ENABLE NFC PRIVACY response format	7.4		I2C param byte	88
T 1 400	when Error_flag is NOT set	/4	lab. 200.	READ I2C response format when Error_	
Tab. 160.	ENABLE NFC PRIVACY response format			flag is NOT set	88
	when Error_flag is set		Tab. 201.	READ I2C response format when Error_	
	AUTHENTICATE request format	75		flag is set	
Tab. 162.	AUTHENTICATE response format when			SET EAS request format	89
	Error_flag is NOT set(in process reply)	76	Tab. 203.	SET EAS response format when Error_flag	
Tab. 163.	AUTHENTICATE response format when			is NOT set	89
	Error_flag is set	76	Tab. 204.	SET EAS response format when Error_flag	
Tab. 164.	Message format for TAM1			is set	89
	TResponse for TAM1		Tab. 205.	RESET EAS request format	
	Message format for MAM1			RESET EAS response format when Error_	
	TReseponse for MAM1			flag is NOT set	89
	Message format for MAM2		Tab. 207.	RESET EAS response format when Error_	
	Definition of Purpose_MAM2			flag is set	. 89
Tab. 170.	TReseponse for MAM2	77	Tah 208	LOCK EAS request format	
	CHALLENGE request format			LOCK EAS response format when Error_	00
	Message format		100. 200.	flag is NOT set	an
	READBUFFER request format		Tab 210	LOCK EAS response format when Error_	90
	READBUFFER response format when	70	1ab. 210.	flag is set	00
1ab. 174.		70	Tab 211		
T-L 175	Error_flag is NOT set			EAS ALARM Request format	90
	TResponse	/ 0	1ab. 212.	EAS ALARM Response format (Option flag	0.4
1ab. 176.	READBUFFER response format when	70	T 1 040	logic 0)	91
T	Error_flag is set		lab. 213.	EAS ALARM Response format(Option flag	
	INVENTORY READ request format	80		logic 1)	91
lab. 178.	INVENTORY READ response format:		lab. 214.	EAS ALAMR response format when Error_	
	Option flag logic 0b	80		flag is set	
Tab. 179.	INVENTORY READ response format:			PROTECT EAS/AFI request format	91
	Option flag logic 1b	80	Tab. 216.	PROTECT EAS/AFI response format when	
	Example: mask length = 30	81		Error_flag is NOT set	92
Tab. 181.	Inventory Read (extended mode) request		Tab. 217.	PROTECT EAS/AFI response format when	
	format	81		Error_flag is set	92
Tab. 182.	Extended options		Tab. 218.	WRITE EAS ID request format	
	Inventory Read (extended mode) response			WRITE EAS ID response format when	
	format: Option_flag 1b	82		Error_flag is NOT set	92
Tab. 184	Example		Tab. 220	WRITE EAS ID response format when	
	READ SRAM request format			Error_flag is set	92
100.					52

Tab. 221.	GET NXP SYSTEM INFORMATION	Tab. 232.	PICK RANDOM ID response format when	
	request format93		Error_flag is set	96
Tab. 222.	GET NXP SYSTEM INFORMATION	Tab. 233.	Random ID	96
	response format when Error_flag is NOT	Tab. 234.	Default NTAG 5 I2C address from I2C	99
	set93	Tab. 235.	Pulse Width Modulation Frequency	103
Tab. 223.	Protection Pointer condition byte93	Tab. 236.	NFC Lock Block Configuration location	106
Tab. 224.	Lock bits byte94	Tab. 237.	I2C Lock Block Configuration location	107
Tab. 225.	Feature flags byte 094	Tab. 238.	32 Byte Originality Signature	109
Tab. 226.	Feature flags byte 194	Tab. 239.	Limiting values In accordance with the	
Tab. 227.	Feature flags byte 295		Absolute Maximum Rating System (IEC	
Tab. 228.	Feature flags byte 395		60134)	11′
Tab. 229.	GET NXP SYSTEM INFORMATION	Tab. 240.	Characteristics	112
	response format when Error_flag is set95	Tab. 241.		115
Tab. 230.	PICK RANDOM ID request format96	Tab. 242.	Abbreviations	120
Tab. 231.	PICK RANDOM ID response format when	Tab. 243.	Revision history	122
	Error_flag is NOT set96			

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Figures

Fig. 1. Fig. 2.	NTAG 5 boost overview1 Block diagram NTAG 5 boost7	•	READ MEMORY and WRITE MEMORY command	101
Fig. 3.	Pin configuration for XQFN16 package8		READ REGISTER and WRITE REGISTER	
Fig. 4.	Pin configuration for TSSOP16 package9		command	101
Fig. 5.	NTAG 5 boost output driver 60	Fig. 12.	Pulse Width Modulation Example	103
Fig. 6.	State Machine and State Transitions60	Fig. 13.	Energy harvesting example circuit	. 106
Fig. 7.	I2C Controller write principle86	Fig. 14.	Concept of memory areas	108
Fig. 8.	I2C Controller read principle 86	Fig. 15.	Package outline XQFN16	117
Fig. 9.	I2C bus protocol98	Fig. 16.	Package outline TSSOP16	118

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

Contents

1	General description	1	8.1.4.8	Event detection register	54
2	Features and benefits	3	8.1.4.9	I2C target register settings	
3	Applications	4	8.1.4.10	System reset generation	
4	Ordering information	5	8.1.4.11	Clear event detection register	55
5	Marking	6	8.1.4.12	I2C controller status registers	55
6	Block diagram	7	8.1.4.13	ALM status registers	57
7	Pinning information	8	8.1.5	SRAM	57
8	Functional description		8.2	NFC interface	59
8.1	Memory organization		8.2.1	Passive communication mode	59
8.1.1	General		8.2.2	Active communication mode	59
8.1.2	User memory	10	8.2.3	State diagram and state transitions	
8.1.2.1	16-bit counter	11	8.2.3.1	POWER-OFF state	
8.1.3	Configuration memory	13	8.2.3.2	READY state	
8.1.3.1	Originality Signature		8.2.3.3	SELECTED state	
8.1.3.2	Configuration Header		8.2.3.4	SELECTED SECURE state	62
8.1.3.3	Customer ID (CID)		8.2.3.5	QUIET state	
8.1.3.4	NFC Global Crypto Header		8.2.4	Command set	
8.1.3.5	NFC Crypto Configuration Header		8.2.4.1	Commands for state transitions	
8.1.3.6	NFC Authentication Limit Counter		8.2.4.2	Configuration operations	
8.1.3.7	NFC Key Header		8.2.4.3	PWD Authentication	
8.1.3.8	NFC Key Privileges		8.2.4.4	AES Authentication	
8.1.3.9	Keys and Passwords		8.2.4.5	Memory operations	
8.1.3.10	I2C Key Header		8.2.4.6	SRAM operations	
8.1.3.11	I2C Protection Pointer and Condition		8.2.4.7	Originality Signature	
8.1.3.12	I2C Authentication Limit Counter		8.2.4.8	I2C Transparent Channel	
8.1.3.13	Configuration		8.2.4.9	Other	
8.1.3.14	Synchronization Block		8.2.5	Data integrity	
8.1.3.15	Pulse Width Modulation and GPIO	50	8.2.6	Error Handling	
0.1.5.15	Configuration	30	8.2.6.1	Transmission Errors	
8.1.3.16	Pulse Width Modulation Duty Cycle settings		8.2.6.2	Not supported commands or options	
8.1.3.17	Watch Dog Timer settings		8.3	Wired Interface	
8.1.3.18	Energy harvesting settings		8.3.1	I2C interface	
8.1.3.19	Event detection pin configuration settings		8.3.1.1	Target mode	
8.1.3.19			8.3.1.2	Controller mode	
8.1.3.21	I2C target configuration settings I2C controller clock configuration settings		8.3.1.3	Watch Dog Timer	
8.1.3.22			8.3.1.4	Command Set	
8.1.3.23	Device security configuration bytesSRAM and Configuration protection		8.3.1. 4 8.3.1.5		
8.1.3.24			8.3.2	Error Handling Event detection	
8.1.3.25	Restricted AREA_1 pointer				
	Active NFC configuration		8.3.3	GPIO	
8.1.3.26 8.1.3.27	Application Family Identifier Data Storage Format Identifier		8.3.4 8.3.5	PWMStandby mode	
-	•			,	
8.1.3.28	Electronic Article Surveillance ID		8.3.6	Hard power-down mode	
8.1.3.29	NFC Protection pointer		8.4	Arbitration between NFC and I2C interface	
8.1.3.30	NFC Protection Pointer Conditions		8.4.1	NFC Mode	
8.1.3.31	NFC lock bytes		8.4.2	I2C Mode	
8.1.3.32	I2C lock bytes		8.4.3	Normal Mode	
8.1.3.33	Device configuration section lock bytes		8.4.4	SRAM Mirror Mode	
8.1.4	Session registers		8.4.5	SRAM Pass-Through Mode	
8.1.4.1	Status register		8.4.6	SRAM PHDC Mode	
8.1.4.2	Configuration register		8.5	Energy harvesting	
8.1.4.3	Synchronization block register	52	8.6	Security	
8.1.4.4	Pulse Width Modulation and GPIO	5 0	8.6.1	Locking EEPROM to read only	
0445	configuration register		8.6.2	Memory Areas	
8.1.4.5	Pulse Width Modulation duty cycle register		8.6.3	Plain password authentication	
8.1.4.6	Watch Dog Timer register		8.6.4	AES authentication	
8.1.4.7	Energy harvesting register	53	8.7	NFC privacy mode	109

NTA5332

NTAG 5 boost - NFC Forum-compliant I²C bridge for tiny devices

8.8	Programmable Originality signature	109
9	Limiting values	111
10	Characteristics	112
10.1	Static Characteristics	112
10.2	Dynamic characteristics	115
11	Package outline	117
12	Handling information	
13	Abbreviations	120
14	References	121
15	Revision history	122
	l egal information	

Please be aware that important notices concerning this document and the product(s) described herein, have been included in section 'Legal information'.