


# DAC161S997EVM User's Guide

## 1 Introduction

The Texas Instruments DAC161S997EVM evaluation module (EVM) helps designers evaluate the operation and performance of the DAC161S997 4-20mA Loop Drive with SPI control. The EVM contains a low cost MSP430G2553 microcontroller which comes pre-loaded with firmware to communicate with the Labview based PC Software. A JTAG header is provided which can be used to program custom firmware. A general purpose header with SPI and microcontroller GPIOs is provided to ease development of sensor transmitters and other applications.

The EVM contains one DAC161S997 and is configured as Loop-Powered 2-Wire Transmitter (See Table 1).

Converter	IC	Package
U2	DAC161S997	LLP-16

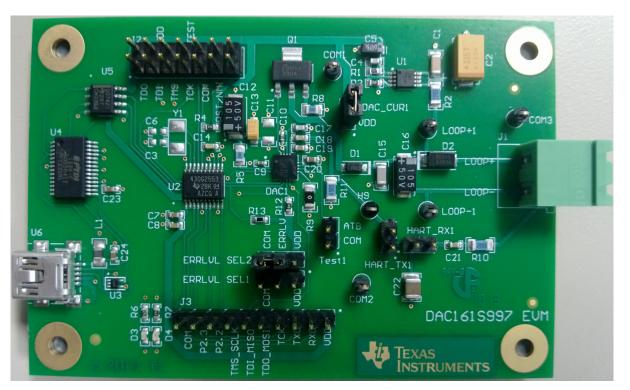

# Table 1. Device and Package Configurations

Figure 1.

Copyright © 2013, Texas Instruments Incorporated



# 2 EVM Setup

This section describes the jumpers and connectors on the EVM as well and how to properly connect, set up, and use the DAC161S997EVM.

# 2.1 Input/Output Connector Description

- 1. J1 : Loop Connector. Loop+ and Loop- Pins.
- 2. J2 : JTAG Connector. Used to debug/flash on-board MSP430G2553
- 3. J3 : General Purpose I/O. Can be used to connect to a SPI-based Analog front end such as the LMP90100 from TI's SensorAFE family.
- 4. DAC\_CUR: Power supply for DAC161S997. Short Pin1 and Pin2 to power-up DAC.
- 5. ERRLVL\_SEL1: Pin2 connected to MSP430 (GPIO P2.4) for software control of Error level signal.
- ERRLVL\_SEL2: Pin2 connected to ERRLV pin of DAC161S997. Pin1 connected to COM and Pin3 Connected to VDD.
- 7. HART\_TX1: HART transmit input connector. Can be connected to an external HART modem output.
- 8. HART\_RX1: HART receive output connector. Can be connected to an external HART modem input.

# 2.2 EVM Connections

For proper operation of the DAC161S997EVM, first short the DAC\_CUR pins and connect jumper between Pin1 and Pin2 of ERRLVL\_SEL2 jumpers (the EVM is shipped in this configuration).

The EVM is powered through the Loop supply. Connect Loop+ pin of J1 to Positive of the supply and negative of the supply to positive terminal of ammeter and negative terminal of ammeter to Loop- pins. This configuration will supply power to EVM and can measure the Loop current.

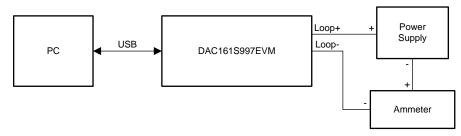



Figure 2. EVM Connection Diagram

# 3 Software Installation

It is recommended to use the latest version of DAC161S997 software; this can be downloaded from: <u>http://www.ti.com/product/dac161s997</u>. You must install the software before you connect the DAC161S997EVM to your PC.

To install the DAC161S997EVM software:

- Direct a browser to <u>http://www.ti.com/products/dac161s997</u>, then scroll down to the Tools & Software section to download the latest DAC161S997 software.
- Unzip the downloaded file from a known directory, and run the "setup.exe" in /TI\_DAC161S997\_Installer/Volume/





DAC16	15997
	Destination Directory Select the primary installation directory.
	All software will be installed in the following location(s). To install software into a different location(s), click the Browse button and select another directory.
	Directory for DAC161S997 C:\Program Files (x86)\Texas Instruments\DAC161S997\ Browse Browse
	Directory for National Instruments products C:\Program Files (x86)\National Instruments\ Browse
	<< Back Next>>> Cancel

Figure 3.

- Click Next, read the license agreement and complete the first portion of the installation.
- Next, the FTDI drivers are installed automatically.



Figure 4.

• Click Extract and the following window will appear:





Figure 5.

 Click Next. Once the drivers are installed a Completing the Device Driver Installation Wizard window. Then, Click Finish to complete the installation.

Device Driver Installation Wizar	d
	Welcome to the Device Driver Installation Wizard! This wizard helps you install the software drivers that some computers devices need in order to work.
	< <u>B</u> ack Next > Cancel

Figure 6.

- Before you launch the DAC161S997 Software, Connect connect the DAC161S997EVM to a USB port of your computer and connect the Loop supply voltage.
- Open the computer's "Device Manager" and verify that a new COM port named "USB Serial Port" has been added in the Ports(COM&LPT) section.




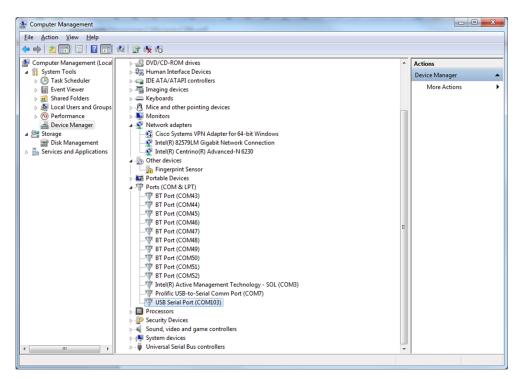


Figure 7.

- Make a note of the assigned COM port number; this number is needed to connect the PC to the DAC161S997EVM.
- Run the DAC161S997 Software and select the COM port that was assigned and click on connect.



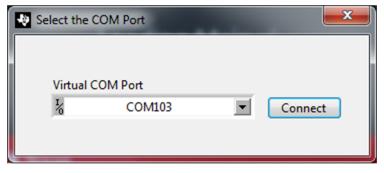

• On start-up, the software retrieves all the DAC161S997 registers and updates the software accordingly.



Debug Help			
	DAC16	1S997 GUI	
Action     Action       High Level Configuration     Action       Overview     Device Control       Device Configuration     Action       Action Configuration     Action	Virtual COM Port		DAC161S997 Device Control
	Current Output (mA)         DAC Code           0.000         100         ×         0000           Error Low (mA)         Error Low         0000         ×         0000           Error High (mA)         Error High         ×         0000         ×         0000           Error High (mA)         Error High         ×         0000         ×         0000         ×           Retry Loop         Retry Interval	Current Loop Error Frame Error SPI Timeout Error Loop Error ERRLVL Pin	
	Mask Loop Error DIS_LOOP_ERR_ERRB Mask SPI Error Mask SPI Timeout 100 ms	Data Read back in pro	igress
•			

Figure 9.

- The DAC output current can be set in the Current Output field, and the Error current levels can also be set in the appropriate fields.
- Any error conditions are indicated and can be cleared when desired.
- Individual registers can be set directly if desired.



# 4 Board Layout

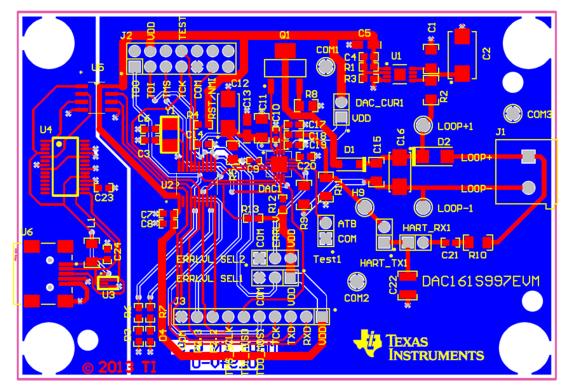


Figure 10. Top Assembly Layer

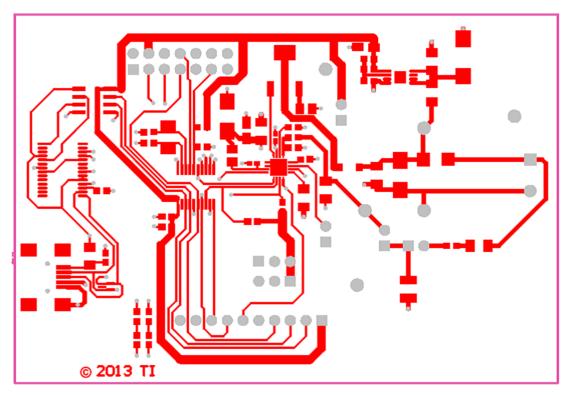


Figure 11. Top Layer Routing




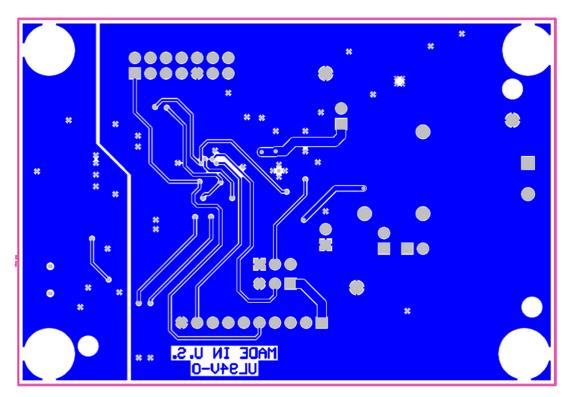


Figure 12. Bottom Layer Routing



5 Schematic



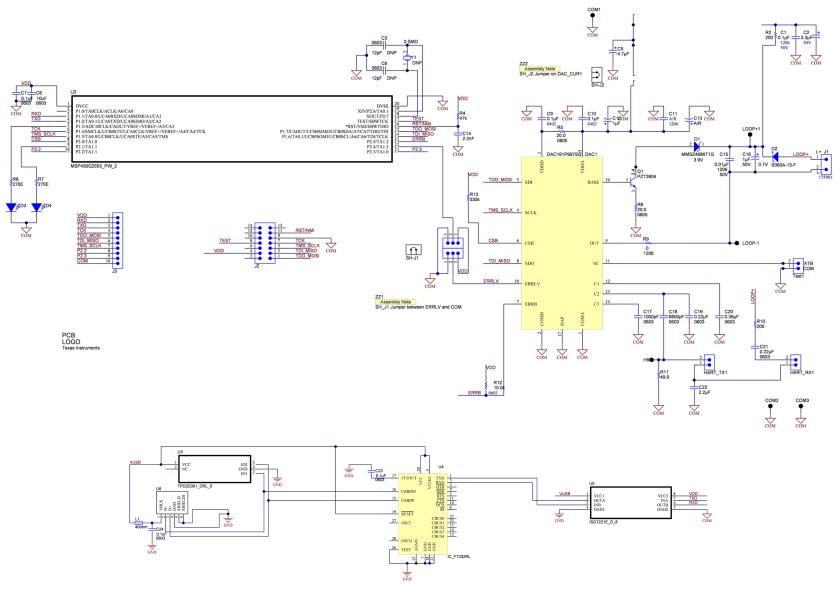



# 6 Bill of Materials

Designator	Quantity	Value	Description	Package Reference	Part Number
C1	1	0.1µF	CAP, CERM, 0.1uF, 50V, +/-5%, X7R, 1206	1206	C1206C104J5RACTU
C2	1	3.3µF	CAP, TANT, 3.3uF, 50V, +/-10%, 0.8 ohm, 7343-31 SMD	7343-31	TPSD335K050R0800
C4, C17	2	1000pF	CAP, CERM, 1000pF, 50V, +/- 10%, C0G/NP0, 0603	603	06035A102KAT2A
C5	1	4.7µF	CAP, TANT, 4.7uF, 10V, +/-10%, 1.4 ohm, 3216-18 SMD	3216-18	T495A475K010ZTE1K4
C7, C23, C24	3	0.1µF	CAP CER 0.1UF 10V 10% X7R 0603	603	C0603C104K8RACTU
C8	1	10µF	CAP CER 10UF 10V 10% X5R 0603	603	C1608X5R1A106K
C9, C10	2	0.1µF	CAP, CERM, 0.1uF, 10V, +/- 10%, X5R, 0402	402	C1005X5R1A104K
C12, C16	2	1µF	CAP, TANT, 1uF, 50V, +/-10%, 4.6 ohm, 6032-28 SMD	6032-28	293D105X9050C2TE3
C13	1	3.3µF	CAP, TANT, 3.3uF, 16V, +/-10%, 3.5 ohm, 3216-18 SMD	3216-18	TPSA335K016R3500
C14	1	2.2nF	CAP CER 2200PF 10V 5% X7R 0603	603	C0603C222J8RACTU
C15	1	0.01µF	CAP, CERM, 0.01uF, 50V, +/- 5%, C0G/NP0, 1206	1206	C3216C0G1H103J
C18	1	6800pF	CAP, CERM, 6800pF, 50V, +/- 5%, X7R, 0603	603	C0603C682J5RACTU
C19, C21	2	0.22µF	CAP, CERM, 0.22uF, 10V, +/- 10%, X5R, 0603	603	C1608X5R1A224K
C20	1	0.39µF	CAP, CERM, 0.39uF, 10V, +/- 10%, X5R, 0603	603	C0603C394K8PACTU
C22	1	2.2µF	CAP, CERM, 2.2uF, 100V, +/- 10%, X7R, 1210	1210	HMK325B7225KN-T
COM1, COM2, COM3, H9, LOOP+1, LOOP-1	6	Black	Test Point, TH, Miniature, Black		5001
D1	1	3.9V	Diode, Zener, 3.9V, 500mW, SOD-123	SOD-123	MMSZ4686T1G
D2	1	0.7V	Diode, Schottky, 60V, 3A, SMA	SMA	B360A-13-F
D3	1		LED, [Color], [MountType]	603	LG L29K-G2J1-24-Z
D4	1		LED, [Color], [MountType]	603	SML-LX0603SRW-TR
DAC1	1		DAC161S997		DAC161P997SQ
DAC_CUR1, HART_RX1, HART_TX1, Test1	4		Header, TH, 100mil, 2x1, Gold plated, 230 mil above insulator		TSW-102-07-G-S
ERRLVL SEL1, ERRLVL SEL2	2		Header, TH, 100mil, 3x1, Gold plated, 230 mil above insulator		TSW-103-07-G-S
J1	1	250V	CONN HEADER RT ANG 2POS 5.08MM		1759017
J2	1		Header, TH, 100mil, 7x2, Gold plated, 230 mil above insulator		TSW-107-07-G-D
J3	1		Header, TH, 100mil, 10x1, Gold plated, 230 mil above insulator		TSW-110-07-G-S
L1	1	40Ω	1A Ferrite Bead, 2 ohm @ 100MHz, SMD	1206	MI0805K400R-10
Q1	1		TRANSISTOR GP NPN 40V SOT-223	SOT-223	PZT3904
R1	1	158k	RES, 158k ohm, 1%, 0.1W, 0603	603	CRCW0603158KFKEA



Designator	Quantity	Value	Description	Package Reference	Part Number
R2, R10	2	200Ω	RES, 200 ohm, 1%, 0.25W, 1206	1206	CRCW1206200RFKEA
R3	1	100k	RES, 100k ohm, 1%, 0.1W, 0603	603	CRCW0603100KFKEA
R4	1	47k	RES 47K OHM 1/10W 5% 0603 SMD	603	ERJ-3GEYJ473V
R5, R8	2	20.0Ω	RES, 20.0 ohm, 1%, 0.125W, 0805	805	CRCW080520R0FKEA
R6, R7	2	270E	RES 270 OHM 1/10W 5% 0603 SMD	603	ERJ-3GEYJ271V
R9	1	0	RES, 0 ohm, 5%, 0.25W, 1206	1206	CRCW12060000Z0EA
R11	1	49.9Ω	RES, 49.9 ohm, 1%, 0.25W, 1206	1206	CRCW120649R9FKEA
R12	1	10.0k	RES, 10.0k ohm, 1%, 0.1W, 0603	603	CRCW060310K0FKEA
R13	1	330k	RES, 330k ohm, 5%, 0.1W, 0603	603	CRCW0603330KJNEA
SH-J1, SH-J2	2	1x2	Shunt, 100mil, Gold plated, Black		382811-6
U1	1		50 mA, 3 V TO 50 V, MICROPOWER, LOW- DROPOUT LINEAR REGULATOR	MSOP8	TPS79801-Q1
U2	1		IC MCU 16BIT 16KB FLASH 20TSSOP		MSP430G2553IPW20F
U3	1		IC ESD-PROT ARRAY 2CH SOT-5		TPD2E001DRLR
U4	1		IC USB FS SERIAL UART 28- SSOP		FT232RL-REEL
U5	1		Low-Power Dual Channel Digital Isolators		ISO7421ED
U6	1		CONN COM TYPE B MINI USB SMD 5P		65100516121
Y1	1	DNP	CRYSTAL 12.000MHZ 12PF SMD	2-SMD	7A-12.000MAAE-T
C3, C6	0	12pF	DNP	603	C0603C120K5GACTL
C11	0	A/R	DNP	1206	DNP

## **EVALUATION BOARD/KIT/MODULE (EVM) ADDITIONAL TERMS**

Texas Instruments (TI) provides the enclosed Evaluation Board/Kit/Module (EVM) under the following conditions:

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user indemnifies TI from all claims arising from the handling or use of the goods.

Should this evaluation board/kit not meet the specifications indicated in the User's Guide, the board/kit may be returned within 30 days from the date of delivery for a full refund. THE FOREGOING LIMITED WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. EXCEPT TO THE EXTENT OF THE INDEMNITY SET FORTH ABOVE, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

Please read the User's Guide and, specifically, the Warnings and Restrictions notice in the User's Guide prior to handling the product. This notice contains important safety information about temperatures and voltages. For additional information on TI's environmental and/or safety programs, please visit www.ti.com/esh or contact TI.

No license is granted under any patent right or other intellectual property right of TI covering or relating to any machine, process, or combination in which such TI products or services might be or are used. TI currently deals with a variety of customers for products, and therefore our arrangement with the user is not exclusive. TI assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein.

# **REGULATORY COMPLIANCE INFORMATION**

As noted in the EVM User's Guide and/or EVM itself, this EVM and/or accompanying hardware may or may not be subject to the Federal Communications Commission (FCC) and Industry Canada (IC) rules.

For EVMs **not** subject to the above rules, this evaluation board/kit/module is intended for use for ENGINEERING DEVELOPMENT, DEMONSTRATION OR EVALUATION PURPOSES ONLY and is not considered by TI to be a finished end product fit for general consumer use. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to part 15 of FCC or ICES-003 rules, which are designed to provide reasonable protection against radio frequency interference. Operation of the equipment may cause interference with radio communications, in which case the user at his own expense will be required to take whatever measures may be required to correct this interference.

#### General Statement for EVMs including a radio

User Power/Frequency Use Obligations: This radio is intended for development/professional use only in legally allocated frequency and power limits. Any use of radio frequencies and/or power availability of this EVM and its development application(s) must comply with local laws governing radio spectrum allocation and power limits for this evaluation module. It is the user's sole responsibility to only operate this radio in legally acceptable frequency space and within legally mandated power limitations. Any exceptions to this are strictly prohibited and unauthorized by Texas Instruments unless user has obtained appropriate experimental/development licenses from local regulatory authorities, which is responsibility of user including its acceptable authorization.

## For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant

#### Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### FCC Interference Statement for Class A EVM devices

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

#### FCC Interference Statement for Class B EVM devices

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### For EVMs annotated as IC – INDUSTRY CANADA Compliant

This Class A or B digital apparatus complies with Canadian ICES-003.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Concerning EVMs including radio transmitters

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

#### Concerning EVMs including detachable antennas

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Cet appareil numérique de la classe A ou B est conforme à la norme NMB-003 du Canada.

Les changements ou les modifications pas expressément approuvés par la partie responsable de la conformité ont pu vider l'autorité de l'utilisateur pour actionner l'équipement.

#### Concernant les EVMs avec appareils radio

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

#### Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

## [Important Notice for Users of this Product in Japan]

## This development kit is NOT certified as Confirming to Technical Regulations of Radio Law of Japan

If you use this product in Japan, you are required by Radio Law of Japan to follow the instructions below with respect to this product:

- Use this product in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
- 2. Use this product only after you obtained the license of Test Radio Station as provided in Radio Law of Japan with respect to this product, or
- 3. Use of this product only after you obtained the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to this product. Also, please do not transfer this product, unless you give the same notice above to the transferee. Please note that if you could not follow the instructions above, you will be subject to penalties of Radio Law of Japan.

## Texas Instruments Japan Limited (address) 24-1, Nishi-Shinjuku 6 chome, Shinjuku-ku, Tokyo, Japan

http://www.tij.co.jp

【ご使用にあたっての注】

本開発キットは技術基準適合証明を受けておりません。

本製品のご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

- 1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用いただく。
- 2. 実験局の免許を取得後ご使用いただく。
- 3. 技術基準適合証明を取得後ご使用いただく。

なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。

上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。

日本テキサス・インスツルメンツ株式会社 東京都新宿区西新宿6丁目24番1号 西新宿三井ビル http://www.tij.co.jp

### EVALUATION BOARD/KIT/MODULE (EVM) WARNINGS, RESTRICTIONS AND DISCLAIMERS

**For Feasibility Evaluation Only, in Laboratory/Development Environments.** Unless otherwise indicated, this EVM is not a finished electrical equipment and not intended for consumer use. It is intended solely for use for preliminary feasibility evaluation in laboratory/development environments by technically qualified electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems and subsystems. It should not be used as all or part of a finished end product.

Your Sole Responsibility and Risk. You acknowledge, represent and agree that:

- 1. You have unique knowledge concerning Federal, State and local regulatory requirements (including but not limited to Food and Drug Administration regulations, if applicable) which relate to your products and which relate to your use (and/or that of your employees, affiliates, contractors or designees) of the EVM for evaluation, testing and other purposes.
- 2. You have full and exclusive responsibility to assure the safety and compliance of your products with all such laws and other applicable regulatory requirements, and also to assure the safety of any activities to be conducted by you and/or your employees, affiliates, contractors or designees, using the EVM. Further, you are responsible to assure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard.
- 3. You will employ reasonable safeguards to ensure that your use of the EVM will not result in any property damage, injury or death, even if the EVM should fail to perform as described or expected.
- 4. You will take care of proper disposal and recycling of the EVM's electronic components and packing materials.

**Certain Instructions**. It is important to operate this EVM within TI's recommended specifications and environmental considerations per the user guidelines. Exceeding the specified EVM ratings (including but not limited to input and output voltage, current, power, and environmental ranges) may cause property damage, personal injury or death. If there are questions concerning these ratings please contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM User's Guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, some circuit components may have case temperatures greater than 60°C as long as the input and output are maintained at a normal ambient operating temperature. These components include but are not limited to linear regulators, switching transistors, pass transistors, and current sense resistors which can be identified using the EVM schematic located in the EVM User's Guide. When placing measurement probes near these devices during normal operation, please be aware that these devices may be very warm to the touch. As with all electronic evaluation tools, only qualified personnel knowledgeable in electronic measurement and diagnostics normally found in development environments should use these EVMs.

Agreement to Defend, Indemnify and Hold Harmless. You agree to defend, indemnify and hold TI, its licensors and their representatives harmless from and against any and all claims, damages, losses, expenses, costs and liabilities (collectively, "Claims") arising out of or in connection with any use of the EVM that is not in accordance with the terms of the agreement. This obligation shall apply whether Claims arise under law of tort or contract or any other legal theory, and even if the EVM fails to perform as described or expected.

Safety-Critical or Life-Critical Applications. If you intend to evaluate the components for possible use in safety critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, such as devices which are classified as FDA Class III or similar classification, then you must specifically notify TI of such intent and enter into a separate Assurance and Indemnity Agreement.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2013, Texas Instruments Incorporated

## **IMPORTANT NOTICE**

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have *not* been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components as meeting ISO/TS16949 requirements, mainly for automotive use. In any case of use of non-designated products, TI will not be responsible for any failure to meet ISO/TS16949.

Products		Applications	
Audio	www.ti.com/audio	Automotive and Transportation	www.ti.com/automotive
Amplifiers	amplifier.ti.com	Communications and Telecom	www.ti.com/communications
Data Converters	dataconverter.ti.com	Computers and Peripherals	www.ti.com/computers
DLP® Products	www.dlp.com	Consumer Electronics	www.ti.com/consumer-apps
DSP	dsp.ti.com	Energy and Lighting	www.ti.com/energy
Clocks and Timers	www.ti.com/clocks	Industrial	www.ti.com/industrial
Interface	interface.ti.com	Medical	www.ti.com/medical
Logic	logic.ti.com	Security	www.ti.com/security
Power Mgmt	power.ti.com	Space, Avionics and Defense	www.ti.com/space-avionics-defense
Microcontrollers	microcontroller.ti.com	Video and Imaging	www.ti.com/video
RFID	www.ti-rfid.com		
OMAP Applications Processors	www.ti.com/omap	TI E2E Community	e2e.ti.com
Wireless Connectivity	www.ti.com/wirelessconne	ectivity	

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265 Copyright © 2013, Texas Instruments Incorporated

# **Mouser Electronics**

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Texas Instruments: DAC161S997EVM