

SL SERIES POWER DISTRIBUTION MODULES





Description

High-amp circuits can be disconnected with remote switch SL PDM (PN 880075) or manual/remote switch SL PDM (PN 880076). SL PDM designed to disconnect high-amp circuits remotely through the use of a remote switch. 880076 can be disconnect through the use of switch on unit. Ideal for low-amp "always on" loads including clock memory, alarms, tachograph, and telematics (e.g. Qualcomm) modules; and for high-amp circuits such as vehicle control modules, inverters, and auxiliary circuits.

Ignition protected to SAE J1171 and ISO 8846 for installation in a battery box, or on vehicles carrying hazardous loads. Water and dust-resistant to IP59K, permitting high temperature, high-pressure washing. Provides the benefits of a sealed cover, but allows water to escape if the cover is mistakenly unsecured. Tin-plated copper studs provide maximum conductivity and significantly lower contact resistance. Stainless steel hardware provides superior corrosion resistance. Also available with pre-installed fuses to customer needs.

These products are customer-limited. Please consult Littelfuse for details. Fuses sold separately.

Features and Benefits

- Provides main battery shutdown from a remote location.
- Optional manual control knob switches high-amp circuits.
- Three switched 30A to 200A MIDI® fuse locations.
- Four unswitched 24-hour 1A-20A ATO® fuse locations.
- Eliminates significant factory or field interconnections.

Internal Battery Switch Specifications

Continuous Amperage Rating: 300A at 85°C 240A at 105°C

Cranking Rating: 10 sec. 1,000A

MIDI® Fuse Block Specifications

Amperage Maximum Operating (per block): 240A
Amperage Maximum Operating (per circuit): 170A
Fuse Amperages Available: 30A–200A
Minimum Cable Size to Meet Ratings: 2/0 AWG (70 mm²)
Screw Size: M5 x .8 x 10
Screw Torque: 27 in-lb (3.0 N-m)

ATO® Fuse Block Specifications

Amperage Maximum Operating (per block): 50A
Amperage Maximum Operating (per circuit): 20A
Fuse Amperages Available: 1A—20A

Input Wire Size and Current Derating Table

AWG WIRE SIZE	METRIC WIRE SIZE	AMPERAGE MAXIMUM OPERATING (COMBINED)
4/0 AWG	120 mm²	280A
2/0 AWG	70 mm²	240A
1 AWG	50 mm²	180A
4 AWG	25 mm²	125A

Ordering Information

PART NUMBER	DESCRIPTION	
880075	SL PDM	
880076	SL PDM with Manual Knob	

Accessories Information





Remote Control Switch

PART NUMBER DESCRIPTION

880092 Remote Control Switch

Web Resources

58311-09

Download technical resources at: littelfuse.com/SL



880075 SL SERIES POWER DISTRIBUTION MODULES



Dimensions in MM 55.39 +0.75 22.85 +0.75 93.3 +0.75 93.3 +0.75 93.3 +0.75 30.46 +0.50 99 +0.75 -0.75

880075 SL Series Specifications

 Voltage (nominal):
 12V DC

 Max Total Amperage Rating:
 300A at 85°C 240A at 105°C

 Operating Temp:
 -50° C to +105° C

 Ingress Protection:
 IP59K/IP66

 Shock:
 50 G

 Vibration
 8 G

Minimum Input Cable Size to Meet Ratings:4/0 AWG (120 mm²)Recommended Ring Terminal:M8 (5/16")Stud Size:M8 x 1.25Stud Torque:15 ft-lb (20.3 N-m)Mating Connectors:Delphi/Aptiv APEX 2.8 PN: 54200409

PN: 54200409 Molex MX150 PN: 334720606

Weight: 880075 1.4lbs (0.64kg)
Mounting Holes: 9mm (for M8 hardware)


Ordering Information

PART NUMBER	DESCRIPTION
880075	SL PDM

880076 SL SERIES POWER DISTRIBUTION MODULES



Dimensions in MM

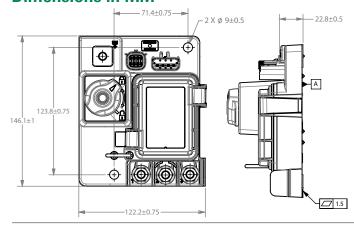

880076 SL Series Specifications

 Voltage (nominal):
 12V DC

 Max Total Amperage Rating:
 300A at 85°C 240A at 105°C

 Operating Temp:
 -50° C to +105° C

 Ingress Protection:
 IP59K/IP66

 Shock:
 50 G

 Vibration
 8 G

Minimum Input Cable Size to Meet Ratings: 4/0 AWG (120 mm²)

Recommended Ring Terminal:M8 (5/16")Stud Size:M8 x 1.25Stud Torque:15 ft-lb (20.3 N-m)Mating Connectors:Delphi/Aptiv APEX 2.8

PN: 54200409 Molex MX150 PN: 334720606

 Weight:
 880076 1.5lbs (0.68kg)

 Mounting Holes:
 9mm (for M8 hardware)

Ordering Information

PART NUMBER	DESCRIPTION
880076	SL PDM with Manual Knob



SL SERIES POWER DISTRIBUTION MODULES

Operating Instructions

The SL PDM uses a SPDT ON-ON Remote Control Switch for control from a remote location. The Remote Control Switch should be mounted in a convenient location for quick access.

ACTION	OPERATIONS	LED INDICATION
To switch the battery bank and high-amperage circuits ON	Depress the top part of the Remote Control Switch actuator.	LEDs on switch and block illuminate, indicating that switched circuits are ON .
To switch the battery bank and high-amperage circuits OFF	Depress the bottom part of the Remote Control Switch actuator.	LEDs on switch and block do not illuminate, indicating that switched circuits are OFF

The manual control override knob overrides the Remote Control Switch and provides:

- An added level of safety that allows manual ON-OFF control with or without power
- LOCK OFF position for servicing the electrical system or to disconnect the battery bank and high-amperage circuits in an emergency

Unswitched Fused Circuits

Fused circuits A, B, C, and D are always on 24-hour, (non-switched), regardless of the Remote Control Switch and manual override switch states (see Illustration 1.2 - System Diagram on reverse side).

Fuses

Unlatch the two yellow tabs on the fuse cover to access fuses.

The ATO® Fuse Block of the SL PDM is used for 24-hour (non-switched) circuits. The total continuous amperage of this block must not exceed 50A.

The MIDI® Fuse Block of the SL PDM is used for the switched circuits. The total continuous amperage of this block must not exceed 240A.

Manual Control Override Operations

Battery bank and high-amp switched circuits 1,2, and 3 only:

ACTION	OPERATION	
To switch the SL PDM ON	Turn manual control knob to the ON position and push button until latched.	PUSH E
To switch the SL PDM OFF	Rotate manual control knob to the OFF (red) position (switch contacts open).	
To switch the SL PDM back to READY	Rotate manual control knob back to the ON position.	
To prevent remote operation of the SL PDM for SERVICE SHUT OFF	Rotate manual control knob to the OFF (red) position.	

Installation Instructions

Install the SL PDM in a readily accessible location as close as possible to thebattery. Mount in a dry and protected location. Avoid mounting directly above vented lead acid batteries so that the SL PDM is not exposed to corrosive gasses from the batteries.

Where possible, mount the SafetyHub in a vertical orientation. (See illustration 1.1 below)

High Current Input/Remote Battery Switch Connection

Connect the positive battery terminal to the input stud on the SL PDM. Torque the connection to 15 ft-lb.

High-Amperage Switched Fuse Circuit Connections

To connect high amperage loads such as an engine starting circuit, distribution panel, or windlass, use the numbered high amperage studs.


CAUTION: Do not switch the Remote Control Switch to OFF while the engine is running!

Unswitched Fused Circuit Connections

The fuse connections labeled with letters are designed to be used for circuits that are always on.

Control Circuit Connections (wires contained in the wire harness)

NOTE: The SL PDM is designed to be controlled by the Remote Control Switch. Use minimum 18 AWG (1.5mm²) wire for the control circuit.

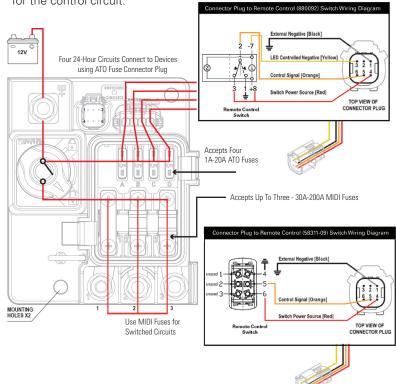

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Littelfuse:

880076 880075