



Mifare RFID reader, 13.56M Hz, w/o LED indicator, IEI As sembly Only, R11

User Manual





Revision

Date	Version	Changes
25 April, 2014	1.00	Initial release



Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.



Table of Contents

1 INTRODUCTION	1
1.1 AFL2-MF-RFID-KIT Series RFID Reader Overview	2
1.2 Model Variations	2
1.2.1 AFL2-MF-RFID-KIT Series Features	2
1.3 TECHNICAL SPECIFICATIONS	3
1.4 DIMENSIONS	4
2 CONNECTORS	5
2.1 AFL2-MF-RFID-KIT Series RFID Reader Module	6
2.1.1 AFL2-MF-RFID-KIT Series Layout	6
2.1.2 Peripheral Interface Connectors	6
2.2 Internal Peripheral Connectors	6
2.2.1 Antenna Connector	7
2.2.2 RS-232 and USB Connector (RFID1)	7
2.2.3 CPU JTAG Port (CN1)	7
2.2.4 UART Jump (J5)	8
3 INSTALLATION	9
3.1 Anti-static Precautions	10
3.1.1 Unpacking	10
4 GUI PROGRAM	12
4.1 Chapter Overview	13
4.2 Software Installations	13
4.2.1 Virtual COM Port Driver Installation	
4.2.2 Hardware Installation	
4.2.3 Software GUI Installation	14
4.3 Software Interface	17
4.3.1 Program Control Window (Lower Right-Hand Corner)	18
4.3.2 Protocol Tab Window	18
4.3.3 Utility Tabs Window	



4.3.4 Flags Window	18
4.3.5 Command (Request) Window	18
4.3.6 Log Window	18
4.3.7 Tag Data Window	19
4.3.8 RSSI Window	19
4.3.9 Special Functions Window	20
4.3.10 Other Functions	21
4.4 SET PROTOCOL	21
4.5 ISO/IEC 15693 PROTOCOL	22
4.5.1 Inventory	22
4.5.2 Read Single Block	24
4.5.3 Write Single Block	25
4.5.4 Lock Block	27
4.5.5 Read Multiple Blocks	29
4.5.6 Write Multiple Blocks	30
4.5.7 Stay Quiet	32
4.5.8 Select	33
4.5.9 Reset to Ready	34
4.5.10 Write AFI (Application Family Identifier)	35
4.5.11 Lock AFI (Application Family Identifier)	37
4.5.12 Write DSFID (Data Storage Format ID)	38
4.5.13 Lock DSFID (Data Storage Format ID)	39
4.5.14 Get System Info	41
4.5.15 Get Multiple-Block Security Status (Get Mult_Blk Sel Status)	42
4.6 FIND TAGS	44
A MULTIPLE TAGS WRITING INSTRUCTION	45
A.1 Inventory Request	46
A.2 NON - ADDRESSED Mode	46
A.3 ADDRESSED Mode	47
A.4 SELECTED Mode	49
B TESTDII PROGRAM	54
B.1 Introduction	55
R 2 How to use	55



B.3 TAG INFORMATION STRUCTURE	. 56
B.3.1 Tag Flag	. 56
B.3.2 Tag Data	. 56
B.3.3 Tag Info	. 57
B.3.4 RSSI	. 58
B.3.5 Request Command Type	. 58
B.4 Software APIs	. 59
BOOL IRFR_FindPort (void)	. 59
BOOL IRFR_FindSinglePort (char * Port)	. 59
int IRFR_logAddFile (char * msg)	. 60
Int IRFR_logAddScreen (char * msg)	. 60
void IRFR_SetFilePath (char * path)	. 60
void IRFR_SetLogger (CEdit *logger)	. 61
void IRFR_SetLogFile (bool result)	. 61
void IRFR_SetLogScreen (bool result)	. 62
int IRFR_SetProtocol (TagFlag tf);	. 62
int IRFR_RequestExecute (int cmdno, char *reply, TagFlag tf, TagData *td)	. 63
void IRFR_FindRun (char *TagIDs, char *TagNum)	. 63
void IRFR_FindStop (void)	. 64
void IRFR_GetUIDs (char *reply, char *TagIDs[], char *TagNum)	. 64
void IRFR_GetRSSI (char *reply, RSSI RSSIs[])	. 65
void IRFR_GetBlockData (char *reply, TagData *td)	. 65
void IRFR_GetMultiBlockData (char *reply, TagData *td);	. 66
void IRFR_GetTagInfo (char *reply, TagInfo *ti, TagFlag tf, TagData td)	. 66
void IRFR_GetMultiBlockSecurity (char *reply, char *SecurityData)	. 67
B.5 EXAMPLE CODE	. 67
C ISO/IEC 15693 REFERENCE MATERIAL	. 68
C.1 UID FORMAT	. 69
C.2 TAG MEMORY ORGANIZATION	. 69
C.3 FLAG DEFINITIONS	. 70
C.4 APPLICATION FAMILY IDENTIFIER (AFI) DEFINITIONS	. 70
D HAZARDOUS MATERIALS DISCLOSURE	
D.1 HAZARDOUS MATERIALS DISCLOSURE TABLE FOR IPB PRODUCTS CERTIFIED AS	



0 - IIO O II	- 0000/05/EQW	7	,
KOHS COMPLIANT UNDE	R 2002/95/EC WITHOUT MERCURY		



List of Figures

Figure 1-1: AFL2-MF-RFID-KIT Series RFID Reader	2
Figure 2-2: AFL2-MF-RFID-KIT Series Dimensions (mm)	4
Figure 2-6: Connector and Jumper Locations	6
Figure 4-1: FTDI Driver Installation Complete	13
Figure 4-2: IRFR-100 Control COM Ports	14
Figure 4-3: Properties	15
Figure 4-4: Device Manager	15
Figure 4-5: Device Manager - Ports	16
Figure 4-6: Software Interface	17
Figure 4-7: Log Window	19
Figure 4-8: RSSI Window	20
Figure 4-9: Set Protocol	22
Figure 4-10: Inventory	23
Figure 4-11: Read Single Block	25
Figure 4-12: Write Single Block	26
Figure 4-13: Lock Block	28
Figure 4-14: Read Multiple Blocks	30
Figure 4-15: Write Multiple Block	31
Figure 4-16: Stay Quiet	32
Figure 4-17: Select	34
Figure 4-18: Reset to Ready	35
Figure 4-19: Write AFI	36
Figure 4-20: Lock AFI	37
Figure 4-21: Write DSFID	39
Figure 4-22: Lock DSFID	40
Figure 4-23: Get System Info	41
Figure 4-24: Get Multiple-Block Security Status	43
Figure 4-25:	44



List of Tables

Table 1-1: Model Variations	2
Table 1-2: Technical Specifications	3
Table 2-1: Peripheral Interface Connectors and Indicators	6
Table 2-2: RS-232 and USB Connector Pinouts	7
Table 2-3: CPU JTAG Port Pinouts	7
Table 2-4: UART Jump Pinouts	8
Table 3-1: Package List Contents	11



Chapter

1

Introduction



1.1 AFL2-MF-RFID-KIT Series RFID Reader Overview

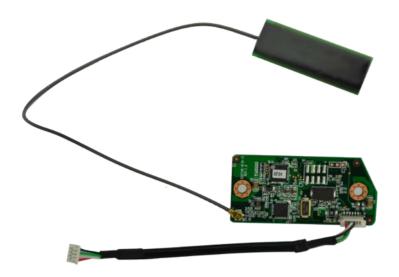


Figure 1-1: AFL2-MF-RFID-KIT Series RFID Reader

The AFL2-MF-RFID-KIT Series is a RFID reader for both High Frequency (HF) and Ultra High Frequency (UHF) RFID systems and is compliant with ISO 15693 and ISO 14443 industrial standards. The AFL2-MF-RFID-KIT Series also comes with a utility and a software development kit (SDK) for configuring reader module and writing/reading tags.

1.2 Model Variations

The model variations of the AFL2-MF-RFID-KIT Series are listed below.

Models	Series
AFL2-MF-RFID-KIT01-R11	for AFL2-W07A/08A Series
AFL2-MF-RFID-KIT02-R11	for AFL2-W10A/10A/12A/15A/W15B/17A/W19A Series
AFL2-MF-RFID-KIT03-R11	for AFL2-W21A Series

Table 1-1: Model Variations

1.2.1 AFL2-MF-RFID-KIT Series Features

The AFL2-MF-RFID-KIT Series has the following features

13.56 MHz radio frequency industrial RFID reading module



- Supports standard protocol ISO 15693 for vicinity card applications reads multiple tags simultaneously
- Tag compatibility: TI , ST , Philips , Tag-it, HF-EPC
- Reader to reader anti-collision
- Reads and writes tags with up to 2Kb
- Single power supply and low power consumption
- Various interfaces to main system
 - O 115.2 Kbps maximum serial communication speeds
 - O USB

1.3 Technical Specifications

The specifications for the Intel based embedded systems are listed below.

	AFL2-MF-RFID-KIT Series
Support Protocol	ISO 15693
RF Frequency	13.56 MHz
RF Data Rate	6.62 kbps for ISO 15693
Baud Rate	9600 Kbps ~ 115,200 Kbps
Power Consumption	5V @ 150 mA
Operating Distance	10 cm
Interface	RS-232 serial port or USB
Operating Temperature	0°C ~ 60°C
Operating Humidity	10% ~ 85% RH
Tag Compatibility	RI, ST, Philips, Tag-it, HF-EPC
Driver Support	Windows XP
	Windows XPE
	Windows CE 5.0

Table 1-2: Technical Specifications



1.4 Dimensions

The dimensions of the AFL2-MF-RFID-KIT Series are listed below and shown in **Figure 2-2**.

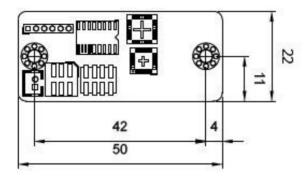


Figure 2-2: AFL2-MF-RFID-KIT Series Dimensions (mm)



Chapter

2

Connectors



2.1 AFL2-MF-RFID-KIT Series RFID Reader Module

The following sections describe the relevant components and jumpers on the RFID reader module.

2.1.1 AFL2-MF-RFID-KIT Series Layout

Figure 2-6 shows the on-board peripheral connectors.

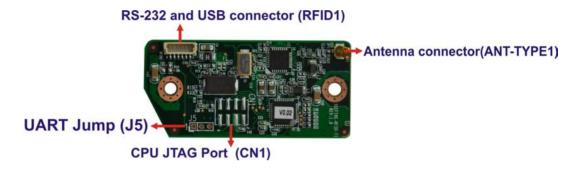


Figure 2-1: Connector and Jumper Locations

2.1.2 Peripheral Interface Connectors

Table 2-1 shows a list of the peripheral interface connectors on the AFL2-MF-RFID-KIT Series. Detailed descriptions of these connectors can be found below.

Connector	Туре	Label
Antenna connector	IPEX type connector	ANT-TYPE1
RS-232 and USB connector	6-pin header	RFID1
CPU JTAG Port	8-pin	CN1
UART Jump	2-pin	J5

Table 2-1: Peripheral Interface Connectors and Indicators

2.2 Internal Peripheral Connectors

This section has complete descriptions of all the internal peripheral connectors on the AFL2-MF-RFID-KIT Series.

2.2.1 Antenna Connector

CN Label: ANT-TYPE1

CN Type: IPEX

CN Location: See Figure 2-6

The Antenna Connector connects to the 13.56 MHz antenna module.

2.2.2 RS-232 and USB Connector (RFID1)

Pin No.	Description
1	USB5V
2	D+_1
3	D1
4	GND
5	RFID_BUZ#
6	EN

Table 2-2: RS-232 and USB Connector Pinouts

2.2.3 CPU JTAG Port (CN1)

Pin No.	Description
1	с_тск
2	nRST
3	C_TMS
4	+3V3
5	C_TDI
6	GND
7	C_TDO
8	GND

Table 2-3: CPU JTAG Port Pinouts

Integration Corp.



2.2.4 UART Jump (J5)

Pin No.	Description
1	TXD
2	RXD
3	GND

Table 2-4: UART Jump Pinouts



Chapter

3

Installation



3.1 Anti-static Precautions



WARNING:

If the following anti-static precautions are not followed, a user may be injured and the system irreparably damaged.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the AFL2-MF-RFID-KIT Series module. (Dry climates are especially susceptible to ESD.) It is therefore critical that whenever the AFL2-MF-RFID-KIT Series is opened and any electrical component handled, the following anti-static precautions are strictly adhered to.

- Wear an anti-static wristband: Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- Self-grounding: Before handling the board, touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- Use an anti-static pad: When configuring the AFL2-MF-RFID-KIT Series, place it on an antic-static pad. This reduces the possibility of ESD damaging the AFL2-MF-RFID-KIT Series.

3.1.1 Unpacking

After the AFL2-MF-RFID-KIT Series is received make sure the following components are included in the package. If any of these components are missing, please contact the AFL2-MF-RFID-KIT Series reseller or vendor where it was purchased or contact an IEI sales representative immediately.

Quantity	Item	Image
1	IRFD-100/IRFR-100	



1	Utility and manual CD	O its

Table 3-1: Package List Contents



Chapter

4

GUI Program



4.1 Chapter Overview

This chapter describes the installation and use of the USB drivers and IRFR-100 module control program.

4.2 Software Installations

Do not plug the module into the USB port until instructed to do so. If it is already connected to a USB port, disconnect it now.

Software installation is a two-step process. The first step is the installation of a third-party virtual COM port (VCP) driver, and the second part is the installation of the IRFR-100 GUI program.

4.2.1 Virtual COM Port Driver Installation

To install the virtual driver, unzip the **VCP_driver.rar** and run the program **CDM_setup.exe**. When the driver installation is complete, the following confirmation is displayed:



Figure 4-1: FTDI Driver Installation Complete

4.2.2 Hardware Installation

At this point, attach the IRFR-100 module to an open USB port. The module can be plugged directly into the port or attached at the end of a USB extension cable (type A, not supplied). At this point, the power LED should be lit. Any RFID tag corresponding to a supported protocol can be detected and is indicated by the corresponding LED.



4.2.3 Software GUI Installation

The software GUI is the file named IRFR-100.rar. It can be unzipped using a standard unzip program and is a self-contained executable. Create a folder where desired on the host PC, and unzip the executable into that folder. The program can be run from the folder, or a shortcut can be created and placed on the desktop of the host computer. In most cases, the program automatically detects the COM port. In case the program could not detect the COM port, enter the COM port number (e.g., COM3) in the Select Port window at the bottom right of the GUI as shown following, and click on the Select Port button).

Support Port: COM1 ~ COM9.

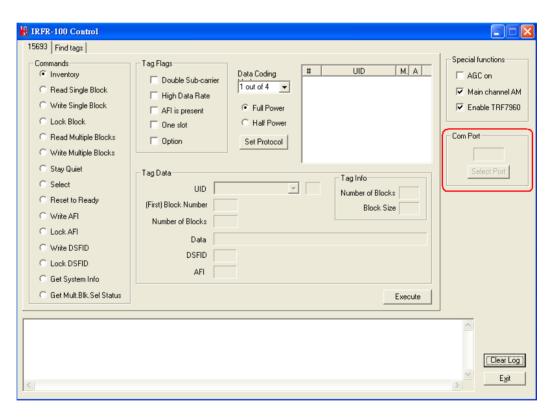


Figure 4-2: IRFR-100 Control COM Ports

To determine the USB serial port that corresponds to the IRFR-100 module, right-click on the My Computer icon on the desktop. When the drop-down menu appears, click on Properties.







Figure 4-3: Properties

On the properties window, select the Hardware tab:

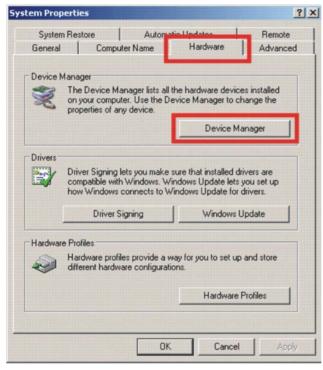


Figure 4-4: Device Manager

Next, click on *Device Manager*, then click the + sign next to *Ports* to expand the ports:



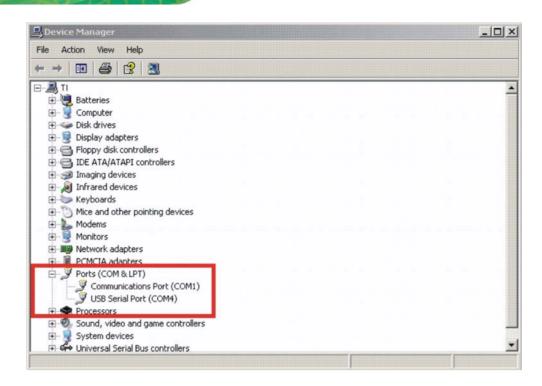


Figure 4-5: Device Manager - Ports

If the driver installation was successful and the module is plugged in, *USB Serial Port* should appear in the list of ports, followed by a port number (in this example, COM4). The actual port number may be different. Make note of the COM port number and enter it in the *Select Port* window of the GUI. Then select the *Select Port* on GUI (do not press the *Enter* key). Note: If the *Enter* key is pressed, the program ends and the GUI closes.



4.3 Software Interface

The GUI window is shown following. Each section of the window has a different function. The figure shows the arrangement for the *Protocol 15693* and *Find Tags*.

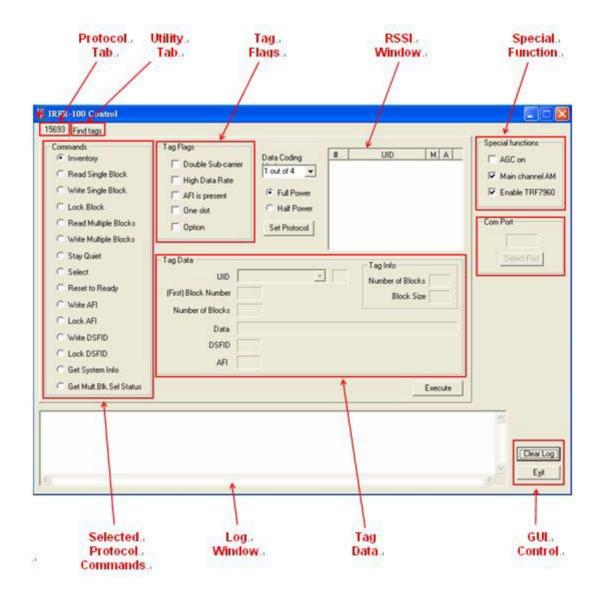


Figure 4-6: Software Interface



4.3.1 Program Control Window (Lower Right-Hand Corner)

The Select Port window allows the user to enter manually the USB serial port used by the host computer to communicate with the IRFR-100 module.

Exit button – exits the IRFR-100 control program.

4.3.2 Protocol Tab Window

The protocol tab window selects tag protocol and program functions. Available option is:

(ISO/IEC) 15693 – vicinity cards

4.3.3 Utility Tabs Window

Find Tags – a function that reads tags of protocol 15693

4.3.4 Flags Window

This window allows the user to set flags for the 15693 protocol. Different flags may be available for different commands. The tag window automatically updates available flags depending on the request chosen.

4.3.5 Command (Request) Window

This window shows various request options available for protocol 15693.

4.3.6 Log Window

The log window shows all communication frames from host computer to IRFR-100 module. The tag response is also displayed in the log window. The tag response (register content) is always in parentheses to distinguish it from the host-to-reader data exchange. This information is also stored in the *IRFR-100.log* file, located in the same file directory as IRFR-100.exe, which can be opened by a normal text editor such as Notepad.





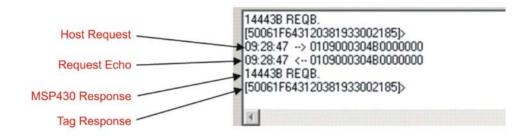


Figure 4-7: Log Window

4.3.7 Tag Data Window

The *Tag Data* window is where the user enters addresses, data, number of bits, and other information required by certain commands. Checking certain flags in the *Flag* window may activate more fields for data entry.

4.3.8 RSSI Window

The RSSI field displays the slot number, UID and the RSSI values of the corresponding tag. If there was a collision and the reader performed a second anticollision procedure, the slot numbers are indicated with an additional character:

A = second procedure B = third procedure and so on.

The main channel, which is **AM**, is used as the primary one, and **PM** is the auxiliary channel. The RSSI maximum value is **7** and minimum value is **0**. The corresponding RSSI values depend on the system design (antenna + reader), and the levels can vary based on the quality of the reception. The specifics of the corresponding input voltage levels to RSSI levels are defined in the TRF7960 data sheet.



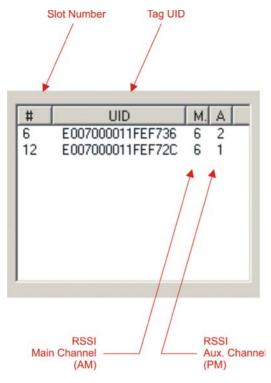


Figure 4-8: RSSI Window

In the preceding example, one can see that the tags in slots #6 and #12 have a main-channel RSSI value of 6, with auxiliary-channel RSSI values of 2 and 1, respectively.

4.3.9 Special Functions Window

Special functions, such as AGC on/off, main channel AM, and enable/disable the TRF7960.

The AGC is turned off after the power-on reset (POR) and can be enabled when desired (especially in noisy environments). By default, the input channel is AM and can be switched to PM if the RSSI value for the PM channel is higher than the AM.



4.3.10 Other Functions

Other functions on the main IRFR-100 control panel are:

- Set protocol which configures the program for the selected protocol once the protocol tab has been selected
- Execute button which processes the selected command
- Power control (half or full) which can be used to simulate marginal reception conditions. The RF output power selection enables the user to switch between full power (200 mW) and half power (100 mW); however, the antenna matching circuit is tuned to operate with full-power selection, and performance is not optimal in half-power selection. This is due to the matching on the output of the reader IC, which currently is matched for 200 mW. (The load impedance for full power is 4 W and half power is 8 W.)
- Data coding mode which is used in conjunction with the 15693 protocol

4.4 Set Protocol

IRFR-100 control program does not automatically set the program to that protocol. The user must manually click on the *Set Protocol* button:



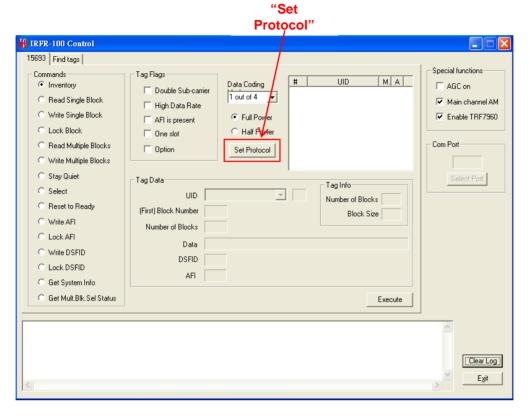


Figure 4-9: Set Protocol

When the *Set Protocol* button is pressed, the software sets the parameters for the corresponding protocol standard.

4.5 ISO/IEC 15693 Protocol

This section describes commands for the 15693 protocol. After a command has been selected by clicking on the associated command button in the Commands window, the user should set any flags as needed. If appropriate, enter data in the Tag Data window.

4.5.1 Inventory

The Inventory command is used to acquire the unique IDs (UID) of ISO 15693 tags in the read zone. The two inventory methods supported are 16-slotted and single-slot. A single-slot request allows all transponders in the read zone to reply to the Inventory request. In cases where more than one tag is present, such a request would cause a data collision, which in turn causes a reader to send a collision error message to the GUI. A 16-slot inventory sequence decreases the likelihood of a data collision by forcing





compliant transponders to respond in 1 of 16 slots, based on a portion of their UIDs. To perform a slotted sequence, the Slot Marker/End-of-Frame request is used in conjunction with this command. Any collision that does occur in a slotted sequence can be further arbitrated by using the anticollision mask in an algorithm similar to that outlined in the ISO 15693 standard.

To inventory a tag, the user should:

Step 1: Click the button for Inventory in the Commands window

Step 2: Click on any flags that must be set in the Tag Flags window

Step 3: Click on Set Protocol

Step 4: Execute the command

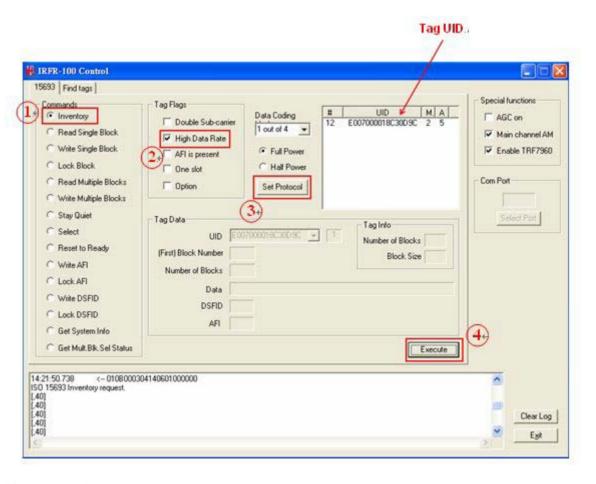


Figure 4-10: Inventory



4.5.2 Read Single Block

The Read Single Block command gets the data from one memory block of the responding tag. In addition to this data, a Block Security Status byte can be requested. This byte shows the write-protection of the block specified [e.g., unlocked, (user/factory) locked, etc.].

To read a single block, the user should:

- Step 1: Click the button for Read Single Block in the Commands window
- Step 2: Click on any flags that must be set in the Tag Flags window
- Step 3: Optionally select a tag from the UID pulldown list in the Tag Data window and set the Addressed flag (if only one tag is present, only one choice is available)
- Step 4: Enter two hex digits corresponding to the block number in the (First) Block

 Number field in the Tag Data window
- Step 5: Execute the command.



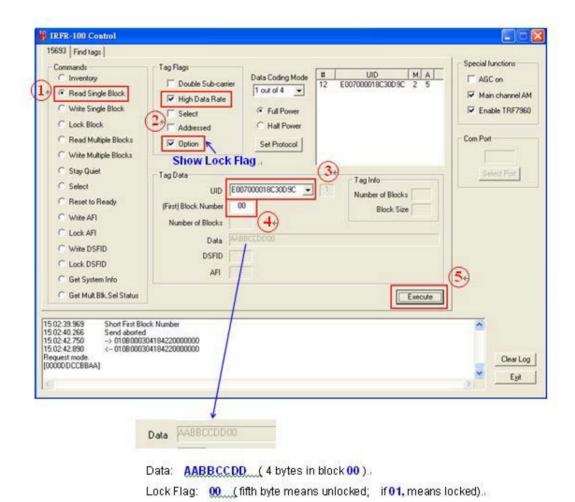


Figure 4-11: Read Single Block

4.5.3 Write Single Block

The Write Single Block request writes data to one memory block of the addressed tag(s). In order to successfully write data, the host must know the size of the memory block of the tag. This information is available through the Get System Information request, if supported by the tag. A corrupted response or lack of response from TRF7960 does not necessarily indicate a failure to perform the write operation. Additionally, multiple transponders may process a nonaddressed request. (See Appendix A for more instructions)

To write a single block, the user should:



- Step 1: Click the button for Write Single Block in the Commands window
- Step 2: Click on any flags that must be set in the Tag Flags window
- Step 3: Optionally select a tag from the UID pulldown list in the Tag Data window and set the Addressed flag (if only one tag is present, only one choice is available)
- Step 4: Enter two hex digits corresponding to the block number in the (First) Block

 Number field in the Tag Data window
- Step 5: Enter 8 hexadecimal digits corresponding to the data to be written in the Data field in the Tag Data window
- Step 6: Execute the command

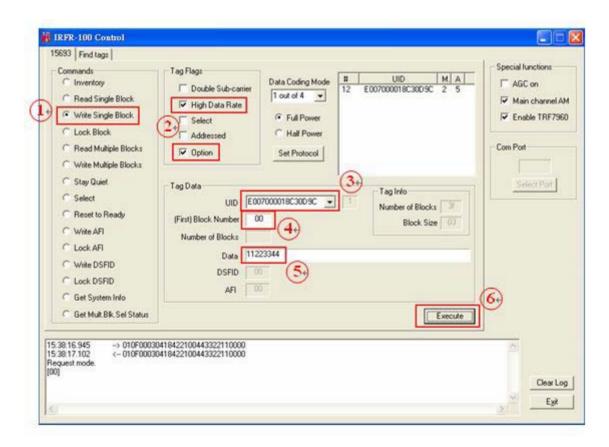


Figure 4-12: Write Single Block





4.5.4 Lock Block

The Lock Block command write-protects one memory block of the addressed tag(s). A corrupted response or lack of response from the TRF7960 does not necessarily indicate a failure to perform the lock operation. Additionally, multiple transponders may process a non-addressed request.

Used to permanently lock the requested block.

To lock a block, the user should:

- Step 1: Click the button for Lock Block in the Command window
- Step 2: Click on any flags that must be set in the Tag Flags window
- Step 3: Optionally select a tag from the UID pulldown list in the Tag Data window and set the Addressed flag (if only one tag is present, only one choice is available)
- Step 4: Enter two hex digits corresponding to the block number in the (First) Block

 Number field in the Tag Data window
- Step 5: Execute the command



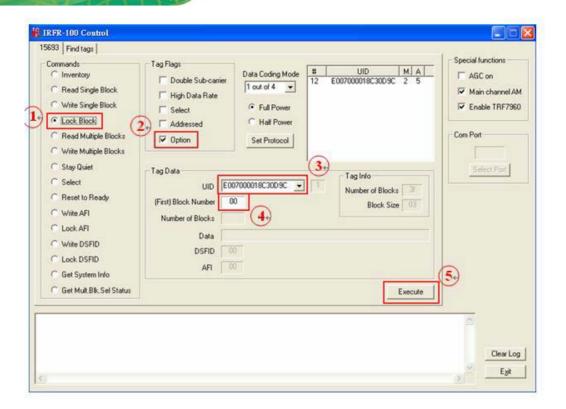


Figure 4-13: Lock Block



The Option flag of the ISO 15693 defined Request flags must be set for all Write and Lock commands to respond properly.



4.5.5 Read Multiple Blocks


The Read Multiple Blocks command gets the data from multiple memory blocks of the responding tag. In addition to this data, a Block Security Status byte can be requested for each block. This byte shows the write-protection of the block specified [e.g., unlocked, (user/factory) locked, etc.].

To read multiple a blocks, the user should:

- Step 1: Click the button for Read Multiple Blocks in the Commands window
- Step 2: Click on any flags that must be set in the Tag Flags window
- Step 3: Optionally select a tag from the UID pulldown list in the Tag Data window (if only one tag is present, only one choice is available)
- Step 4: Enter two hex digits corresponding to the starting block number in the (First)

 Block Number field in the Tag Data window. The blocks are numbered from 00 to FF (0 to 255)
- Step 5: Enter two hex digits corresponding to the number of blocks to be written in the Number of Blocks field in the Tag Data window. The number of blocks in the request is one less than the number of blocks that the tag returns in its response E.g., a value of 06 in the Number of Blocks field requests to read 7 blocks. A value of 00 requests to read a single block
- Step 6: Execute the command



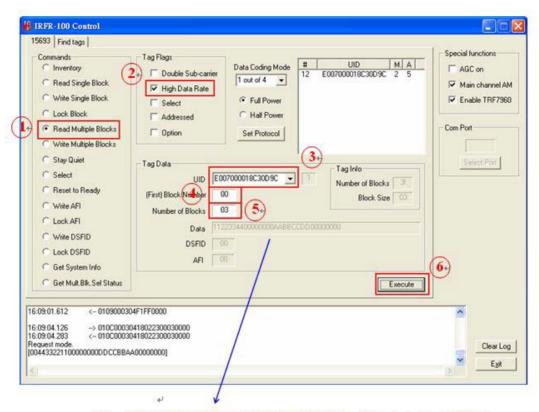

Data: 11223344 00000000 AABBCCDD 00000000 (16 bytes in block 00~03)-

Figure 4-14: Read Multiple Blocks

4.5.6 Write Multiple Blocks

The Write Multiple Blocks command writes data to multiple memory blocks of the addressed tags. In order to successfully write data, the host must know the size of the memory block of the tag. Write Multiple Blocks is an optional command, and may not be supported by the tag (see the following screen capture).

To write multiple blocks, the user should:

- Step 1: Click the button for Write Multiple Blocks in the Commands window
- Step 2: Click on any flags that must be set in the Tag Flags window
- Step 3: Optionally select a tag from the UID pulldown list in the Tag Data window (if only one tag is present, only one choice is available)



- Step 4: Enter two hex digits corresponding to the starting block number in the (First)

 Block Number field in the Tag Data window. The blocks are numbered from 00 to FF (0 to 255)
- Step 5: Enter two hex digits corresponding to the number of blocks to be written in the Number of Blocks field in the Tag Data window. The number of blocks in the request is one less than the number of blocks that the tag returns in its response E.g., a value of 06 in the Number of Blocks field requests to read 7 blocks. A value of 00 requests a read of a single block
- Step 6: Enter hexadecimal digits corresponding to the data to be written in the Data field in the Tag Data window
- Step 7: Execute the command

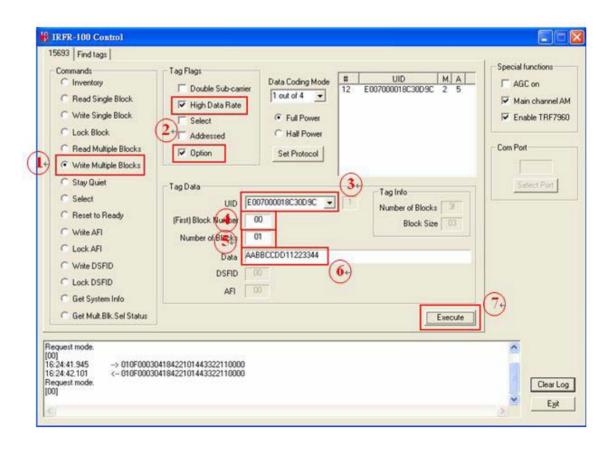


Figure 4-15: Write Multiple Block



4.5.7 Stay Quiet

The Stay Quiet command is used to silence a tag, preventing it from responding to any nonaddressed or inventory related commands. The tag does, however, respond to requests with matching UID. As there is no response to this request from the receiving tag, only request status and errors are reported.

To command a tag to stay quiet, the user should:

- Step 1: Click the button for Stay Quiet in the Commands window
- Step 2: Click on any flags that must be set in the Tag Flags window
- Step 3: Optionally select a tag from the UID pulldown list in the Tag Data window and set the Addressed flag (if only one tag is present, only one choice is available)
- Step 4: Execute the command

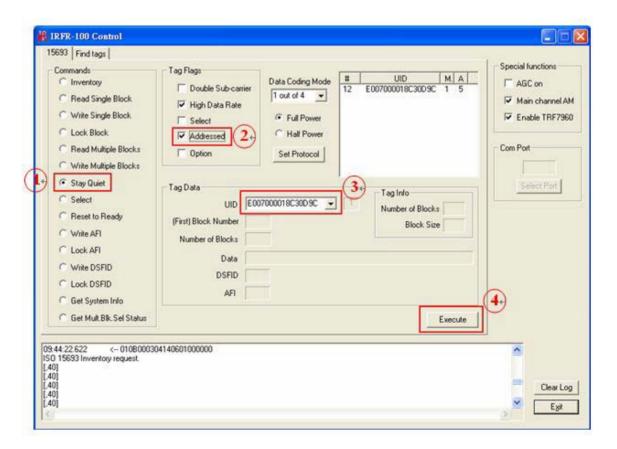


Figure 4-16: Stay Quiet



If you want to clear Quiet mode, see following instructions:

Step 1: Click the button for Reset to Ready in the Commands window

Step 2: Click on addressed flag in the Tag Flags window

Step 3: Select a tag which is in *Quiet* mode from the UID pulldown list in the Tag Data window

Step 4: Execute the command

At last, the tag will response to any nonaddressed or inventory related commands.

4.5.8 Select

The Select command places the addressed tag in the Select state. In this state, it responds to requests with the ISO 15693 Select Flag set. This flag is directly controlled by the <IsSelectMsg> field present in many ISO 15693 library request messages. Any receiving tag currently in the Select state with UID not matching the value sent in the request command, exits that state and enters the Ready state but does not send a reply. (See Appendix A for more instructions)

To select a tag, the user should:

Step 1: Click the button for Select in the Commands window

Step 2: Click on any flags that must be set in the Tag Flags window

Step 3: Optionally select a tag from the UID pulldown list in the Tag Data window and set the Addressed flag (if only one tag is present, only one choice is available)

Step 4: Execute the command



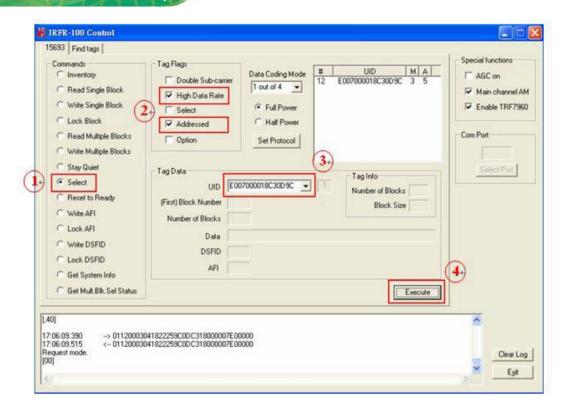


Figure 4-17: Select

4.5.9 Reset to Ready

The Reset To Ready command places the addressed tag in the Ready state. In this state, it does not respond to requests with the ISO 15693 Select Tag Flags set, but to any nonaddressed request or request matching its UID.

This command is, in effect, the complement of the Select command, and undoes it.

To reset a tag, the user should:

- Step 1: Click the button for Reset to Ready in the Commands window
- Step 2: Click on any flags that must be set in the Tag Flags window
- Step 3: Optionally select a tag from the UID pulldown list in the Tag Data window (if only one tag is present, only one choice is available)
- Step 4: Execute the command



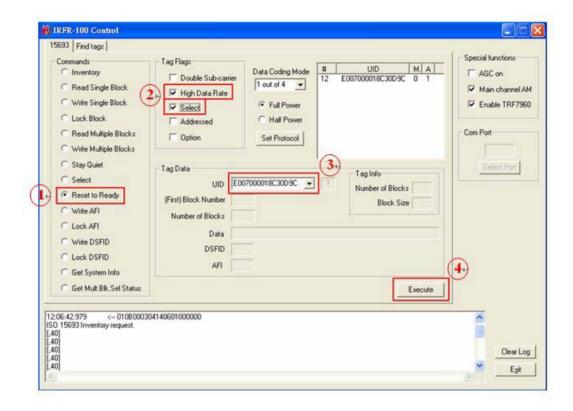


Figure 4-18: Reset to Ready

4.5.10 Write AFI (Application Family Identifier)

The Write AFI command records a new value to the AFI register (see Appendix B for AFI codes) of the addressed tag(s). A corrupted response or lack of response from TRF7960 does not necessarily indicate a failure to perform the write operation. Additionally, multiple transponders may process a non-addressed request.

AFI represents the tag application, and is used to extract information from tags meeting the application criteria.

To write a tag's AFI, the user should:

- Step 1: Click the button for Write AFI in the Commands window
- Step 2: Click on any flags that must be set in the Tag Flags window



- Optionally select a tag from the UID pulldown list in the Tag Data window (if only one tag is present only one choice is available)
- Enter the desired AFI code in the AFI field in the Tag Data window (in Step 4: hexadecimal)
- Step 5: Execute the command

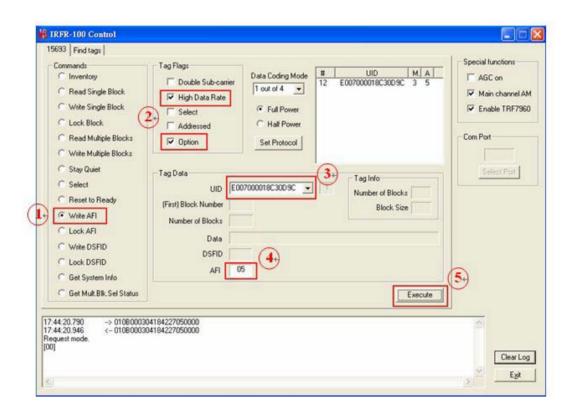


Figure 4-19: Write AFI



The Option flag (bit 7) of the ISO 15693 defined Request flags must be set to 1 for all Write and Lock commands to respond properly.



4.5.11 Lock AFI (Application Family Identifier)

The Lock AFI command write-protects the AFI register of the addressed tag(s). A corrupted response or lack of response does not necessarily indicate a failure to perform the lock operation. Additionally, multiple transponders may process a nonaddressed request.

Used to permanently lock the AFI.

To a lock tag's AFI, the user should:

- Step 1: Click the button for Lock AFI in the Commands window
- Step 2: Click on any flags that must be set in the Tag Flags window
- Step 3: Optionally select a tag from the UID pulldown list in the Tag Data window (if only one tag is present, only one choice is available)
- Step 4: Execute the command

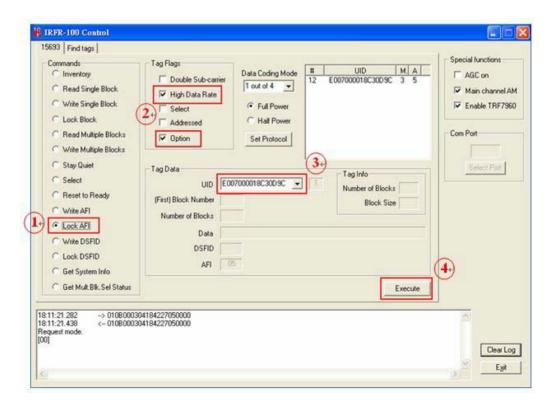


Figure 4-20: Lock AFI





The Option flag (bit 7) of the ISO 15693 defined Request flags must be set to 1 for all Write and Lock commands to respond properly.

4.5.12 Write DSFID (Data Storage Format ID)

The Write DSFID (data storage format ID) command writes a new value in the DSFID register of the addressed tag(s). A corrupted response or lack of response from the TRF7960 does not necessarily indicate a failure to perform the write operation. Additionally, multiple transponders may process a nonaddressed request.

To write a tag's DSFID, the user should:

- Step 1: Click the button for Write DSFID in the Commands Window
- Step 2: Click on any flags that must be set in the Tag Flags window
- Step 3: Select a tag from the UID pulldown list in the Tag Data window (if only one tag is present, only one choice is available)
- Step 4: Enter the desired DSFID code in the DSFID field in the Tag Data window (in hexadecimal)
- Step 5: Execute the command



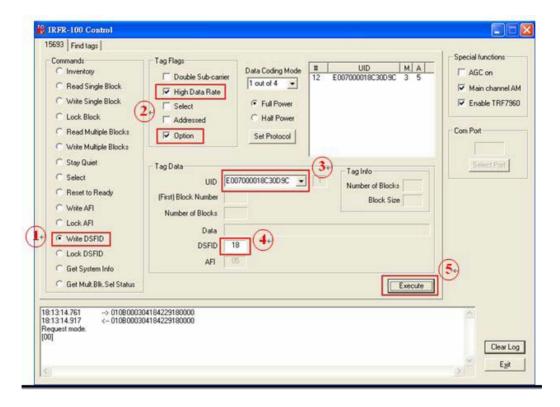


Figure 4-21: Write DSFID



The Option flag (bit 7) of the ISO 15693 defined Request flags must be set to 1 for all Write and Lock commands to respond properly.

4.5.13 Lock DSFID (Data Storage Format ID)

The Lock DSFID command write-protects the DSFID register of the addressed tag(s). A corrupted response or lack of response from TRF7960 does not necessarily indicate a failure to perform the lock operation. Additionally, multiple transponders may process a nonaddressed request.

Used to permanently lock the DSFID.

To a lock tag's DSFID, the user should:



- Step 1: Click the button for Lock DSFID in the Commands window
- Step 2: Click on any flags that must be set in the Tag Flags window
- Step 3: Optionally select a tag from the UID pulldown list in the Tag Data window (if only one tag is present, only one choice is available)
- Step 4: Execute the command

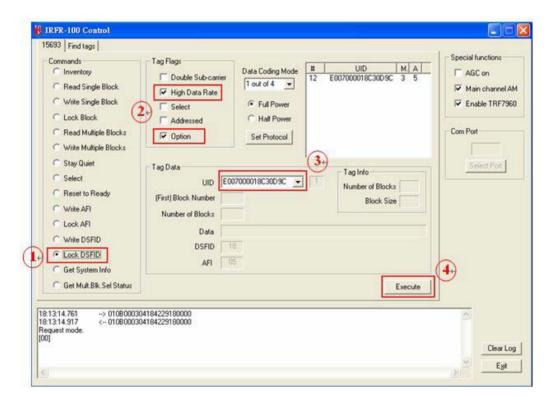


Figure 4-22: Lock DSFID



The Option flag (bit 7) of the ISO 15693 defined Request flags must be set to 1 for all Write and Lock commands to respond properly.



4.5.14 Get System Info

The Get System Info command retrieves identification, application family, data formatting, and memory block sizes as specified in the ISO 15693 standard (if tag supports this command).

To get system information, the user should:

- Step 1: Click the button for Get System Info in the Commands window
- Step 2: Click on any flags that must be set in the Tag Flags window
- Step 3: Optionally select a tag from the UID pulldown list in the Tag Data window (if only one tag is present, only one choice is available)
- Step 4: Execute the command

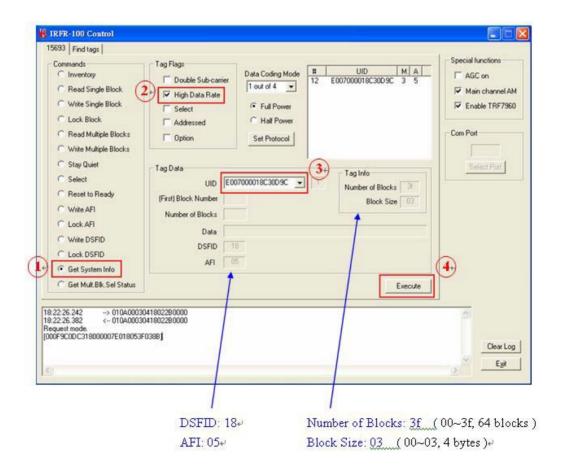


Figure 4-23: Get System Info



4.5.15 Get Multiple-Block Security Status (Get Mult_Blk Sel Status)

The Get Multiple-Block Security Status (Get Mutt. Blk. Sel Status) command gets a block security status byte for each block requested. This byte encodes the write protection of the block specified (e.g., unlocked, (user/factory) locked, etc.).

To get multiple block security status, the user should:

- Step 1: Click the button for Get Mult.Blk.Sel Status in the Commands window
- Step 2: Click on any flags that must be set in the Tag Flags window
- Step 3: Optionally select a tag from the UID pulldown list in the Tag Data window (if only one tag is present, only one choice is available)
- Step 4: Enter two hex digits corresponding to the starting block number in the (First)

 Block Number field in the Tag Data window. The blocks are numbered from 00 to FF (0 to 255)
- Step 5: Enter two hex digits corresponding to the number of blocks to be written in the Number of Blocks field in the Tag Data window. The number of blocks in the request is one less than the number of blocks that the tag returns in its response E.g., a value of 06 in the Number of Blocks field requests to read 7 blocks. A value of 00 requests to read a single block
- Step 6: Execute the command





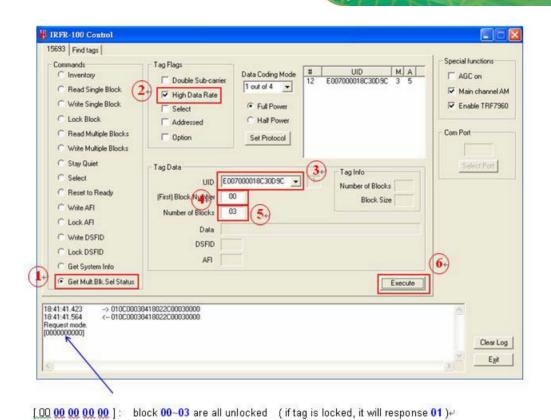


Figure 4-24: Get Multiple-Block Security Status



4.6 Find Tags

The Find tags window enables the query of the RF field for all supported tags. It continuously sends an Inventory request and displays all the tag labels found within the read range of the reader. The user can select the appropriate buttons that correspond to the protocol field.

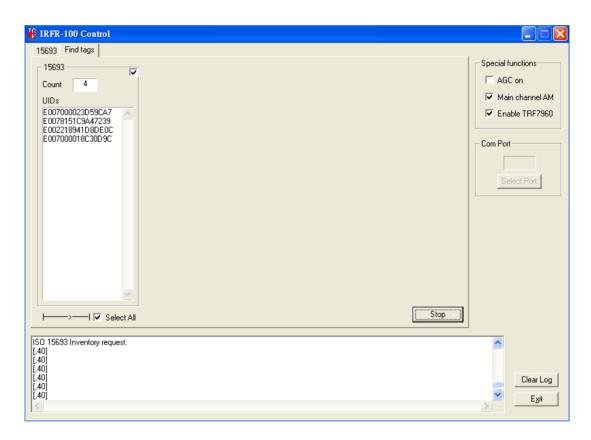


Figure 4-25:

Once the Run button is clicked, the window shows all tags found within its reception area.

This command runs until the Stop button is clicked (shared location with the Run button). An indicator for the supported standards is active when the particular protocol is running. This moving right cursor can be found located left of the Select All button.

This command is recommended for demonstrations, as it requires no specific knowledge of commands/flags for each protocol.



Appendix


A

Multiple Tags Writing Instruction



A.1 Inventory Request

With the Inventory request, all the UIDs from the tags in the reader field are displayed.

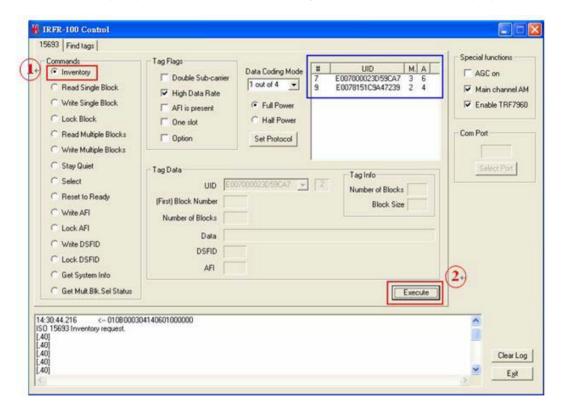


A.2 NON - ADDRESSED Mode

In NON-ADDRESSED mode, users can write data to multiple tags at one time.

- Needn't choosing the UID of the tag
- Un-check the 'Addressed' flag
- Check the 'Option' flag





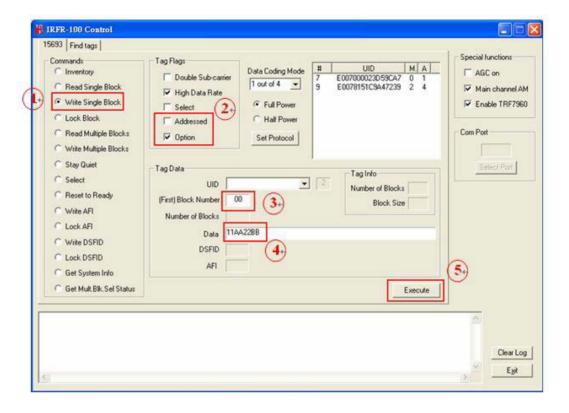


A.3 ADDRESSED Mode

In ADDRESSED mode, you can write data to a specific tag.

- Choose the UID of the tag
- Check the 'Addressed' flag
- Check the 'Option' flag



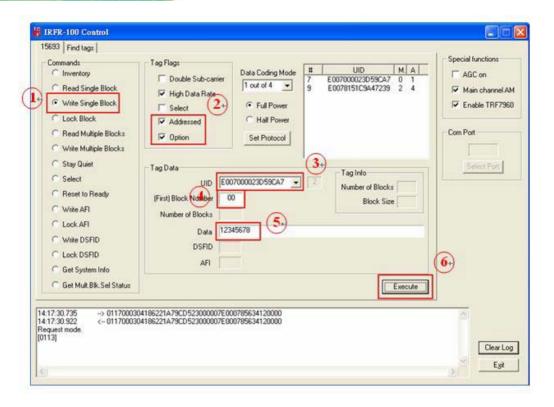


Reading back the written data from a specific tag:

- The 'Addressed' flag has to be selected
- The 'Option' flag is optional

If the "Option" flag is set, then the last two digits (when a Read single block is executed) will designate whether the tag is unlocked (00) or locked (01)):



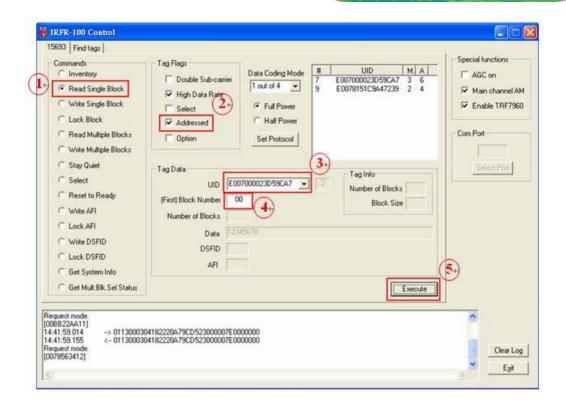


A.4 SELECTED Mode

Setting a tag in selected state:

- Choose 'Select' command
- The 'Addressed' flag has to be set
- Choose the UID of the preferred tag



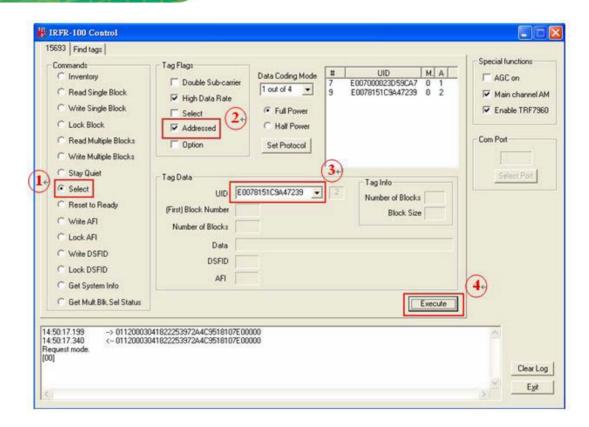


When a tag is set in selected state, all other requests will not need to choose its UID.

Writing data to a tag, which is in selected state:

- The 'Select' flag has to be set
- Check the 'Option' flag






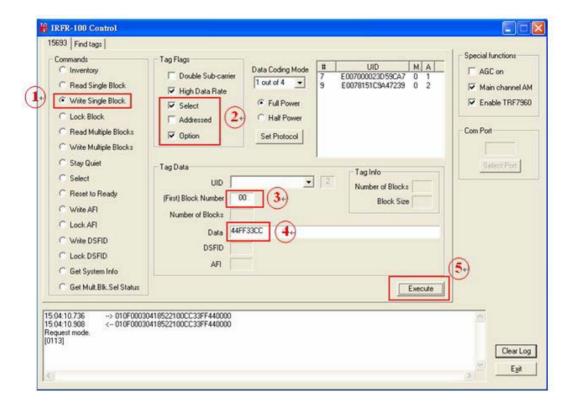

Reading data from a selected tag:

The 'Select' flag has to be set



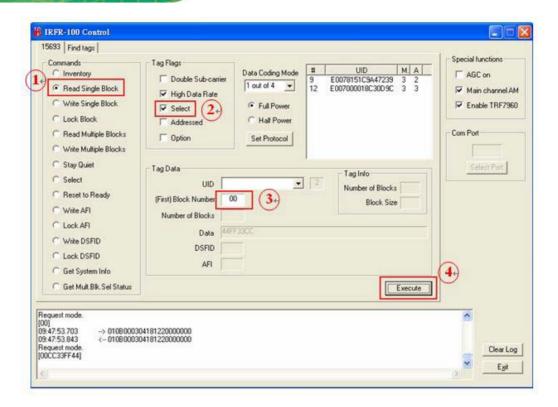


If we want to select the second tag, the first tag (the one in the selected state) has to be deselected first.

To deselect the first tag:

The 'Select' flag has to be set



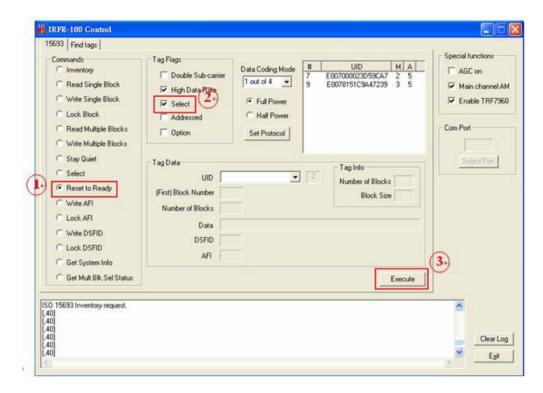

Setting the second tag in selected state, please return to follow the steps of A.4.



Appendix

TestDII Program




B.1 Introduction

This document provides the information for application developer to understand the IRFR-100 - TestDII Program architecture and application programming reference. The demo program is developed by using Microsoft Visual Studio .NET 2003. MFC library. And the demo program for WinCE is developed by Microsoft eMbedded Visual C++ 4.0 MFC library.

B.2 How to use

Before you can utilize the IRFR-100 software application programming interface, you have to do some basic initialization. The SDK package includes one dynamic link library named "IRFR_100_DLL.dll". You need to include "IRFR_100_DLL.h" in your application header file and set "IRFR_100_DLL.lib" in project linker input, then you can use its APIs. IRFR_100_TestDII_C.rar will demonstrate how to use IRFR_100_DLL_C library.

IRFR-100-TestDII Application Architecture:

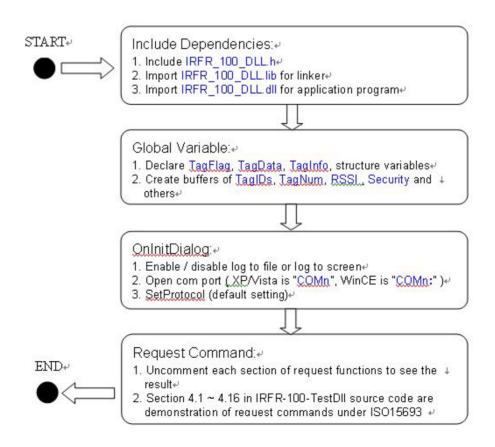



B.3 Tag Information Structure

The data structure contains all information about RFID Tag. Below are the declarations of TagFlag, TagData, TagInfo, RSSI and the description of entries.

B.3.1 Tag Flag

```
tagflag {
struct
         t15CodingMode;
         t15bSubCarrier;
    int
    int
         t15bDataRate;
    int
         t15bInventory;
    int
         t15bSelect;
         t15bAddress;
         t15bOption;
    int
    int
         t15iFullPower;
};
typedef struct tagflag TagFlag;
```

Variable	Description		
variable	Value = 0	Value = 1	
t15CodingMode	1 out of 4	1 out of 256	
t15bSubCarrier	single sub-carrier	double sub-carrier	
t15bDataRate	low data rate	high data rate	
t15bInventory	other request	inventory request	
t15bSelect	disable select mode	enable select mode	
t15bAddress	non-addressed mode	addressed mode	
t15bOption	disable option	enable option	
t15iFullPower	full power	half power	

B.3.2 Tag Data

Struct tagdata{



```
char t15UID [CMD_LEN];
char t15FirstBN [HEX_LEN];
char t15NumBl [HEX_LEN];
char t15Data [CMD_LEN];
char t15DSFID [DSFID_LEN];
char t15AFI [HEX_LEN];
};
typedef struct tagdata TagData;
```

Variable	Description		
t15UID	Tag UID	CMD_LEN = 2048	
t15FirstBN	First block number	HEX_LEN = 4	
t15NumBl	Number of Blocks	HEX_LEN = 4	
t15Data	Block data	CMD_LEN = 2048	
t15DSFID	DSFID number	DSFID_LEN = 4	
t15AFI	AFI number	HEX_LEN = 4	

B.3.3 Tag Info

```
struct taginfo{
    char DSFID [DSFID_LEN];
    char AFI [HEX_LEN];
    char NumofBlk [HEX_LEN];
    char BlkSize [HEX_LEN];
};
typedef struct taginfo TagInfo;
```

Variable	Description		
DSFID	DSFID number	DSFID_LEN = 4	
AFI	AFI number	HEX_LEN = 4	
NumofBlk	Number of Blocks	HEX_LEN = 4	



BlkSize	Block size	HEX_LEN = 4
		_

B.3.4 RSSI

```
struct rssi{
    char Slot [BUF_LEN];
    char UID [CMD_LEN];
    char AM [BUF_LEN];
    char PM [BUF_LEN];
};

typedef struct rssi RSSI;
```

Variable	Description		
Slot	Slot number (1 ~ 16)	BUF_LEN = 36	
UID	Tag UID	CMD_LEN = 2048	
AM	Main channel	BUF_LEN = 36	
PM	Sub channel	BUF_LEN = 36	

B.3.5 Request Command Type

These are definitions of request command type used by ${\bf IRFR_RequestExecute()}$

function

#define	INVENTORY	0
#define	READ_SB	1
#define	WRITE_SB	2
#define	LOCK_B	3
#define	READ_MB	4
#define	WRITE_MB	5
#define	QUIET	6
#define	SELECT	7
#define	READY	8
#define	WRITE_AFI	9
#define	LOCK_AFI	10
#define	WRITE_DSFID	11
#define	LOCK DSFID	12





```
#define SYSTEM_INFO 13
#define MBS_STATUS 14
```

B.4 Software APIs

```
BOOL IRFR_FindPort (void)
```

This function can be used to find com port and open it automatically.

```
[ Parameter ]
```

None.

[Return]

If open IRFR-100 device com port successfully, it return 1, otherwise return 0.

Example:

IRFR_FindPort ();

BOOL IRFR_FindSinglePort (char *Port)

This function can be used to open com port manually.

[Parameter]

char * Port : assign IRFR-100 device com port name.

[Return]

If open IRFR-100 device com port successfully, it return 1, otherwise return 0.

Example:

XP/Vista: BOOL IRFR_FindSinglePort ("COM4");
WinCE: BOOL IRFR_FindSinglePort ("COM4:");



Page 60

```
int IRFR_logAddFile (char * msg)
This function can be used to write string to user defined log file. Remember to call
IRFR_SetFilePath() to set log file pathname first.
[Parameter]
       char * msg: assign user defined string.
[Return]
       If write string successfully, it return 0, otherwise return 1 (NULL_FILE_PATH).
Example:
       IRFR_logAddFile ( "Com Port Found!!" );
Int IRFR_logAddScreen (char * msg)
This function can be used to write string to user defined MFC CEdit control variable and show it
on the screen. Remember to call IRFR_SetLogger() to set CEdit control variable first.
[ Parameter ]
       char * msg: assign user defined string.
[Return]
       If write string successfully, it return 0, otherwise return 2 (NULL_LOGGER).
Example:
       IRFR_logAddScreen ( "Com Port Found!!" );
       IRFR_SetFilePath (char * path )
This function can be used to set log file pathname.
[ Parameter ]
       char * path: assign user defined file pathname.
[Return]
```





None. Example: IRFR_SetFilePath ("TestDll.log"); IRFR_SetLogger (CEdit *logger) void This function can be used to set MFC CEdit control variable. [Parameter] CEdit *logger: assign user defined CEdit control variable. [Return] None. Example: IRFR_SetLogger (&m_myLogger); IRFR_SetLogFile (bool result) void This function can be used to enable or disable log to file feature. [Parameter] bool result: assign true to enable log to file feature, or false to disable it. [Return] None. Example: IRFR_SetLogFile (false);



IRFR_SetLogScreen (bool result)

void

```
This function can be used to enable or disable log to screen feature.
[Parameter]
       bool result: assign true to enable log to screen feature, or false to disable it.
[Return]
       None.
Example:
       IRFR_SetLogScreen ( false );
      IRFR_ClearLog ( void );
void
This function can be used to clear CEdit control variable buffer and clear screen data.
[Parameter]
       None.
[Return]
       None.
Example:
       IRFR_ClearLog();
int IRFR_SetProtocol (TagFlag tf);
This function can be used to set or update operation flags of IRFR-100 device.
[ Parameter ]
       TagFlag tf: assign user defined TagFlag structure.
[Return]
       If success, return 0, otherwise return 1.
Example:
```



```
m_tf -> t15CodingMode = 0;
                                                         // 1 out of 4
      m_tf -> t15bSubCarrier = 0;
                                                         // single sub carrier
      m_tf -> t15bDataRate = 1;
                                                         // high data rate
      m_tf -> t15bInventory = 1;
                                                         // inventory request
      m_tf \rightarrow t15bSelect = 0;
                                                         // disable select mode
      m_tf \rightarrow t15bAddress = 0;
                                                         // non-addressed mode
      m_tf \rightarrow t15bOption = 0;
                                                         // disable option
      m_tf -> t15iFullPower = 0;
                                                         // 0:enable full power, 1:half power
     IRFR_SetProtocol ( *m_tf );
int IRFR_RequestExecute (int cmdno, char *reply, TagFlag tf, TagData
*td )
This function can be used to execute request command of ISO 15693. And IRFR-100 response
data will be saved in reply buffer.
[Parameter]
       int cmdno: assign request command type.
       char *reply:
                          assign user defined buffer to save data responded from IRFR-100
device.
       TagFlag tf:
                          assign user defined TagFlag structure.
       TagData *td: assign user defined TagData structure.
[Return]
       If success, return 0, otherwise return 1.
Example:
       IRFR_RequestExecute ( INVENTORY, m_reply, *m_tf, m_td );
       IRFR_FindRun (char *TagIDs, char *TagNum)
This function can be used to find the UIDs of all tags (only ISO 15693 support) in the Antenna
area automatically.
[Parameter]
       char *TagIDs: assign user defined buffer to save all Tags UIDs.
```



Page 64

char *TagNum: assign user defined buffer to save Tag number. [Return] None. Example: IRFR_FindRun (m_TagIDs, m_TagNum); void IRFR_FindStop (void) This function can be used to stop finding Tags. [Parameter] None. [Return] None. Example: IRFR_FindStop (); IRFR_GetUIDs (char *reply, char *TagIDs[], char *TagNum) This function can be used to parse the given reply buffer to retrieve Tag UIDs and Tag number. [Parameter] char *reply: assign reply buffer which contains responded data from IRFR-100 device. char *TagIDs[]: assign user defined buffer to save all Tags UIDs. char *TagNum: assign user defined buffer to save Tag number. [Return] None. Example:



```
IRFR_GetUIDs ( m_reply, TagIDs, TagNum );
```

Remember to call IRFR_RequestExecute (INVENTORY, m_reply, *m_tf, m_td) first to get all tags information from IRFR-100 device and save them in the reply buffer.

```
void IRFR_GetRSSI(char *reply, RSSIRSSIs[])
```

This function can be used to parse the given reply buffer to retrieve RSSI information.

```
[Parameter]
```

```
char *reply: assign reply buffer which contains responded data from IRFR-100 device. RSSI RSSIs[]: assign user defined RSSI structure to save all Tags RSSI info.
```

```
[Return]
```

None.

Example:

```
IRFR_GetRSSI ( m_reply, RSSIs );
```

Remember to call IRFR_RequestExecute (INVENTORY, m_reply, *m_tf, m_td) first to get all tags information from IRFR-100 device and save them in the reply buffer.

```
void IRFR_GetBlockData (char *reply, TagData *td)
```

This function can be used to parse the given reply buffer to retrieve single block data of specified block index.

```
[ Parameter ]
```

```
char *reply : assign reply buffer which contains responded data from IRFR-100 device.
```

TagData *td: assign user defined TagData structure to save block data.

[Return]

None.

Example:

IRFR_GetBlockData (m_reply, m_td);



Remember to call IRFR_RequestExecute (READ_SB, m_reply, *m_tf, m_td) first to get specified tag information from IRFR-100 device and save them in the reply buffer.

void IRFR_GetMultiBlockData (char *reply, TagData *td);

This function can be used to parse the given reply buffer to retrieve multiple block data of specified block index range.

[Parameter]

char *reply : assign reply buffer which contains responded data from IRFR-100 device.

TagData *td: assign user defined TagData structure to save multiple block data.

[Return]

None.

Example:

IRFR_GetMultiBlockData (m_reply, m_td);

Remember to call IRFR_RequestExecute (READ_MB, m_reply, *m_tf, m_td) first to get specified tag information from IRFR-100 device and save them in the reply buffer.

void IRFR_GetTagInfo (char *reply, TagInfo *ti, TagFlag tf, TagData td) This function can be used to parse the given reply buffer to retrieve total block number and block size of specified tag.

[Parameter]

char *reply: assign user defined buffer to save data responded from IRFR-100

device.

TagInfo *ti: assign user defifned TagInfo structure to save tag information.

TagFlag tf: assign user defined TagFlag structure.

TagData *td: assign user defined TagData structure.

[Return]

None.



Example:

```
IRFR_GetTagInfo ( m_reply, m_ti, *m_tf, *m_td );
```

Remember to call IRFR_RequestExecute (SYSTEM_INFO, m_reply, *m_tf, m_td) first to get

specified tag information from IRFR-100 device and save them in the reply buffer.

```
void IRFR_GetMultiBlockSecurity ( char *reply, char *SecurityData )
```

This function can be used to parse the given reply buffer to retrieve the status (lock or unlock) of multiple blocks.

[Parameter]

char *reply: assign reply buffer which contains responded data from IRFR-100 device. char *SecurityData: assign user defined buffer to save the status of multiple blocks.

[Return]

None.

Example:

IRFR_GetMultiBlockSecurity (m_reply, m_SecurityData);

Remember to call IRFR_RequestExecute (MBS_STATUS, m_reply, *m_tf, m_td) first to get specified tag information from IRFR-100 device and save them in the reply buffer.

B.5 Example Code

Please extract IRFR_100_TestDII_C.rar (XP/Vista) or IRFR_100_TestDII_MFC_CE.rar (WinCE) in the "IRFR-100 APPLICATION SDK" package and uncomment one of section B.4 and build the project to show the demo application.



Appendix C

ISO/IEC 15693 Reference Material



C.1 UID Format

The tags are uniquely identified by a 64-bit unique identifier (UID). This is used for addressing each tag uniquely and individually during the anticollision loop, and for one-to-one exchange between a reader and a tag.

The format of the UID is shown below:

Bits 64 to 57	Bits 56 to 49	Bits 48 to 1
E0	Manufacturer code IC	serial number

The UID is composed of:

- The 8 MSBs, which are E0.
- The 8-bit IC manufacturer code
- A unique serial number of 48 bits assigned by the IC manufacturer

C.2 Tag Memory Organization

Tag memory is organized into blocks of bytes. Addressing is by block only. There is no individual byte addressing for read or write; the whole block is accessed. It is analogous to a spreadsheet with rows and columns, where addressing accesses a whole row at once. The format of tag memory is shown as follows:

Bits 16 to 14	Bits 13 to 9	Bits 8 to 1
RFU	Block size in bytes	Number of blocks

- Block size is expressed in 5 bits, allowing up to 32 bytes, i.e., 256 bits. It is one less than the actual number of bytes. E.g., a value of 1F indicates 32 bytes; a value of 00 indicates 1 byte.
- Number of blocks is defined in 8 bits, allowing up to 256 blocks. It is one less than the
 actual number of blocks. E.g., a value of FF indicates 256 blocks; a value of 00
 indicates 1 block.
- The 3 most-significant bits are reserved for future use and are set to zero.

This addressing scheme limits the total storage of the tag to 8K bytes.



C.3 Flag Definitions

- High Data Rate: the default data rate is used for maximum detection range. If High
 Data Rate is selected in the Tag Flags window, communication with the tag is faster,
 but the range is reduced.
- AFI is present: The default setting for the AFI (Application Family Identifier) is off. If
 AFI is present is selected in the Tag Flags window, AFI is enabled in commands and
 responses.
- One Slot: the definition of slot, as used in the software, is the number of tags that may
 be received at a time. The default is 16. If only One Slot is selected in the Tag Flags
 window, the algorithm detects a flag sooner, but stops after detecting the first tag.
 Other tags in the reception range of the reader are ignored.
- Select: the default is off. Request executed by any tag according to the setting of
 Addressed flag. If select flag is selected in the Tag Flags window, request executed
 only by tag in selected state. The Addressed flag is set to 0 and the UID field is not
 included in the request.
- Addressed: the default setting is off. Request is not addressed. UID field is not included. It can be executed by any tag. If addressed flag is selected in the Tag Flags window, request is addressed. UID field is included. It is executed only by the tag whose UID matches the UID specified in the request.
- Option: Meaning is defined by the command description.

C.4 Application Family Identifier (AFI) Definitions

AFI Most Significant	AFI Least Significant	Meaning Tags Respond From	Examples/Note	
Nibble	Nibble			
0	0	All families and subfamilies	No applicable reselection	
Х	0	All subfamilies of family X	Wide applicable	
			preselection	
Х	Υ	Only the Yth subfamily of family		
		x		
0	Υ	Proprietary subfamily Y only		
1	0, Y	Transport	Mass transit, bus, airline	
2	0, Y	Financial	IEP, banking, retail	



AFL2-MF-RFID-KIT Series

3	0, Y	Identification	Access control
4	0, Y	Telecommunication	Public telephony, GSM
5	0, Y	Medical	
6	0, Y	Multimedia	Internet services
7	0, Y	Gaming	
8	0, Y	Data storage	Portable files
9	0, Y	Item management	
А	0, Y	Express parcels	
В	0, Y	Postal services	
С	0, Y	Airline bags	
D	0, Y	RFU	Reserved for future use
E	0, Y	RFU	Reserved for future use
F	0, Y	RFU	Reserved for future use



Appendix

D

Hazardous Materials Disclosure





D.1 Hazardous Materials Disclosure Table for IPB Products Certified as RoHS Compliant Under 2002/95/EC Without Mercury

The details provided in this appendix are to ensure that the product is compliant with the Peoples Republic of China (China) RoHS standards. The table below acknowledges the presences of small quantities of certain materials in the product, and is applicable to China RoHS only.

A label will be placed on each product to indicate the estimated "Environmentally Friendly Use Period" (EFUP). This is an estimate of the number of years that these substances would "not leak out or undergo abrupt change." This product may contain replaceable sub-assemblies/components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Please refer to the table on the next page.



AFL2-MF-RFID-KIT Series

Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Housing	Х	0	0	0	0	Х
Display	Х	0	0	0	0	X
Printed Circuit Board	X	0	0	0	0	X
Metal Fasteners	Х	0	0	0	0	0
Cable As sembly	Х	0	0	0	0	Х
Fan Assembly	Х	0	0	0	0	X
Power Supply As semblies	Х	0	0	0	0	Х
Battery	0	0	0	0	0	0

O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in SJ/T11363-2006

X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006



AFL2-MF-RFID-KIT Series

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有"环境友好使用期限"的标签,此期限是估算这些物质"不会有泄漏或突变"的年限。本产品可能包含有较短的环境友好使用期限的可替换元件,像是电池或灯管,这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯
	(Pb)	(Hg)	(Cd)	(CR(VI))	(PBB)	醚
						(PBDE)
壳体	X	0	0	0	0	X
显示	X	0	0	0	0	Х
印刷电路板	X	0	0	0	0	X
金属螺帽	Х	0	0	0	0	0
电缆组装	Х	0	0	0	0	Х
风扇组装	X	0	0	0	0	Х
电力供应组装	Х	0	0	0	0	Х
电池	0	0	0	0	0	0

O: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。

X:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

IEI:

AFL2-MF-RFID-KIT03-R11