

# R-IN32M3 Module (RY9012A0)

User's Manual: Hardware

RENESAS MCU  
R-IN32M3-EC

Rev .1.00  
Aug 2020

All information contained in these materials, including products and product specifications, represents information on the product at the time of publication and is subject to change by Renesas Electronics Corp. without notice. Please review the latest information published by Renesas Electronics Corp. through various means, including the Renesas Electronics Corp. website (<http://www.renesas.com>).

## Notice

1. Descriptions of circuits, software and other related information in this document are provided only to illustrate the operation of semiconductor products and application examples. You are fully responsible for the incorporation or any other use of the circuits, software, and information in the design of your product or system. Renesas Electronics disclaims any and all liability for any losses and damages incurred by you or third parties arising from the use of these circuits, software, or information.
2. Renesas Electronics hereby expressly disclaims any warranties against and liability for infringement or any other claims involving patents, copyrights, or other intellectual property rights of third parties, by or arising from the use of Renesas Electronics products or technical information described in this document, including but not limited to, the product data, drawings, charts, programs, algorithms, and application examples.
3. No license, express, implied or otherwise, is granted hereby under any patents, copyrights or other intellectual property rights of Renesas Electronics or others.
4. You shall not alter, modify, copy, or reverse engineer any Renesas Electronics product, whether in whole or in part. Renesas Electronics disclaims any and all liability for any losses or damages incurred by you or third parties arising from such alteration, modification, copying or reverse engineering.
5. Renesas Electronics products are classified according to the following two quality grades: "Standard" and "High Quality". The intended applications for each Renesas Electronics product depends on the product's quality grade, as indicated below.

"Standard": Computers; office equipment; communications equipment; test and measurement equipment; audio and visual equipment; home electronic appliances; machine tools; personal electronic equipment; industrial robots; etc.

"High Quality": Transportation equipment (automobiles, trains, ships, etc.); traffic control (traffic lights); large-scale communication equipment; key financial terminal systems; safety control equipment; etc.

Unless expressly designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not intended or authorized for use in products or systems that may pose a direct threat to human life or bodily injury (artificial life support devices or systems; surgical implantations; etc.), or may cause serious property damage (space system; undersea repeaters; nuclear power control systems; aircraft control systems; key plant systems; military equipment; etc.). Renesas Electronics disclaims any and all liability for any damages or losses incurred by you or any third parties arising from the use of any Renesas Electronics product that is inconsistent with any Renesas Electronics data sheet, user's manual or other Renesas Electronics document.

6. When using Renesas Electronics products, refer to the latest product information (data sheets, user's manuals, application notes, "General Notes for Handling and Using Semiconductor Devices" in the reliability handbook, etc.), and ensure that usage conditions are within the ranges specified by Renesas Electronics with respect to maximum ratings, operating power supply voltage range, heat dissipation characteristics, installation, etc. Renesas Electronics disclaims any and all liability for any malfunctions, failure or accident arising out of the use of Renesas Electronics products outside of such specified ranges.
7. Although Renesas Electronics endeavors to improve the quality and reliability of Renesas Electronics products, semiconductor products have specific characteristics, such as the occurrence of failure at a certain rate and malfunctions under certain use conditions. Unless designated as a high reliability product or a product for harsh environments in a Renesas Electronics data sheet or other Renesas Electronics document, Renesas Electronics products are not subject to radiation resistance design. You are responsible for implementing safety measures to guard against the possibility of bodily injury, injury or damage caused by fire, and/or danger to the public in the event of a failure or malfunction of Renesas Electronics products, such as safety design for hardware and software, including but not limited to redundancy, fire control and malfunction prevention, appropriate treatment for aging degradation or any other appropriate measures. Because the evaluation of microcomputer software alone is very difficult and impractical, you are responsible for evaluating the safety of the final products or systems manufactured by you.
8. Please contact a Renesas Electronics sales office for details as to environmental matters such as the environmental compatibility of each Renesas Electronics product. You are responsible for carefully and sufficiently investigating applicable laws and regulations that regulate the inclusion or use of controlled substances, including without limitation, the EU RoHS Directive, and using Renesas Electronics products in compliance with all these applicable laws and regulations. Renesas Electronics disclaims any and all liability for damages or losses occurring as a result of your noncompliance with applicable laws and regulations.
9. Renesas Electronics products and technologies shall not be used for or incorporated into any products or systems whose manufacture, use, or sale is prohibited under any applicable domestic or foreign laws or regulations. You shall comply with any applicable export control laws and regulations promulgated and administered by the governments of any countries asserting jurisdiction over the parties or transactions.
10. It is the responsibility of the buyer or distributor of Renesas Electronics products, or any other party who distributes, disposes of, or otherwise sells or transfers the product to a third party, to notify such third party in advance of the contents and conditions set forth in this document.
11. This document shall not be reprinted, reproduced or duplicated in any form, in whole or in part, without prior written consent of Renesas Electronics.
12. Please contact a Renesas Electronics sales office if you have any questions regarding the information contained in this document or Renesas Electronics products.

(Note1) "Renesas Electronics" as used in this document means Renesas Electronics Corporation and also includes its directly or indirectly controlled subsidiaries.

(Note2) "Renesas Electronics product(s)" means any product developed or manufactured by or for Renesas Electronics.

(Rev.4.0-1 November 2017)

## Corporate Headquarter

TOYOSU FORESIA, 3-2-24 Toyosu,  
Koto-ku, Tokyo 135-0061, Japan  
[www.renesas.com](http://www.renesas.com)

## Trademarks

Renesas and the Renesas logo are trademarks of Renesas Electronics Corporation. All trademarks and registered trademarks are the property of their respective owners.

## Contact information

For further information on a product, technology, the most up-to-date version of a document, or your nearest sales office, please visit:  
[www.renesas.com/contact/](http://www.renesas.com/contact/).

# General Precautions in the Handling of Microprocessing Unit and Microcontroller Unit Products

The following usage notes are applicable to all Microprocessing unit and Microcontroller unit products from Renesas. For detailed usage notes on the products covered by this document, refer to the relevant sections of the document as well as any technical updates that have been issued for the products.

## 1. Precaution against Electrostatic Discharge (ESD)

A strong electrical field, when exposed to a CMOS device, can cause destruction of the gate oxide and ultimately degrade the device operation. Steps must be taken to stop the generation of static electricity as much as possible, and quickly dissipate it when it occurs. Environmental control must be adequate. When it is dry, a humidifier should be used. This is recommended to avoid using insulators that can easily build up static electricity. Semiconductor devices must be stored and transported in an anti-static container, static shielding bag or conductive material. All test and measurement tools including work benches and floors must be grounded. The operator must also be grounded using a wrist strap. Semiconductor devices must not be touched with bare hands. Similar precautions must be taken for printed circuit boards with mounted semiconductor devices.

## 2. Processing at power-on

The state of the product is undefined at the time when power is supplied. The states of internal circuits in the LSI are indeterminate and the states of register settings and pins are undefined at the time when power is supplied. In a finished product where the reset signal is applied to the external reset pin, the states of pins are not guaranteed from the time when power is supplied until the reset process is completed. In a similar way, the states of pins in a product that is reset by an on-chip power-on reset function are not guaranteed from the time when power is supplied until the power reaches the level at which resetting is specified.

## 3. Input of signal during power-off state

Do not input signals or an I/O pull-up power supply while the device is powered off. The current injection that results from input of such a signal or I/O pull-up power supply may cause malfunction and the abnormal current that passes in the device at this time may cause degradation of internal elements. Follow the guideline for input signal during power-off state as described in your product documentation.

## 4. Handling of unused pins

Handle unused pins in accordance with the directions given under handling of unused pins in the manual. The input pins of CMOS products are generally in the high-impedance state. In operation with an unused pin in the open-circuit state, extra electromagnetic noise is induced in the vicinity of the LSI, an associated shoot-through current flows internally, and malfunctions occur due to the false recognition of the pin state as an input signal become possible.

## 5. Clock signals

After applying a reset, only release the reset line after the operating clock signal becomes stable. When switching the clock signal during program execution, wait until the target clock signal is stabilized. When the clock signal is generated with an external resonator or from an external oscillator during a reset, ensure that the reset line is only released after full stabilization of the clock signal. Additionally, when switching to a clock signal produced with an external resonator or by an external oscillator while program execution is in progress, wait until the target clock signal is stable.

## 6. Voltage application waveform at input pin

Waveform distortion due to input noise or a reflected wave may cause malfunction. If the input of the CMOS device stays in the area between  $V_{IL}$  (Max.) and  $V_{IH}$  (Min.) due to noise, for example, the device may malfunction. Take care to prevent chattering noise from entering the device when the input level is fixed, and also in the transition period when the input level passes through the area between  $V_{IL}$  (Max.) and  $V_{IH}$  (Min.).

## 7. Prohibition of access to reserved addresses

Access to reserved addresses is prohibited. The reserved addresses are provided for possible future expansion of functions. Do not access these addresses as the correct operation of the LSI is not guaranteed.

## 8. Differences between products

Before changing from one product to another, for example to a product with a different part number, confirm that the change will not lead to problems. The characteristics of a microprocessing unit or microcontroller unit products in the same group but having a different part number might differ in terms of internal memory capacity, layout pattern, and other factors, which can affect the ranges of electrical characteristics, such as characteristic values, operating margins, immunity to noise, and amount of radiated noise. When changing to a product with a different part number, implement a system-evaluation test for the given product.

- Ethernet is a registered trademark of Fuji Xerox Limited.
- IEEE is a registered trademark of the Institute of Electrical and Electronics Engineers, Inc.
- EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.
- PROFINET is a registered trademark of PROFIBUS and PROFINET International (PI).
- EtherNet/IP is a trademark of ODVA, Inc
- Additionally all product names and service names in this document are a trademark or a registered trademark which belongs to the respective owners.

# How to Use This Manual

## 1. Purpose and Target Readers

This manual is designed to provide the user with an understanding of the hardware functions and electrical characteristics of the R-IN32M3 Module. It is intended for users designing application systems incorporating the MCU. A basic knowledge of electric circuits, logical circuits, and MCUs is necessary in order to use this manual.

The manual comprises an overview of the product; descriptions of the CPU, system control functions, peripheral functions, and electrical characteristics; and usage notes.

Particular attention should be paid to the precautionary notes when using the manual. These notes occur within the body of the text, at the end of each section, and in the Usage Notes section.

The revision history summarizes the locations of revisions and additions. It does not list all revisions. Refer to the text of the manual for details.

The following documents apply to the R-IN32M3 Module. Make sure to refer to the latest versions of these documents. Last four digits of document number (described as \*\*\*\*) indicate version information of each document. The newest versions of the documents listed may be obtained from the Renesas Electronics Web site.

Document Type	Description	Document Title	Document No.
Data Sheet	Hardware overview and electrical characteristics	R-IN32M3 Module Datasheet	R19DS0100EDxxxx
User's manual for Hardware	Hardware specifications (pin assignments, peripheral function specifications, electrical characteristics, timing charts) and operation description	R-IN32M3 Module User's Manual: Hardware	This user's manual
User's manual for Software	Description of API	R-IN32M3 Module User's Manual: Software	R17US0001EDxxxx
Quick Start Guide	Information on application examples Sample program for the host CPU.	R-IN32M3 Module Application Note: Quick Start Guide	R12QS0043EDxxxx
Renesas Technical Update	Product specifications, updates on documents, etc.	Available from Renesas Electronics Web site.	

## 2. Notation of Numbers and Symbols

Note:

explanation of (Note) in the text

Caution:

Item deserving extra attention

Remark:

Supplementary explanation to the text

### 3. List of Abbreviations and Acronyms

Abbreviation	Full Form
API	Application Programming Interface
CIP	Common Industrial Protocol
CPU	Central Processing Unit
EMC	Electromagnetic Compatibility
FG	Frame Ground
Hi-Z	High Impedance
I/O	Input / Output
P. C. B	Print Circuit Board
RC	Resistor-Capacitor
SPI	Serial Peripheral Interface

# Table of Contents

<b>1. Overview</b>	<b>9</b>
1.1 Features	9
1.1.1 Applications	9
1.2 Functions	9
1.3 Product Description	10
1.3.1 Product Name	10
1.3.2 Ordering Information	10
<b>2. Host Interface</b>	<b>11</b>
2.1 Overview	11
2.2 Module Pins	12
2.3 SPI Specification	14
2.4 Control Reset	16
2.5 Sequence of Supplying and Cutting off Power	17
2.6 EtherCAT Sync Outputs	17
<b>3. Network Interface Specification</b>	<b>18</b>
3.1 Overview	18
3.2 Hardware Specification	18
3.3 LED Status Specification	19
3.4 PROFINET	19
3.5 EtherNet/IP	19
<b>4. Electrical Characteristics</b>	<b>20</b>
4.1 Absolute Maximum Ratings	20
4.2 Operating Conditions	21
4.3 Functional Earth and Shielding	21
4.4 Shock and Vibration	21
4.4.1 Vibration Test	21
4.4.2 Shock Test	21
4.4.3 Drop Test	21
<b>5. Guideline</b>	<b>22</b>
5.1 Overview	22
5.2 Circuit Design Guideline	22
5.2.1 Overview	22
5.2.2 Power Supply	22
5.2.3 Reset Circuit Example	23
5.2.4 Host CPU Specifications	23
5.3 Industrial Ethernet Protocol Indication	24
5.3.1 PROFINET	25
5.3.2 EtherNet/IP	27
5.4 Layout Design Guideline	30
<b>6. Mounting Conditions</b>	<b>31</b>
6.1 Recommended Soldering Condition (Through Holes)	31
6.1.1 Wave Soldering	31
6.1.2 Hand Soldering	31
6.1.3 Reflow Soldering	31
6.2 Storage Conditions of the Products without Moisture-Proof Packing	32

<b>7. Packing Specifications</b>	<b>33</b>
7.1 RY9012A0000GZ00#001 (30-piece tray package)	33
7.2 RY9012A0000GZ00#002 (1-piece sample package)	34
<b>8. Applicable Standards</b>	<b>35</b>
8.1 CE Marking	35
8.1.1 EMC	35
8.1.2 RoHS/REACH	35
8.2 UL	35
8.3 International Protection Code (IP Code)	35
<b>9. Mechanical Specifications</b>	<b>36</b>
9.1 Package Dimensions	36
9.2 Dimensions	37
<b>10. Marking Specifications</b>	<b>38</b>
10.1 Product Label	38

## 1. Overview

This hardware design guide is intended to provide recommended design practices for use of the Renesas industrial Ethernet module solution. Readers of this document are assumed to have general knowledge in the areas of electrical engineering, logic circuits, and microcontrollers.

### 1.1 Features

- Support for the PROFINET® RT and EtherNet/IP™ real-time communications standards
- Ethernet ports supporting rates of 10 Mbit/s and 100 Mbit/s with auto negotiation
- Device configuration via a Management Tool and API through the application controller
- Comprehensive tool support and application examples in source code for the Renesas Synergy™ SK-S7G2

#### 1.1.1 Applications

Industrial automation, remote I/O, etc.

### 1.2 Functions

- Complete dual Ethernet interface based on IEEE 802.3, including transformers and PHY layers
- Embedded dual-port Ethernet switch for bus and ring network topologies
- High speed SPI interface and power pins to connect the R-IN32M3 Module to a host CPU
- Integrated processor to handle real-time industrial Ethernet protocols

## 1.3 Product Description

### 1.3.1 Product Name

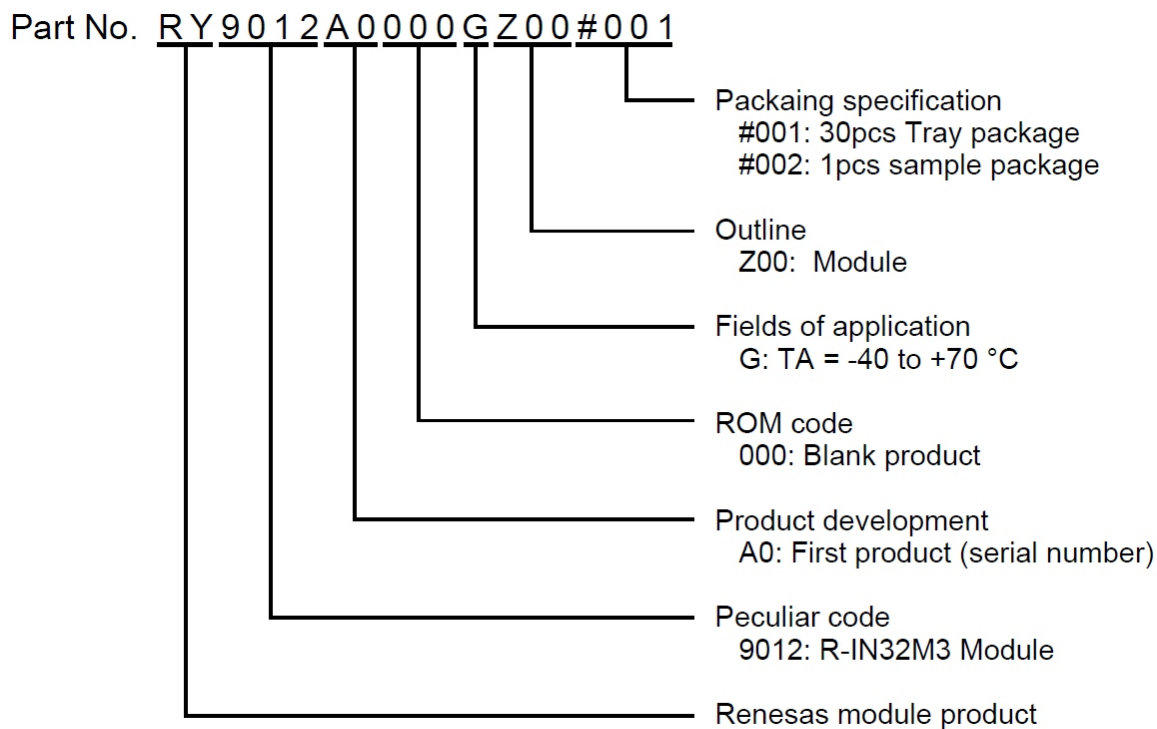


Figure 1.1 Product Name

### 1.3.2 Ordering Information

Table 1.1 Order Information

Part No.	Application
RY9012A0000GZ00#001	Dual-port Ethernet modules in a 30-piece tray package
RY9012A0000GZ00#002	Dual port Ethernet modules in a 1-piece sample package
YCONNECT-IT-I-RJ4501	Ethernet module solution kit

## 2. Host Interface

### 2.1 Overview

The R-IN32M3 Module operates with a 3.3-V power supply and supports SPI communications. The R-IN32M3 Module is shown in outline as a block diagram below.

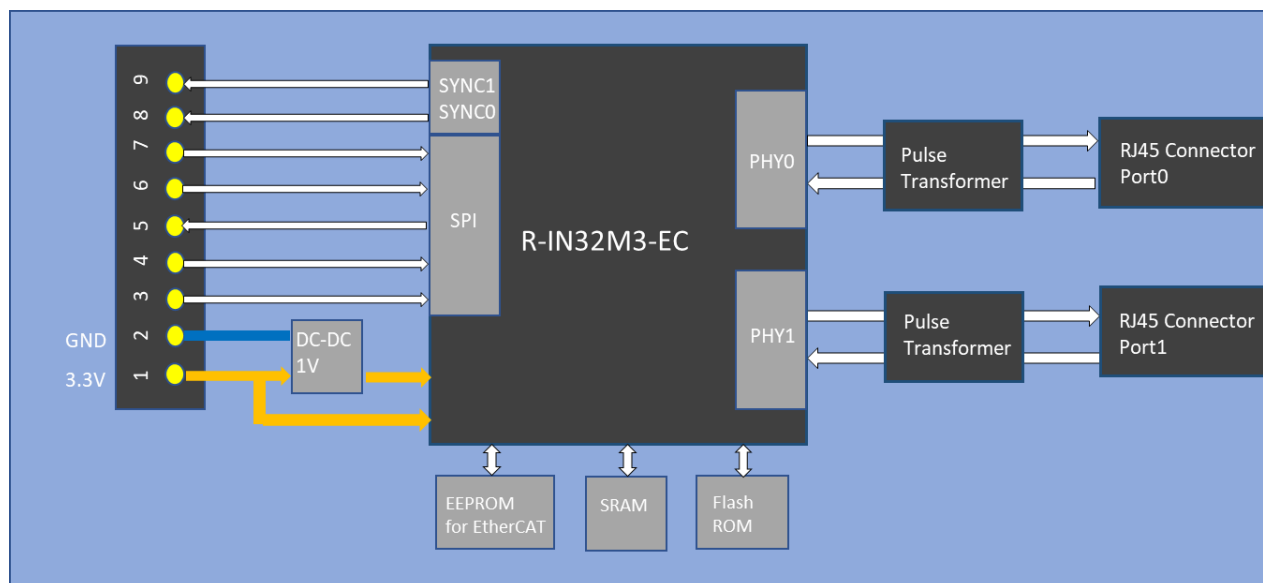


Figure 2.1 R-IN32M3 Module Block Diagram


## 2.2 Module Pins

The R-IN32M3 Module pins are for the interface with the power supply, the SPI, which is a slave interface, applying a reset, and clock signals.




**Table 2.1 Pin Description**

Pin	Signal	I/O	Description
1	Vcc		3.3V $\pm$ 0.15V DC power supply
2	GND		Ground
3	/SS	I	Slave select: Active low to enable the slave device
4	/RESET	I	Reset of the whole R-IN32M3 Module: Active low
5	MISO	O	Master in slave out. Data from slave to master
6	MOSI	I	Master out slave in. Data from master to slave
7	SCLK	I	Serial clock: The master provides the clock to shift the data.
8	SYNC0	O	EtherCAT sync signal for distributed clocks
9	SYNC1	O	EtherCAT sync signal for distributed clocks

Note. Support for EtherCAT® will be added in a future software update. Pin 8 and pin 9 EtherCAT sync signals for distributed clocks are only used for EtherCAT protocol.

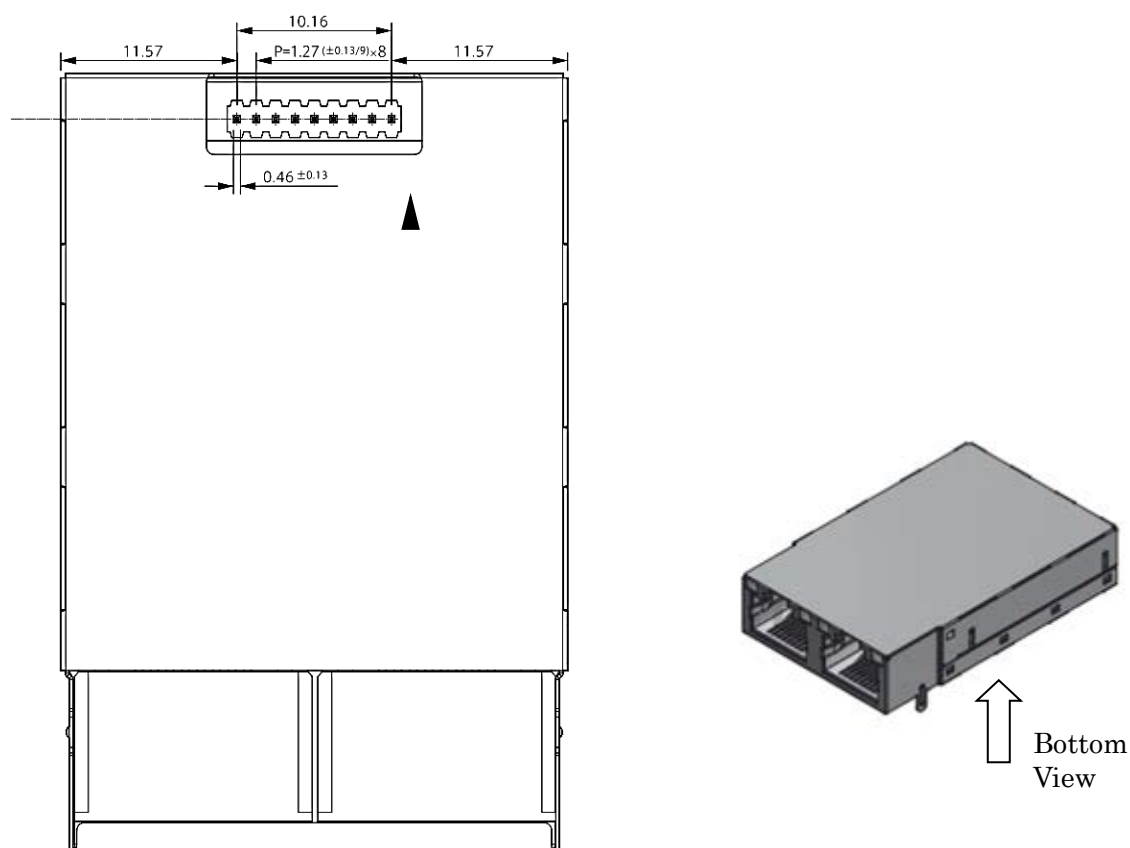

**Figure 2.2 Drawing of Pin Positions (Bottom View)**

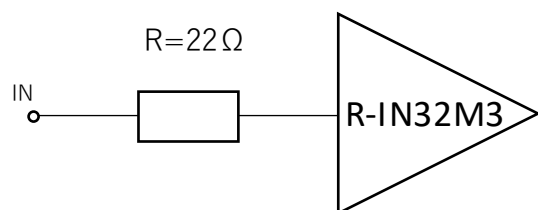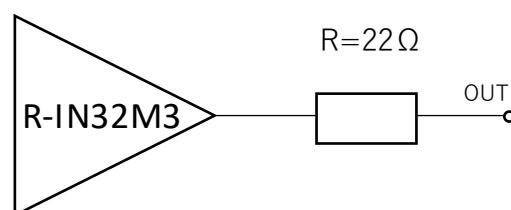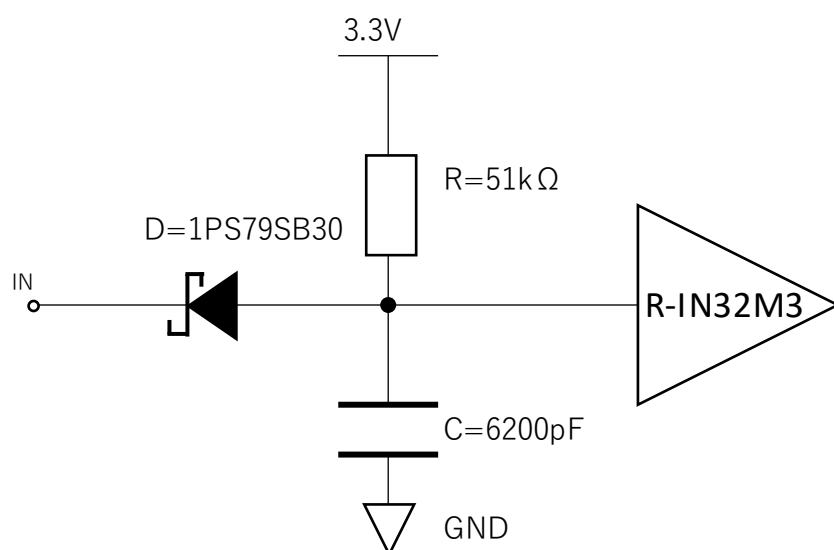/SS, MOSI, SCLKMISO, SYNC0, SYNC1RESET**Figure 2.3 R-IN32M3 Module Internal Circuits**


## 2.3 SPI Specification

The R-IN32M3 Module offers a serial peripheral interface which is supported on the R-IN32M3-EC controller. This communication interface uses 4 signal lines which are connected on 9-pin male connector with 1.27-mm pitch as shown in Table 2.2.

The R-IN32M3 Module works always in slave mode and allow to transmit configuration and process data to the host CPU.

**Table 2.2 SPI Signal Description**

Signal	Description
SCLK	Serial clock input (output from master)
MOSI	Master output slave Input, or master out slave in (data output from master)
MISO	Master input slave output, or master in slave out (data output from slave)
/SS	Slave select (active low, output from master)

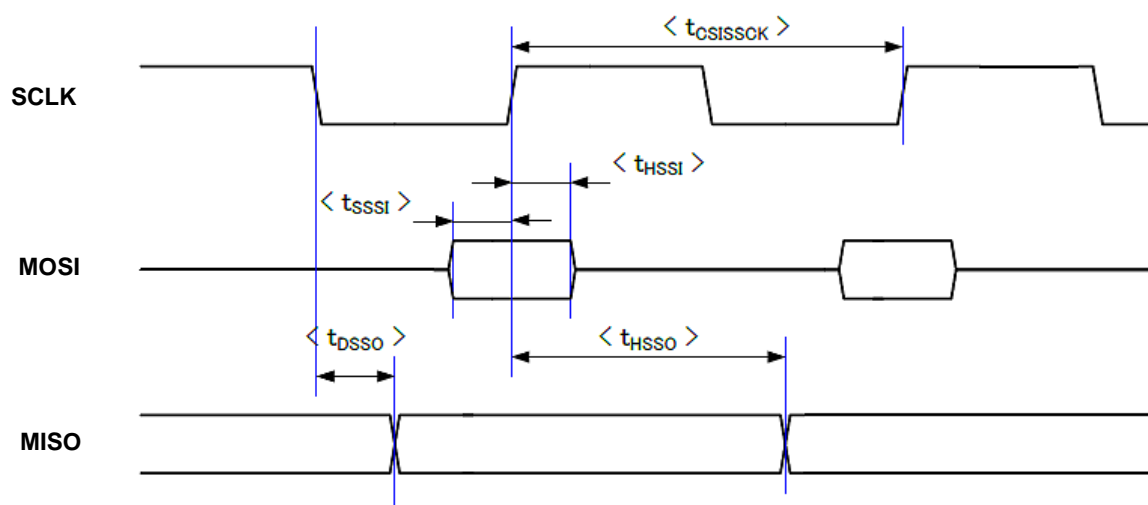

**Figure 2.4 SPI Access Timing Chart**

**Table 2.3 SPI Specifications (Vcc = 3.3±0.15 V, Ta = -40 to +70°C)**

Parameter	Symbol	Conditions	Min.	Max.	Unit
SCLK input cycle	tCSISSCK	-	60	-	ns
SCLK output high level width	tWSKH	-	tCSIMSCK × 0.5 - 5.0	-	ns
SCLK output low level width	tWSKL	-	tCSIMSCK × 0.5 - 5.0	-	ns
MOSI input setup time (to CSISCKn↑)	tSSSI	-	10	-	ns
MOSI input setup time (to CSISCKn↓)	tSSSI	-	10	-	ns
MOSI input hold time (from CSISCKn↑)	tHSSI	-	15	-	ns
MOSI input hold time (from CSISCKn↓)	tHSSI	-	15	-	ns
MISO output delay time (from CSISCKn↑)	tDSSO	CL = 15 pF	-	10	ns
MISO output delay time (from CSISCKn↓)	tDSSO		-	10	ns
MISO output hold time (from CSISCKn↑)	tHSSO		tCSISSCK × 0.5 - 5.0	-	ns
MISO output hold time (from CSISCKn↓)	tHSSO		tCSISSCK × 0.5 - 5.0	-	ns

## 2.4 Control Reset

The R-IN32M3 Module has a single reset pin on the 9-pin connector interface. The R-IN32M3 Module can be deactivated by the input of a low-level voltage to the reset pin, and it can be restarted by the input of a high-level voltage to the reset pin.

Figure 2.3 shows the circuits of the R-IN32M3 Module. The reset pin has a built-in pull-up resistor, so there is no need to place an external pull-up resistor.

The figure below shows the signal timing of the reset operation to the R-IN32M3 Module. A wait of at least 10 ms is required until the power supply voltage becomes stable, after which the /RESET signal can be de-asserted. The /RESET signal must be at the active level for at least 1  $\mu$ s in order for the R-IN32M3 Module to properly recognize a reset.

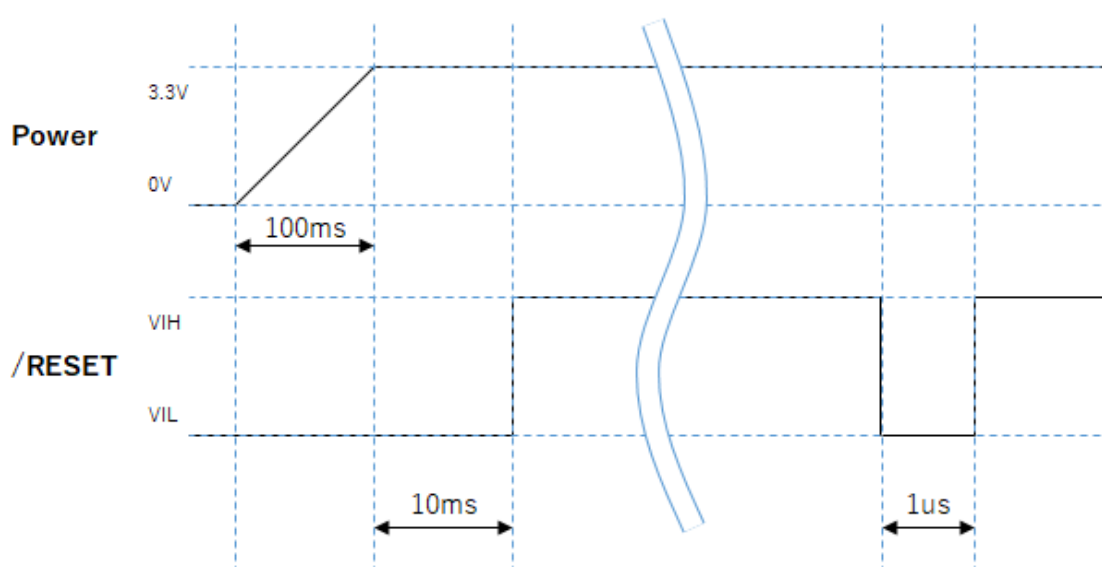


Figure 2.5 Reset Signal Timing Chart

The states of each of the pins during a reset are as follows.

Table 2.4 Pin Logic in Reset State

Pin	Signal	I/O	Logic (Reset State)
1	Vcc	-	-
2	GND	-	-
3	/SS	I	Hi-Z (pulled up by an internal resistor)
4	/RESET	I	High (pulled up by an internal resistor)
5	MISO	O	Hi-Z (pulled up by an internal resistor)
6	MOSI	I	Hi-Z (pulled up by an internal resistor)
7	SCLK	I	Hi-Z (pulled up by an internal resistor)
8	SYNC0	O	Hi-Z (pull down by an internal resistor)
9	SYNC1	O	Hi-Z (pulled up by an internal resistor)

## 2.5 Sequence of Supplying and Cutting off Power

The recommended sequence of supplying and cutting off power to the R-IN32M3 Module is shown in the following figure. Wait at least 10 ms after the power supply voltage has become stable before de-asserting the reset signal. 3.3 V must only be applied to the I/O pins after applying the power supply voltages. It is recommended that the time difference between the start of the power supply voltage rising and power supply stabilization and the time difference between the start of the power supply voltage falling and arrival at the low level arrival is within 100 ms.

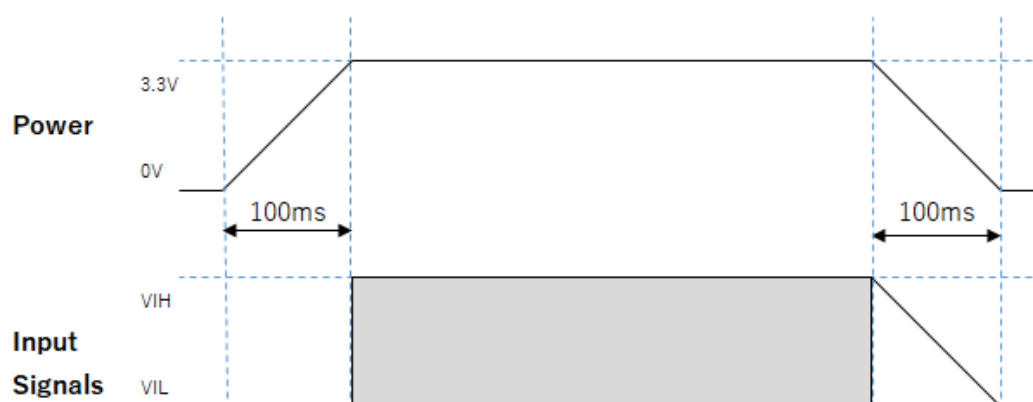


Figure 2.6 Sequence of Supplying and Cutting off Power

## 2.6 EtherCAT Sync Outputs

The following two signals are to work as EtherCAT sync interrupts.

- CATSYNC0 - EtherCAT SYNC0 output
- CATSYNC1 - EtherCAT SYNC1 output

Note: EtherCAT will be supported in a future software update.

## 3. Network Interface Specification

### 3.1 Overview

With two RJ45 network connectors, the R-IN32M3 Module is ready for external connection in several network topologies. The internal PHY layers in the R-IN32M3-EC can handle different industrial communications protocols and support 10BASE-T and 100BASE-TX/FX. The following listed protocols are (or are to be) supported:

- PROFINET
- EtherNet/IP
- EtherCAT (with a future software update)


### 3.2 Hardware Specification

The Ethernet ports have the following pin assignment:

**Table 3.1 Ethernet Port Pin Assignment**

Pin	Signal	I/O	Description
1	TX+	O	Transmit signal positive
2	TX-	O	Transmit signal negative
3	RX+	I	Receive signal positive
4	Not used		Drain wire
5	Not used		Drain wire
6	RX-	I	Receive signal negative
7	Not used		Drain wire
8	Not used		Drain wire

The Ethernet port supports 100 Mbps/s with auto negotiation.

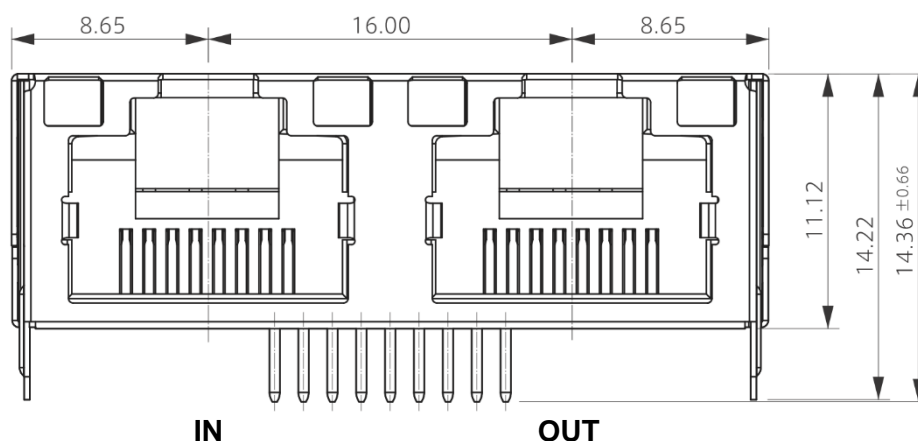

**Figure 3.1 Ethernet Port Drawings (2 Ports)**

### 3.3 LED Status Specification

The R-IN32M3 Module has two RJ45 Ethernet ports and two LEDs per RJ45 jack. Therefore, this section describes four LEDs.

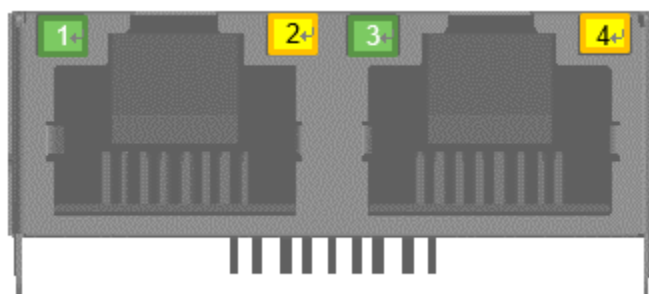


Figure 3.2 Link and Activity LEDs

Table 3.2 LED Location/Function

LED	Port	Signal	Description
1	0	Network link	Green LED for connected link on port 0
2	0	Network activity	Yellow LED for communication activity on port 0
3	1	Network link	Green LED for connected link on port 1
4	1	Network activity	Yellow LED for communication activity on port 1

### 3.4 PROFINET

Refer to the R-IN32M3 Module User's Manual: Software – API Description R17US0001ED\*\*\*\* for details.

### 3.5 EtherNet/IP

Refer to the R-IN32M3 Module User's Manual: Software – API Description R17US0001ED\*\*\*\* for details.

## 4. Electrical Characteristics

### 4.1 Absolute Maximum Ratings

Stress exceeding the maximum ratings even for short time may damage the R-IN32M3 Module. Functional operation above the recommended operating conditions is not guaranteed. Extended exposure to stress above the recommended operating conditions may affect device reliability.

**Table 4.1 Absolute Maximum Ratings**

Parameter	Symbol	Rating	Unit
Supply voltage	V <sub>CC</sub>	-0.2 to +3.6	V
I/O voltage	V <sub>I</sub> /V <sub>O</sub>	-0.3 to +3.6	V
Output current	I <sub>O</sub>	15	mA
Storage temperature	T <sub>stg</sub>	-40 to +85	°C

Tests performed IEC 60512-11-4(-40°C/125°C), IEC 60512-11-9(125°C), IEC 60512-11-10(-40°C), IEC 60512-11-3(40°C/85%RH), IEC 60512-11-12

**Caution:** Product quality may suffer if any absolute maximum rating is even momentarily exceeded. That is, the absolute maximum ratings are rated values at which the product is on the verge of suffering physical damage, and therefore the product must be used under conditions that ensure that these ratings are not exceeded.

**Remark:** 3.3 V must be applied to the I/O pins only after applying the power supply voltage.

## 4.2 Operating Conditions

**Table 4.2 Operating Conditions**

Parameter	Symbol	Min.	Typ.	Max.	Unit
Power supply	V <sub>CC</sub>	3.15	3.3	3.45	V
Power consumption	P		1.3	2.0	W
Input voltage high	V <sub>IH</sub>	2.0		V <sub>CC</sub> + 0.3	V
Input voltage low	V <sub>IL</sub>	-0.3		0.8	V
Input voltage high (/RESET)	V <sub>IH</sub> RESET	2.2		V <sub>CC</sub>	V
Input voltage low (/RESET)	V <sub>IL</sub> RESET	-0.2		0.3	V
Output voltage high	V <sub>OH</sub>	V <sub>CC</sub> - 0.1			V
Output voltage low	V <sub>OL</sub>			0.1	V
Output current low	I <sub>OL</sub>	6			mA
Output current high	I <sub>OH</sub>	-6			mA
Operating temperature	T <sub>a</sub>	-40		70	°C

All further specifications and statements of timing assume the application of the above-mentioned operating conditions.

## 4.3 Functional Earth and Shielding

The shield of R-IN32M3 Module is internally connected with GND via a RC-combination. Connect the shield to the frame ground (FG) for electrical testing to obtain CE marking.

## 4.4 Shock and Vibration

### 4.4.1 Vibration Test

20 to 2,000 to 20 Hz, amplitude 5 G (max.)

Sweep 4 min. X/Y/Z direction, 4 times

IEC 60068-2-64

### 4.4.2 Shock Test

50 G, 6 mS, X1/X2/Y1/Y2/Z1/Z2 direction, 3 times

IEC 60068-2-27

### 4.4.3 Drop Test

For packing condition (delivery box) JIS Z 0200

JIS Z 0200/ISO 4180

## 5. Guideline


### 5.1 Overview

This chapter provides guidelines and design examples for developing with the R-IN32M3 Module.

### 5.2 Circuit Design Guideline

#### 5.2.1 Overview

The following figure shows an example of connection when the R-IN32M3 Module and the host CPU are connected.

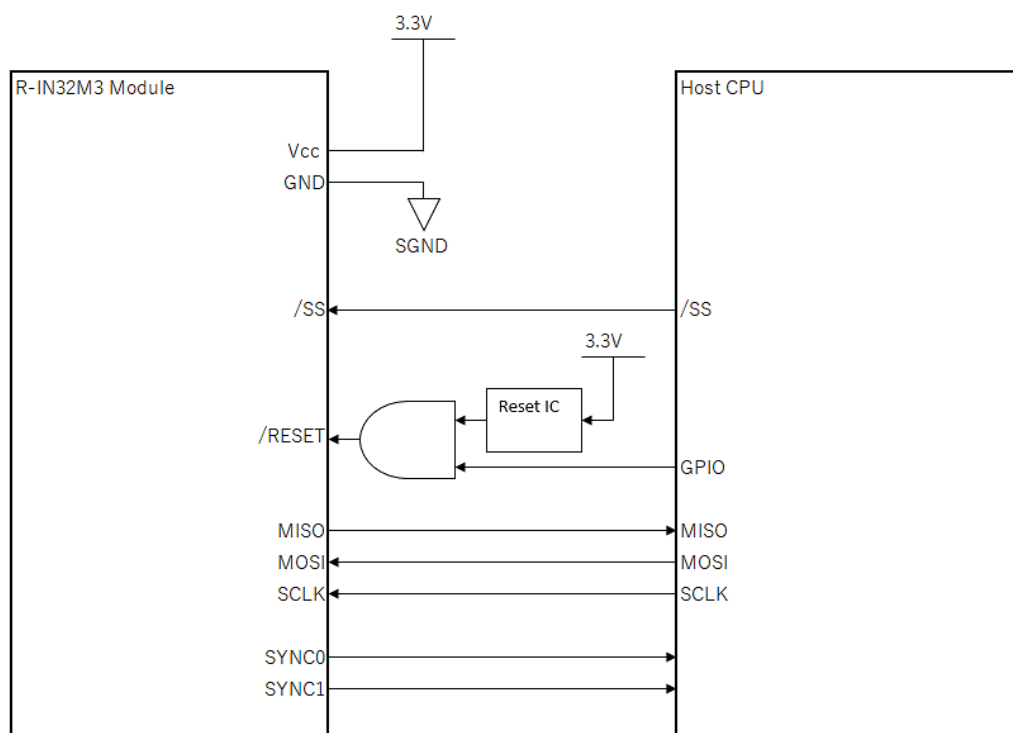

**Figure 5.1 Connection to a Host CPU**


#### 5.2.2 Power Supply

The supply voltage for the R-IN32M3 Module is specified with 3.3V DC  $\pm$  0.15V DC (3.15 V to 3.45 V).

Since the R-IN32M3 Module has a maximum power consumption of about 2.0 W, it is recommended that the external power be capable of supplying 1.0 A (or more).

### 5.2.3 Reset Circuit Example

The example reset circuit in the figure shows a common 3.3-V supervisor. The main usage is to ensure a defined delay until reset de-assertion after the 3.3-V power is switched on.

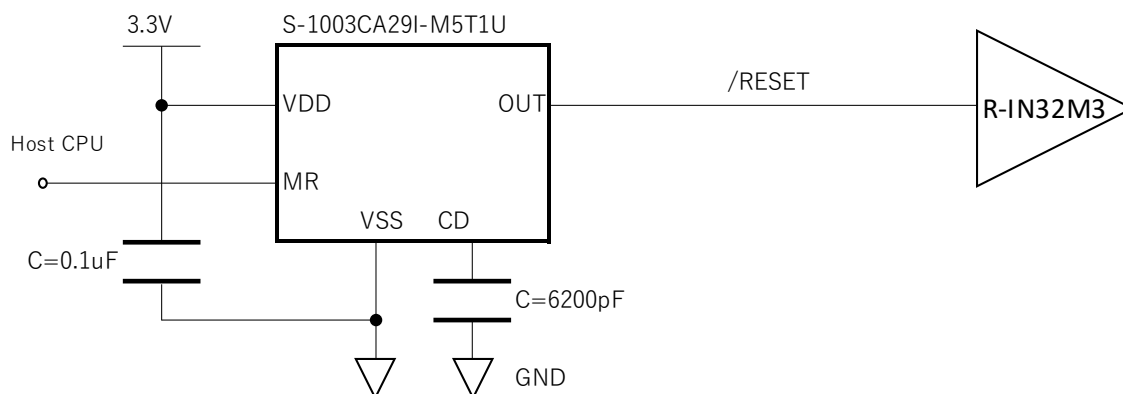

**Figure 5.2 Reset Circuit Example**

### 5.2.4 Host CPU Specifications

The recommended specifications of the host CPU are as follows.

ROM capacity: More than 512 KB

RAM capacity: More than 128 KB

SPI packet transfer size: 128 bytes (8 bits x 128 times) bulk data transfer

**Note:** When using a Renesas CPU, select the Simple SPI (SCI), as the maximum batch data transfer amount of RSPI is 32 bytes.

### 5.3 Industrial Ethernet Protocol Indication

Each Ethernet port has a RJ45 female connector with two indicator LEDs. The green LED indicates the link status and the yellow LED lights up in response to network activity.

For complete industrial Ethernet conformance, adding two bi-color (red/green) LEDs is recommended for the target device. In addition, the recommended method for controlling each LED is defined in each communications standard. Therefore, the host CPU that processed the data via the R-IN32M3 Module needs to control multiple LEDs.

Major protocol status conditions are listed in the following Table 5.1.

**Table 5.1 State Indication**

Industrial Ethernet Standard	State LED1	Color	State LED2	Color
PROFINET <sup>Note 1</sup>	System failure	<i>Red</i>	Bus failure	<i>Red</i>
EtherNet/IP <sup>Note 2</sup>	Module (MS)	<i>Green/ Red</i>	Network (NS)	<i>Green/ Red</i>

Note 1 PROFINET Diagnosis Guideline V1.4 Chapter 6.7 Signaling recommended an additional (third) maintenance LED

Note 2 The CIP Networks Library Volume 2: EtherNet/IP Adaptation of CIP

### 5.3.1 PROFINET


In addition to Table 5.1, PROFINET has more detailed LED control guidelines. The PROFINET communication requires four types of LED displays:

LED\_SF\_OUT (system failure),  
LED\_BF\_OUT (bus failure),  
LED\_MT\_OUT (maintenance), and  
LED\_READY\_OUT (ready).

LED\_SF\_OUT and LED\_BF\_OUT must be implemented separately from the R-IN32M3 Module and controlled by the host controller. The host controller can obtain information to control the LEDs from the R-IN32M3 Module via SPI protocol. LED\_MT\_OUT and LED\_READY\_OUT, and LEDs in the R-IN32M3 Module apply and are controlled by the R-IN32M3 Module. Details are listed in the following table. In addition, Figure 12 shows an example of PROFINET LED connections.

**Table 5.2 PROFINET State Indication**

LED	Color	State	Description
State LED1 (LED_SF_OUT, additional bi-color LED)	Red	ON	PROFINET diagnostics are available.
		OFF	PROFINET diagnostics are not available.
State LED2 (LED_BF_OUT, additional bi-color LED)	Red	ON	No link state information is available.
		Flashing	Link state ok; no communications link to a PROFINET controller
		OFF	A PROFINET controller has an active communications link to this PROFINET-Device.
R-IN32M3 Module_LED1 (LED_MT_OUT, Included in the R-IN32M3 Module)	Yellow	ON	Maintenance is required. Manufacturer specific: depends on the capabilities of the device.
R-IN32M3 Module_LED2 (LED_READY_OUT, Included in the R-IN32M3 Module)	Green	OFF	The R-IN32M3 Module has not started correctly.
		Flashing	The R-IN32M3 Module is waiting for synchronization with the host CPU (firmware starting has been completed).
		ON	The R-IN32M3 Module has started correctly.

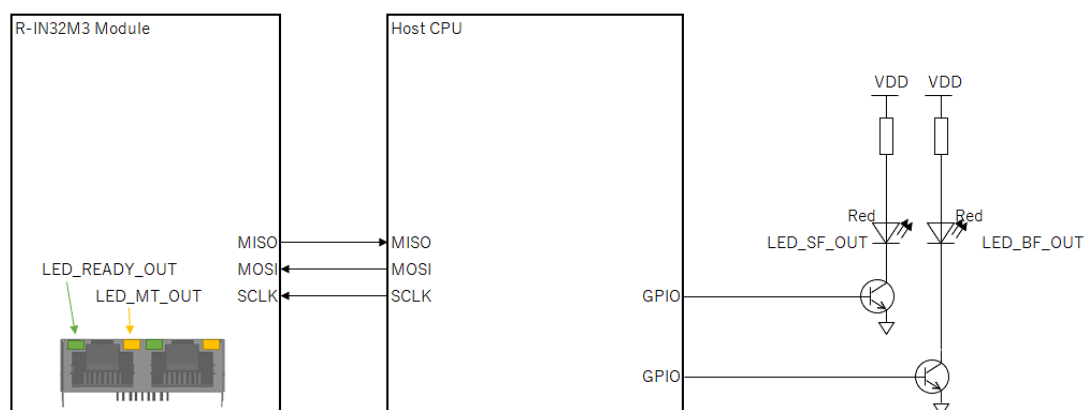

**Figure 5.3 Example of PROFINET LED Connections**

### 5.3.2 EtherNet/IP

In addition to Table 5.1, EtherNet/IP has more detailed LED control guidelines. EtherNet/IP communication requires two types of bi-color LED displays:

MS (module status indicator) and  
NS (network status indicator).

Both indicators must be implemented separately from the R-IN32M3 Module and controlled by the application controller. The host controller can obtain information to control the LED from the R-IN32M3 Module via SPI protocol.

Details are shown in Table 5.3 and Table 5.4. Figure 5.4 shows an example of EtherNet/IP LED connections.

**Note: The R-IN32M3 Module does not support the address conflict detection, which is optional in EtherNet/IP specifications.**

**Table 5.3 Module Status Indicator**

Indicator State	Summary	Requirements
Steady off	No power	If power is not being supplied to the device, the module state indicator is to be steadily off.
Steady green	Device operational	If the device is operating correctly, the module status indicator shall be steady green.
Flashing green	Standby	If the device has not been configured, the module state indicator is to be flashing green.
Flashing red	Major recoverable fault	If the device has detected a major recoverable fault, the module state indicator is to be flashing red. Note: An incorrect or inconsistent configuration would be considered a major recoverable fault.
Steady red	Major unrecoverable fault	If the device has detected a major non-recoverable fault, the module state indicator is to be steadily red.
Flashing green / red	Self-test	While the device is performing its power up testing, the module status indicators shall apply the test sequence described below. -The module state indicator shall turn green for approximately 0.25 seconds, turn red for approximately 0.25 seconds, and then turn green and retain that state until the power-up test has been completed. -If both module state and network state indicators are present, the module state indicator test sequence shall occur before or simultaneously with the network state indicator test sequence(s). If more than one network state indicator is present, then each network state indicator test sequence may proceed in succession or simultaneously. -After completion of this power-up test, the indicator(s) are to represent a normal operational state.

**Table 5.4 Network Status Indicator**

Indicator State	Summary	Requirement
Steady off	Not powered, no IP address	Power to the device is off or is on but no IP address has been configured (Interface Configuration attribute of the TCP/IP Interface Object).
Flashing green	No connections	An IP address has been configured but no CIP (common industrial protocol) connections <sup>Note 1</sup> have been established, and an exclusive owner connection <sup>Note 2</sup> has not reached time-out.
Steady green	Connected	An IP address has been configured, at least one CIP connection (in any transport class) has been established, and an exclusive owner connection has not reached time-out.
Flashing red	Connection timeout	<p>An IP address has been configured, and the exclusive owner connection for which this device is the target has reached time-out. The network state indicator shall only return to being steadily green when all timed-out exclusive owner connections are re-established.</p> <p>In devices that support a single exclusive owner connection, a transition to being steadily green is to proceed when any subsequent exclusive owner connection is established.</p> <p>Devices that support multiple exclusive owner connections shall retain the O-&gt;T (Originator to Target) connection path information when an exclusive owner connection reaches time-out. The network status indicator shall make the transition from flashing red to steadily green only when all connections to previously timed-out O-&gt;T connection points have been re-established.</p> <p>Time-out of connections other than exclusive owner connections are not to cause the indicator to flash red. The flashing red state applies to target connections only. Originators and CIP routers are not to cause the LED to enter this state.</p>
Flashing green / red	Self-test	While the device is performing its power up testing, the network status indicator shall perform a test sequence as described in Table 5.3.

<sup>Note 1</sup> The common industrial protocol (CIP) is an open application layer protocol, and EtherNet/IP uses this protocol for the application layer. Refer to the Ethernet/IP Specifications for details.

<sup>Note 2</sup> The exclusive owner connection is used for controlling the outputs of the module and shall not be dependent on any other condition. Only one exclusive owner connection can be opened against the module. Refer to the Ethernet/IP Specifications for details.

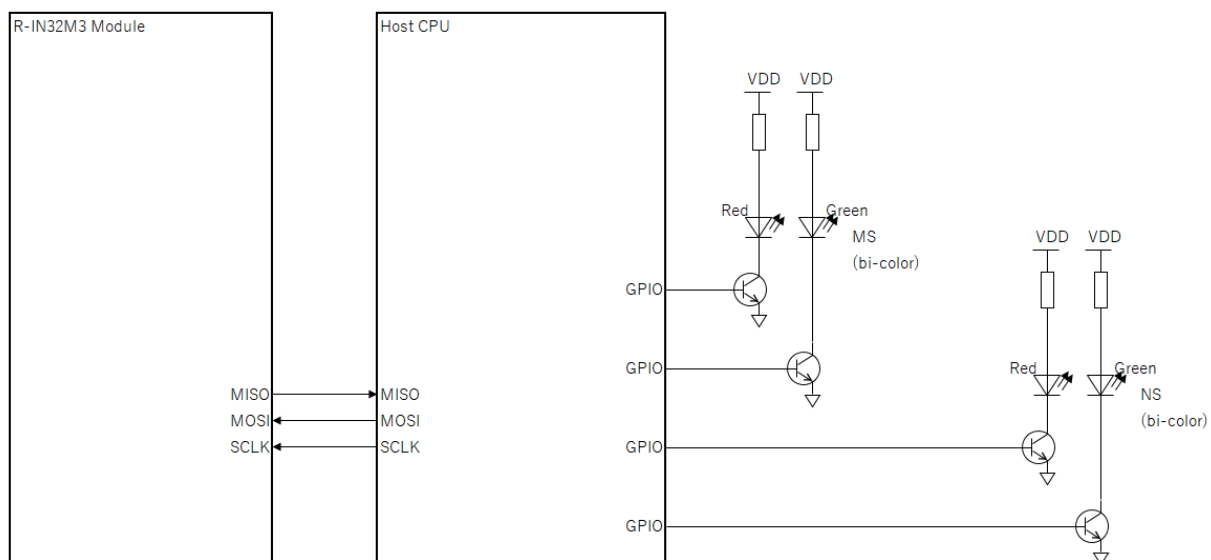


Figure 5.4 Example of EtherNet/IP LED Connections

## 5.4 Layout Design Guideline

The following figure shows the footprints needed to implement the R-IN32M3 Module. Gray areas indicate through holes and red areas indicate land patterns. The R-IN32M3 Module mounting surface should be solid ground except in the wiring lead-out parts. No restrictions apply to the inner layers of the P.C.B. The thickness of the P.C.B should be 1.6 mm. Any mounting of components on the back side of the R-IN32M3 Module is prohibited.

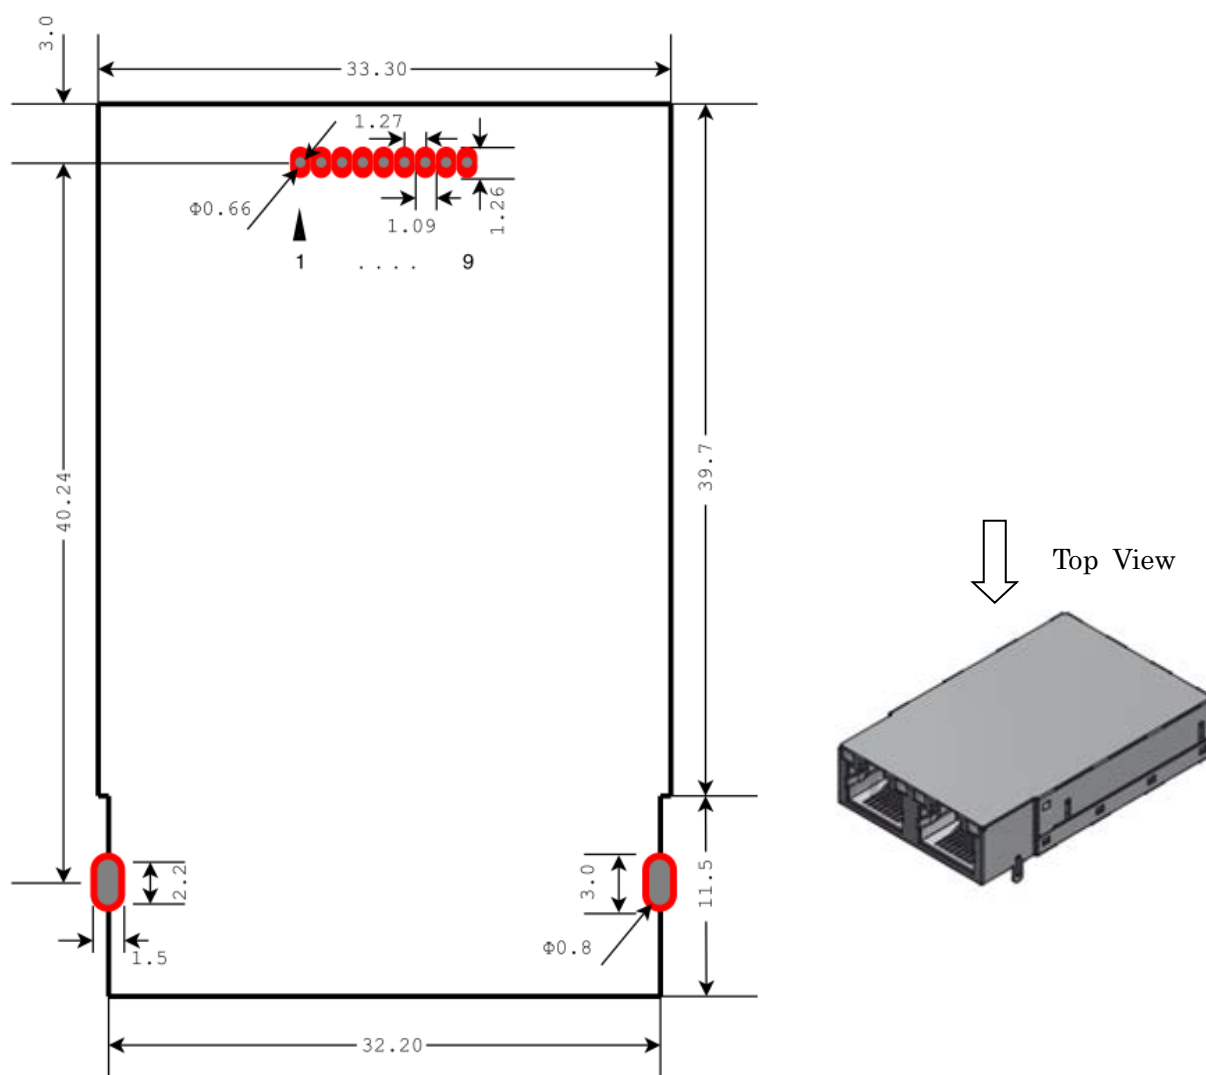


Figure 5.5 Footprint Drawing (Top View)

## 6. Mounting Conditions

### 6.1 Recommended Soldering Condition (Through Holes)

#### 6.1.1 Wave Soldering

The recommended temperature profile by wave soldering is shown below.

Maximum temperature (solder temperature): 260°C or below

Time at maximum temperature: 10 sec. or less

Preheating temperature: 140°C or below

Preheating time: 80 sec. or less

Maximum number of flow processes: 1 time

#### 6.1.2 Hand Soldering

The following conditions are recommended for hand soldering.

- 350°C ± 5°C
- Within 3 seconds per lead

#### 6.1.3 Reflow Soldering

This product does not support reflow soldering.

Note:

Since the solder melting temperature varies depending on the board and solder material used, confirm the optimum temperature that meets the recommended conditions regarding to the temperature profile for wave soldering.

## 6.2 Storage Conditions of the Products without Moisture-Proof Packing

In storage and handling of devices not in the moisture-proof packing, keep them under the following conditions taking solderability, lead corrosion, electrical characteristics and so on into consideration.

**Table 6.1 Storage Conditions**

Item	Conditions
Temperature	5 to 30 °C
Humidity	≤ 85%RH
Storage period	≤ 1 year

## 7. Packing Specifications


### 7.1 RY9012A0000GZ00#001 (30-piece tray package)

1


Put 30 pieces of finished product in a Tray Case and cover with a Tray Lid.(Fix with Masking tape)

3

Put the bag in an inner box.

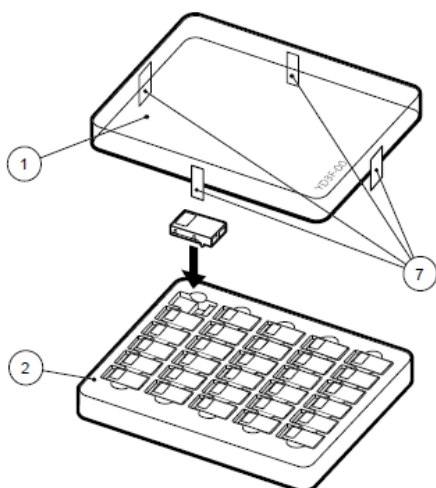

Product size:  
W33.0mm×D51.0mm×H11.0mm  
(Excluding protrusions)


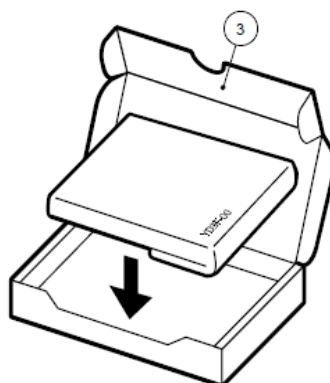


2

Put into an Anti-static bag.  
And hold a bag.

4

Attach a label on the side of  
an inner box.

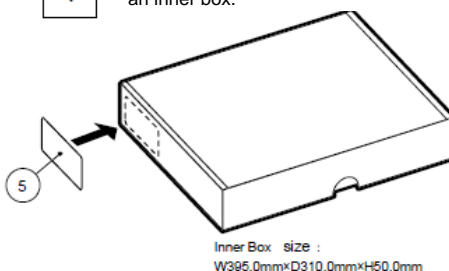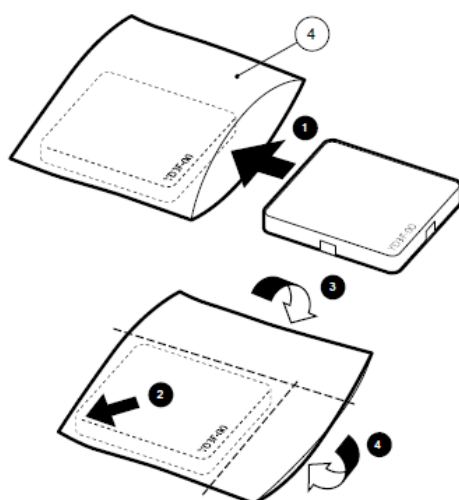

Inner Box size :  
W305.0mm×D310.0mm×H50.0mm


**Table 7.1 Packing Materials for 30-Piece Tray Package**

No.	Part Name	Materials
1	Tray lid	PVC
2	Tray case	
3	Inner box	Cardboard
4	Anti-static bag	Outside: Polyester dissipative Inside: Polyethylene dissipative Metallization: Aluminum-evaporated, shielding <25 nJ
5	Inner box label	Paper white (80 g/m <sup>2</sup> )

## 7.2 RY9012A0000GZ00#002 (1-piece sample package)


1

Put the finished product and a Cushioning in an Inner Box.

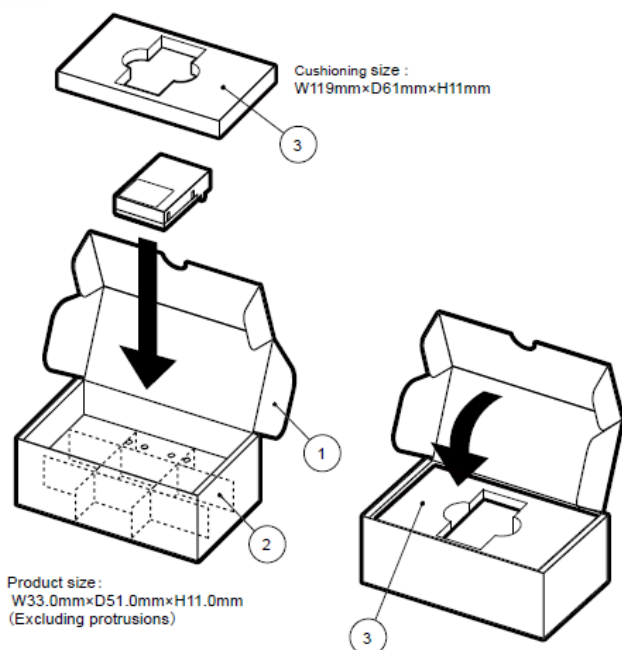

2

Attach a label on the side of an inner box.

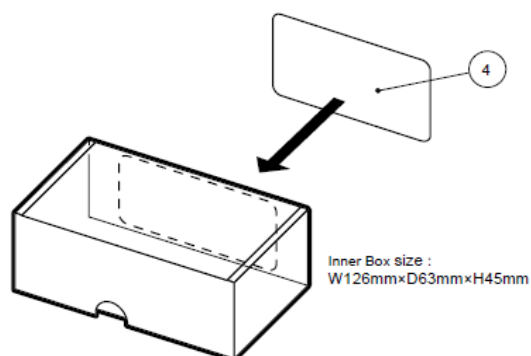

**Table 7.2 Packing Materials for 1-Piece Sample Package**

No.	Part Name	Materials
1	Inner box (1 piece)	Cardboard
2	Grid-shaped supporter	Cardboard
3	Cushioning	Closed cell polyethylene foam
4	Inner box label	Paper white (80 g/m <sup>2</sup> )

## 8. Applicable Standards

### 8.1 CE Marking

#### 8.1.1 EMC

Measuring task, preliminary measurement of unwanted radiated emissions as per

Emission EN61000-6-4

EN55016-2-3 Radiated emission

EN55022 Conducted emission

Immunity EN61000-6-2

EN61000-4-2 Electrostatic Discharge immunity test

EN61000-4-3 Immunity to radiated radio frequencies

EN61000-4-4 Electrical fast transient / burst immunity test

EN61000-4-5 Surge immunity test

EN61000-4-6 Immunity to conducted disturbances, induced by radio-frequency fields

#### 8.1.2 RoHS/REACH

The R-IN32M3 Module is compliant to following environmental guidelines:

- RoHS
- REACH
- RENESAS ELECTRONICS GREENPROCUREMENT GUIDELINE  
<https://www.renesas.com/ja-jp/media/about/company/csr/green/guideline-en.pdf>
- Management according to the chemical substance list in Renesas Electronics Cooperation

### 8.2 UL

The R-IN32M3 Module is a UL-recognized component.

### 8.3 International Protection Code (IP Code)

The R-IN32M3 Module supports the protection class IP-20.

## 9. Mechanical Specifications

### 9.1 Package Dimensions

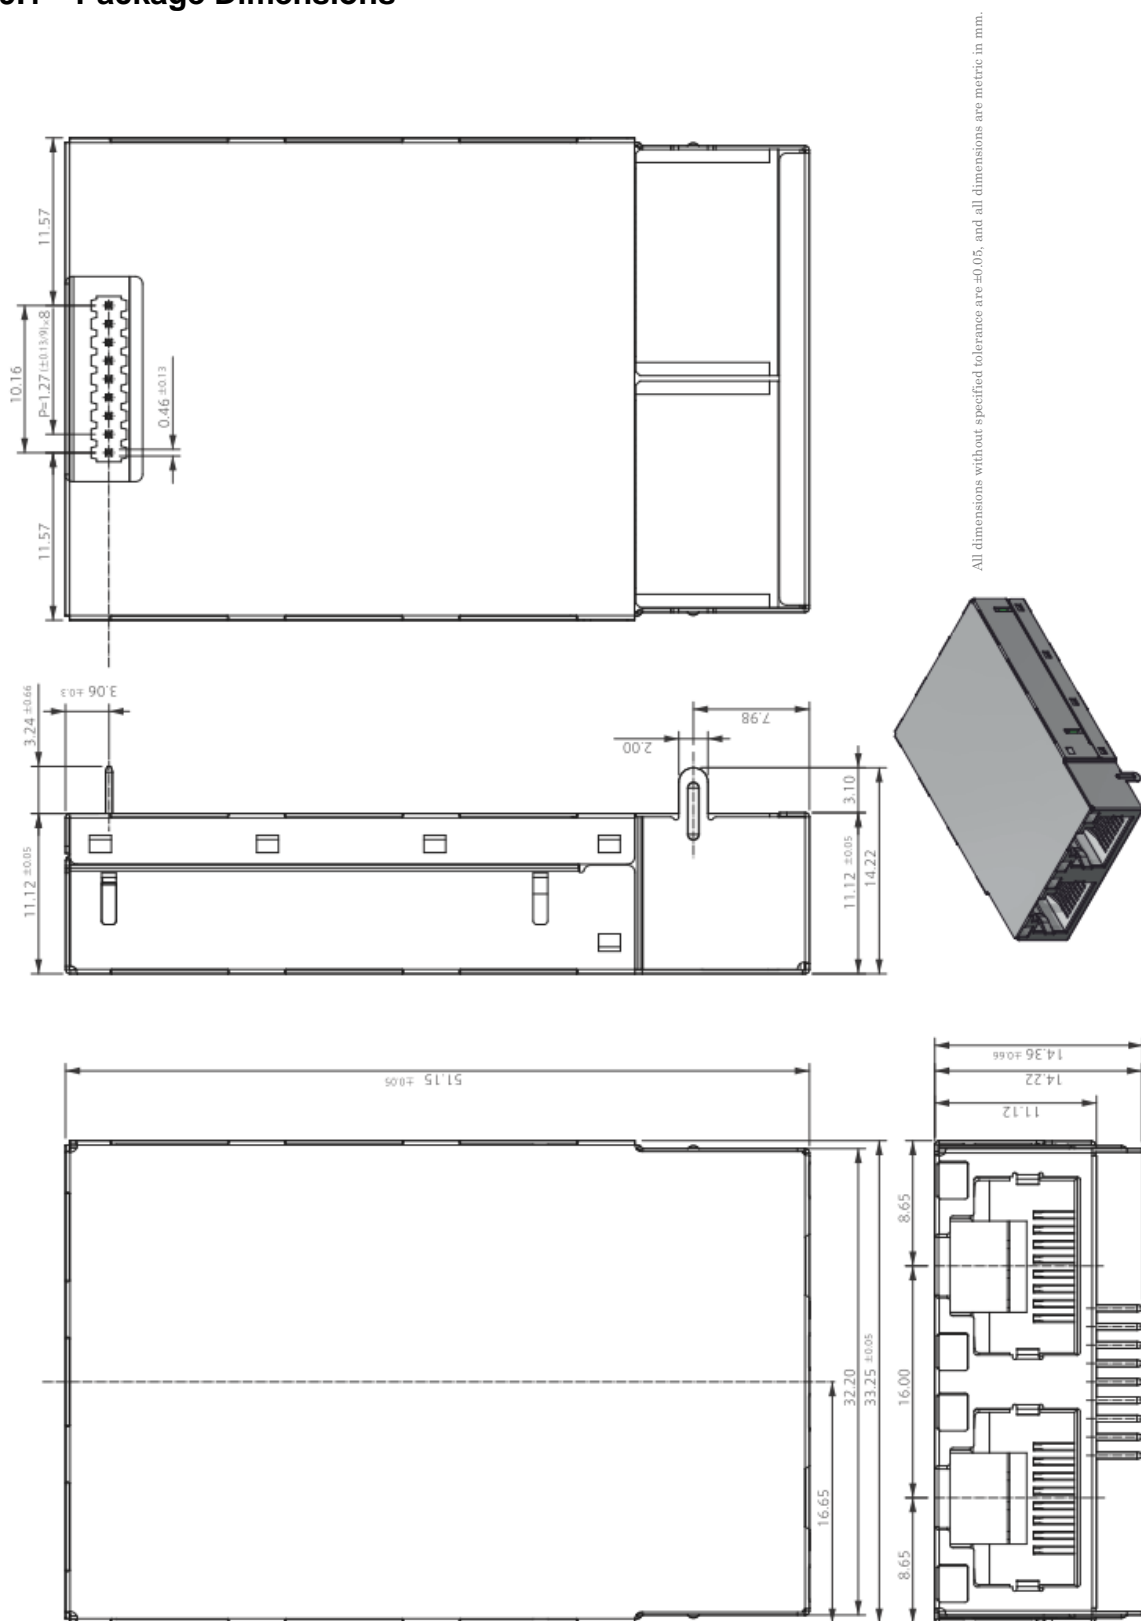


Figure 9.1 Package Dimensions

## 9.2 Dimensions

The dimensions of each part of R-IN32M3 Module are as follows.

**Table 9.1 Dimensions of Main Unit**

	Typical Value	Tolerance
Width [mm]	33.25	±0.05
Depth [mm]	51.15	±0.05
Height [mm] Excluding protrusions on terminals	11.12	±0.05
Weight [g]	21.0	±1.0

**Table 9.2 Dimensions of Terminals of the 9-Pin Connector**

	Typical Value	Tolerance
Diameter [mm]	0.46	±0.13
Length [mm] Based on the bottom of the case	3.24	±0.66
Pitch [mm]	1.27	±0.015

**Table 9.3 Dimensions of Two Terminals for Fixing on the Board**

	Typical Value	Tolerance
Width [mm]	2.0	±0.05
Length [mm] Based on the bottom of the case	3.1	±0.05
Thickness [mm]	0.25	±0.05

## 10. Marking Specifications

### 10.1 Product Label



Image of Product Label




Position of Product Label

**Figure 10.1 Product Label**

Logo:	RENESAS LOGO
Model:	RY9012A0000GZ00
MAC Address:	XXXX XXXX XXXX
Country name of origin:	Germany
Year/Week Code:	YY/WW
CE mark:	Standard conformity mark for CE
UL mark:	The UL number is put on the product label.
2D code:	Includes the MAC address.
(Data-Matrix-Code)	

#### Year/Week Code

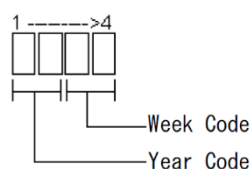

- Use Weekly Code for SPL that was automatically generated.
- The first week of the year shall be the week that includes January 1.
- A week is switched to the next week on the Saturday to Sunday change timing.
- The beginning and end of a year is shown as an example:

December 2004							
Sun	Mon	Tue	Wed	Thu	Fri	Sat	
0452	19	20	21	22	23	24	25
0501	26	27	28	29	30	31	
January 2005							
0501						01	
0502	02	03	04	05	06	07	08

Use the last two digits of the year as the Year code, as follows:

**Table 10.1 Year Code**

Year	Symbol	Year	Symbol
2001	01	2021	21
2002	02	2022	22
2003	03	2023	23
2004	04	2024	24
:	:	:	:
2020	20	2040	40
		:	:



Revision History	R-IN32M3 Module User's Manual: Hardware
------------------	---

Rev.	Date	Description	
		Page	Summary
1.00	Aug 03, 2020	—	First edition issued

---

R-IN32M3 Module User's Manual: Hardware

Publication Date: Rev.1.00 Aug 03, 2020

Published by: Renesas Electronics Corporation

---

## R-IN32M3 Module



Renesas Electronics Corporation

R19UH0111ED0100