


ENR filling or emptying function ENR Part number 84870203

- Regulation of two levels :
- -minimum
- -maximum
 Monitoring filling (UP) or emptying (DOWN), selected by a switch on the front panel.
- Probes supplied with AC current.
- Sensitivity adjustable on front panel from 5 kΩ to 100 kΩ.

| art number | 5 | | |
|------------|------|--|----------|
| | Туре | Characteristics | Voltages |
| 84 870 203 | ENR | Monitoring filling (UP) Monitoring emptying (DOWN) | 120 V AC |

Specifications

| Operating range | 0.85 →1.10 x Un |
|---|-------------------------------------|
| Maximum power consumption | 3 VA |
| Adjustable sensitivity | 5 κΩ→100 κΩ |
| Measurement accuracy (at maximum sensitivity) | ± 30 % |
| Electrode voltage (max) | 24 V AC (50/60 Hz) |
| Electrode current (maximum) | 1 mA (50/60 Hz) |
| Maximum cable capacity | 10 nF |
| Response time high level | 300 ms |
| Response time low level | 500 ms |
| Output relay (according to AC1 resistive load) | 1 AgNi changeover relay 8 A AC max. |
| Galvanic isolation via transformer (4 kV, 8 mm creepage distance) | Class II |
| Isolation of contacts and electrodes from power supply | 2.5 kV AC |
| Operating temperature range (°C) | -20 →+50 °C |
| Storage temperature range (°C) | -40 →+70 °C |
| Weight (g) | 150 |

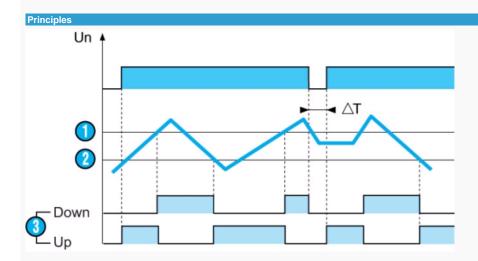

Operating principle

Monitoring maximum and/or minimum levels of conductive liquids (tap water, sea water, waste water, chemical solutions, coffee, etc).

The principle is based on measuring the apparent resistance of the liquid between two submerged probes. When this value is lower than the preset threshold displayed on the unit's front panel, the output relay changes state. To prevent any occurrences of electrolysis, an AC current is passed through the probes. Areas of application include the agri-food, chemical and other industries.

Adjusting two levels : Minimum/Maximum

The output relay changes state when the level of liquid reaches the maximum electrode, with the minimum electrode submerged. It returns to its initial state when the minimum probe is no longer in contact with the liquid.


Note


If the power break T lasts for 1 second or more, the relay reenergises instantly when in "UP" mode and is de-energised when in "DOWN" mode.

| N° | Legend |
|----|---------------|
| 1 | Maximum level |

| 2 | 26/02/2014 | www.crouzet.com |
|---|------------|---------------------------|
| | 0 | Minimum level |
| | 8 | Output relay : Down or Up |

Dimensions (mm)

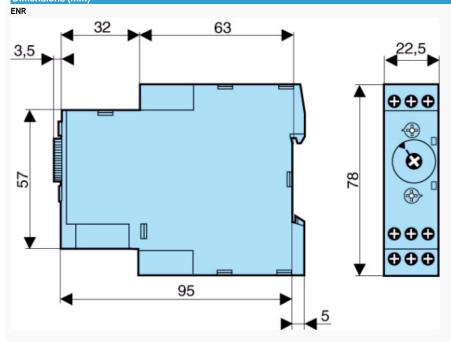

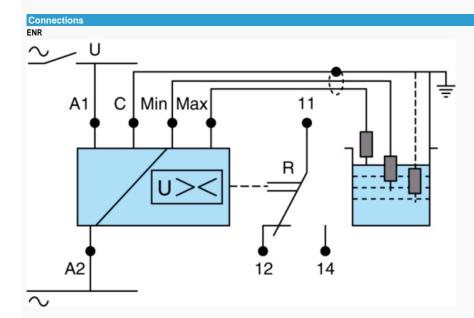

A1-A2 : power supply

| Nº | Legend |
|----|------------------------------|
| | *** TRADUCTION MANQUANTE *** |

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Crouzet: 84870203