


# Sticklers™ CleanStixx™ - 1.2 mm EB

### Connector Cleaning Sticks

#### **Product Features:**

- Saddle shaped cleaning tip conforms to lens and ferrule end face for full contact
- Prevents triboelectric and electrostatic induction when used with the Sticklers Fiber Optic Splice & Connector Cleaner precision cleaning fluid
- 50 CLEANSTIXX connector cleaning sticks in a box
- 5 Sealed Sleeves with 10 sticks per sleeve to maintain cleanliness
- Lot number listed on each sleeve for quality

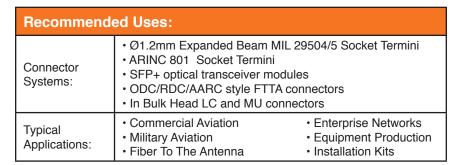

#### A Capillary Action:

The capillary force applied during the rotation of the cleaning tip causes residues and liquids to wick into the strands of the cleaning tip.

#### **B Radial Spread:**

Cleaning strands spread uniformly across the end face surface during the rotation sweeping up dust and particulates residing on the end face.





SFP+ Transcelver Module

### When you need perfectly clean splices & connectors™

www.SticklersCleaners.com



#### MicroCare Corporation


595 John Downey Drive
New Britain, CT 06051 USA
CAGE: OATV9
Tel: +1 860 827 0626
Toll Free: 1 800 638 0125
Email: TechSupport@MicroCare.com
www.MicroCare.com

#### MicroCare Europe Bvba

Vekestraat 29 B11 Industriezone 't Sas 1910 Kampenhout, Belgium Tel: +32 2 251 95 05 Fax: +32 2 400 96 39 Email: EuroSales@MicroCare.com

#### MicroCare Asia Pte Ltd

102E Pasir Panjang Road #03-01 Citilink Warehouse Complex Singapore 118529 Tel: +65 6271 0182 Email: TechSupport@MicroCare.sg

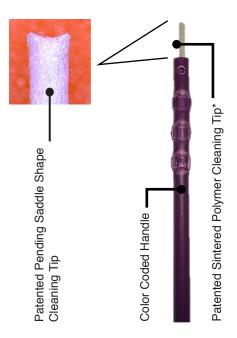

#### For Best Results:

- Use with Fiber Optic Splice and Connector Cleaner
- Tilt can and use light pressure to engage cleaning fluid pump
- Do not over saturate the cleaning stick



# **Mouser Electronics**

**Authorized Distributor** 

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

MicroCare: