



Data Sheet HIS*power* HIS2000R-CWC300 TO-8 Thermal Infrared Emitter


HIS2000R-CWC300

Thermal infrared emitter with Winston cone and CaF2 window, hermetically sealed

Our HIS2000R-CWC300 is a NiCr filament based thermal emitter in a TO8 package, with a soldered CaF₂ window, filled with N₂ gas. This guarantees hermetically sealed package and long-term stability. The cap with the soldered CaF₂ window is tested with Helium leak test at < 10^{-8} mbar I/s. The gold plated Winston cone collimator bundles and focuses the beam for best optical performance.

HISpower series emitters have an integrated reflector that directs the radiation emitted from the rear to the front through the housing window in order to achieve maximum efficiency. Infrasolid's advanced packaging technology allows soldered sapphire, CaF_2 and BaF_2 windows for use in a wide temperature range of -25 °C up to +85 °C.

Key features





High radiant power High efficiency



Hermetic housing



Soldered, high-quality filter windows guarantee considerably less drift. Leakage tested!

Wide wavelength range enables a broad range of applications.


innovative infrared sources for gas detection & spectroscopy


Main specifications


Parameter	HIS2000R-CWC300
Package	TO-8
Radiating element area	40 mm ²
Radiating element emissivity	> 0.9
Radiating element temperature	630 °C at 2.5 W
Optical output power	up to 725 mW
Max. electrical power (DC)	2.5 W
Max. electrical voltage	3.8 V
Max. electrical current	660 mA
Electrical resistance	56 Ω
Modulation frequency*	4 Hz
Filter/Window	CaF ₂ (soldered)
Wavelength range	2 to 11 µm
Filling gas	N2


* 50 % modulation depth, square wave signal, 50 % duty cycle

Optical specifications

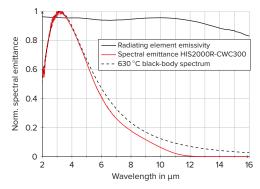


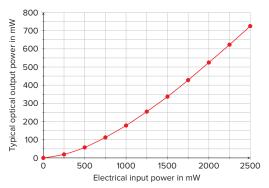

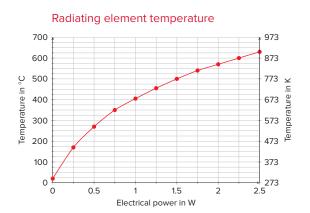


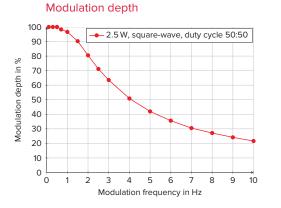



Electrical specifications

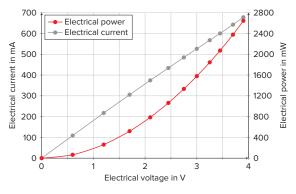



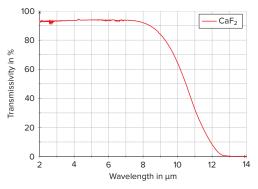

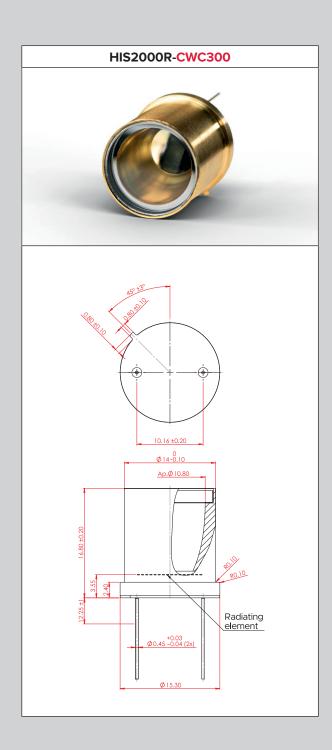

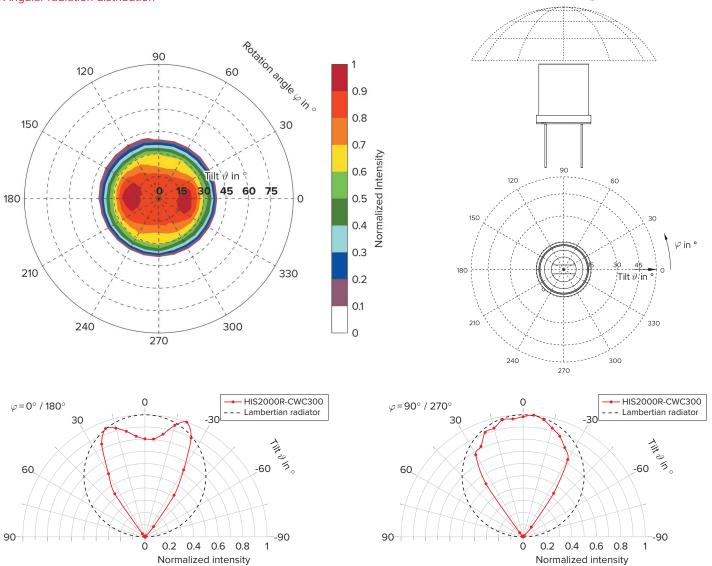

Operating mode recommendation:

All our IR sources can be driven in electrical voltage, current or power regulated mode. The application decides whether the operating mode is DC or AC (pulsed). Depending on the drive mode and the applied electrical power the electrical resistance of the IR emitter can change over time. For highest measurement accuracy a power regulated mode is always recommended for thermal IR emitters. However, it is the most complex operating mode and not suitable in all applications. For applications that require a small and low-cost driving circuit with a maximum stability we have a technical note with an adjustable low dropout voltage (LDO) regulator.

 $\mathsf{Tilt}\,\vartheta$

For further information please refer to: www.infrasolid.com/technicalnote



Infrasolid GmbH \cdot Gostritzer Str. 61 \cdot 01217 Dresden \cdot Germany Phone: +49 (0) 351 / 8547 8031 \cdot E-Mail: sales@infrasolid.com www.infrasolid.com

Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Innovative Sensor Technology: HIS2000R-CWC300