PAGE 1

SNAP POWER SUPPLIES

Features

- > Built-in fuse, ON/OFF power switch, and LED indicator
- > Convenient panel mounting; optional DIN-rail mounting
- > Easy connections
- > Wide input voltage range
- > UL approved

DESCRIPTION

SNAP power supplies provide the best source of AC or DC power for your Opto 22 SNAP PAC hardware. Packaged in a compact and sturdy housing, SNAP power supplies include a built-in fuse, an LED status indicator, and an ON/OFF power switch for ease of use.

The **SNAP-PS24** and **SNAP-PS24U** power supplies are designed for either of two purposes:

- To provide primary power for a SNAP PAC S-series controller
- To provide 24 volts of DC loop power for SNAP analog modules mounted on a SNAP PAC rack

The **SNAP-PS5**, **SNAP-PS5-24DC**, and **SNAP-PS5U** power supplies are designed to provide 5 VDC power for a SNAP PAC rack with an I/O processor (SNAP PAC brain or R-series controller) and I/O modules mounted on the rack. The combination of a rack, processor, and modules is called an I/O unit.

Opto 22 recommends using one SNAP power supply for each I/O unit and for each controller. Choose the power supply based on the load required for the I/O unit. See the power requirements tables starting on page 12 for help in determining the power supplies you need. Additional information on using power supplies can be found in the Opto 22 technical note *Using Power Supplies with Opto 22 Systems* (form 1271 on our website, www.opto22.com).

All SNAP power supplies except the SNAP-PS5-24DC require AC input power. The SNAP-PS5U and SNAP-PS24U accommodate a wide range of AC input voltages, from 100 to 250 VAC.

The SNAP-PS5-24DC DC-to-DC power supply requires a 24 VDC input and is ideal for systems using DC backup power.

Each SNAP power supply can be mounted in one of two ways: next to the controller or SNAP I/O unit it powers, using the standard panel-mounting base, or directly on a DIN rail using the optional 35mm DIN-rail adapter.

AC or DC input power connections, as required by the model, are made to a removable terminal strip on top of the power supply. DC output power is then ready to be hooked up to the controller or rack using the attached wiring harness.



SNAP power supplies work with Wired+Wireless[™] PACs and I/O units as well as standard wired PACs and I/O.

Notes for legacy hardware: SNAP power supplies are also compatible with Ethernet-based SNAP Ultimate, SNAP Ethernet, and SNAP Simple I/O, and with serial-based SNAP I/O units such as those with a B3000, SNAP-HA, or SNAP-B3000-MODBUS brain.

Part Numbers

Part	Description
SNAP-PS5	SNAP Power Supply 120 VAC input; 5 VDC, 4 A output
SNAP-PS5-24DC	SNAP Power Supply 24 VDC input; 5 VDC, 4 A output
SNAP-PS5U	SNAP Power Supply 100–250 VAC input; 5 VDC, 5 A output
SNAP-PS24	SNAP Power Supply 120 VAC input; 24 VDC, 3/4 A output
SNAP-PS24U	SNAP Power Supply 100–250 VAC input; 24 VDC, 1-1/4 A output
SNAP-PSDIN	35mm DIN-Rail Adapter for SNAP-PS5, SNAP-PS24, or SNAP-PS5-24DC
SNAP-PSUDIN	35mm DIN-Rail Adapter for SNAP-PS5U or SNAP-PS24U



OPTO 22 • 800-321-6786 • 1-951-695-3000 • www.opto22.com • sales@opto22.com

PAGE 2

SPECIFICATIONS

	SNAP-PS5	SNAP-PS5-24DC	SNAP-PS5U
Input Voltage	95–130 VAC, 47–63 Hz	18–32 VDC	100–250 VAC, 47–63 Hz
Output Voltage	5.1 ±0.1 VDC	5.1 ±0.1 VDC	5.1 ±0.1 VDC
Output Current	4.0 A	4.0 A	5.0 A
Maximum Input Current Draw	0.4 Amps at 120 VAC	1.3 Amps at 24 VDC	0.5 Amps at 120 VAC
Dimensions	See the drawings starting on page 8.	See the drawings starting on page 8.	See the drawings on page 10.
Weight	15 oz. (425.25 g)	15 oz. (425.25 g)	1.9 lbs (863.63 g)
Operating Temperature	-20 to 70 °C	-20 to 70 °C	-20 to 70 °C
Storage Temperature	-30 to 85 °C	-30 to 85 °C	-30 to 85 °C
Torque, connector screws	4.5 in-lb (0.51 N-m)	4.5 in-lb (0.51 N-m)	4.5 in-lb (0.51 N-m)
Fuse	Opto 22 PN: SNAP-FUSE1AB Vendor PN: GDC-1A (Bussman)	Opto 22 PN: SNAP-FUSE2AB Vendor PN: GDB-2A (Bussman)	Internal fuse
Agency Approvals	NEBS, UL, CE, ATEX, DFARS, UKCA	UL, CE, ATEX, RoHS, DFARS, UKCA	UL, CE, RoHS, DFARS, UKCA
Warranty	30 months	30 months	30 months

	SNAP-PS24	SNAP-PS24U
Input Voltage	95–130 VAC, 47–63 Hz	100–250 VAC, 47–63 Hz
Output Voltage	24 ± 0.6 VDC	24 ± 0.1 VDC
Output Current	0.75 A	1.25 A
Maximum Input Current Draw	0.4 Amps @ 120 VAC	0.5 Amps @ 120 VAC
Dimensions	See drawings starting on page 8.	See drawings on page 10.
Weight	2.1 lbs (952.54 g)	1.9 lbs (863.63 g)
Operating Temperature	-20 to 70 °C	-20 to 70 °C
Storage Temperature	-30 to 85 °C	-30 to 85 °C
Torque, connector screws	4.5 in-lb (0.51 N-m)	4.5 in-lb (0.51 N-m)
Fuse	Opto 22 PN: SNAP-FUSE1AB Vendor PN: GDC-1A (Bussman)	Internal fuse
Agency Approvals	UL, CE, RoHS, DFARS, UKCA	UL, CE, RoHS, DFARS, UKCA
Warranty	30 months	30 months



OPTO 22 • 800-321-6786 • 1-951-695-3000 • www.opto22.com • sales@opto22.com

PAGE 3

I/O UNIT POWER REQUIREMENTS

The tables starting on page 12 will help you determine the power supply needs for your system. Copy the power requirements worksheet and complete one for each distributed I/O unit.

In addition, keep the following power recommendations in mind. For more help with power supplies, see *Using Power Supplies with Opto 22 Systems* (Opto 22 form 1271).

Use a single power supply per rack

In general, we recommend you use an independent, isolated, regulated power supply locally with each rack. Local isolated supplies offer these advantages:

- Short supply conductors, which minimize losses
- Power redundancy, so the failure of a single supply causes only a single rack failure, not a total system failure
- Fewer voltage drops and ground loops (Voltage drops and subsequent ground loops may occur when power is distributed over a large system.)

Always use a separate field supply

Use a separate power supply for the field side of the I/O. Using the rack supply for field actuation and monitoring defeats the isolation the I/O module offers and therefore increases the chance of a ground loop within the control system. Additionally, a sudden change of current on the field side can cause undesirable voltage fluctuations that may interfere with the controller or I/O unit's operation.

Power wiring guidelines

- Use one power supply per I/O unit.
- Use one power supply per controller.
- Use 14 AWG wire.
- SNAP power supplies have short wires to minimize voltage drop. Do not extend the length of the wires.
- If you power multiple I/O units or controllers from one power supply, use a star wiring topology. Do not daisy-chain power wiring from one device to the next.

Clearances

Make sure that there is 0.78-1.0 inches (2.0-2.5 centimeters) on the vent side of the power supply after it is mounted. Compliance with these guidelines helps ensure that the power supply performs as described in the specifications.





OPTO 22 · 800-321-6786 · 1-951-695-3000 · www.opto22.com · sales@opto22.com

PAGE 4


INSTALLATION


Panel Mounting (standard)


Mount the SNAP power supply in a location where the attached red and black power wires reach the "+" and "-" power terminals on the SNAP mounting rack or controller. Do not extend the wires.

DIN-Rail Mounting (optional)

- 1. For 35mm DIN-rail mounting, remove the four screws that fasten the panel mounting base plate to the power supply. Keep screws in a safe place.
- 2. Remove panel mounting base plate.
- **3.** In place of the panel mounting base plate, use the four screws removed in step 1 to fasten the DIN-rail adapter (purchased separately) to the power supply.
- **4.** Mount the SNAP power supply on the DIN rail (next to the power connector on the I/O unit).

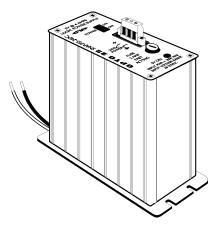

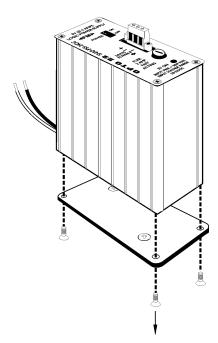

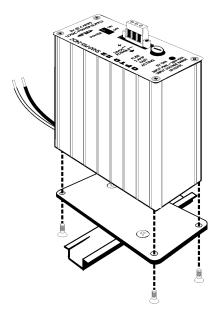



OPTO 22 · 800-321-6786 · 1-951-695-3000 · www.opto22.com · sales@opto22.com

WIRING-PRIMARY POWER SUPPLY


Wiring to a Standalone Controller

- 1. For a controller, check the controller's specifications in its data sheet or user's guide to make sure you have the correct power supply for the controller's requirements.
- Follow directions in the controller's user's guide to wire the power supply to the controller. The power supply's red (or white-and-red) wire is the positive wire; the black (or white-and-black) wire is the negative wire.

Wiring to a SNAP I/O Unit

1. Using the power terminals on the SNAP mounting rack, attach the red wire to the "+" terminal and the black wire to the "-" terminal.

- 2. For the SNAP-PS5 (not illustrated): Using the removable input power connector on top of the power supply, apply 120 volts AC power between the two terminals marked "AC." The ground terminal should be connected to ground.
- **3.** For the SNAP-PS5-24DC (not illustrated): Using the removable input power connector on top of the power supply, apply 24 volts DC power between the two terminals marked "±DC." The ground terminal should be connected to ground.
- 4. For the SNAP-PS5U (illustrated below): Using the removable input power connector on top of the power supply, apply 100–250 volts AC power between the two terminals marked "AC." The ground terminal should be connected to ground.

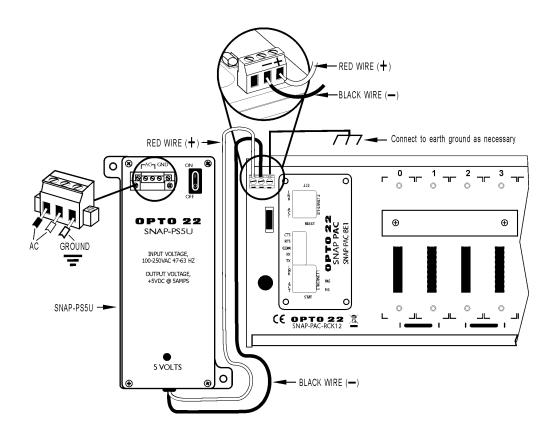



OPTO 22 · 800-321-6786 · 1-951-695-3000 · www.opto22.com · sales@opto22.com

WIRING-LOOP POWER SUPPLY

- Mount the SNAP-PS24 or SNAP-PS24U power supply in a location where the attached output power wires will reach the field connector for SNAP analog modules or the terminal strip on SNAP mounting racks that have the additional field wiring terminal strips.
- 2. The white-and-red wire is the positive wire (24 VDC). The white-and-black wire is the negative wire (24 VDC return). For specific loop power wiring information, see the SNAP analog module data sheets (Opto 22 forms 1065 and 1066) if wiring

directly to the field connectors on SNAP analog modules (see Figure 1 below), or refer to the SNAP I/O racks data sheet (form 0784) for SNAP racks that have the additional field wiring terminal strip (see Figure 2). See the next page for similar SNAP-PS24U wiring diagrams.

3. Using the removable input power connector on top of the power supply, apply 120 volts of AC power between the two terminals marked "AC." The ground terminal should be connected to ground.

Figure 1. SNAP-PS24 Used as a Loop Supply with the SNAP PAC System

This diagram shows the SNAP-PS24 used as the loop supply and a SNAP-PS5 used as the primary power supply.


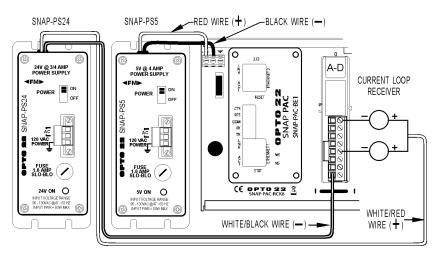


Figure 2. SNAP-PS24 Used as a Loop Supply with Legacy Hardware

The SNAP-PS24 is used as the loop supply; a SNAP-PS5 is used as the primary power supply.



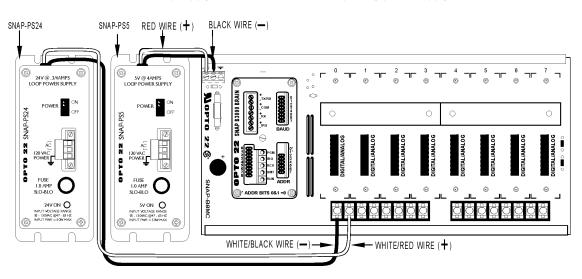

OPTO 22 • 800-321-6786 • 1-951-695-3000 • www.opto22.com • sales@opto22.com

WIRING-LOOP SUPPLY (CONTINUED)

Figure 1. SNAP-PS24U Used as a Loop Supply with the SNAP PAC System

This diagram shows the SNAP-PS24U used as the loop supply and a SNAP-PS5U used as the primary power supply.


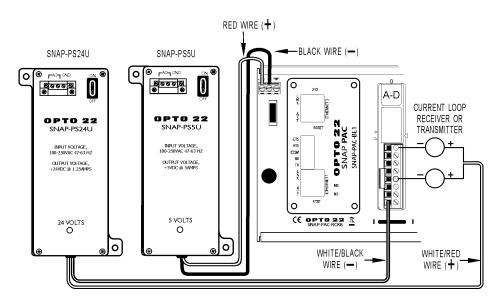


Figure 2. SNAP-PS24U Used as a Loop Supply with Legacy Hardware

The SNAP-PS24U is used as the loop supply; a SNAP-PS5U is used as the primary power supply.




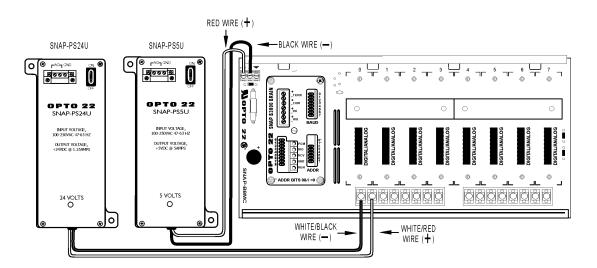

OPTO 22 • 800-321-6786 • 1-951-695-3000 • www.opto22.com • sales@opto22.com

DIMENSIONS-SNAP-PS5, SNAP-PS24, AND SNAP-PS5-24DC

Panel Mount

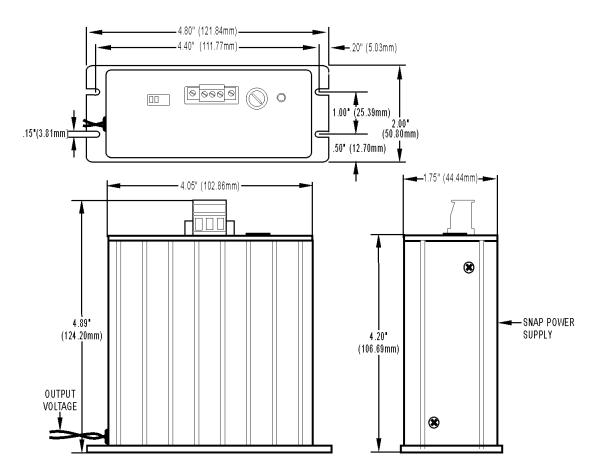


The length of the red and black leads is 8.00 inches +/- .50 inches.



OPT0 22 · 800-321-6786 · 1-951-695-3000 · www.opto22.com · sales@opto22.com

DIMENSIONS-SNAP-PS5, SNAP-PS24, AND SNAP-PS5-24DC

With DIN-Rail Adapter

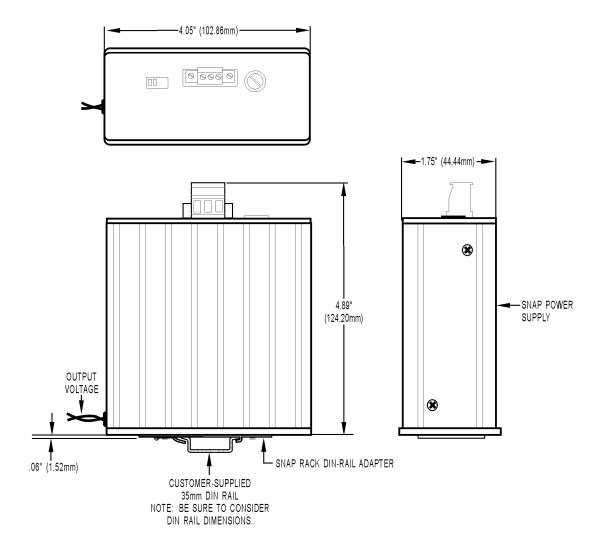




OPTO 22 · 800-321-6786 · 1-951-695-3000 · www.opto22.com · sales@opto22.com

DIMENSIONS-SNAP-PS5U AND SNAP-PS24U

Panel Mount

SNAP-PS5U is shown; SNAP-PS24U has the same dimensions.

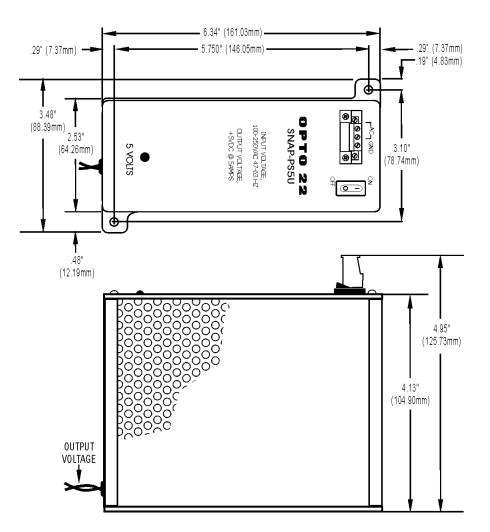


The length of the red and black leads is 9.00 inches +/- .50 inches.




OPT0 22 · 800-321-6786 · 1-951-695-3000 · www.opto22.com · sales@opto22.com

DIMENSIONS-SNAP-PSDIN

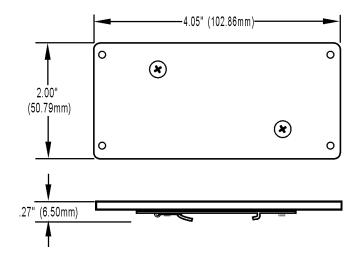

DIMENSIONS-SNAP-PSUDIN

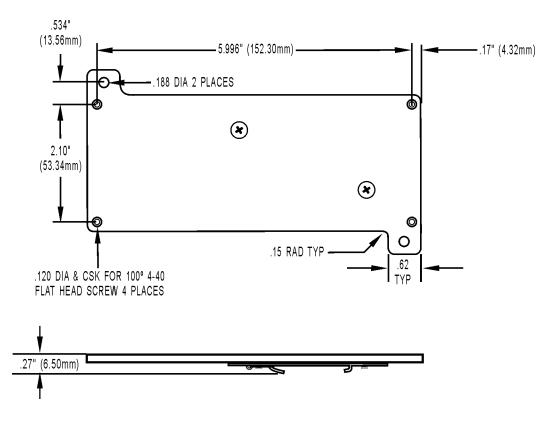



OPTO 22 • 800-321-6786 • 1-951-695-3000 • www.opto22.com • sales@opto22.com

POWER REQUIREMENTS TABLES

Opto 22 recommends using one power supply per I/O unit and one power supply per controller. See "I/O Unit Power Requirements" on page 3 for additional information.

To determine power requirements for products not listed in these tables, see the data sheets for the individual products.

IMPORTANT NOTE: For a SNAP-PS5 or a SNAP-PS5-24DC power supply, the total power required must not exceed 4 amps. For a SNAP-PS5U, the total power required must not exceed 5 amps.

Controller Power Requirements

Standalone Controller or adapter card	Power Req (VDC)	Power Req. (Amps)
SNAP PAC S-series controllers (wired)	8-32 VDC*	10 VA**
Wired+Wireless S-series PACs	8-32 VDC	11.3 VA
SNAP-LCSX or -LCSX-PLUS controller	5 VDC	0.500
SNAP-LCM4 controller	5 VDC	1.000
M4-SENET-100 adapter card	5 VDC	1.000
M4SARC adapter card	5 VDC	0.200
M4DUALARC adapter card	5 VDC	0.150
M4SARCF adapter card	5 VDC	0.250
M4SARCFR adapter card	5 VDC	0.350
	card SNAP PAC S-series controllers (wired) Wired+Wireless S-series PACs SNAP-LCSX or -LCSX-PLUS controller SNAP-LCM4 controller M4-SENET-100 adapter card M4SARC adapter card M4DUALARC adapter card M4SARCF adapter card	card(VDC)SNAP PAC S-series controllers (wired)8–32 VDC*Wired+Wireless S-series PACs8–32 VDCSNAP-LCSX or -LCSX-PLUS controller5 VDCSNAP-LCM4 controller5 VDCM4-SENET-100 adapter card5 VDCM4SARC adapter card5 VDCM4DUALARC adapter card5 VDCM4SARCF adapter card5 VDC

* SNAP-PAC-S1 controllers with serial numbers below 500,000 use 8–24 VDC.

** Uses 1 A if powered at 10V. To determine amps required, divide 10 by the num-

ber of volts applied. Example: 10 / 24 V = 0.417 A (24 VDC input requires 0.417 A)

I/O Processor (Brain or On-the-Rack Controller) Power Requirements

	Processor (Brain or Rack-mounted Controller)	Power Req. (Amps)*
	SNAP PAC R-series controllers (all wired models)	1.200
	SNAP PAC SB brains	0.750
lete	SNAP PAC EB brains (all wired models)	0.750
Obsolete	SNAP PAC R-series controllers (Wired+Wireless)	1.500
0	SNAP PAC EB brains (Wired+Wireless)	1.000
	SNAP Ultimate controller/brains (all models)	1.000
	SNAP Ethernet brains	0.800
/are	SNAP Simple I/O brains	0.500
-egacy Hardware	B3000 (serial SNAP brain) SNAP-D64RS	0.500
Legac)	SNAP-B3000-Modbus SNAP ARCNET brains	1.000
	SNAP-B4	1.000
	SNAP-B6	1.500 if terminated

OPTO 22 • 800-321-6786 • 1-951-695-3000 • www.opto22.com • sales@opto22.com



I/O Unit (Processor, Rack, I/O Modules) Power Requirements Worksheet

Item	Quantity	X Power Req. (Amps)	Total Power Required (Amps)	
SNAP processor (Enter Amps from Processor Power Require- ments table)	1			-
5NAP-IDC5-SW digital input module 5NAP-IDC5-SW-NC digital input module 5NAP-AITM-8 analog input module ⁴ solated analog input and output modules (part numbers ending in -i or iSRC) except SNAP-AITM-4i		0.200		
All other 4-channel digital input and output modules except mechanical relay outputs (<i>not</i> high-density digital modules)		0.050		
SNAP mechanical power relay output modules ⁴		0.160		1 Current from 5-volt supp
5NAP-AICTD, AICTD-4 ³ analog input modules High-density digital input and output modules ⁴ 5NAP-AIMA-32, SNAP-AIMA-iH ⁴ , SNAP-AIV-32, and 5NAP-AITM-4i analog input modules ⁴ All analog output modules except SNAP-AOA-iSRC and 5NAP-AOD-29-HFi		0.150		2 Can be used with SNAP F R-series controllers and SNAP PAC brains, SNAP Sir and SNAP Ultimate 3 Can be used with SNAP F
SNAP-AOD-29-HFi		0.300		R-series controllers and SNAP PAC brains, SNAP Sin
SNAP-AIPM power monitoring module ³ SNAP-AIPM-3, SNAP-AIPM-3V power monitoring modules ⁴		0.100		SNAP Ethernet, and SNAP Ultimate
SNAP-AILC and AILC-2 load cell modules ³		0.120		4 Can be used with SNAP F
SNAP-AIRTD-8U analog input module ⁴		0.135		systems only
SNAP-AIARMS analog input module SNAP-AIVRMS analog input module SNAP-AICTD-8 ⁴ analog input module SNAP-AIMA, AIMA-4 ³ , and AIMA-8 ⁴ analog input modules SNAP-AITM and AITM-2 analog input modules SNAP-AIMV-4 ³ and AIMV2-4 ³ analog input modules SNAP-AIV, AIV-4 ³ , and AIV-8 ⁴ analog input modules		0.170		
5NAP-AIRTD analog input module 5NAP-AIR40K-4 ³ analog input module 5NAP-AIR400K-8 ⁴ analog input module 5NAP-AIRATE analog input module		0.190		
5NAP-AIRATE-HFi analog input module		0.210		
SNAP-SCM-ST2 and SNAP-SCM-SSI serial modules ⁴		0.200		
SNAP-SCM-232, SNAP-SCM-485-422, SNAP-SCM-PROFI ³ SNAP-SCM-MCH16 <i>not</i> powering a breakout board ²		0.250		
5NAP-SCM-MCH16 powering a breakout board ²		0.700		

OPTO 22 · www.opto22.com 43044 Business Park Dr. Temecula, CA 92590-3614 **SALES** • sales@opto22.com 800-321-6786 • 1-951-695-3000 SUPPORT • support@opto22.com 800-835-6786 • 1-951-695-3080



More about Opto 22

PRODUCTS

Opto 22 develops and manufactures reliable, easy-to-use, open

standards-based hardware and software products. Industrial automation, process control, remote monitoring, data acquisition, and industrial internet of things (IIoT) applications worldwide all rely on Opto 22.

groov RIO[®]

groov RIO edge I/O offers a single, compact, PoE-powered industrial package with webbased configuration and IIoT software built in, support for multiple OT and IT protocols, and security features like a device firewall, data encryption, and user account control.

Standing alone, groov RIO connects to sensors, equipment, and legacy systems, collecting and securely publishing data from field to cloud. Choose a universal I/O model with thousands of possible field I/O configurations, with or without Ignition from Inductive Automation®, or a RIO EMU energy monitoring unit that reports 64 energy data values from 3-phase loads up to 600 VAC, Delta or Wye.

You can even write an IEC 61131-3 compliant control program to run on groov RIO, using CODESYS. You can also use groov RIO with a Modbus/TCP master or as remote I/O for a groov EPIC system.

groov EPIC[®] System

Opto 22's groov Edge Programmable Industrial Controller (EPIC)

system gives you industrially hardened control with a flexible Linux®based processor with gateway functions, guaranteed-for-life I/O, and software for your automation and IIoT applications.

groov EPIC Processor

The heart of the system is the groov EPIC processor. It handles a wide range of digital, analog, and serial functions for data collection, remote monitoring, process control, and discrete and hybrid manufacturing.

In addition, the EPIC provides secure data communications among physical assets, control systems, software applications, and online services, both on premises and in the cloud. No industrial PC needed.

Configuring and troubleshooting I/O and networking is easier with the EPIC's integrated high-resolution color touchscreen. Authorized users can manage the system locally on the touchscreen, on a monitor connected via the HDMI or USB ports, or on a PC or mobile device with a web browser.

groov EPIC I/O

groov I/O connects locally to sensors and equipment. Modules have a spring-clamp terminal strip, integrated wireway, swing-away cover, and LEDs indicating module health and discrete channel status. groov I/O is hot swappable, UL Hazardous Locations approved, and ATEX compliant.

groov EPIC Software

The groov EPIC processor comes ready to run the software you need:

- Programming: Choose flowchart-based PAC Control, CODESYS Development System for IEC61131-3 compliant programs, or secure shell access (SSH) to the Linux OS for custom applications
- Node-RED for creating simple IIoT logic flows from pre-built nodes
- Efficient MQTT data communications with string or Sparkplug data formats
- Multiple OPC UA server options
- HMI: groov View to build your own HMI viewable on touchscreen, PCs, and mobile devices; PAC Display for a

Windows HMI; Node-RED dashboard UI

Ignition or Ignition Edge® from Inductive Automation (requires • license purchase) with OPC-UA drivers to Allen-Bradley®, Siemens®, and other control systems, and MQTT communications

Older products

From solid state relays, to world-famous G4 and SNAP I/O, to SNAP PAC controllers, older Opto 22 products are still supported and working hard at thousands of installations worldwide. You can count on us for the reliability and service you expect, now and in the future.

OUALITY

Founded in 1974, Opto 22 has established a worldwide reputation for high-quality products. All are made in the U.S.A. at our manufacturing facility in Temecula, California.

Because we test each product twice before it leaves our factory rather than testing a sample of each batch, we can afford to guarantee most solid-state relays and optically isolated I/O modules for life.

FREE PRODUCT SUPPORT

Opto 22's California-based Product Support Group offers free technical support for Opto 22 products from engineers with decades of training and experience. Support is available in English and Spanish by phone or email, Monday-Friday, 7 a.m. to 5 p.m. PST.

Support is always available on our website, including free online training at OptoU, how-to videos, user's guides, the Opto 22 KnowledgeBase, and OptoForums.

PURCHASING OPTO 22 PRODUCTS

Opto 22 products are sold directly and through a worldwide network of distributors, partners, and system integrators. For more information, contact Opto 22 headquarters at 800-321-6786 (toll-free in the U.S. and Canada) or +1-951-695-3000, or visit our website at www.opto22.com.

OPTO 22 · www.opto22.com	SALES · sales@opto22.com	SUPPORT • support@opto22.com	
43044 Business Park Dr. Temecula, CA 92590-3614	800-321-6786 • 1-951-695-3000	800-835-6786 • 1-951-695-3080	USA





Mouser Electronics

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Opto 22:

SNAP-PS24 SNAP-PS24U SNAP-PS5 SNAP-PS5-24DC SNAP-PS5U