# TMC2300-EVAL Evaluation Board

Document Revision V1.0 • 2019-SEP-02


The TMC2300-EVAL allows evaluation of the TMC2300 in combination with the TRINAMIC evaluation board system, or as stand-alone-board. It uses the standard schematic and offers several options in order to test different modes of operation.

**Features** 

tions

ation

Chop mode

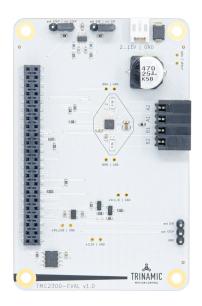

#### **Applications**

- IoT & Handheld devices
- Miniature 3D Printers
- Battery operated equipment
- Printers, POS

- Toys
- Office and home automation
- CCTV, Security

• 2-phase stepper motor up to 1.2A

• **Standby** < 50nA typical current draw • UART for advanced configuration op-


• StealthChop2<sup>™</sup> silent motor oper-

• Stall detection StallGuard4<sup>™</sup> in Stealth-

coil current (2A peak) Supply Voltage 2...11V DC

 1...256 microsteps Step/Dir interface

- HVAC
- Mobile medical devices

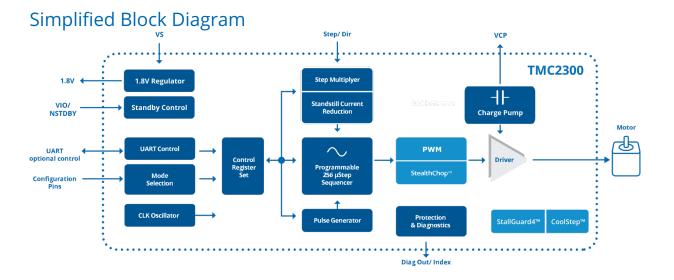

©2019 TRINAMIC Motion Control GmbH & Co. KG, Hamburg, Germany Terms of delivery and rights to technical change reserved. Download newest version at: www.trinamic.com



## Contents

1	Getting Started         1.1 First Start-Up	<b>3</b> 4
2	Hardware Information 2.1 Onboard Jumpers	<b>5</b> 5
	Evaluation Features in the TMCL-IDE3.1 Velocity Mode3.2 Position Mode3.3 ChipClick3.4 CoolStep™ Tuning	1
4	Revision History         4.1 Document Revision	<b>11</b> 11



## **1 Getting Started**

### You need

- TMC2300-EVAL
- Landungsbruecke with latest firmware. (The Startrampe does not support the UART interface.)
- Eselsbruecke bridge board
- Stepper motor (e.g. QMot line)
- USB interface
- Power Supply
- Latest TMCL-IDE V3.0 and PC
- Cables for interface, motors and power

### Precautions

- Do not mix up connections or short-circuit pins.
- Avoid bundling I/O wires with motor wires.
- Do not exceed the maximum rated supply voltage!
- Do not connect or disconnect the motor while powered!
- START WITH POWER SUPPLY OFF!

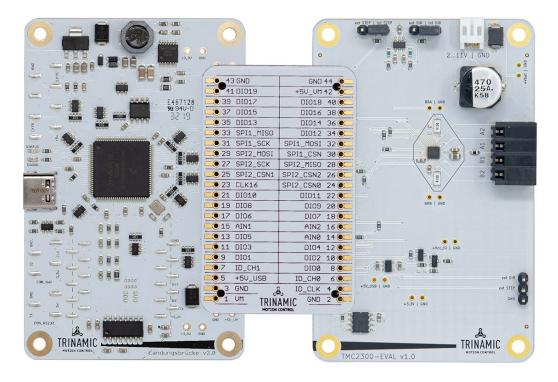


Figure 1: Getting started



#### **1.1 First Start-Up**

- 1. Make sure that the latest version of the TMCL-IDE 3.0 is installed. The TMCL-IDE can be downloaded from www.trinamic.com/support/software/tmcl-ide/.
- 2. Open the TMCL-IDE and connect the Landungsbruecke via USB to the computer. For Windows 8 and higher is no driver needed, on Windows 7 machines the TMCL-IDE is installing the driver automatically.
- 3. Verify that the Landungsbruecke is using the latest firmware version. The firmware version is shown in the connected device tree.

👗 TMCL-IDE 3.0					
<u>Eile T</u> ools <u>O</u> ptions Views <u>H</u> elp					
Connected devices ×					
Device					
✓ 🛶 USB					
🗸 🏹 COM6: USB port					
🗸 📥 ID1: Landungsbruecke [V 3.01]					
birect mode					

Figure 2: Firmware Version

- 4. The TMCL-IDE 3.0 needs room to show all important information and to provide a good overview. Therefore, arrange the main window related to your needs. We recommend using full screen. For evaluation boards it is essential to have access to the registers. Therefore open up the Register Browser (left side). For a better view click top right on the normal icon to get a maximized register browser window.
- 5. The TMCL-IDE includes a dialogue for diagnostic tasks. Further, the dialogue provides an overview of the connected motion controller and driver chips. A window pops up immediately after connecting the evaluation kit the first time. The window shows the actual status of the connections. The second tab of the dialogue offers the possibility to choose basic settings or to reset the module to factory defaults.

Landungsbruecke : VC1-Id 1	📥 Landungsbruecke : VC1-Id 1
Board Assignment Settings	Board Assignment Settings
Automated board detection	Reset
Push scan for automated detection of connected boards. Please keep the evaluation board firmware up to date.	You can reset the board settings to defaults here. Form most Trinamic chips it's a matter of firmware to restore defaults.
Scan Scanning,	Please note that the default settings are not neccessarily the chip reset settings. The default
	O Motion controller board only
Manual board assignment	O Power driver board only Reset boards to defaults
Select connected boards manually. This is only recommended if automated detection fails somehow. Please keep the evaluation	Both
board firmware up to date. Choosing a wrong combination may lead to unexpected behaviour.	Driver Enable
Motion controller none a	Please disable drivers before plug/unplug a motor to a driver board. Otherwhise the driver may be damaged!
liagnostics	Diagnostics
Everything seems to be fine. Have Fun!	Everything seems to be fine. Have Fun!
Information	Information
Motor Supply: 0.0V	Motor Supply: 0.0V
	Motor Supply: 0.0V Board at ch1(Motion Controller): none
Motor Supply: 0.0V	

Figure 3: Landungsbruecke Dialogue

©2019 TRINAMIC Motion Control GmbH & Co. KG, Hamburg, Germany Terms of delivery and rights to technical change reserved. Download newest version at www.trinamic.com



## 2 Hardware Information

All design files for our evaluation boards are available for free. We offer the original ECAD files (Eagle, Altium, or PADS), Gerber data, the BOM, and PDF copies. Please check schematics for Jumper settings and input/output connector description.

The files can be downloaded from the evaluation boards' website directly at out homepage: TRINAMIC Eval Kit homepage.

*Note* If files are missing on the website or something is wrong please send us a note.

#### 2.1 Onboard Jumpers

The TMC2300-Eval board has two jumpers on the top left side to select the Step/Direction source. The internal source uses the MCU to generate steps, the external source uses the external Step/Direction pin header in the lower right corner.



### **3** Evaluation Features in the TMCL-IDE

This chapter gives some hints and tips on using the functionality of the TMCL-IDE, e.g. how to use the velocity mode or using the wizards.

**Note** In order to achieve good settings please refer to descriptions and flowcharts in the TMC2300-LA datasheet. The register browser of the TMCL-IDE provides helpful information about any currently selected parameter. Beyond that, the datasheet explains concepts and ideas which are essential for understanding how the registers are linked together and which setting will fit for which kind of application. For getting more familiar with the evaluation kit in the beginning of your examinations, drive the motor using velocity mode and/or positioning mode first. Beyond this, the direct mode function can be used. This way, TMCL commands can be sent to the evaluation board system.

#### 3.1 Velocity Mode

To move the motor in velocity mode, open the velocity mode tool by clicking the appropriate entry in the tool tree. In the velocity mode tool you can enter the desired velocity and acceleration and then move the motor using the arrow buttons. The motor can be stopped at any time by clicking the stop button. Open the velocity graph tool to get a graphical view of the actual velocity.

Note

In order to get a more accurate graphical velocity view, close the register browser window when using the velocity graph.

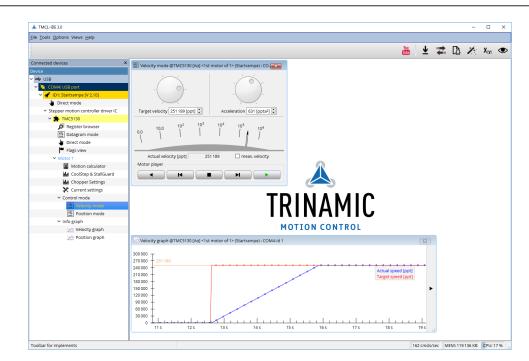


Figure 4: Driving the motor in velocity mode (TMCL-IDE provides similar view for TMC2300-EVAL)

©2019 TRINAMIC Motion Control GmbH & Co. KG, Hamburg, Germany Terms of delivery and rights to technical change reserved. Download newest version at www.trinamic.com



#### 3.2 **Position Mode**

To move the motor in position mode, open the position mode tool by clicking the appropriate entry in the tool tree. In the position mode tool you can enter a target position and then start positioning by clicking the Absolute or Relative Move button. The speed and acceleration used for positioning can also be adjusted here.

Open the position graph tool to get a graphical view of the actual position.

*Note* In order to get a more accurate graphical position view, close the register browser window when using the position graph.

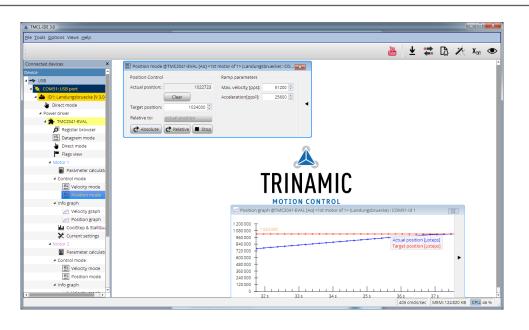


Figure 5: Driving the motor in position mode (TMCL-IDE provides similar view for TMC2300-EVAL)



#### 3.3 ChipClick

To configure the control pins for the TMC2300-EVAL, open the ChipClick tool by clicking the appropriate entry in the tool tree. To view a description of a pins possible configurations, hover the mouse over the pin in the graphical view. To change the pins state, click on it.

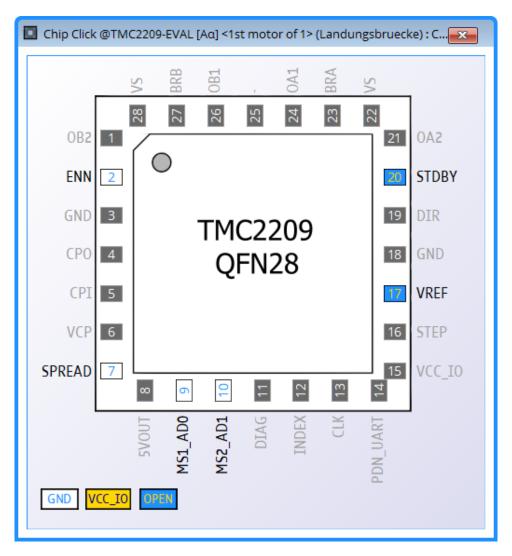


Figure 6: Configuring the control pins of a TMC2209 (similar for other ICs).



### 3.4 CoolStep<sup>™</sup> Tuning

With the TMCL IDE and the EVAL-KIT you have a powerful tool to find your CoolStep<sup>™</sup> to run your motor most energy efficient and cool. To tune it, please open the CoolStep<sup>™</sup> & StallGuard2<sup>™</sup> window you'll find on the left of the IDE when you have connected the EVAL board. On the CoolStep<sup>™</sup> tab you will see below picture by default.

coolStep & stallGuard		
actual motor current vs. time: 17 stallGuard value vs. time: 160 velocity: 65 535		32 1024 30 960 28 896 26 832 24 768 22 704 20 640 18 576
www.www.www.www.www.www.www.www.www.ww	- 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1	16 512 14 448 12 384 10 320 8 256 5 192 4 128 2 4 128 2 0 0
Current minimum: 0 - 1/2 🔸	Threshold speed:	0 [pps] 🖨
Current down step: 0 - slow +	Threshold speed: Deactivation threshold speed:	0 [pps] 🔹

Figure 7: TMCL IDE v3.0.20.0 Parameter calculator

CoolStep<sup>™</sup> will get activated as soon as you change the "Hysteresis start" value higher than 0 and enter a "Threshold speed" value higher than 0.



coolStep & stallGuard			
actual motor current stallGuard value vs. t			32 102 30 960
velocity: 65 535			28 896 26 832
-			24 768 22 704 20 640
			18 570 16 512
		/	
			10 320
U			
• <u> </u>	᠉ᢔᡳᠠᡃ᠂ᠧ	๛๚๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛๛	<b>=</b>   2 64
stallCuard2 cools	top TMC		
stallGuard2 coolS	itep TMCL		
stallGuard2 coolS Current minimum:	0 - 1/2 +	Threshold speed:	200 [pps] 🛊
Current minimum:	0 - 1/2		
		Threshold speed: Deactivation threshold speed:	200 [pps] 🛊
Current minimum:	0 - 1/2	Deactivation threshold speed:	
Current minimum: Current down step:	0 - 1/2 + 0 - slow +		

Figure 8: CoolStep™ & StallGuard2™ window

The above values activate CoolStep<sup>™</sup> but the values can be fine tuned to make CoolStep<sup>™</sup> work reliable and in a way as you need it in your application. For that it is important to understand what each setting is doing.

- **Current minimum**: The current minimum setting will be the lowest current when CoolStep<sup>™</sup> is activated. With 1A RMS the current will either be reduced to a quarter or to the half of this current when no or less force is applied to the motor shaft.
- **Current down step**: Current down steps defines the speed of the current to drop down after load gets released from the motor shaft.
- **Current up step**: This setting defines the step height when hitting the lower StallGuard2<sup>™</sup> threshold (Hysteresis start).
- Hysteresis width: This setting defines the area of the StallGuard2<sup>™</sup> threshold (Hysteresis end).
- **Hysteresis start**: This setting defines the switching point, related to the StallGuard2<sup>™</sup> value, to boost up the current by one step.



## **4** Revision History

#### 4.1 Document Revision

Version	Date	Author	Description
1.0	2019-SEP-02	LH	Initial release.
1.1	2019-NOV-05	LH	Updated short specification list and reworded onboard jumper de- scription

Table 1: Document Revision



# **Mouser Electronics**

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Trinamic:

TMC2300-EVAL TMC2300-EVAL-KIT