

Model No: PO⊞ €FZOÓ Ó€PPFËŒ

Approved By					

- Tel: 1 (888) 499-8477
- Fax: (407) 273-0771
- E-mail: mtusainfo@microtipsusa.com
- Web: www.microtipsusa.com



# **RECORD OF REVISION**

Version	Revised Date	Page	Content
V1.0	2018/03/09		First Issued



# TABLE OF CONTENTS

No.	Content	Page
HDN	AI TFT Module Specification	1
	LE OF CONTENTS	
1.	GENERAL DESCRIPTION	4
2.	MECHANICAL SPECIFICATION	5
3.	PIN DESCRIPTION	6
4.	ABSOLUTE MAXIMUM RATINGS	8
5.	BLOCK DIAGRAM	9
6.	ELECTRICAL CHARACTERISTICS	
7.	OPTICAL CHARACTERISTICS	
8.	RELIABILITY	
9.	PRECAUTION RELATING PRODUCT HANDLING	



#### 1. GENERAL DESCRIPTION

#### 1.1 Description


HA-101ZIEB0HH1-A is a 10.1 (16:10) inch diagonally measured active display with high resolution WXGA 1280x800 display and high brightness. This model is composed of a TFT LCD panel, backlight system and HDMI included Stereo D/A Converter . It is designed to make Raspberry Pi usage easy. You can simply use this TFT display with your Raspberry Pi, or also you can use this as computer display with any device which has HDMI output. This 10.1" TFT model comes in 1280x800 resolution that would be great for embedded computing usage too.

No.	ltem	Specification	Unit
1	Panel Size	10.1"	Inch
2	Number of Pixels	1280 (W) x RGB x 800 (H)	Pixels
3	Active Area	216.96 (W) × 135.6 (H)	mm
4	Pixel Pitch	0.1695 (W) x 0.1695 (H)	mm
5	Outline Dimension	229.46 (W) × 149.1 (H) × 19.1 (T)	mm
6	Number of Colors	16.7M	
7	Display Mode	IPS / Normally Black / Transmissive	
8	View Direction	Free direction	
9	Display Format	RGB vertical stripe	
10	Surface Treatment	НС	
11	Contrast Ratio	800 (Typ.)	
12	Luminance (cd/m^2)	1100 (Тур.)	cd/m2
13	Video Input Interface	HDMI	
12	Video Input Interface	(Compliance HDMI V1.4 and include HDCP decryption)	
14	Audio Output Interface	Analog Output	
15	Backlight	White LED	
16	Operation Temperature	-20 ~ 70	°C
17	Storage Temperature	-30 ~ 80	°C
18	Weight	(TBD)	g

#### 1.2 Features:



## 2. MECHANICAL SPECIFICATION

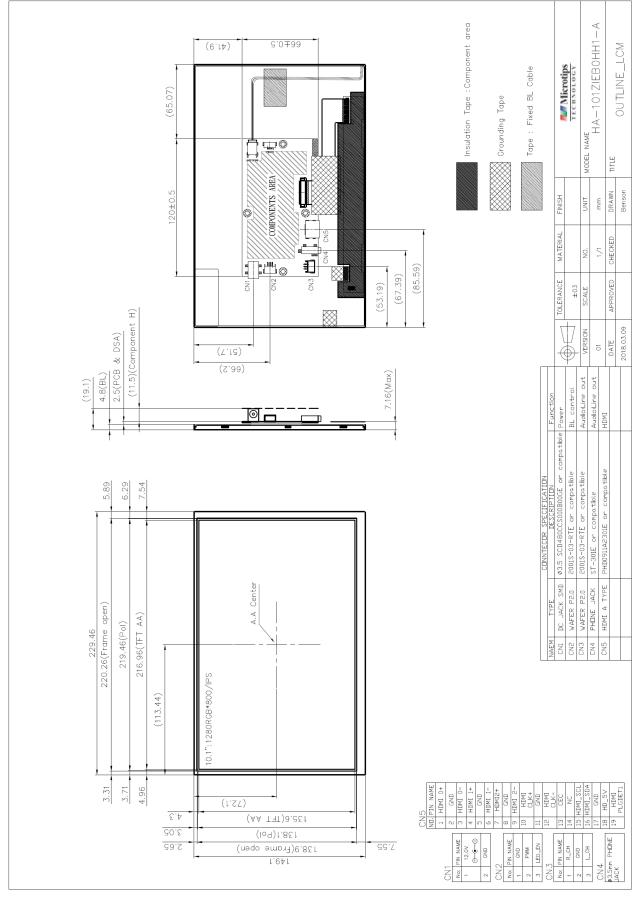

3/9/2018

Page 5 of 19

MICROTIPS TECHNOLOGY USA 3504 Lake Lynda Dr, Suite 110, Orlando, Florida, 32817, TEL: 407-273-0204, FAX: 407-273-0771



#### 3. PIN DESCRIPTION

#### 3.1 Power Input(CN1)

#### [DC JACK:SCD480CCS000B00GE or compatible]

Pin No.	Symbol	1/0	Function	Note
1	12V	Ρ	Power Supply +12V	12.0V
2	GND	Ρ	Ground	

#### **3.2 Back-light Control(CN2)**

#### [WAFER P2.0mm:2001S-03-RTE or compatible]


Pin No.	Symbol	1/0	Function	Note
1	GND	Р	Ground	
2	PWM	Ι	Back-light Dimming control (internal pull up to 3.3V)	*1
3	LED_EN	Ι	Back-light On/Off control (internal pull up to 3.3V)	*1

\*1: When PWM, LED\_EN not connected, back-light defult is typical brightness and normally turn on.

# **3.3 Audio line out(CN3)** [WAFER P2.0mm:2001S-03-RTE or compatible]

Pin No.	Symbol	1/0	Function	Note
1	R_CH	Α	HDMI Audio:Right Channel Analog Output	
2	GND	Р	Ground	
3	L_CH	Α	HDMI Audio:Left Channel Analog Output	

**3.4 Standard 3.5mm Phone Jack (CN4)** [PHONE JACK:ST-301E or compatible] HDMI Audio Analog Output





#### 3.5 HDMI (CN5)

# [HDMI A TYPE:PHD0911A2301E or compatible]

Pin No.	Symbol	I/O	Function	Note
1	TMDS 2+	I	TMDS Data2+	
2	GND	Р	TMDS Data2 Shield	
3	TMDS 2-	I	TMDS Data2-	
4	TMDS 1+		TMDS Data1+	
5	GND	Р	TMDS Data1 Shield	
6	TMDS 1-	I	TMDS Data1-	
7	TMDS 0+		TMDS Data0+	
8	GND	Р	TMDS Data0 Shield	
9	TMDS 0-		TMDS Data0-	
10	TMDS CLK+	Ι	TMDS Clock+	
11	GND	Р	TMDS Clock Shield	
12	TMDS CLK-	I	TMDS Clock-	
13	CEC	I	CEC	
14	N.C.	-	N.C.	
15	DDC_SCL	I	IIC SCL to EDID ROM	
16	DDC_SDA	1/0	IIC SDA to EDID ROM	
17	GND	Р	DDC/CEC Ground	
18	HD_5V	Р	+5V Power	
19	HPD	0	Hot Plug Detect	



#### 4. ABSOLUTE MAXIMUM RATINGS

## 4.1 Electrical Absolute Rating

## 4.1.1 HDMI TFT LCD Module

ltom	Symbol	Val	lues	Unit	Note	
ltem	Symbol	Min	Max.	Unit	Note	
Power supply voltage	12V	TBD	14	V		


# 4.1.2 Environment Absolute Rating

ltom	Sumbol		Values	Unit	Noto	
ltem	Symbol	Min	Тур	Max.	Unit	Note
Operating Temperature	Тор	-20		70	°C	Ambient
Storage Temperature	Tst	-30		80	°C	temperature



# 5. BLOCK DIAGRAM

5.1 TFT LCD Module

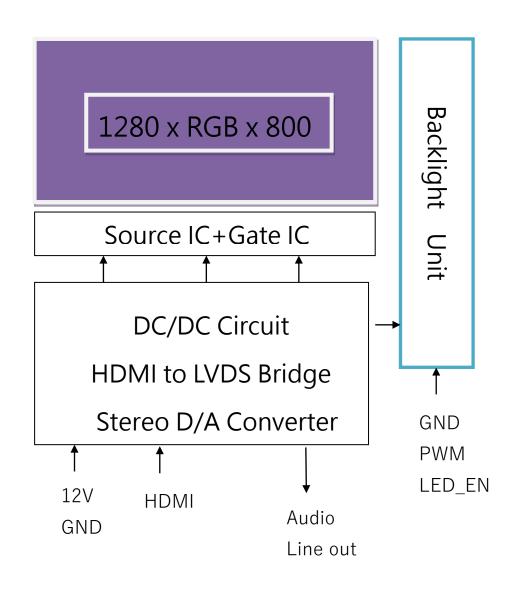

Microtips

### 6. ELECTRICAL CHARACTERISTICS

#### 6.1 HDMI TFT LCD Module

ltem	Symbol		Values	Unit	Note	
item	Symbol	Min	Тур.	Max.	Unit	Note
Supply Voltage	12V	TBD	12	13	V	
PWM frequency		100	-	10K	Hz	
PWM Duty		17	-	100	%	<17%=0FF
PWM Dimming	Vpwm-ih	3.3	-	8	۷	
Voltage	VPWM-IL	-	0.3	-	۷	
LED Enable Control	VLED_EN-IH	3.3	-	12	۷	
Voltage	VLED_EN-IL	-	-	0.5	۷	
Supply Current	ICC(12V)	TBD	650	TBD	mA	
LED life time		50000	-	-	Hr	(1)

Note 1:

The "LED life time" is defined as the module brightness decrease to 50% original brightness that the ambient temperature is  $25^{\circ}$ C 60% RH.




### 7. OPTICAL CHARACTERISTICS

lter	n	Symbol	Condition	Min.	Тур.	Max.	Unit
Brightness				880	1100		cd/m2
Unifori	mity	B-uni	Note1,	75	80	-	%
Contrast	Ratio	CR	Note 3,	600	800		
Despense	Time	Tr	$(\theta = 0^{\circ},$ Normal		10	20	ms
Response	Response Time		Viewing		15	30	ms
Color		Wx	Angle)	0.260	0.310	0.360	
Chromaticity	White	Wy		0.280	0.330	0.380	
	Horizontal	heta x+		75	85		
View angle	ΠΟΠΖΟΠΙΔΙ	heta x-	Center	75	85		
View angle	Vertical	θ <b>Y</b> +	CR≥10	75	85		
	vertical	θ <b>Υ-</b>		75	85		

Note : The following optical specifications shall be measured in a darkroom or equivalent state(ambient luminance  $\leq 1$  lux, and at room temperature). The operation temperature is 25°C±2°C. The measurement method is shown in Note1.

Note1: The method of optical measurement:

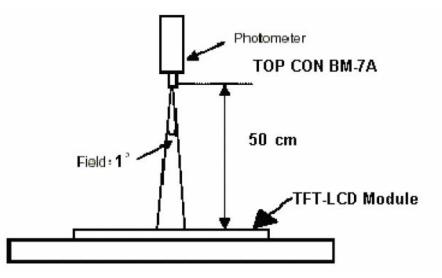


Note2: Measured at the center area of the panel and at the viewing angle of the  $\theta x = \theta y$ =0°


Note3: Definition of Contrast Ratio (CR):


CR = Luminance with all pixels in white state  $\div$  Luminance with all pixels in Black state



Note 4: Definition of Viewing Angle:

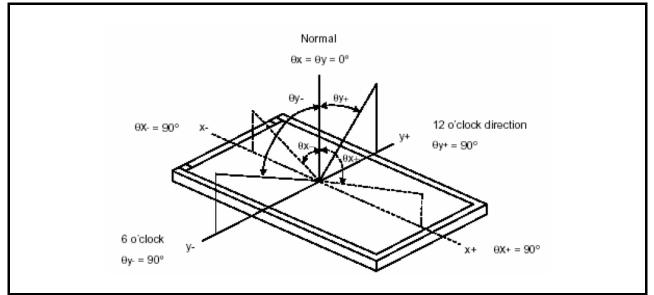



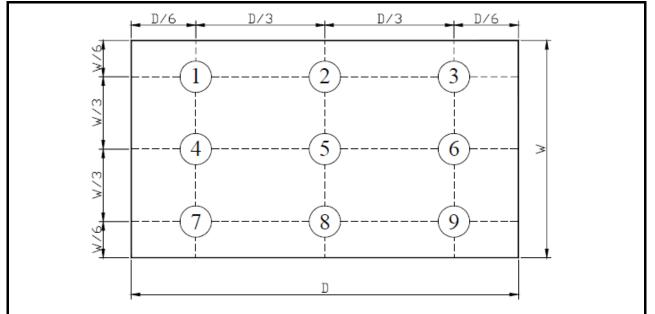


B-uni = (Minimum luminance of 9 points $\div$ Maximum luminance of 9 points)X100%



Note 6: Definition of Response Time:

The Response Time is set initially by defining the "Rising Time (Tr)" and the "Falling Time (Tf)" respectively. Tr and Tf are defined as following figure

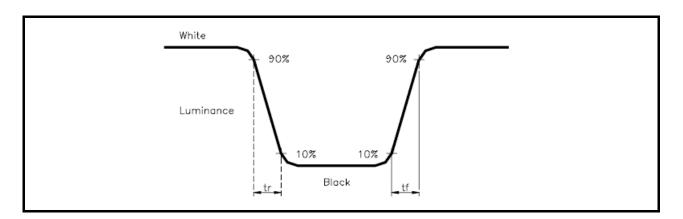

Note 7: Definition of Chromaticity:

The color coordinates (Wx,Wy),(Rx,Ry),(Gx,Gy),and (Bx,By) are obtained with all pixels in the viewing field at white, red, green, and blue states, respectively.



#### 8. RELIABILITY

#### 8.1 Test Condition

8.1.1 Temperature and Humidity(Ambient Temperature) Temperature :  $25 \pm 5^{\circ}$ C Humidity :  $65 \pm 5^{\circ}$ 

# 8.1.2 OperationUnless specified otherwise, test will be conducted under function state.

- 8.1.3 ContainerUnless specified otherwise, vibration test will be conducted to the product itself without putting it in a container.
- 8.1.4 Test Frequency In case of related to deterioration such as shock test. It will be conducted only once.

8.2	TESTS
<b>U</b> . <b></b>	

No.	ITEM	CONDITION CRITERION				
1	High Temperature Storage	80°C, 120 hrs				
2	Low Temperature Storage	-30°C, 120 hrs				
3	High Temperature Operating	70°C, 120 hrs				
4	Low Temperature Operating	-20°C, 120 hrs				
5	High Temperature/Humidity Non-Operating	40°C, 90%RH, 120 hrs				
6	Temperature Shock Non-Operating	$-30^{\circ}C \leftrightarrow 80^{\circ}C$ (0.5hr each), 100 cycles				
7	Vibration Test Non-Operating	Frequency:0 ~ 55 Hz Amplitude:1.5 mm Sweep Time:11min Test Period:6 Cycles for each Direction of X,Y,Z				
8	Electro-static Discharge	$\pm$ 2KV, Human Body Mode, 100pF/1500 $\Omega$				

Note1: The test sample have recovery time for 24 hours at room temperature before the function check. In the standard conditions, there is no any touch panel function NG issue occurred.



#### 8.3 JUDGMENT STANDARD

The judgment of the above test should be made as follow:

- Pass: Normal display image with no obvious non-uniformity and no line defect. Partial transformation of the module parts should be ignored.
- Fail: No display image, obvious non-uniformity, or line defects.



#### 8.4 INCOMING INSPECTION STANDARDS

No.	Parameter	Criteria						
		Display function: No Display malfunction (Major)						
		Contrast ratio (Black, White):						
		Does not meet s	pecified ra	ange in th	e spec. (l	Major) (N	ote:3)	
		Line Defect: No	obvious V	ertical an	d Horizon	tal line de	efect in bright	
		dark and colored. (Major) (Note:1) Point Defect : Active area ≤ 5 dots (Minor) (Note:1)						
			Acc	eptable n				
		Item Active Area Total						
					-Cu		_	
		Brigh		2		5		
		Dark	<b>(</b>	4				
1	Operating							
· ·	operating	Non-uniformity:	Visible thr	ough 5%	ND filter (	(Minor)		
		Foreign materia					(41)	
							·· <b>-</b> )	
			Zone Acc	eptable	Class Of	5	AQL	
			< n.	umber	Defec	te	Level	
		Dimensio	~	_	Delec	is		
		D> 0.		0				
		0.3 < D ≤		5	Mino	r	1.5	
		D ≤ 0.		*				
			g + Short)		Disregard			
		Foreign Materia	al in Line o	r spiral sl	hape (W≤	1/4L) (No	ote: 4)	
			Zone		ceptable	Class	AQL	
					umber	Of		
			W(mm)		uniber	Defects	Level	
		L >5	W>0.1		0			
		0.5 < L ≤ 5	0.03 < W:	≤0.1	5	Minor	1.5	
		L ≤0.5	W≤0.0	3	*			
		L : Length W : Width * : Disregard						
		Dimension: Out	tline (Majo					
		Bezel appearar			)			
		Scratch on the	polarize: (	Note:2)				
			Zone	Accepta	Clas	S	AQL	
				ble	Of Def	ects	Level	
		L (mm) V	V(mm)	number				
			W>0.1	0	Mino	or	1.5	
		L ≤ 3	W≤0.1	3				
						I		
	External Inspection	L : Length	W · Widt	th ∗:Di	sregard			
2	(non-operating)	Dent or bubble o						
-	(non operating)			,	Class			
			Acc	eptable	Of	AQL		
		Dimension	n.	umber	Defects	Level		
		D≤0.3	_	*				
		D≤0.5		3	Minor	1.5		
		0.5	,	5				
		D = (Long +	Short) / 2	,	∗ : Disr	onard		
			onort) / 2		* . DISI	eyalu		

3/9/2018



			Definition	
Class of defects	Major AQL 0.65%		It is a defect that is likely to result in failure or to reduce materially the usability of the product for the intended function.	
derects	Minor	AQL 1.5%	It is a defect that will not result in functioning problem with deviation classified.	

Note1:

(a)Bright point defect is defined as point defect of R,G,B with area >1/2 pixel respectively (b)Dark point defect is defined as visible in full white pattern.

(c)Definition of distribution of point defect is as follows:

-minimum separation between dark point defects should be larger than 5mm.

-minimum separation between bright point defects should be larger than 5mm.

(d)Definition of joined bright point defect and joined dark point defect are as follows:

-Two or more joined bright point defects must be nil.

-Three joined dark point defects must be nil.


-Coupling of one dark and one bright point in junction is counted as one dark and bright spot with 1 pair maximum.

-Two Joined dark point is counted as two dark points with 2 pair maximum.

Note2: The external inspection should be conducted at the distance  $30\pm$  5cm between the eyes of inspector and the panel.

Note3: Luminance measurement for contrast ratio is at the distance  $50\pm$  5cm between the detective head and the panel with ambient luminance less than 1 lux. Contrast ratio is obtained at optimum view angle.

Note4: W-Width in mm , L-length of Max.(L1,L2) in mm.

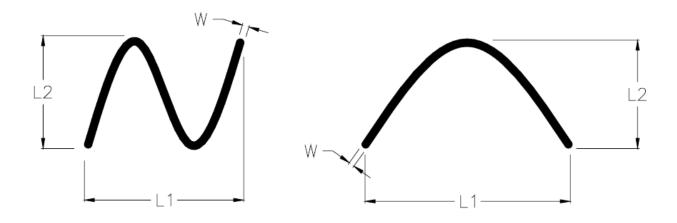



#### 8.5 Sampling Condition

Unless otherwise agree in written, the sampling inspection shall be applied to the incoming inspection of customer.

Lot size: Quantity of shipment lot per model.

Sampling type: normal inspection, single sampling

Sampling table: MIL-STD-105E


Inspection level: Level II

#### 8.6 Inspection conditions

The LCD shall be inspected under 40W white fluorescent light.

 $\theta \leq 45^{\circ}$  inspection under non-operating condition.

 $\theta \leq \mathbf{S}^{\circ}$  inspection under operating condition

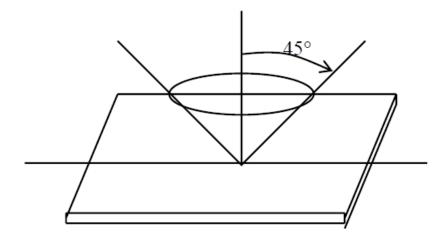

- 9. PRECAUTION RELATING PRODUCT HANDLING
  - 9.1 SAFETY
  - 9.1.1 If the LCD panel breaks , be careful not to get the liquid crystal to touch your skin.
  - 9.1.2 If the liquid crystal touches your skin or clothes , please wash it off immediately by using soap and water.
  - 9.2 HANDLING
  - 9.2.1 Avoid any strong mechanical shock which can break the glass.
  - 9.2.2 Avoid static electricity which can damage the CMOS LSI—When working with the module, be sure to ground your body and any electrical equipment you may be using.
  - 9.2.3 Do not remove the panel or frame from the module.
  - 9.2.4 The polarizing plate of the display is very fragile. So , please handle it very carefully, Do not touch, push or rub the exposed polarizing with anything harder than an HB pencil lead (glass , tweezers , etc.)
  - 9.2.5 Do not wipe the polarizing plate with a dry cloth, as it may easily scratch the surface of plate.
  - 9.2.6 Do not touch the display area with bare hands , this will stain the display area.
  - 9.2.7 Do not use ketonics solvent & aromatic solvent. Use with a soft cloth soaked with a cleaning naphtha solvent.
  - 9.2.8 To control temperature and time of soldering is  $280 \pm 10^{\circ}$ C and 3-5 sec.
  - 9.2.9 To avoid liquid (include organic solvent) stained on LCM.
  - 9.3 STORAGE
  - 9.3.1 Store the panel or module in a dark place where the temperature is  $25^{\circ}C \pm 5^{\circ}C$  and the humidity is below 65% RH.
  - 9.3.2 Do not place the module near organics solvents or corrosive gases.
  - 9.3.3 Do not crush, shake, or jolt the module.

# **Mouser Electronics**

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

Microtips Technology: HA-101ZIEB0HH1-A